



ASSEMBLY INSTRUCTION

SKU:WF317949

WF317950


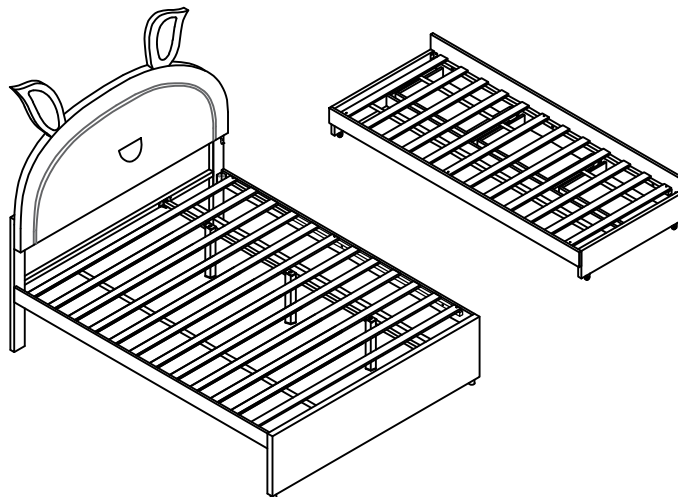


Detail View





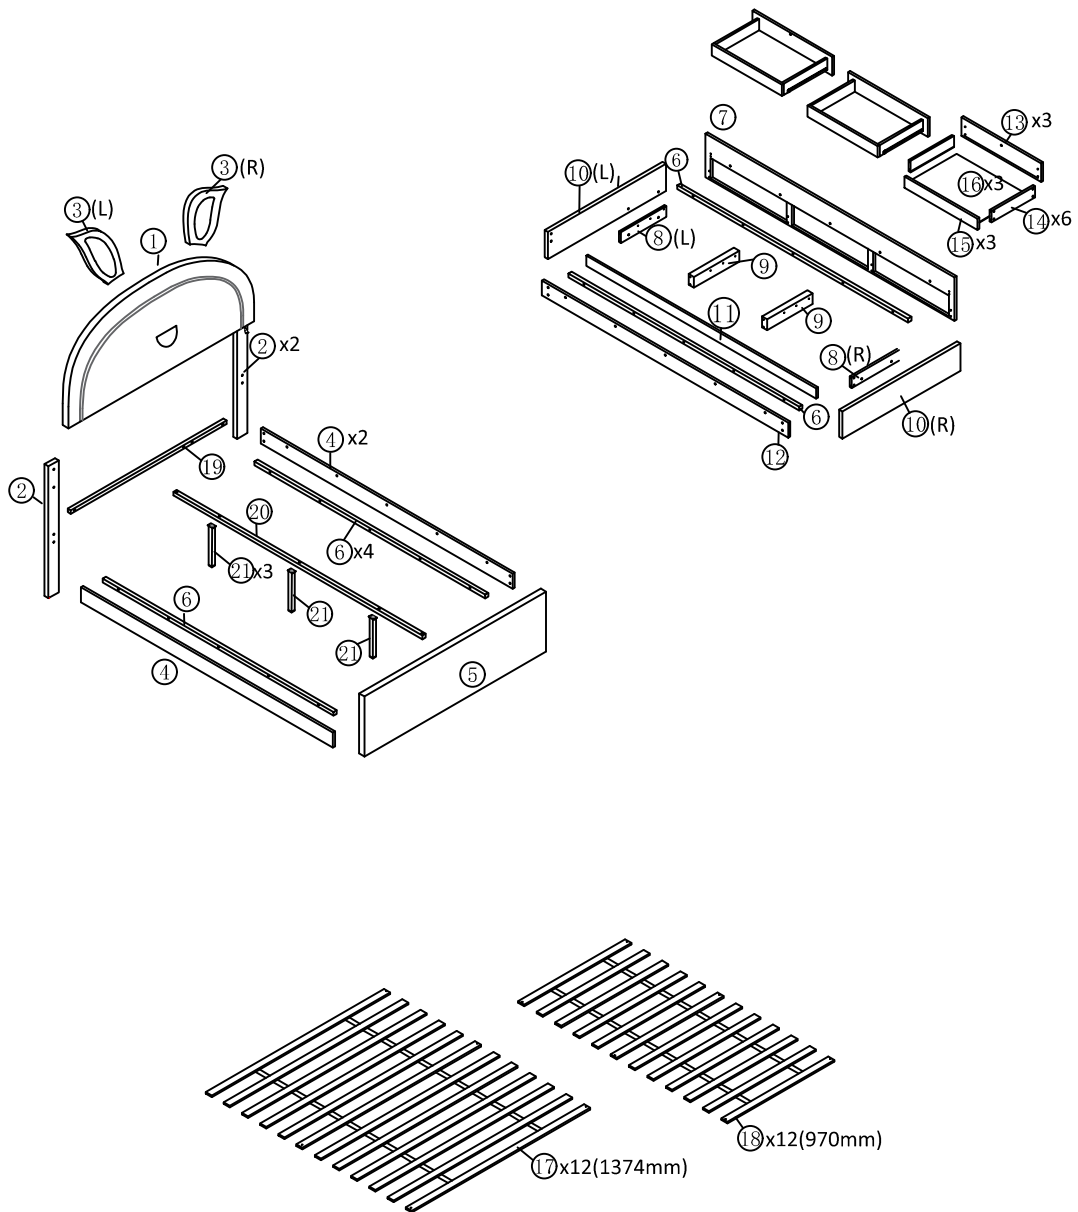


Part List


Hardware List+WF317949

1  Head board-1pc	2  Head board legs-2pcs	3  Ear of the Headboard-2pcs
5  Foot board-1pc	8  Bottom bed board-2pcs	9  Bottom bed board-2pcs
10  Bottom bed board-2pcs	14  Drawer board-6pcs	15  Drawer board-3pcs
16  Drawer bottom board-3pcs	17  Slats(1374mm)-12pcs	18  Slats(970mm)-12pcs
21  support leg-3pcs		

WF317950

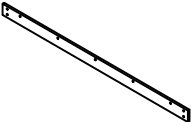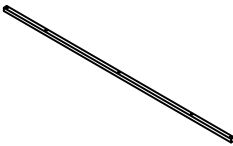4  Siderails-2pcs	6  Side rails support bar-4pcs	7  Bottom bed board-1pc
11  Bottom bed board-1pc	12  Bottom bed board-1pc	13  Drawer outer board-3pcs
19  Head board cross bar-1pc	20  Center support bar-1pc	


Hardware List

A		B	 Ø8*40mm	C	 Ø8*18mm
Allen Key(1pc)		Bolts(29pcs)		Bolts(40pcs)	
D		E		F	 Ø4*40mm
Four hole iron(2pcs)		Legs(2pcs)		Nails(2pcs)	
G		H		I	
"7" Connector(6pcs)		Drawer handle(3pcs)		Drawer fittings(40pcs)	
J		K		L	 Ø3*16mm
Drawer fittings(40pcs)		Wheel(4pcs)		Nails(44pcs)	
M	 Ø3*25mm	N	 Ø4*30mm	O	
Nails(8pcs)		Nails(12pc)		Little "7" Connector(2pc)	
P	 Ø5*20mm	R	 3pcsR/3pcsL	S	 3pcsR/3pcsL
Bolts(3pc)		Drawer track(6pc)		Drawer track(6pc)	
T		U		V	
Connecting line(2pc)		Power adapter(1pc)		Color controller(1pc)	
W	 Ø8*45mm	X		Y	
Bolts(4pc)		Two hole iron(2pc)		Center support bar fittings(2pc)	

Attention: Do not tighten the screws before completing the entire installation. If you have any difficulty with the installation process, please feel free to contact us.


Step 1

Fix the head board legs ② to the headboard ① with Bolts B by using Allen key A. You can chose the hole a and c ,or b and d.

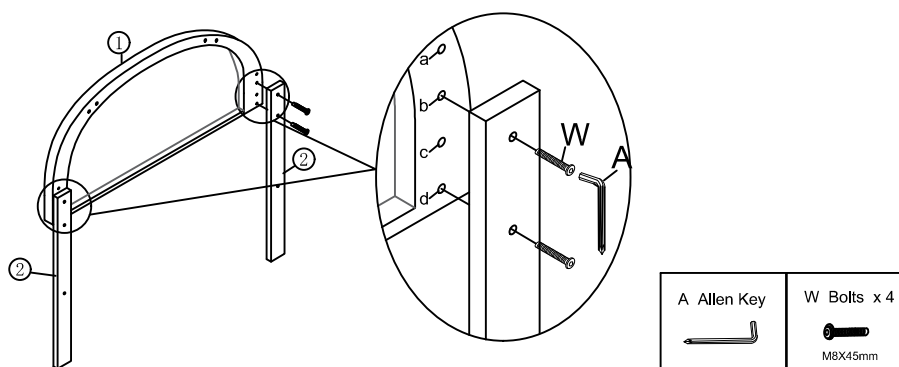


Step 2

Fix the Ear of the Headboard ③ to the headboard ① with Four hole iron D and Bolts C by using Allen Key A.

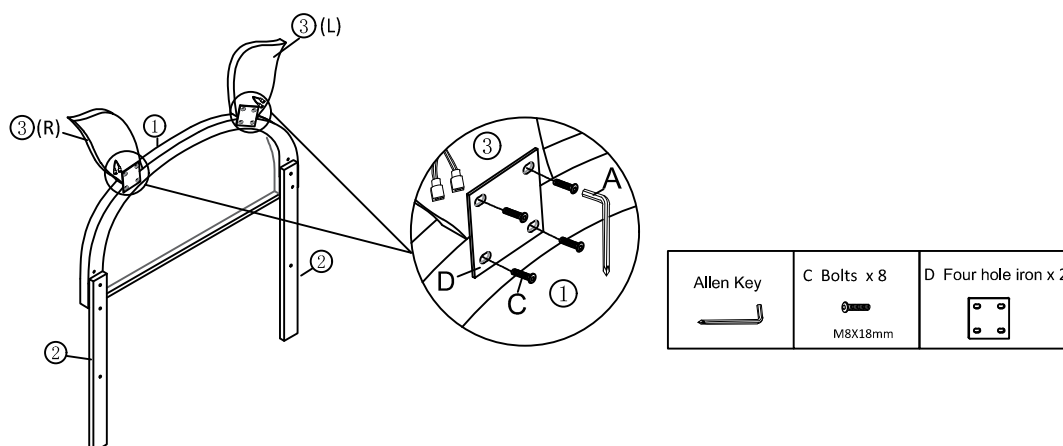


Step 3

Fix the Headboard cross bar ④ to the Headboard legs ② with Bolt D and Two hole iron C by using Allen key A.

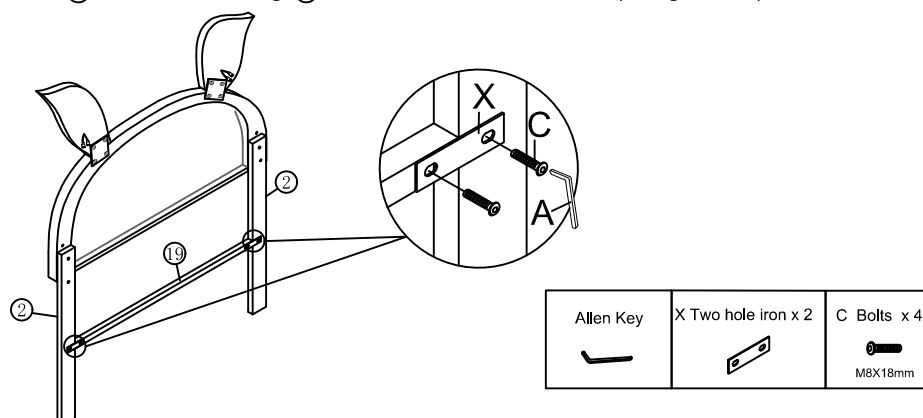

Step 4


Fix the Siderail support bar ⑥ to Siderails ④, Bottom bed board ⑦ and ⑫ with Bolts B by using Allen key A.

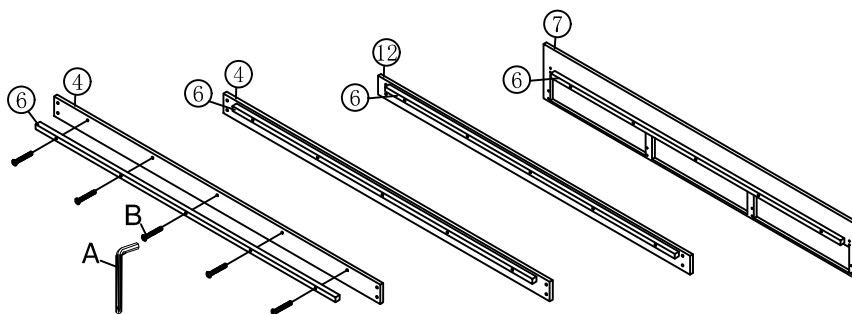

A Allen Key	B Bolts x 20 M8X40mm
	

Step 5


Fix the legs E to the Footboard ⑤ with Nails F by using Allen key A or Electric drill.

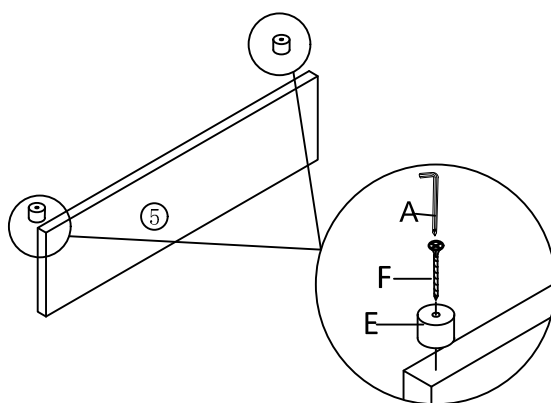

Allen Key	E Bolts x 2	F Four hole iron x 2 M4X40mm
		

Step 6


Fix the siderails④ to the Headboard legs② and footboard⑤ with Bolt C and "7" Connector G by using Allen key A.

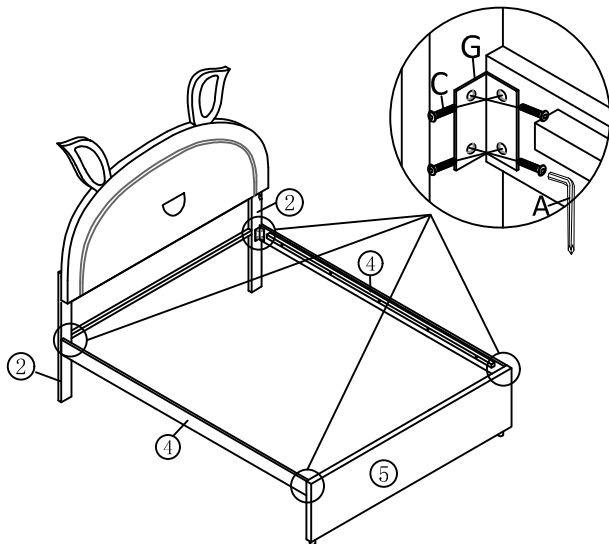

Allen Key	C Bolts x 16 M8X18mm	G "7" Connectorx 4
		

Step 7


Fix the Center support bar fittings J to the Headboard cross bar⑬ and foot board⑤ with Bolts C by using Allen key A

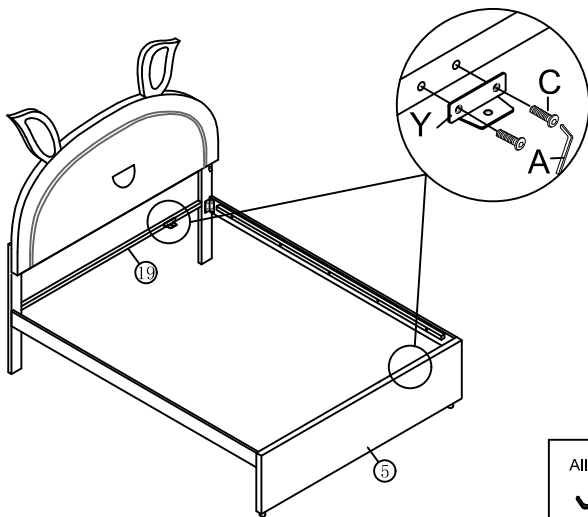

Allen Key	C Bolts x 4 M8X18mm	Y Center support bar fittings x2
		

Step 8


Fix the middle support leg ②① to the center support bar ②① with Bolts B by using Allen key A.

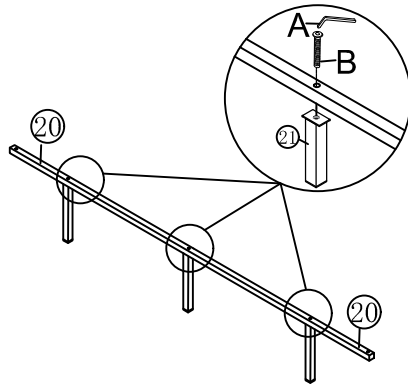

Allen Key 	B Bolts x 3  M8X40mm
--	---

Step 9


Fix the Center support bar ⑩ to the headboard cross bar ⑧ and foot board ⑤ with Bolts B by using Allen key A

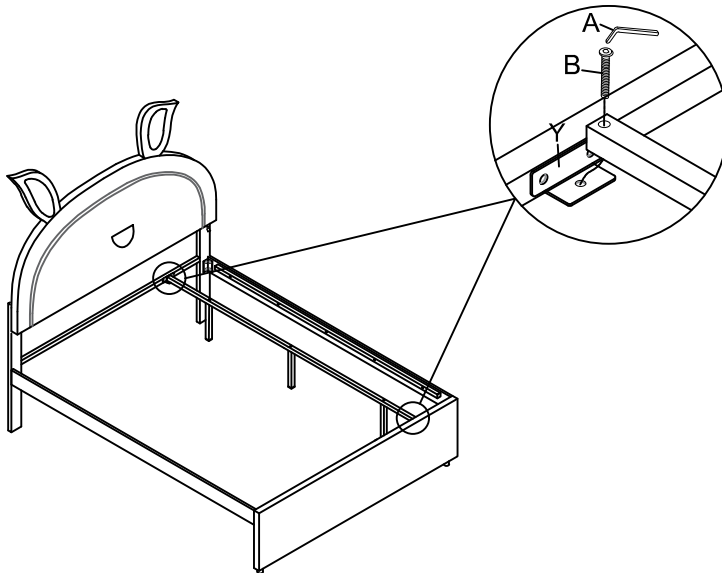

Allen Key 	B Bolts x 2  M8X40mm
--	---

Step 10


Assemble the bottom bed frame with Bottom bed board ⑦, ⑧, ⑨, and ⑪ together by using Drawer fitting I, J and Allen key A.

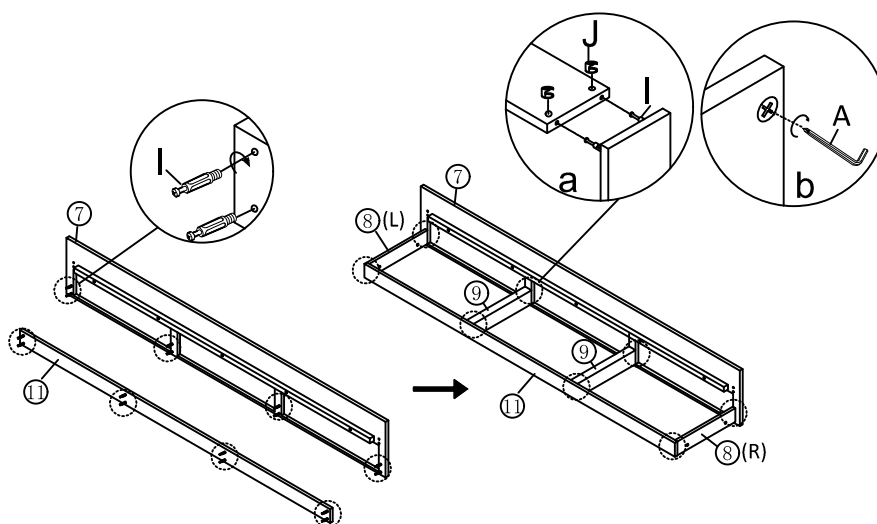

Allen Key	I Drawer fittings x 16	J Drawer fittings x 16

Step 11


Fix the Drawer track R to the Bottom bed board ⑧ and ⑨ with Nails L by using Allen key A or Electric drill.

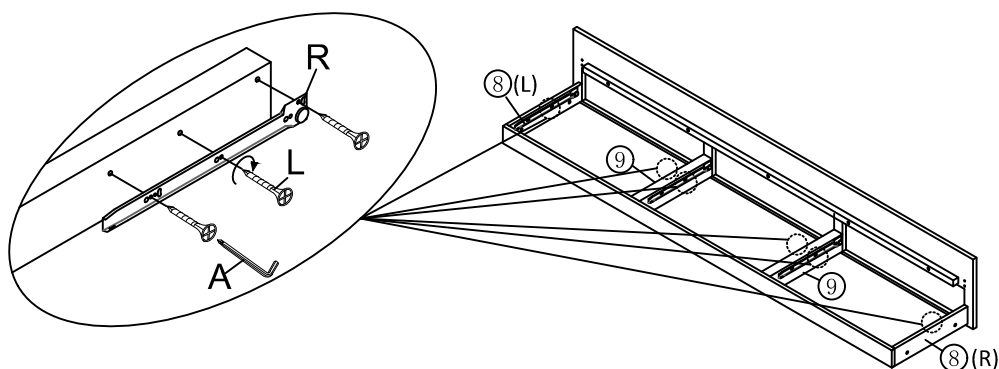

A Allen Key	R Drawer track x 3R/3L	L Nails x 18 M3X16mm

Step 12


Fix Wheel K to the Bottom bed board ⑩ with Nails M by using Allen Key A or Electric drill.
Attach Bottom bed board ⑩ to ⑧ with Bolts B by using Allen Key A .

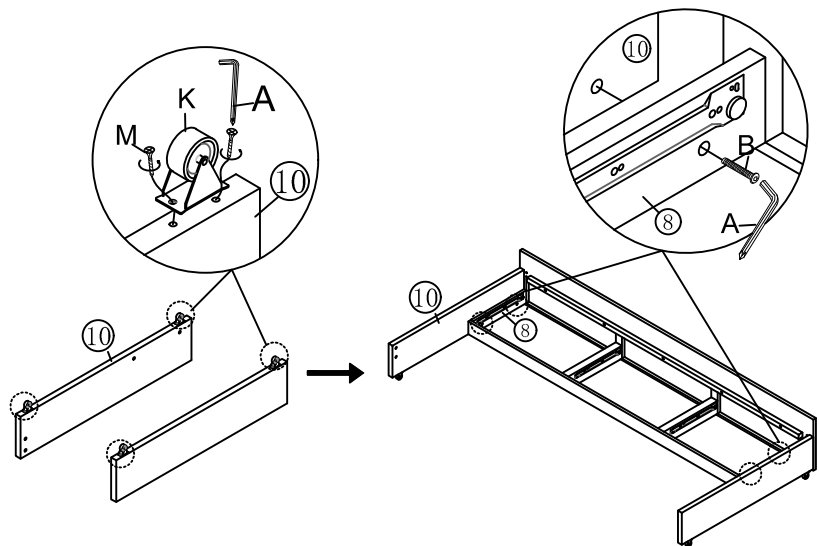

A Allen Key	B Bolts x 4	M Nails x 8	K Wheel x 4
	 M8X40mm	 M3X25mm	

Step 13


Fix Bottom bed board ⑩ and ⑦ with Little "7" Connector O and Nails L by using Allen key A or Electric drill.
Fix Bottom bed board ⑩ to ⑫ with "7" Connector G and Bolts C by using Allen Key A.

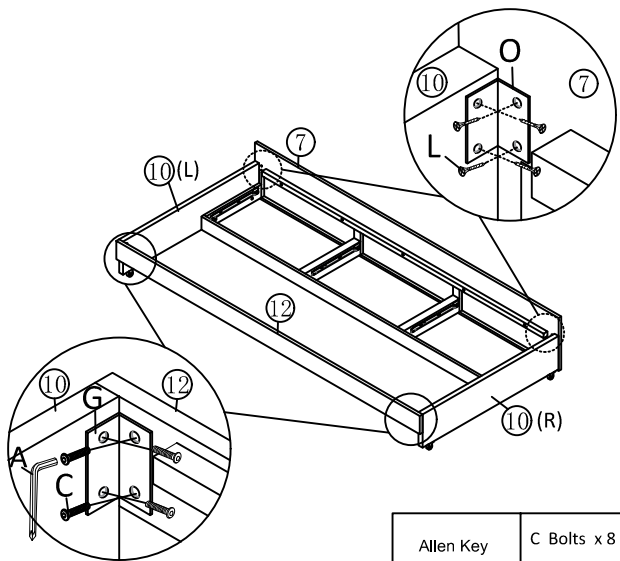

Allen Key	C Bolts x 8	G "7" Connectorx 2	L Nails x 8	O Little "7" Connectorx 2
	 M8X18mm		 M3X16mm	

Step 14


Fix the Drawer fittings I to the Drawer out board ⑬ and Drawer board ⑮. Connect Drawer board ⑭ to ⑬ and ⑮ with Drawer Fittings J by using Allen Key A.

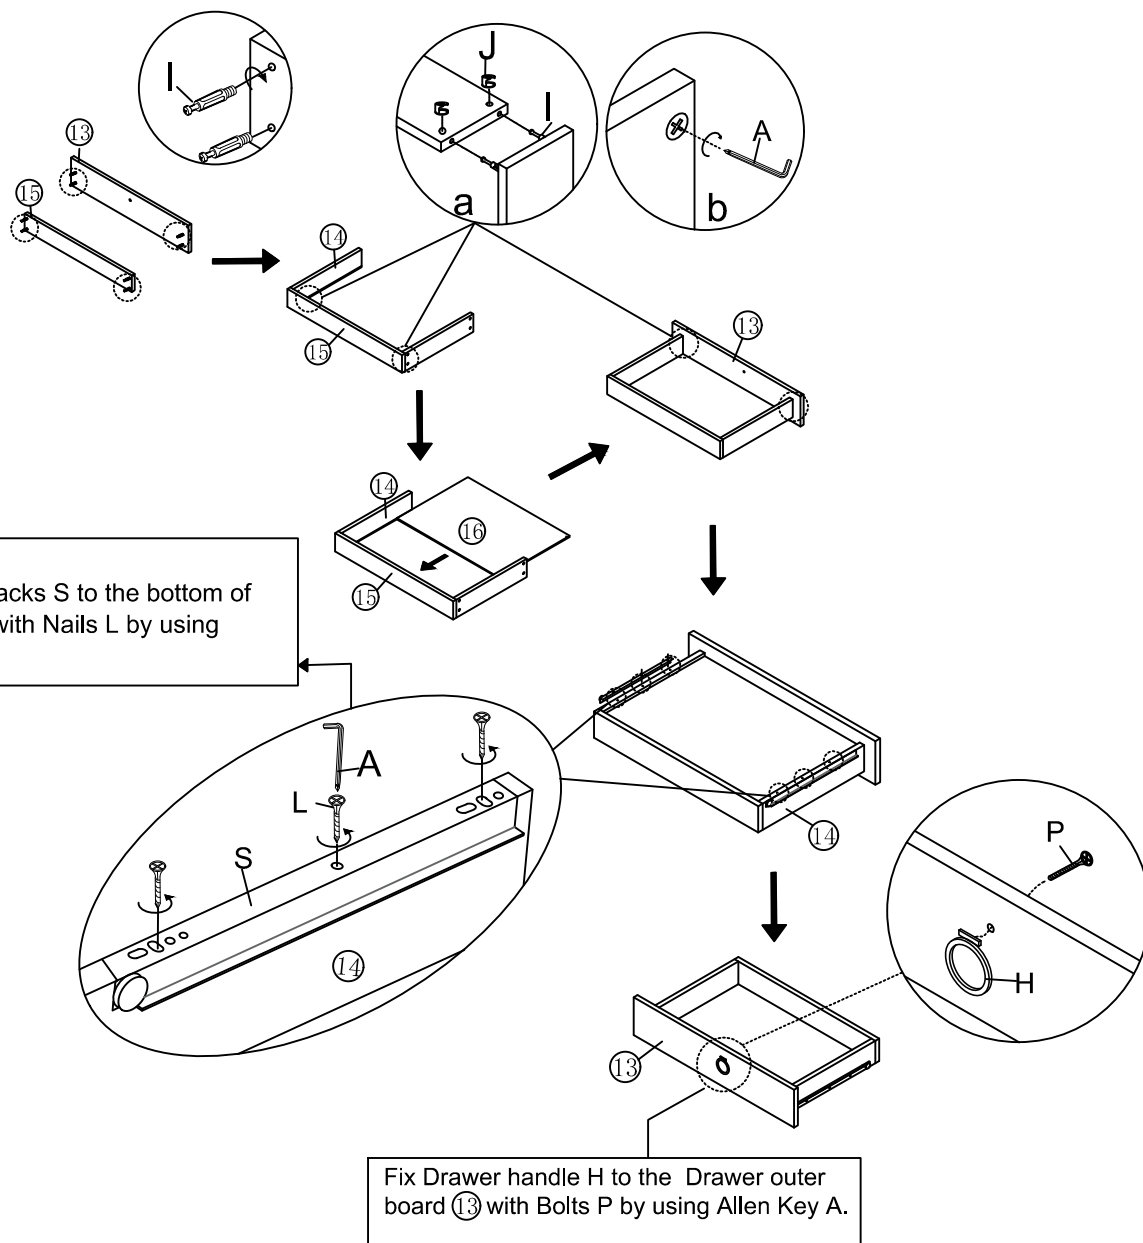

Allen Key	I Drawer fittings x 24	J Drawer fittings x 24	L Nails x 18 M3X16mm	S Drawer track x 3R/3L	H Drawer handle x 3	P Bolts x 3 M5X20mm


Step 15

Fix the Slats ⑰ and ⑱ to the side support bar with Nails N by using Allen key A or Electric drill.

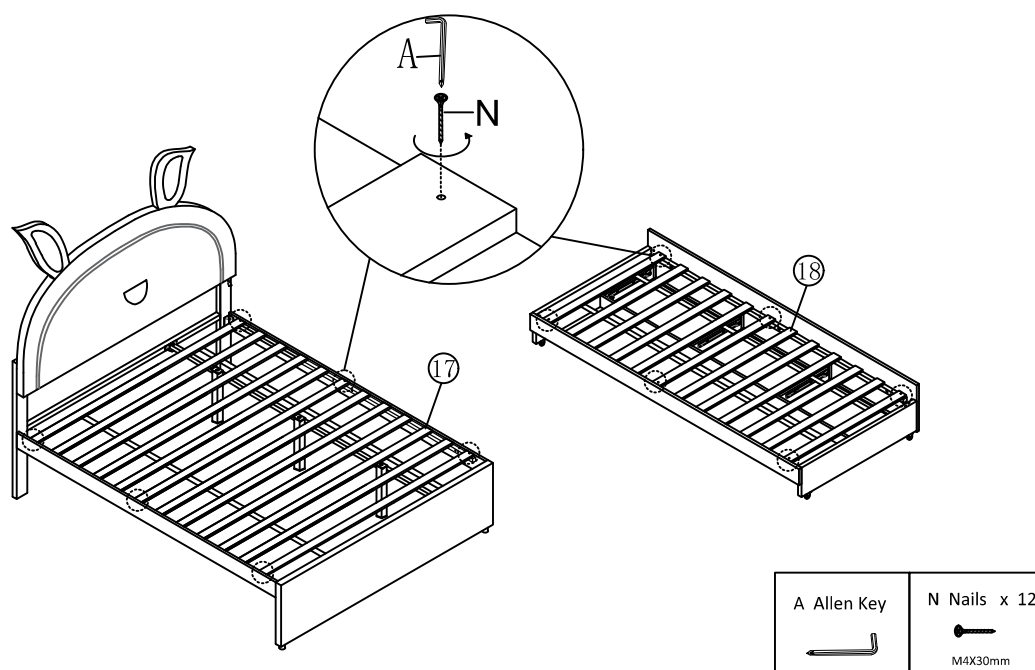


Step 16

Push Drawers into the bottom bed.

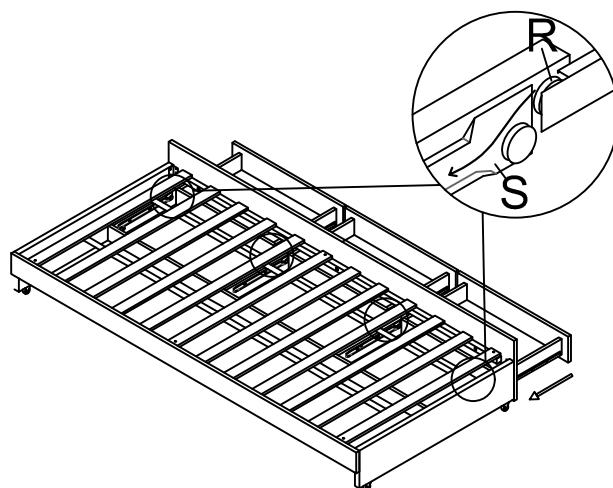


Step 17


Fix one of the Connecting line T to the LED line A and LED line C. Fix another Connecting T to the LED line D and LED line E.

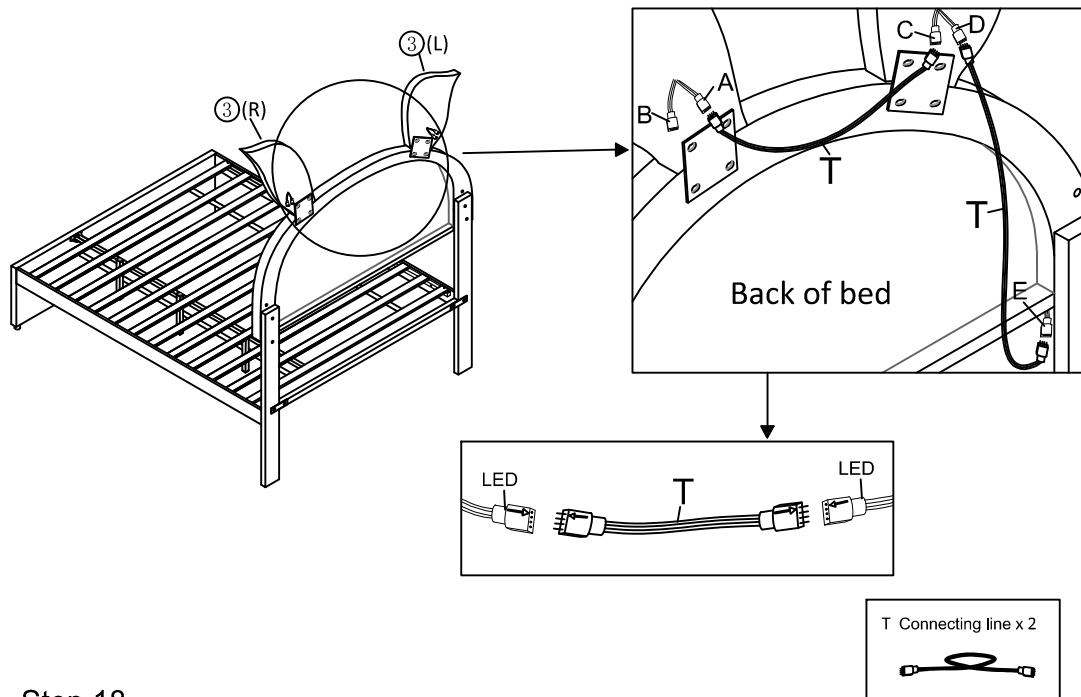

Step 18

Connect the Color controller V to the Bed LED line B, then connect the Color controller V to the Power adapter U. Then the assembly is finished, push the bottom bed under the bed and enjoy it.

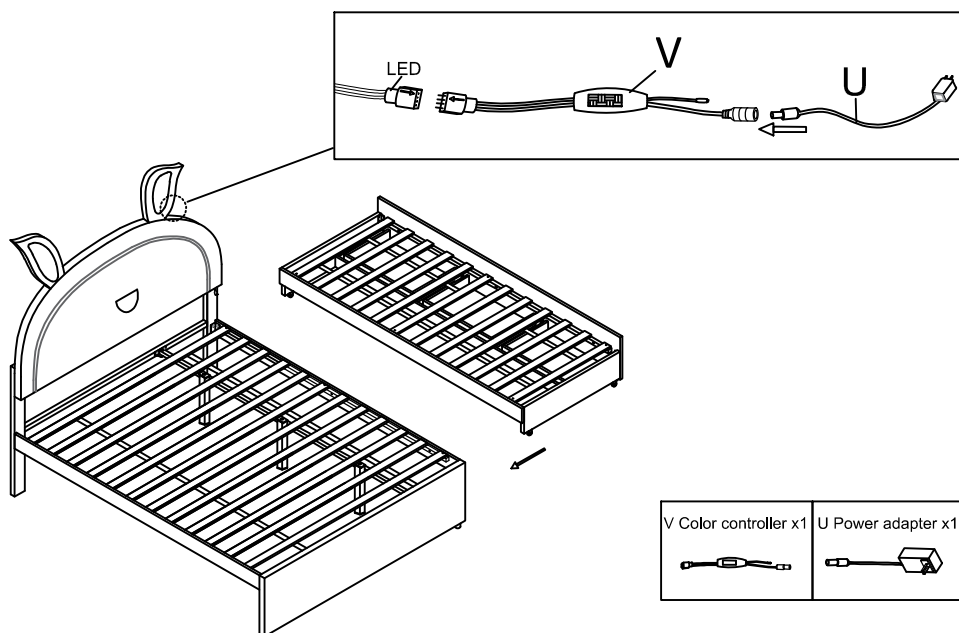

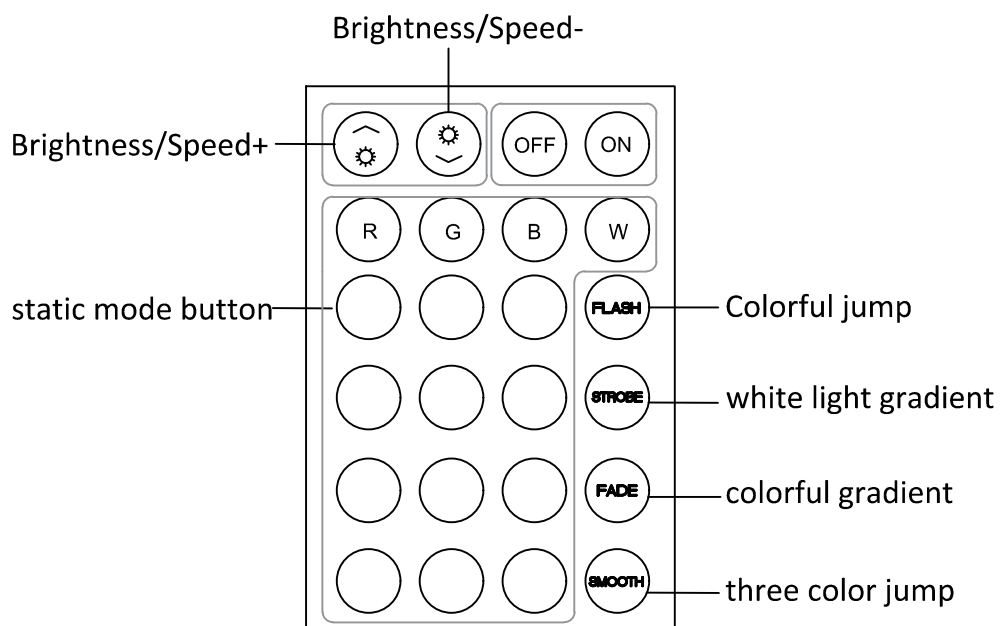

NOTICE:

When you use the remote control board to control the color of the light, Please remove the clear plastic card first, then please be sure to point the remote control at the color controller I.