
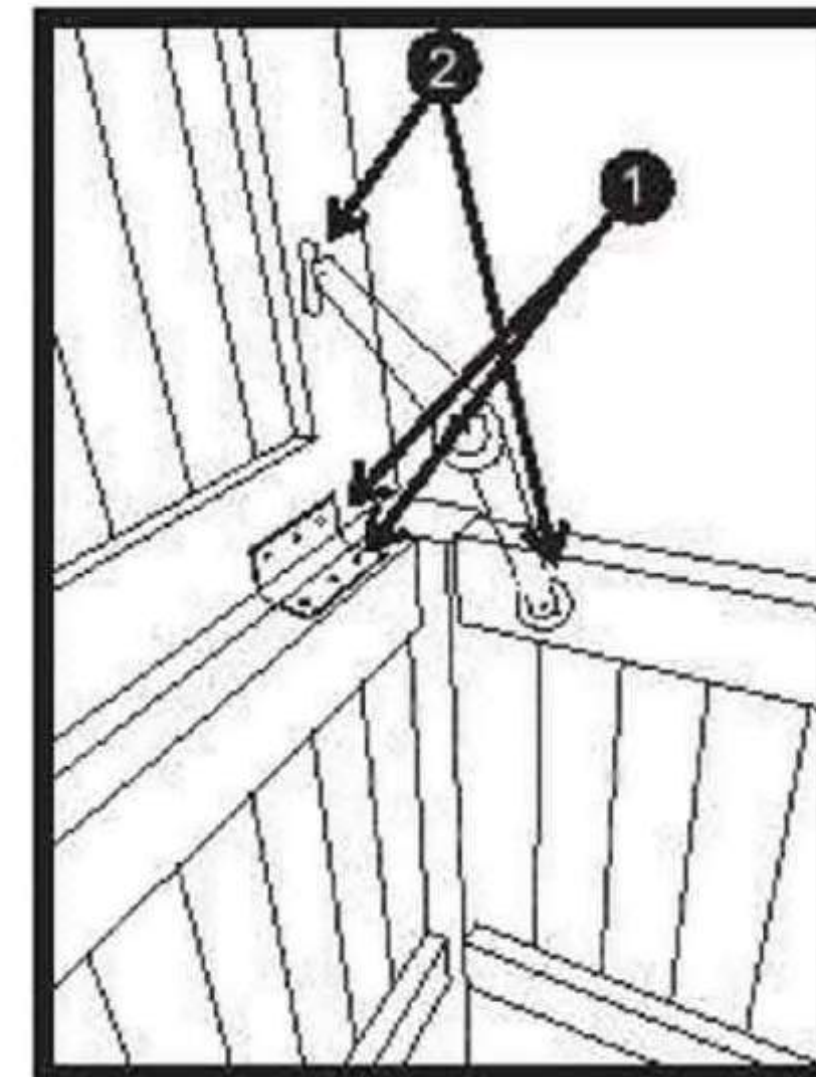




Assembly Instruction

INSTRUCTION DE MONTAGE
MONTAGEANLEITUNG
SAMLEVEJLEDNING


**MAKE SURE THE LETTERS
MATCH BEFORE ASSEMBLING**

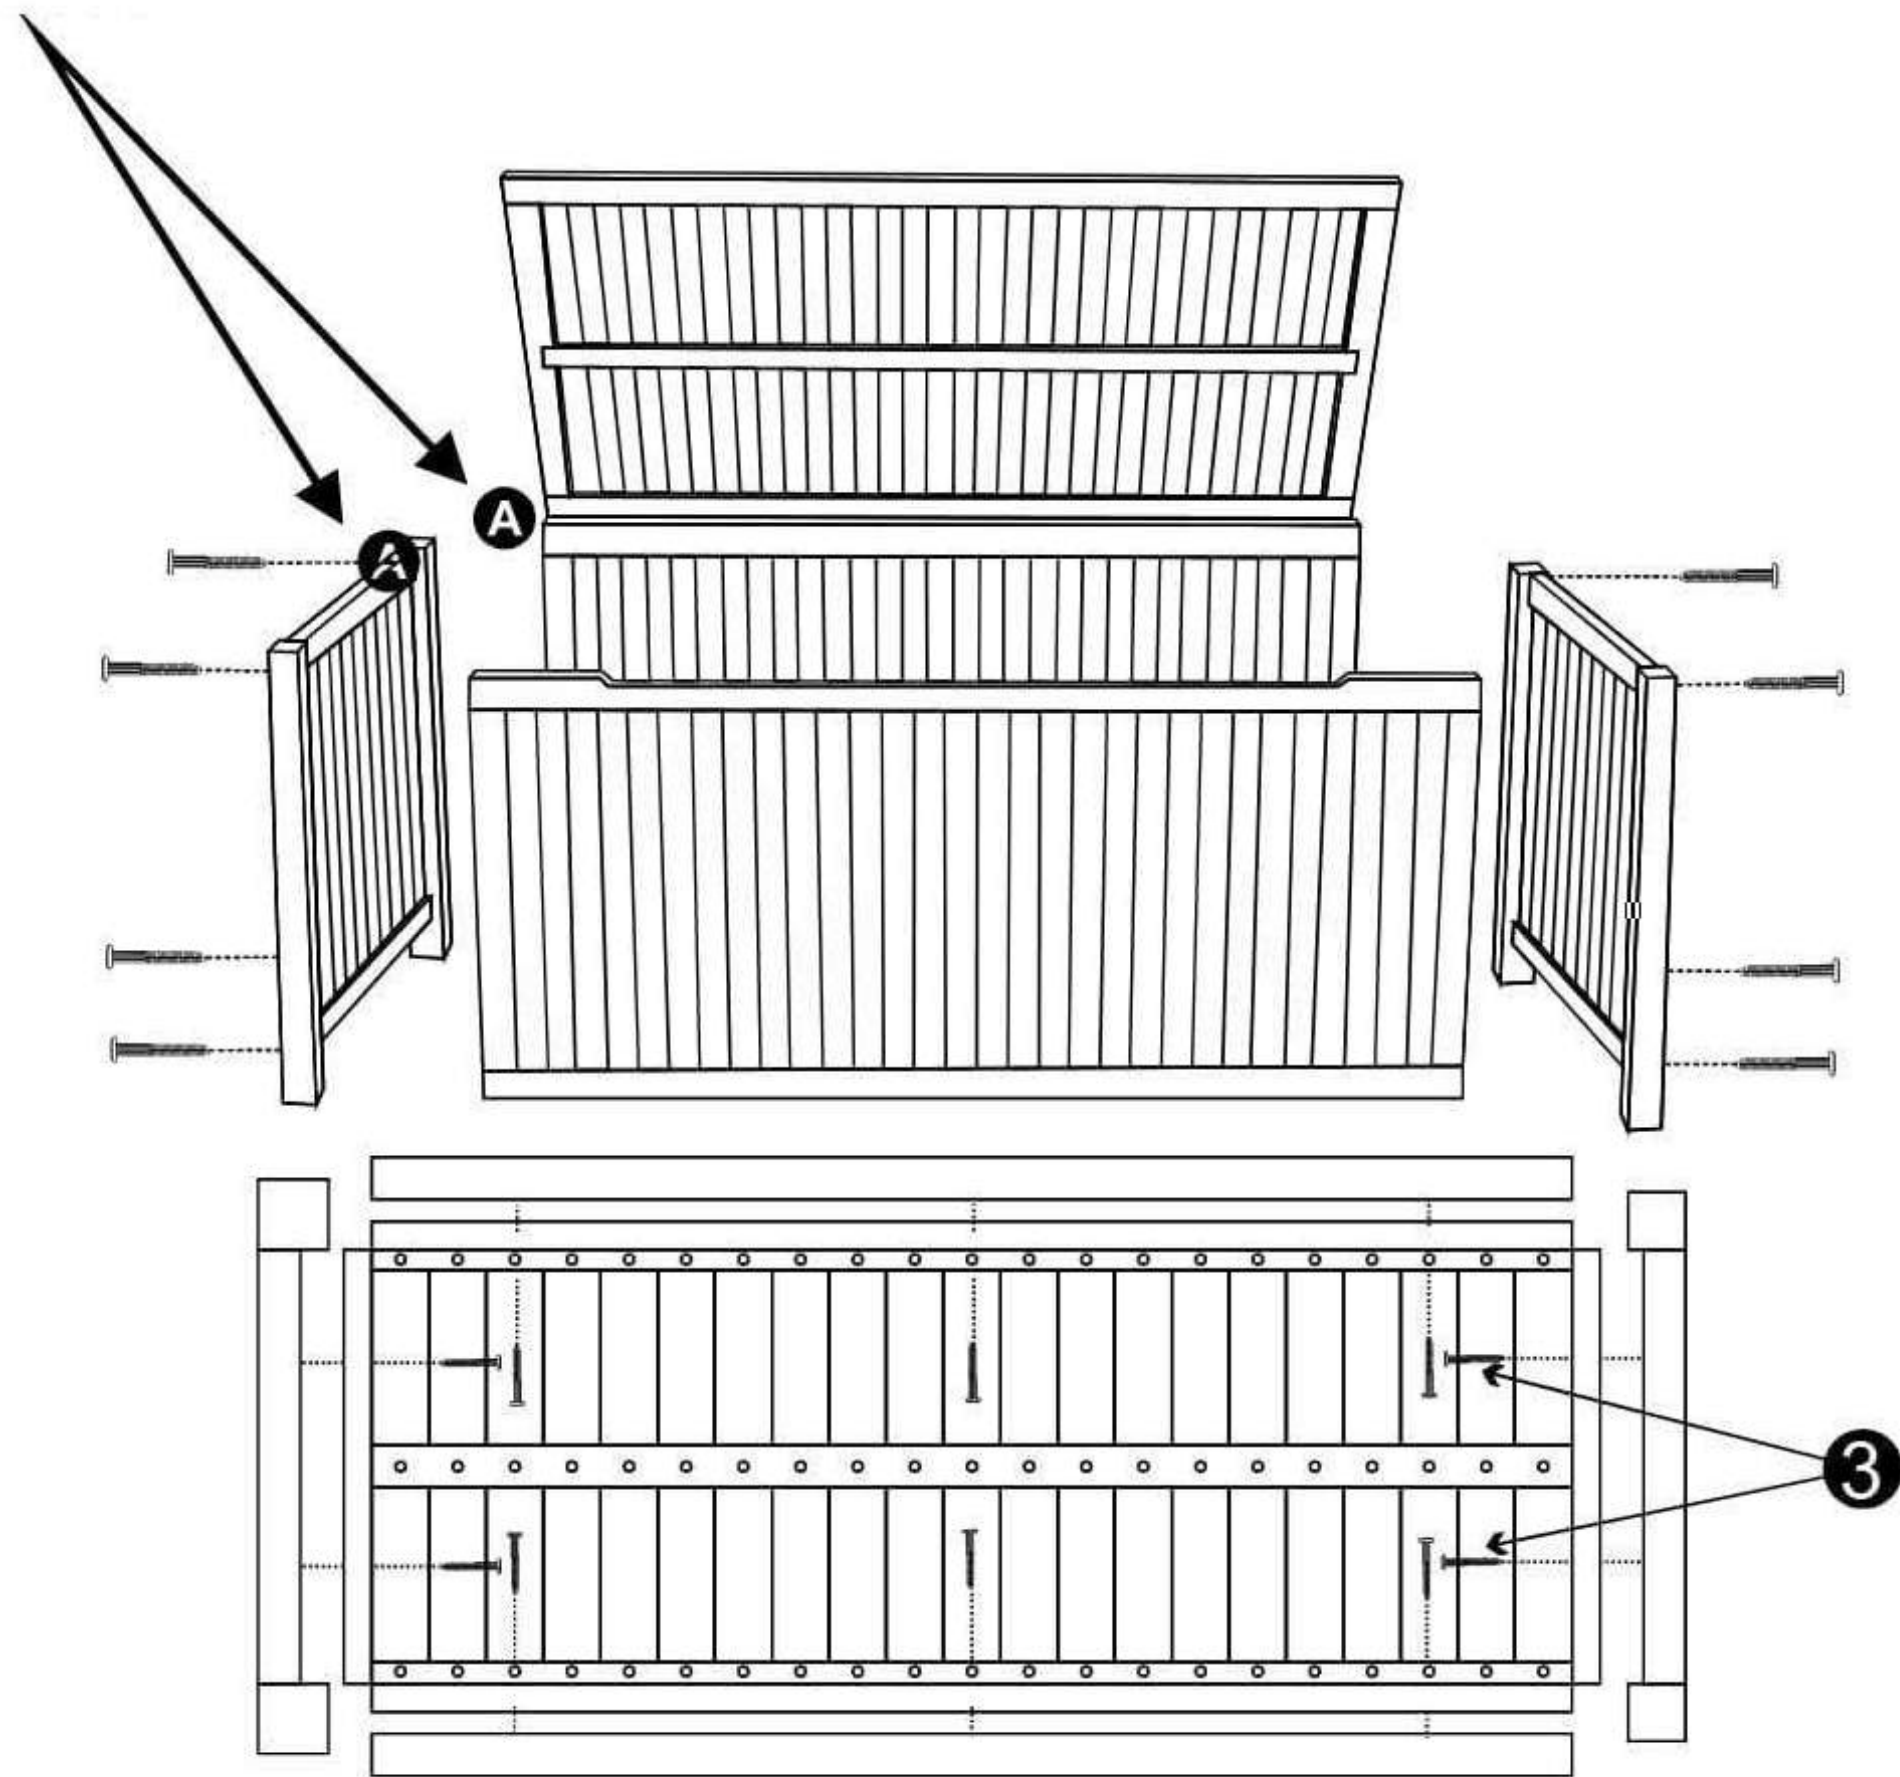


Hardware

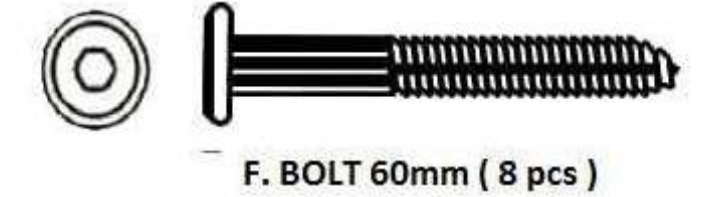

SCREW 25mm (18 pcs)




SCREW 15mm (10 pcs)



SCREW 30mm (8 pcs)

Tool

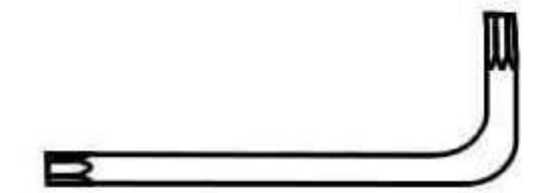

Socket Wrench 4m/m Ht

Total Section

6 Section

***Make sure to use Gorilla Glue (Not Included)
on all wood joints before assembly***