
Hall Tree

Assembly Instructions -Please keep for future reference

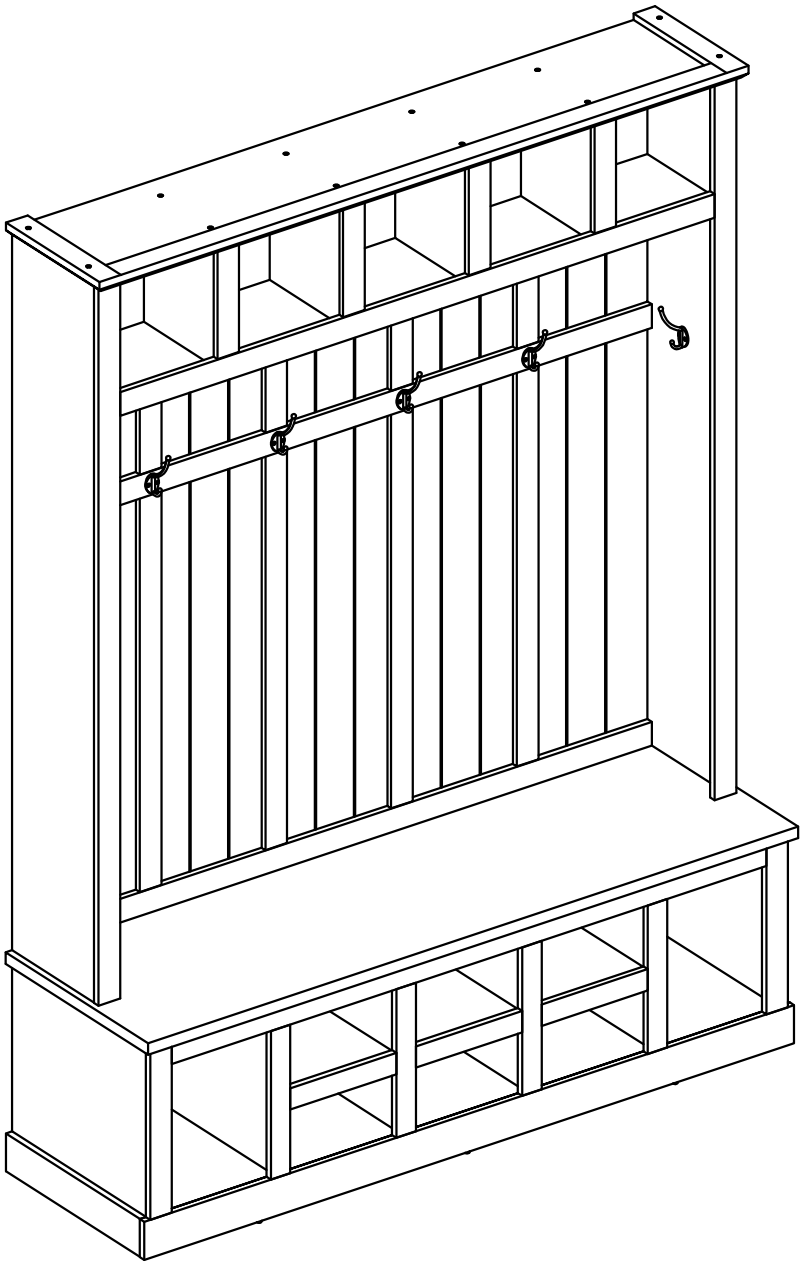

Dimensions

Width-59.1inch

Depth-18.0inch

Height-78.74inch

WARNING



This product is NOT a Clothing Storage Unit (CSU).

DO NOT use it for clothing storage.

Improper use may cause furniture tipover.


Important - Please read these Instructions fully before starting assembly

Safety and Care Advice

Important - Please read these instructions fully before starting assembly

. Check you have all the components and tools listed on the following pages.
. Remove all fittings from the plastic bags and separate them into their groups.
. Keep children and animals away from the work area, small parts could choke if swallowed.
. Make sure you have enough space to layout the parts before starting.

. During assembly do not stand or put weight on the product, this could cause damage.
. Assemble the item as close to its final position (in the same room) as possible.
. Assemble on a soft level surface to avoid damaging the unit or your floor.
. Parts of the assembly will be easier with 2 people.

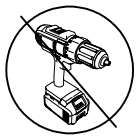

. To reduce the likelihood of damaging your product please ensure that your power drill is set on a low torque setting.

Care and malntenance

. Only clean using a damp cloth and mild detergent, do no use bleach or abrasive cleaners.

. From time to time check that there are no loose screws on this unit.

.This product should not be discarded with household waste. Take to your local authorlty waste disposal centre.

Handy Hints

. Assemble all parts and bolts loosely during assembly, only once the product is complete should you fully tighten the bolts.

. Regularly check and ensure That all bolts and fittings are tightened properly.

WARNING
In order to help prevent overturning -
please follow these Instructlons

To help prevent product toppling over please follow the below steps:-






Use the anti tip stap or wall fixing method provided (if applicable)
Do not allow children to climb or hang on the furniture
Do not open more than one drawer at a time
Do not place heavy items in the top drawers
Do not place heavy items on top of the furniture, unless the furniture has been designed for this purpose

Please note that only the anti tip strap is provided.
You will need to provide wall plugs and screws applicable for your wall type


Components -Fittings

Please check you have all the panels llsted below

Note:The quantities below are the correct amount to complete the assembly. in some cases, more fittings may be supplied than are required.

Ⓐ  Cam bolt x 112+3	Ⓑ  Cam lock x 112+3	Ⓒ  M4*40mm Screw x 4+1	Ⓓ  M6*45mm Screw x 28+2	Ⓔ  Ø6*30mm Dowel x 105+5	Ⓕ  M3.5*12mm Screw x 48+5
Ⓖ  M3*14mm Screw x 16+2	Ⓗ  Hook x 6	Ⓘ  Nail x 21+4	Ⓙ  M3*16mm Screw x 21+4	Ⓚ  Nail Leg x 9+2	Ⓛ  L Bracket x 2
Ⓜ  Perfect Sticker x 60	Ⓝ  Allen key M4 x1	Ⓞ  Phillips screwdriver x 1	Ⓟ  P1 L Bracket x 2	 P2 M4*14mm Screw x 2	 P3 Wall plug x 2	 P4 M4*35mm Screw x 2


Tools required

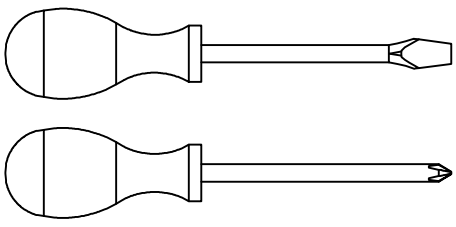


Phillips screwdriver
(medium &large)

Using Camlocks


Step 1
Connect the male camlockas diected in the assemblyinstructions using a scewdriver.

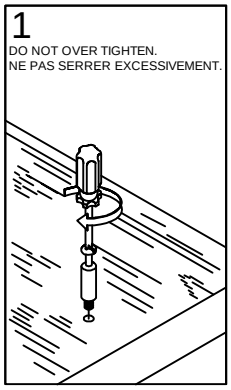


Step 2
Push the male camlockinto the entry hole.

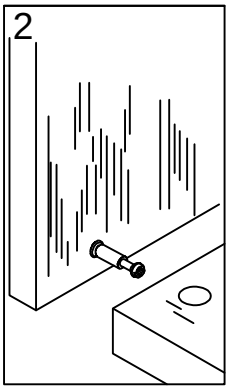

Step 3
Insert the female camlock asshown in the instruction. Note:ensure that the arowon the top of the camlock points towards the entry holefor the male camlock.

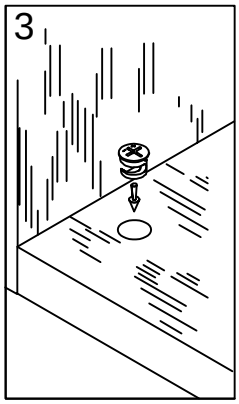












Step 4
Turn the female camlock clockwise with a screwdriver. You should feel a click when the camlock is locked in place The joint is now secure

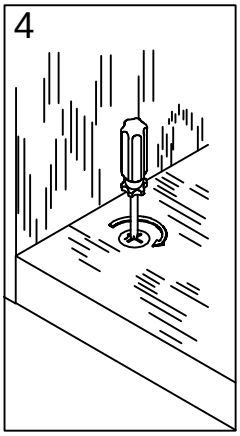

Components - Parts

Please check you have all the panels listed below.Please note that there are 2 boxes of this product.













BoxB

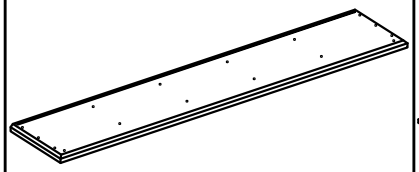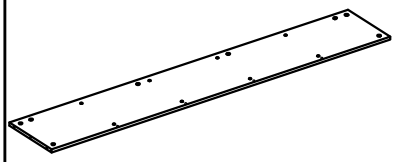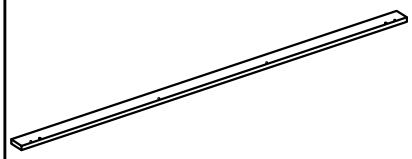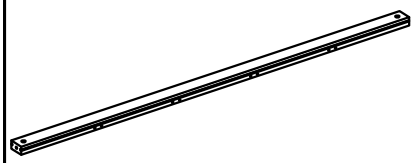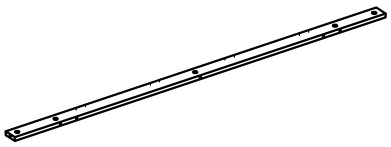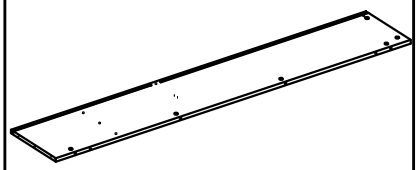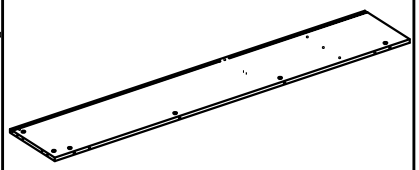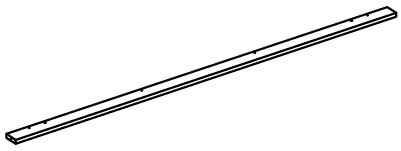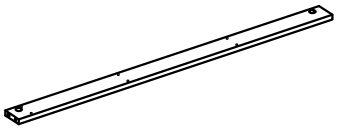① 	② 	③ 
Top Panel (Up) 1498*298*26 (1PC)	Bottom Panel (Up) 1442*249*12 (1PC)	Center Panel (Up) 271*249*12 (1PC)
④ 	⑤ 	⑥ 
Center Bone(Up) 234*50*12 (4PCS)	Front Bone Long (Up) 1372*50*14 (1PC)	Back Bone (Up) 1442*50*28 (1PC)
⑦ 	⑧ 	⑨ 
Back Bone (Down) 1442*50*14 (1PC)	Side Panel (L) 1512*263*14 (1PC)	Side Panel (R) 1512*263*14 (1PC)
⑩ 	⑪ 	⑫ 
Side Bone (L&R) 1512*50*14 (2PCS)	Back Bone Long 830*50*12 (4PCS)	Back Bone Short 299*50*12 (4PCS)

Components - Parts

Please check you have all the panels listed below.Please note that there are 2 boxes of this product.


BoxB

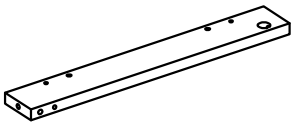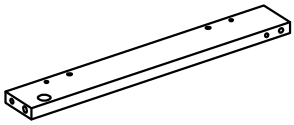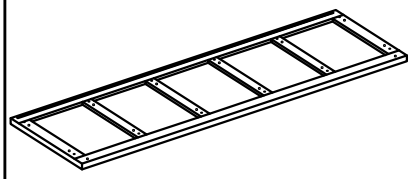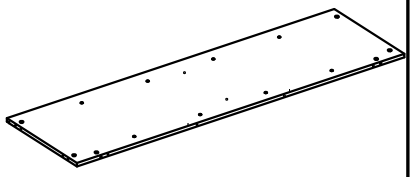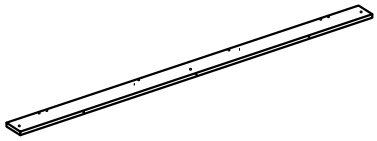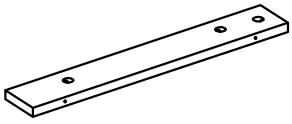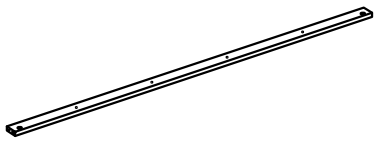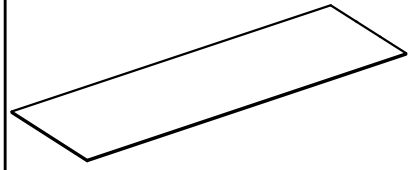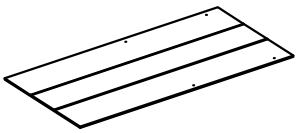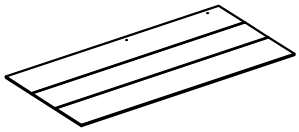⑲ 	⑳ 	㉑ 
Down Center Bone 313*45*14 (4PCS)	Down Side Bone (L) 358*50*14 (1PC)	Down Side Bone (R) 358*50*14 (1PC)
㉒ 	㉓ 	㉔ 
Down Middle Bone 245*45*14 (3PCS)	Top Panel(Center) 1500*455*24 (1PC)	Bottom Panel (Down) 1442*428*14 (1PC)
㉕ 	㉖ 	㉗ 
Leg Panel (Center) 1500*80*14 (1PC)	Center Leg 428*64*14 (1PC)	Front Bone Long(Down) 1372*45*14 (1PC)
㉘ 	㉙ 	㉚ 
Back Panel (Down) 1451*366*3 (1PC)	Back Panel Center (Up) 590*290*3 (3PCS)	Back Panel Side (L) 590*290*3 (1PC)











Components - Parts

Please check you have all the panels listed below.Please note that there are 2 boxes of this product.


BoxB

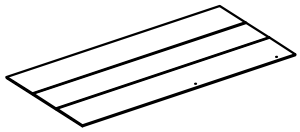㉛ 		
Back Panel Side (R) 590*290*3 (1PC)		

BoxA

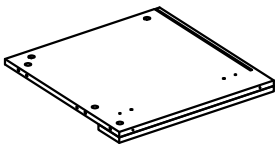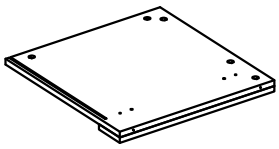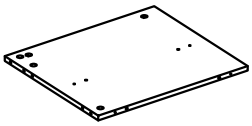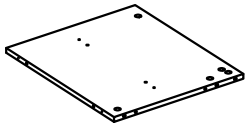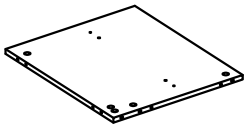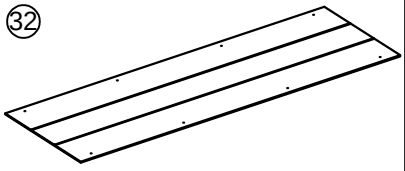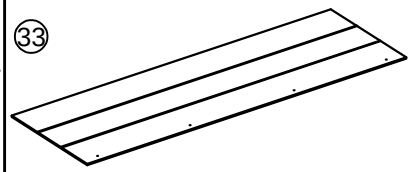
③ 	⑬ 	⑭ 
Center Panel (Up) 271*249*12 (3PCS)	Down Side Panel (L) 438*428*28 (1PC)	Down Side Panel (R) 438*428*28 (1PC)
⑮ 	⑯ 	⑰ 
Down Center Panel 358*414*12 (2PCS)	Middle Panel 278*414*12 (3PCS)	Down Center Panel (R) 358*414*12 (1PC)
⑱ 	㉜ 	㉝ 
Down Center Panel (L) 358*414*12 (1PC)	Back Panel (Center) 884*290*3 (3PCS)	Back Panel (Side L&R) 884*290*3 (2PCS)
 Hardware box (1pc)		

Assembly Instructions

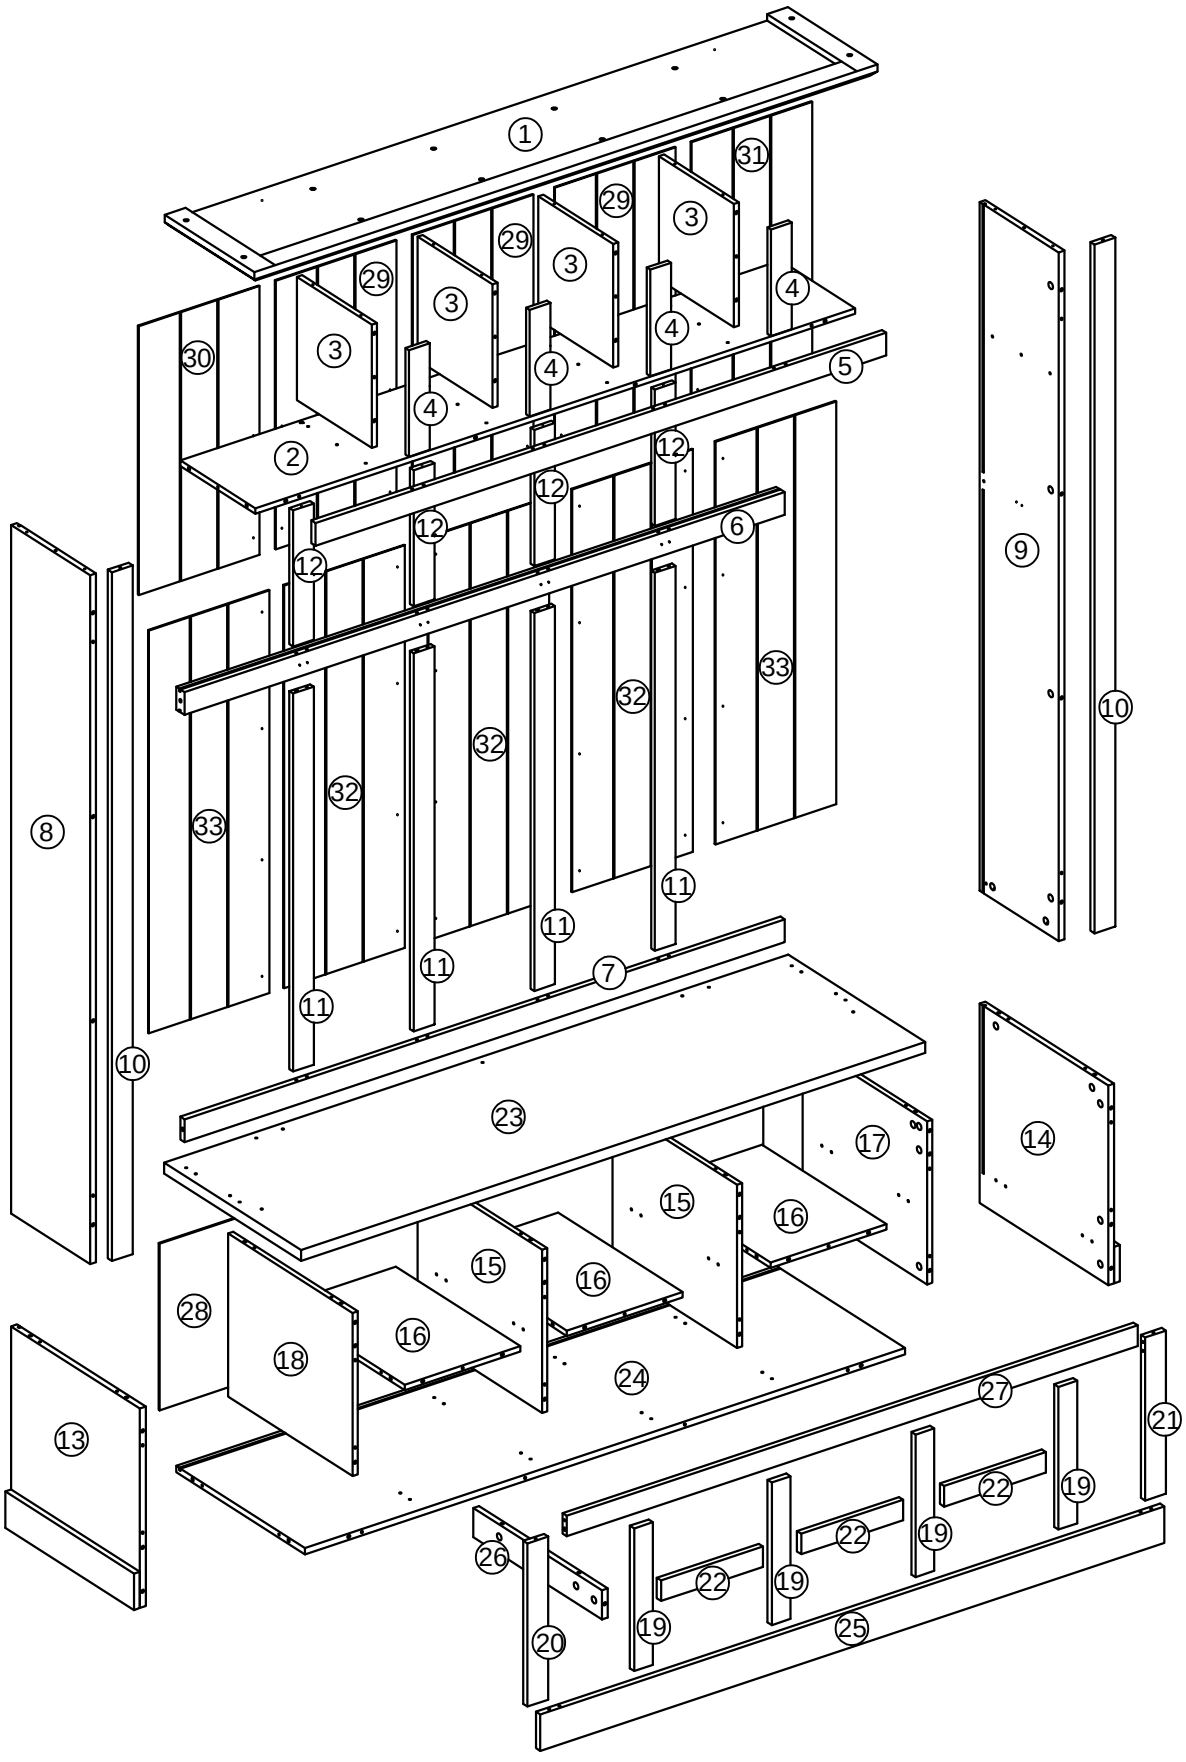

Step 1

X2

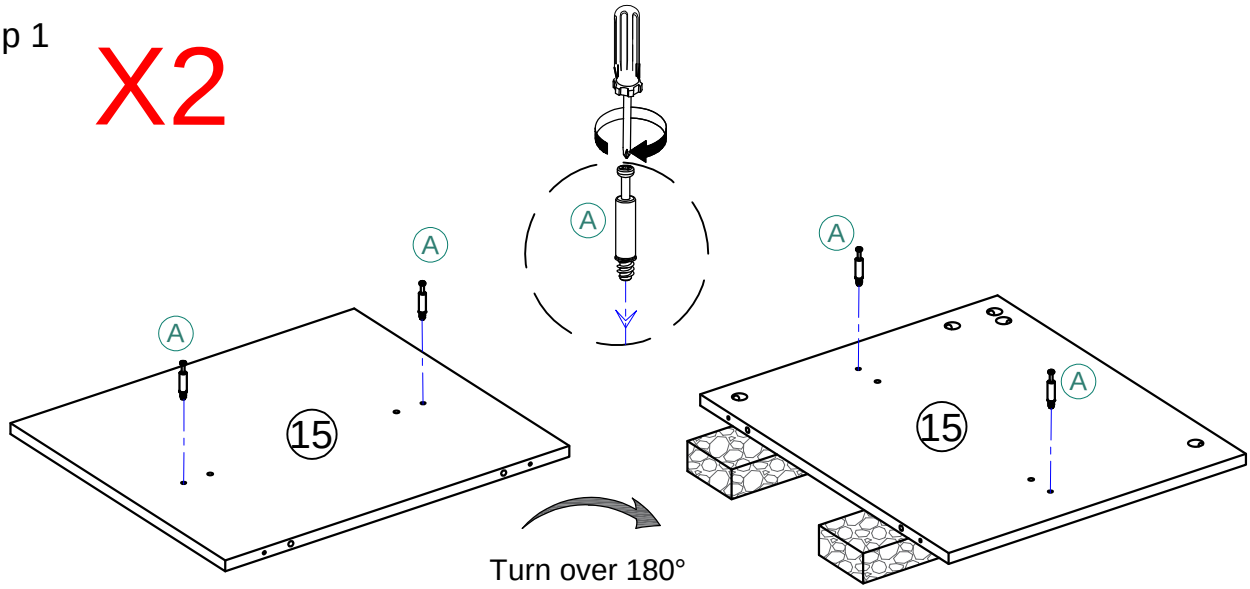



Turn over 180°
Need to install on both side

A	x8
Cam bolt	

Use the materials provided in the packaging to support the product from below for easier installation.

Step 2

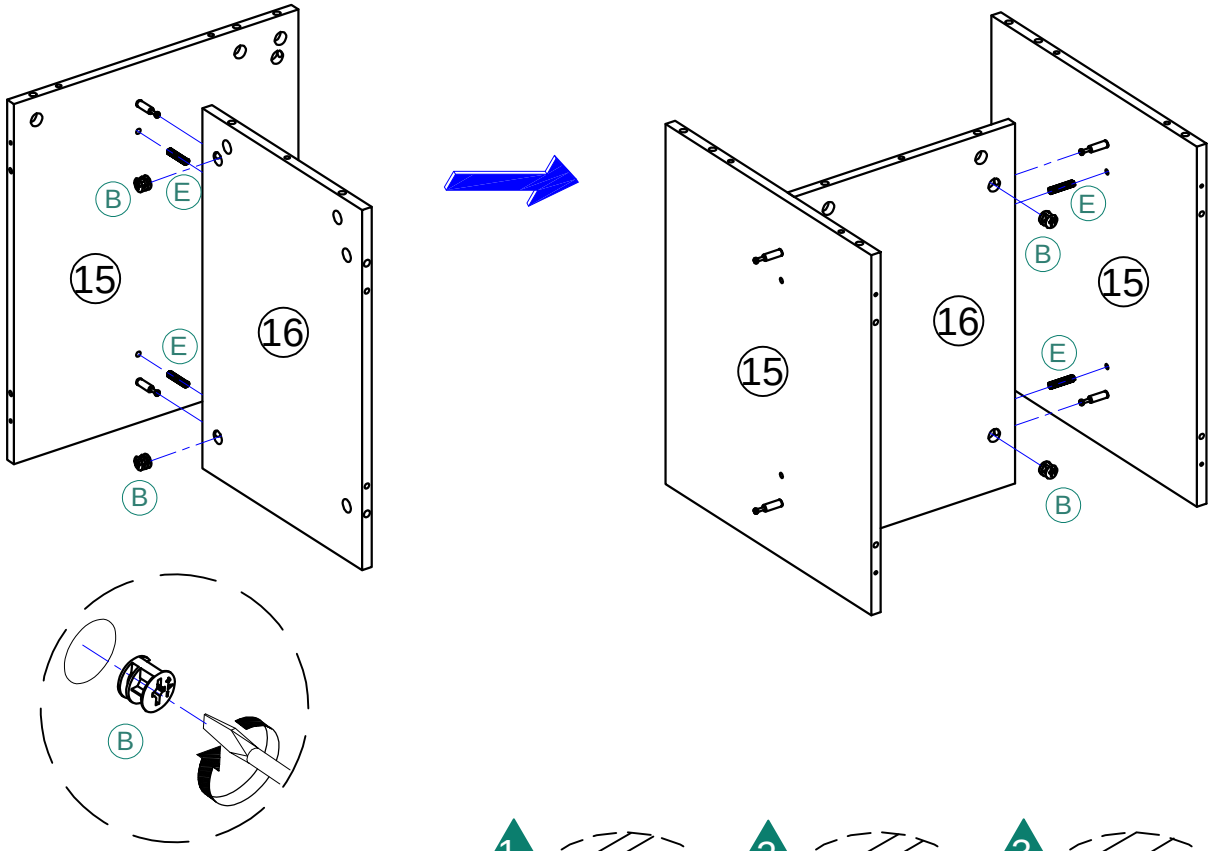


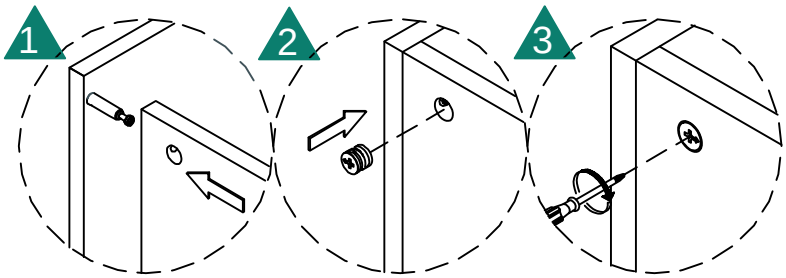



B	x4
Ø15x9.5mm	

E	x4
Ø6x30mm	

Step 3

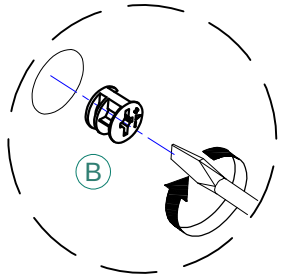

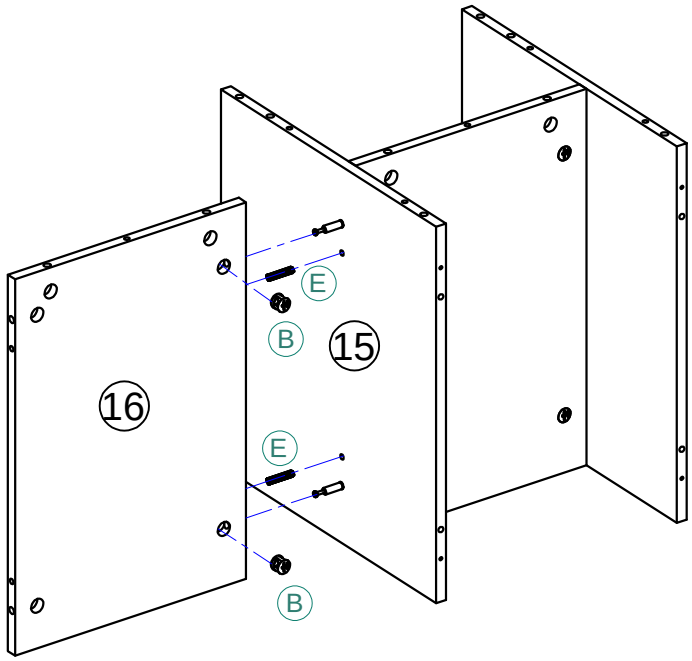


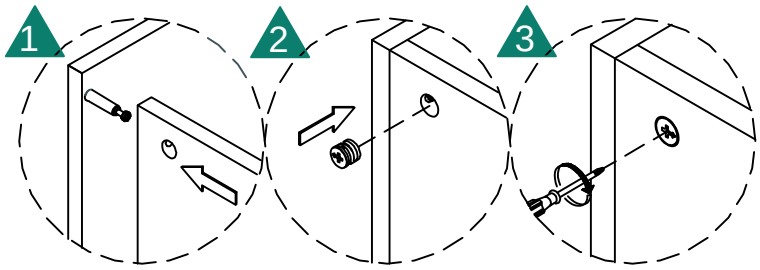


B	x2
	
Ø15x9.5mm	

E	x2
	
Ø6x30mm	


Step 4

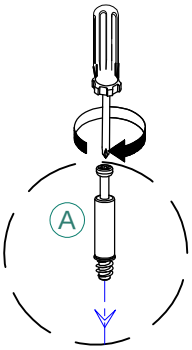


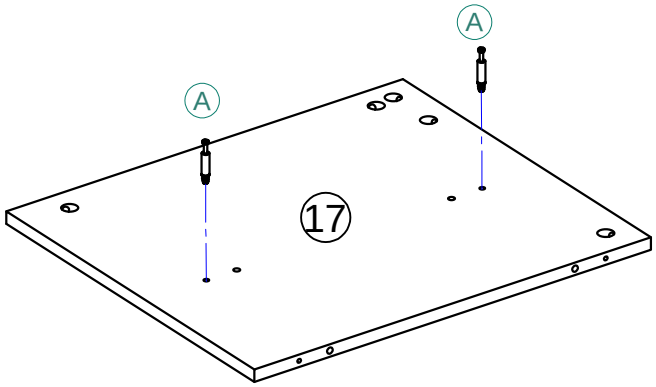


A	x2
	
Cam bolt	


Step 5

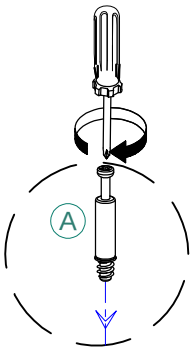


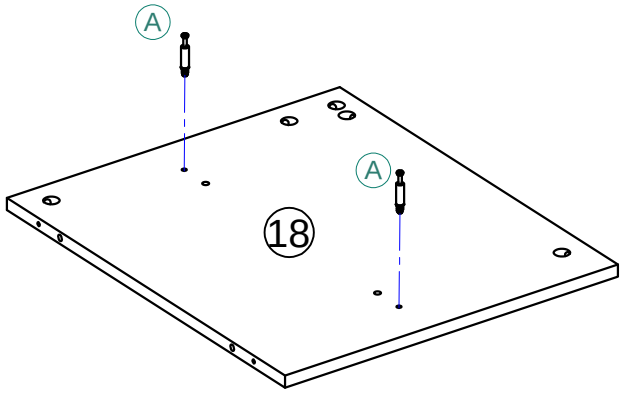


A	x2
	
Cam bolt	

Step 6

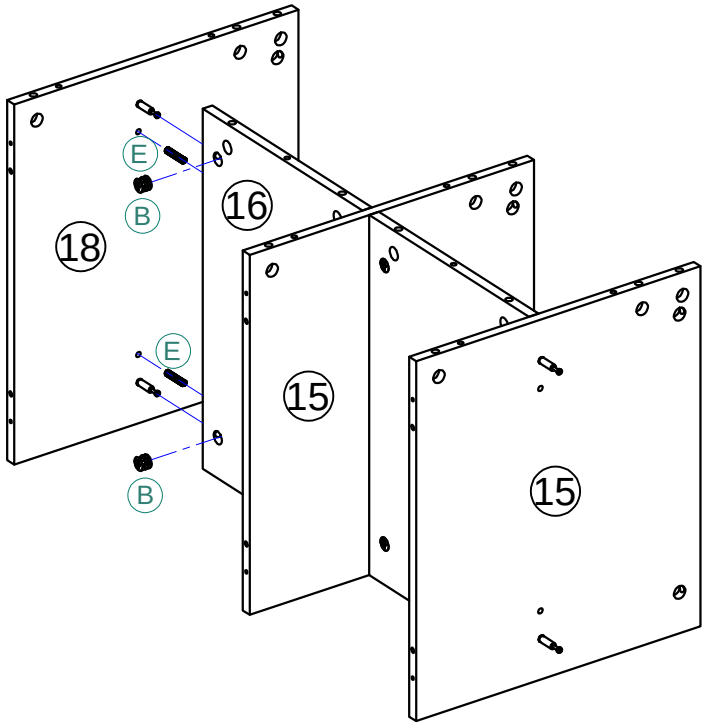

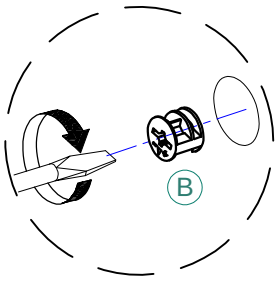


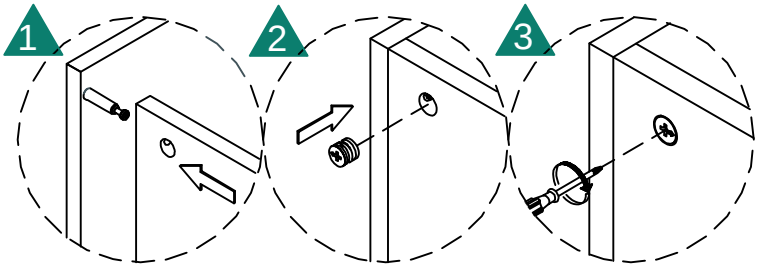



B	x2
	
Ø15x9.5mm	

E	x2
	
Ø6x30mm	

Step 7

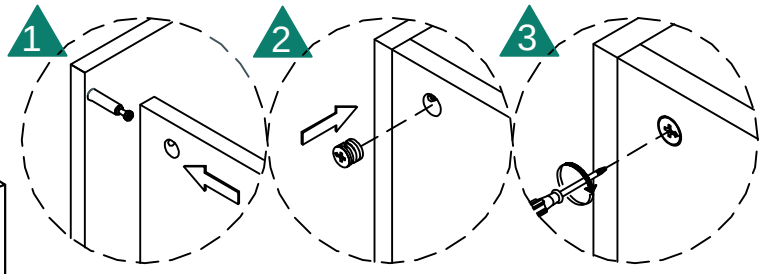

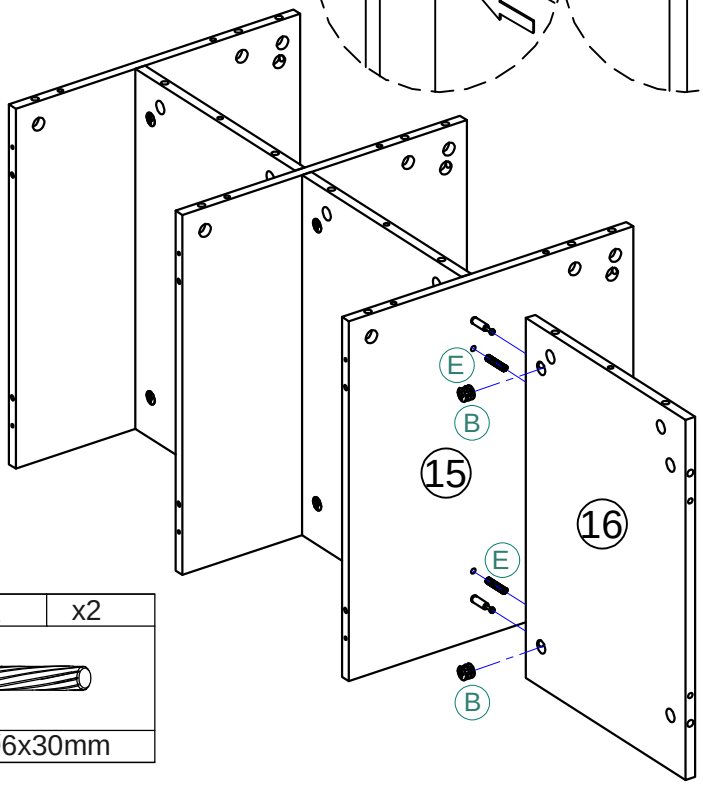


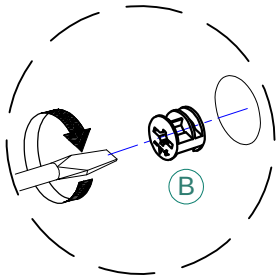



B	x2
	
Ø15x9.5mm	

E	x2
Ø6x30mm	

Step 8

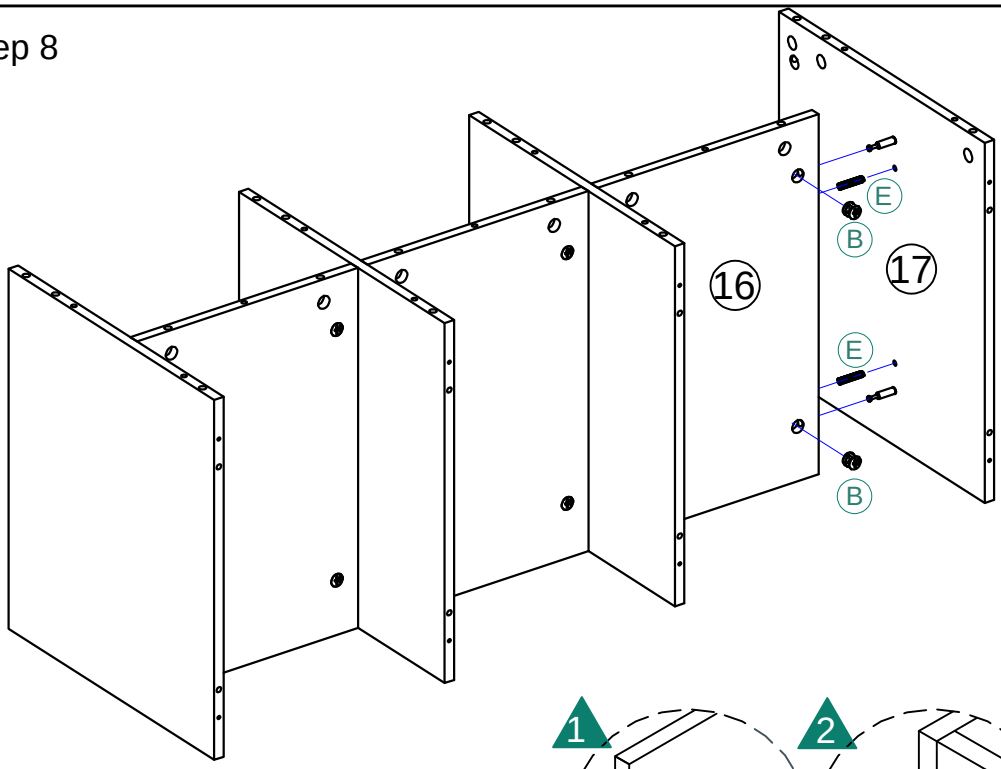

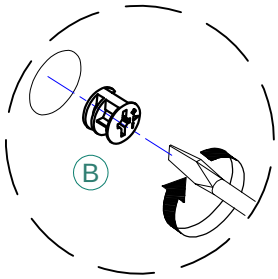

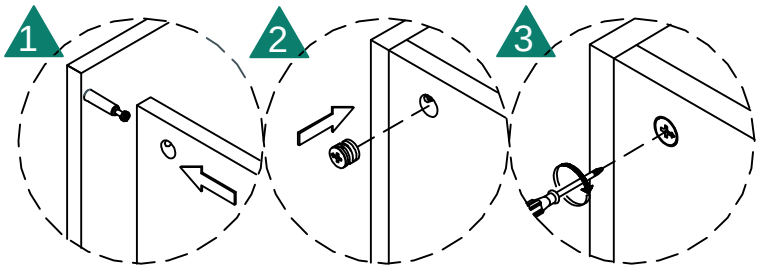



B	x2
	
Ø15x9.5mm	


E	x2
	
Ø6x30mm	

Step 9


X3

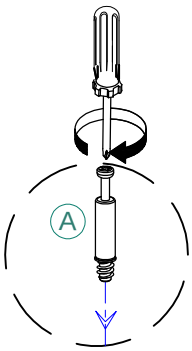


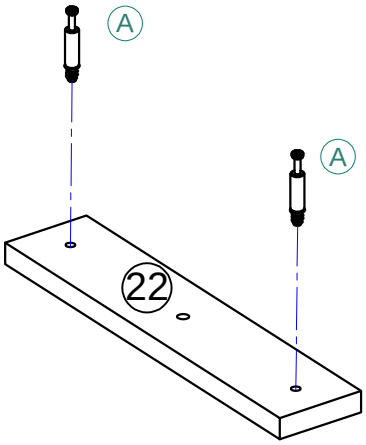


A	x6
	
Cam bolt	

Step 10

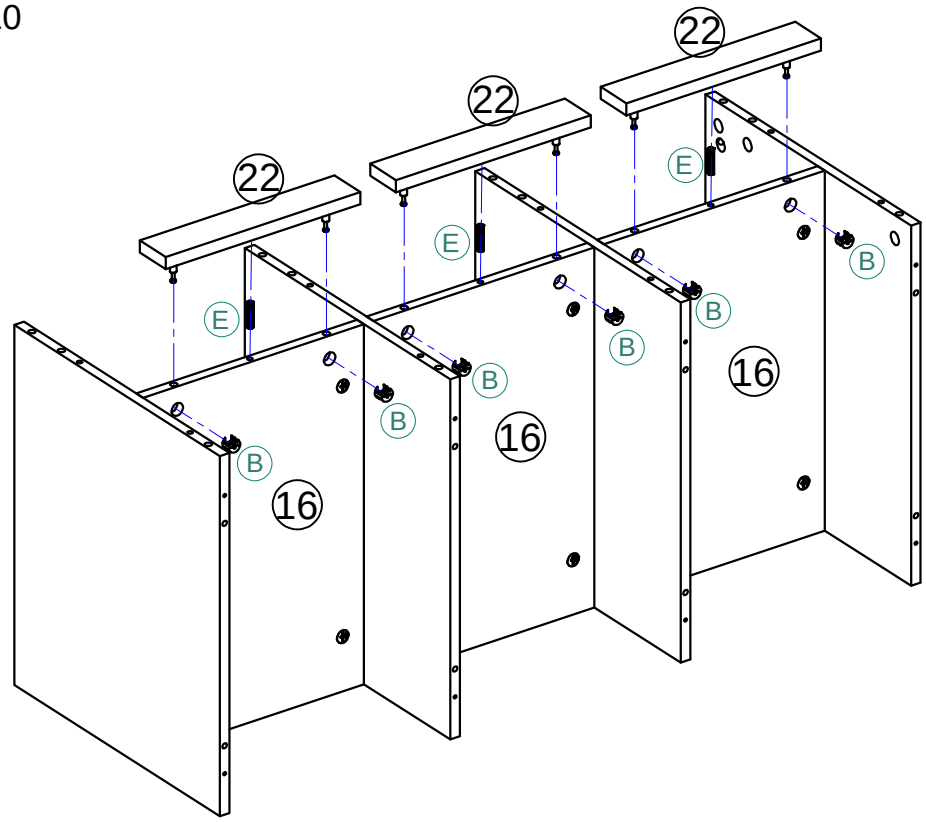

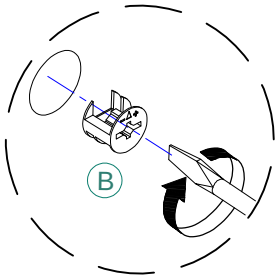

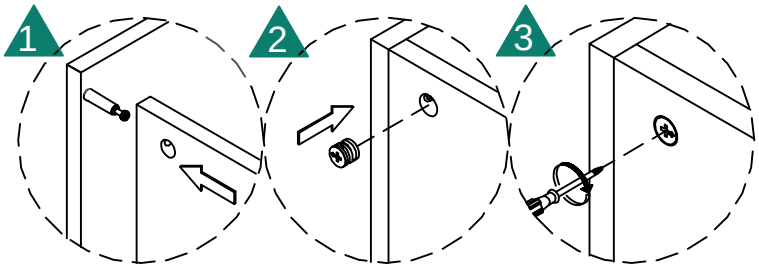



B	x6
	
Ø15x9.5mm	

E	x3
	
Ø6x30mm	

Step 11


X4

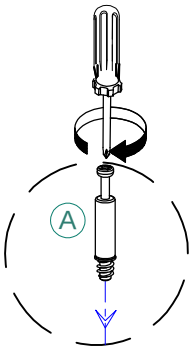


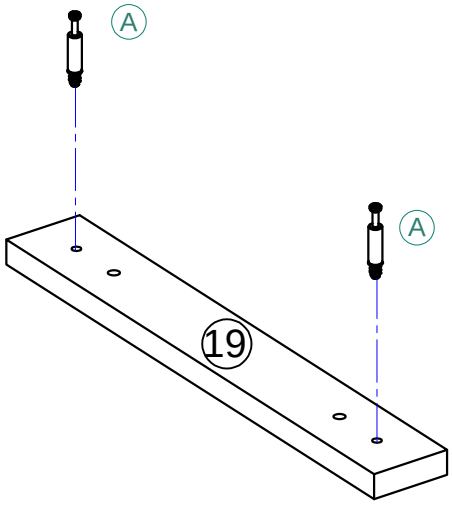


A	x8
	
Cam bolt	

Step 12

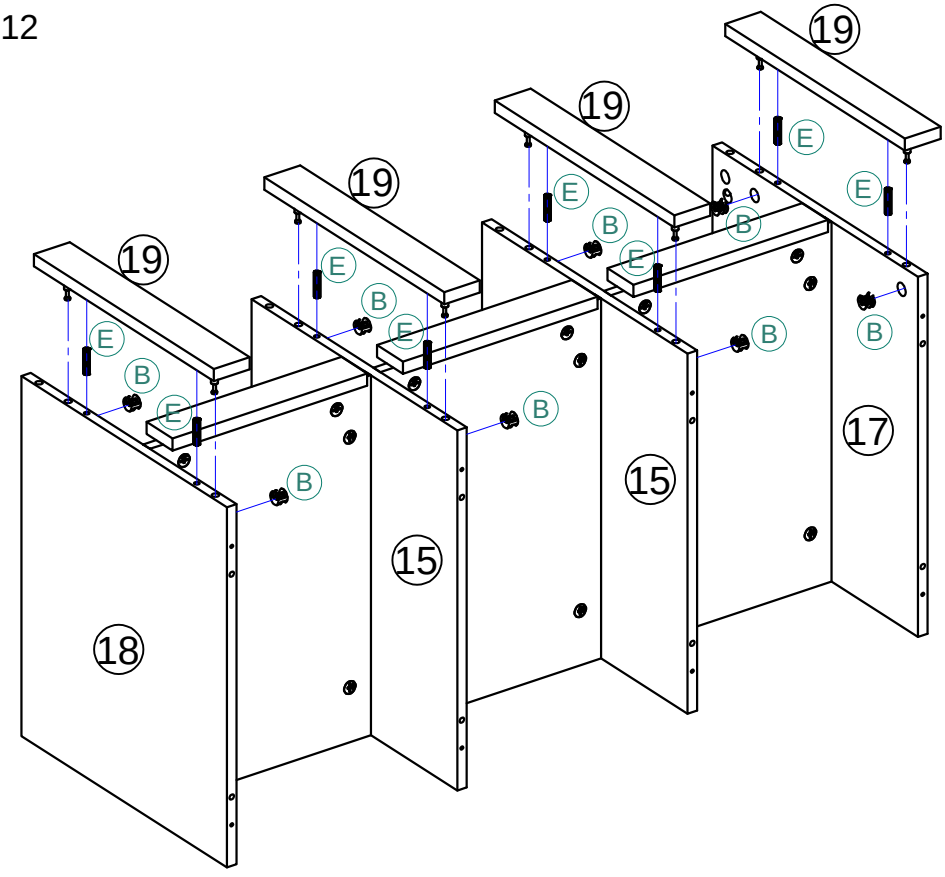

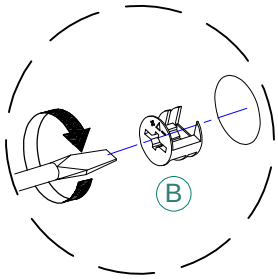


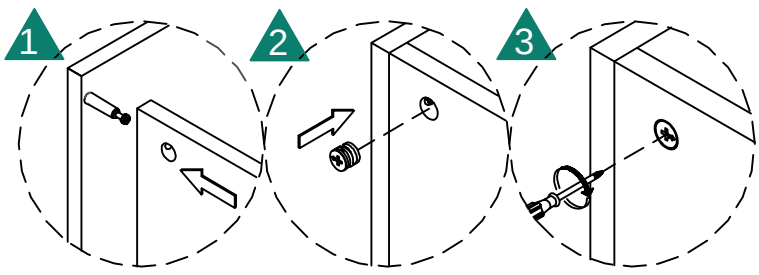


B	x8
	
Ø15x9.5mm	

E	x8
	
Ø6x30mm	

Step 13

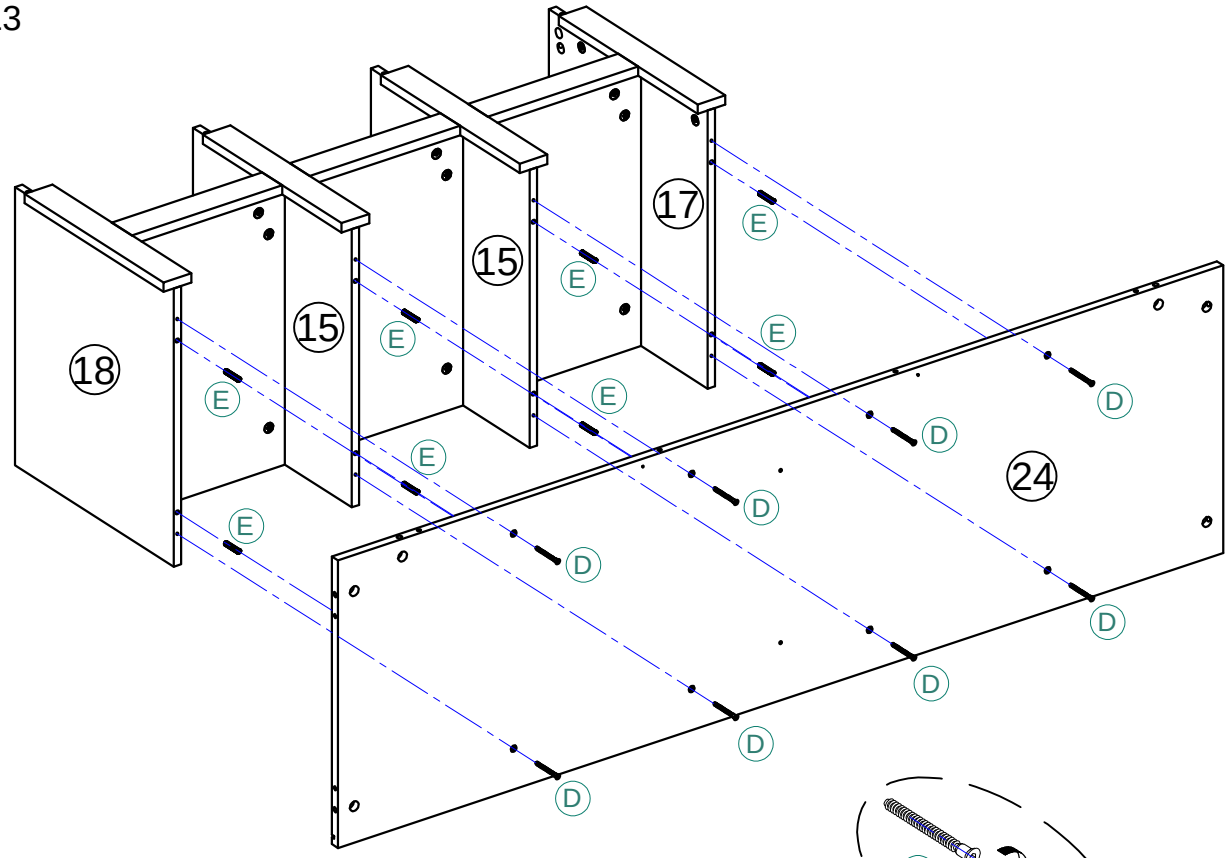

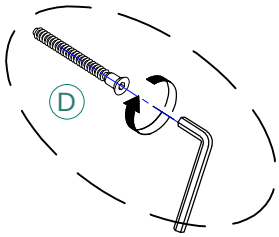


D	x8
	
Ø9.5xM6x45mm	


E	x8
	
Ø6x30mm	


N

M4

Step 14

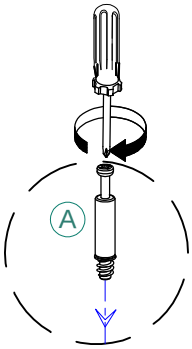


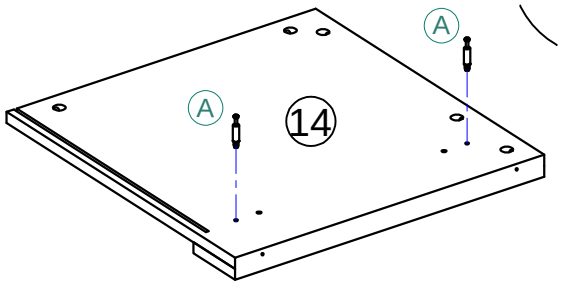

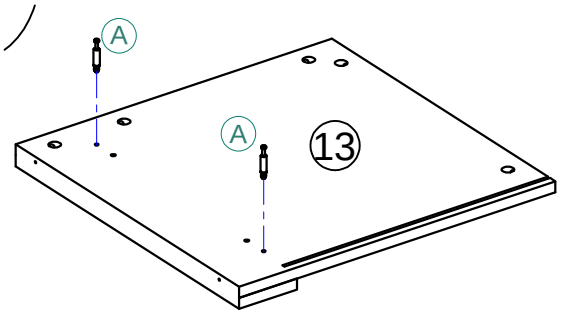

A	x4
	
Cam bolt	


Step 15

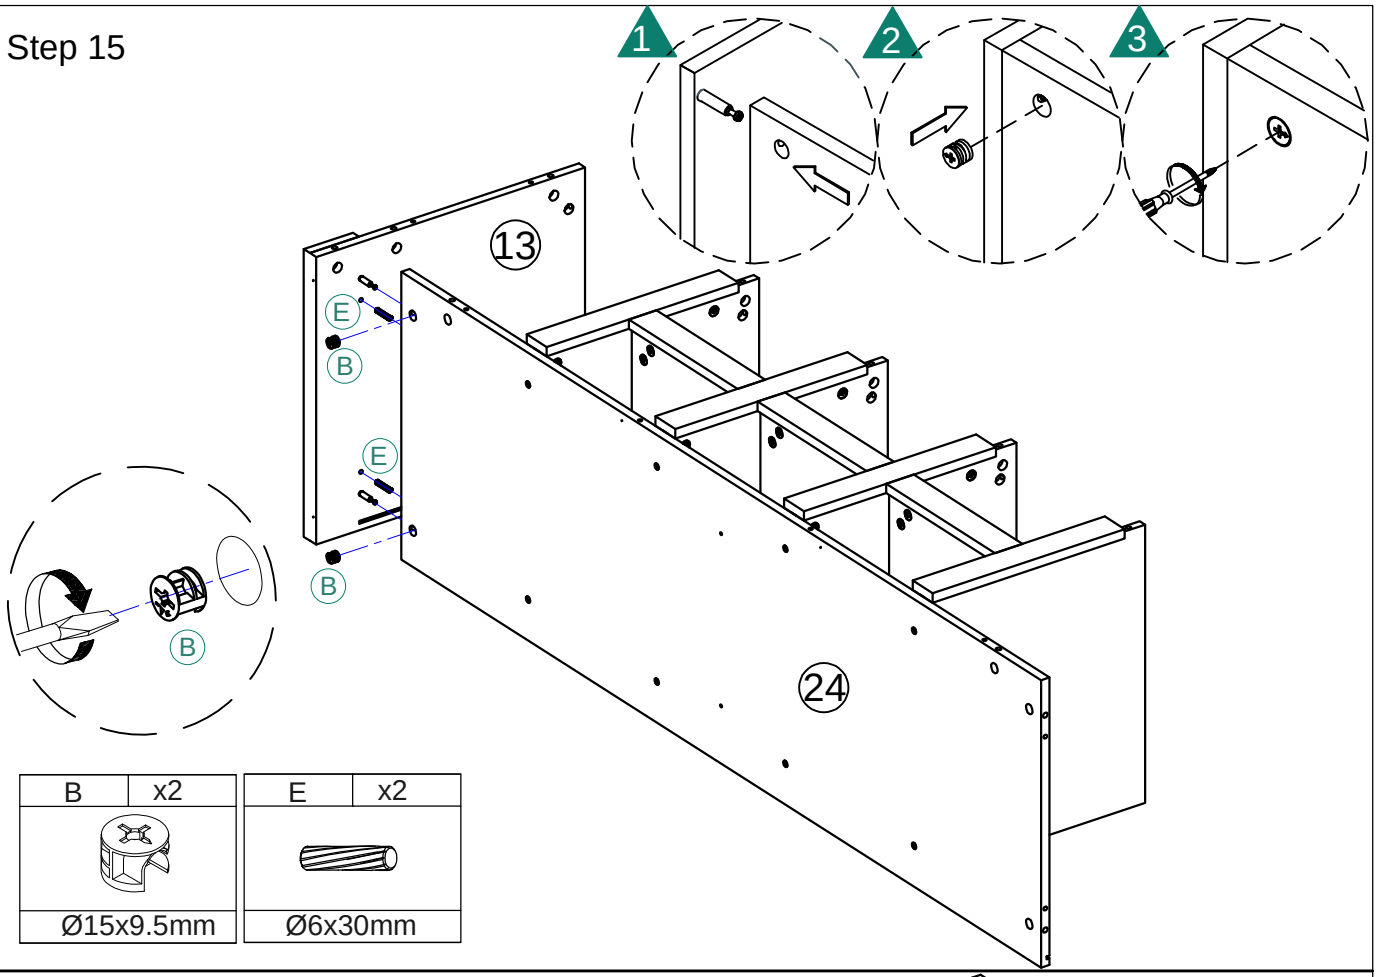

B	x2
Ø15x9.5mm	

E	x2
Ø6x30mm	


Step 16

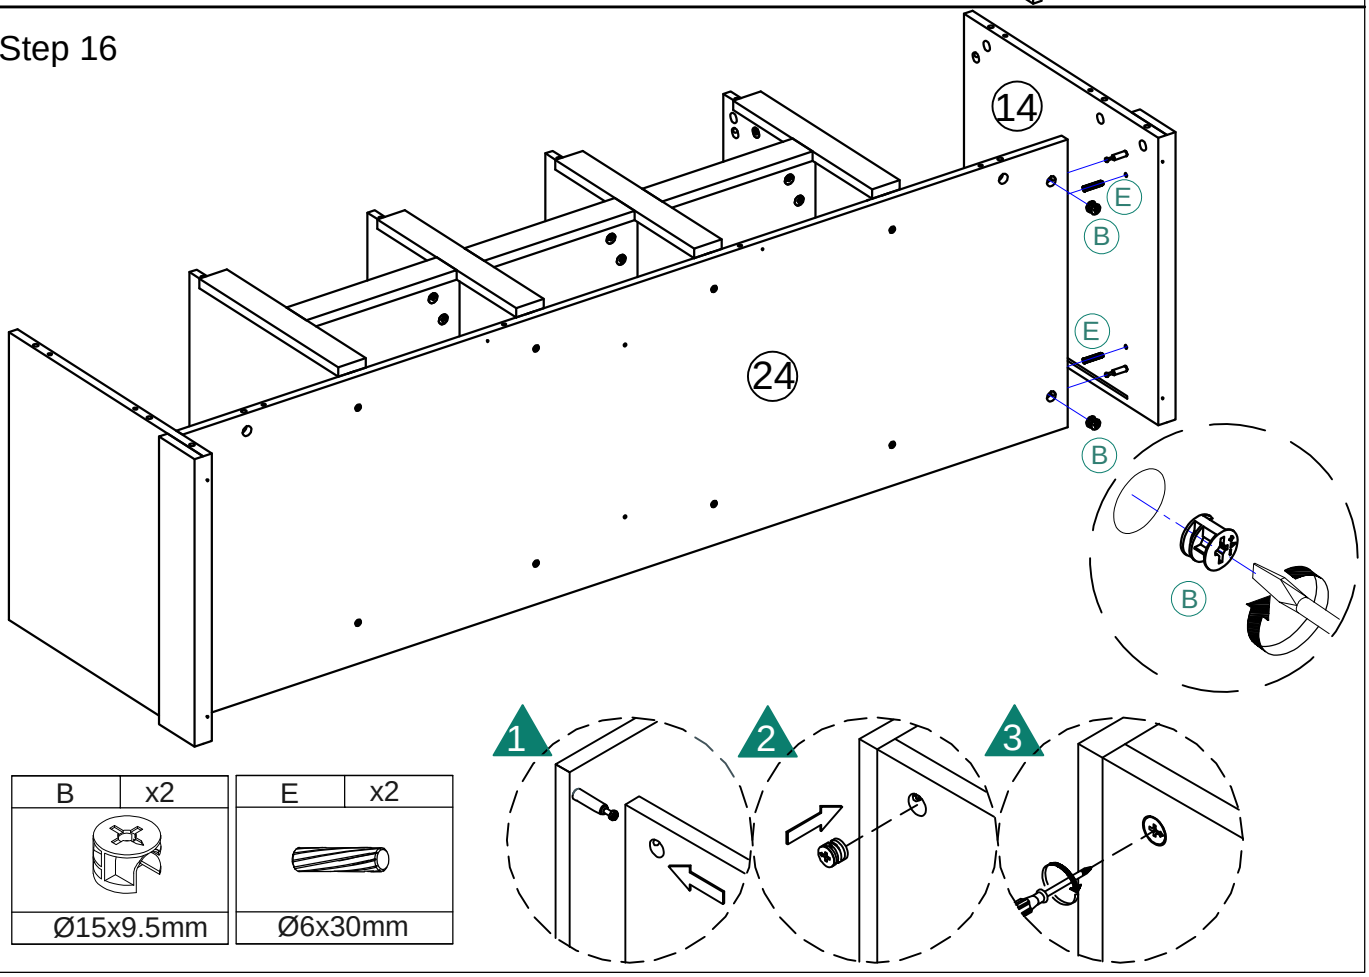

B	x2
Ø15x9.5mm	

E	x2
Ø6x30mm	


Step 17

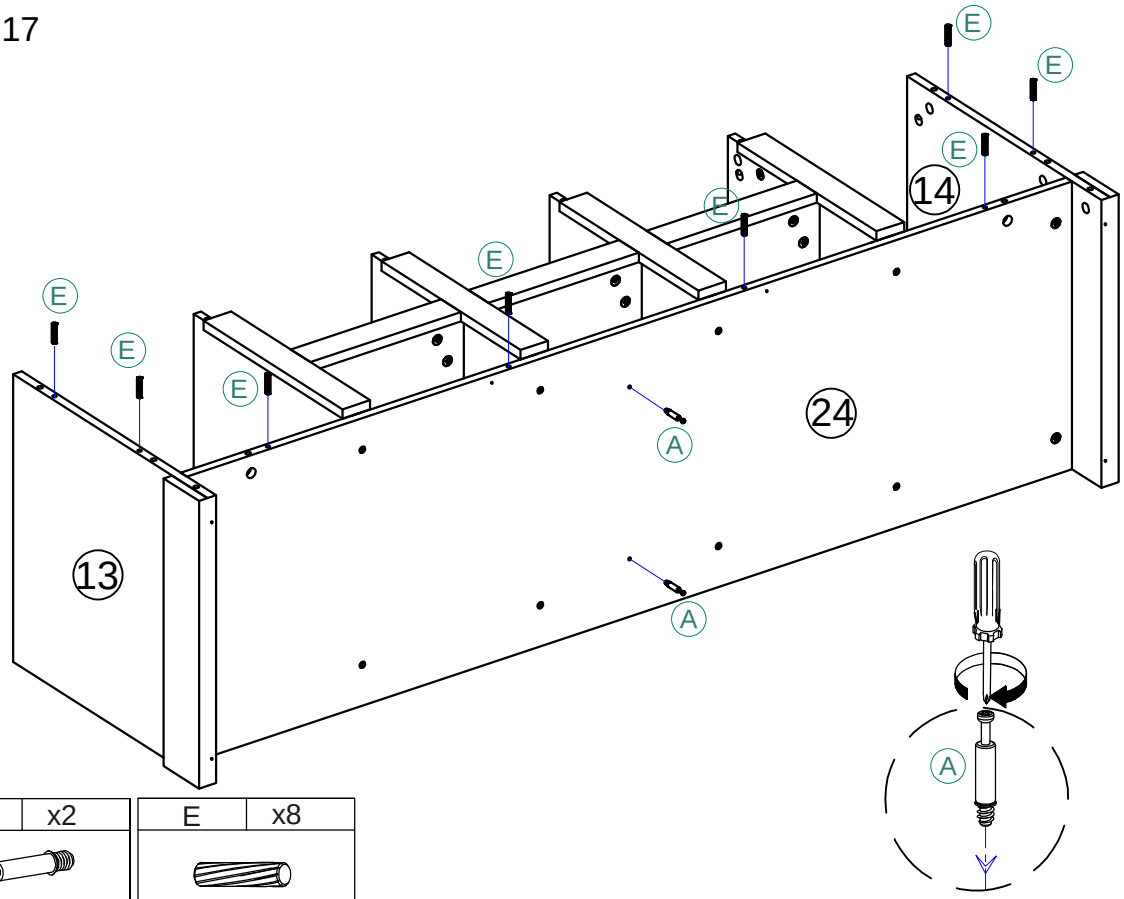


A	x2
Cam bolt	

E	x8
Ø6x30mm	


Step 18

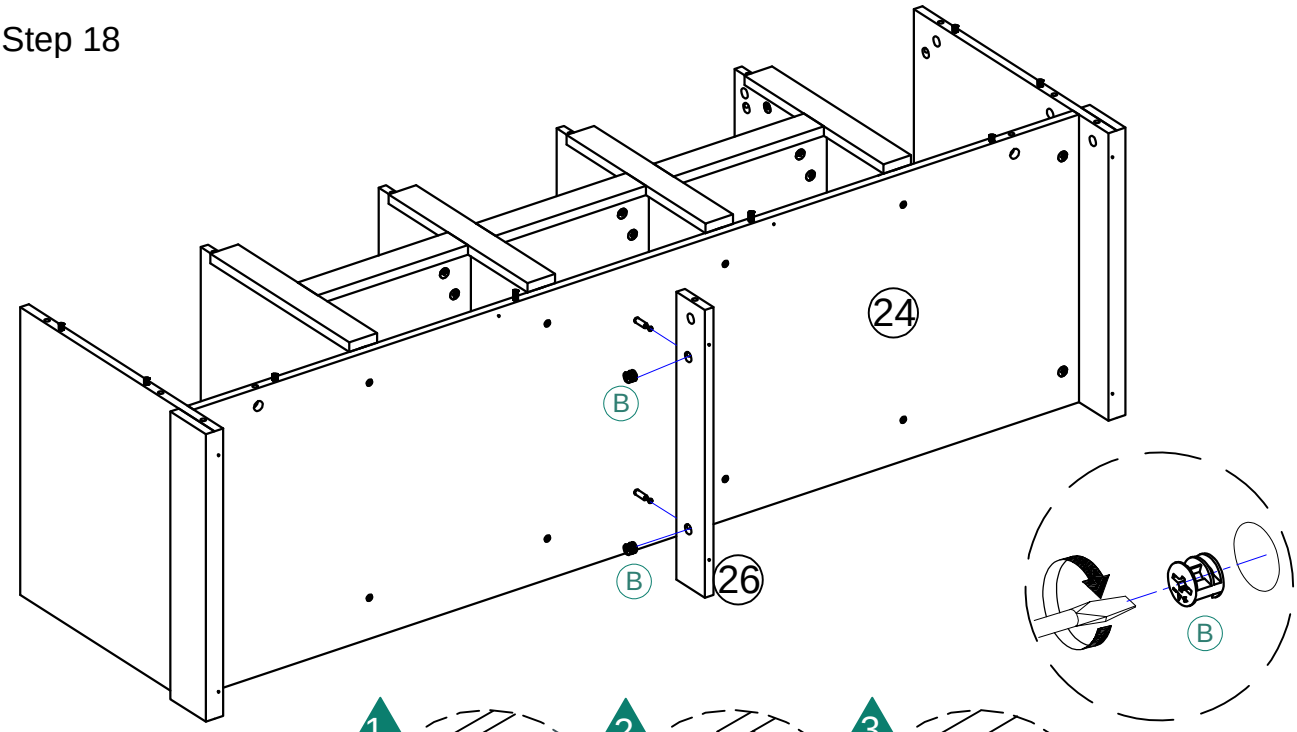

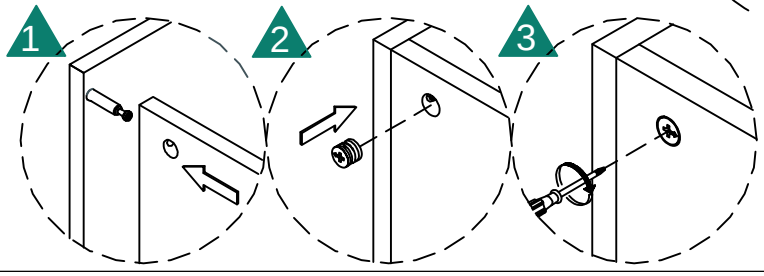

B	x2
	
Ø15x9.5mm	


Step 19

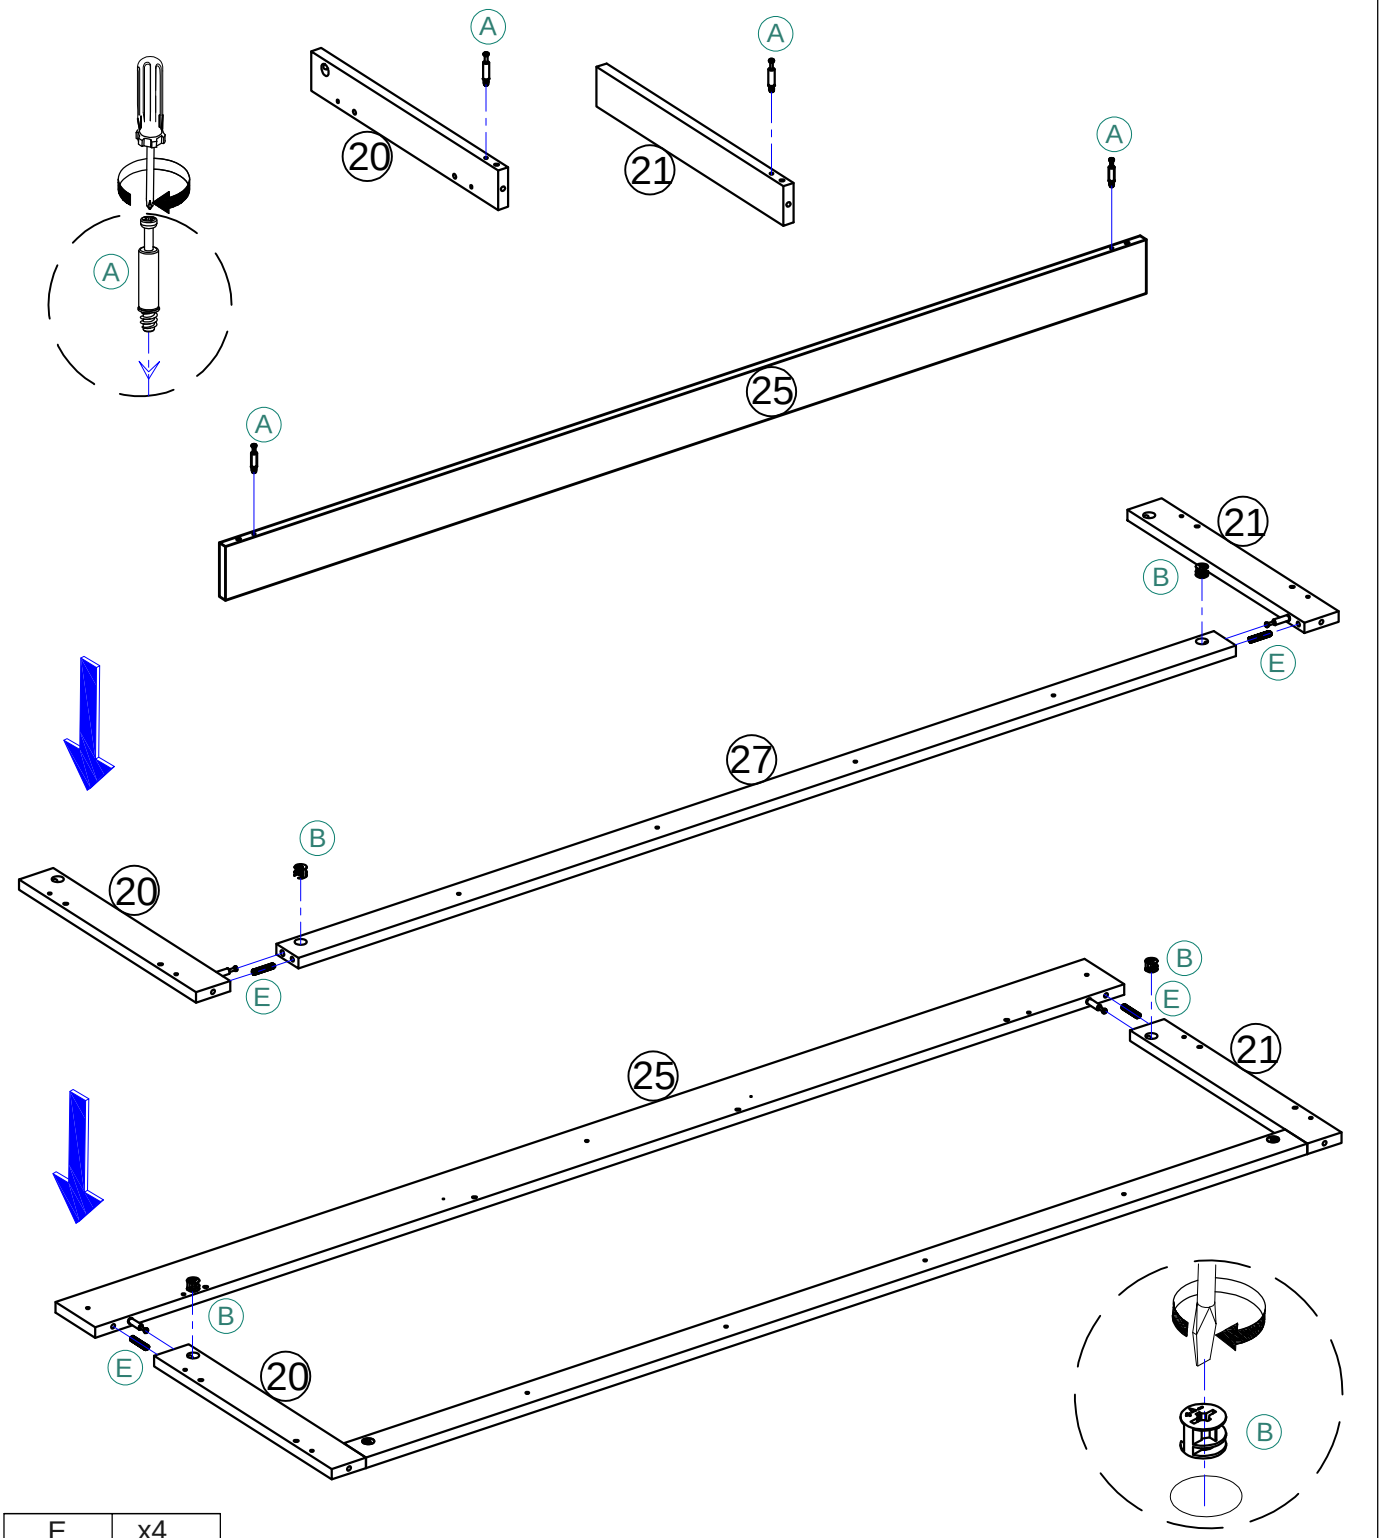


E	x4
Ø6x30mm	

A	x4
Cam bolt	

B	x4
Ø15x9.5mm	

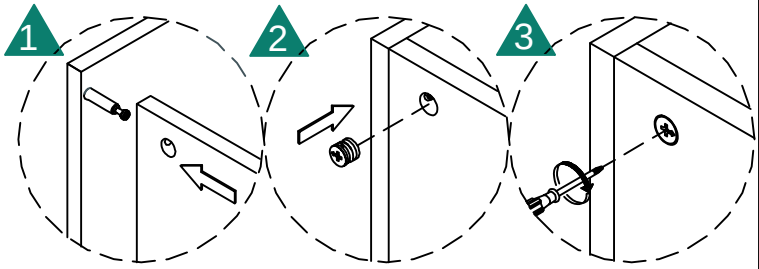



Step 20

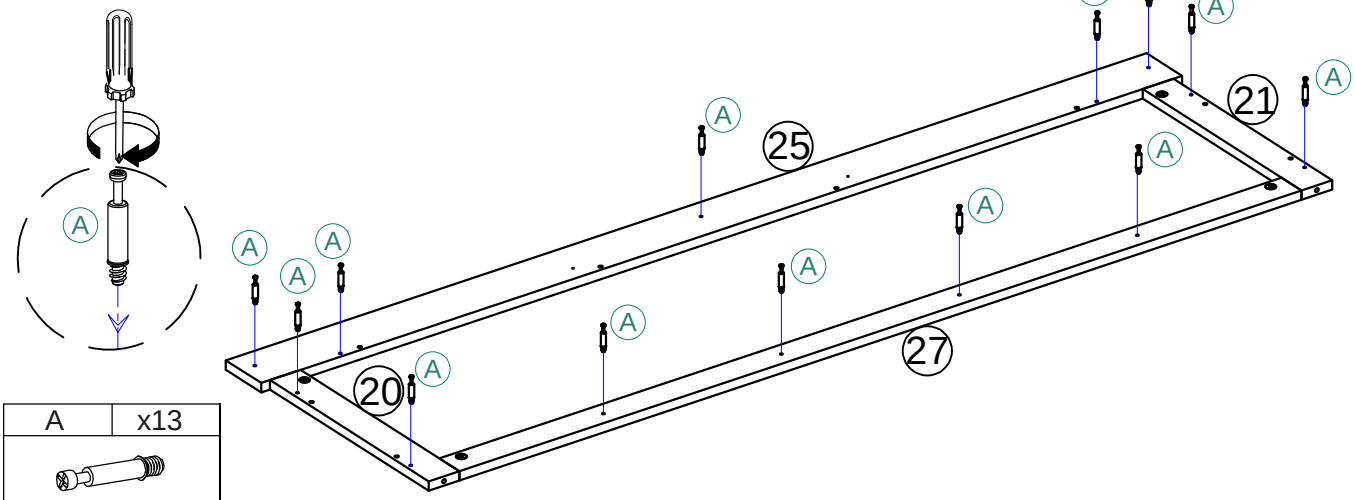

A	x13
Cam bolt	


Step 21

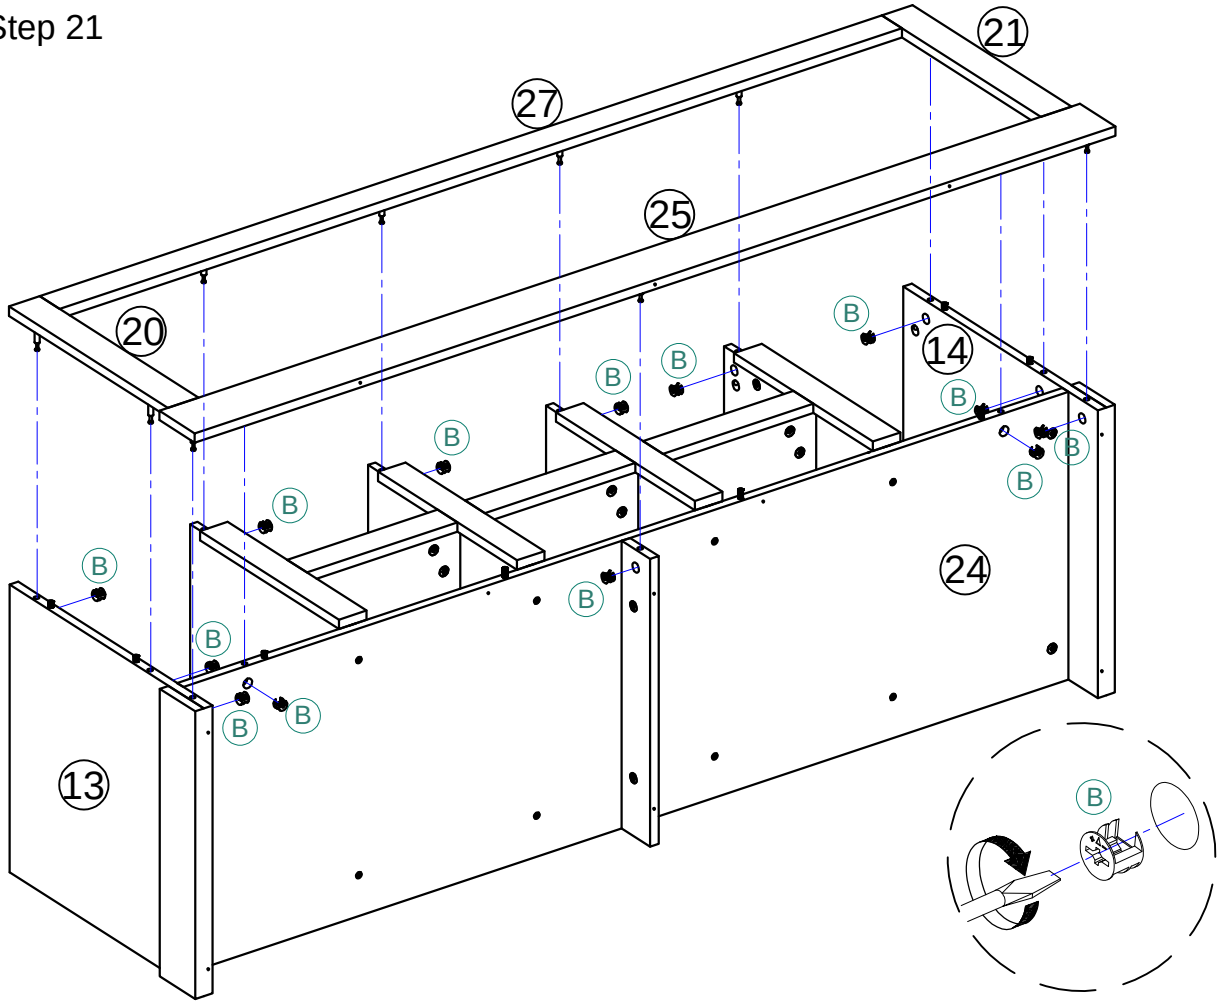

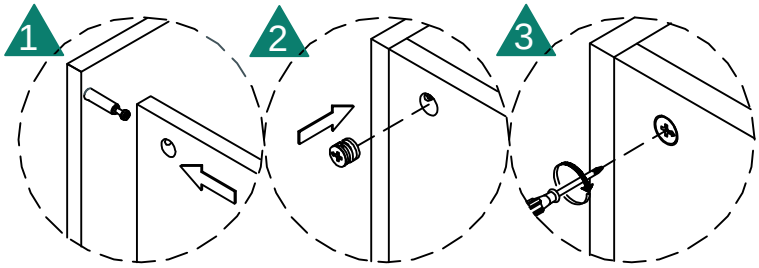

B	x13
	
Ø15x9.5mm	

Step 22

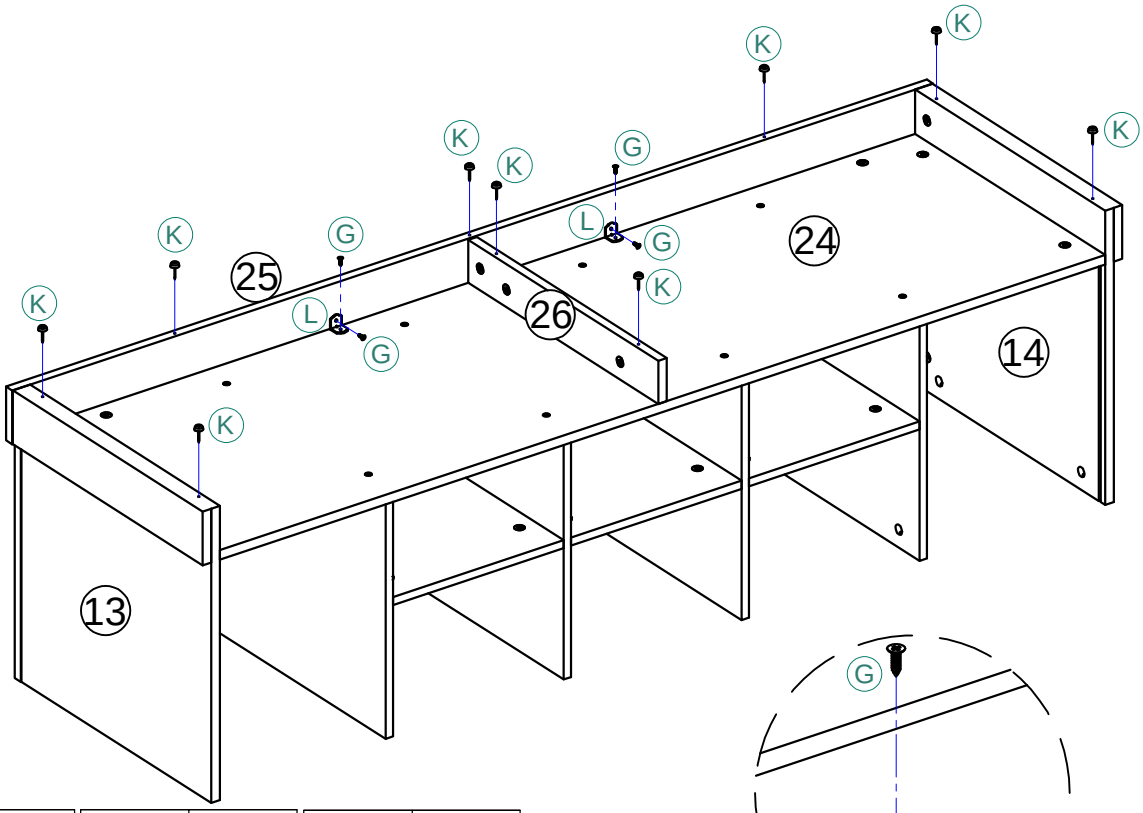


K	x9
	

L	x2
	


G	x4
	
M3x14mm	

Step 23

Note: This assembly step requires two peoples to perform it simultaneously !

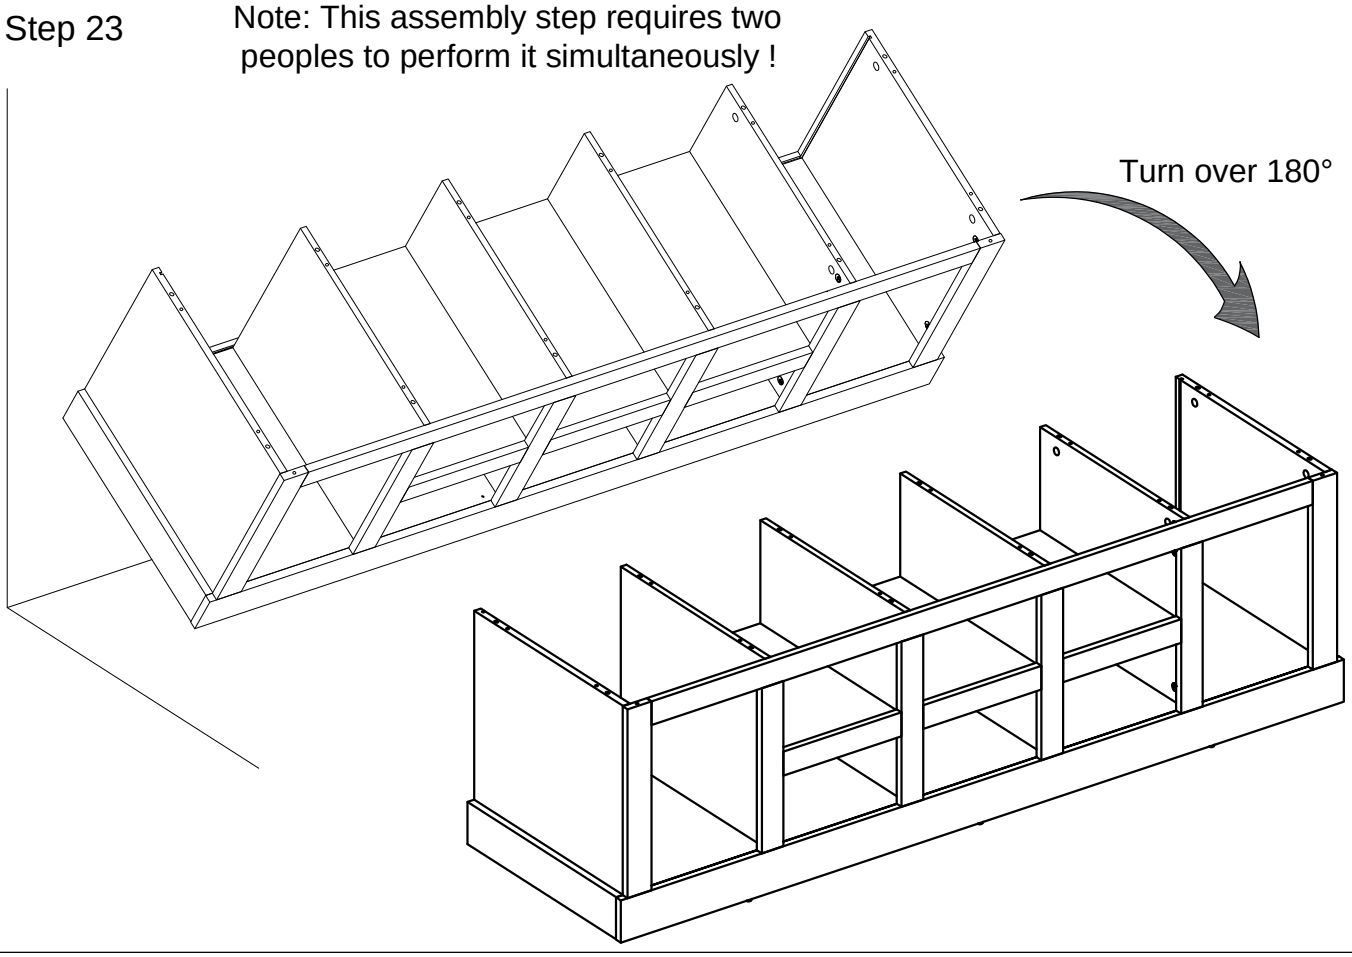


Step 24

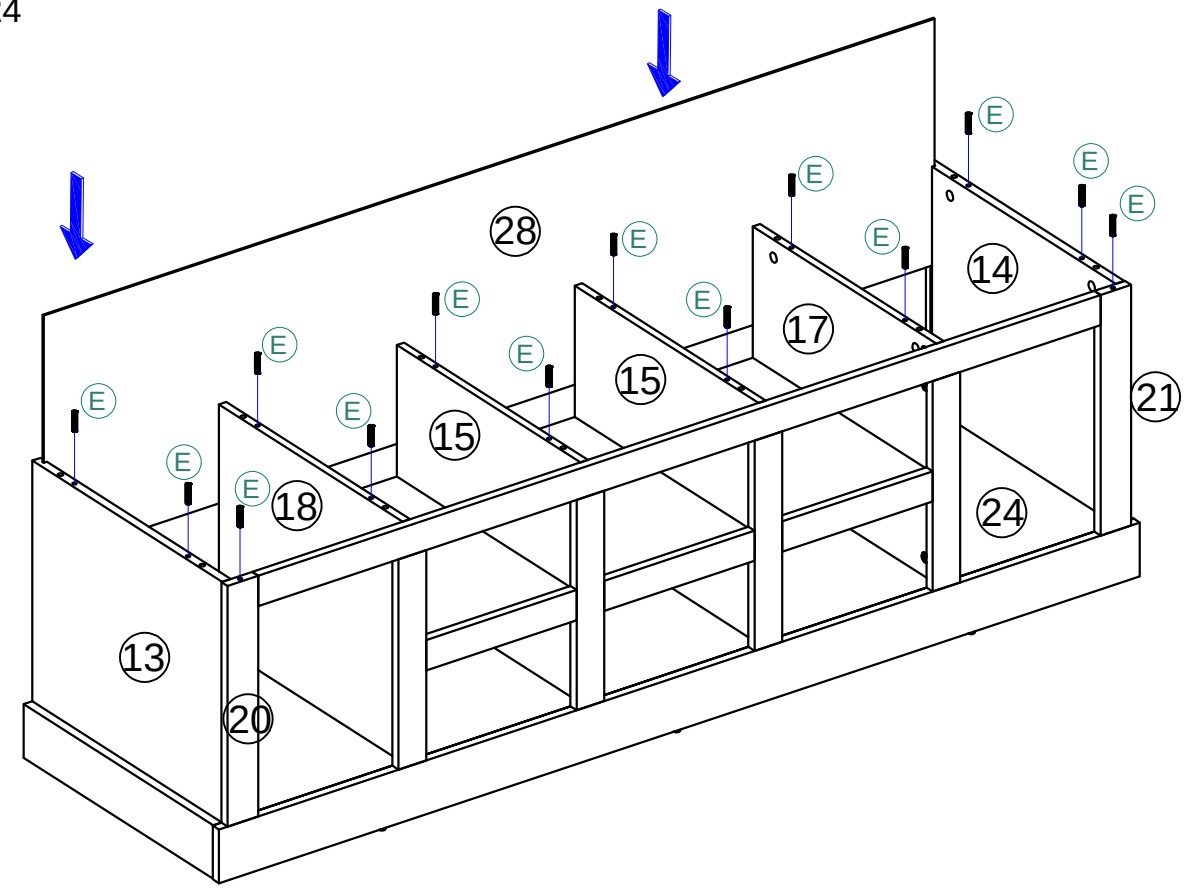


E	x14
Ø6x30mm	


Step 25

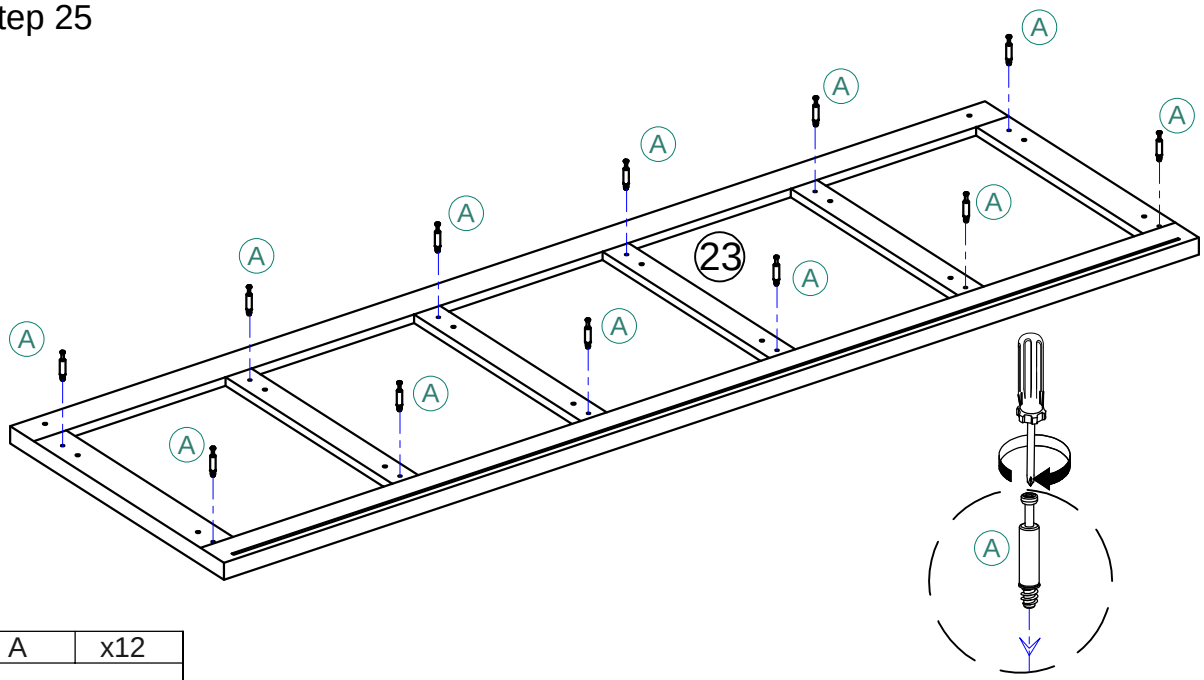


A	x12
Cam bolt	

Step 26

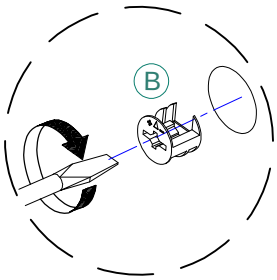


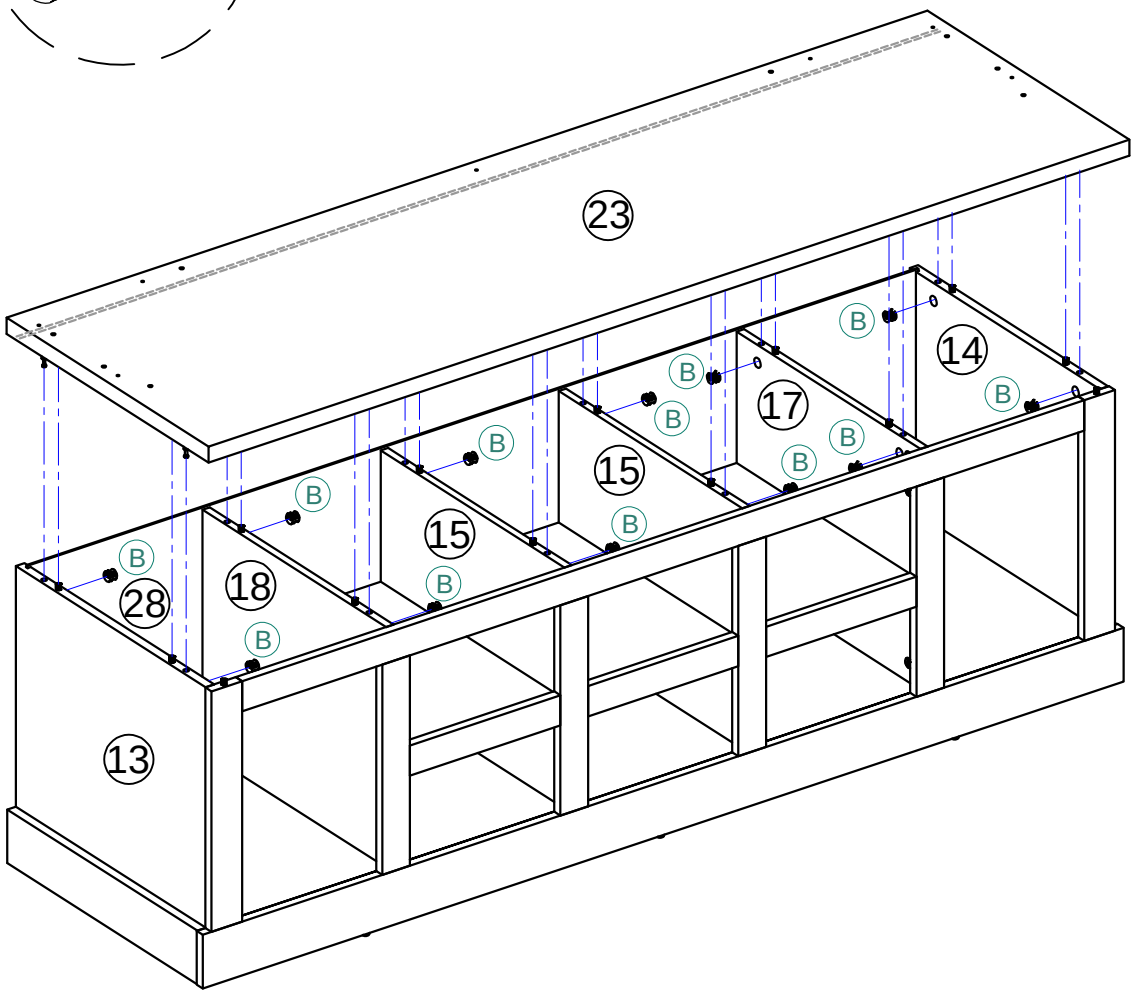

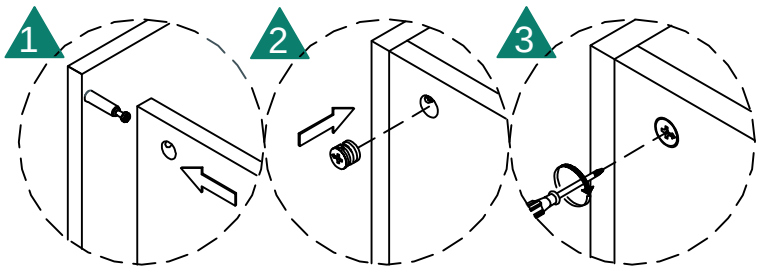

B	x12
	
Ø15x9.5mm	


Step 27

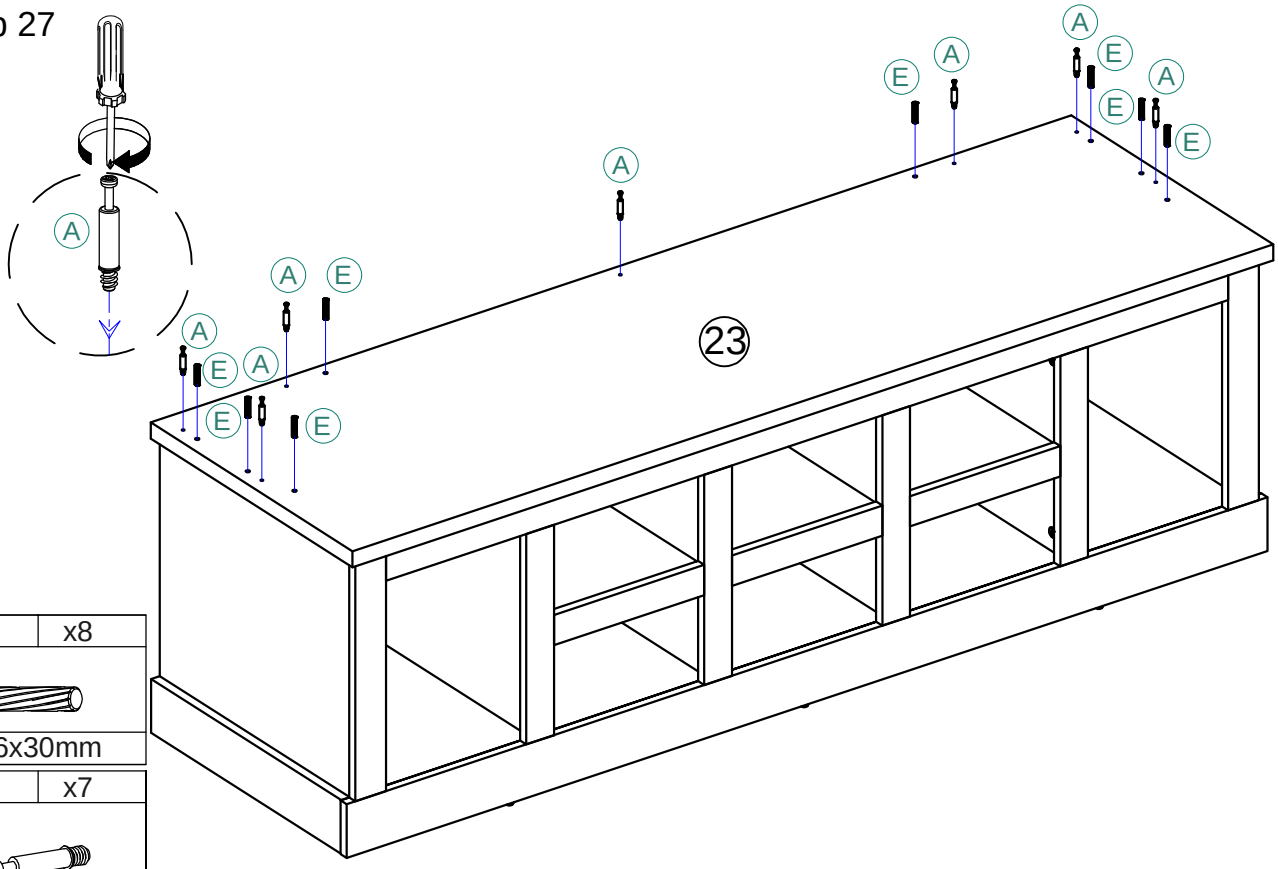

E	x8
Ø6x30mm	


A	x7
Cam bolt	

Step 28

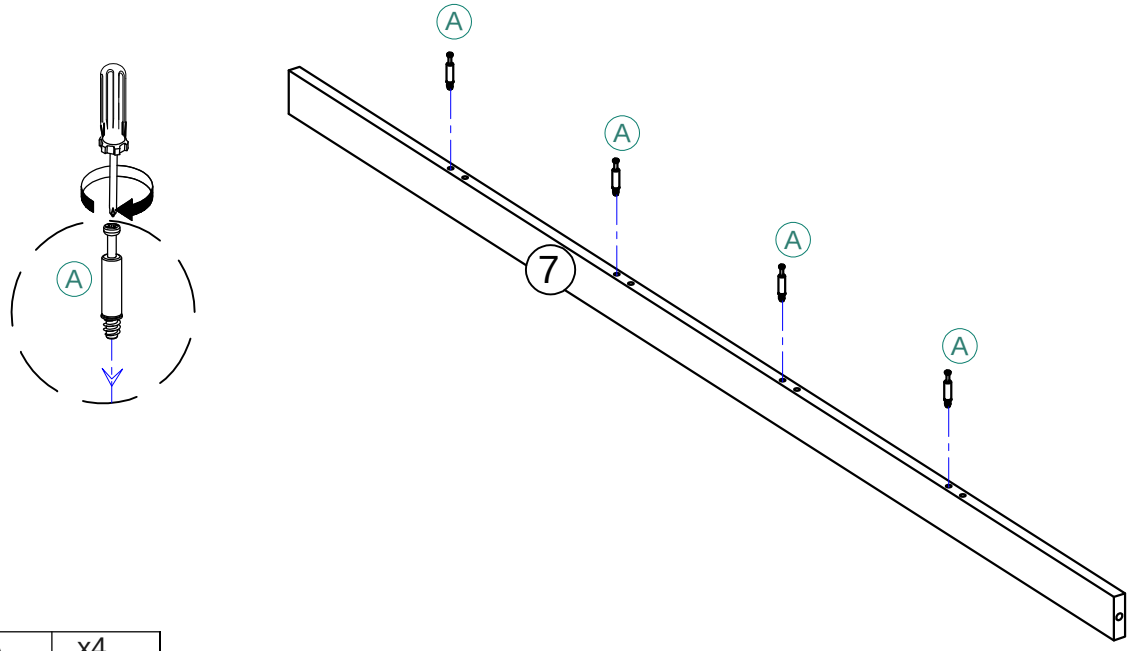

A	x4
Cam bolt	


Step 29

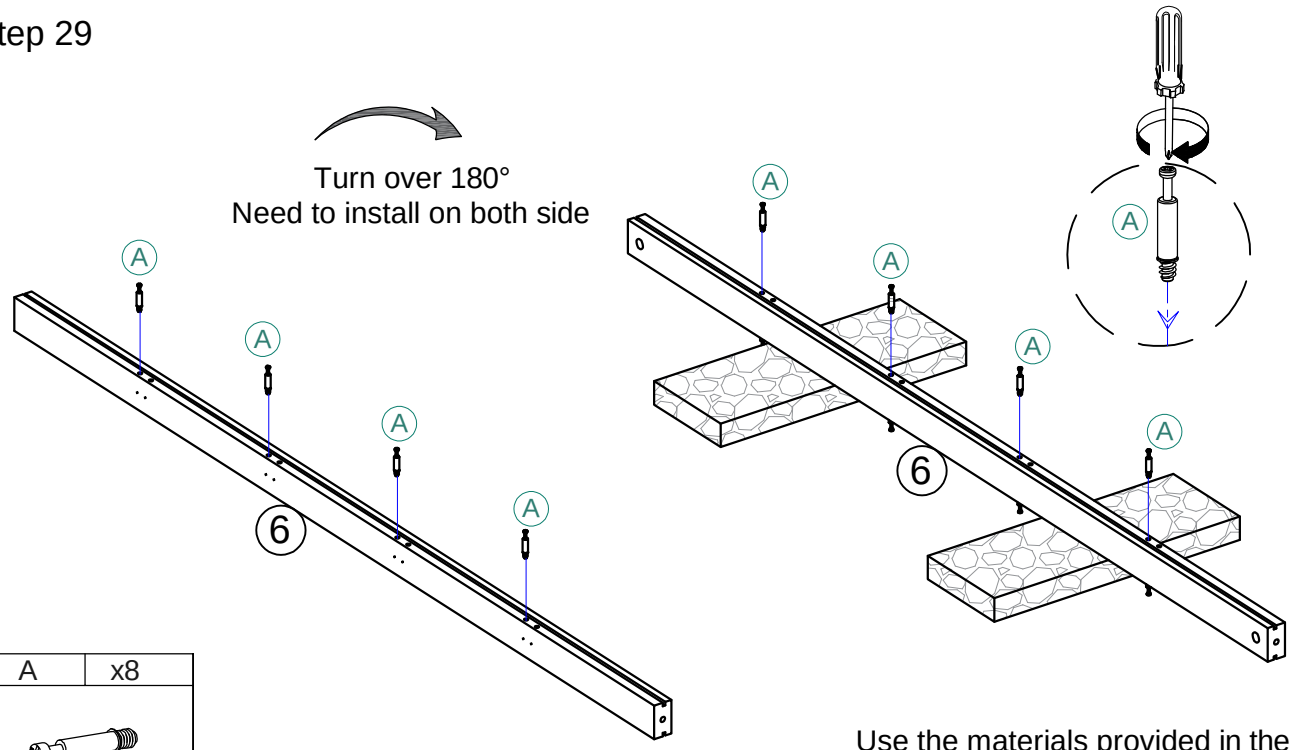


A	x8
Cam bolt	

Use the materials provided in the packaging to support the product from below for easier installation.

Step 30

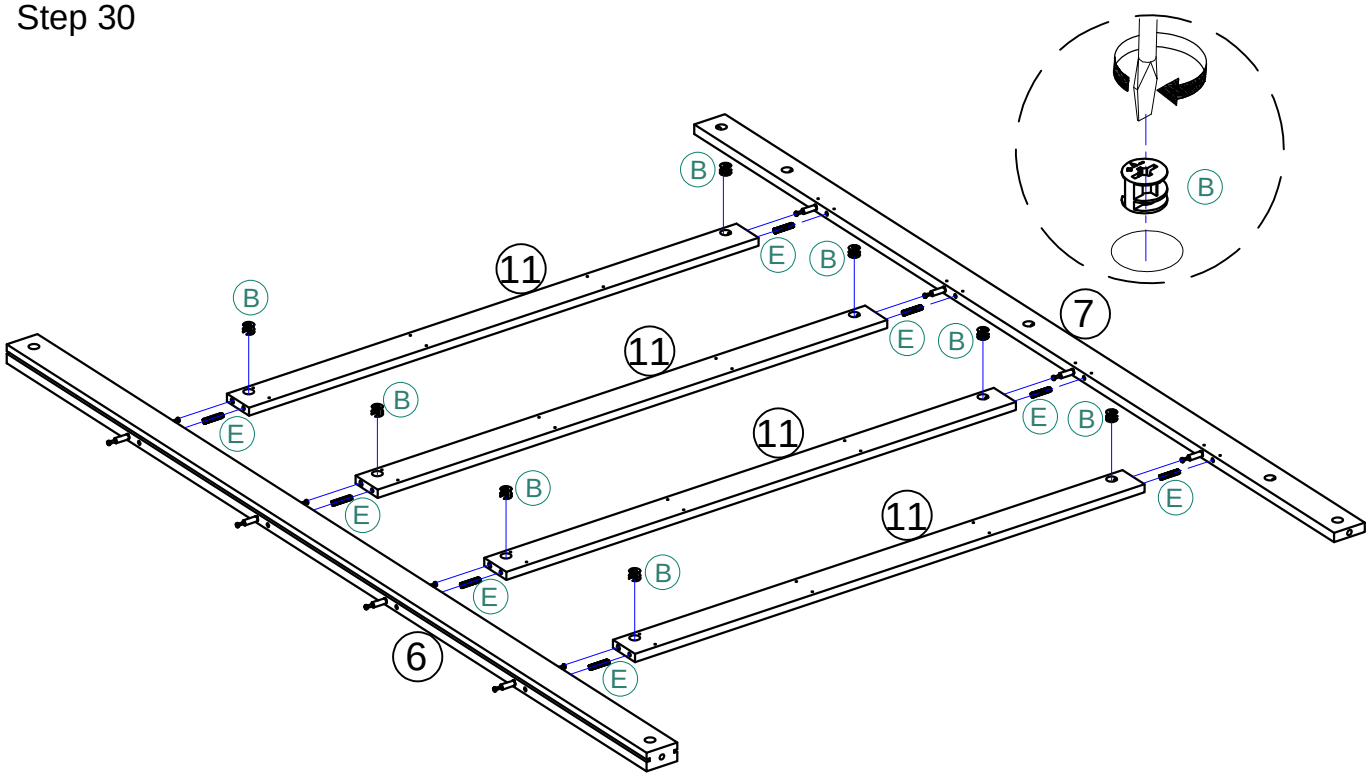


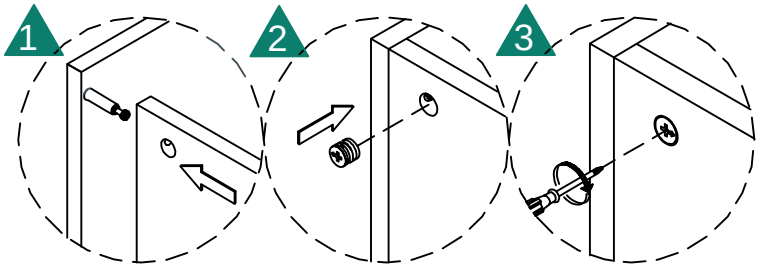

B	x8
Ø15x9.5mm	


E	x8
Ø6x30mm	

Step 31

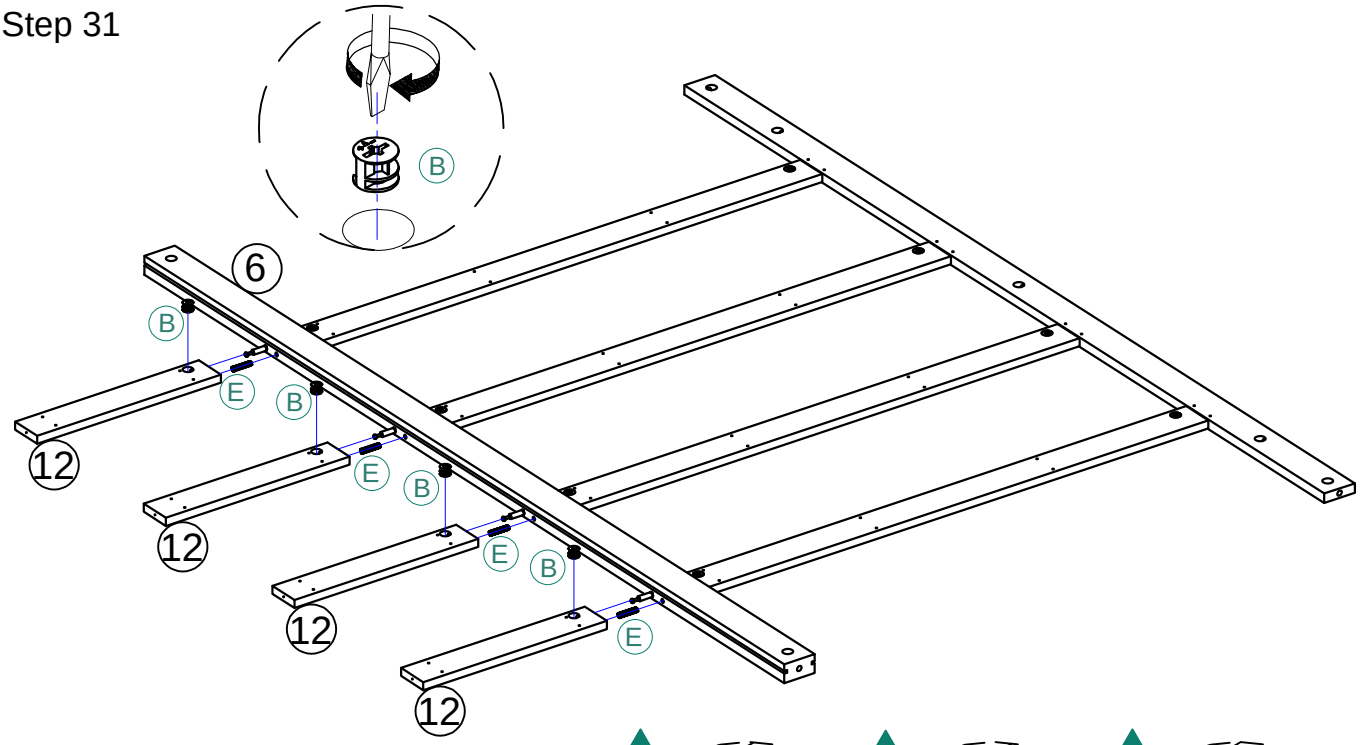


B	x4
Ø15x9.5mm	

E	x4
Ø6x30mm	

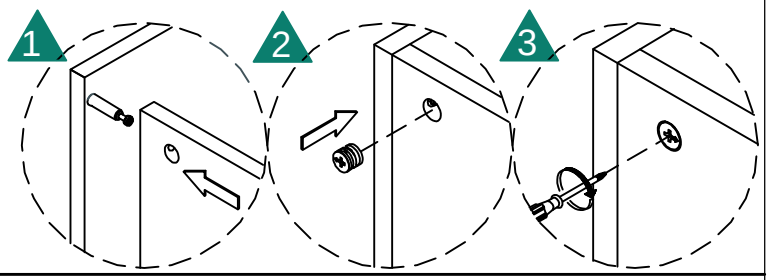


Step 32


Note: This assembly step requires two peoples to perform it simultaneously !

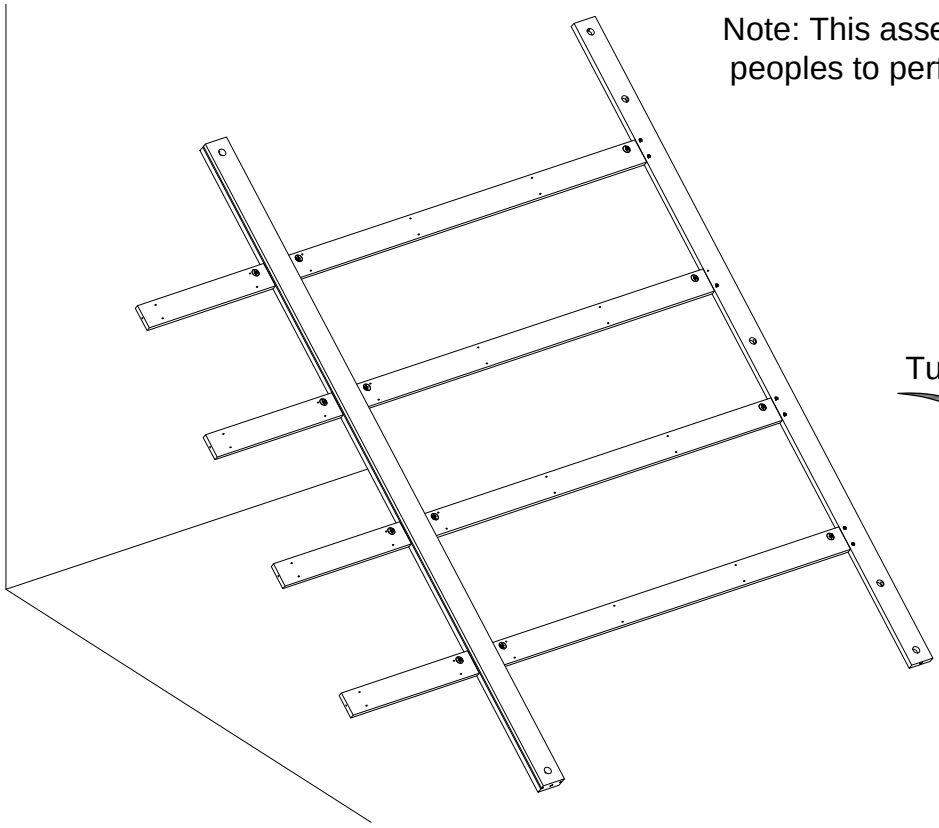


Turn over 180°

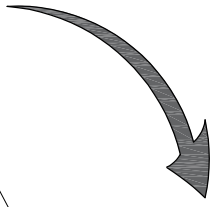



Step 33

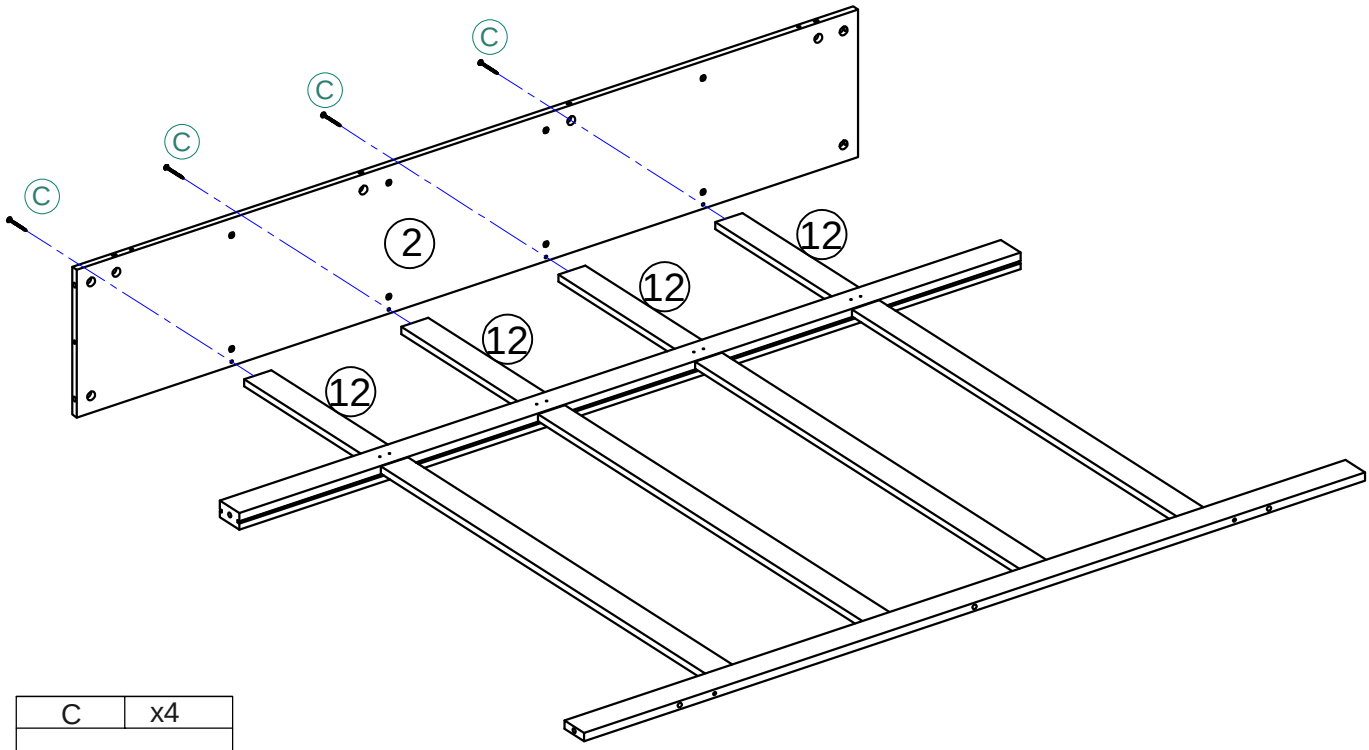


C	x4
	
M4x40mm	

Step 34

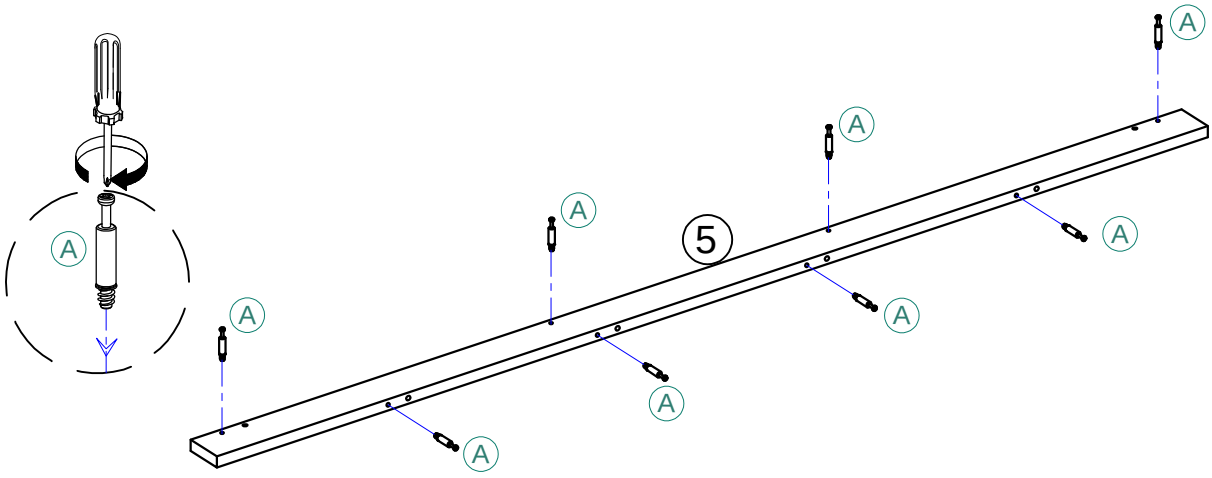


A	x8
	
Cam bolt	

Step 35

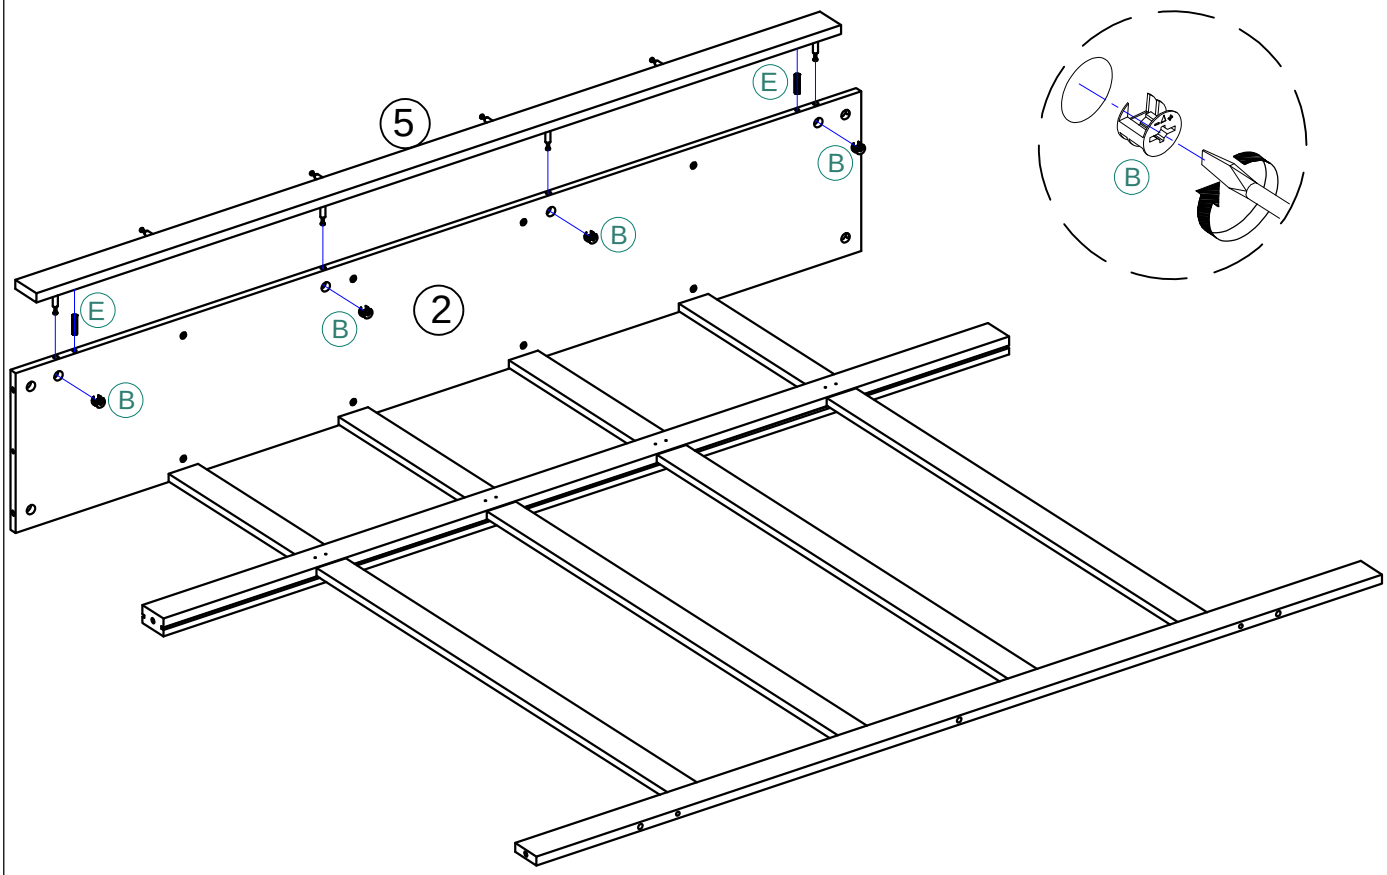


B	x4
	
Ø15x9.5mm	

E	x2
	
Ø6x30mm	

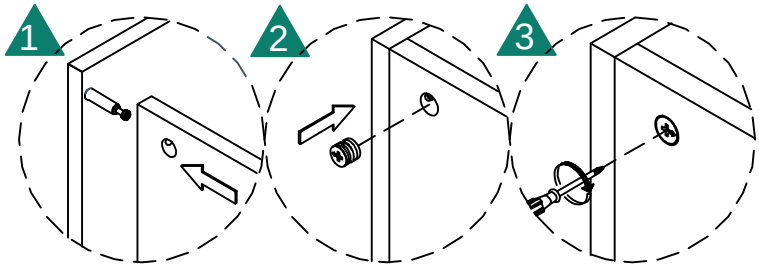

Step 36

X4

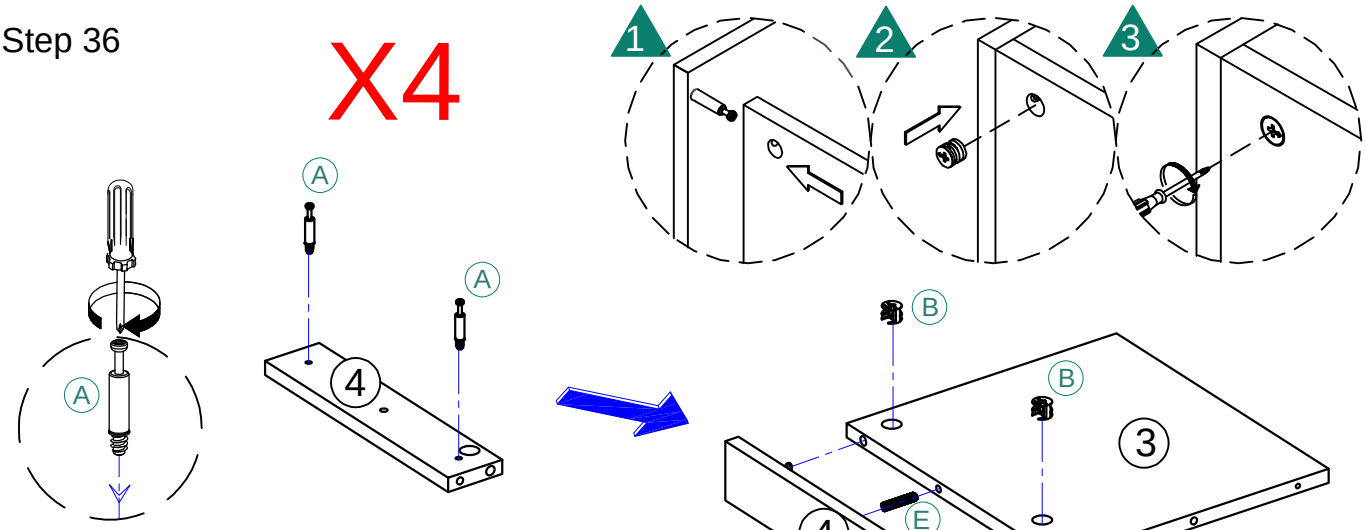


A	x8
Cam bolt	

B	x8
Ø15x9.5mm	

E	x4
Ø6x30mm	

Step 37

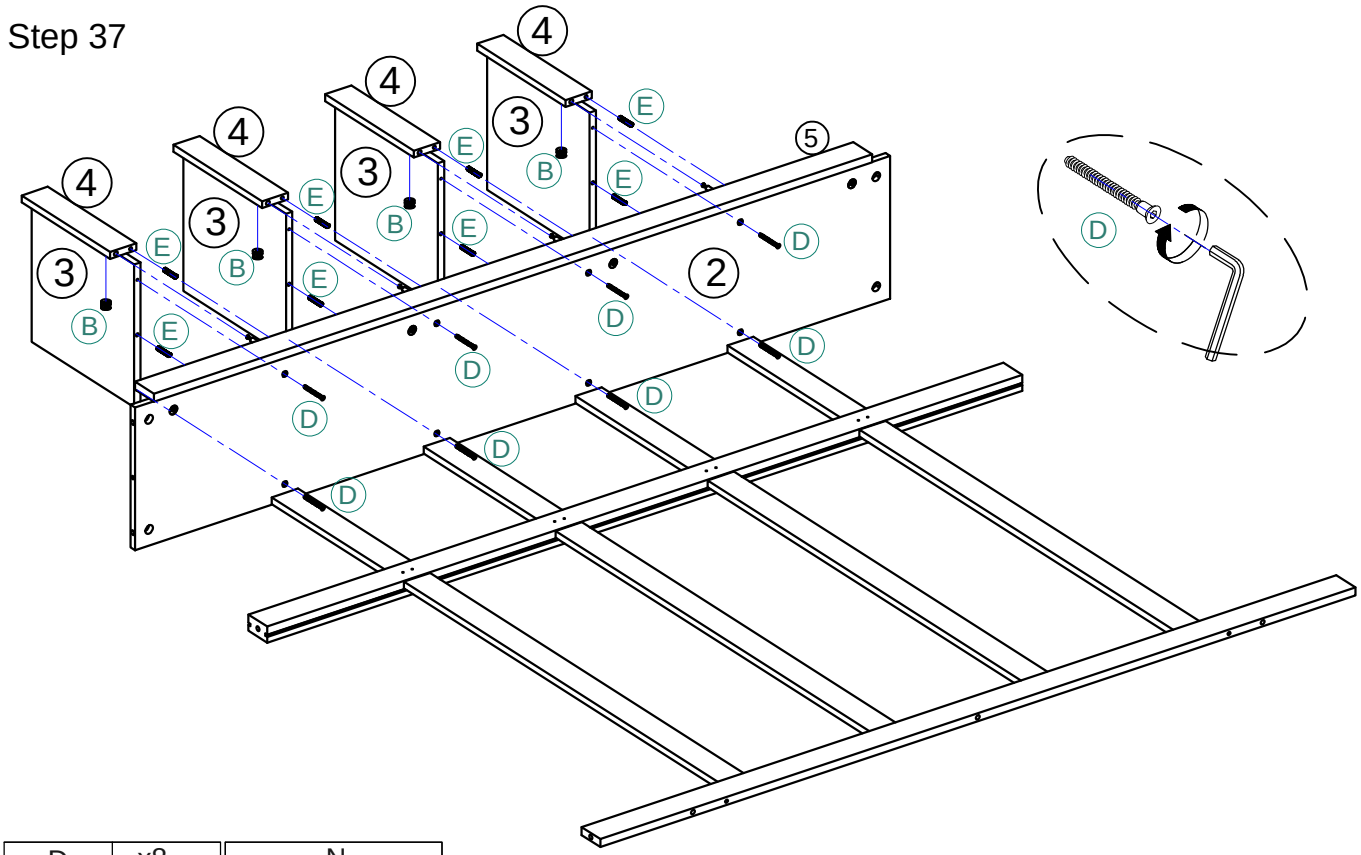


D	x8
Ø9.5xM6x45mm	


N
M4


B	x4
Ø15x9.5mm	

E	x8
Ø6x30mm	

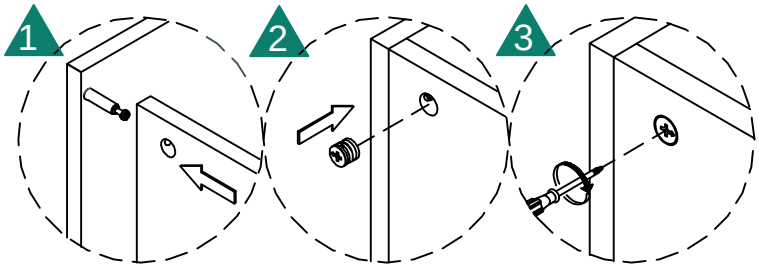


Step 38

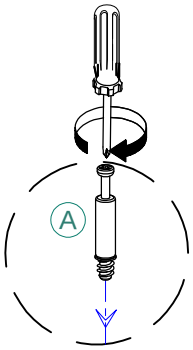


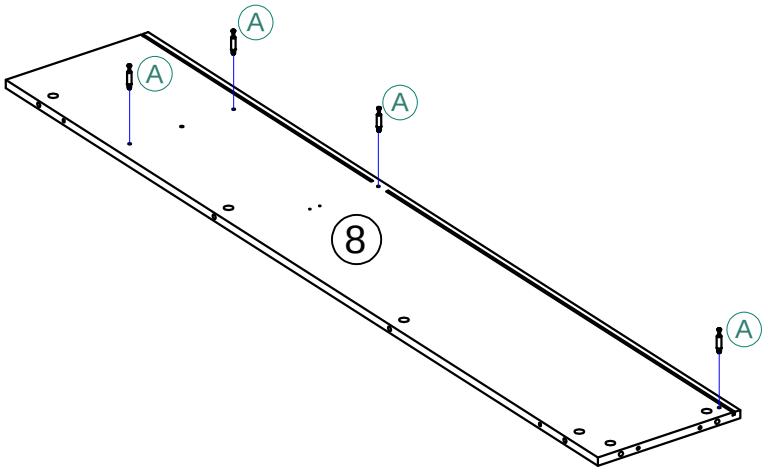

A	x4
 Cam bolt	

Step 39

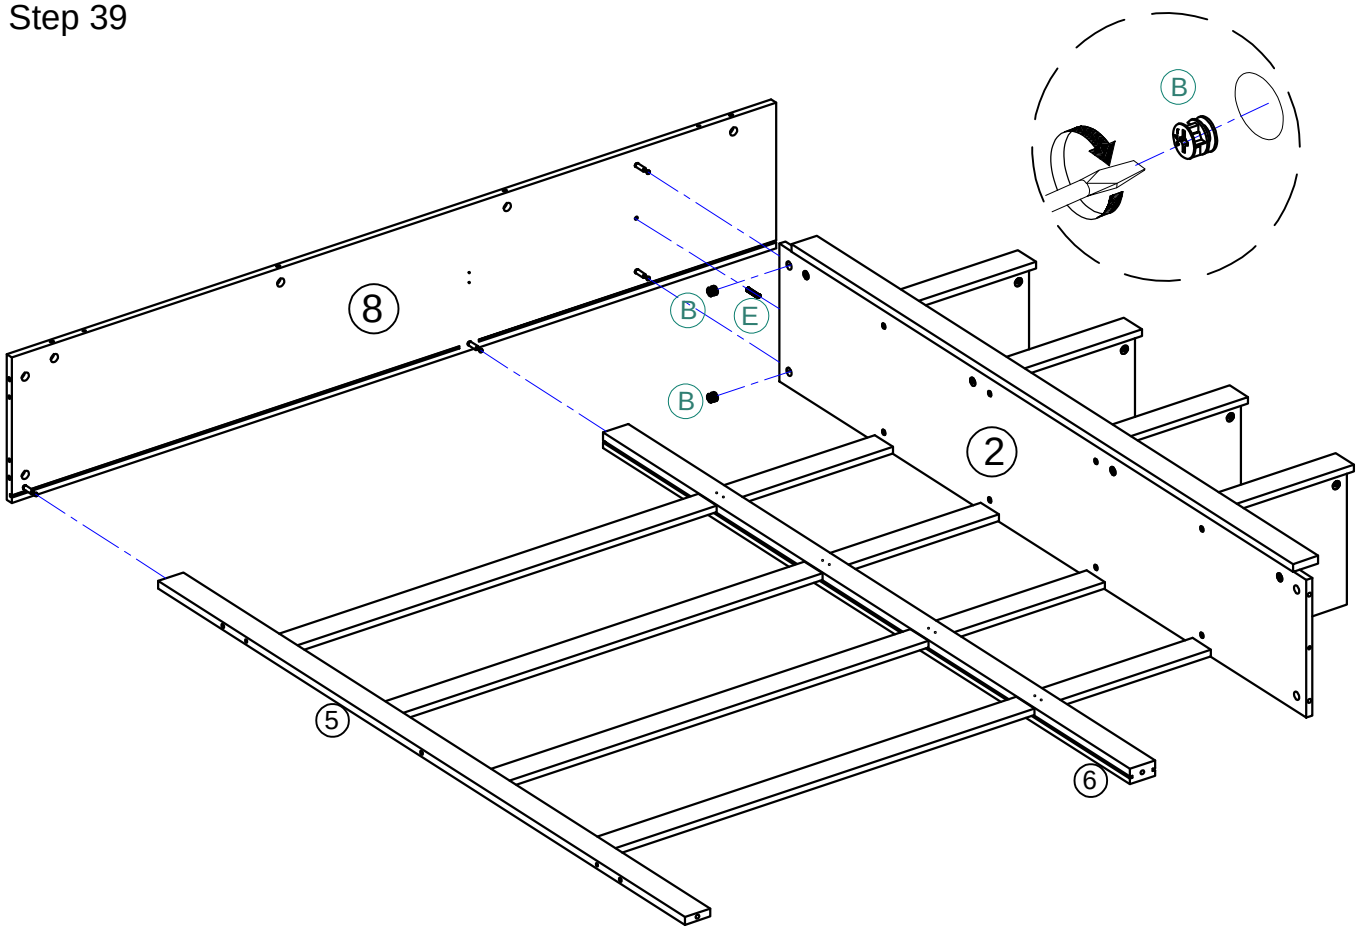


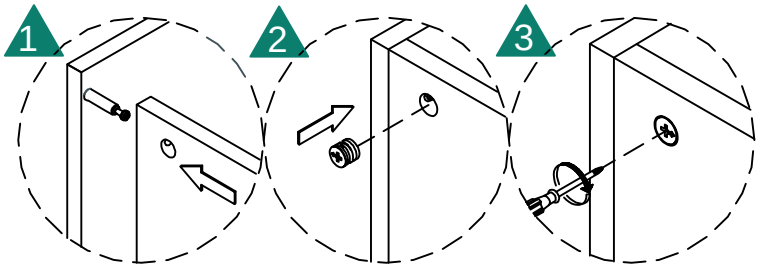



B	x2
 Ø15x9.5mm	

E	x1
 Ø6x30mm	


Step 40

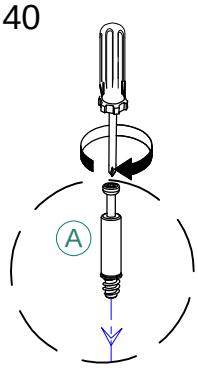


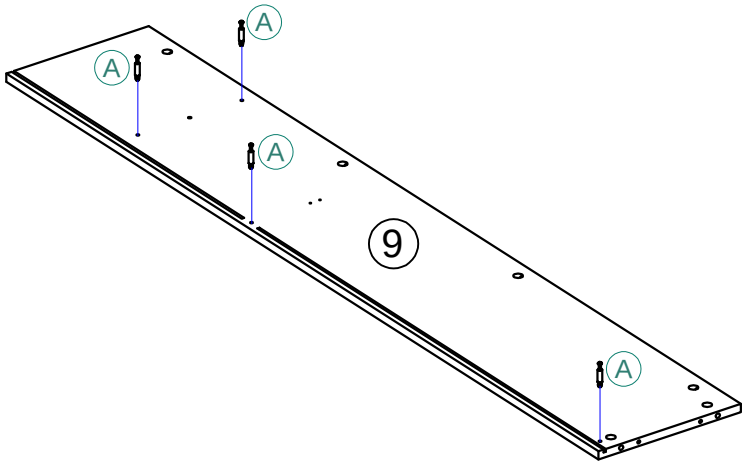

A	x4
	
Cam bolt	

Step 41

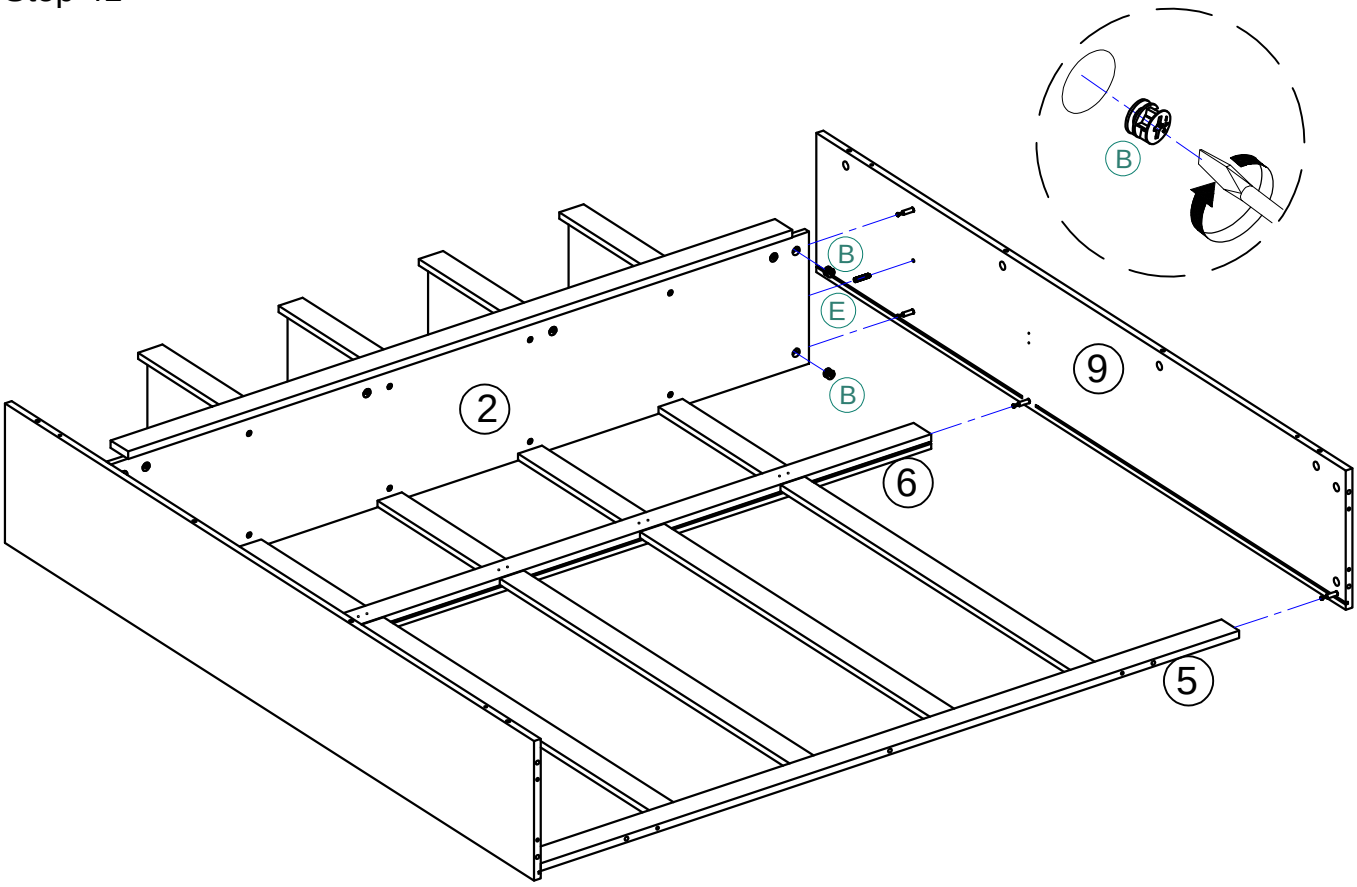

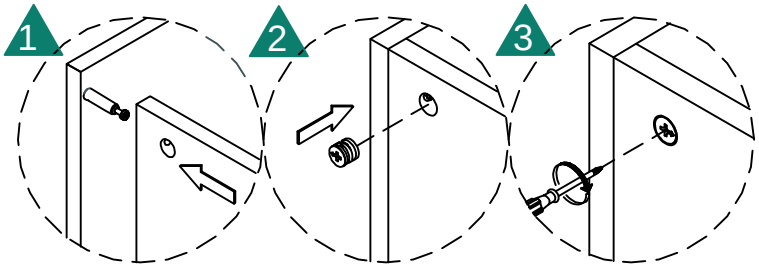


B	x2
	
Ø15x9.5mm	

E	x1
	
Ø6x30mm	


Step 42


X2

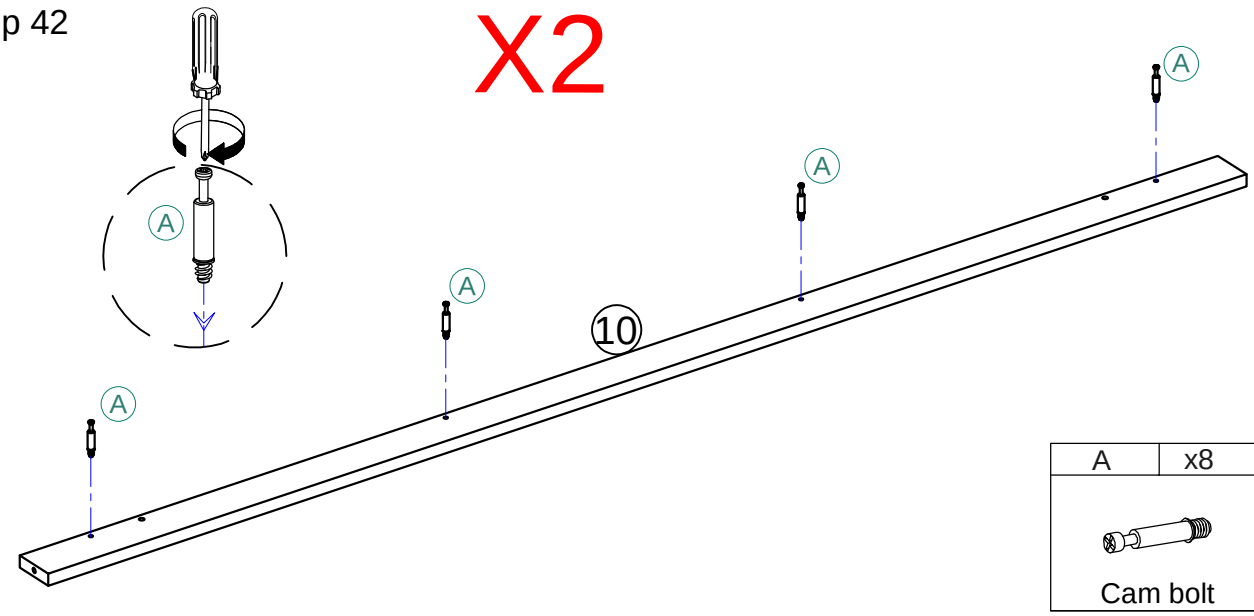

A	x8
Cam bolt	

Step 43

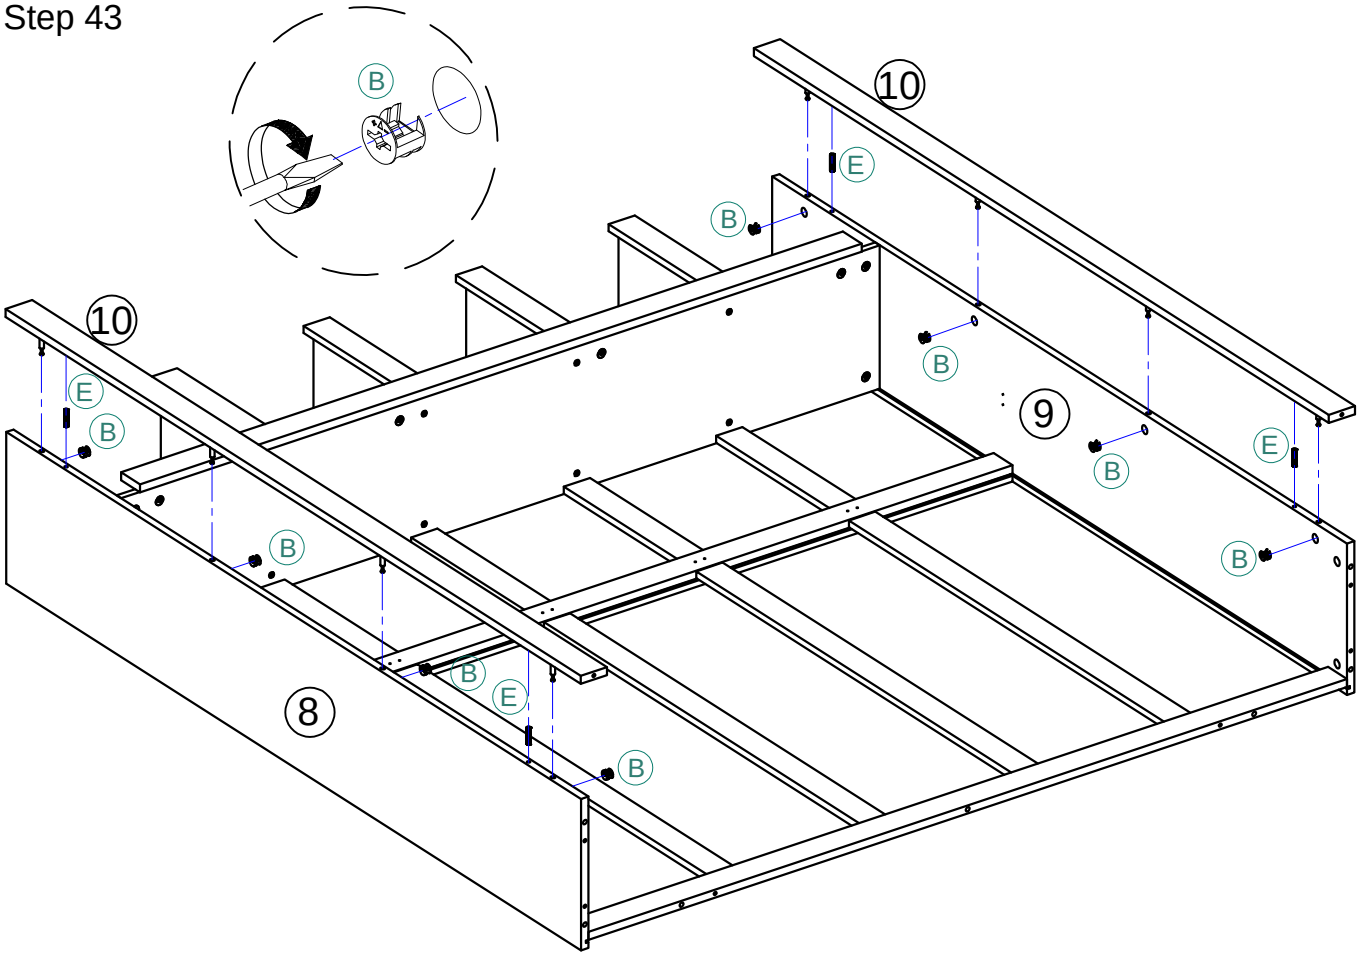

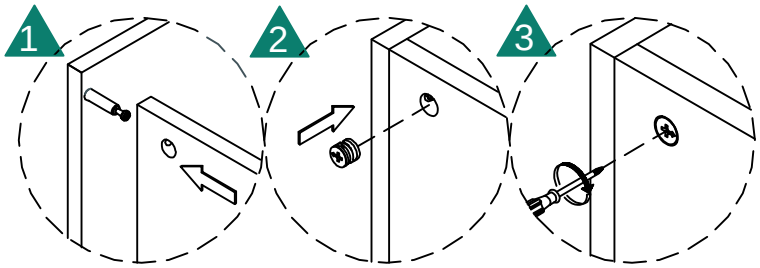


B	x8
Ø15x9.5mm	


E	x4
Ø6x30mm	

Step 44

Note: This assembly step requires two peoples to perform it simultaneously !

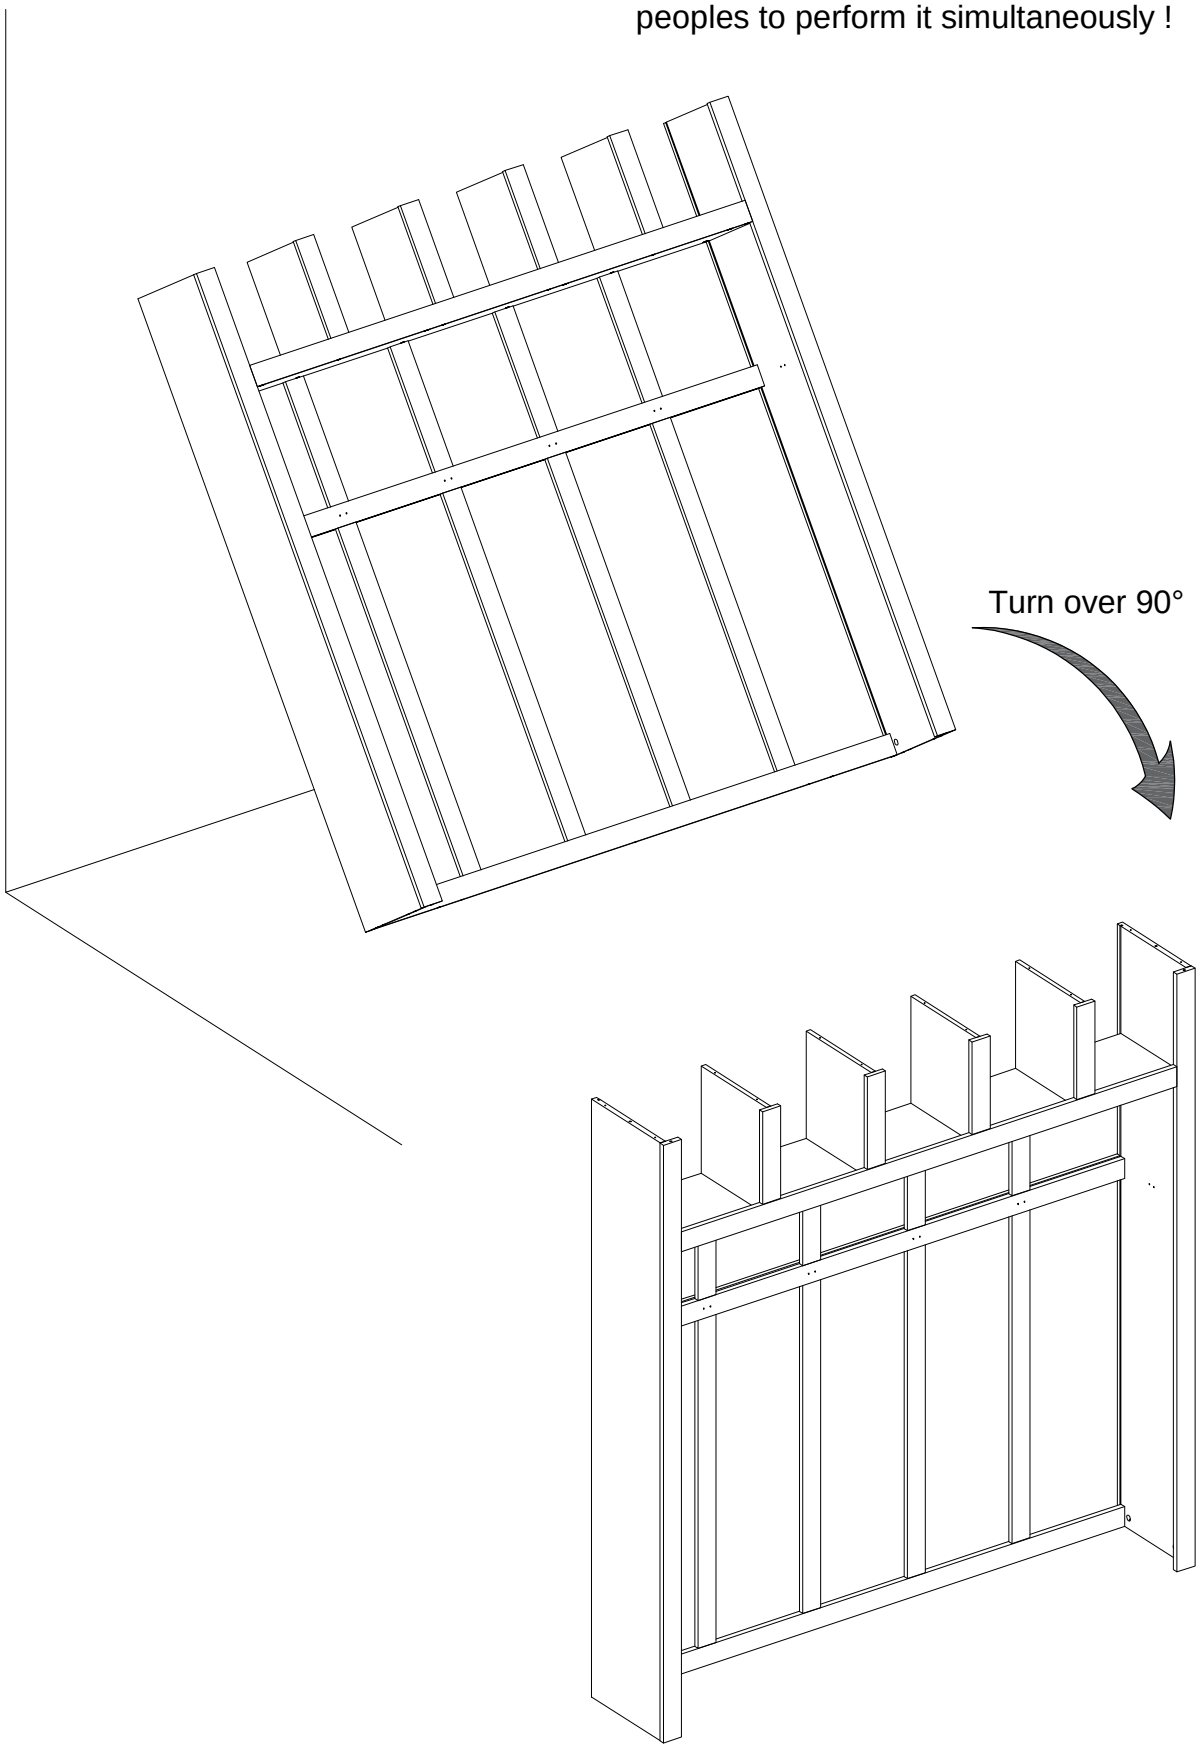


Step 45

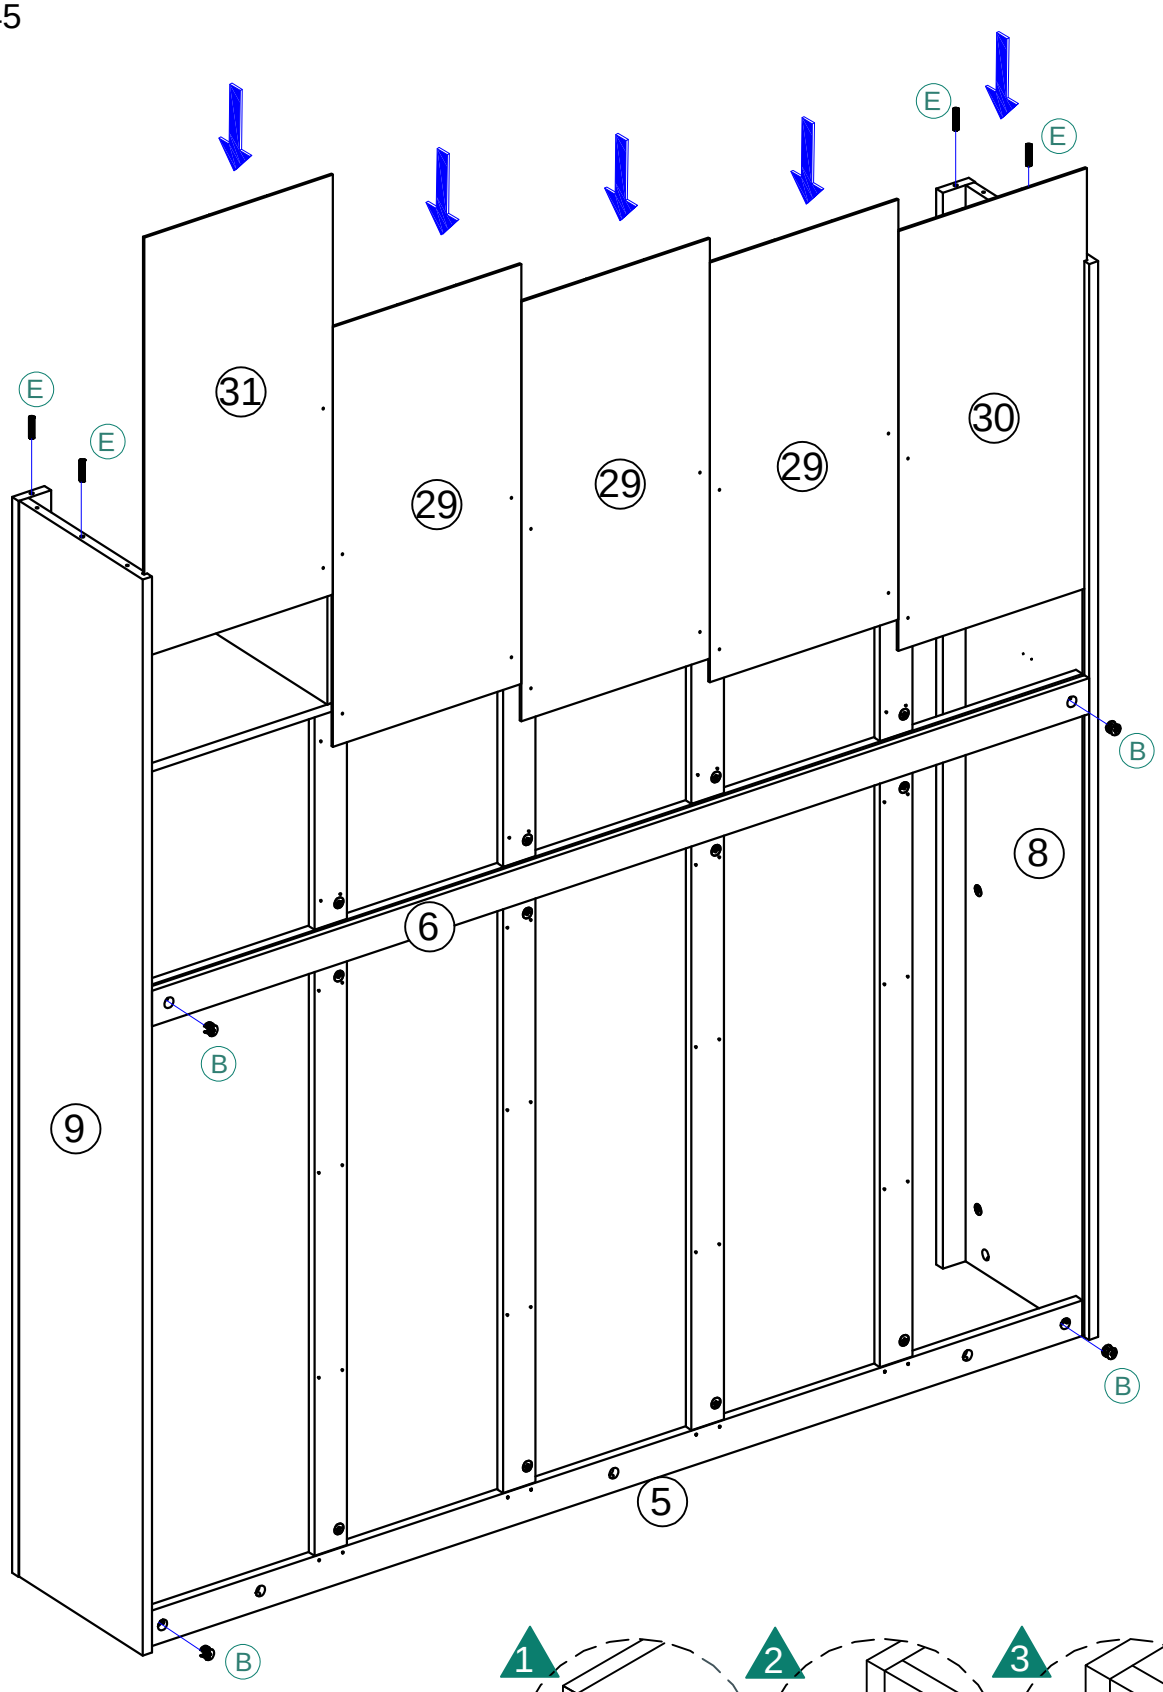



B	x4
	
Ø15x9.5mm	

E	x4
	
Ø6x30mm	

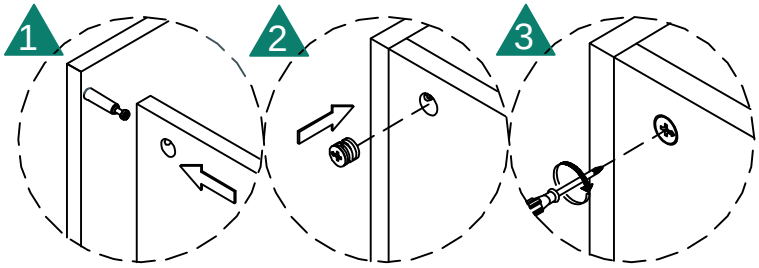


Step 46

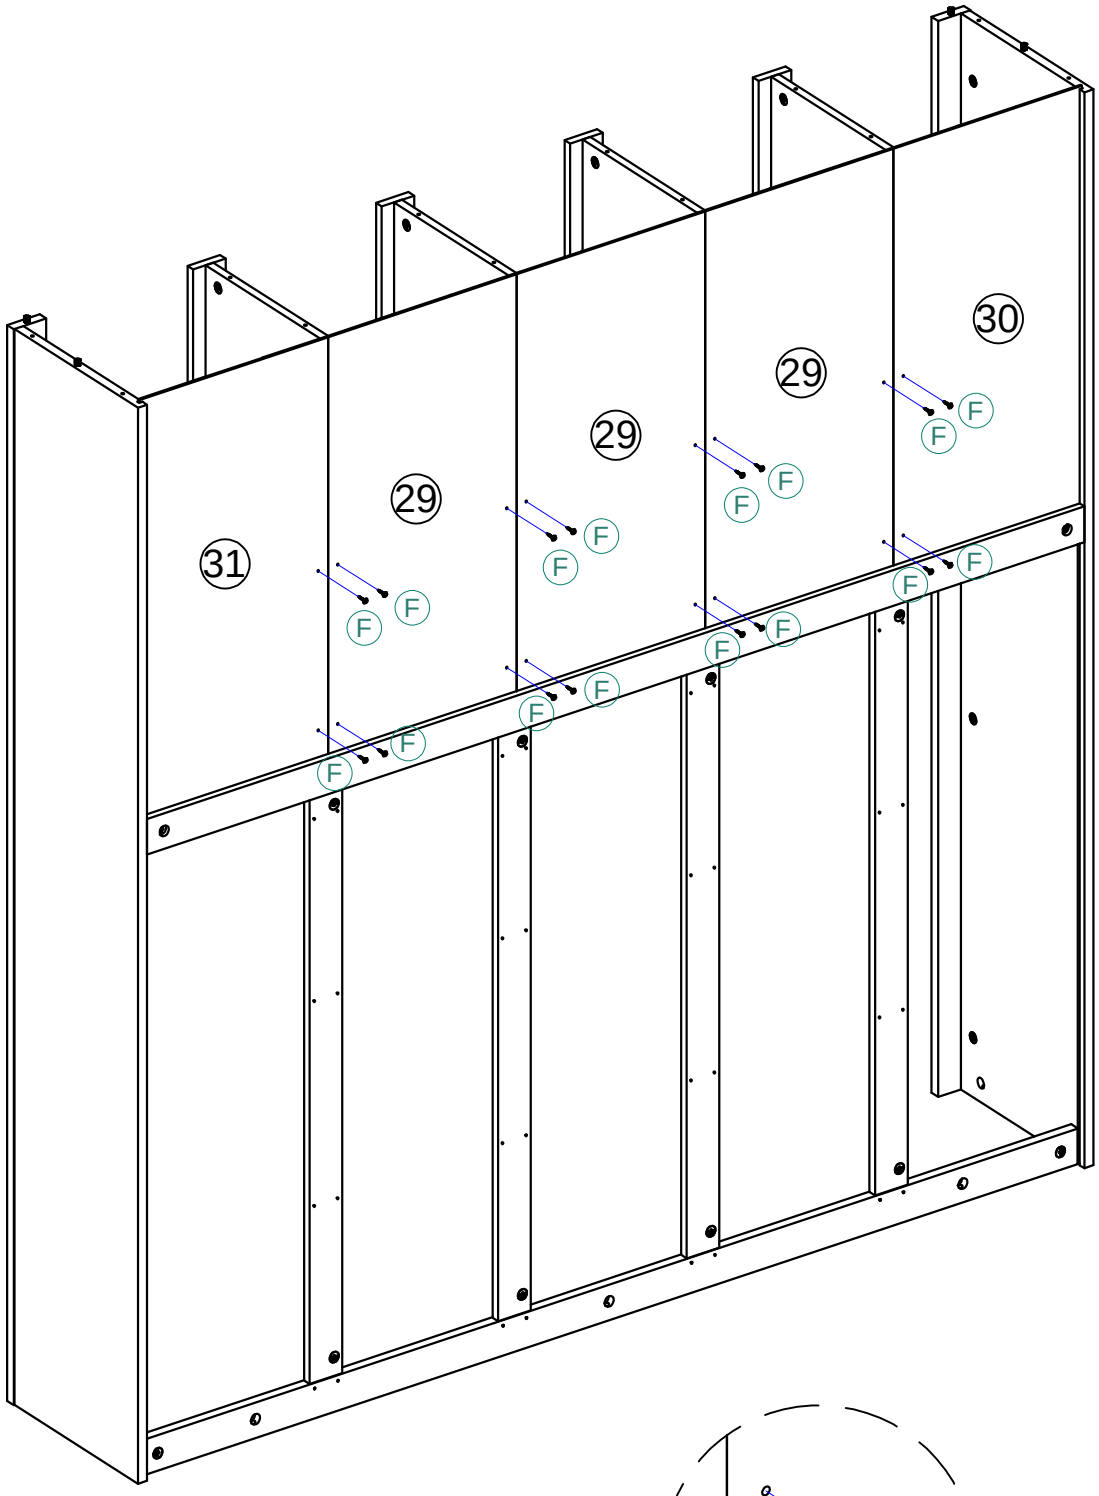

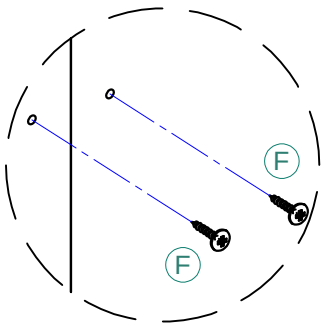

F	x16
	
M3.5x12mm	


Step 47

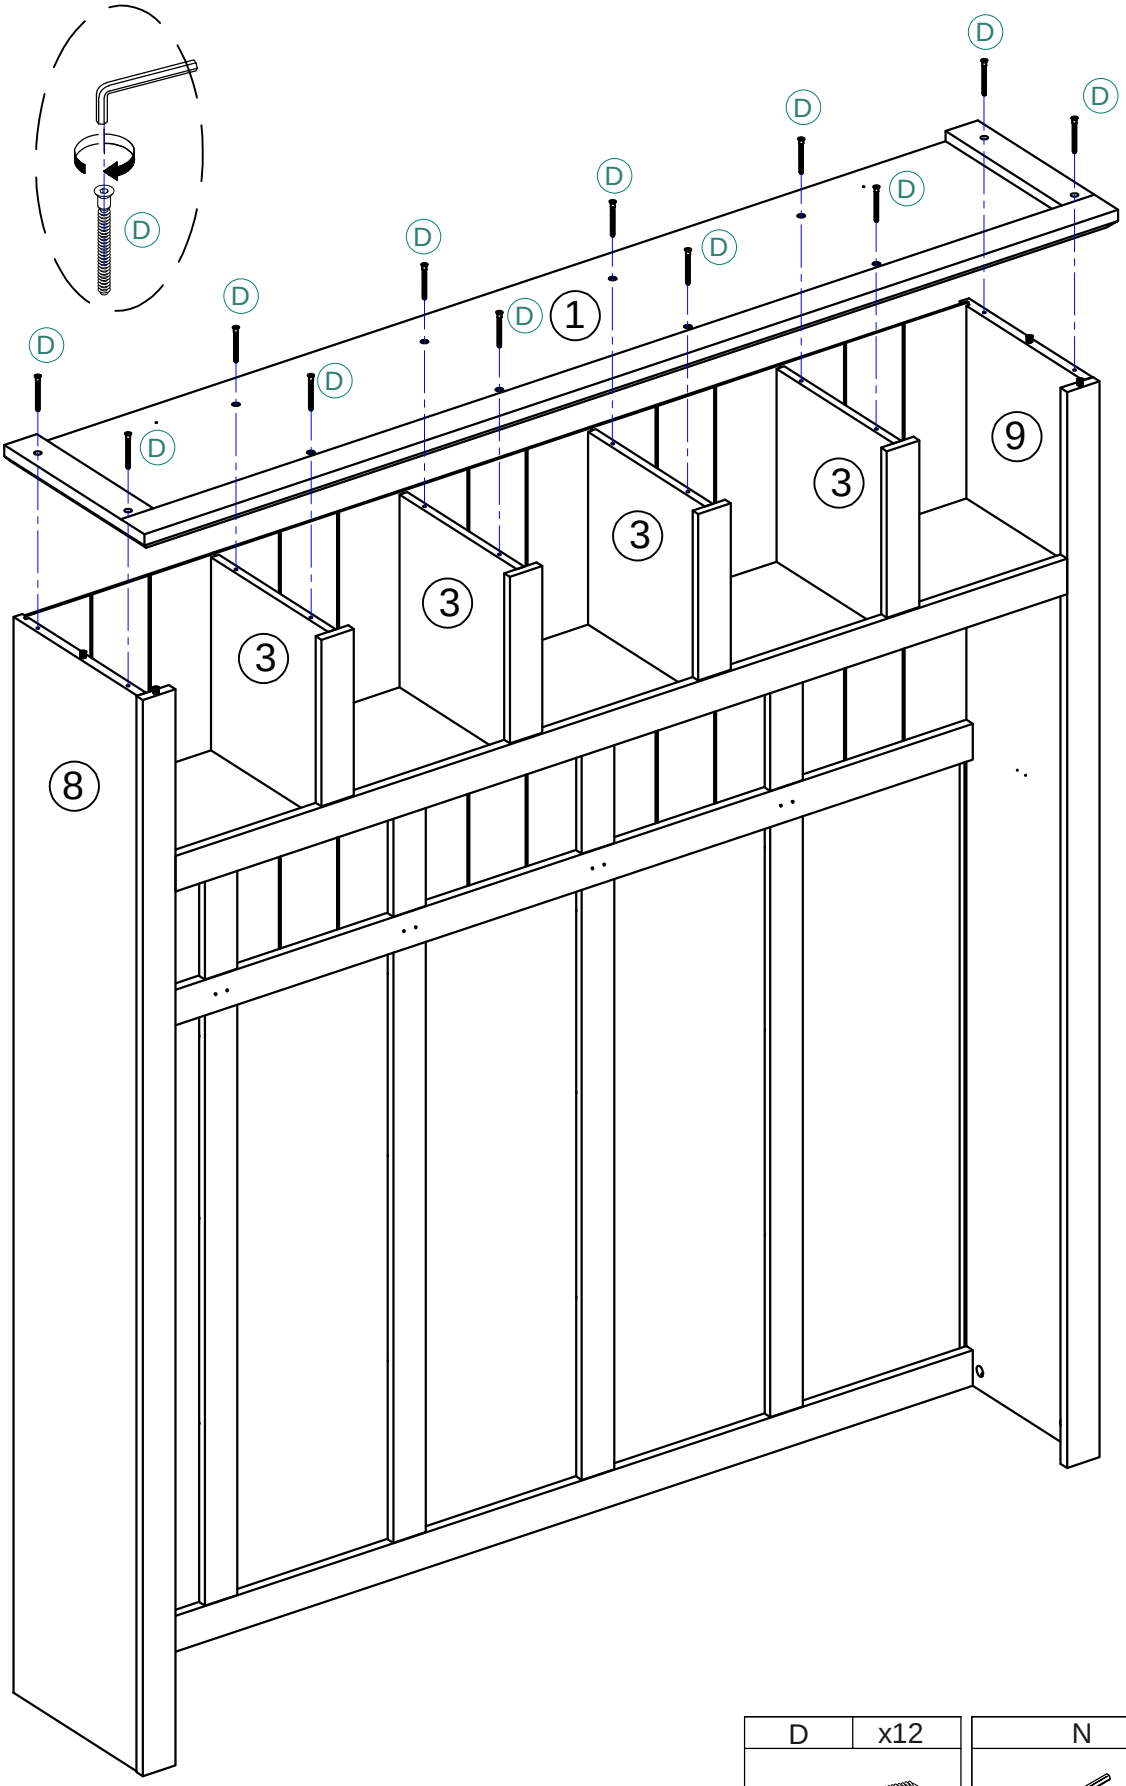


D	x12	N
		
Ø9.5xM6x45mm		M4

Step 48


Note: This assembly step requires two peoples to perform it simultaneously !

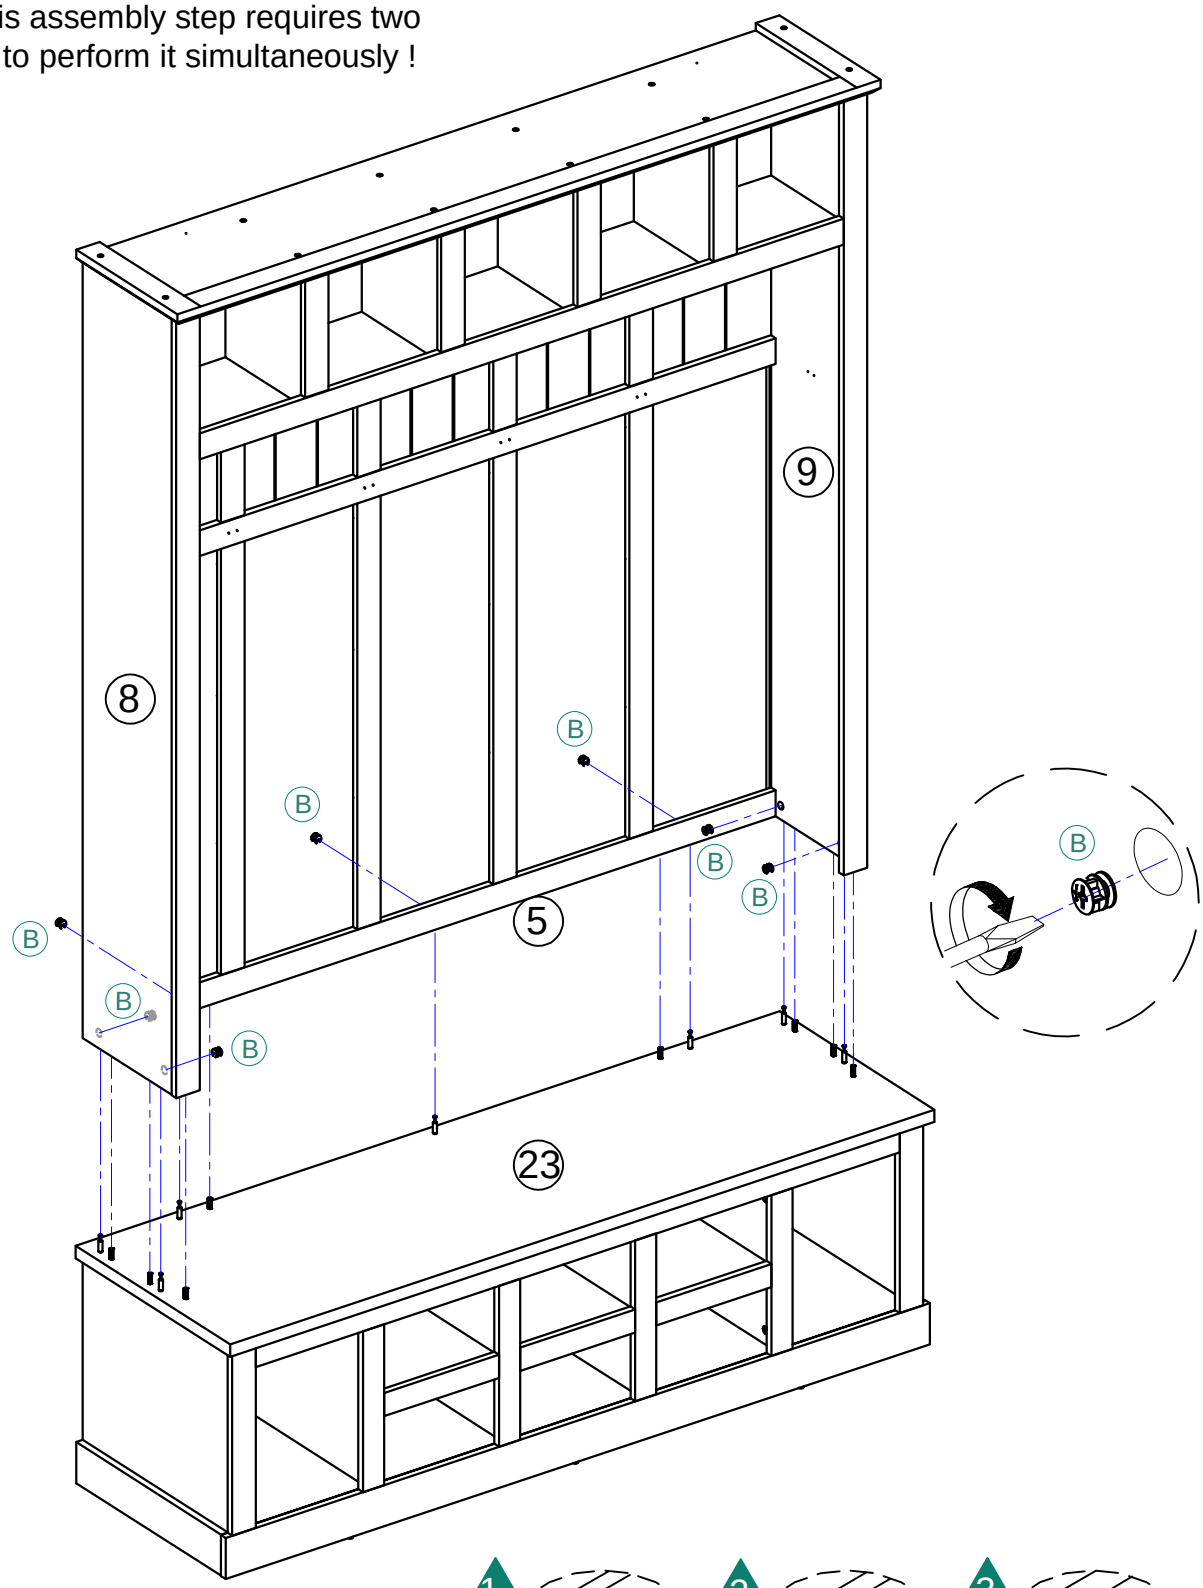

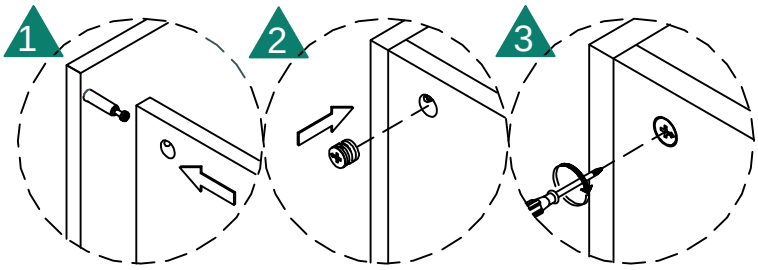


B	x7
	
Ø15x9.5mm	


Step 49

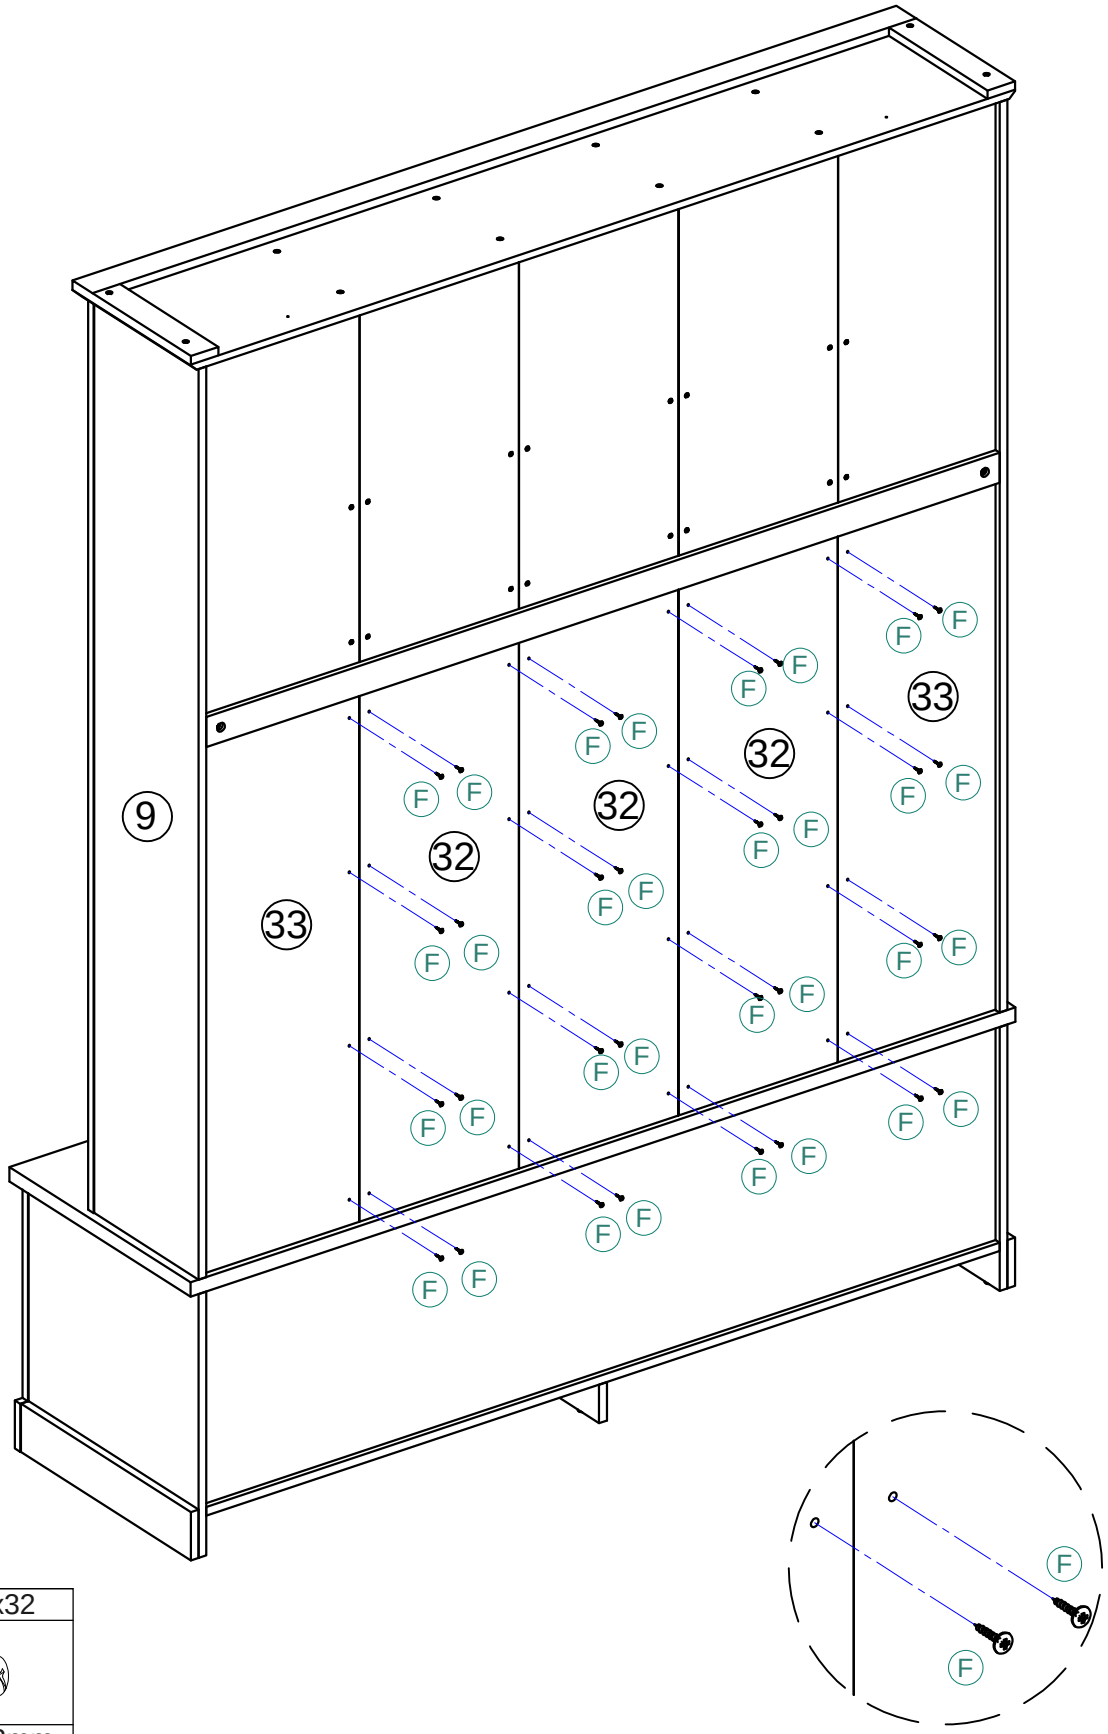

F	x32
	
M3.5x12mm	

Step 50

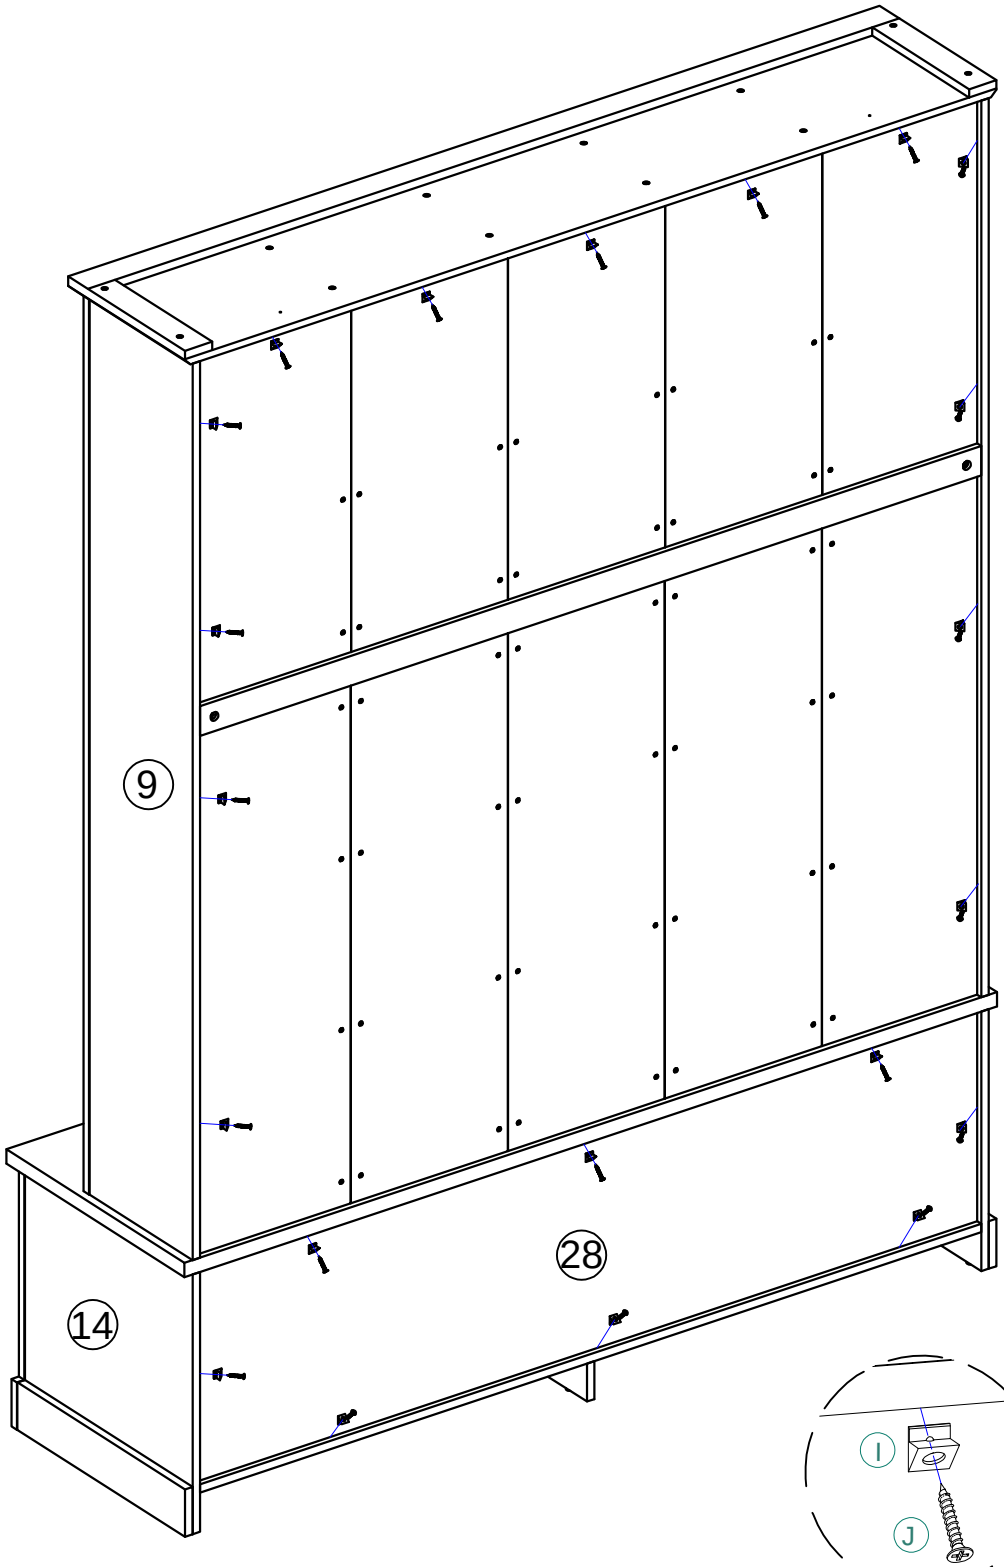


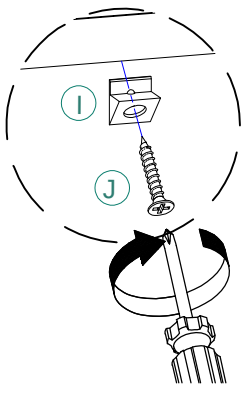


I	x21
	

J	x21
	
M3x16mm	


Step 51

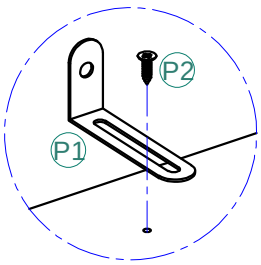


P1	x2
	

P2	x2
	
M4x14mm	

Step 52

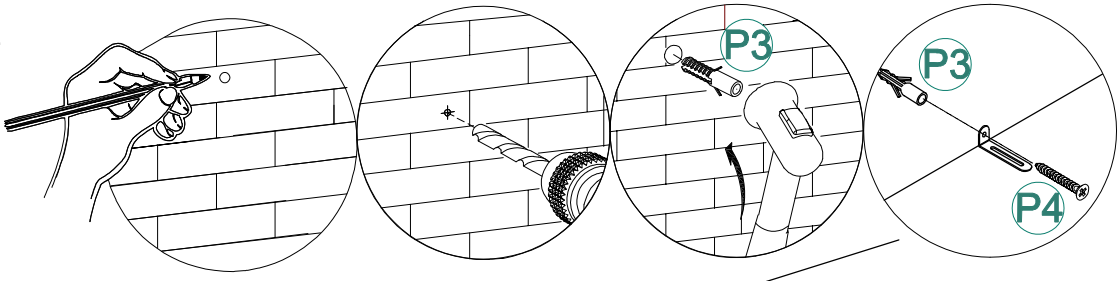


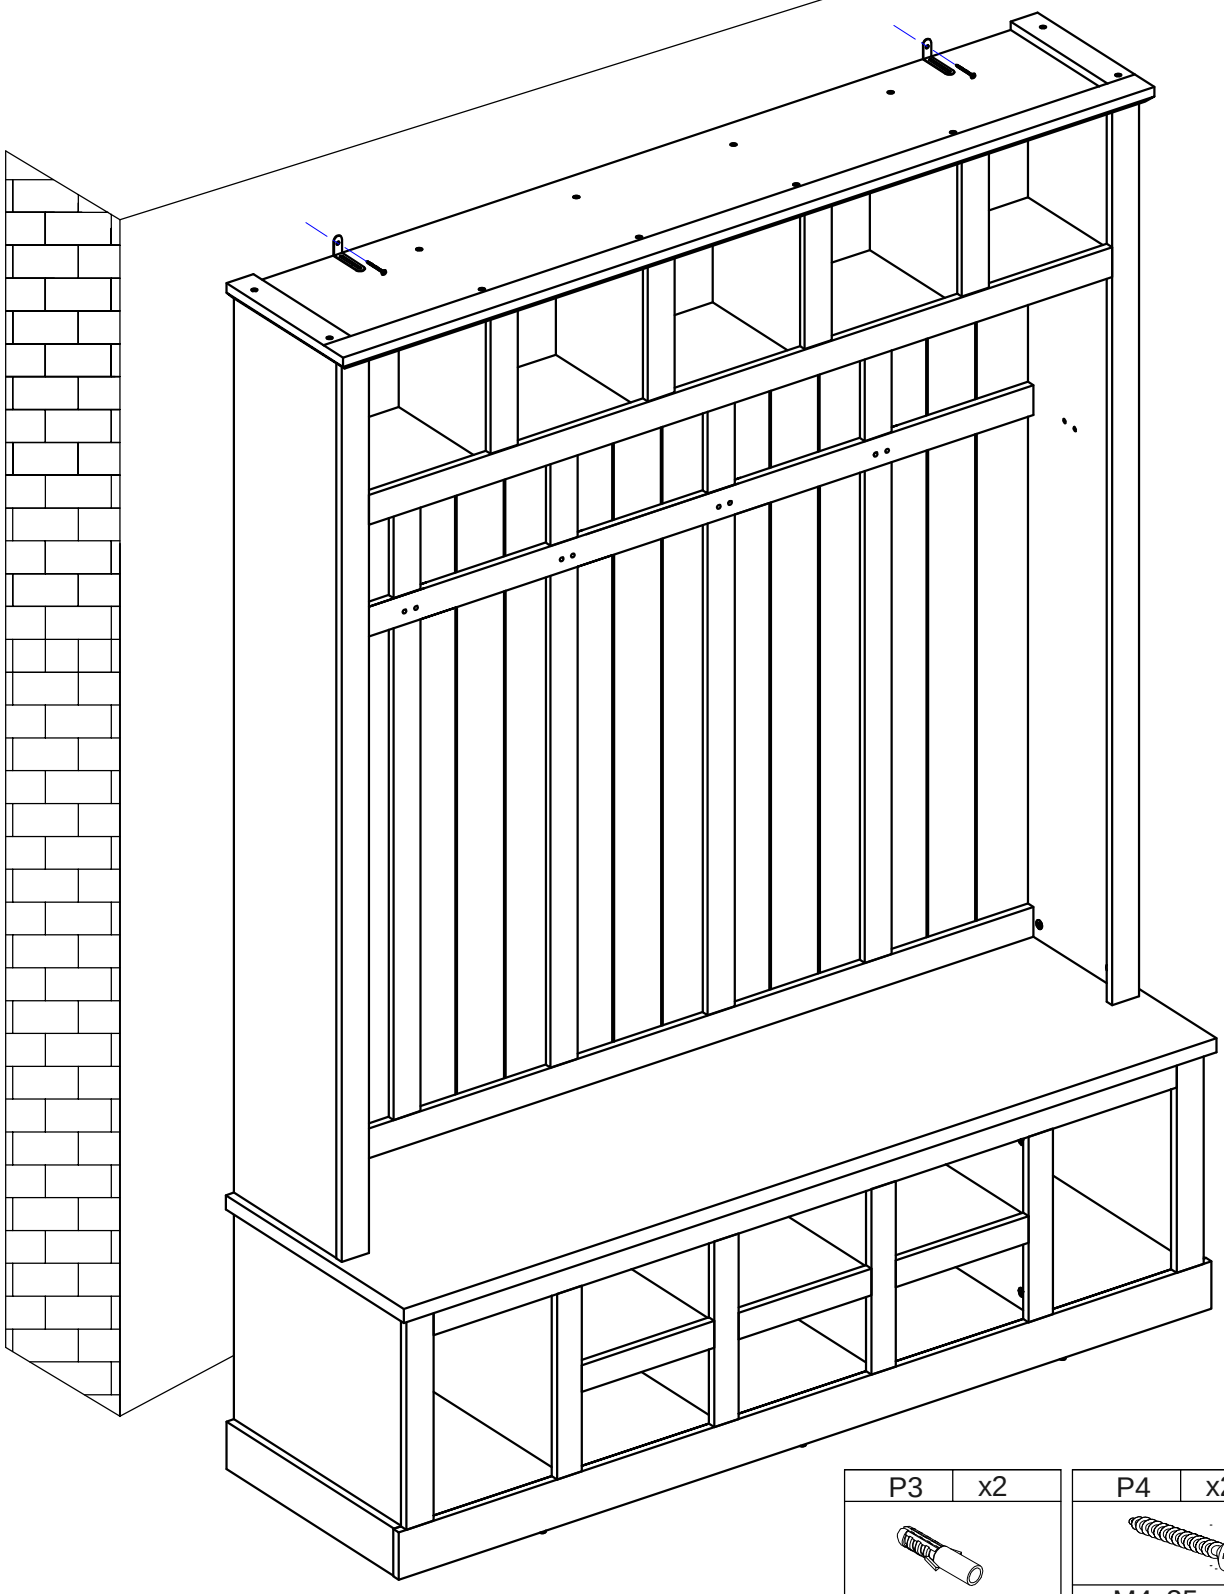



P3	x2

P4	x2
M4x35mm	

Step 53

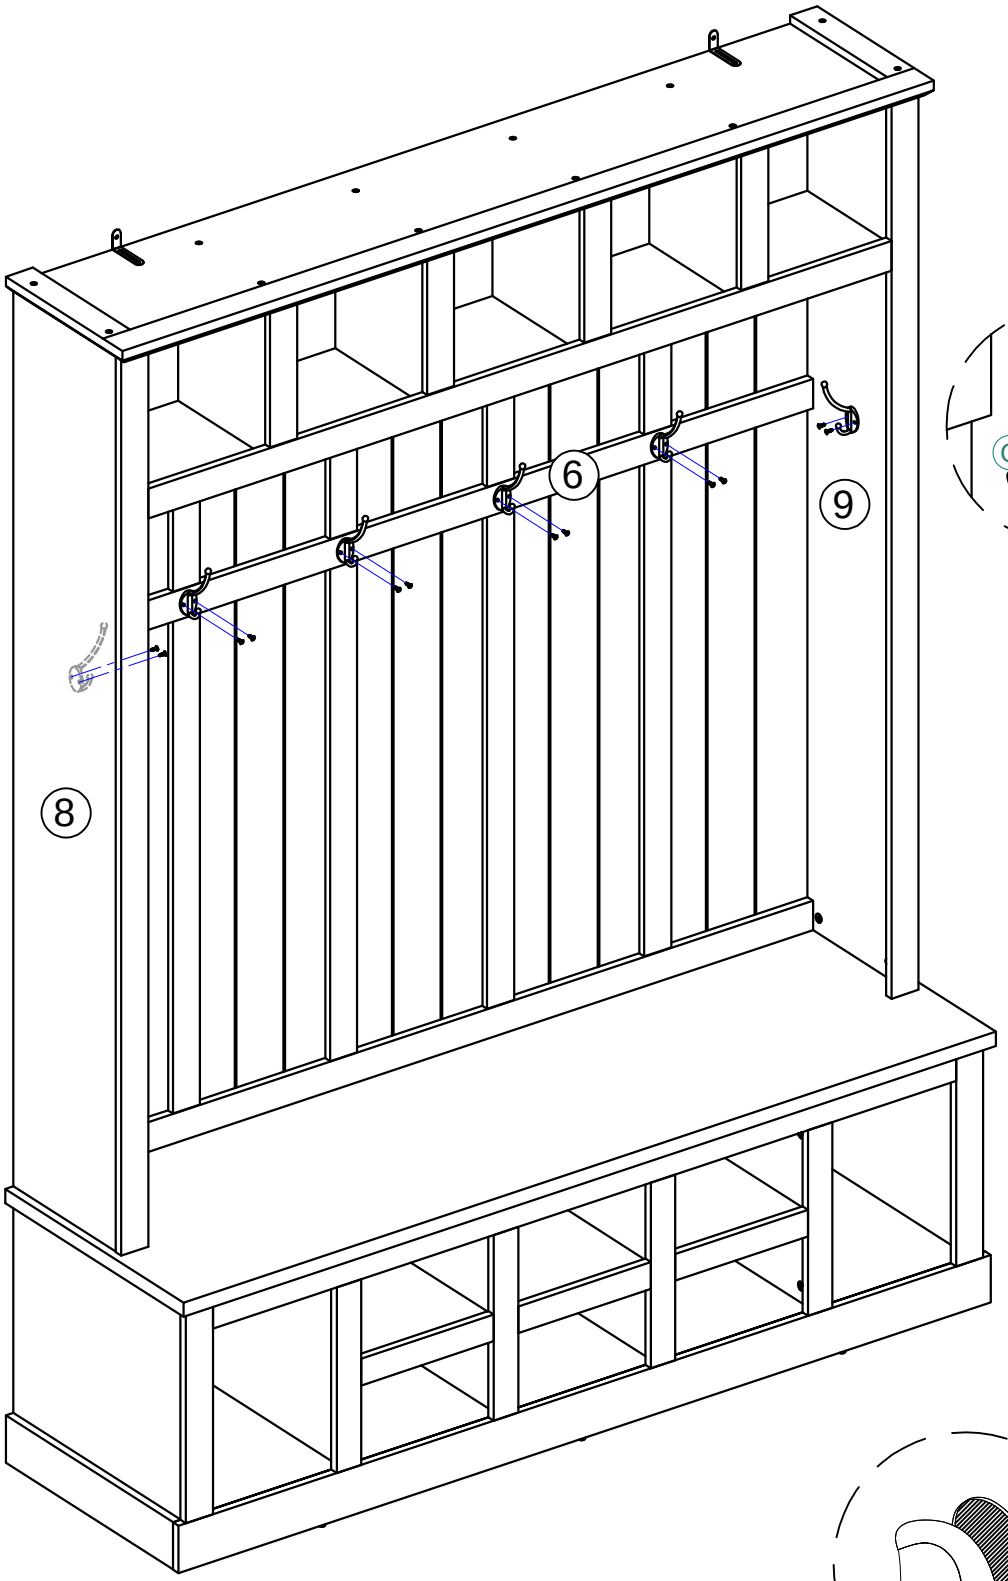


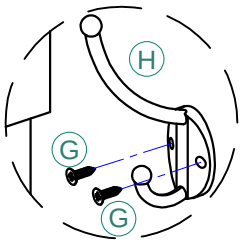

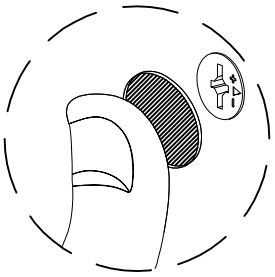


G	x12
	
M3x14mm	

H	x6
	

M	x54
	

Use Perfect Sticker (M) to cover the Camlock's holes on the all position we can see !

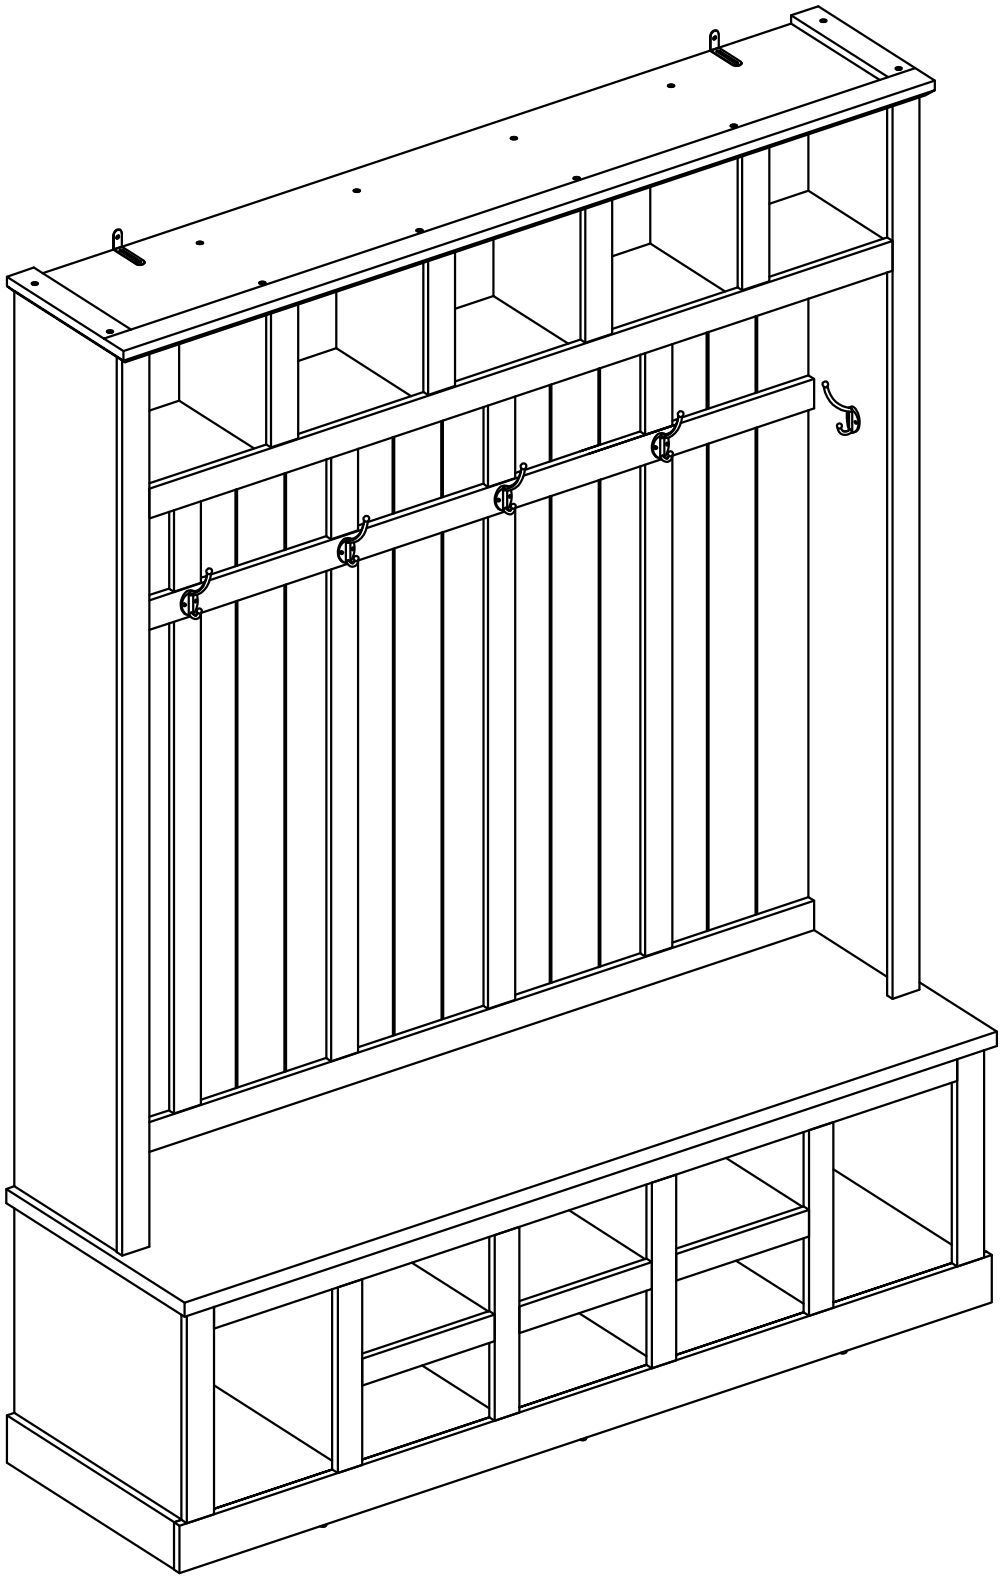

FINISH