



SKU:SF001029

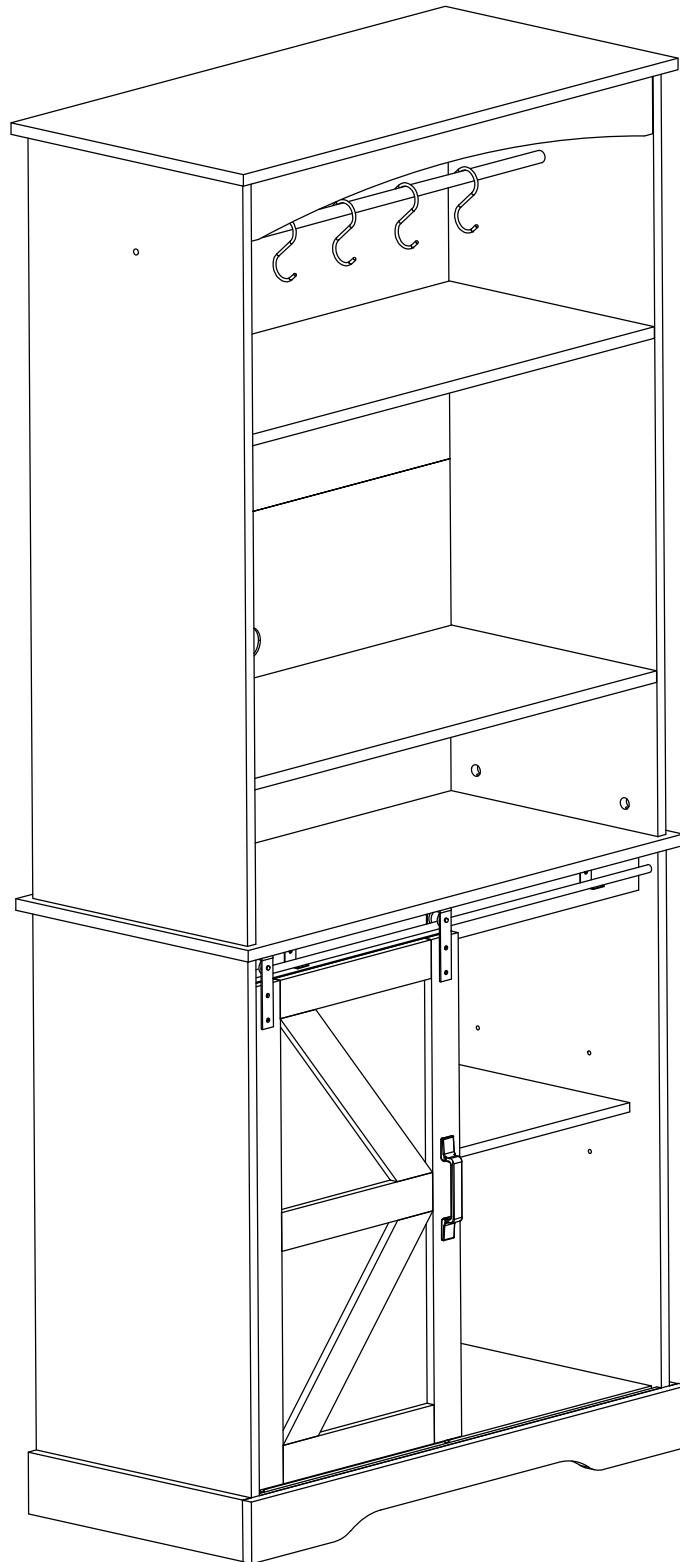

ASSEMBLY INSTRUCTIONS




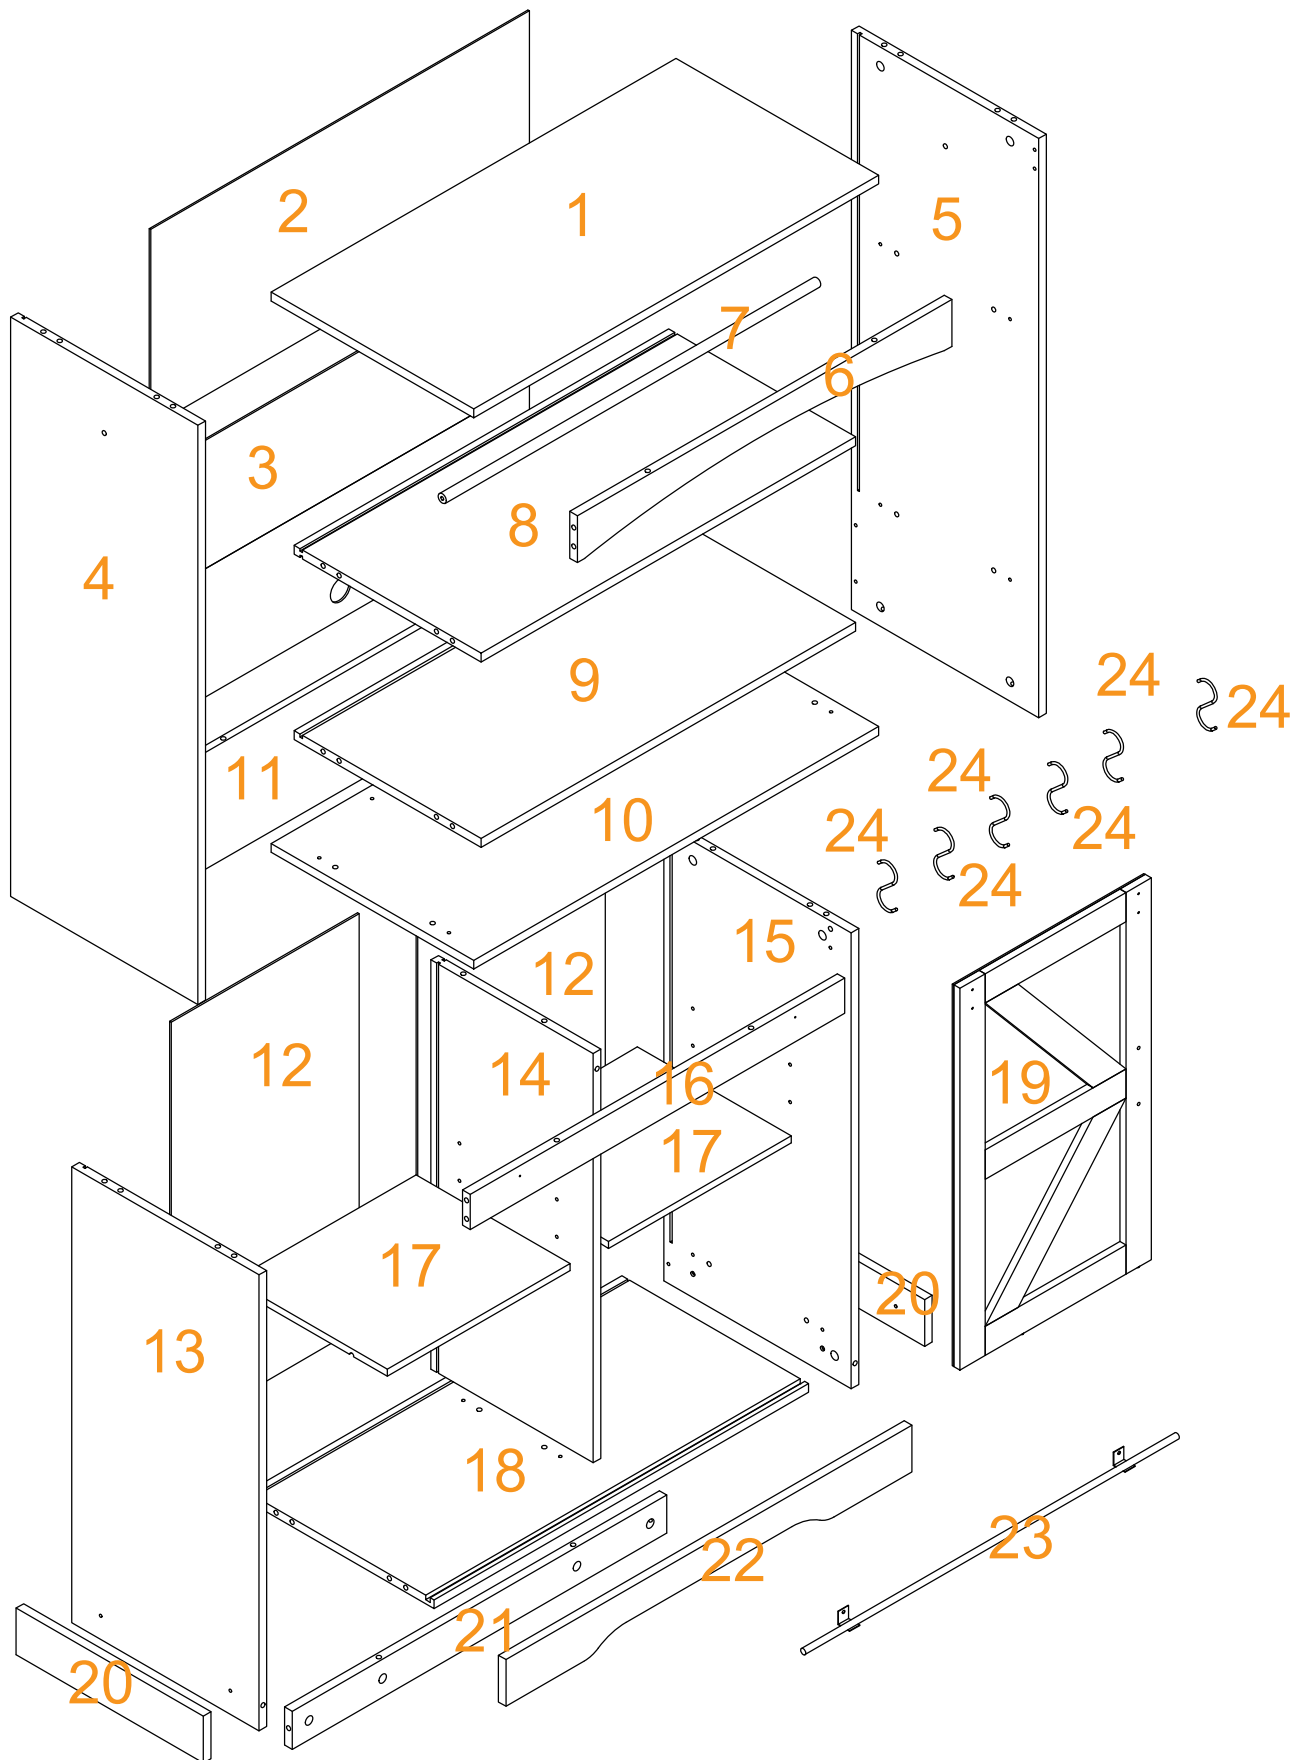


Before You Start

























1. Read through each step carefully and follow the proper order
2. Separate and count all your parts and hardware
3. Give yourself enough room for the assembly process
4. Caution: If using a power drill or power screwdriver for screwing, please be aware to slow down and stop when screw is tight. Failure to do so may result in stripping the screw

Cam Lock Fastening System


This Cam Lock Fastening System will be used throughout the assembly process

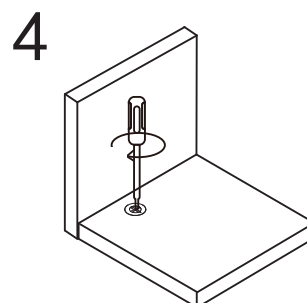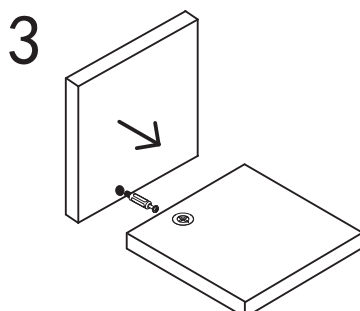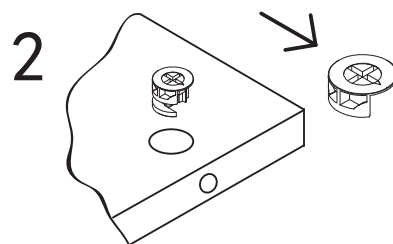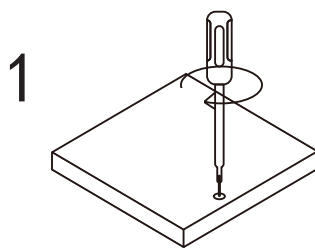


Parts List

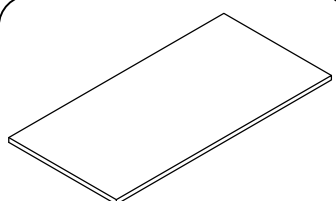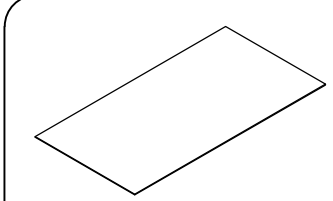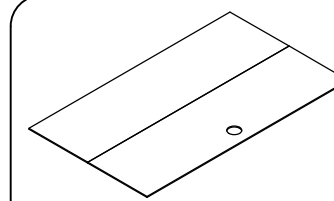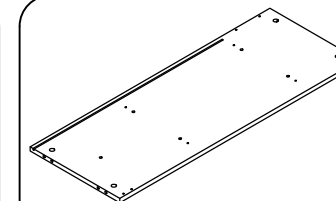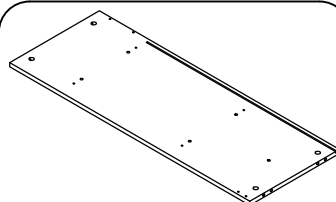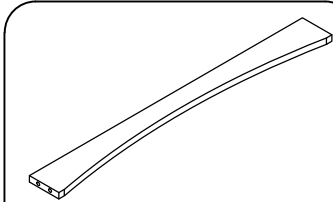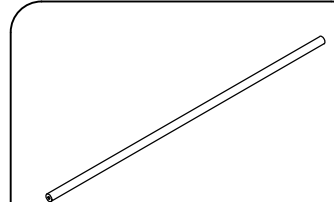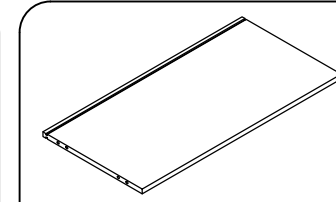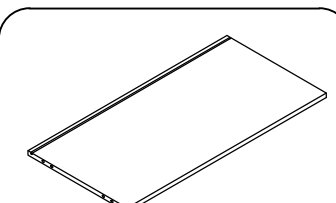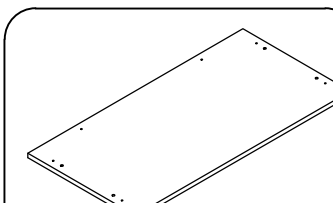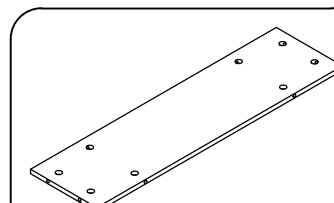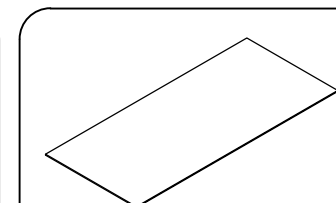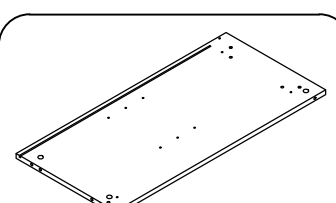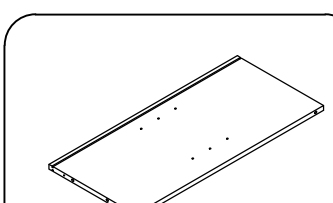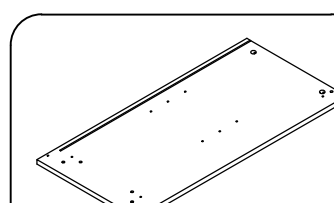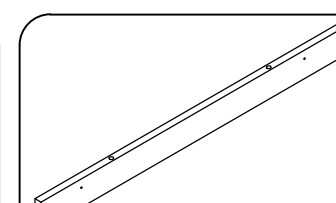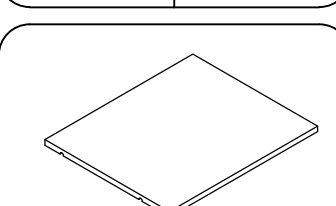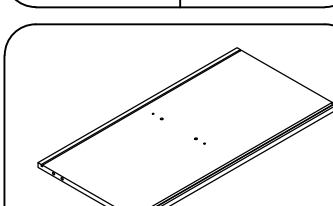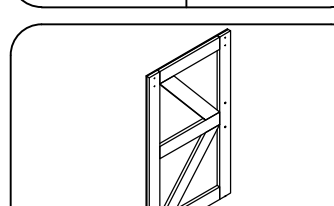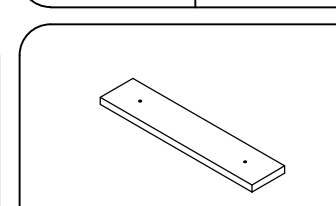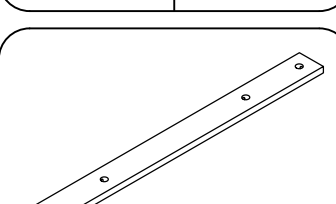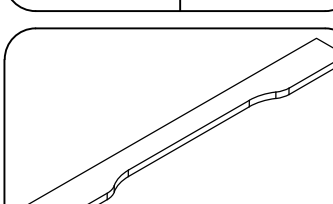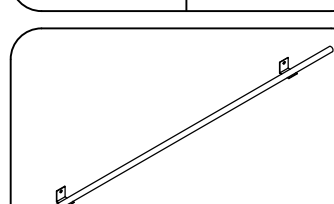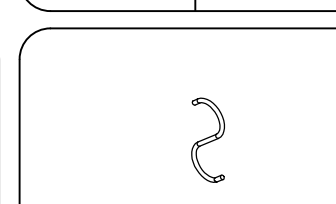							
1	1PC	2	1PC	3	1PC	4	1PC
							
5	1PC	6	1PC	7	1PC	8	1PC
							
9	1PC	10	1PC	11	1PC	12	2PCS
							
13	1PC	14	1PC	15	1PC	16	1PC
							
17	2PCS	18	1PC	19	1PC	20	2PCS
							
21	1PC	22	1PC	23	1PC	24	6PCS

Hardware List




A 2PCS

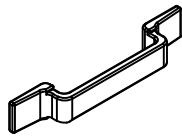

B 1PCS



C 51PCS



Ø15

D 51PCS



Ø8*30mm

E 28PCS



F 2PCS



G 8PCS



M4*18MM

H 2PCS



Ø4*14MM

I 6PCS



Ø4*40mm

J 2PCS



M6*30MM

K 2PCS




Ø4*25mm

L 4PCS



M 11PCS

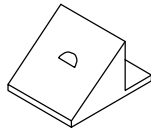

N 12PCS



Ø3x14mm


O 12PCS

STEP 1



Ø4*25mm

L	4PCS
---	------

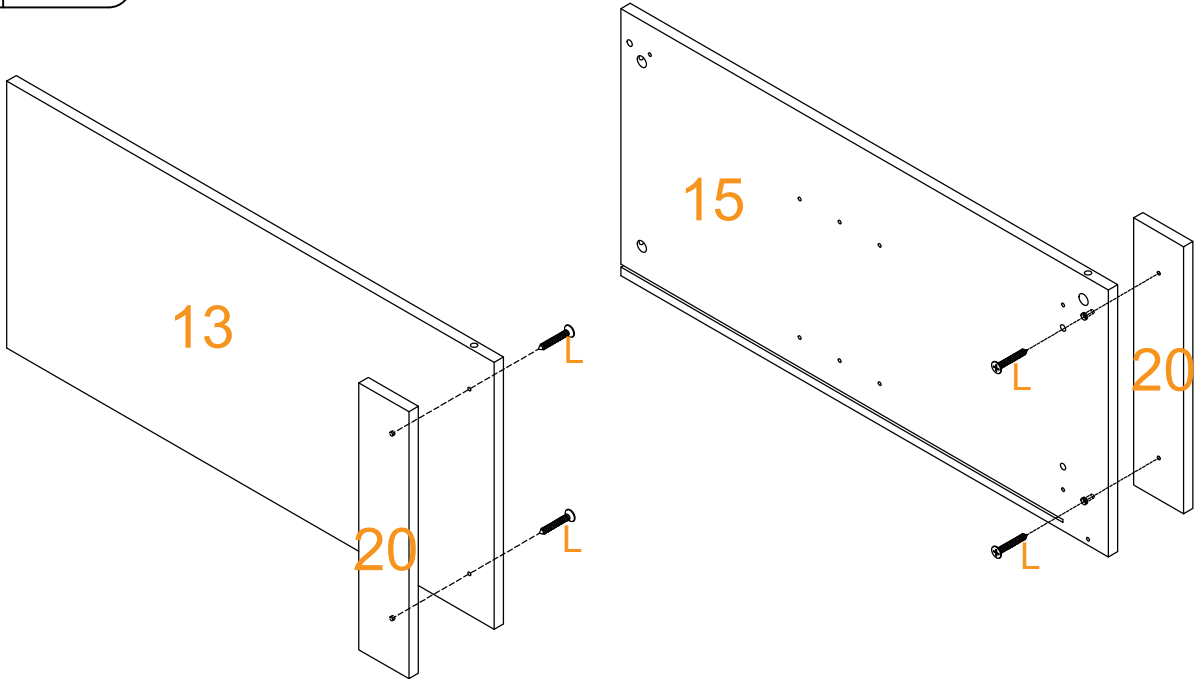

STEP 2




Ø8*30mm

E	2PCS
---	------



Ø4*40mm

J	2PCS
---	------

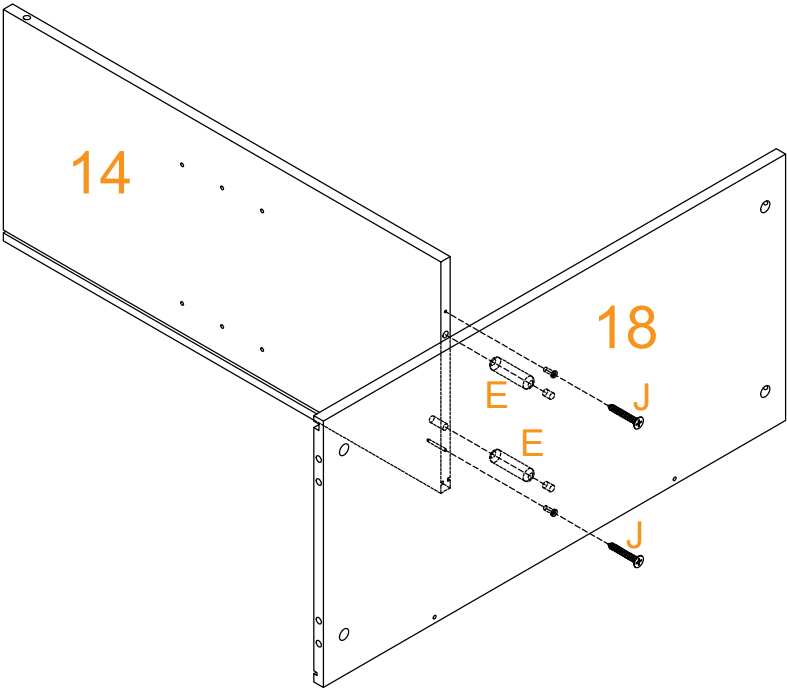


STEP 3



C	3PCS
---	------



D	3PCS
---	------

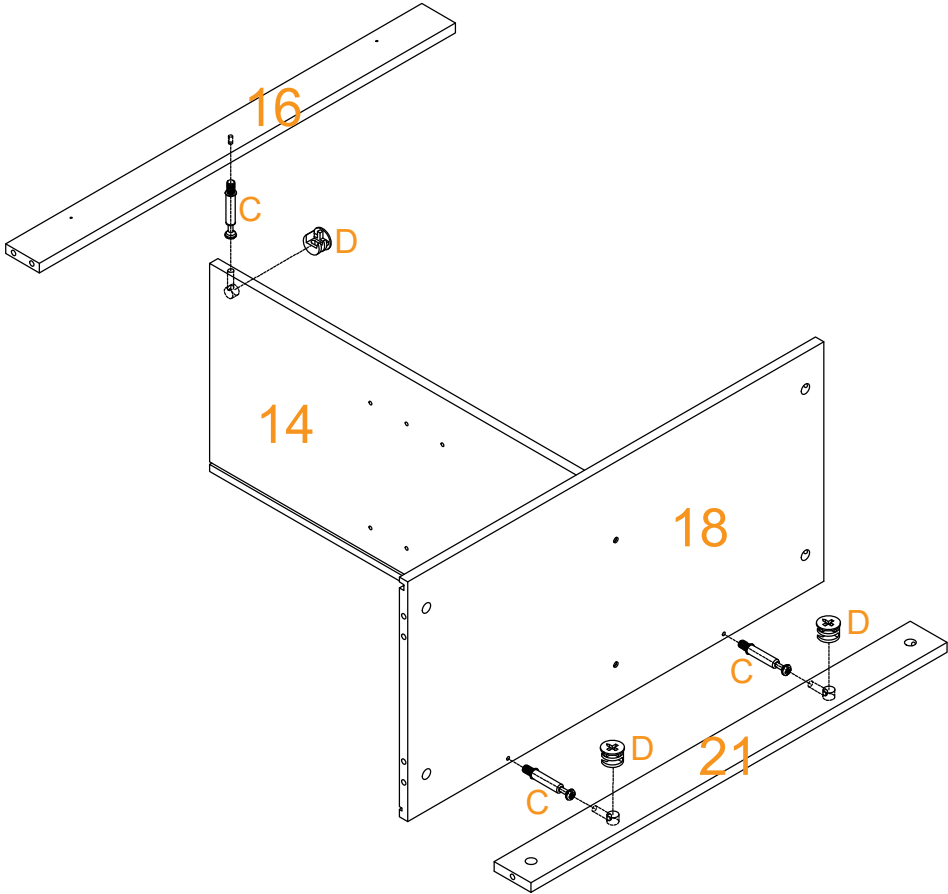

STEP 4



C	4PCS
---	------




D	4PCS
---	------







Ø8*30mm





E	3PCS
---	------

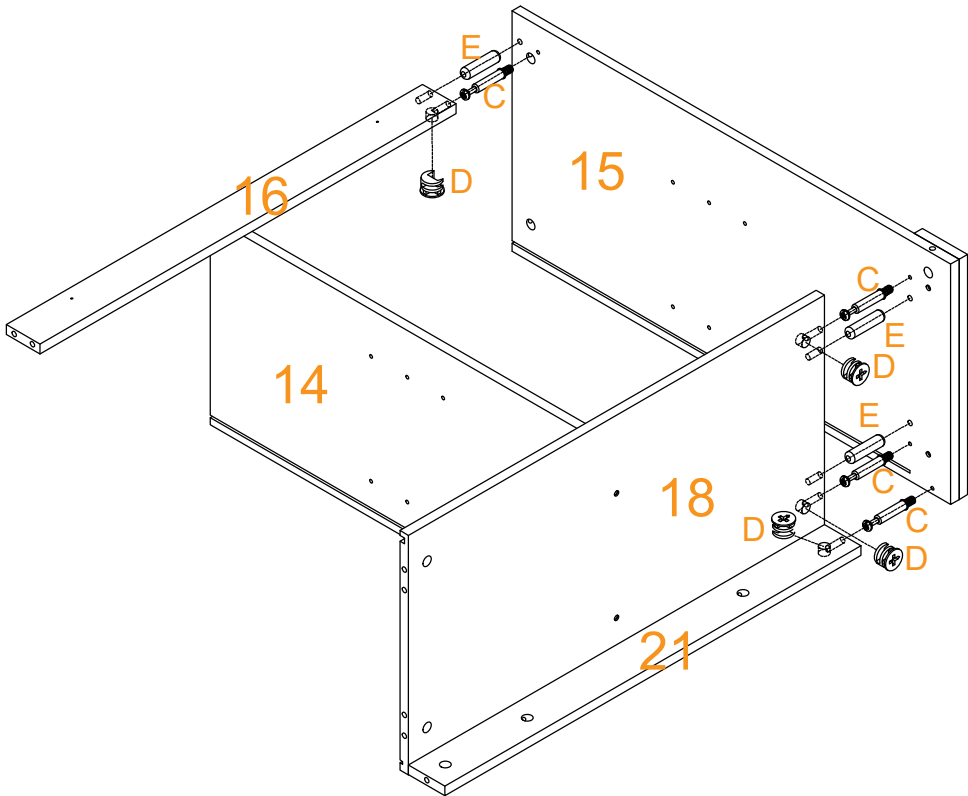


STEP 5

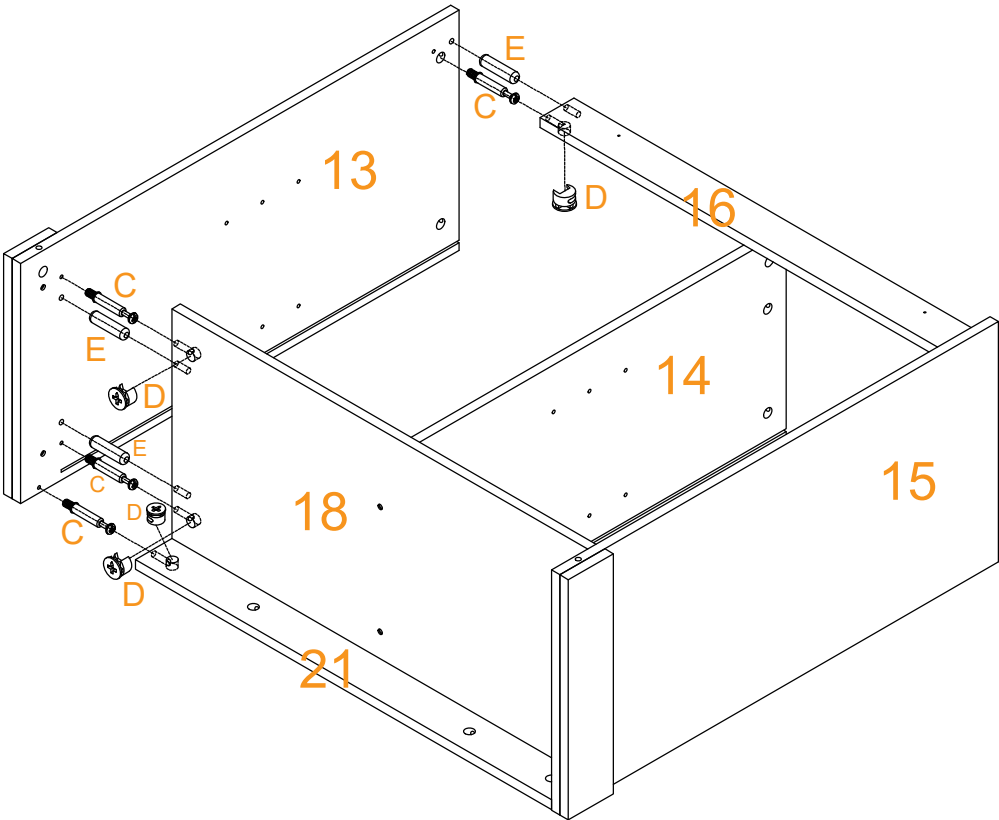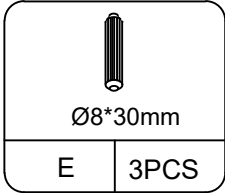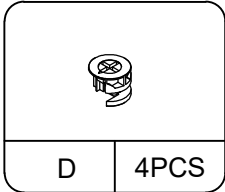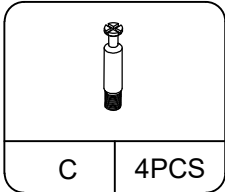

STEP 6

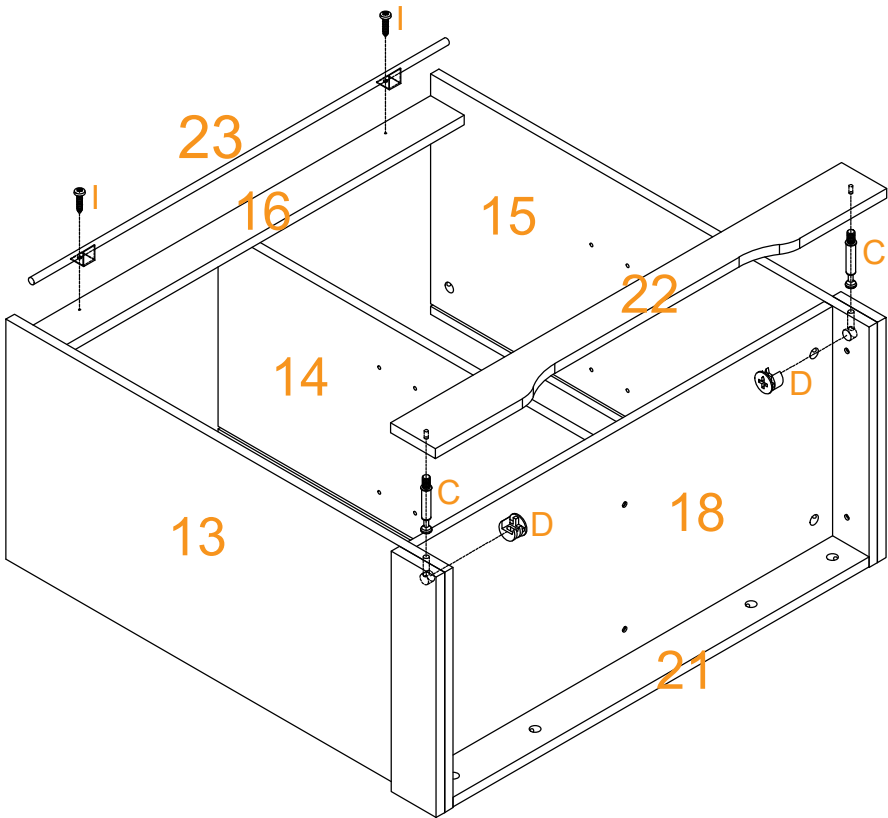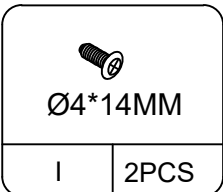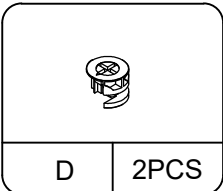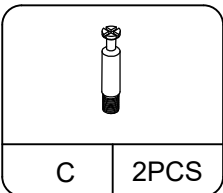

STEP 7

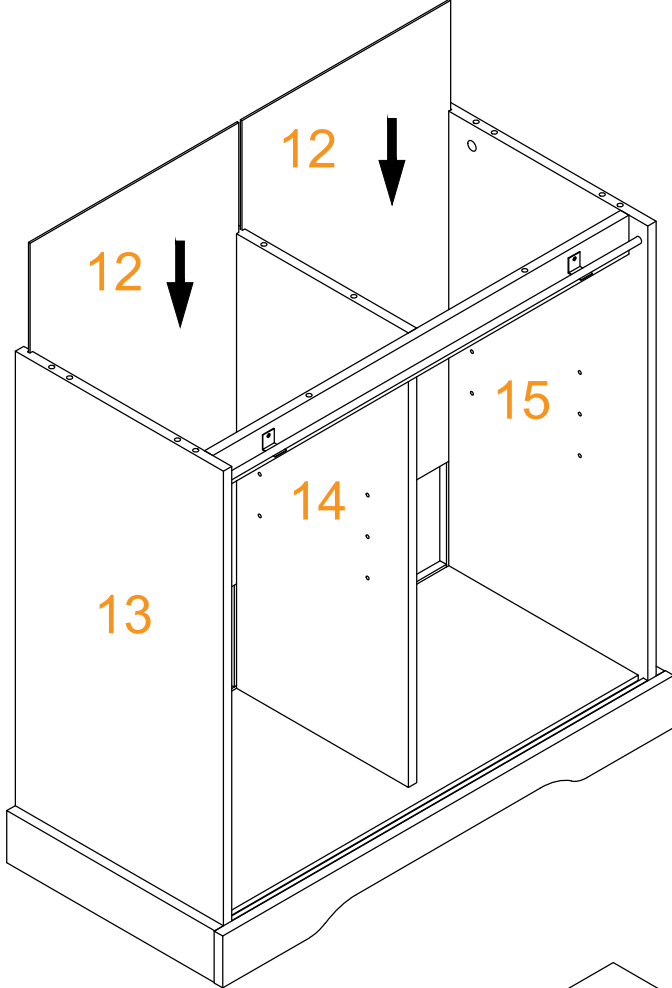

STEP 8




C	8PCS
---	------






D	8PCS
---	------









Ø8*30mm	
E	4PCS

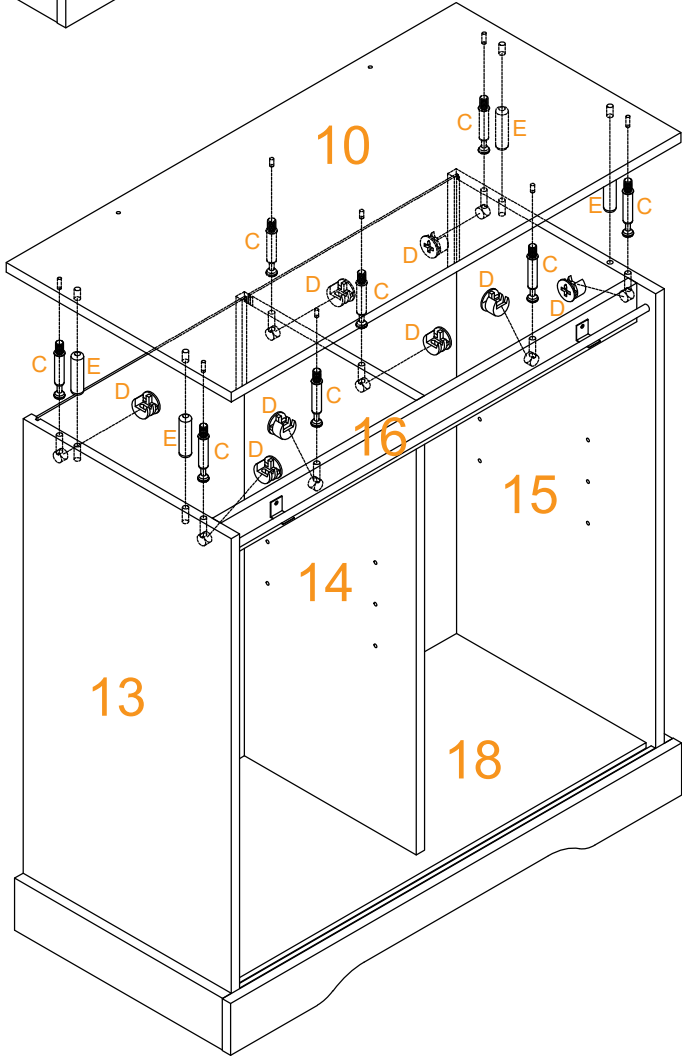





STEP 9

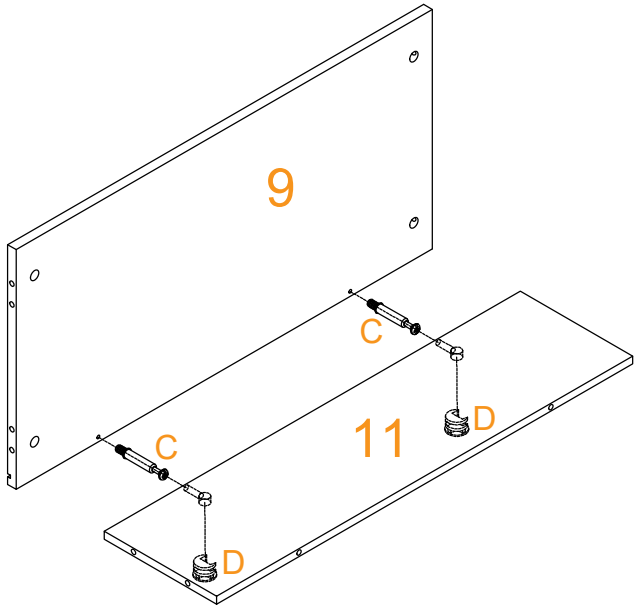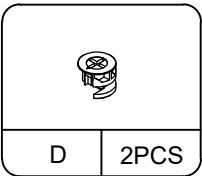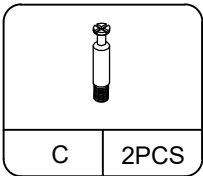


STEP 10

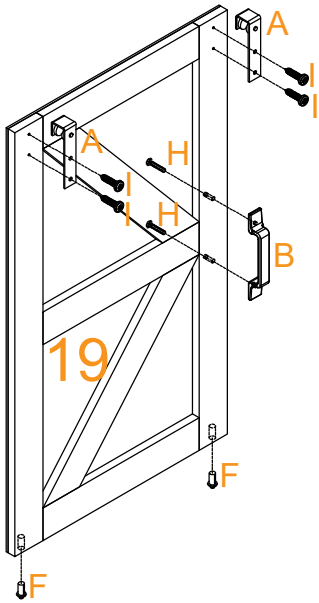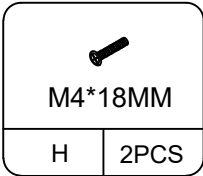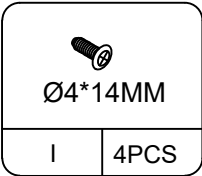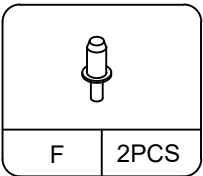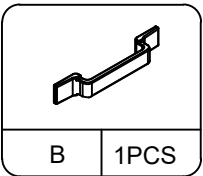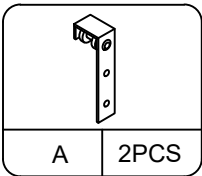





STEP 11

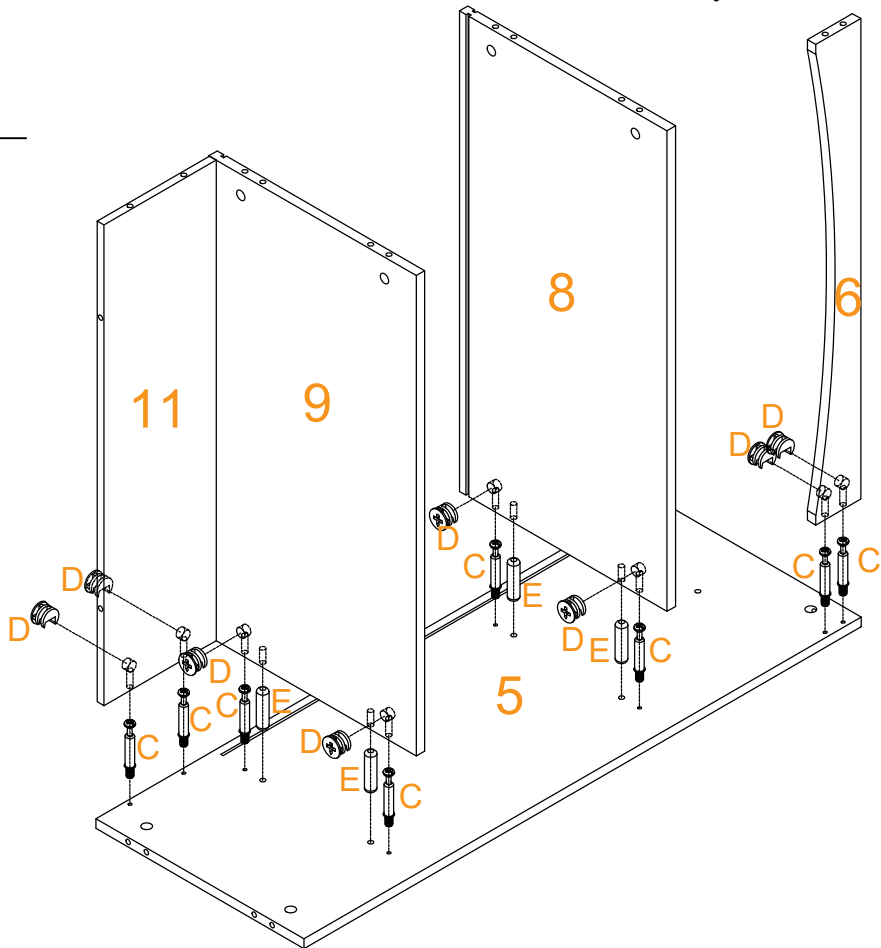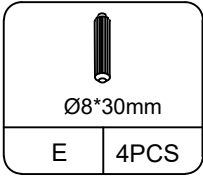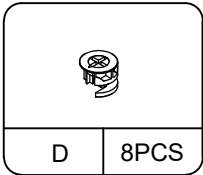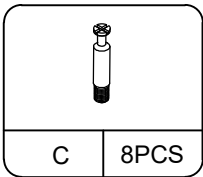


STEP 12

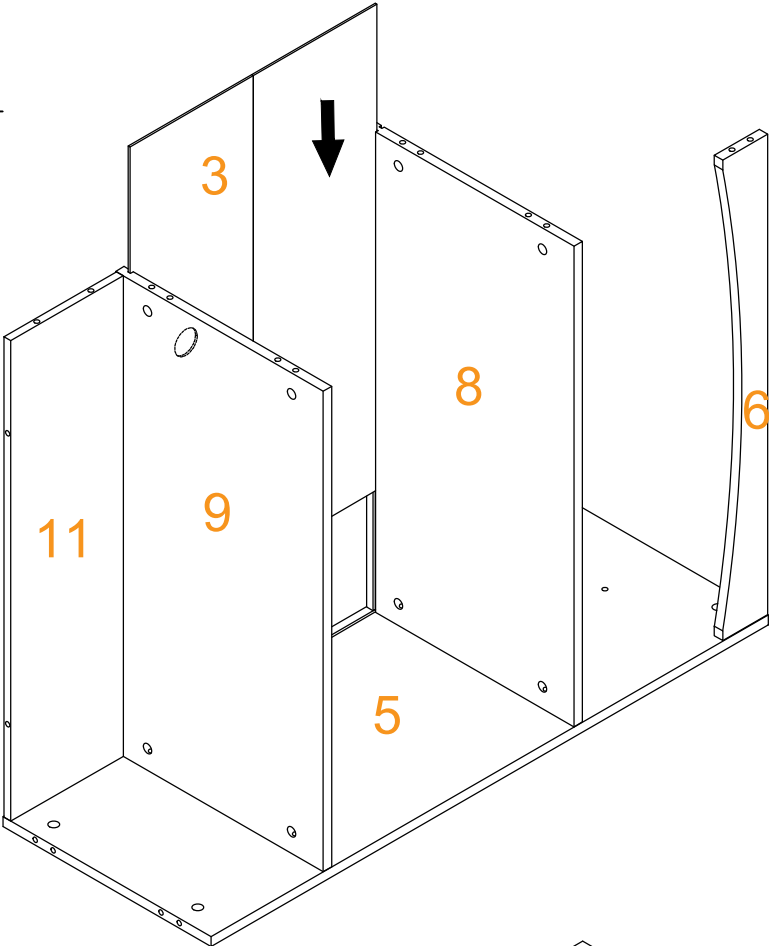






STEP 13

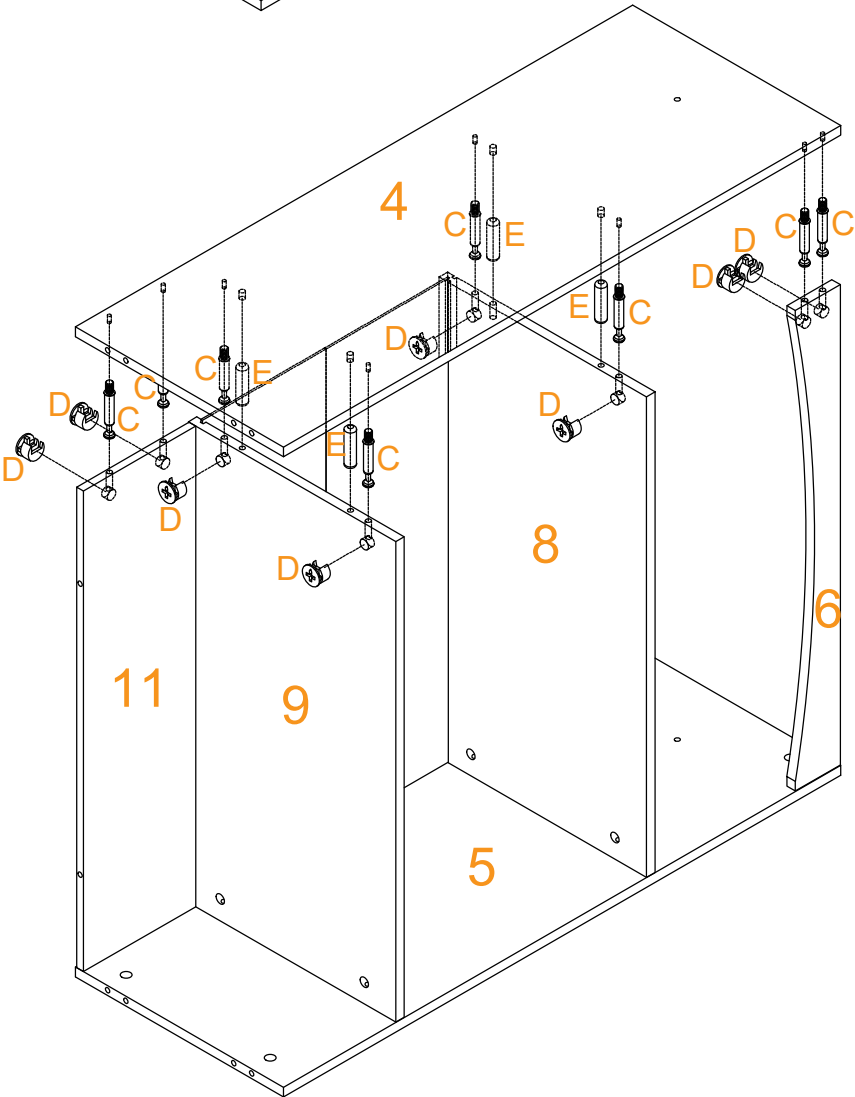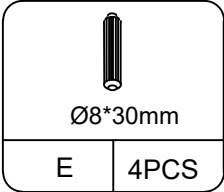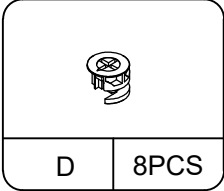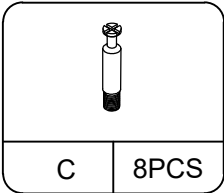






STEP 14

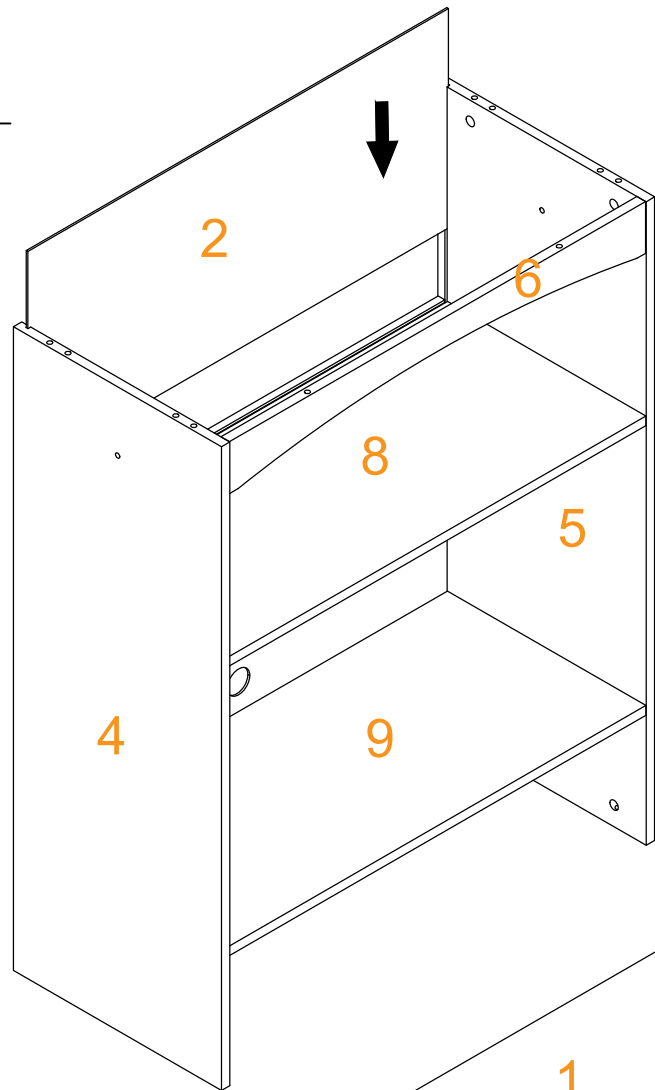

STEP 15

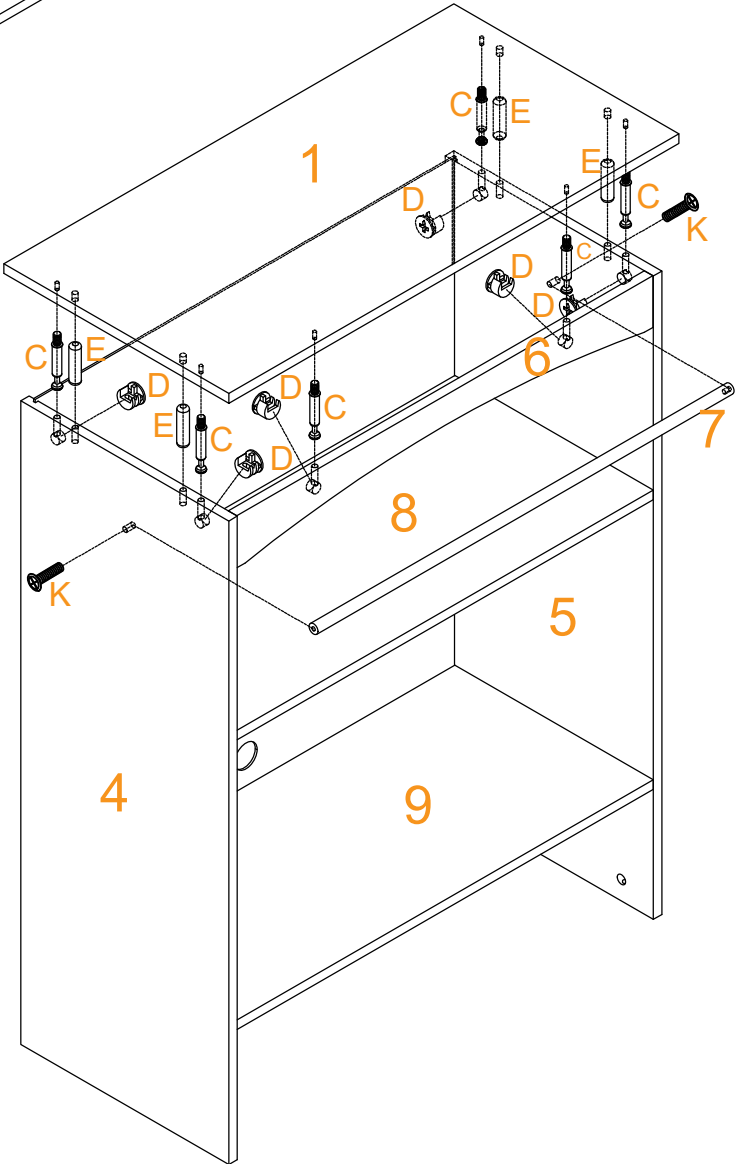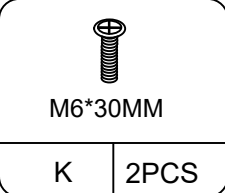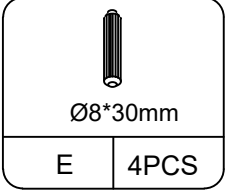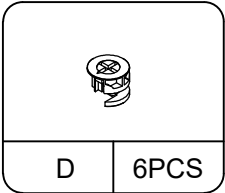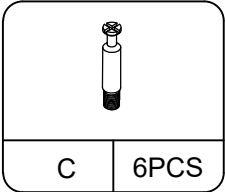


STEP 16

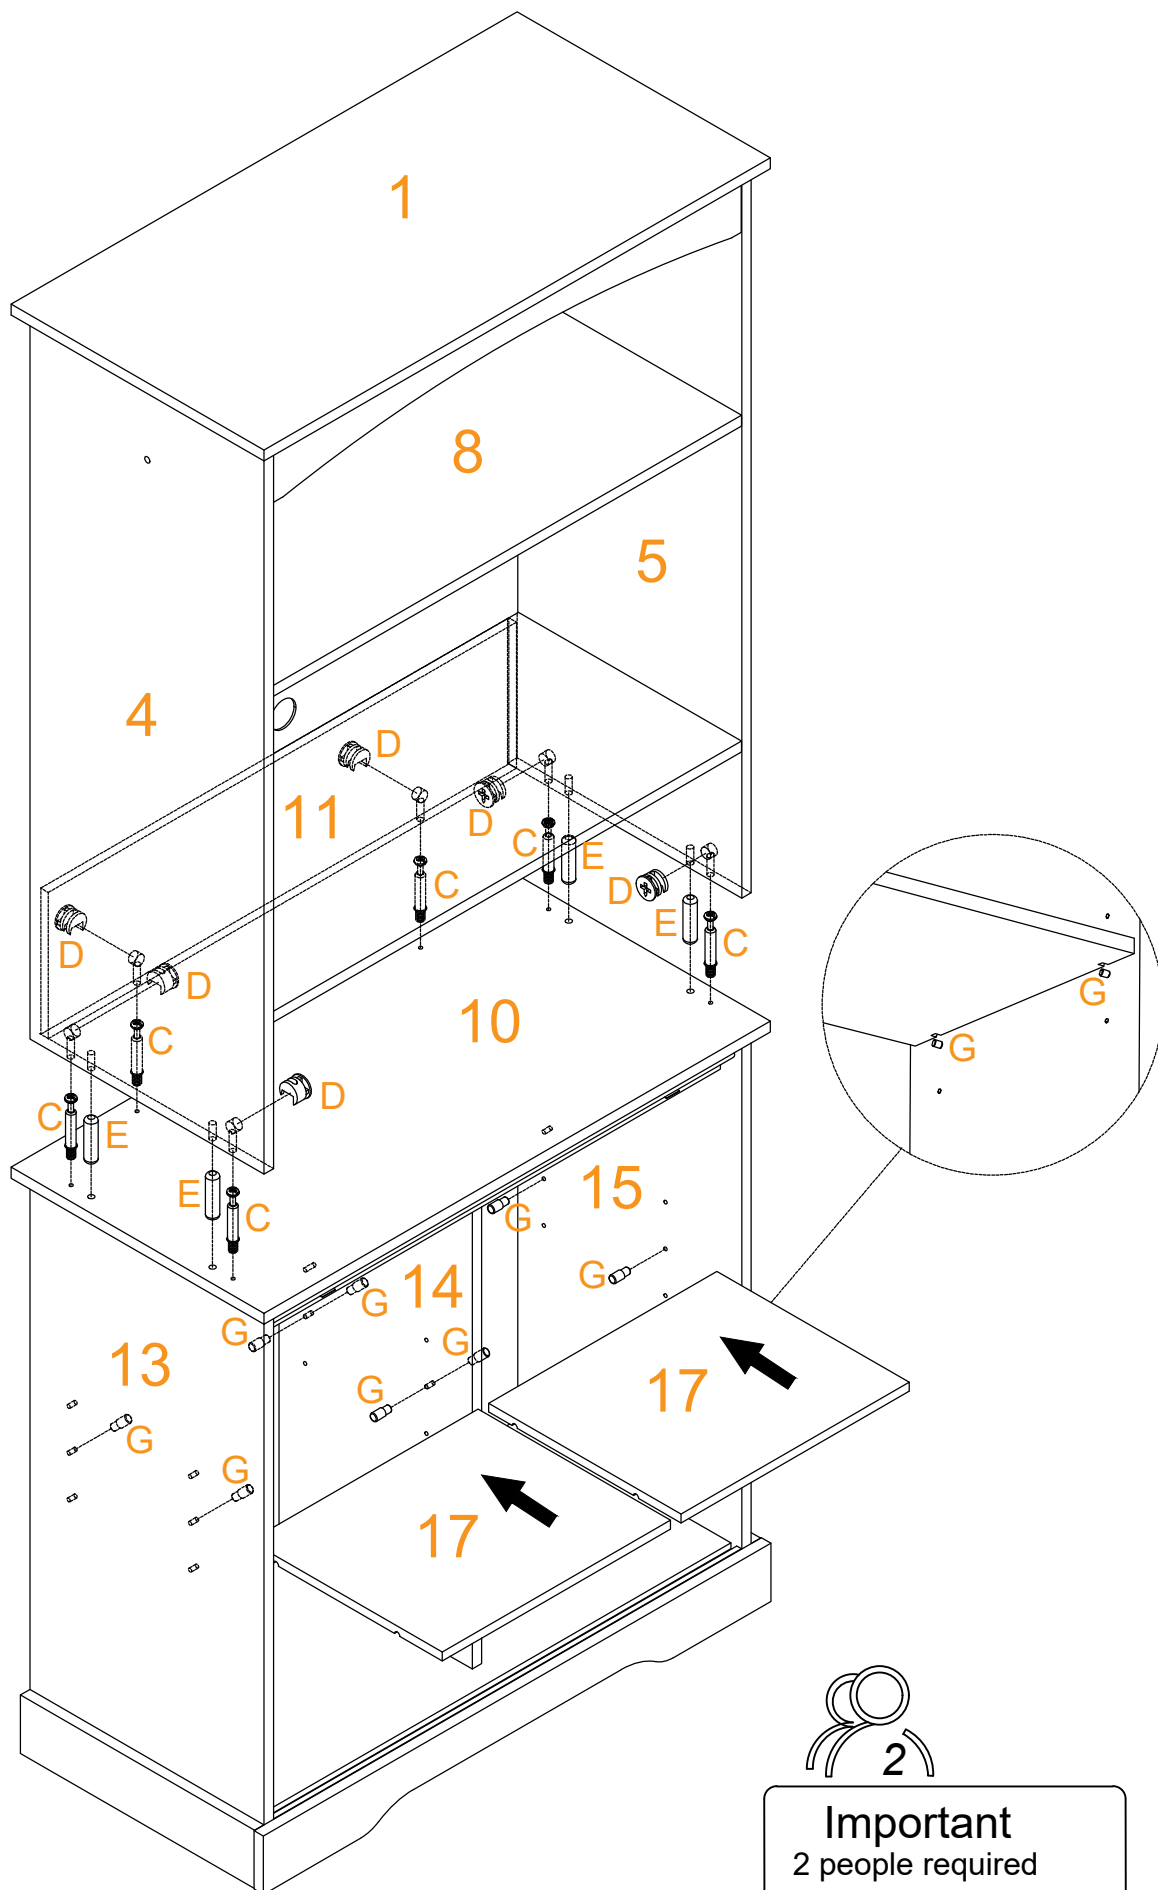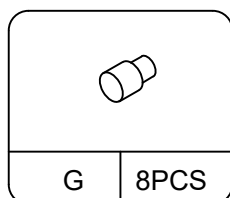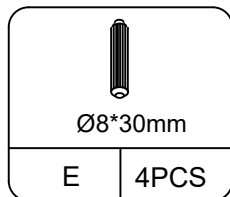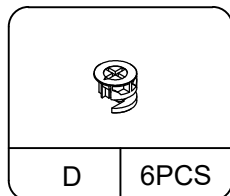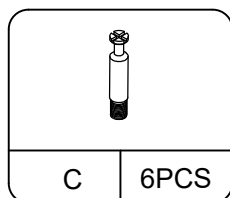


Important

2 people required
2 personnes requises
2 personas requeridas

STEP 17

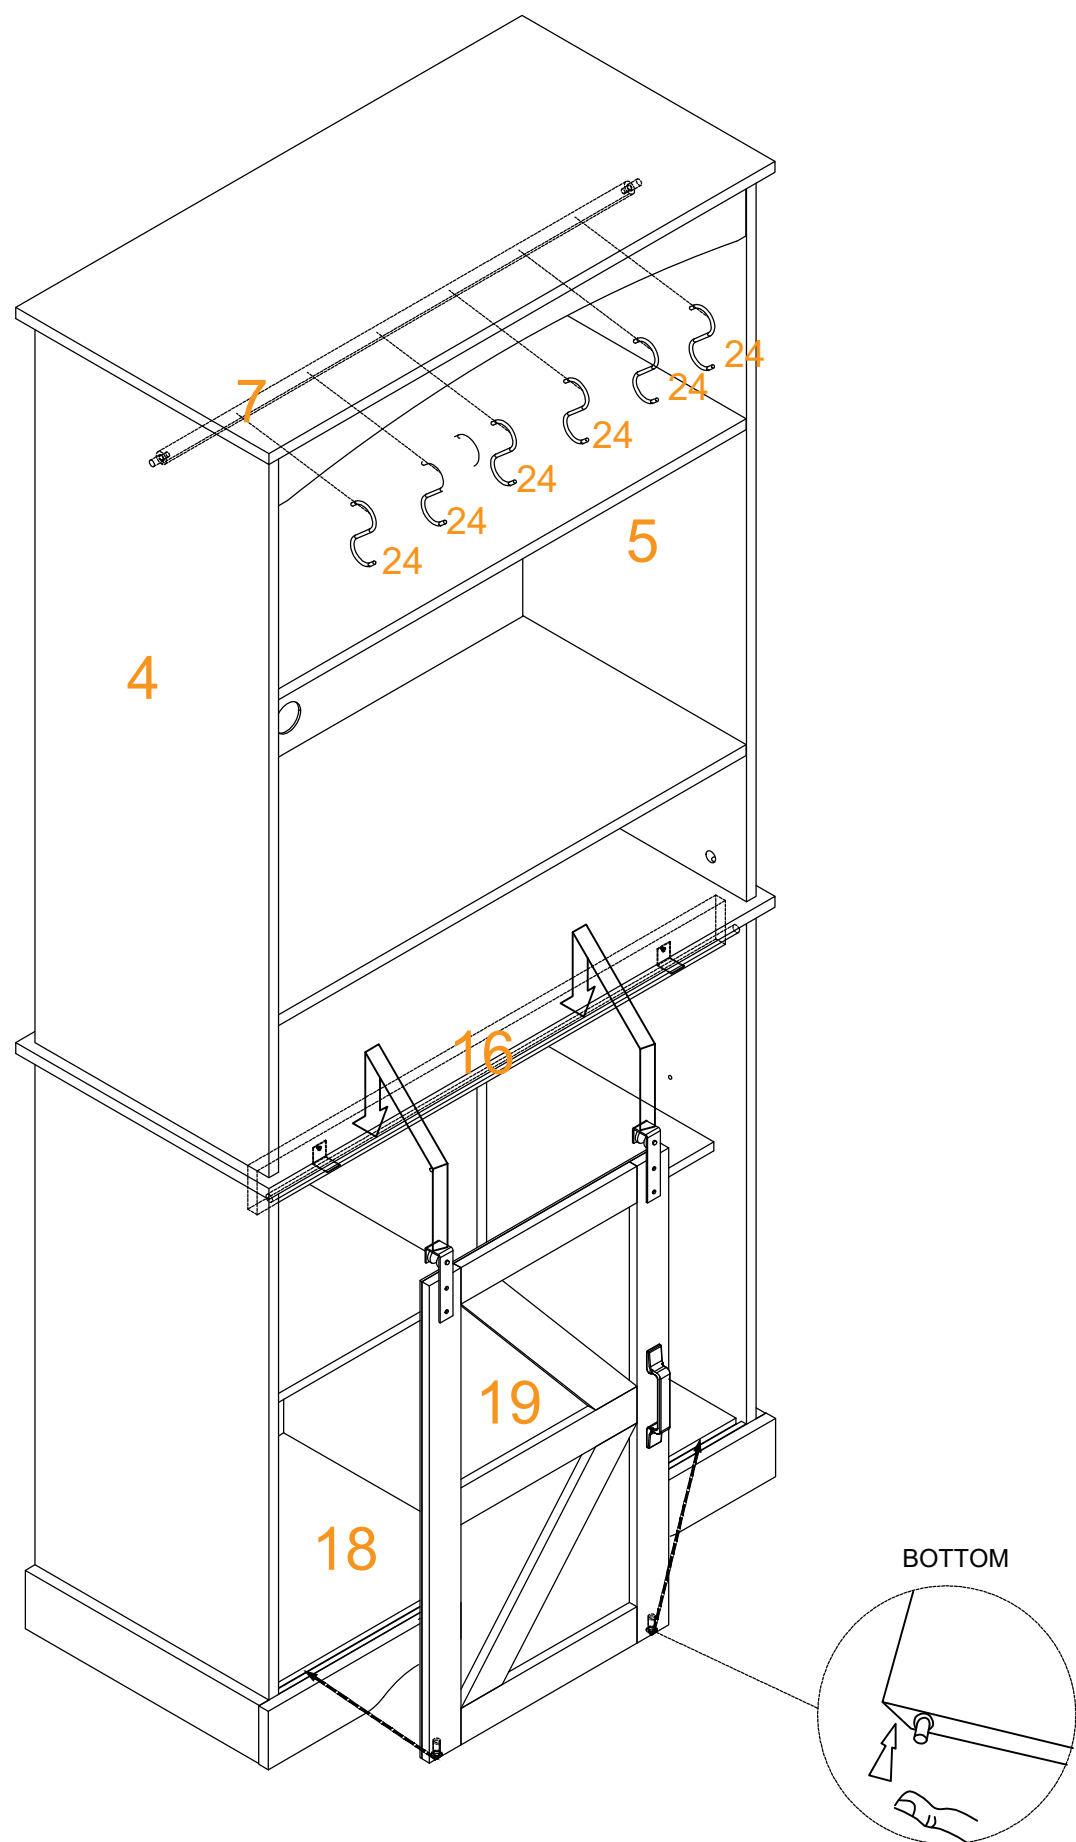

STEP 18





N x12




Ø3x14mm


O x12

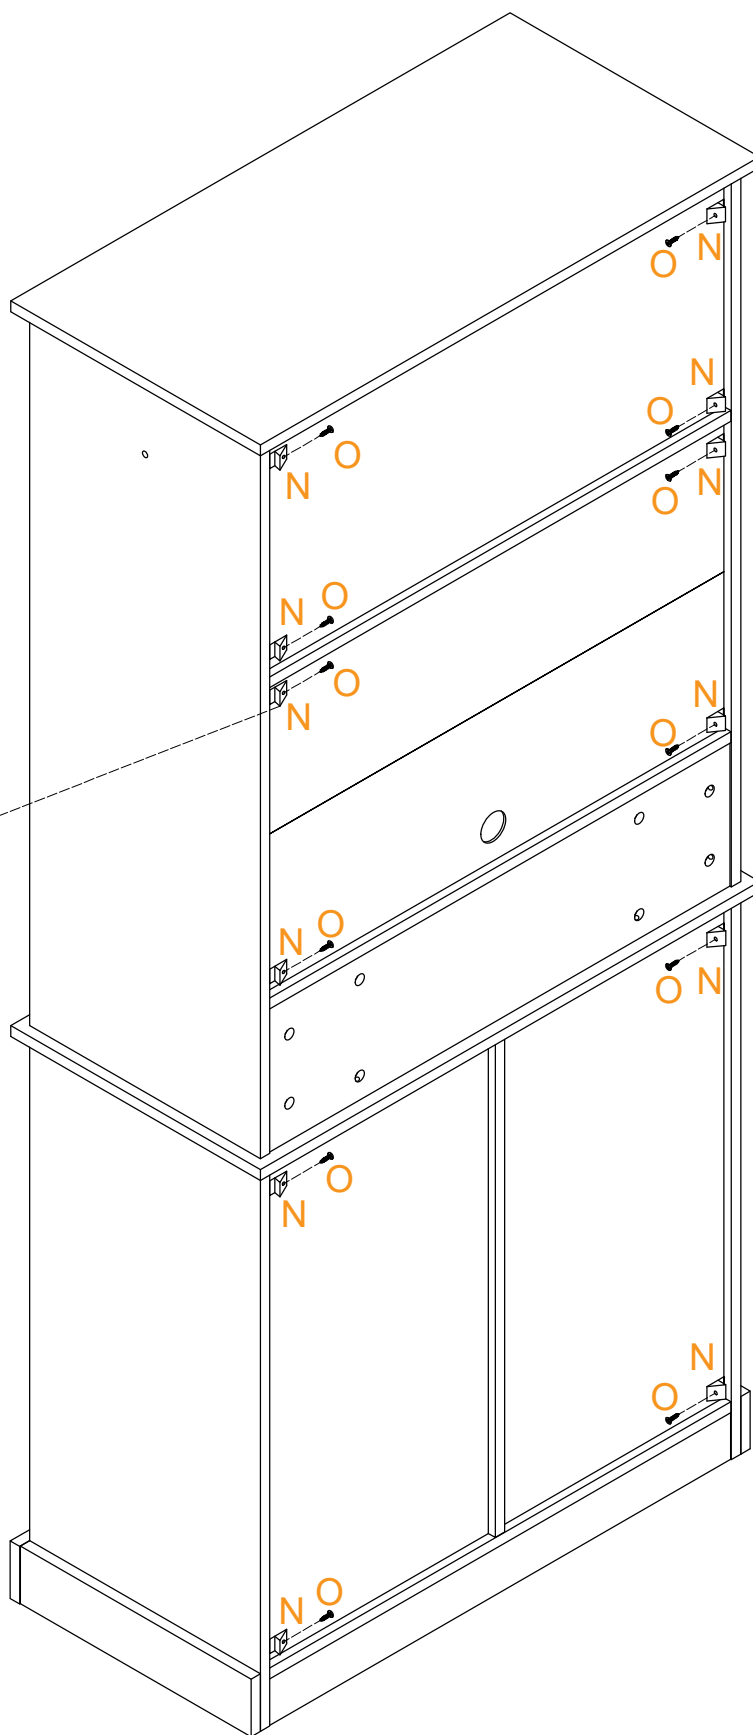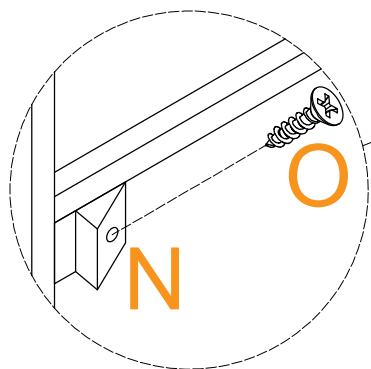

STEP 19

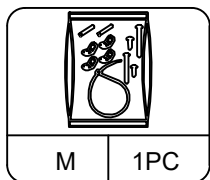

PART LIST	FIGURE	QUANTITY	DESCRIPTION
1		2PC	Long Screw (Dia.4mmX38mmL)
2		2PC	Short Screw (Dia.4mmX19mmL)
3		4PC	Metal L Bracket
4		2PC	Plastic Anchor
5		2PC	Cable

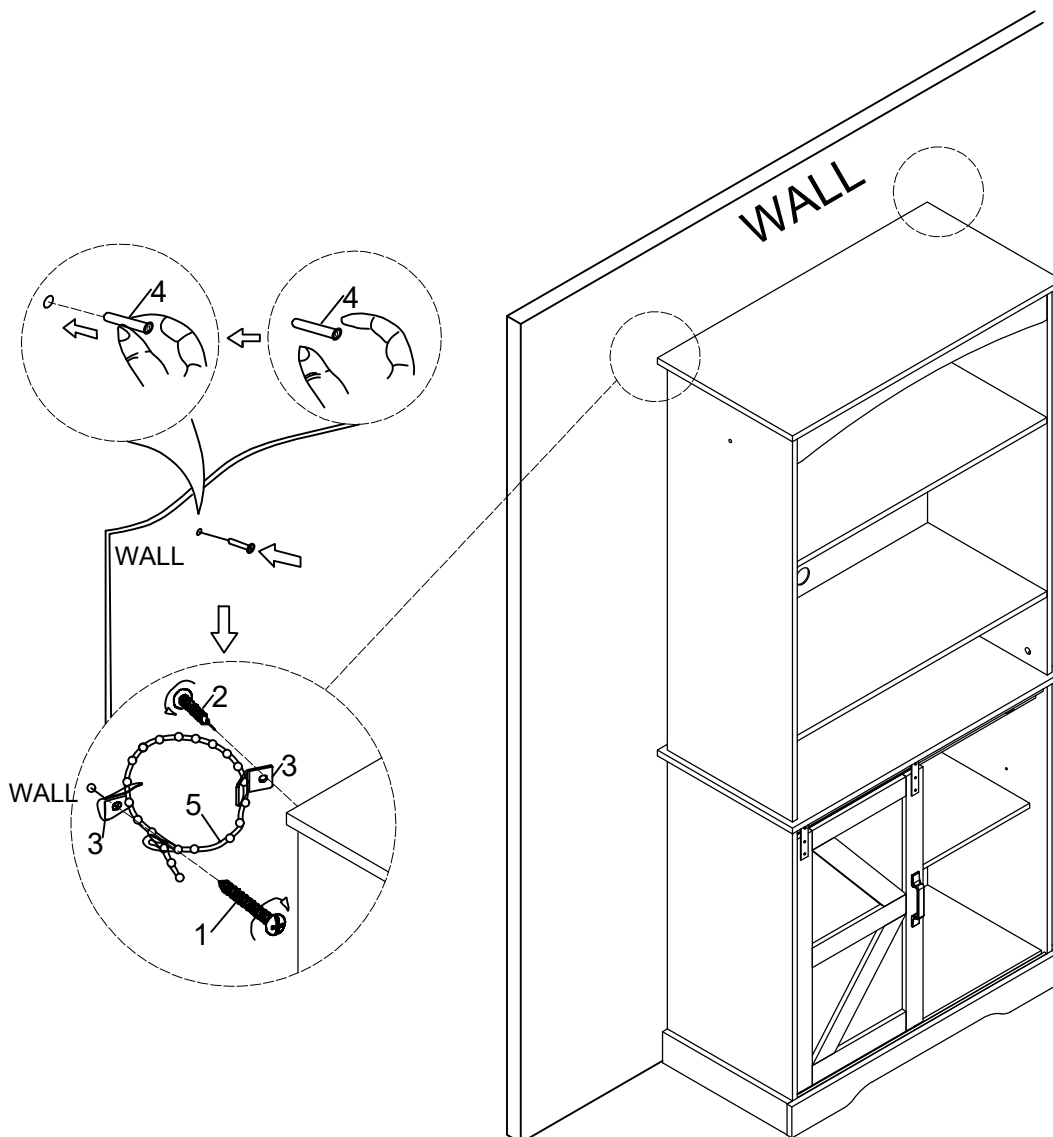

Follow the instructions printed on the plastic bag containing the tipping restraint hardware to attach the tip-over restraints to the unit and the wall.

NOTE: The tipping restraint hardware included is designed for drywall construction. You will need to drill holes for the wall anchors. Depending on your wall type, different anchor hardware may be required. Please contact your local hardware store for assistance.