

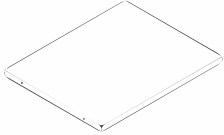
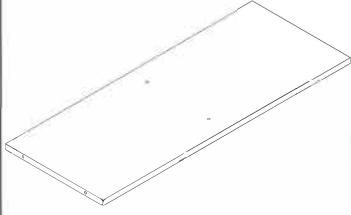
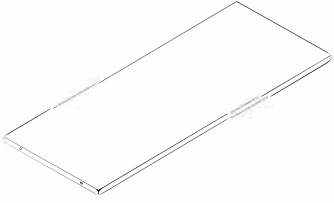



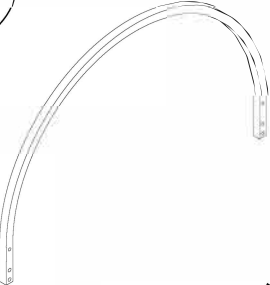


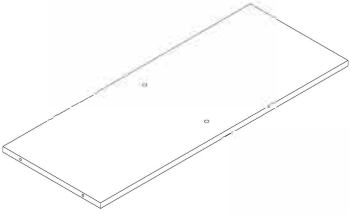


















IMPORTANT, RETAIN FOR FUTURE REFERENCE: READ CAREFULLY


<p>01</p>  <p>*1</p>	<p>02</p>  <p>*1</p>	<p>03</p>  <p>*2</p>	<p>04</p>  <p>*1</p>
<p>05</p>  <p>*1</p>	<p>06</p>  <p>*1</p>	<p>07</p>  <p>*1</p>	<p>08</p>  <p>*2</p>
<p>09</p>  <p>*2</p>	<p>10</p>  <p>*1</p>	<p>11</p>  <p>*1</p>	<p>12</p>  <p>*1</p>
<p>13</p>  <p>*1</p>	<p>14</p>  <p>*1</p>	<p>15</p>  <p>*2</p>	
<p>A</p>  <p>x 10</p> <p>M6*40</p>	<p>B</p>  <p>x 21</p> <p>M6*12</p>	<p>C</p>  <p>x 2</p>	<p>D</p>  <p>x 2</p>
<p>E</p>  <p>x 22</p> <p>M7*50</p>	<p>F</p>  <p>x 2</p>	<p>G</p>  <p>x 1</p> <p>M6</p>	<p>H</p>  <p>x 4</p>
<p>x 1</p>  <p>4 #</p>	<p>x 1</p> 	<p>x 1</p> 	

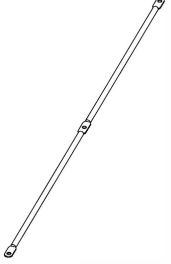
01

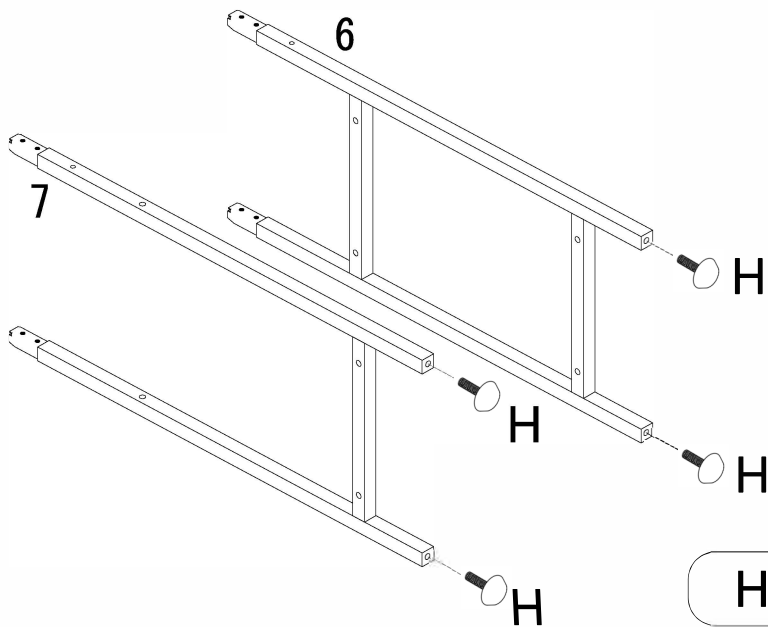


H  4 PCS


02

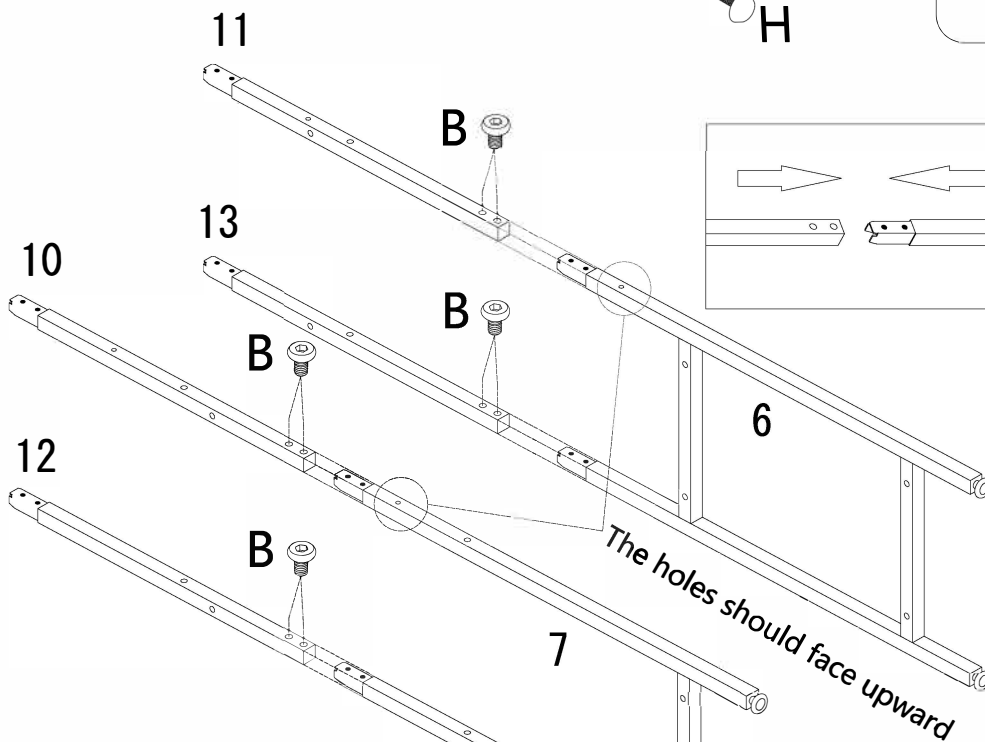


B  8 PCS

03

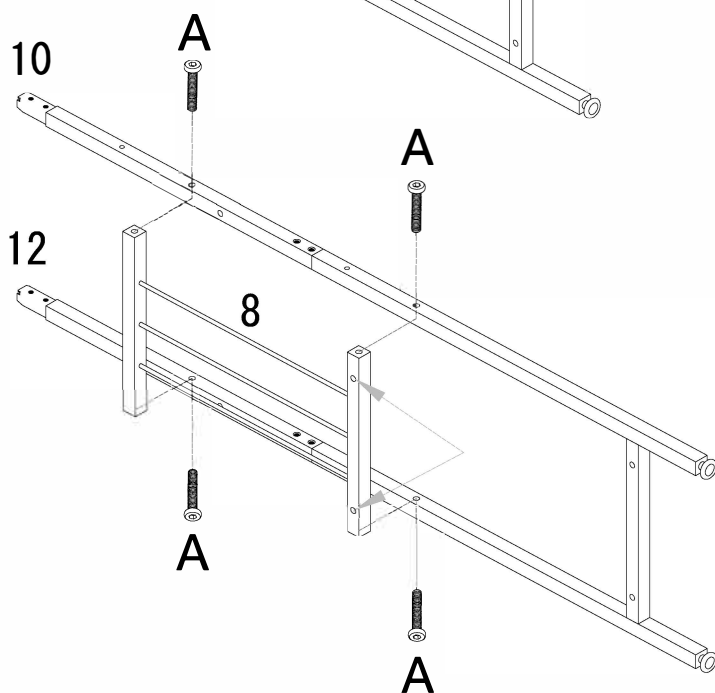


A  4 PCS


04

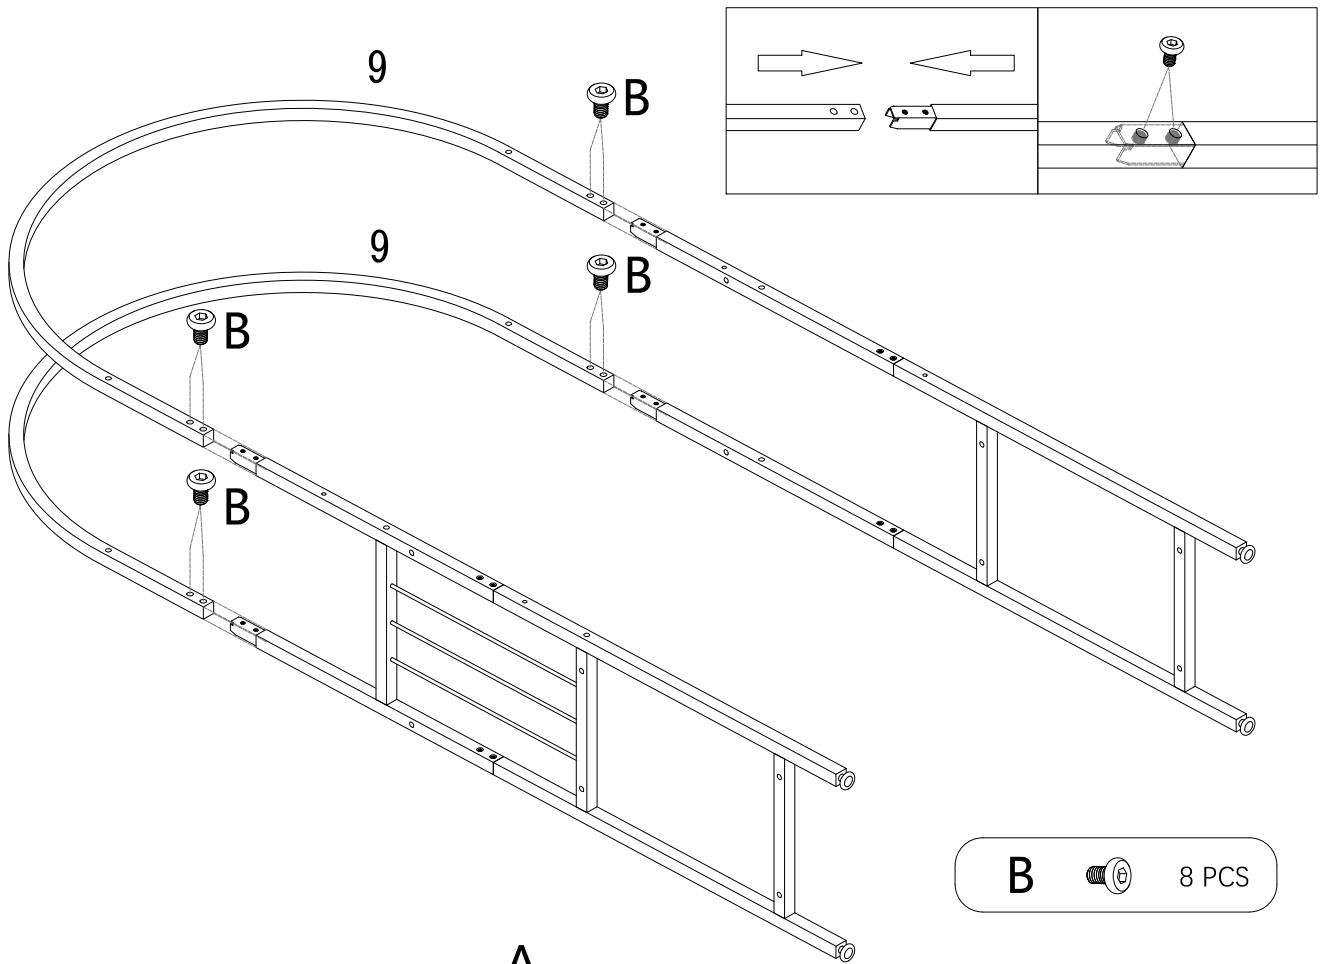


**B**  8 PCS

05

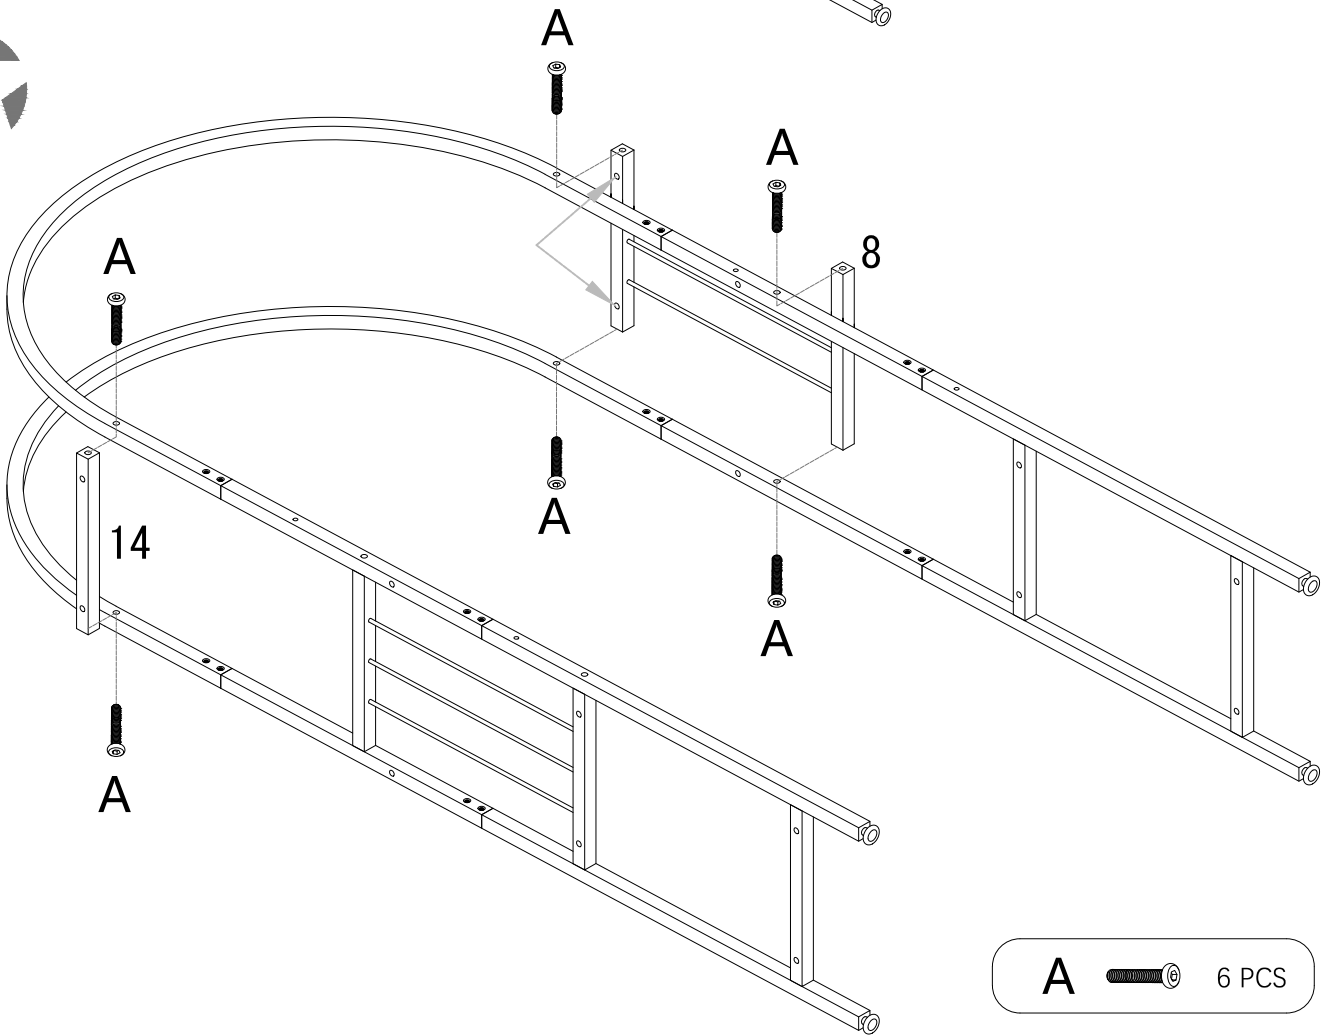


**A**  6 PCS


06

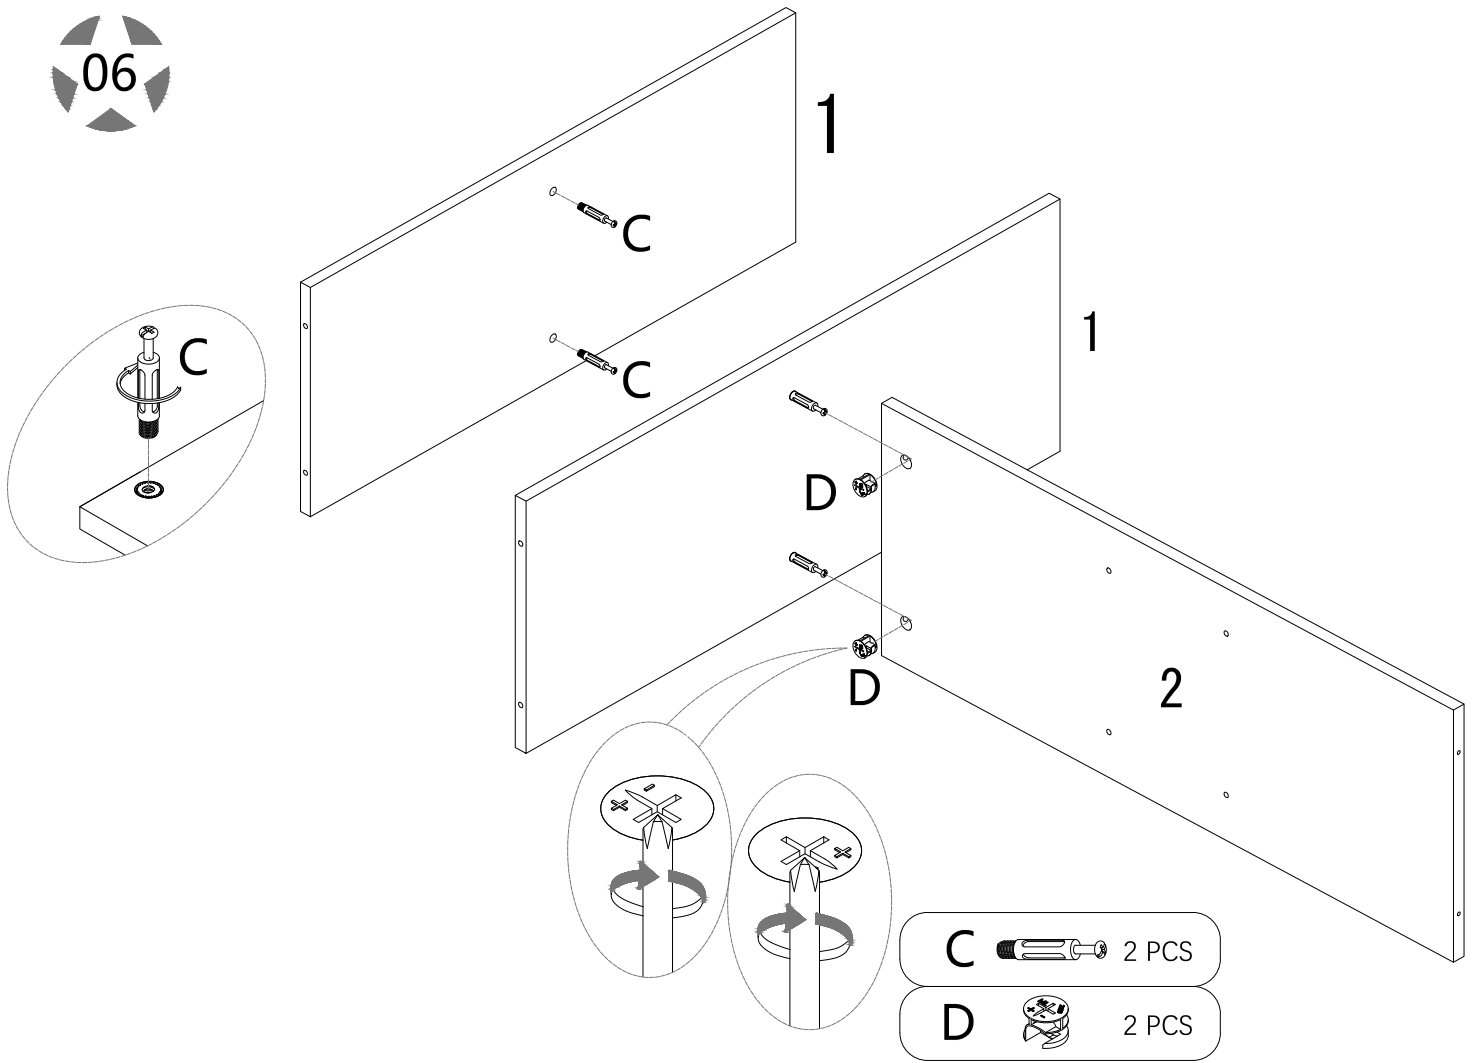


07

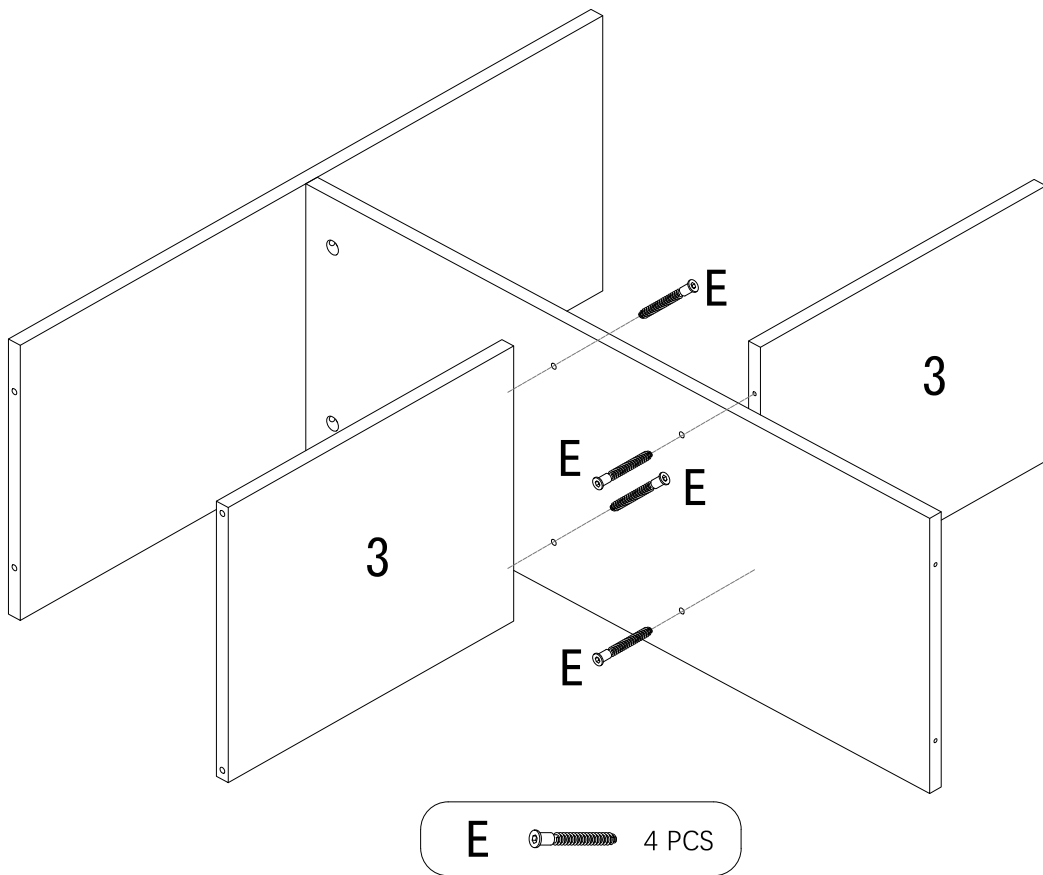


10

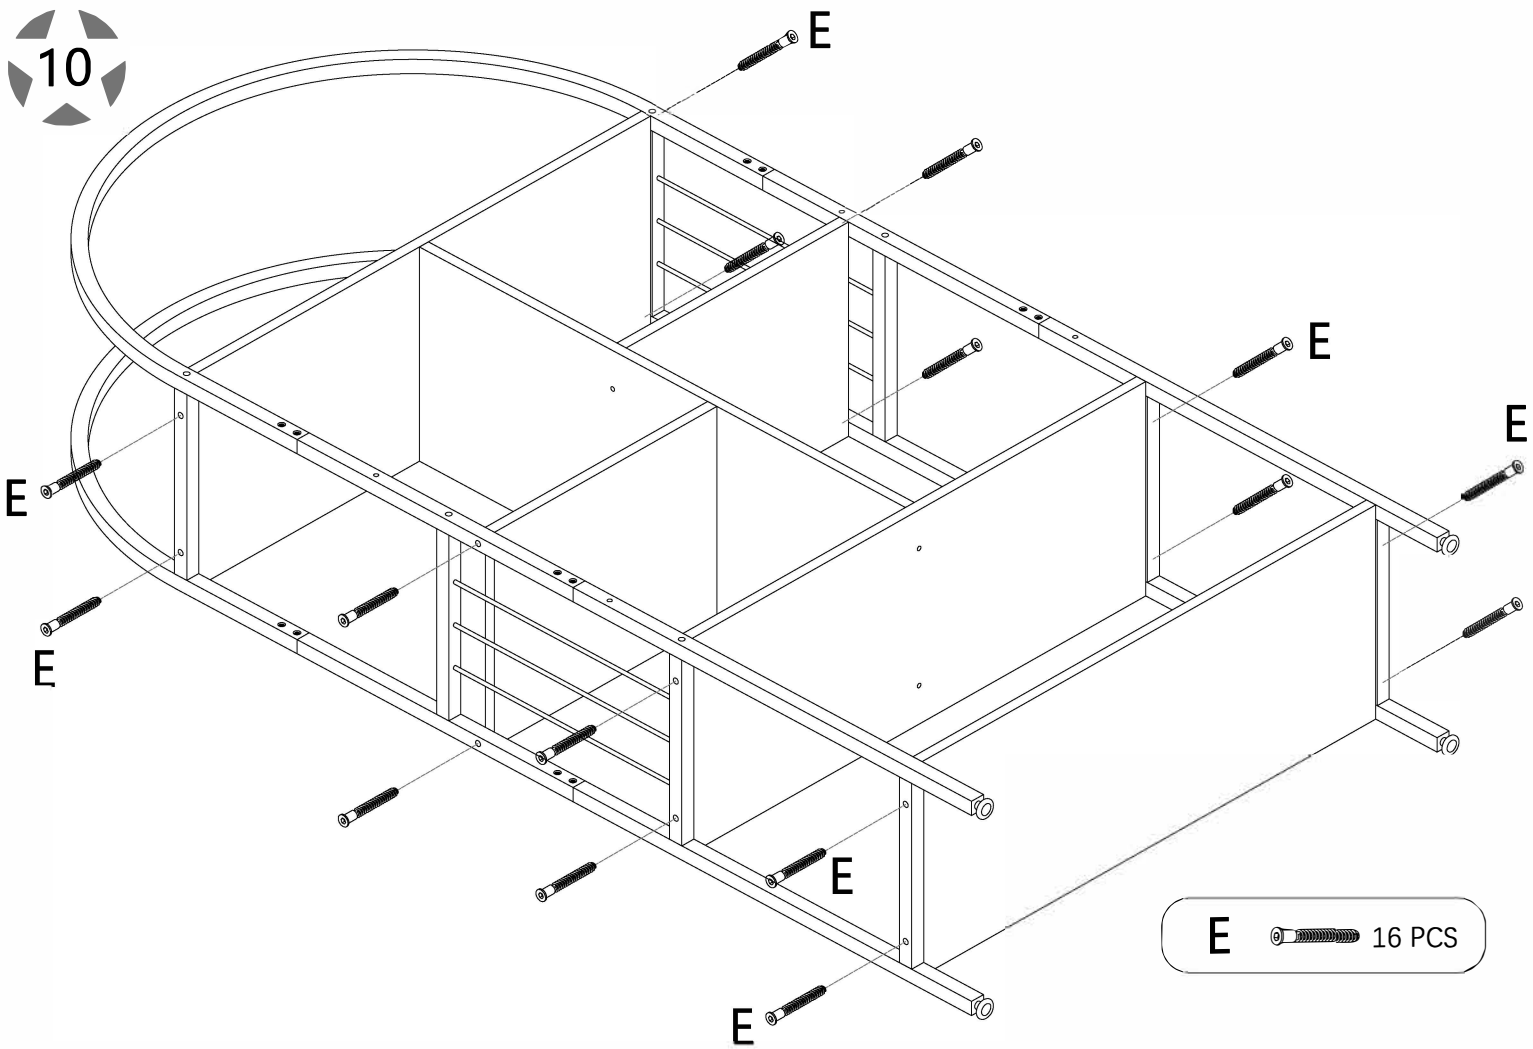



11

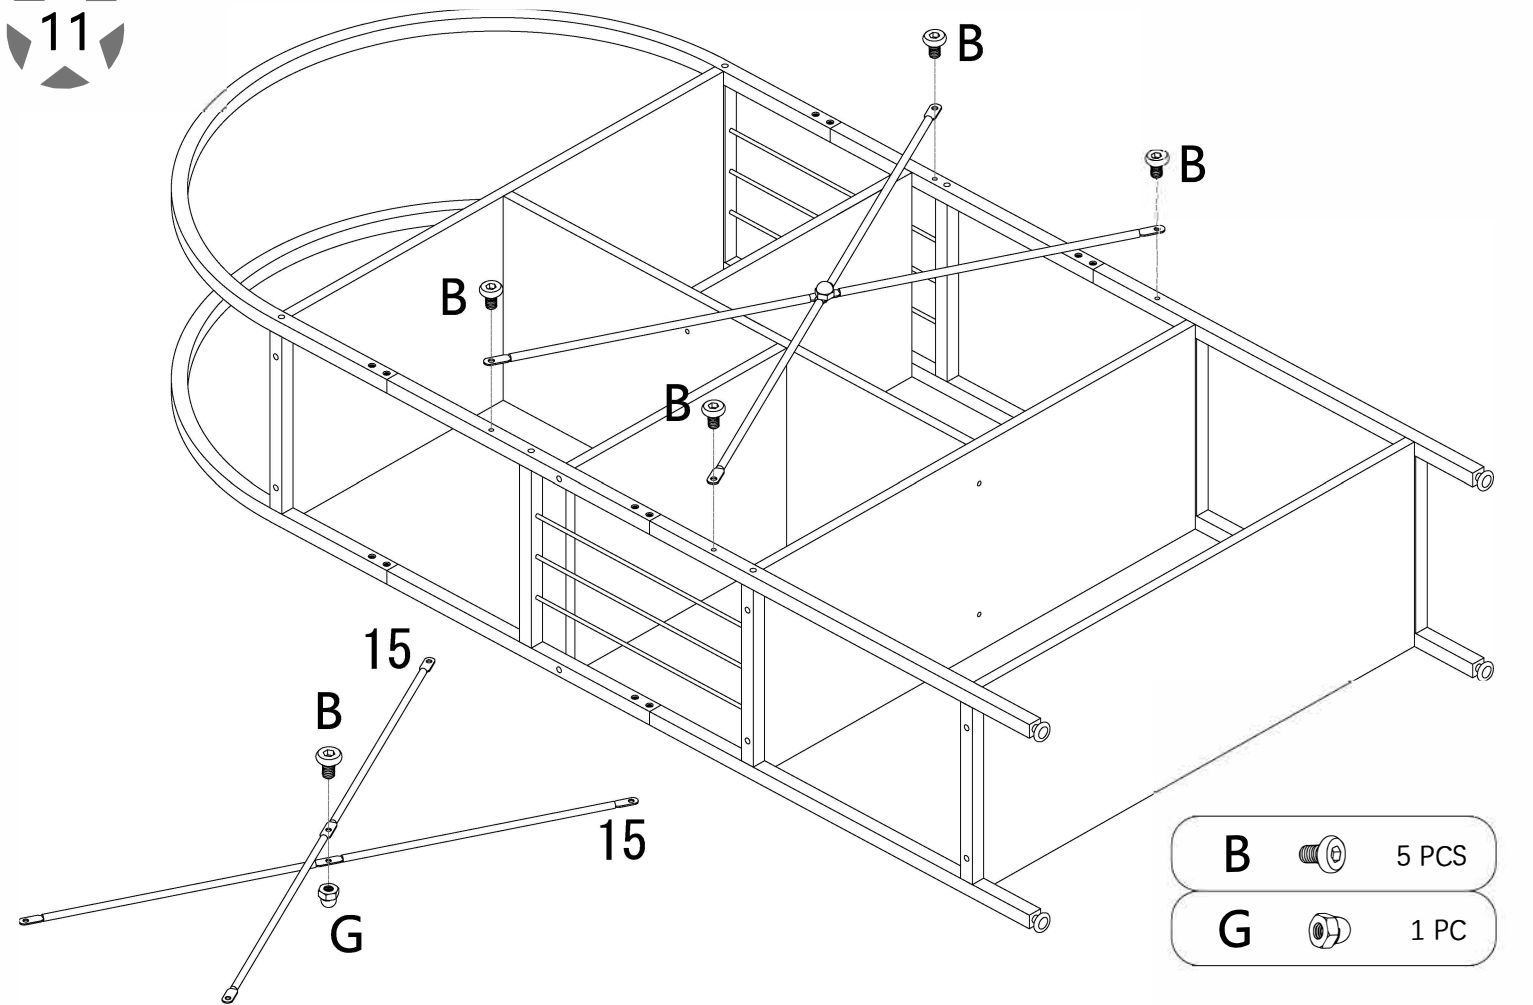

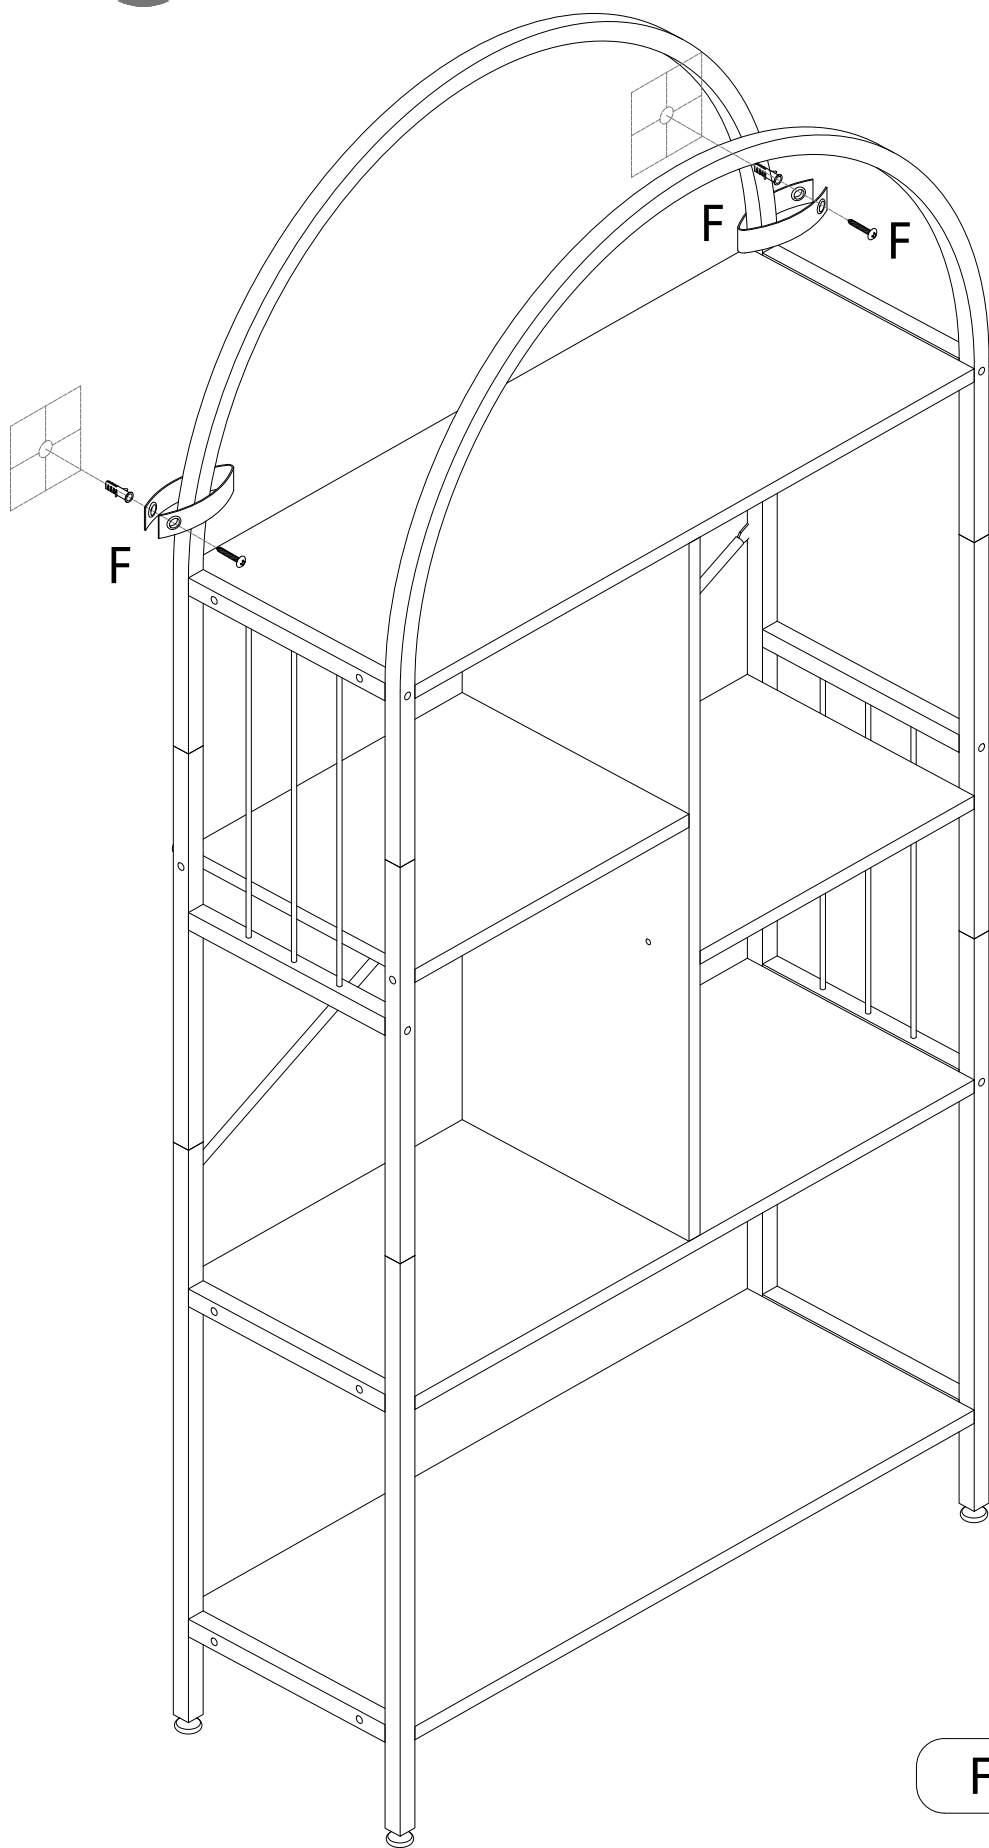

Attention: For safety and stability, we suggest you have to secure the anti-tip accessories to the wall to prevent tipping, injury, and property damage.

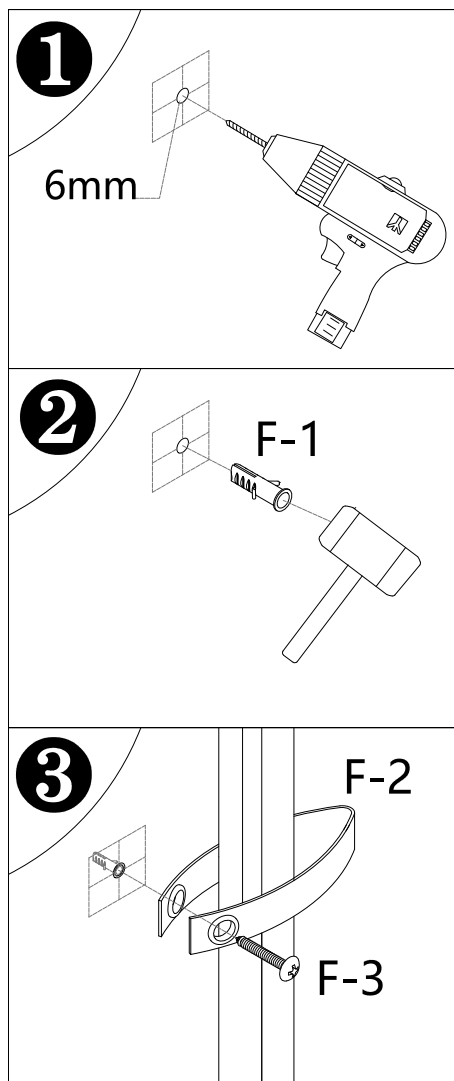

F  2 PCS

Installatio Completed