Cloud Modular Couch
Installation Guide

READ THIS FIRST Your sofa ships in multiple boxes.
Here's how to assemble it easily.



The quantity of products you obtain from purchase is subject to your order.

72-Hour Cushion Recovery

GIVE YOUR CUSHIONS TIME TO EXPAND

Cushions are vacuum-packed for safe shipping.

Allow 24 – 72 hours to fully fluff.



Normal during recovery:

- Minor fabric wrinkles
- Initial firmness
- Slightly flat cushions
- Rounded corners settling

Help them fluff faster:

1. Remove all compression packaging
2. Pat and fluff cushions thoroughly
3. Let sit in a ventilated room
4. Re-fluff back pillows daily

Contact us if:

- Cushions don't expand after 72 hours
- Covers or cushions are damaged
- Any parts are missing


We're here to help you enjoy your new sofa.
Thank you for your patience while your cushions expand to their full comfort.


WHAT’S IN YOUR BOXES

Accessories List

Please confirm the set you purchased. The list below shows the components included with each module.


RS Right Arm Seat

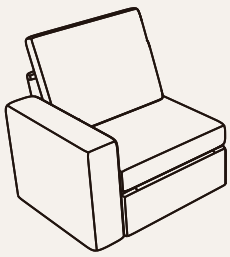

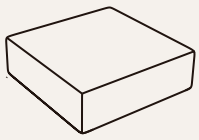


SF

Upholstered Seat Frame × 1

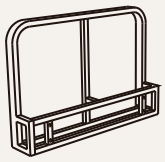


AF

Right Armrest Frame × 1

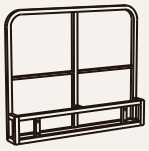

BF

Backrest Frame × 1

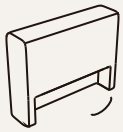

A

Upholstered Armrest Foam × 1




B

Upholstered Backrest Foam × 1



C

Seat Cushion Foam Insert × 1



D

Seat Cushion Cover × 1



E

Back Cushion Foam Insert × 1



F

Back Cushion Cover × 1



L

Spring Washers X10



G

Flat Washer × 10



H

Screws × 10



I

Allen wrench × 1



J

Leg × 4





K

U-Shaped Connector × 2

STEP-BY-STEP ASSEMBLY INSTRUCTIONS


LS Left Arm Seat

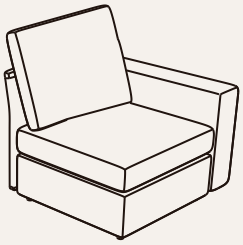

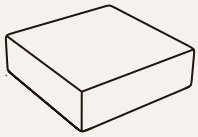


SF

Upholstered Seat Frame
× 1

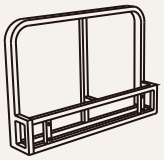

AF

Left Armrest Frame
× 1

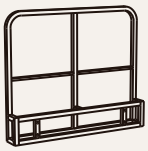

BF

Backrest Frame
× 1



A

Upholstered
Armrest Foam
× 1




B

Upholstered
Backrest Foam
× 1



C

Seat Cushion
Foam Insert
× 1



D

Seat Cushion
Cover × 1



E

Back Cushion
Foam Insert
× 1



F

Back Cushion
Cover
× 1



G

Flat Washer
× 10



H

Screws
× 10



I

Allen
wrench × 1



J

Leg × 4



K

U-Shaped
Connector
× 2





L

Spring
Washers
X10

STEP-BY-STEP ASSEMBLY INSTRUCTIONS


MS Middle Section

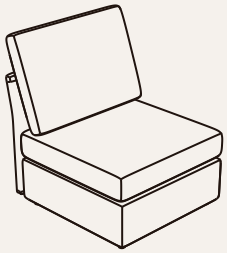

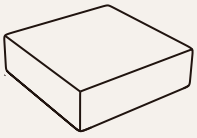

SF

Upholstered Seat Frame
× 1

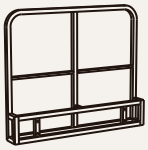

BF

Backrest Frame
× 1




B

Upholstered
Backrest Foam
× 1



C

Seat Cushion
Foam Insert
× 1



D

Seat Cushion
Cover × 1



E

Back Cushion
Foam Insert
× 1



F

Back Cushion
Cover
× 1



G

Flat Washer
× 6



H

Screws
× 6



I

Allen
wrench × 1



J

Leg × 4



K


U-Shaped
Connector
× 2




L

Spring
Washers
X6

OT Ottoman

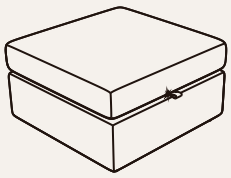

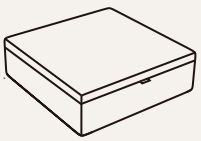


SF

Upholstered Seat Frame
× 1



M

Seat Cushion
Foam Insert
× 1

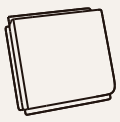

Z

Seat Cushion
Cover × 1





J

Leg × 4

STEP-BY-STEP ASSEMBLY INSTRUCTIONS


CS Corner Seat

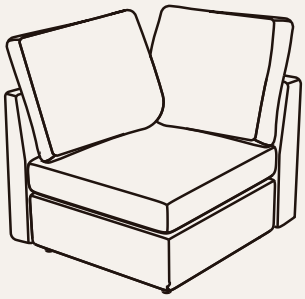

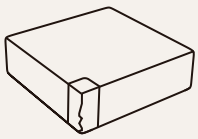


SF

Upholstered Seat Frame
× 1

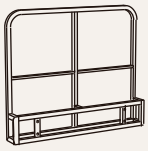


BF

Left
Backrest Frame
× 1

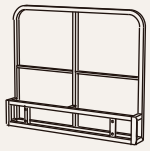


BF

Right
Backrest Frame
× 1

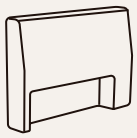

C1-F

Corner Back
Frame Foam
× 1

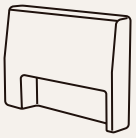


C2-F

Corner Back
Frame Foam
× 1



C1-B

Corner Backt
Cushion Cover
× 1



C2-B

Corner Backt
Cushion Cover
× 1




C1-I

Corner Backt
Cushion Insert
× 1




C2-I

Corner Backt
Cushion Insert
× 1



CS-X

Corner Seat
Cushion Insert
x 1

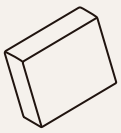

CS-Z

Corner Seat
Cushion Cover
x 1



G

Flat Washer
× 10



H

Screws
× 10



I

Allen
wrench × 1



J

Leg × 4



K

U-Shaped
Connector
× 2





L

Spring
Washers
X10

Let's Start Assembling the Left-Arm Seat, Right-Arm Seat, and Middle Seat

1 Steps

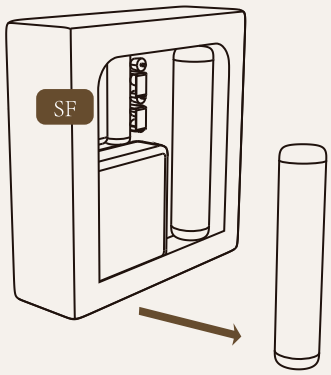

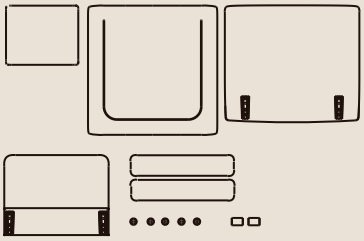


Check all components against the Accessories List before continuing.

Unzip the bottom of each Upholstered Seat Frame (SF), then remove the included hardware and accessories.

2


Install the legs(J) on each Upholstered Seat Frame (SF), including the Middle Seat and Ottoman.

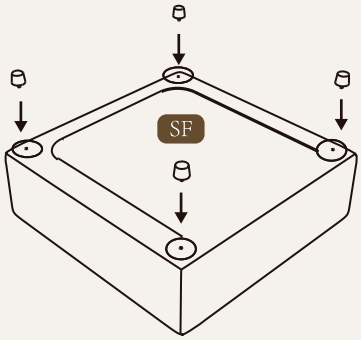

Turn each leg clockwise until it is secure.



Nice work. All legs are now installed, including the Middle Seat and Ottoman legs.

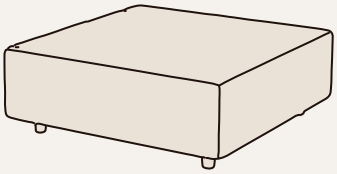


3

Attach the Backrest Frame (BF) and Armrest Frame (AF) to the Upholstered Seat Frame (SF).


Turn the upholstered seat frame (SF) on its side. This will make installation easier.


Tip: 4 screws + 4 flat washers +4 Spring Washers per AF / per BF.

(there are ten screws, eight of them are actually used)

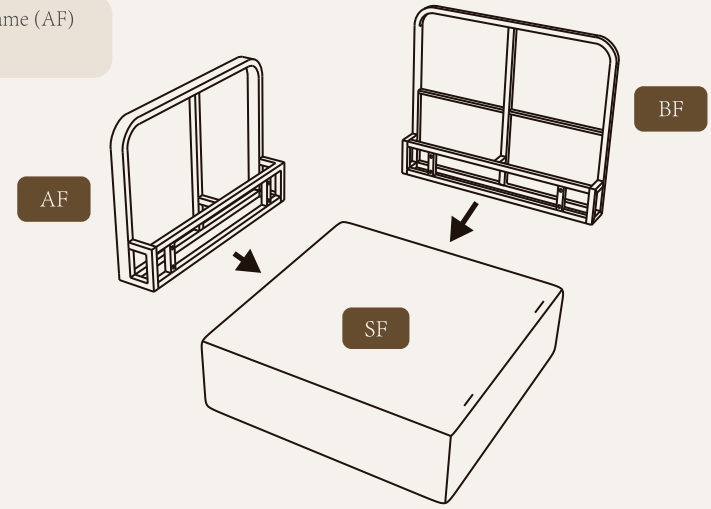

Important: Fasten screws from the inner side of the seat frame.

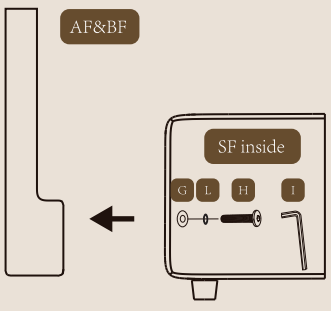

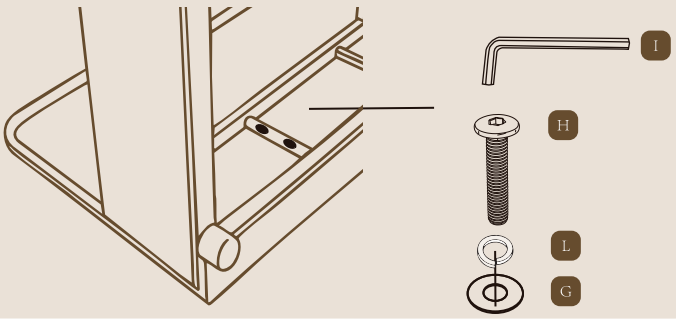


STEP-BY-STEP ASSEMBLY INSTRUCTIONS

4

Backrest and Armrest Frames Installed
- Fits Left and Right Arm Seats

Tip: The Middle Seat does not use an Armrest Frame (AF). Install only the Backrest Frame (BF).

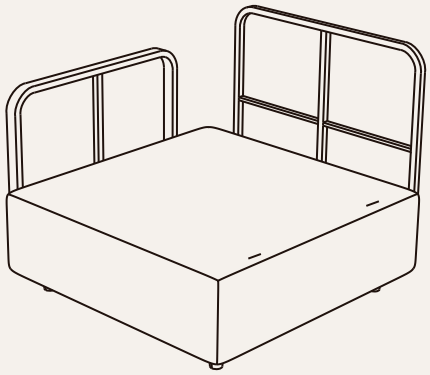


5


Install the Upholstered Armrest Foam (A).


Don't worry. Compressed foam may take up to 72 hours to fully expand after unpacking.

A

Remove the Upholstered Armrest Foam (A) and let it expand naturally.

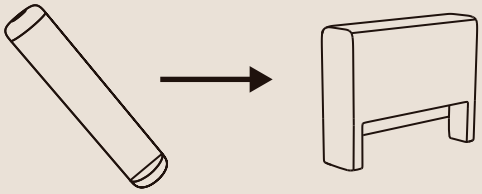

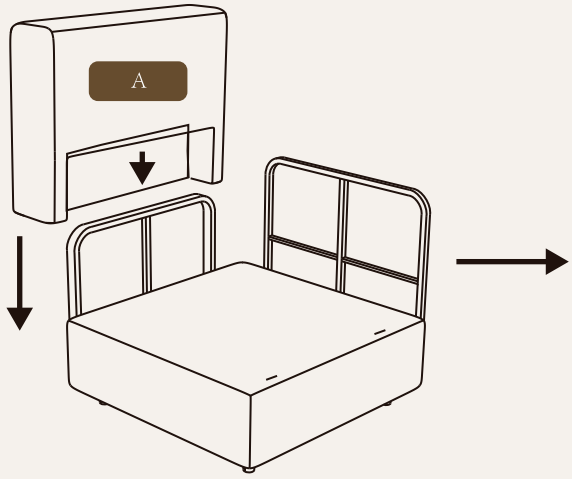

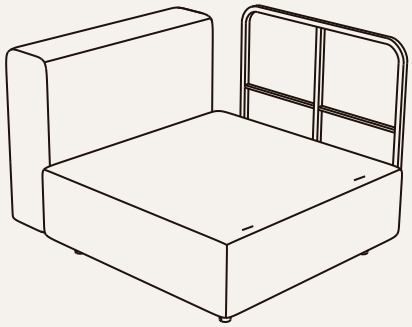


Once the Armrest Foam (A) has expanded, fit it over the Armrest Frame (AF).


6

Install the Upholstered Backrest Foam (B).


B

Remove the Upholstered Backrest Foam (B) and let it expand naturally.

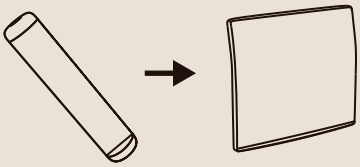

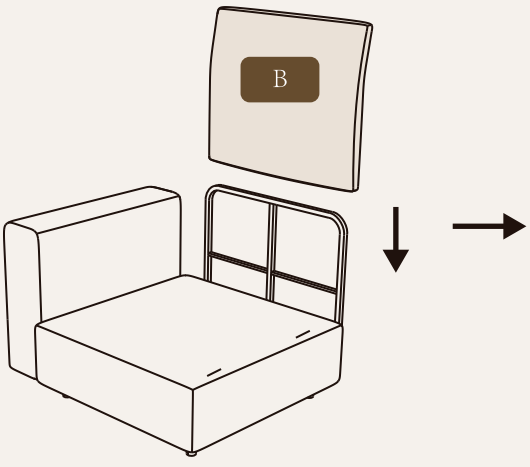


Once the Backrest Foam (B) has expanded, fit it over the Backrest Frame (BF).

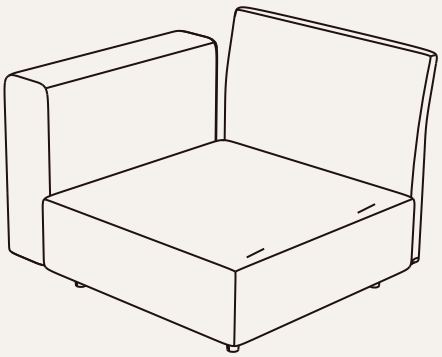


STEP-BY-STEP ASSEMBLY INSTRUCTIONS

7 Repeat Steps 2-6 to assemble the remaining Arm Seat and Middle Seat units.

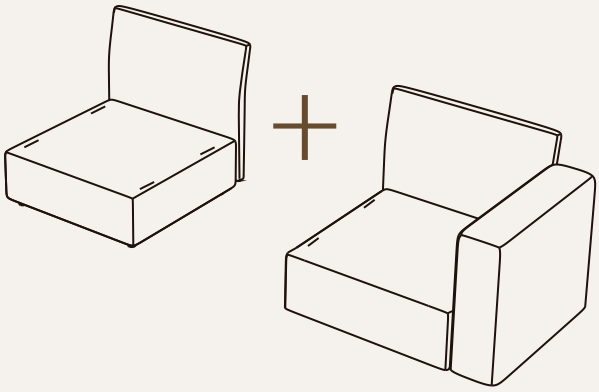

8 Connect the Seat Frame Units.

Align the seat frames and press them firmly together for a stable fit. Nice work - the main couch shape is coming together.

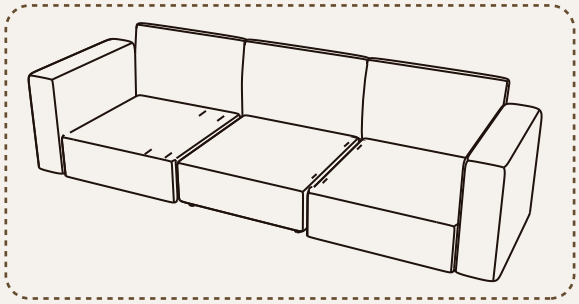


9 Secure the Seat Frame Units with U-Shaped Connectors (K).



K


Take out U-Shaped Connectors (K).

Use all U-Shaped Connectors (K).

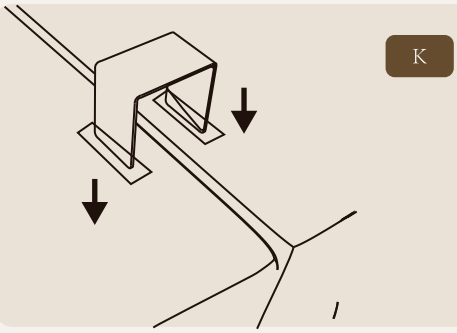


Align each U-Shaped Connector (K) as shown, then insert it into the holes on the seat frames.

Tip: If the holes are covered by fabric, use the diagram to locate them and press gently to fit the connector. If you need help, contact customer support.

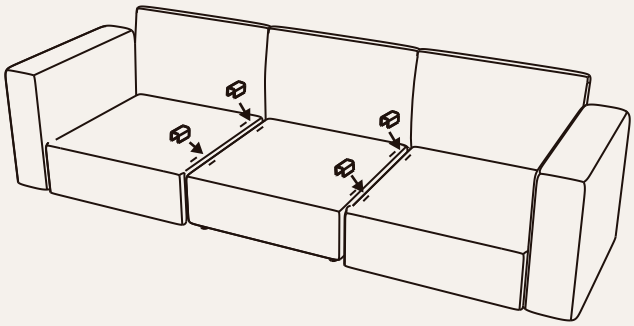


10 Prepare the Seat and Back Cushions, including the Middle Seat and Ottoman cushions.

C

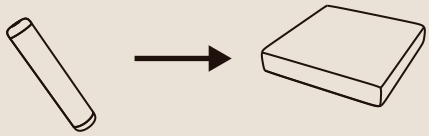

E

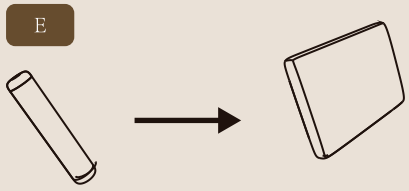


Remove the Seat Cushion Foam Insert (C) and Back Cushion Foam Insert (E), then let them expand naturally.

Gently pat the foam several times to help it regain its shape.


Each cushion has a sewn-in label. Please match each label with its corresponding part and follow the guide for assembly.


11 Install the Seat and Back Cushions, including the Middle Seat cushions.

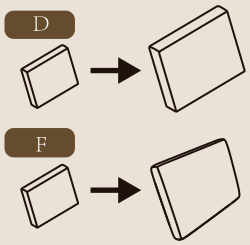


Take out the Seat Cushion Cover (D) and Back Cushion Cover (F).

Unzip the Cushion Covers (D/F), then insert the matching Foam Inserts (C/E).

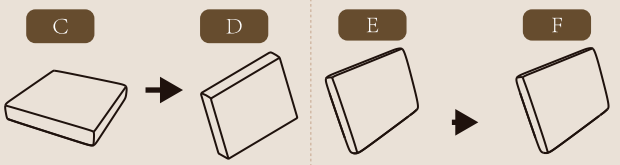

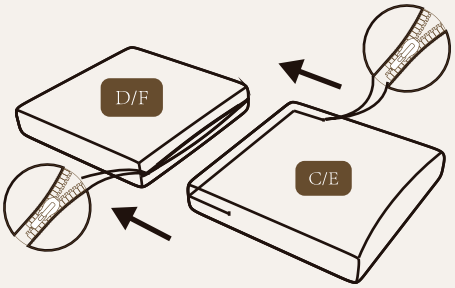


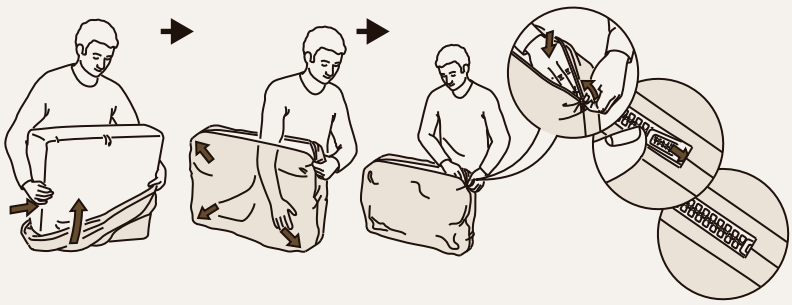

Notice:


To insert the Cushion Foam Inserts (C/E), simply match the sewn label on the foam with the sewn label on the Cushion Cover (D/F) before pushing it inside.
Tip: Gently pat and adjust the foam for an easier fit.

12 3-Seater Fully Assembled

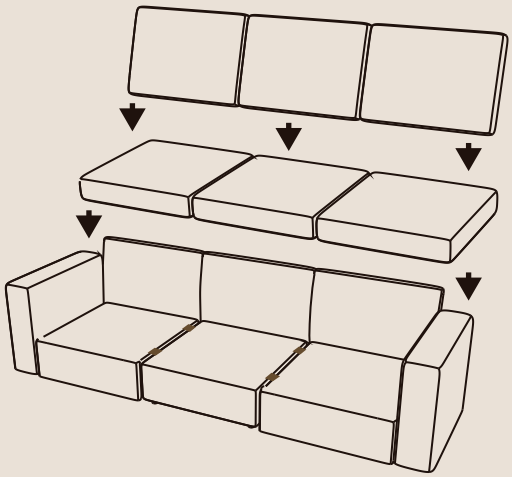

Place the Seat and Back Cushions on the couch, including the Middle Seat cushions.


Great job - your 3-Seater couch is assembled. If you have a larger modular set, repeat the Middle Seat steps as needed. If you need help, customer support is here for you.

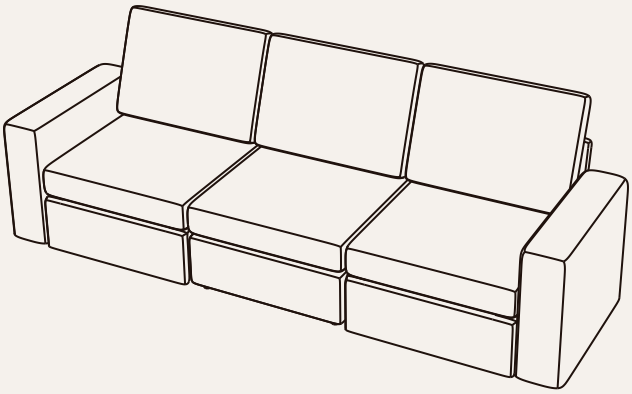


If you purchased a corner seat or ottoman, please continue reading below.

Let's Start Assembling the Storage Ottoman


Tip: If your set includes an ottoman, follow Steps 13-16 below.

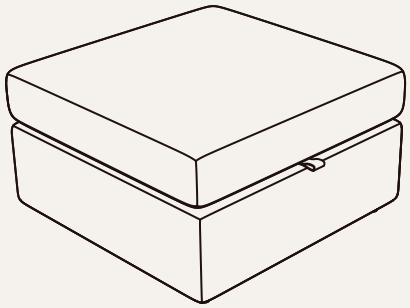

13 Unzip the Upholstered Seat Frame (SF), remove the required components, and check the quantity before continuing.

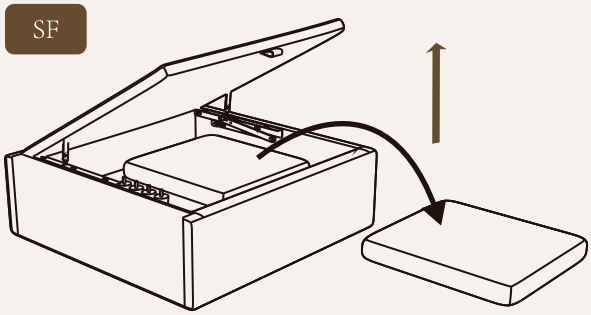

14 Repeat Step 2 to install the ottoman legs.

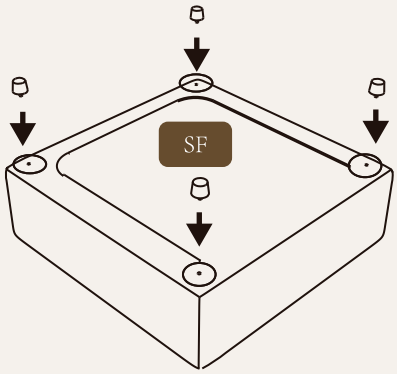

15 Install the Ottoman Seat Cushion.




M Seat Cushion Foam Insert × 1


Z Seat Cushion Cover × 1

Take out the Seat Cushion Foam Insert (M) and Seat Cushion Cover (Z).


Lay the Seat Cushion Cover (z) flat on a clean surface with the opening facing up.

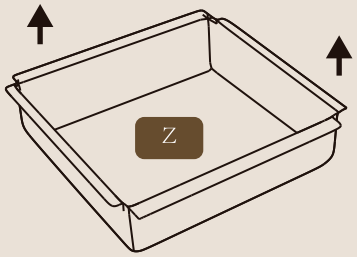


Insert the Seat Cushion Foam Insert (M) into the Seat Cushion Cover (Z).

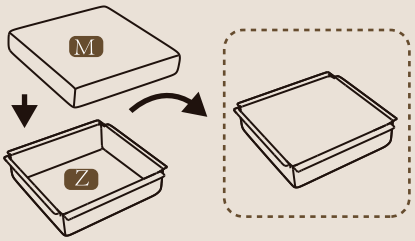

Place the assembled cushion on top of the Upholstered Seat Frame (SF).

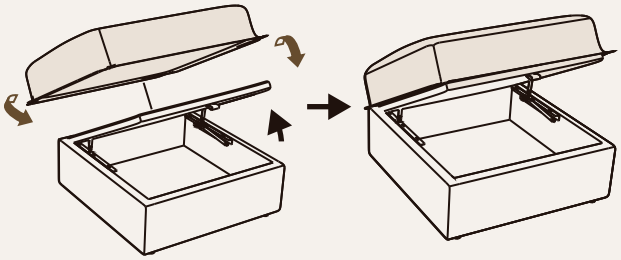


16 Secure the cover to the ottoman frame using the hook-and-loop fastener.

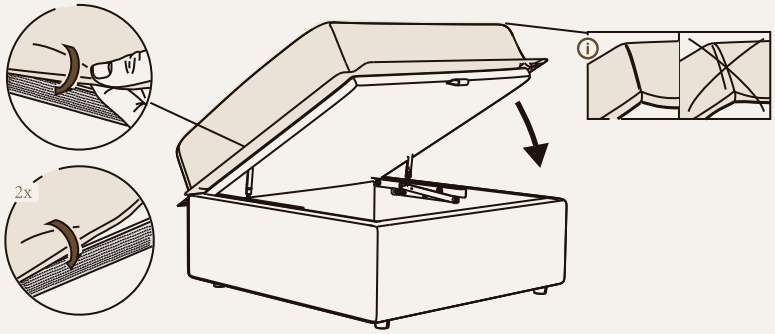


Ottoman Fully Assembled


If your order includes multiple ottomans, repeat Steps 13-16 for each ottoman.

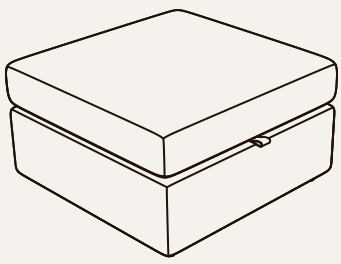

Let's Start Assembling the Corner Seat

1 Steps

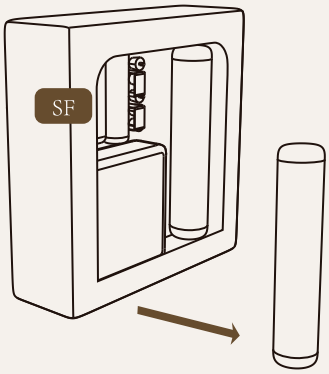

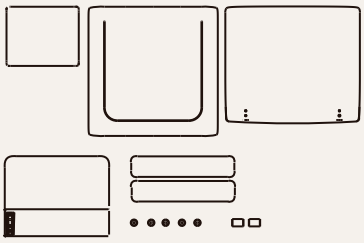


Check all components against the Accessories List before continuing.

Unzip the bottom of each Upholstered Seat Frame (SF), then remove the included hardware and accessories.


2


Install the legs(J) on each Upholstered Seat Frame (SF)

Nice work. All legs are now installed.

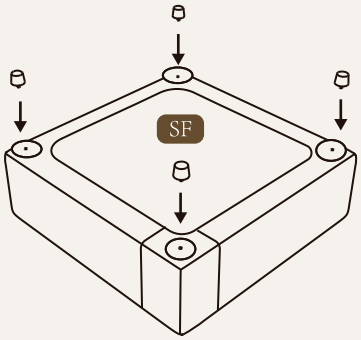

Turn each leg clockwise until it is secure.

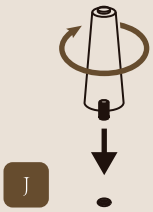

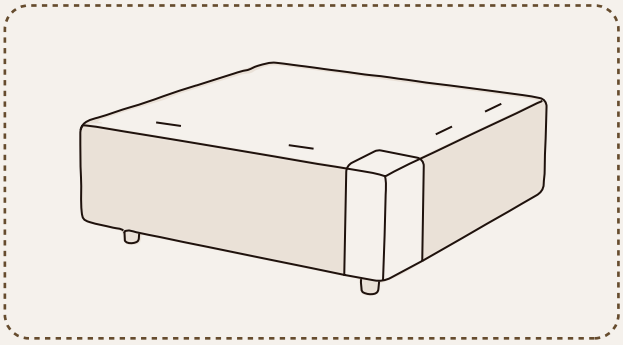


3

Attach the Backrest Frame (BF) and Backrest Frame (BF) to the Upholstered Seat Frame (SF).


Turn the Upholstered Seat Frame (SF) upside down. Align the Backrest Frame


Tip: 4 screws + 4 flat washers per AF / per BF.

(there are ten screws, eight of them are actually used)

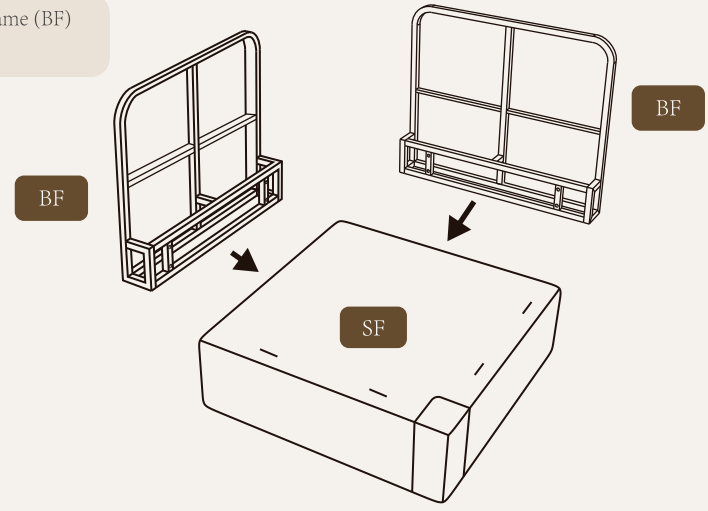


Important: Fasten screws from the inner side of the seat frame.

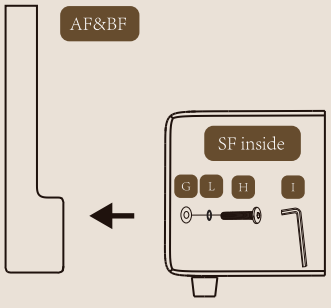

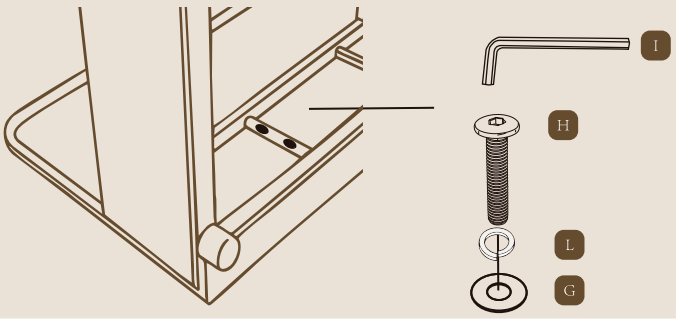

4


Great job! You' ve completed the frame assembly for the corner seat.

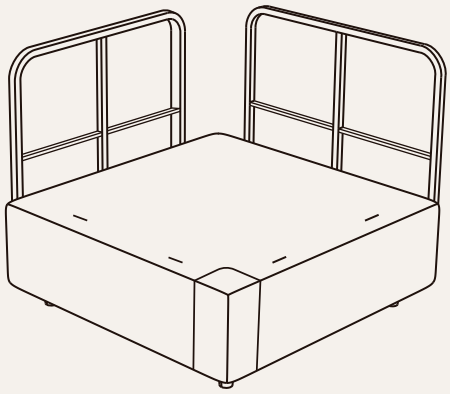

5


Install the Upholstered back Foam (C1-F).


Don't worry. Compressed foam may take up to 72 hours to fully expand after unpacking.

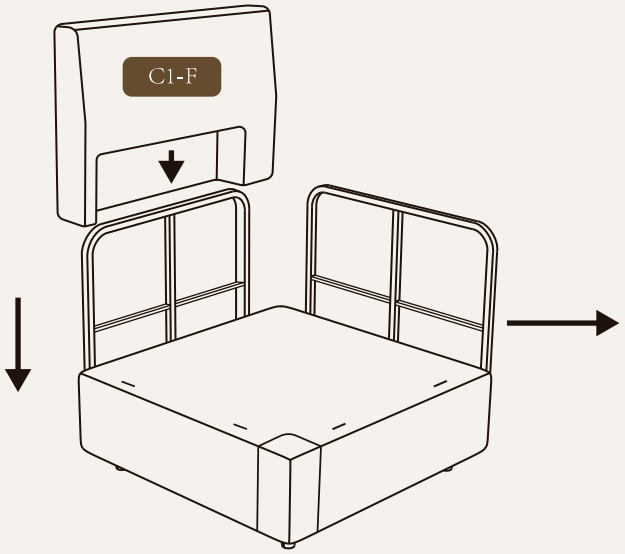

C1-F

Remove the Upholstered Armrest Foam (C1-F) and let it expand naturally.

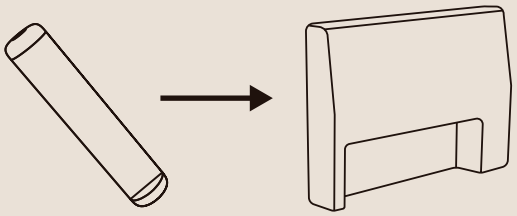


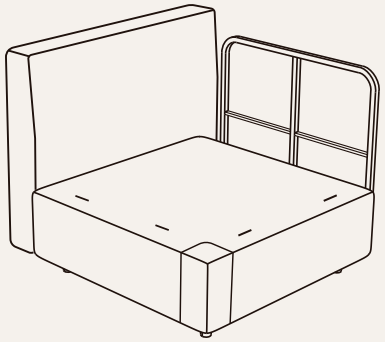

Once the Armrest Foam (C1-F) has expanded, fit it over the Armrest Frame (AF).


6

Install the Upholstered Backrest Foam (CF-2).

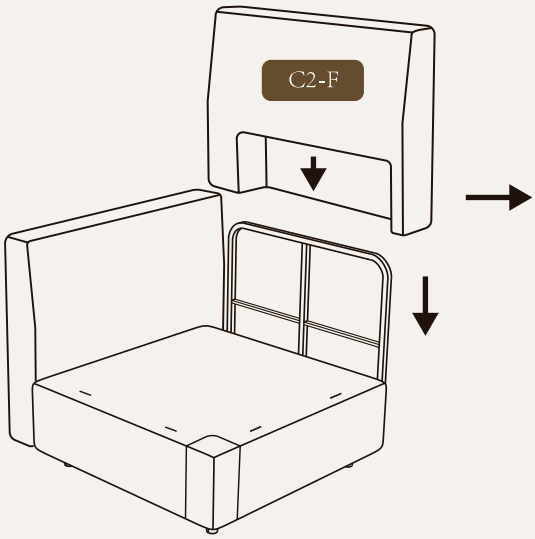


C2-F

Remove the Upholstered Backrest Foam (C2-F) and let it expand naturally.

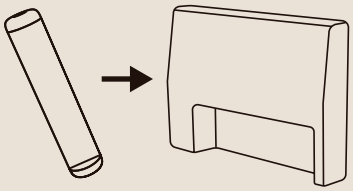


Once the Backrest Foam (C2-F) has expanded, fit it over the Backrest Frame (BF).

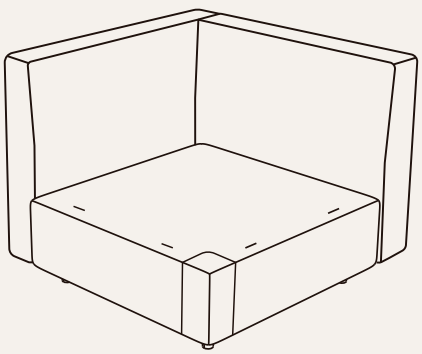

STEP-BY-STEP ASSEMBLY INSTRUCTIONS

7

Seat Cushion Assembly Guide, Applies to regular seat cushions and corner seat cushions.

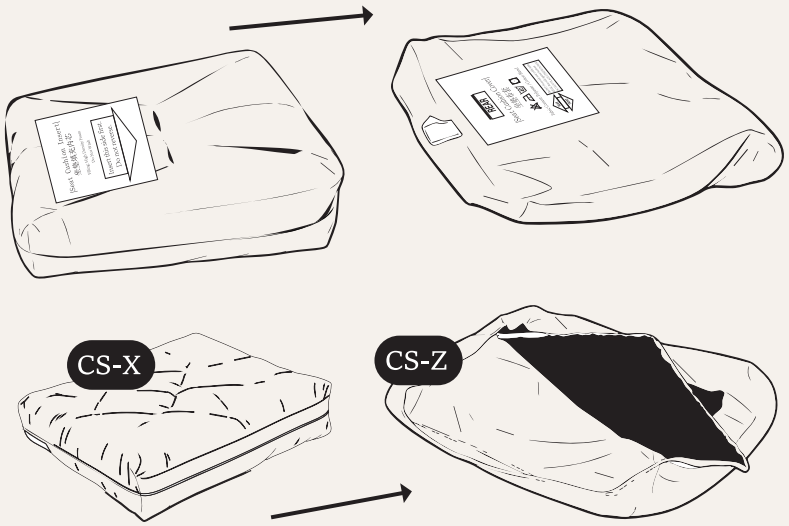

Step 1

Take out the seat cushion cover and seat cushion insert. Check the labels inside the cover and on the insert to make sure they match.

For a corner seat cushion, make sure the label matches the corner cushion part to avoid mixing it with a regular seat cushion.

Step 2

Following the arrow direction on the label, insert the seat cushion insert into the cover from the indicated side.

Pay attention to the cushion direction, especially for the corner seat cushion. Make sure it is positioned correctly before continuing.

Step 3

After inserting, adjust the four corners and edges so the insert fits properly inside the cover. Gently pat and press the cushion so the filling is evenly positioned and the cushion looks smooth and full. Your seat cushion is now ready.

8

Corner Back Pillow Assembly Guide

The corner seat includes two different back pillow types. Match each insert with the correct cover by label before assembly.

Step 1

C1-I back pillow insert matches with C1-B cover

C2-I back pillow insert matches with C2-B cover

Step 2


Following the arrow direction on the label, insert the C1-I back pillow insert into the C1-B cover, and insert the C2-I back pillow insert into the C2-B cover.

Do not mix the two back pillow types.

Step 3


After inserting, adjust the corners and edges of both back pillows so the inserts fit properly inside the covers. Gently pat and massage them until the filling is evenly distributed and the pillows look full and fluffy.



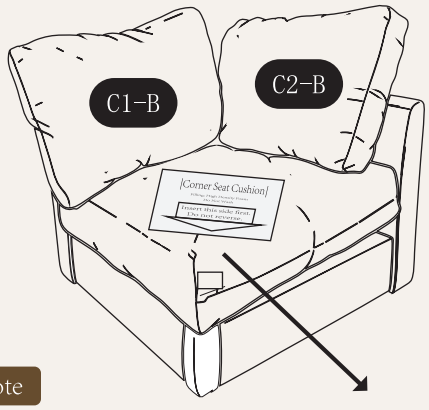

Note

The thicker end of the seat cushion should face toward the coffee table, and the thinner end should face toward the backrest, as shown.

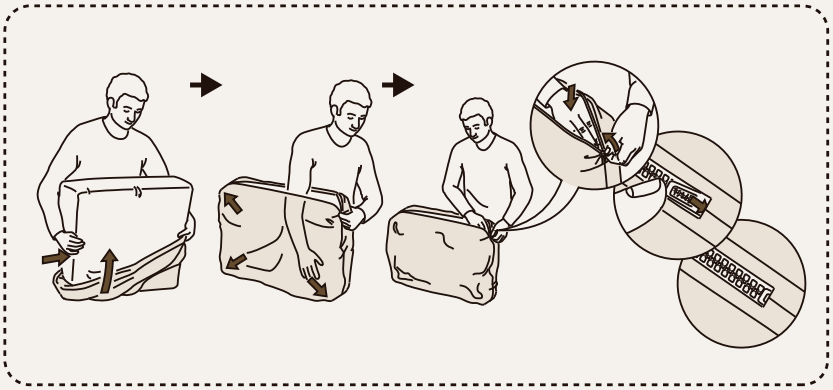



When facing the sofa, part C1 should be on your left-hand side, and part C2 should be on your right-hand side, as shown.

Label Matching Tip

Each removable cushion or pillow includes a sewn-in part label. Please follow the instructions on the labels to match and place each piece correctly.

Properly matching and placing the cushions will make your sofa more comfortable and help it look smoother and more polished.

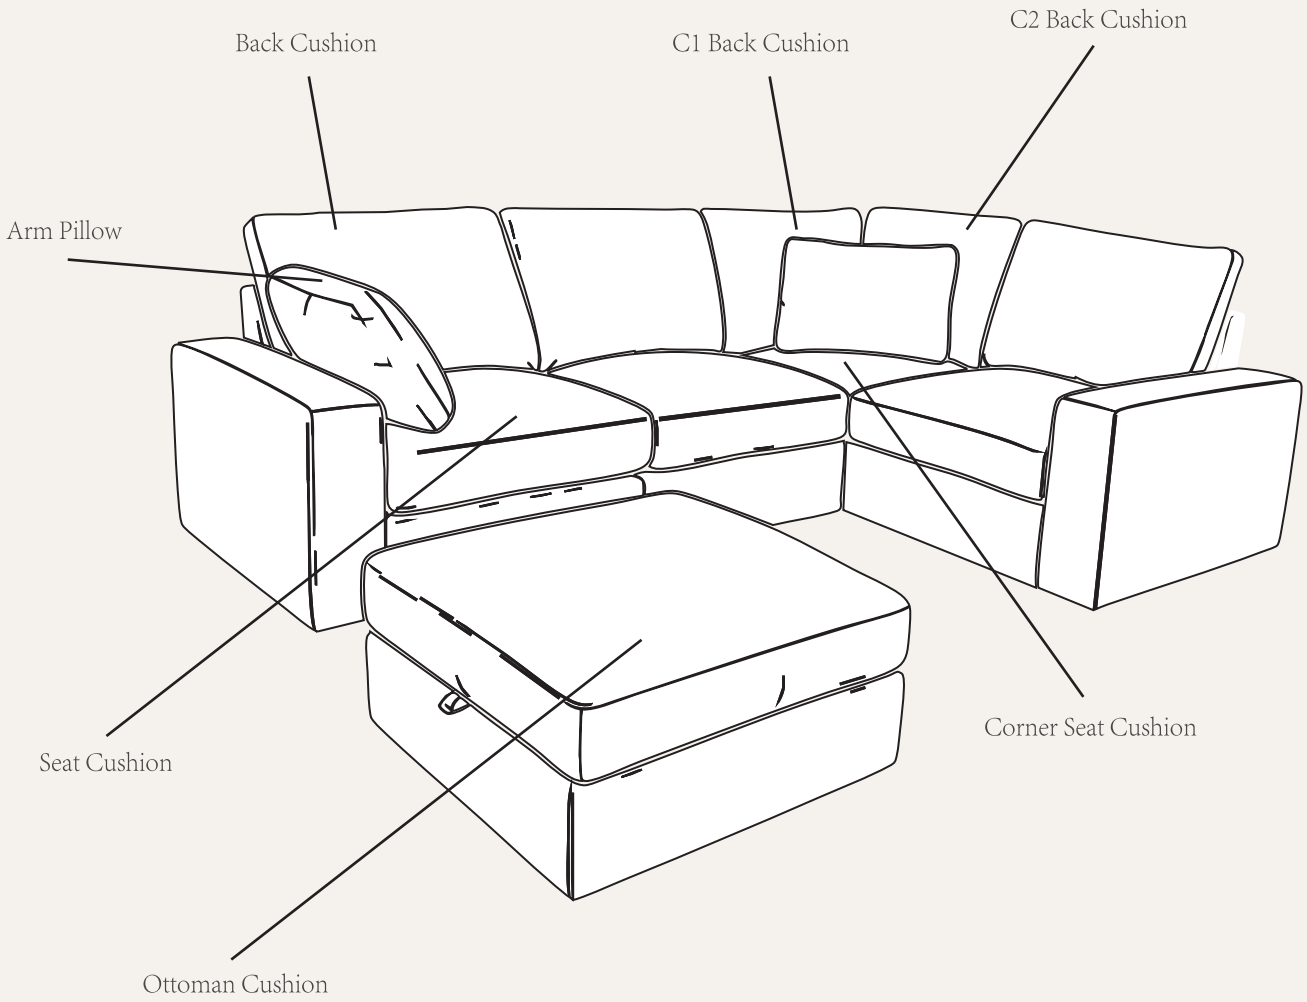

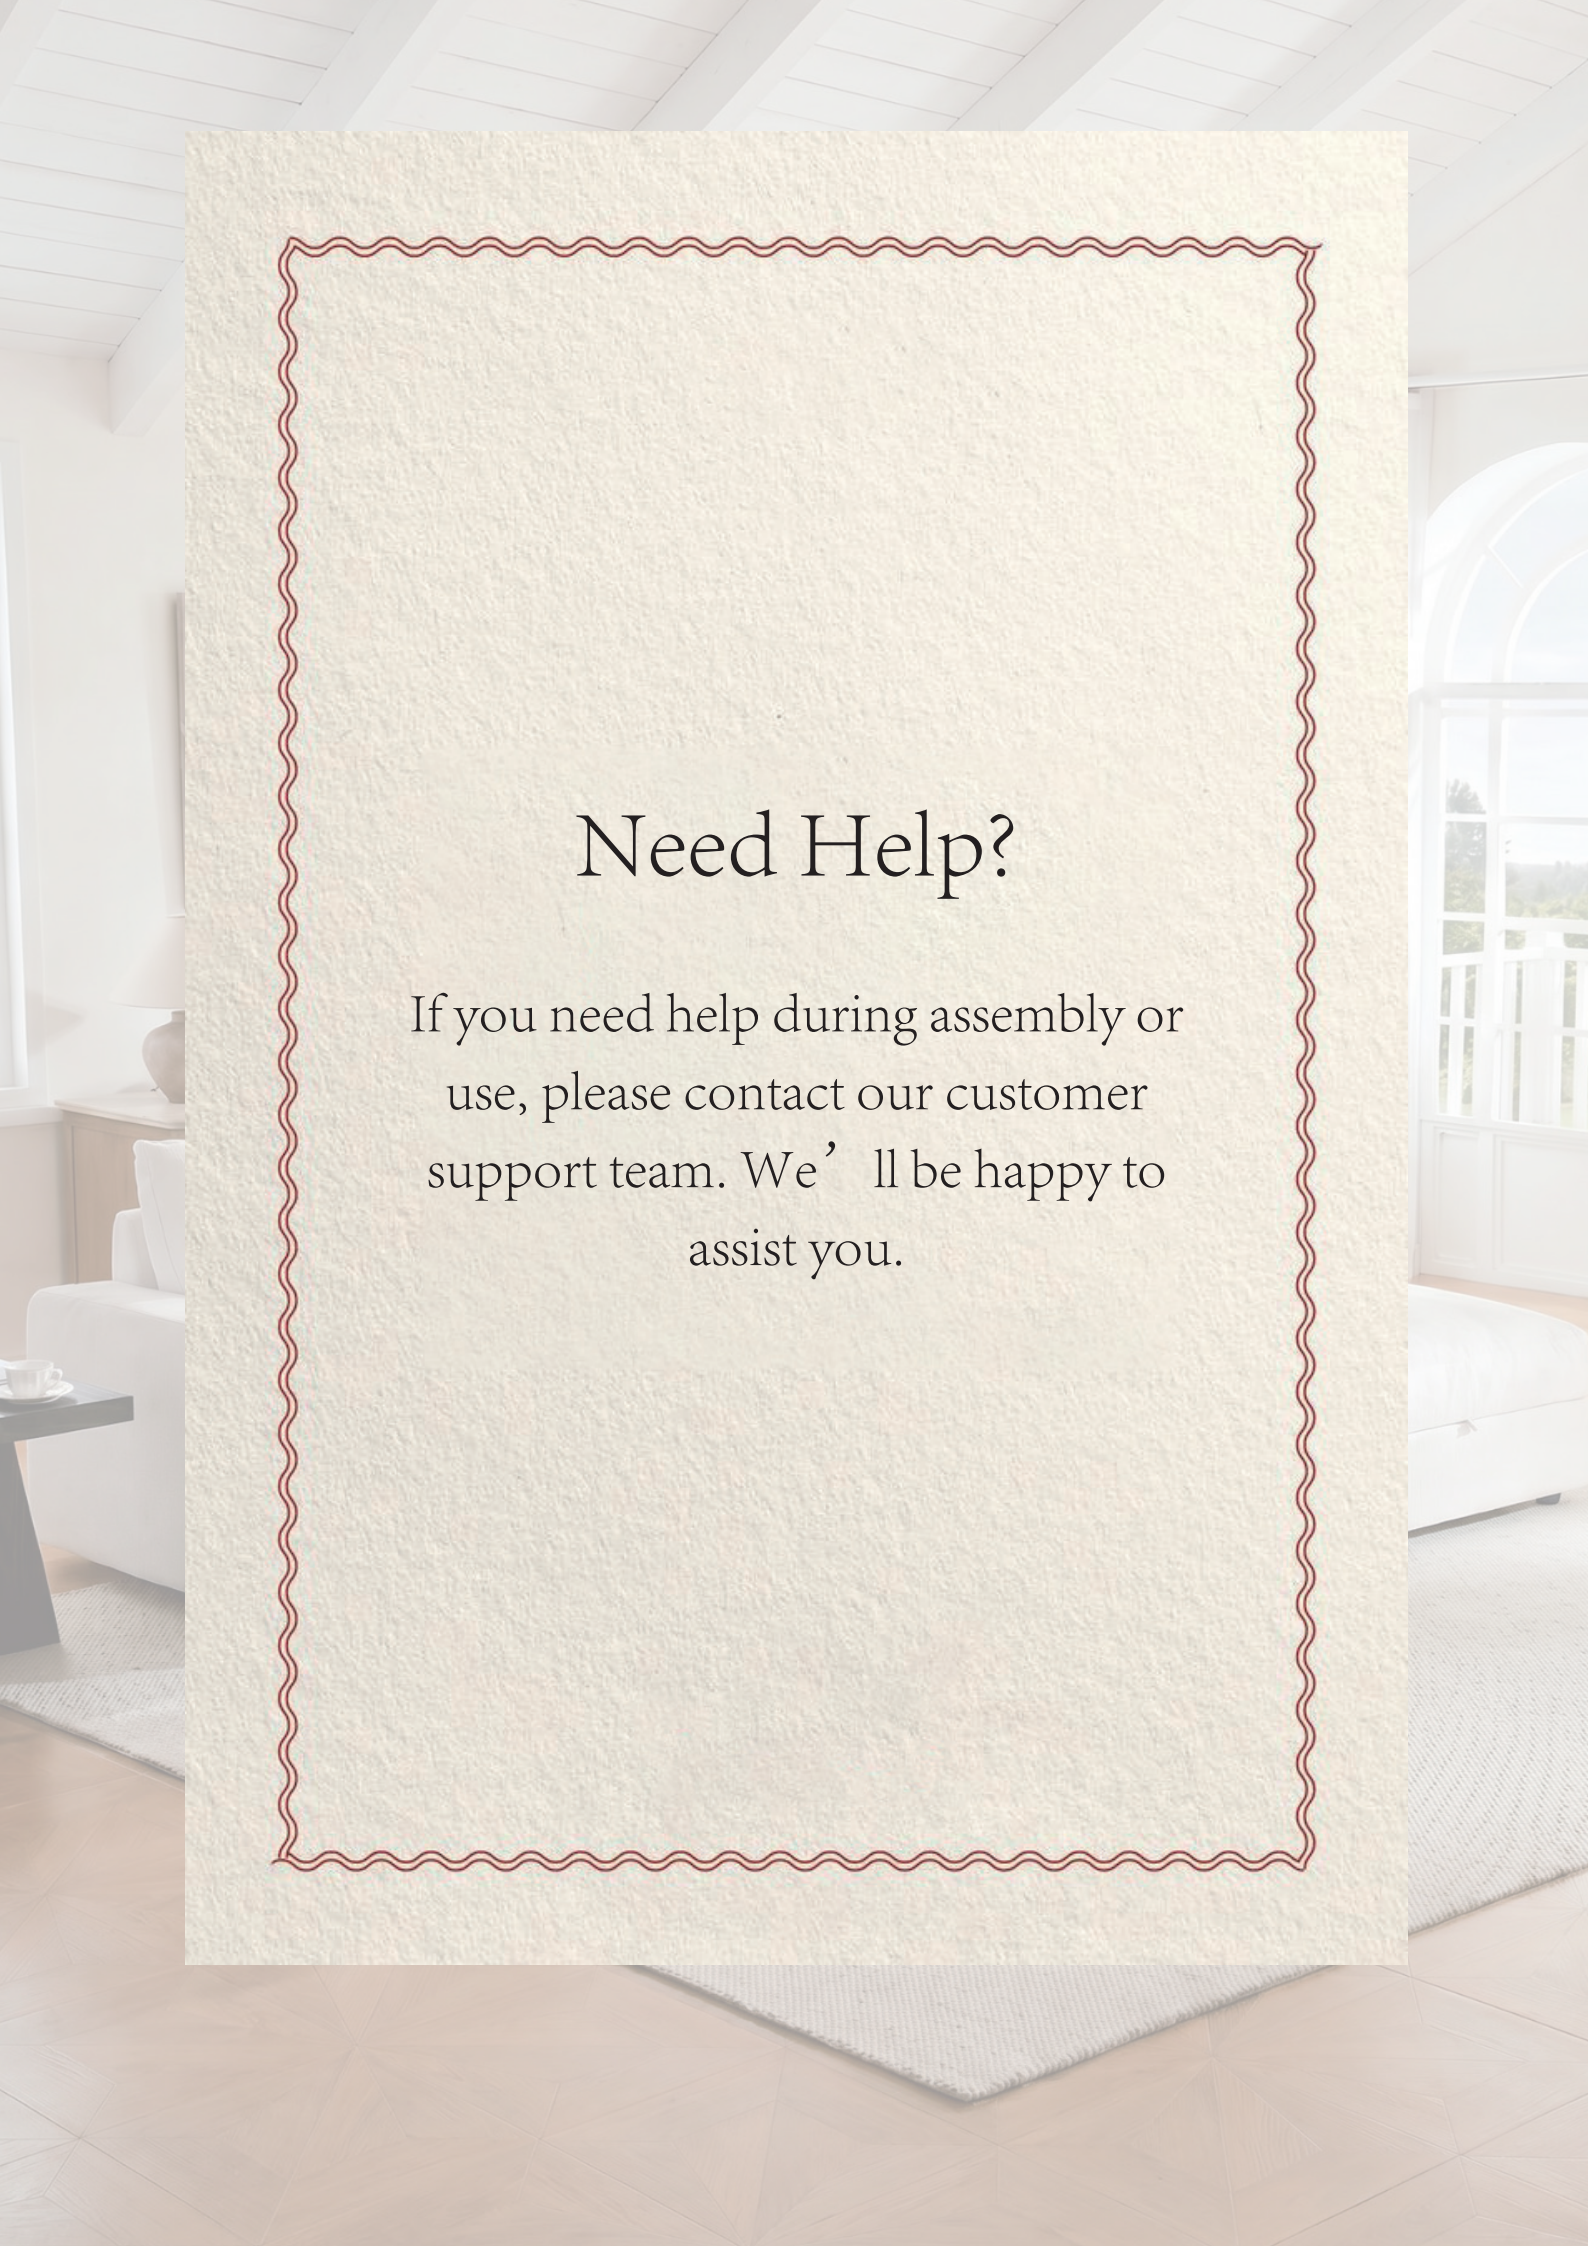

Need Help?

If you need help during assembly or use, please contact our customer support team. We’ ll be happy to assist you.