


Desk

Assembly Instructions - Please keep for future reference

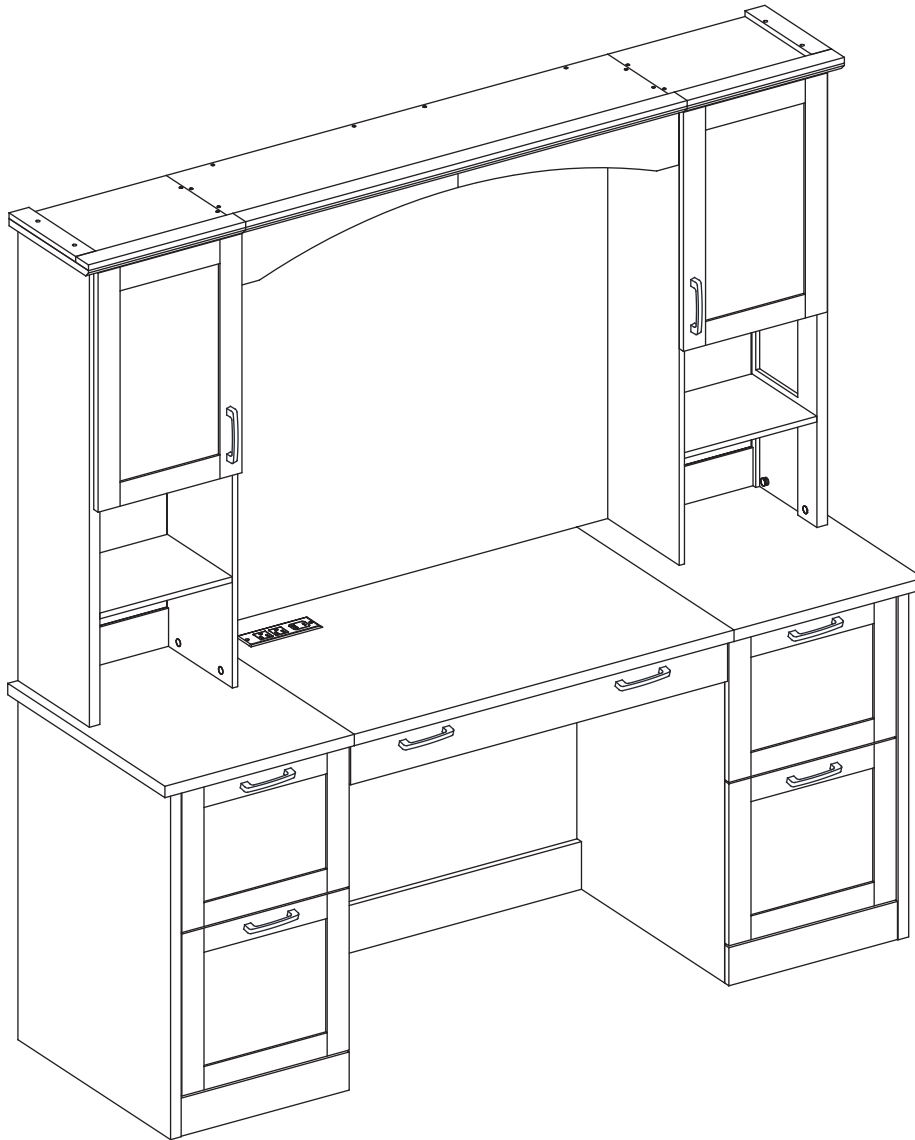

Dimensions

Width-67.4inch

Depth-21.65inch

Height-68.5inch



WARNING



This product is NOT a Clothing Storage Unit (CSU).
DO NOT use it for clothing storage.
Improper use may cause furniture tipover.

Important – Please read these instructions fully before starting assembly




Safety and Care Advice

Important – Please read these instructions fully before starting assembly

- Check you have all the components and tools listed on the following pages.
- Remove all fittings from the plastic bags and separate them into their groups.
- Keep children and animals away from the work area, small parts could choke if swallowed.
- Make sure you have enough space to layout the parts before starting.

- During assembly do not stand or put weight on the product, this could cause damage.
- Assemble the item as close to its final position (in the same room) as possible.
- Assemble on a soft level surface to avoid damaging the unit or your floor.
- Parts of the assembly will be easier with 2 people.

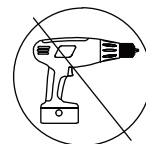

- To reduce the likelihood of damaging your product please ensure that your power drill is set on a low torque setting.

Care and maintenance

- Only clean using a damp cloth and mild detergent, do not use bleach or abrasive cleaners.
- From time to time check that there are no loose screws on this unit.
- This product should not be discarded with household waste. Take to your local authority waste disposal centre.

Handy Hints

- Assemble all parts and bolts loosely during assembly, only once the product is complete should you fully tighten the bolts
- Regularly check and ensure that all bolts and fittings are tightened properly.

WARNING
In order to help prevent overturning –
please follow these instructions

To help prevent product toppling over please follow the below steps:-

Use the anti tip stop or wall fixing method provided (if applicable)
Do not allow children to climb or hang on the furniture
Do not open more than one drawer at a time
Do not place heavy items in the top drawers
Do not place heavy items on top of the furniture, unless the furniture has been designed for this purpose


Using Camlocks

Step 1

Connect the male camlock as directed in the assembly instructions using a screwdriver.

1


DO NOT OVER TIGHTEN.
NE PAS SERRER EXCESSIVEMENT.

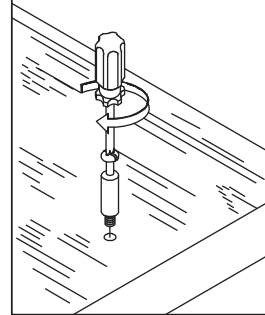

Step 2

Push the male camlock into the entry hole.

2

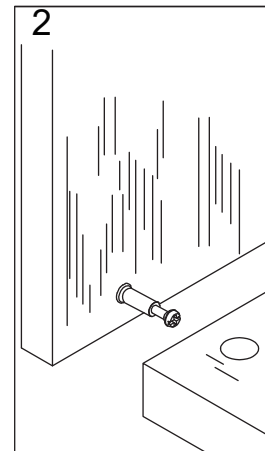


Step 3

Insert the female camlock as shown in the instruction.

Note: ensure that the arrow on the top of the camlock points towards the entry hole for the male camlock.

3

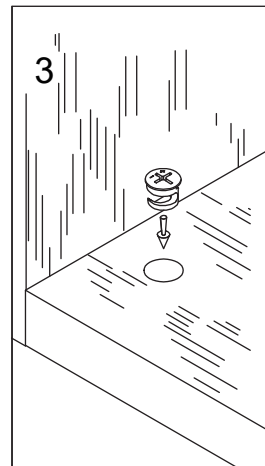


Step 4

Turn the female camlock clockwise with a screwdriver.


You should feel a click when the camlock is locked in place.

The joint is now secure.

4

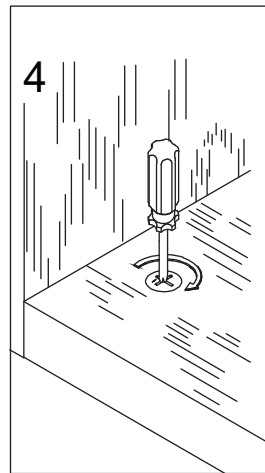













Assembly Instructions

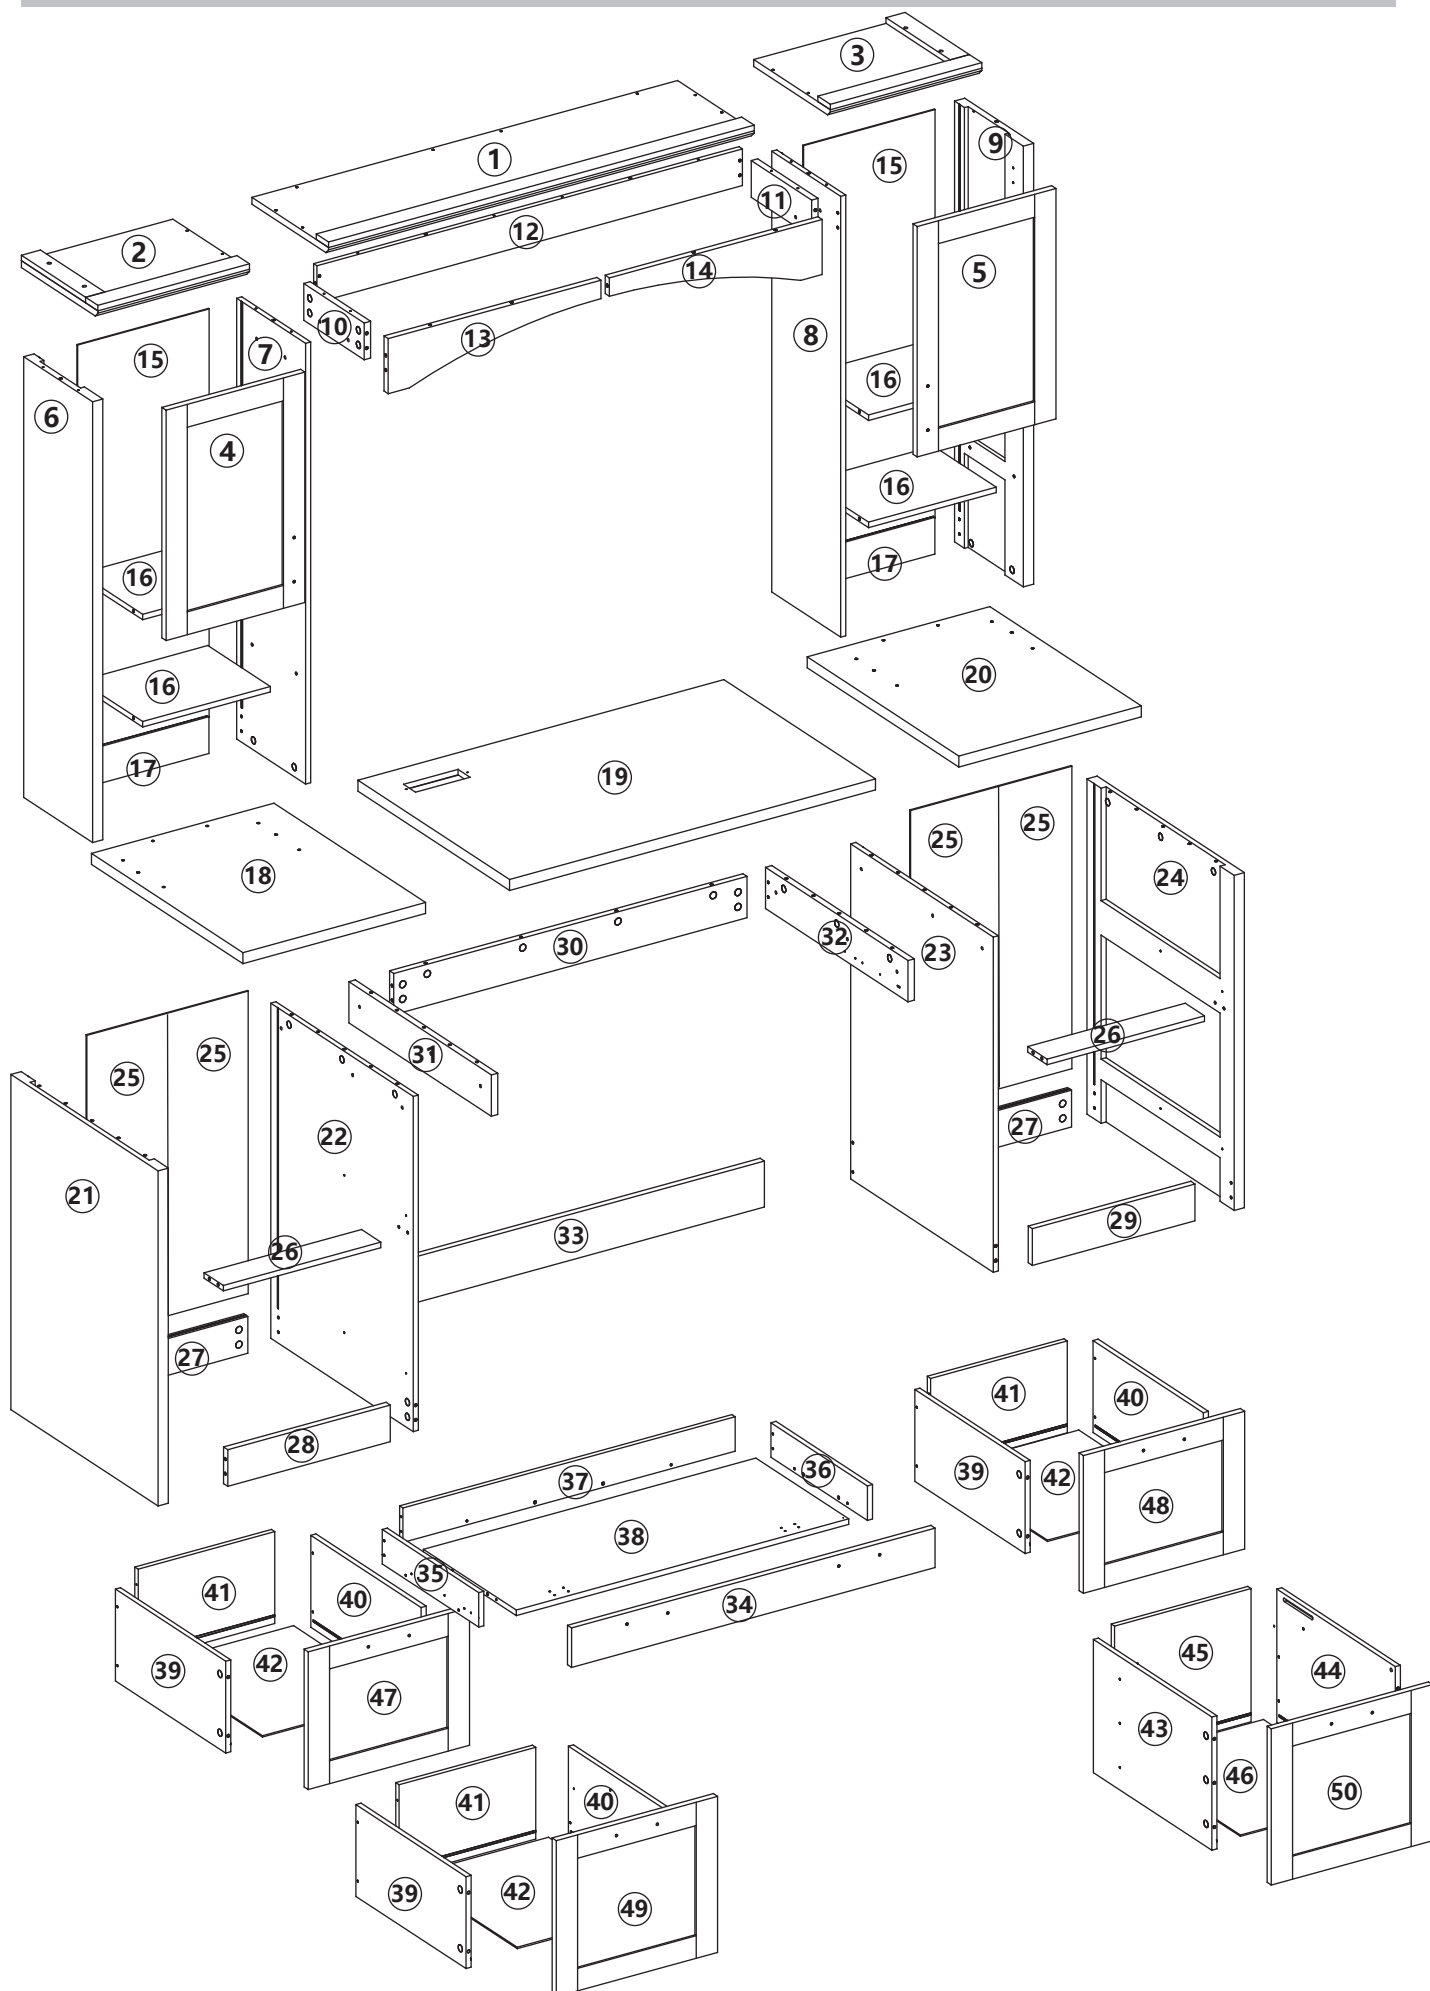

Assembly Instructions

There are 2 boxes of this product








































BOX-1: N721P473089

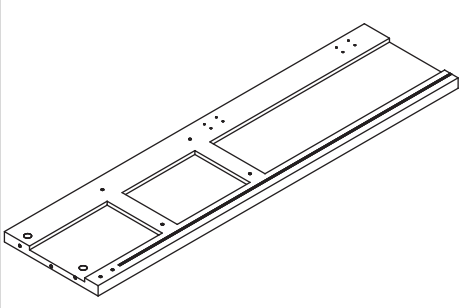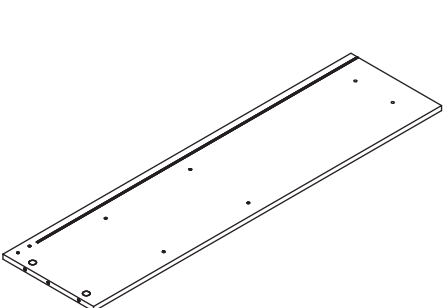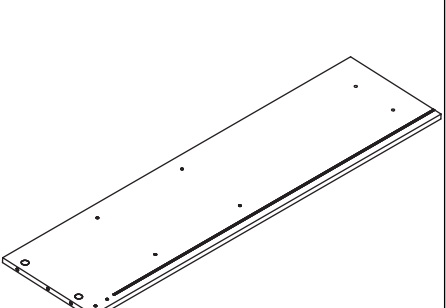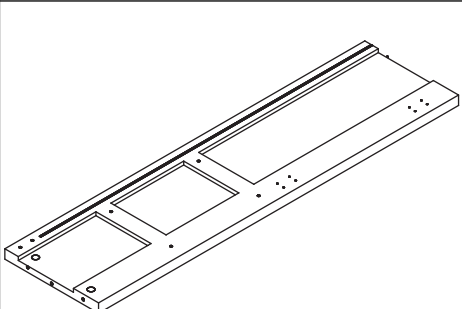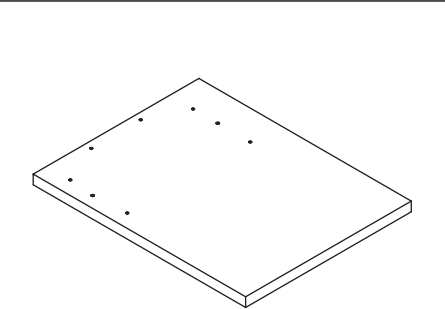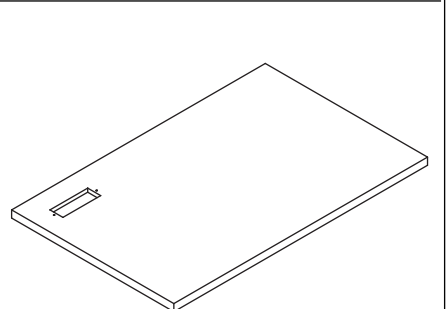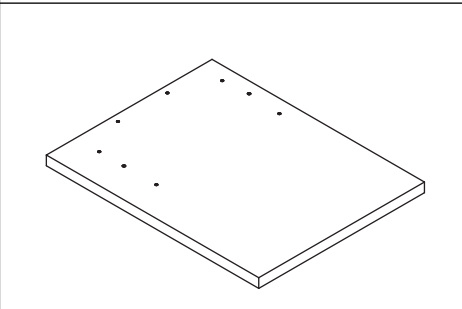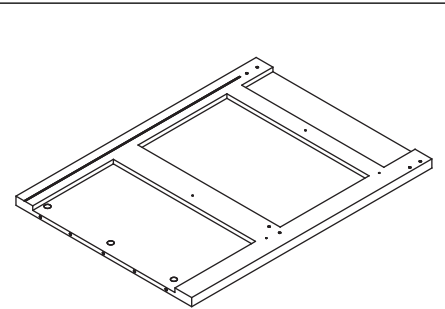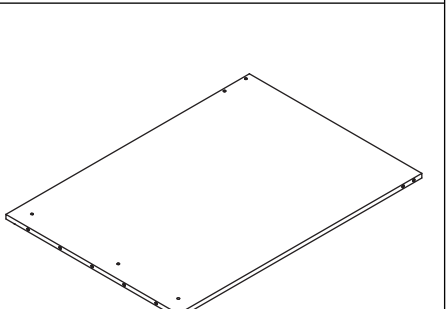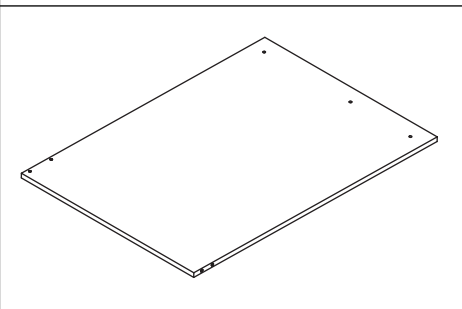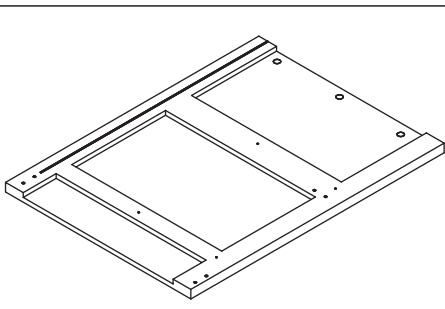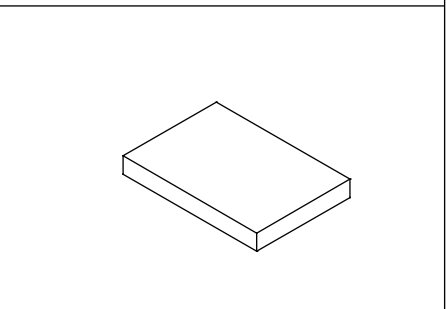 960*250*24mm ⑥ X 1	 960*250*12mm ⑦ X 1	 960*250*12mm ⑧ X 1
 960*250*24mm ⑨ X 1	 429*550*30mm ⑱ X 1	 429*550*30mm ⑲ X 1
 860*550*30mm ⑳ X 1	 730*534*24mm ㉑ X 1	 730*517*12mm ㉒ X 1
 730*517*12mm ㉓ X 1	 730*534*24mm ㉔ X 1	 Hardware Pack X1

Assembly Instructions

There are 2 boxes of this product














BOX-2: N721P473090

 1000*278*27mm ① X 1	 356*278*27mm ② X 1	 356*278*27mm ③ X 1	 502*326*15mm ④ X 1	 502*326*15mm ⑤ X 1
 219*80*15mm ⑩ X 1	 219*80*15mm ⑪ X 1	 1000*80*12mm ⑫ X 1	 500*120*15mm ⑬ X 1	 500*120*15mm ⑭ X 1
 889*309*3mm ⑮ X 2	 300*227*12mm ⑯ X 4	 300*80*15mm ⑰ X 2	 659*190*3mm ⑳ X 4	 370*70*12mm ㉑ X 2
 370*80*15mm ㉒ X 2	 382*80*15mm ㉓ X 1	 382*80*15mm ㉔ X 1	 830*90*15mm ㉕ X 1	 517*90*15mm ㉖ X 1
 517*90*15mm ㉗ X 1	 860*100*15mm ㉘ X 1	 854*86*15mm ㉙ X 1	 350*75*12mm ㉚ X 1	 350*75*12mm ㉛ X 1
 781*75*12mm ㉜ X 1	 781*337*12mm ㉝ X 1	 400*200*12mm ㉞ X 3	 400*200*12mm ㉟ X 3	 321*200*12mm ㊱ X 3
 396*330*3mm ㊲ X 3	 430*290*12mm ㊳ X 1	 430*290*12mm ㊴ X 1	 321*290*12mm ㊵ X 1	 426*330*3mm ㊶ X 1
 379*300*15mm ㊷ X 1	 379*300*15mm ㊸ X 1	 379*340*15mm ㊹ X 1	 379*340*15mm ㊺ X 1	



Components-Fittings

Please check you have all the panels listed below



Note: The quantities below are the correct amount to complete the assembly. In some cases more fittings may be supplied than are required.

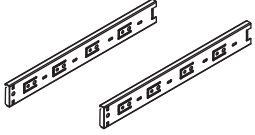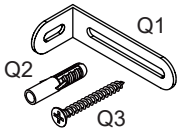(A)  Cam Bolt x 126	(B)  Cam Lock x 126	(C)  6*30mm Dowel x 25	(D)  3.5*12mm Screw x 108
(E)  4*18mm Screw x 16	(F)  Clamp plate nut x 10	(G)  6*25mm Screw x 10	(H)  4*35mm Screw x 44
(J)  Angle iron x 1	(K)  Handle x 8	(L)  Socket x 1	(M)  Handle x 6
(N)  332mm Metal tube x 2	(P)  300mm Drawer slide x 1 set	(Q)  Anti dumping x 2 set	(R)  Back panel buckle x 16
(S)  Perfect Fit x 54	(T)  400mm Drawer slide x 4 set	(Screwdriver)  Screwdriver x 2	







Step 1 StepX4

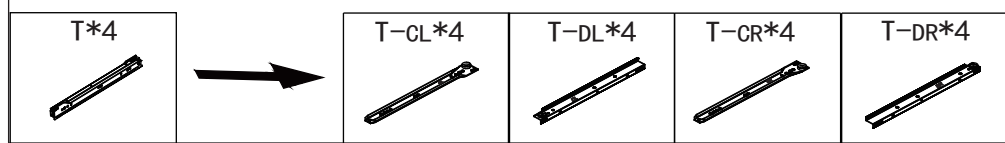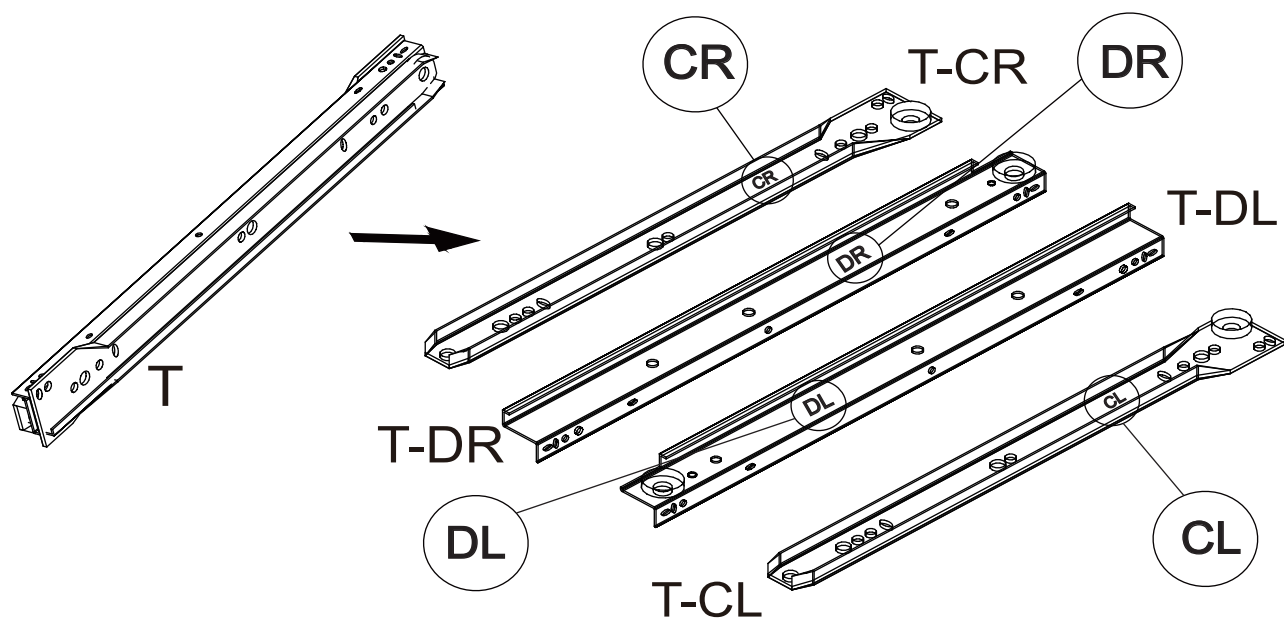





Step 2 StepX2

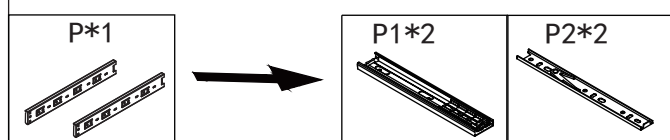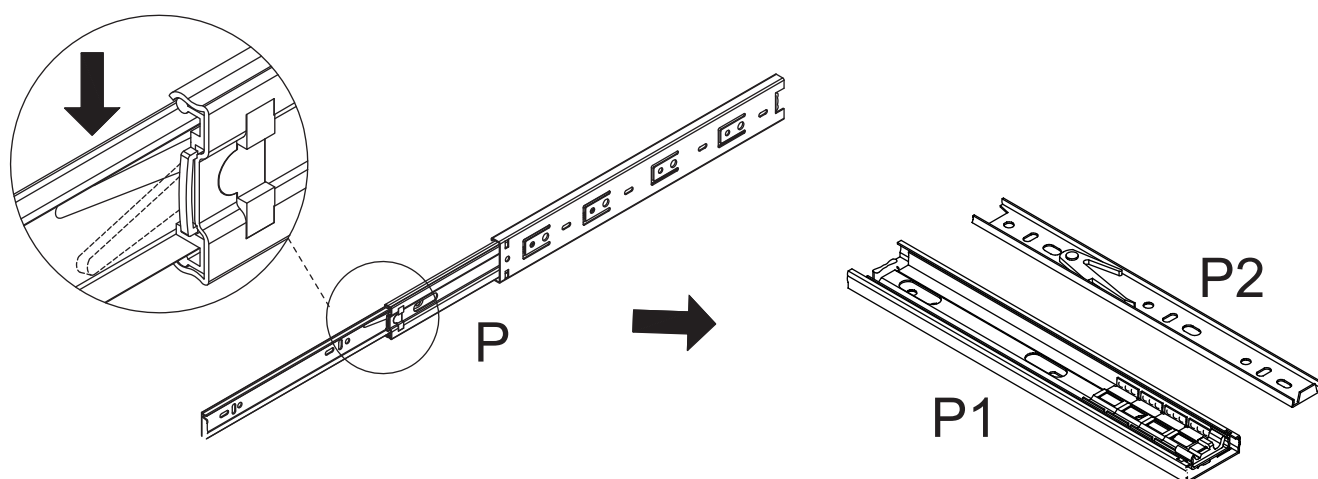

Step 3

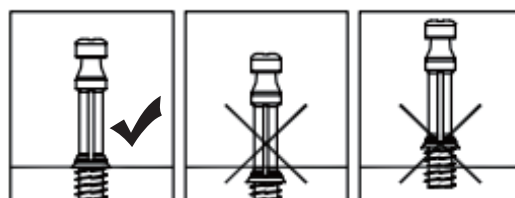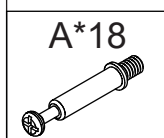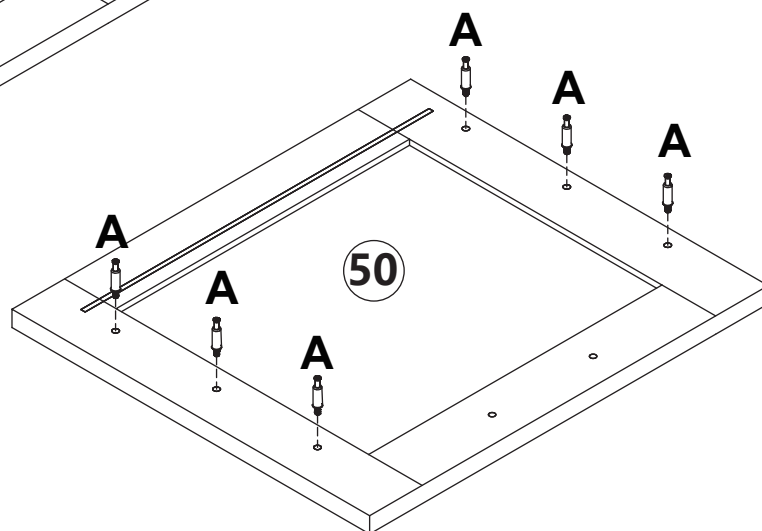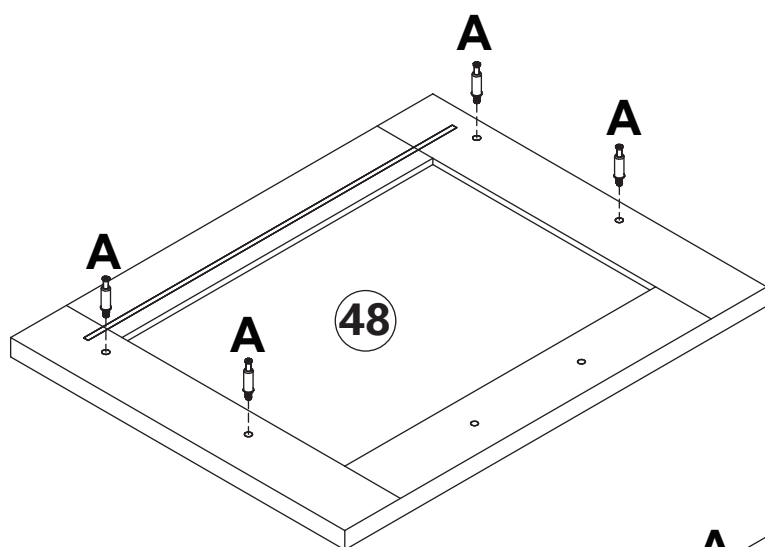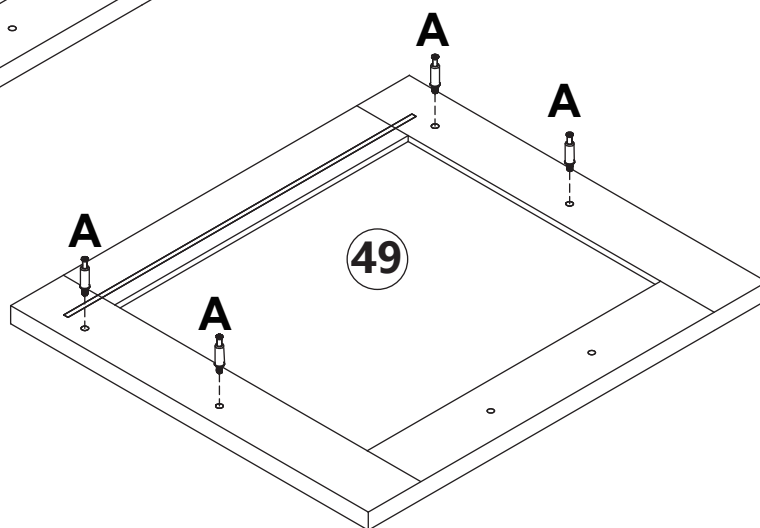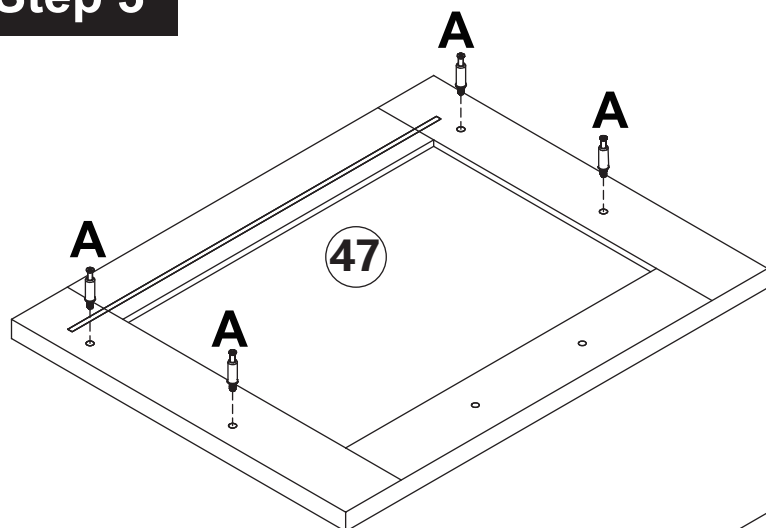

Step 4

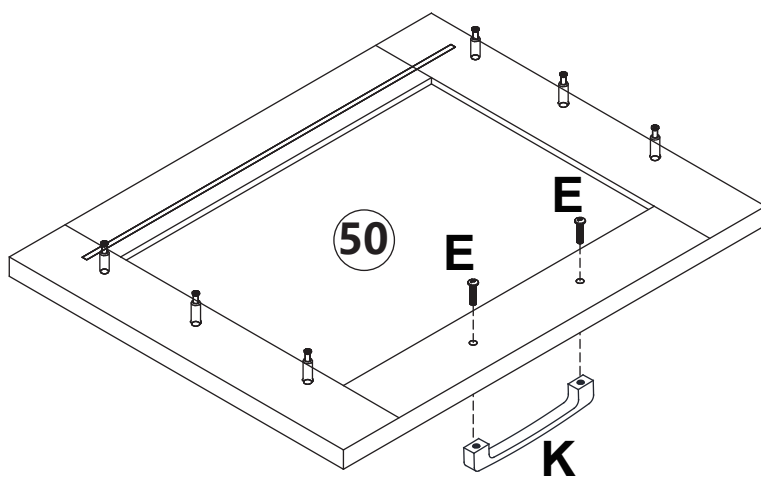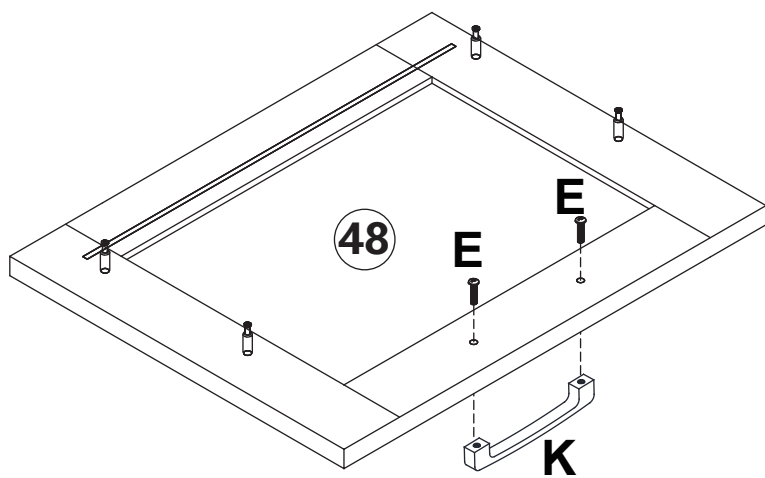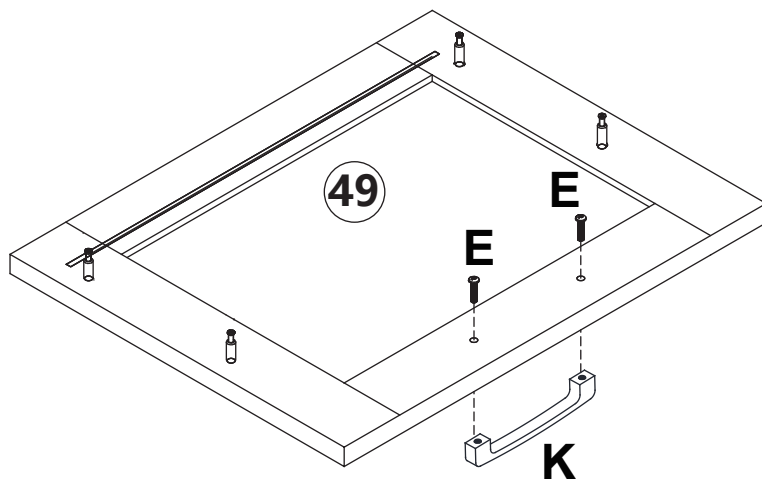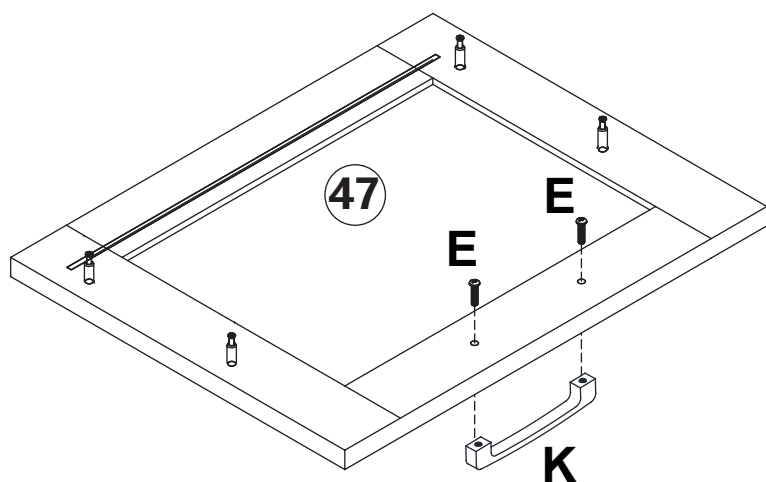


E*8




K*4




Step 5

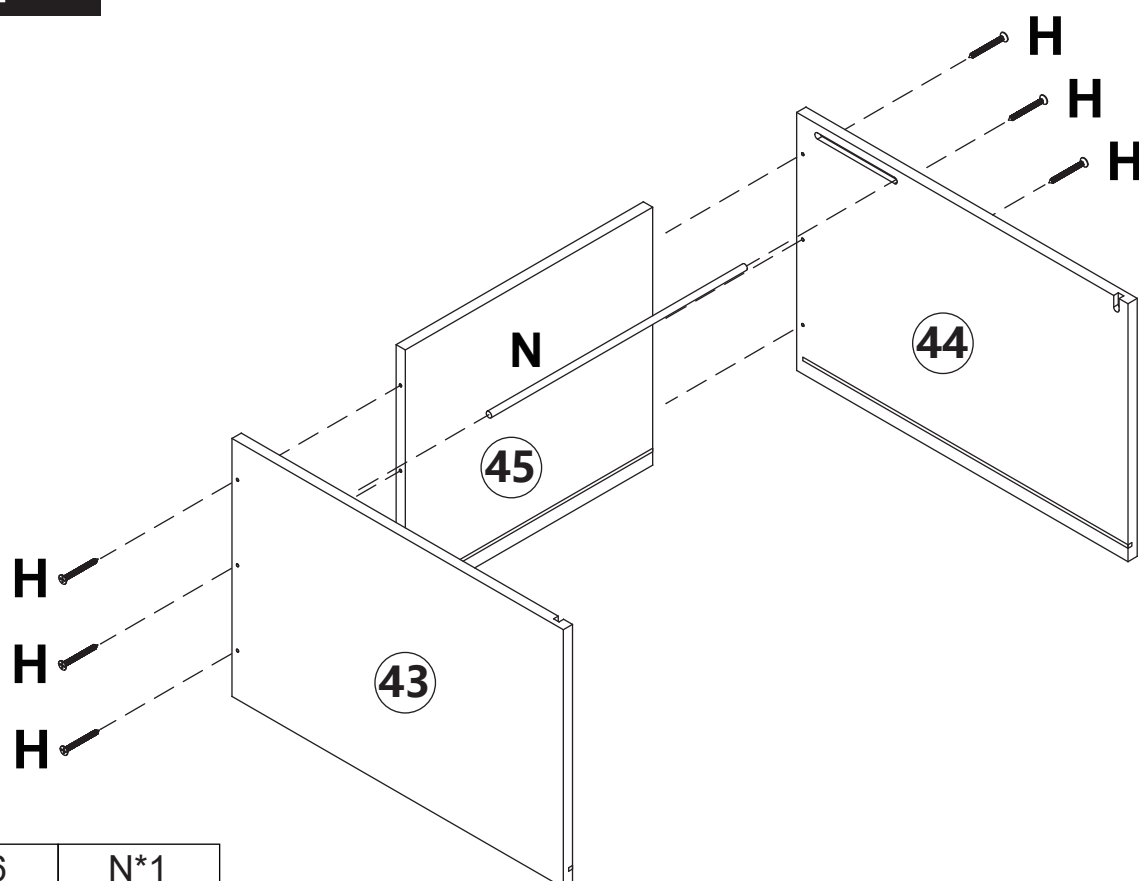

Step 6

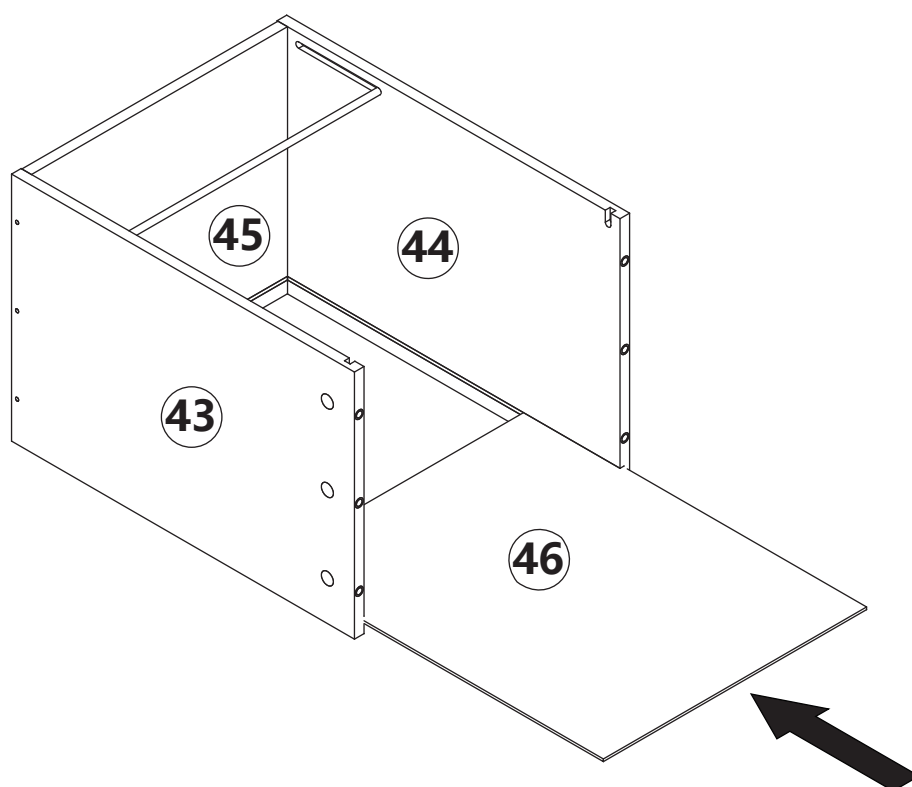




Step 7

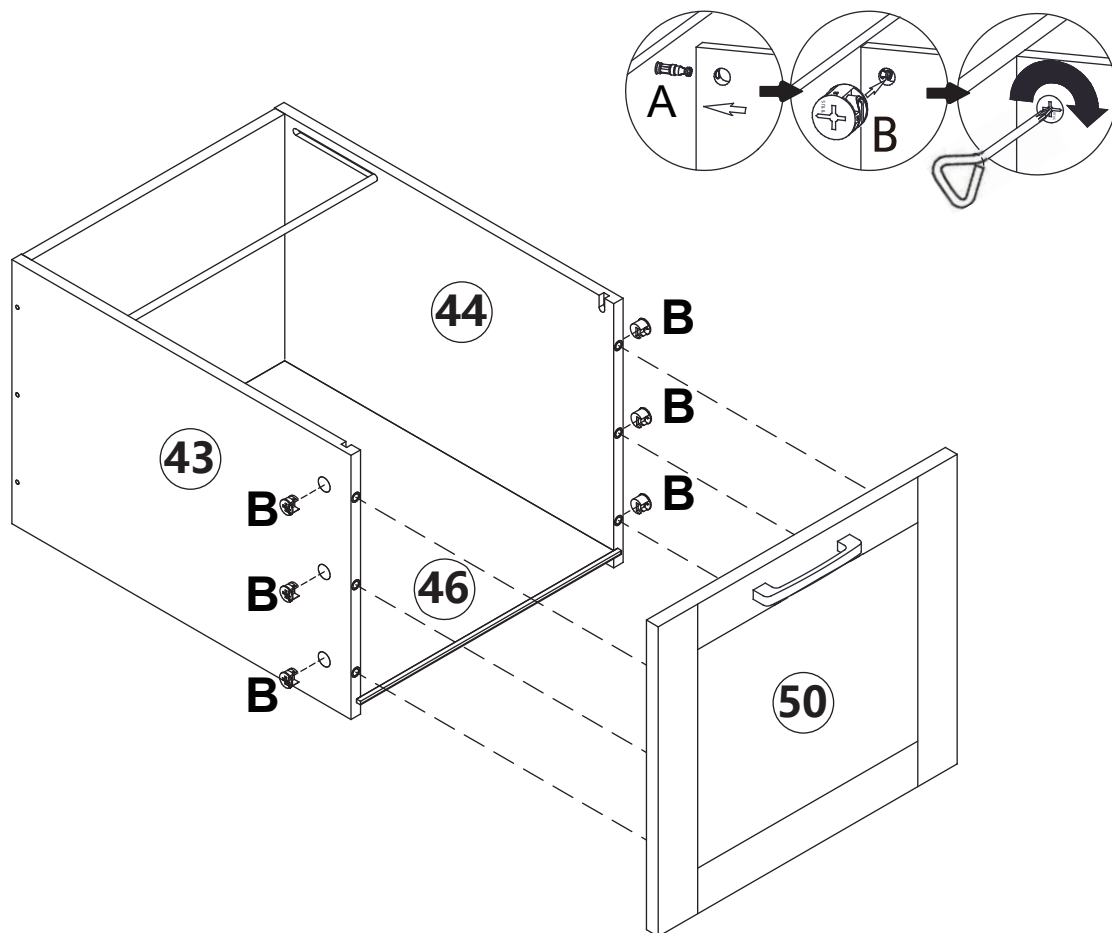

B*6



Step 8

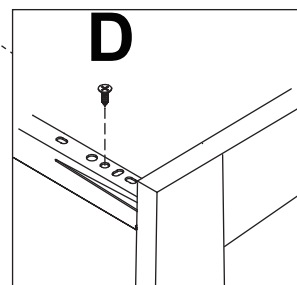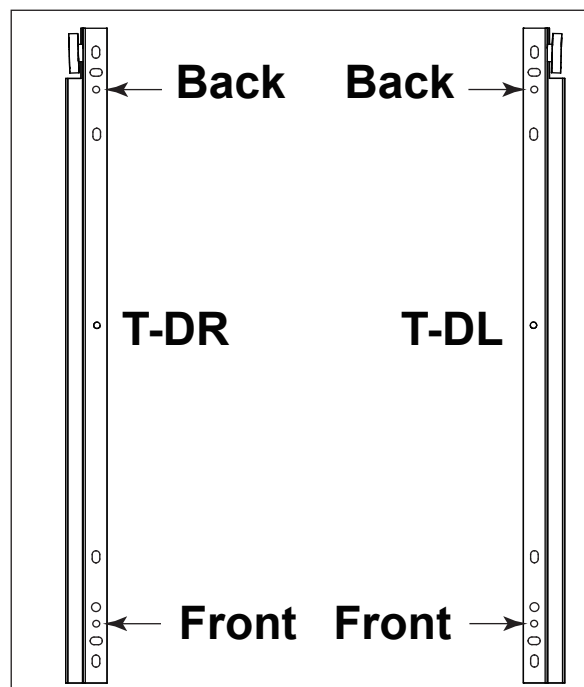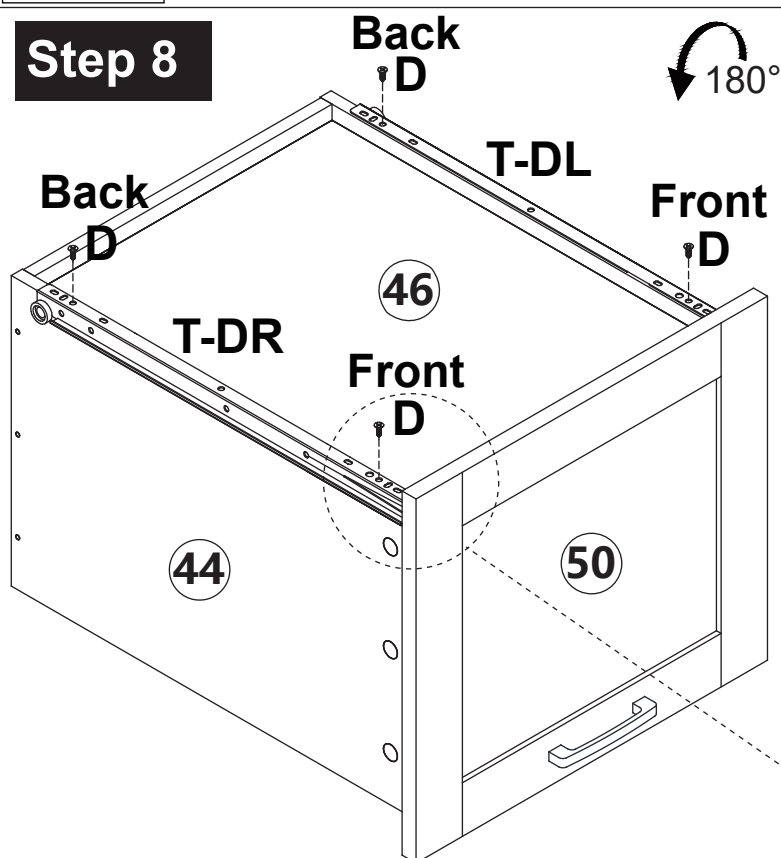

D*4




T-DL*1



T-DR*1




Step 9

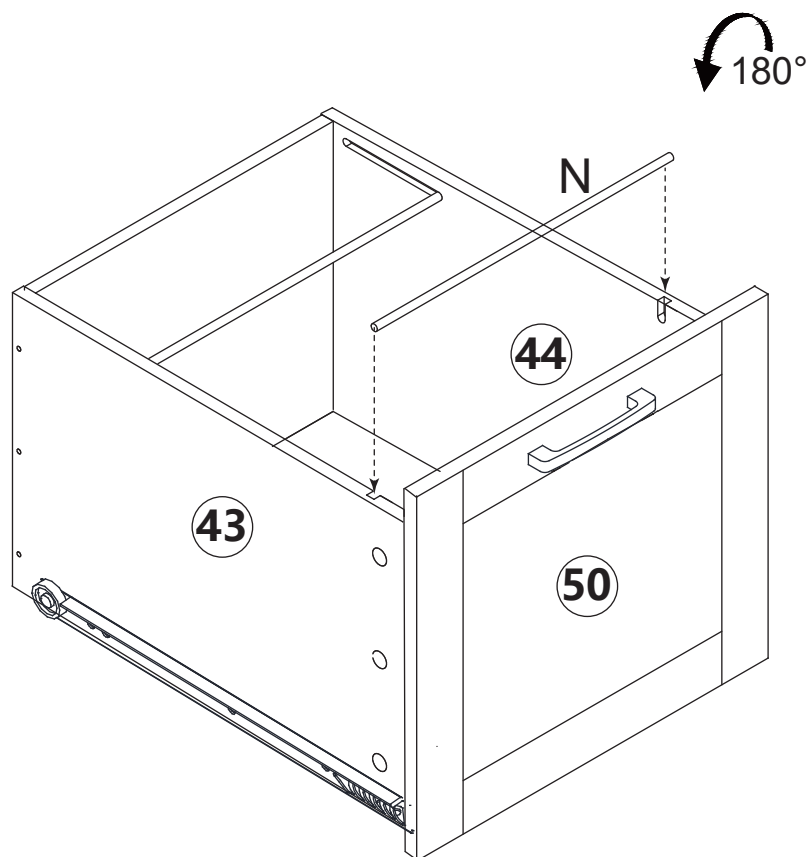

N*1




Step 10 StepX3

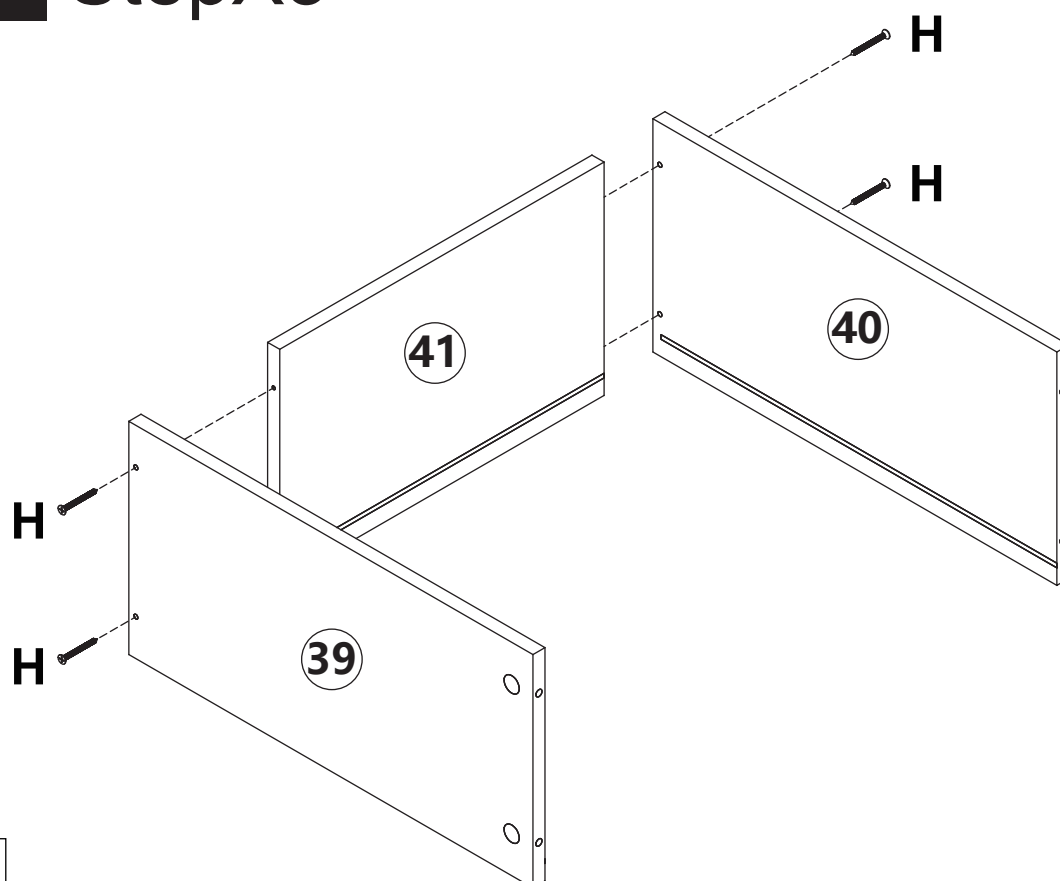


H*12



Step 11 StepX3

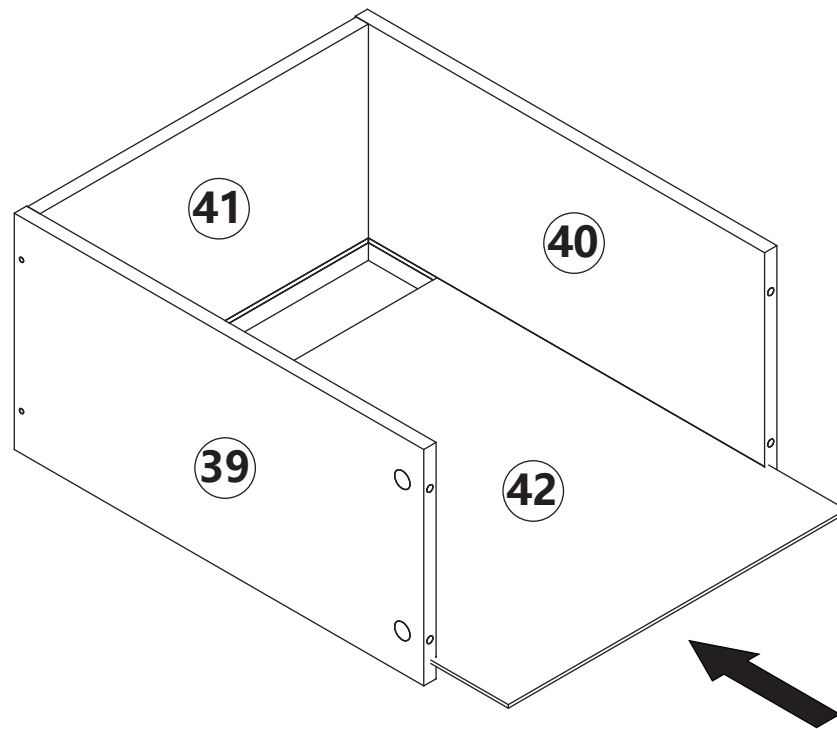



Step 12

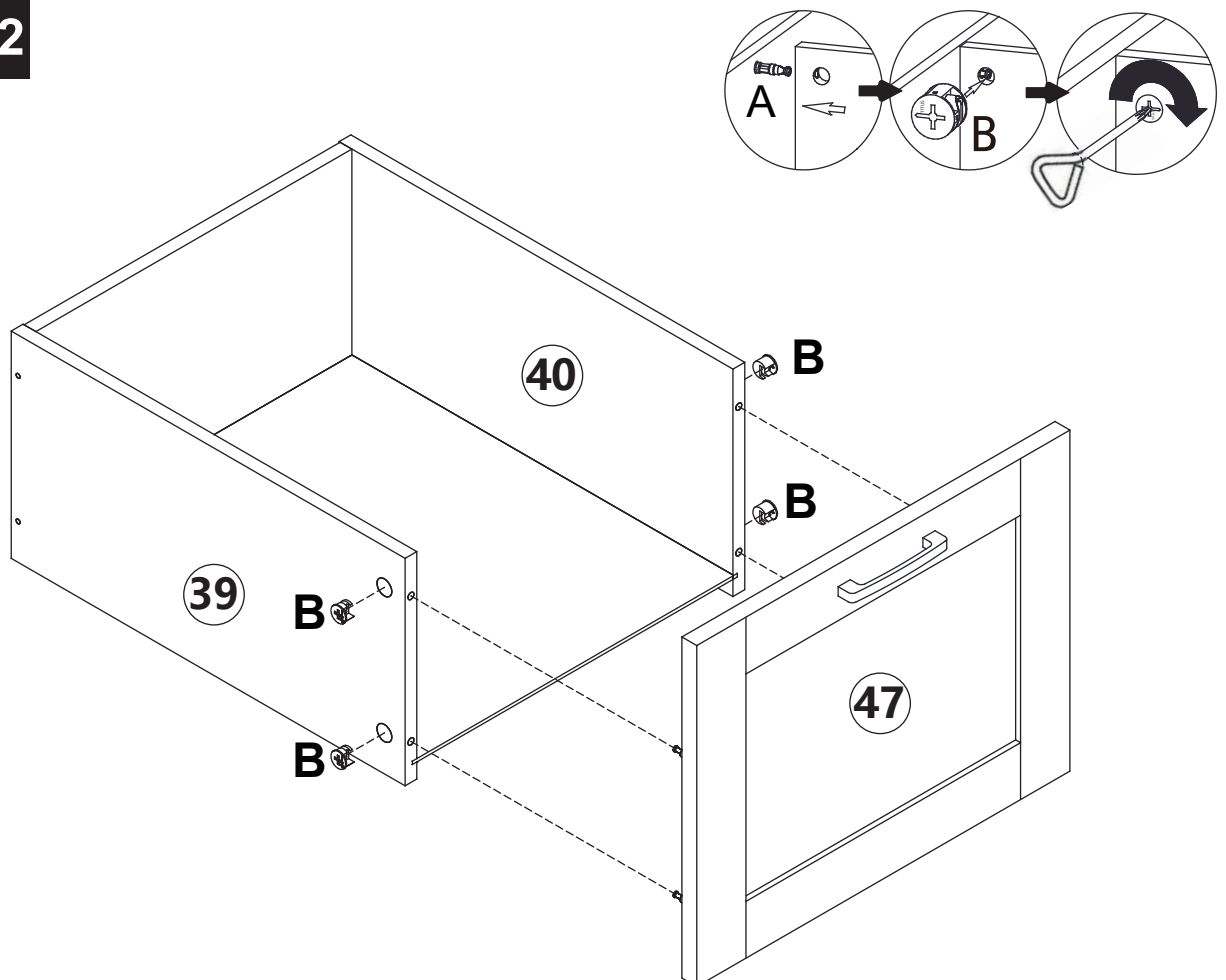

B*4





Step 13

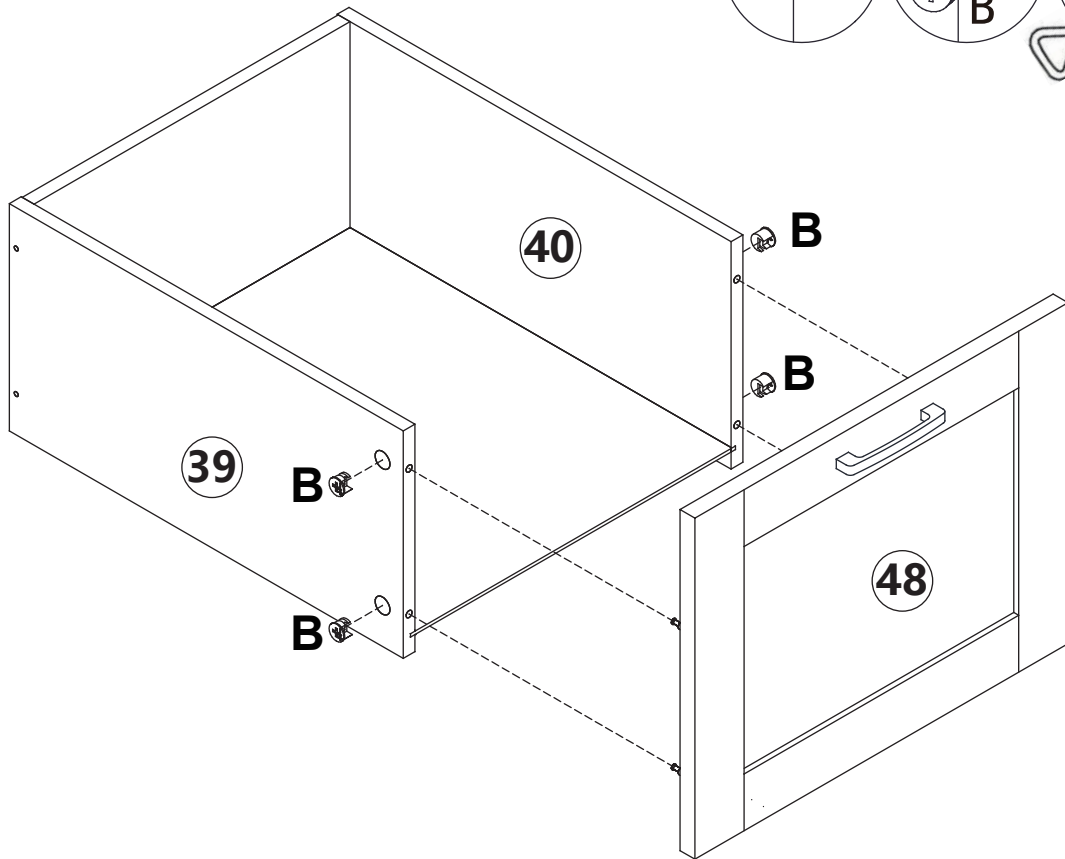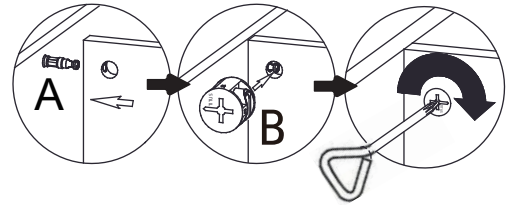

B*4







Step 14

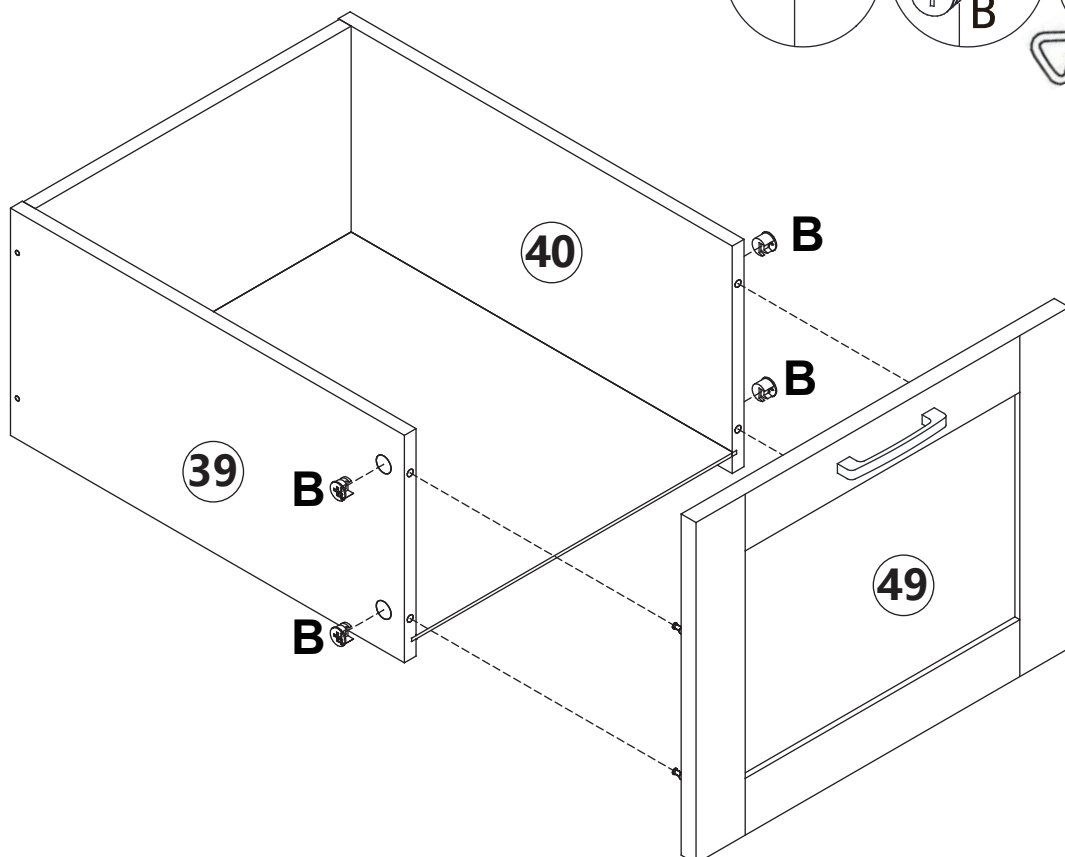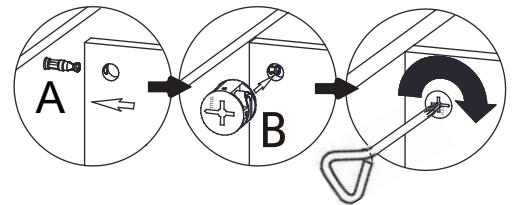




B*4





Step 15 StepX3

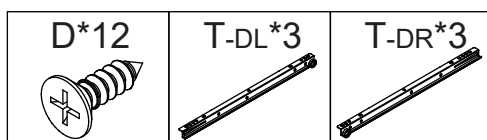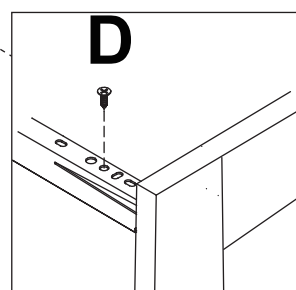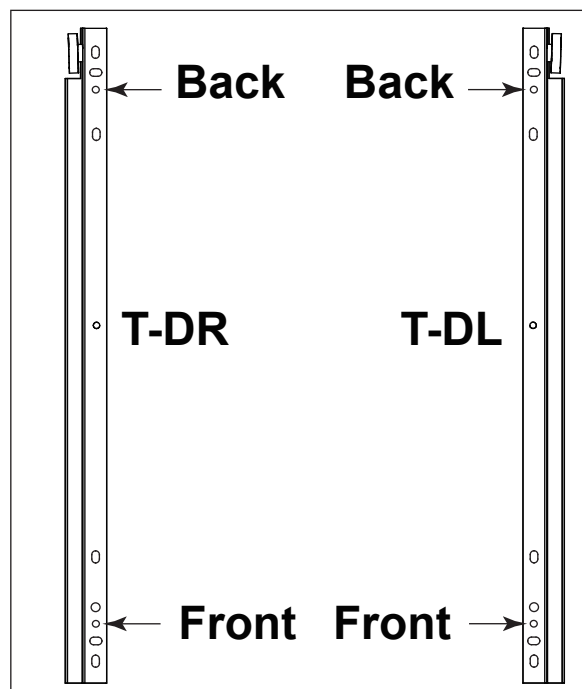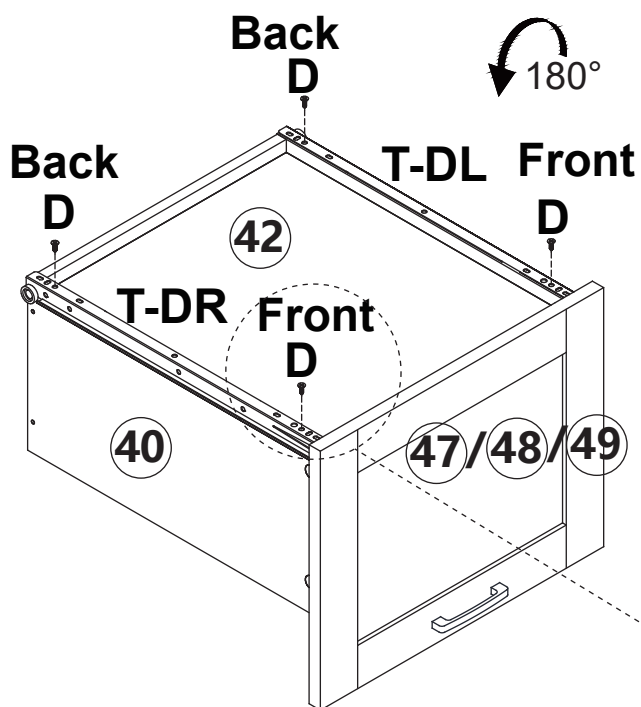




Step 16

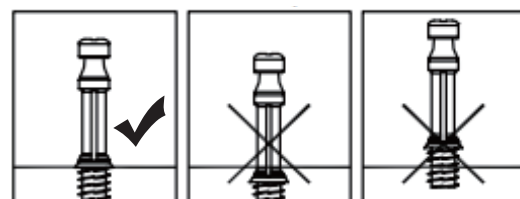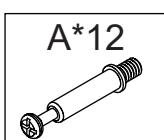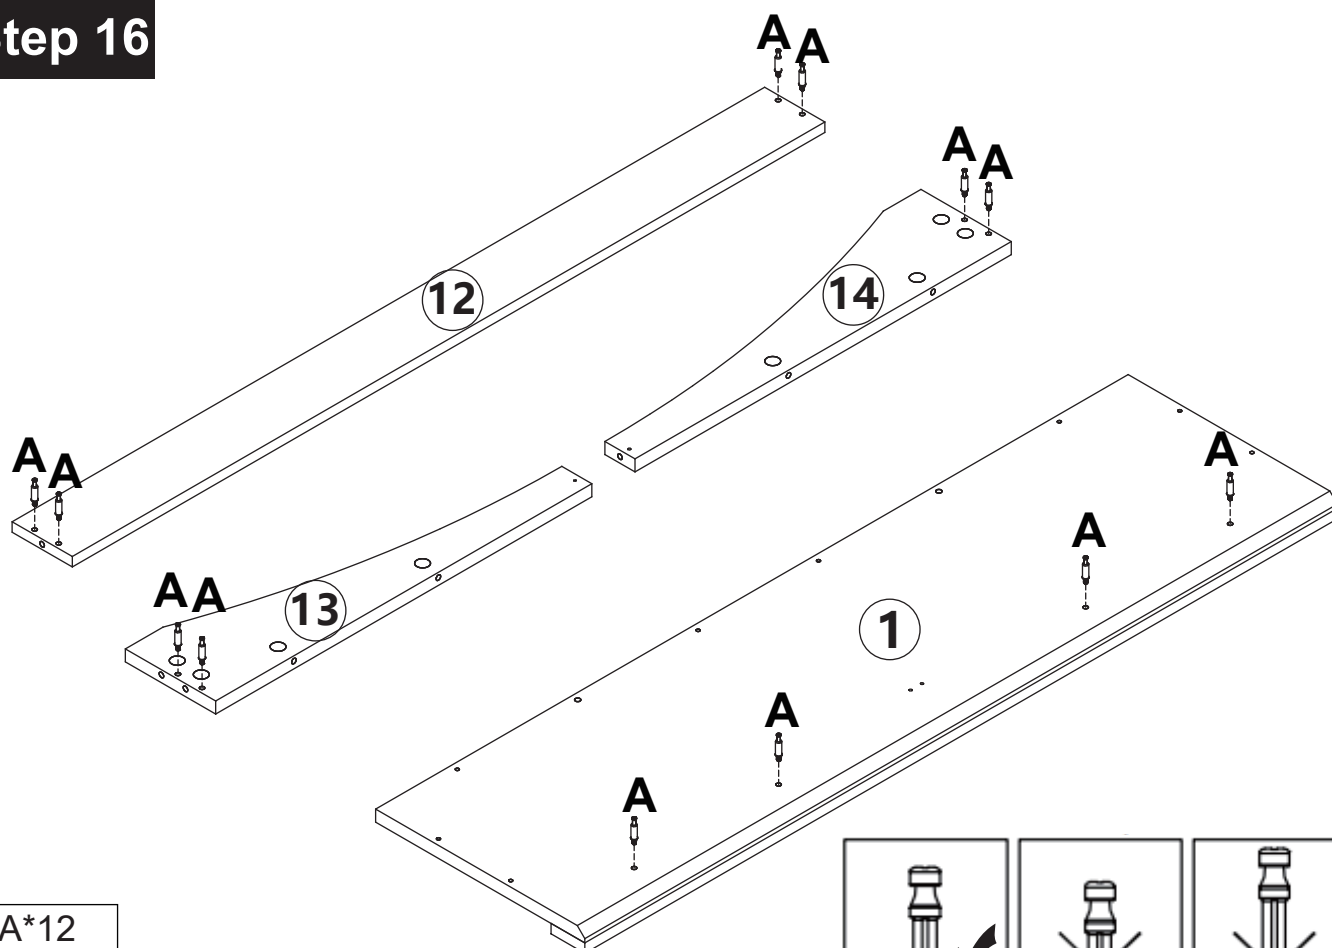



Step 17

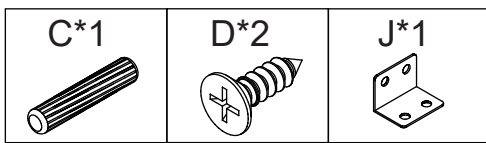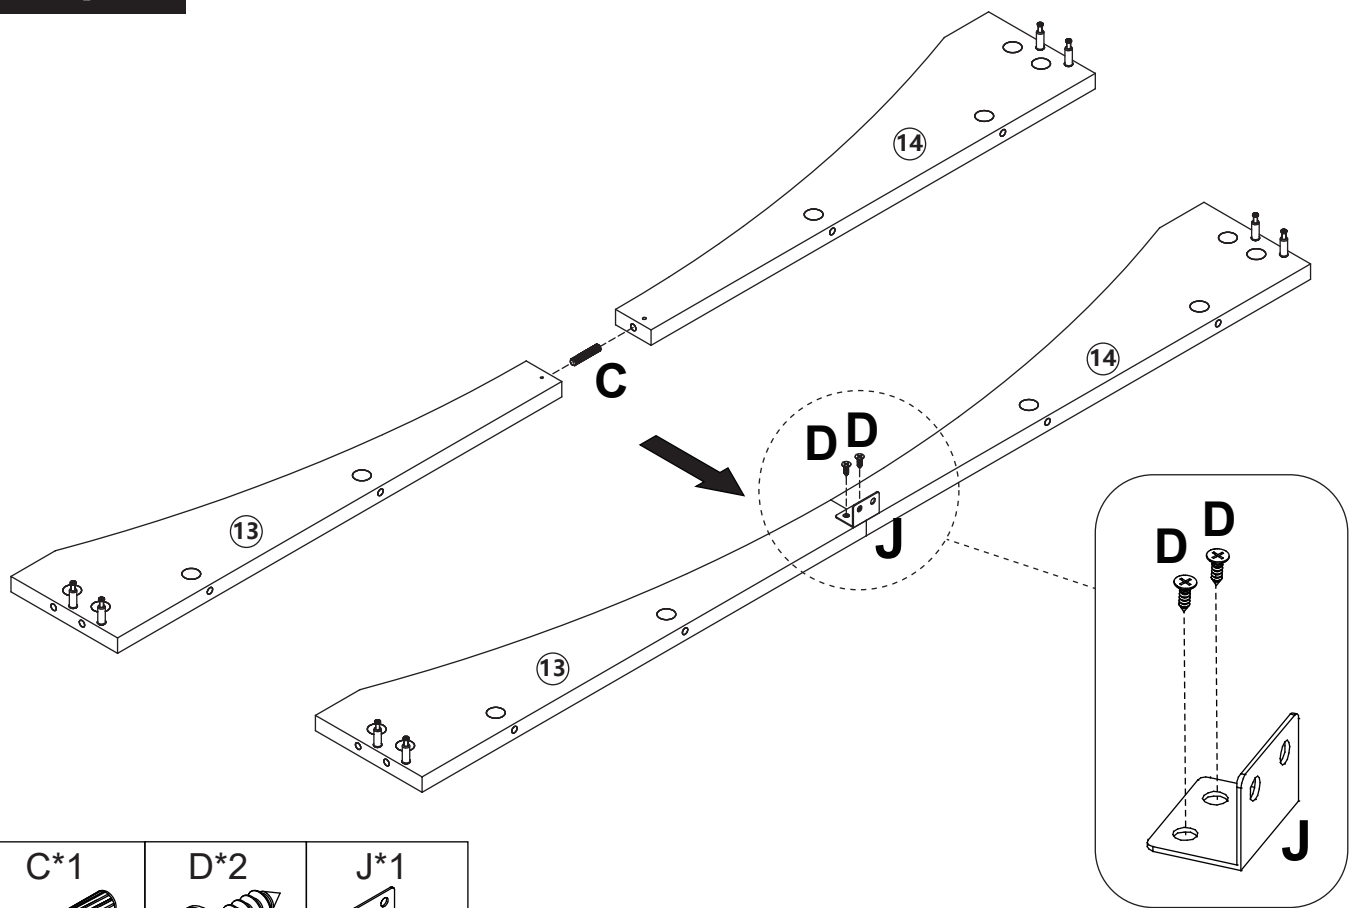





Step 18

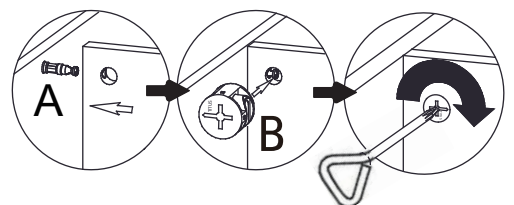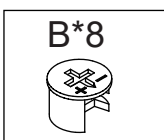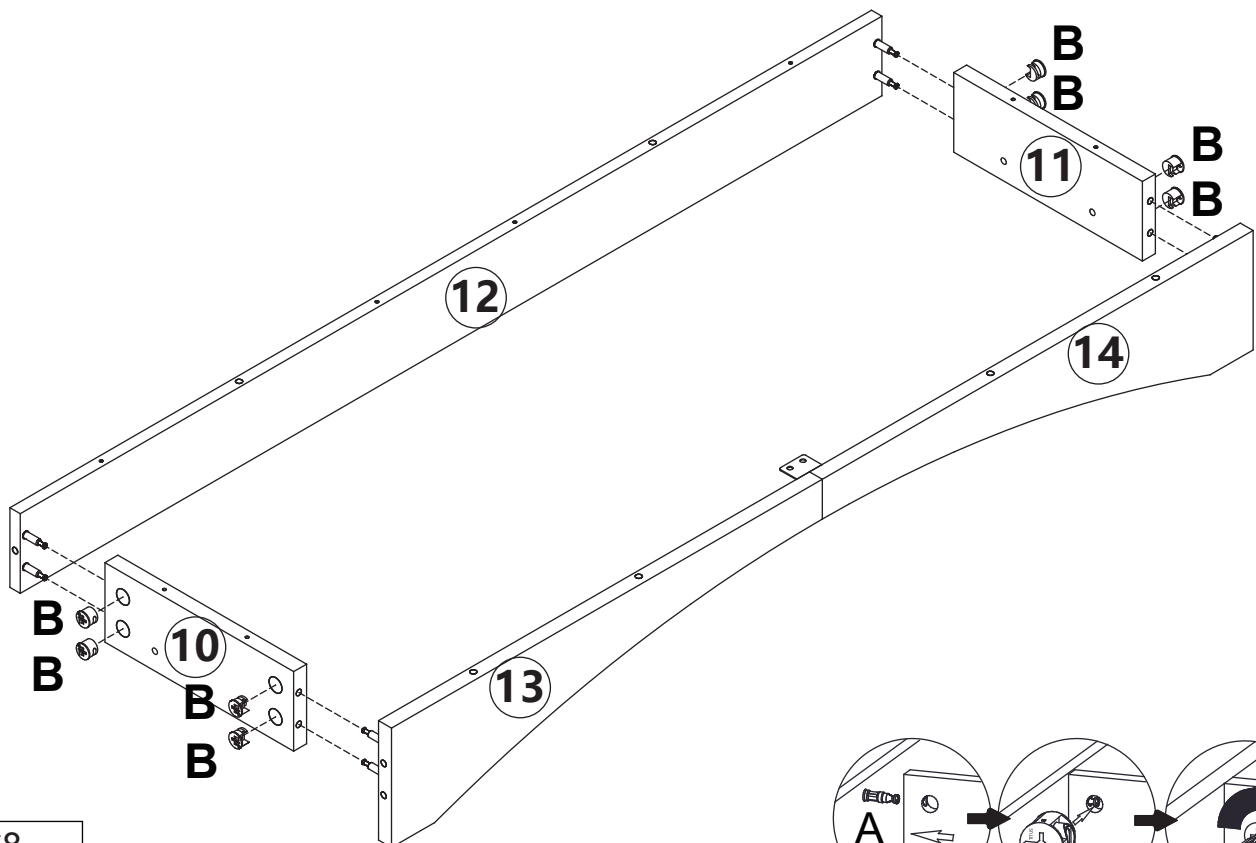


Step 19

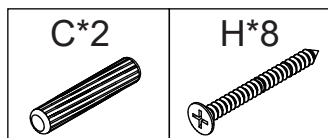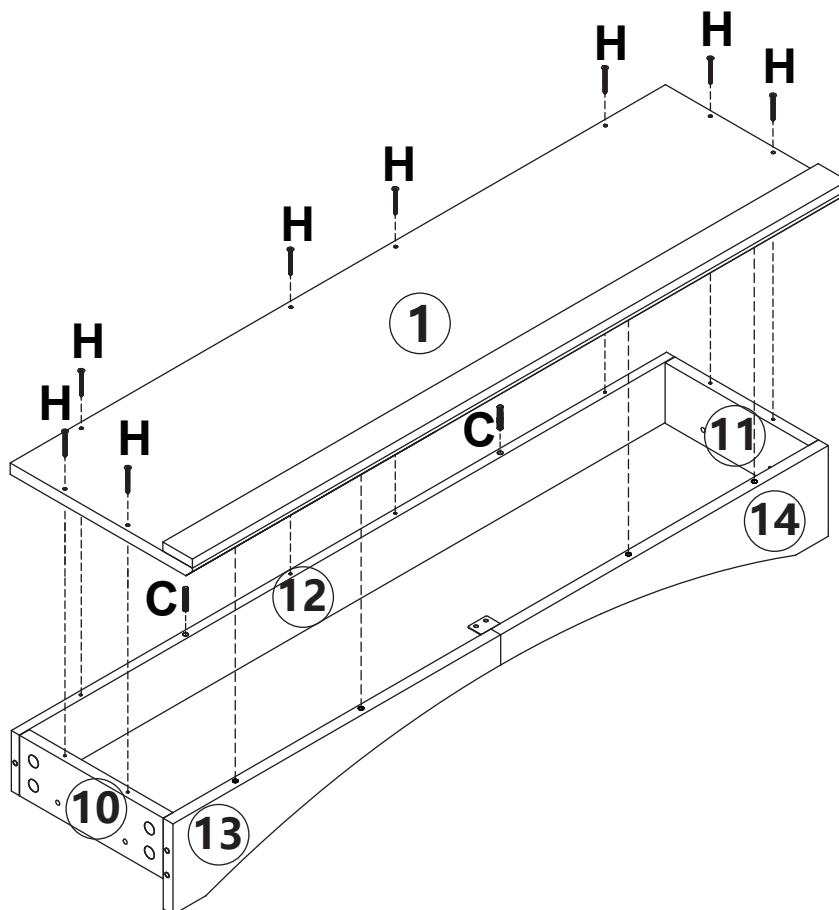


Step 20

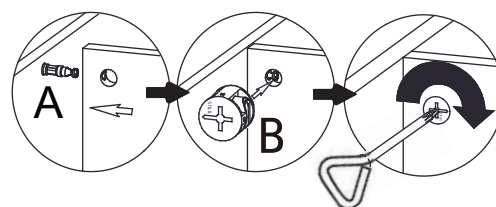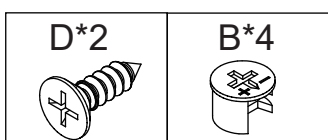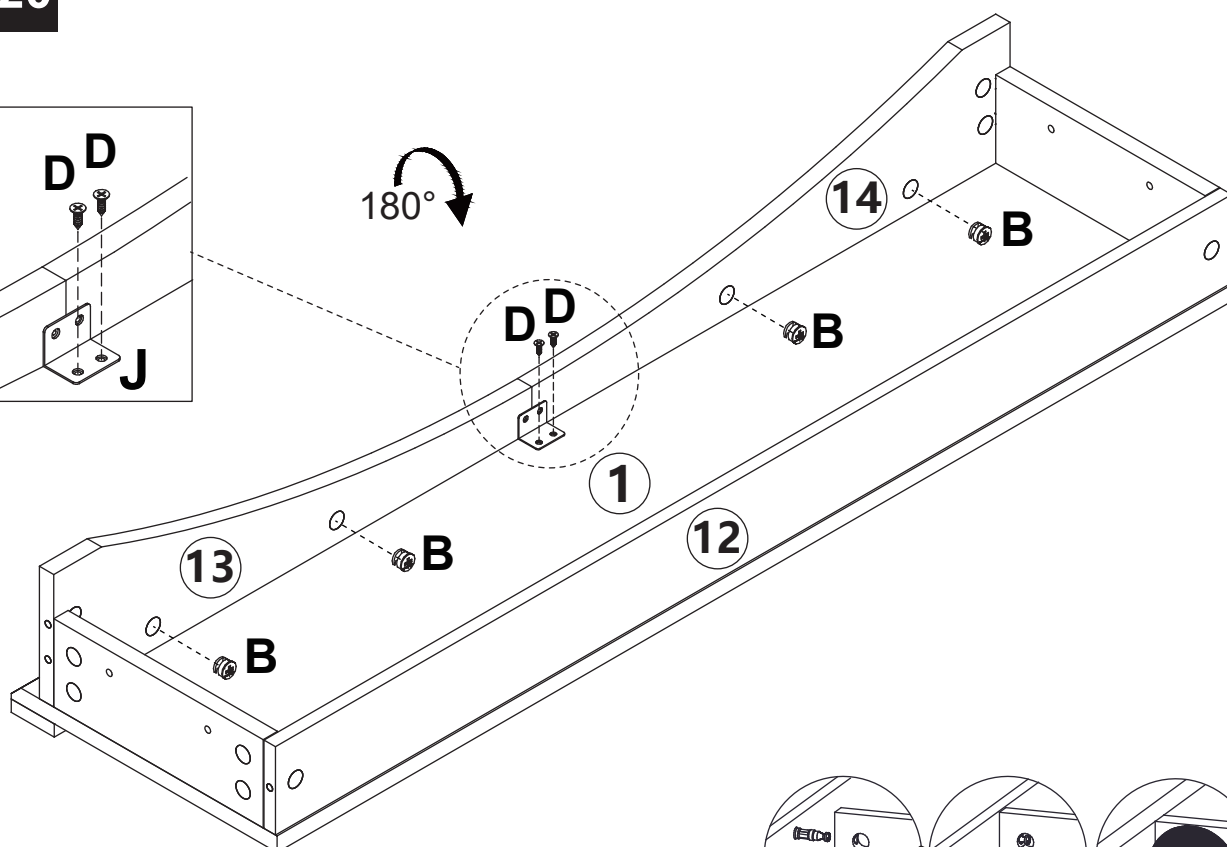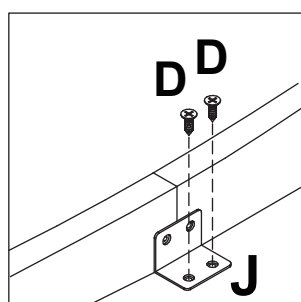


Step 21

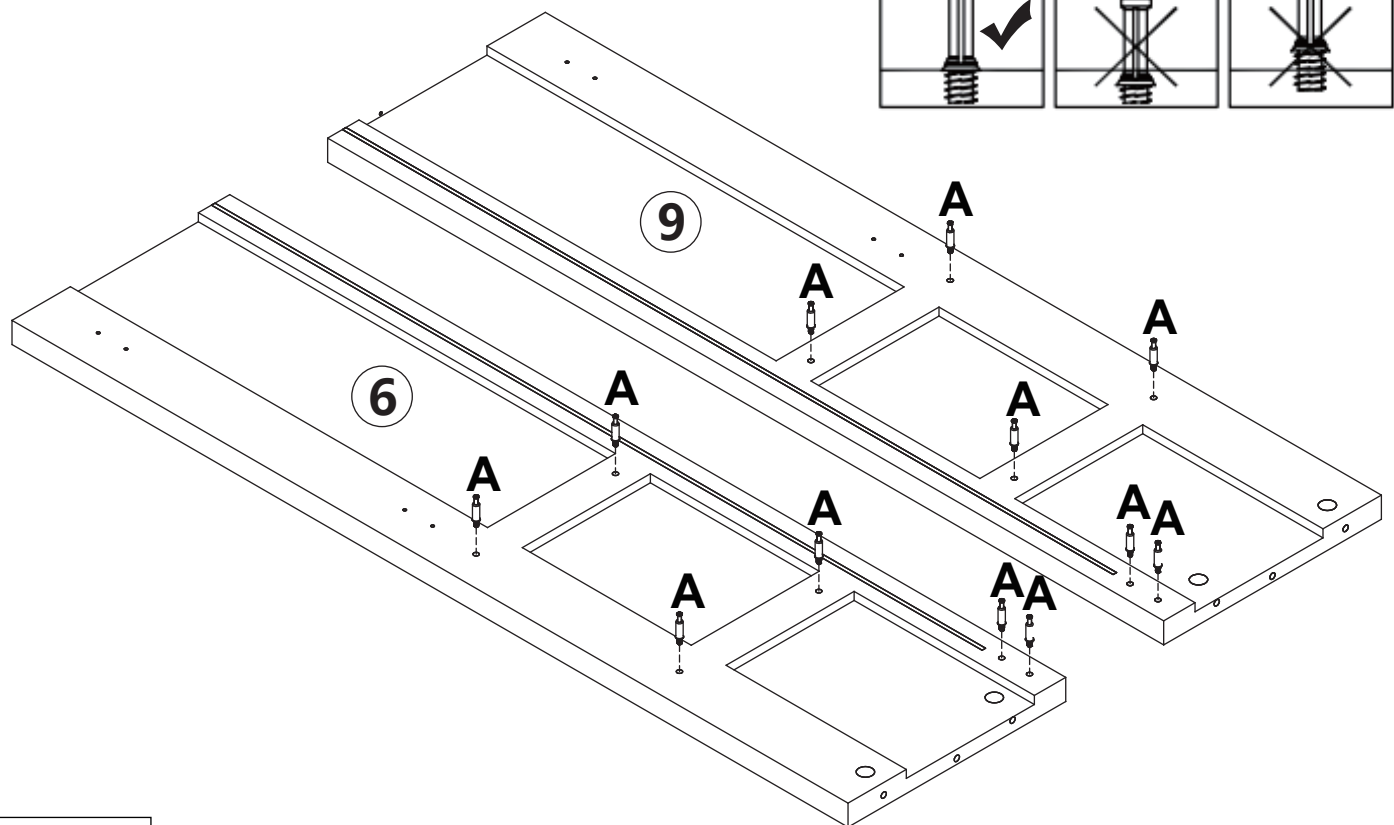

A*12





Step 22

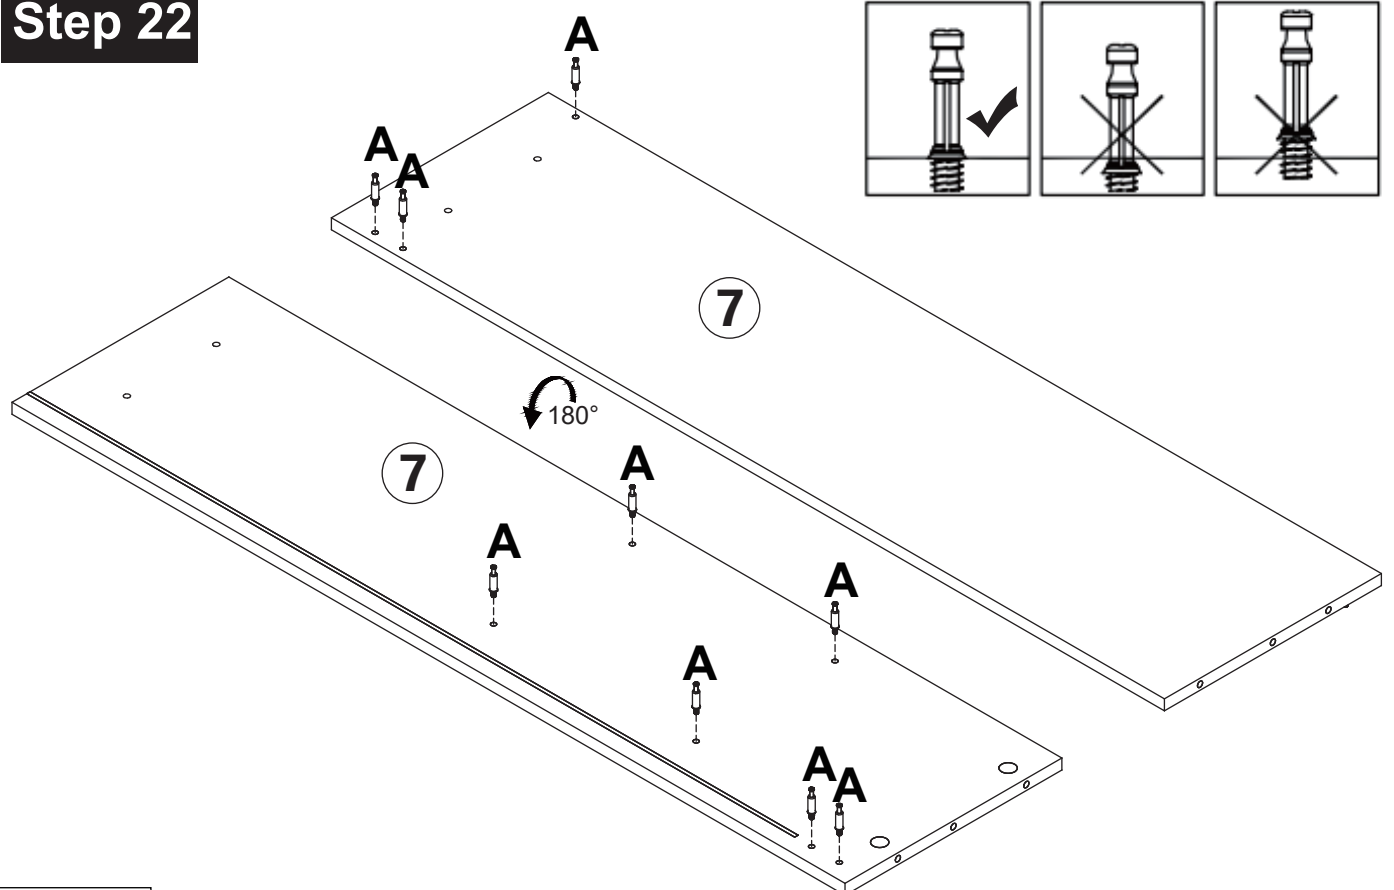

A*9




Step 23

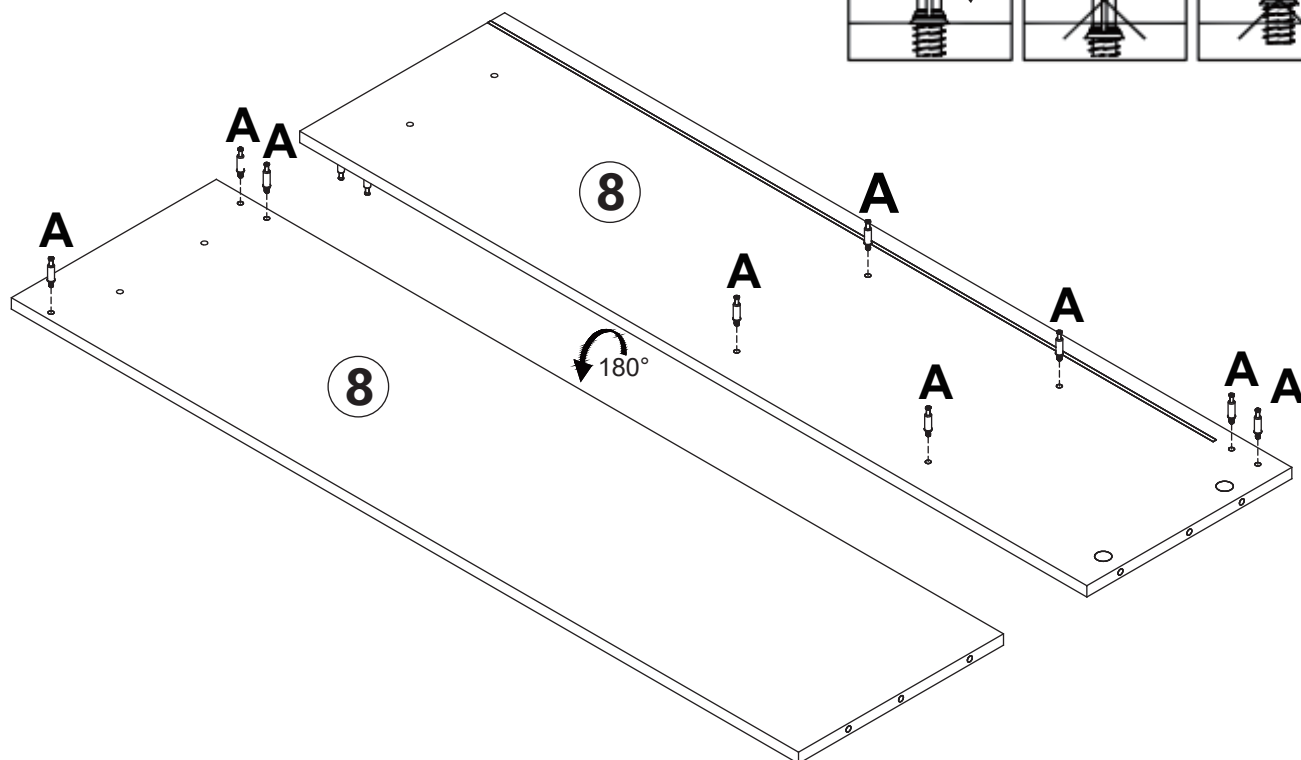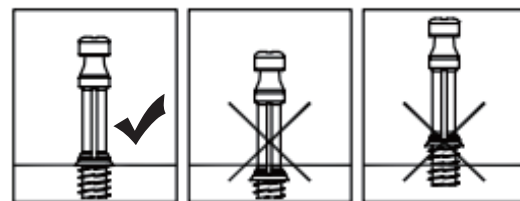


A*9







Step 24

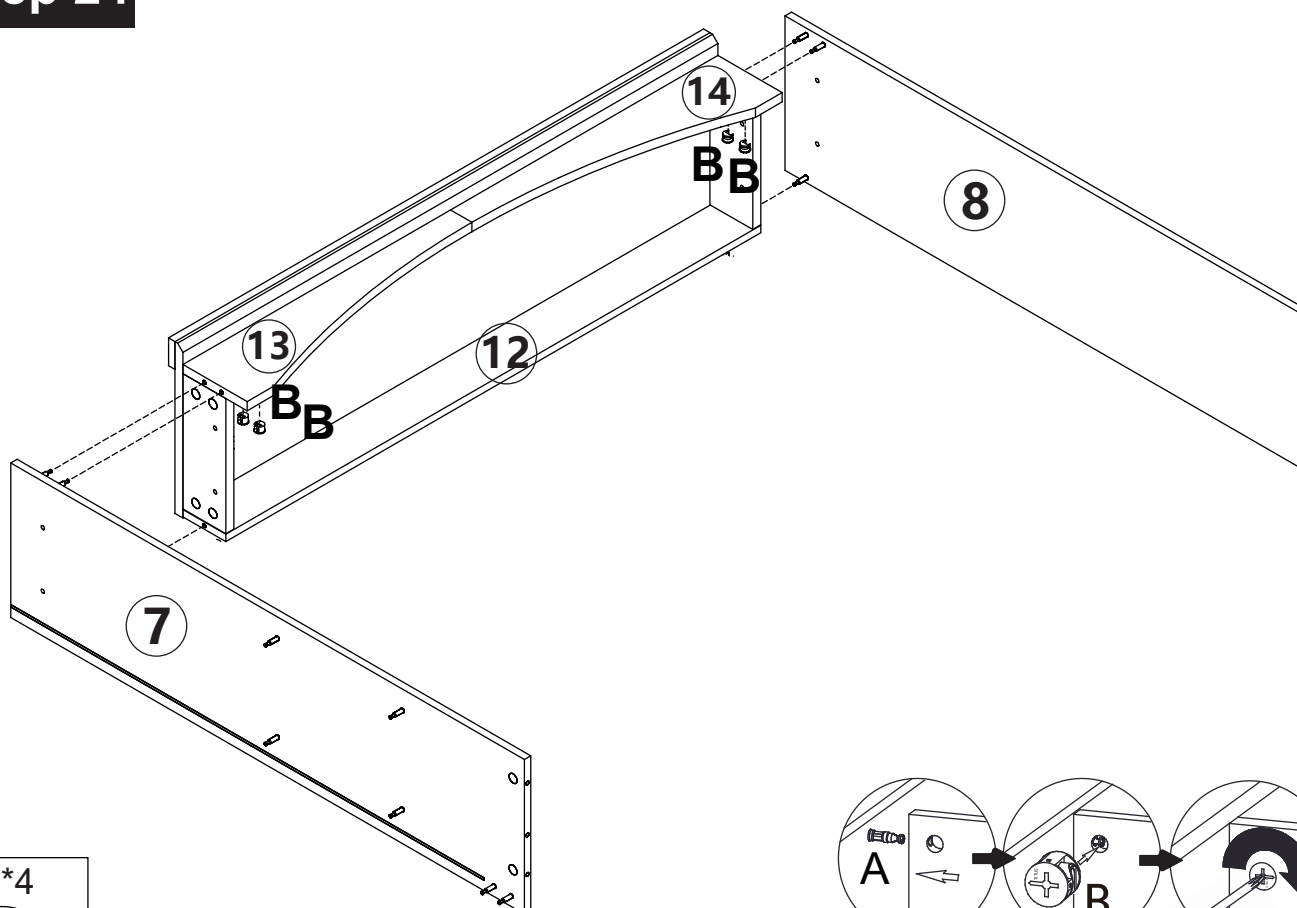


B*4

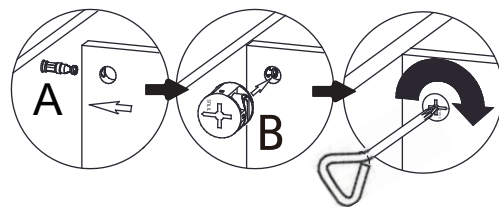


Step 25

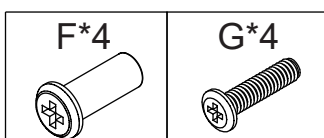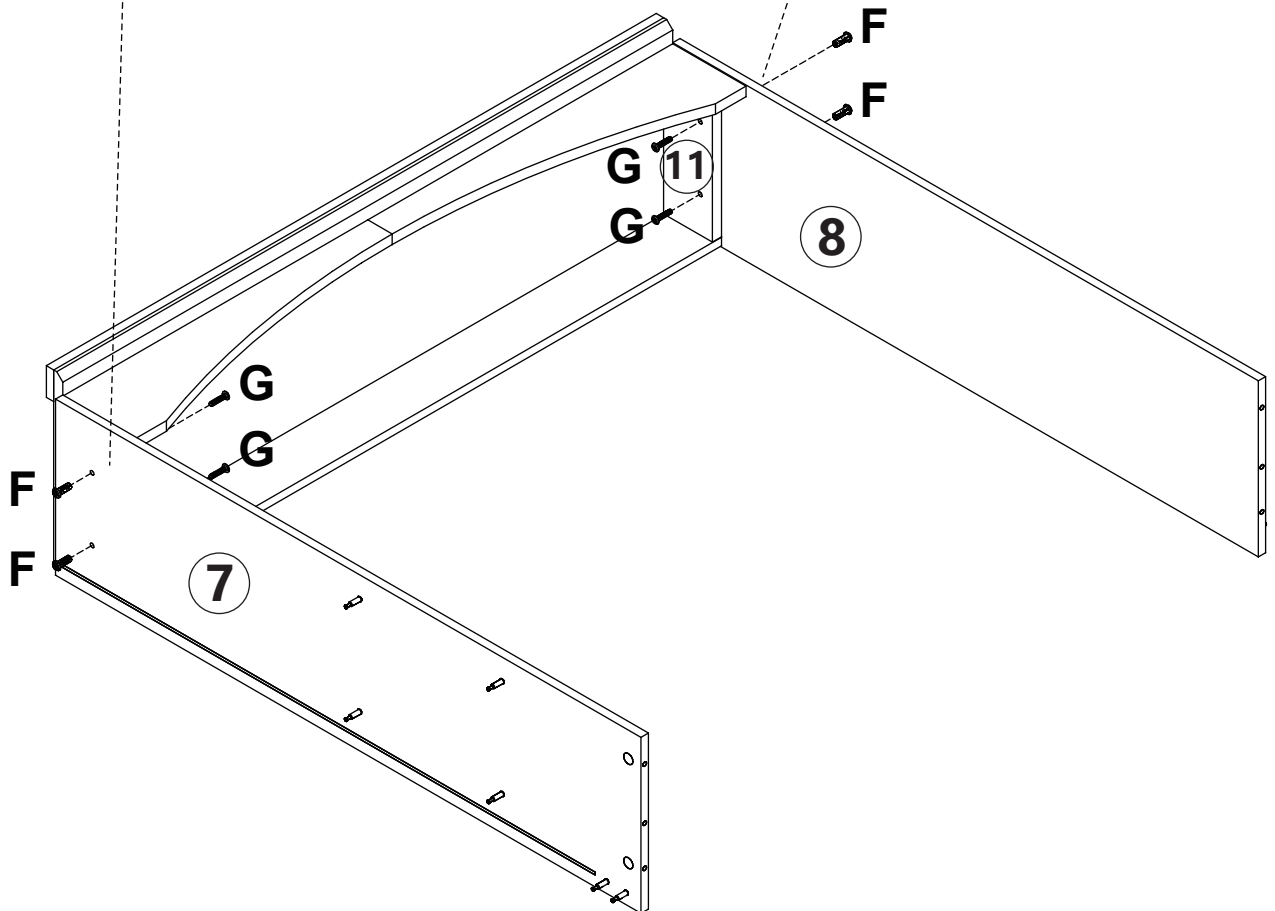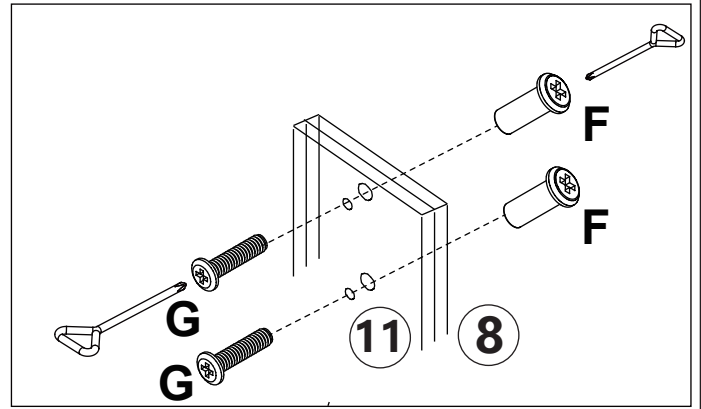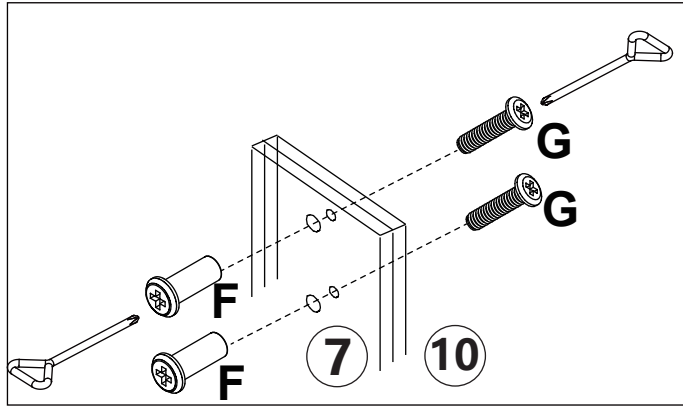


Step 26

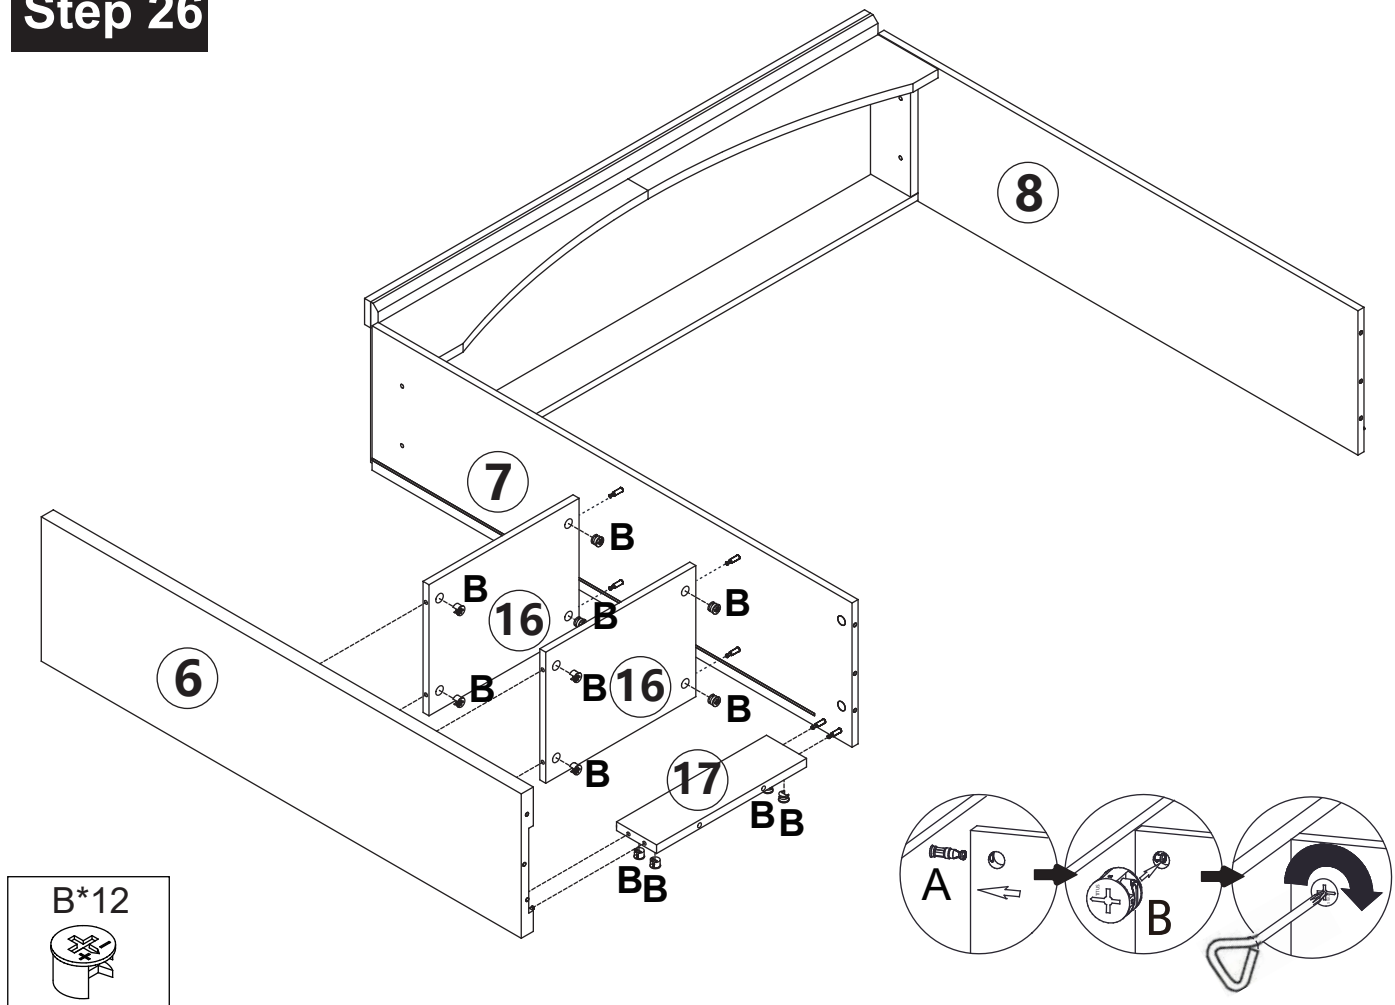


Step 27

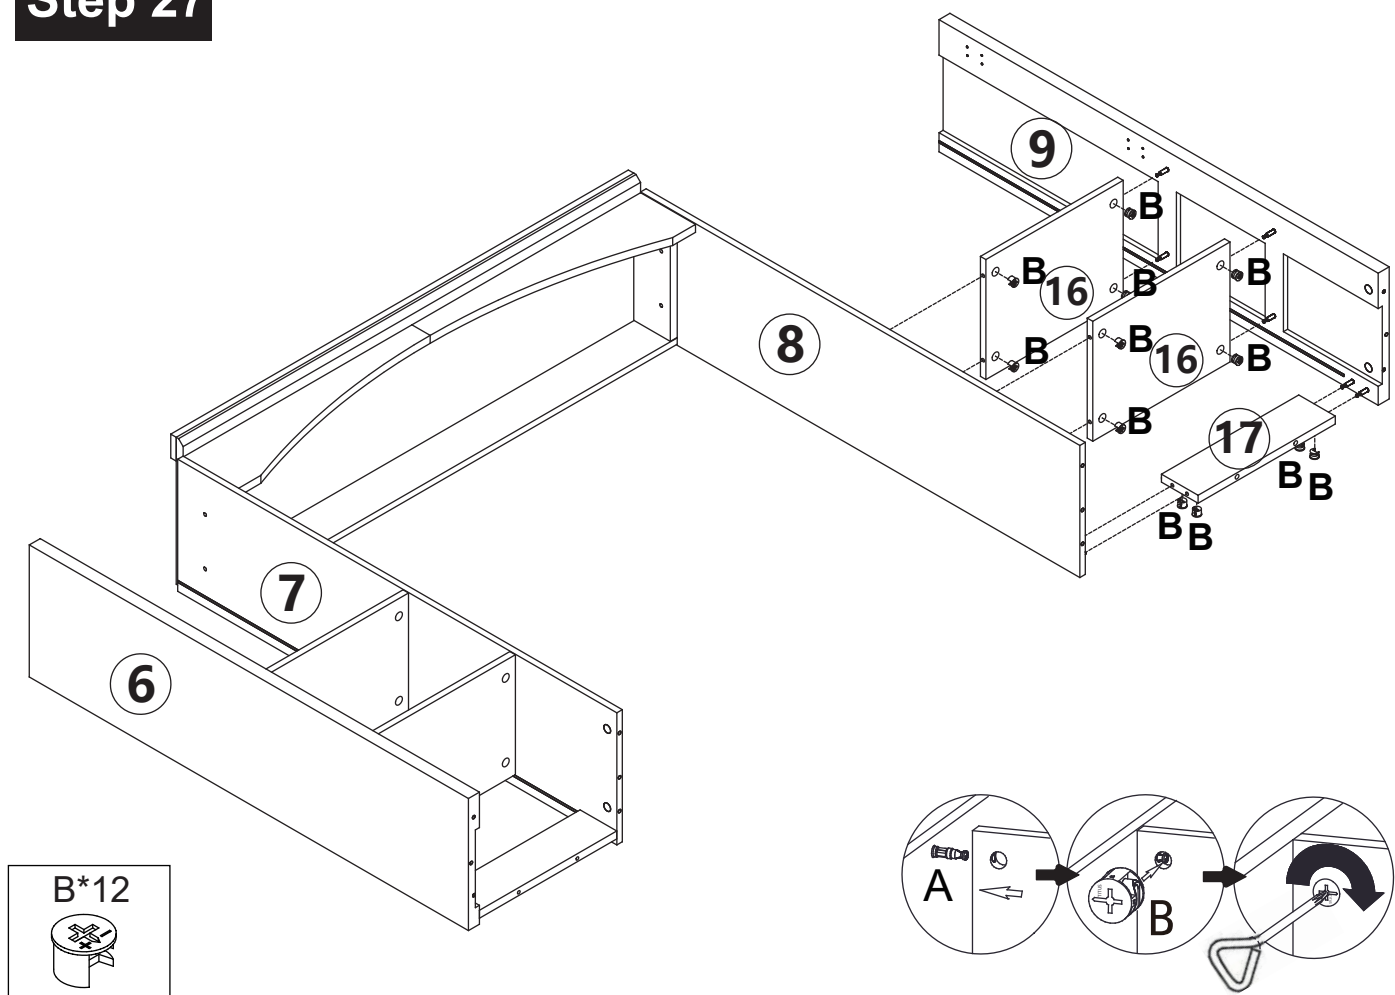


Step 28

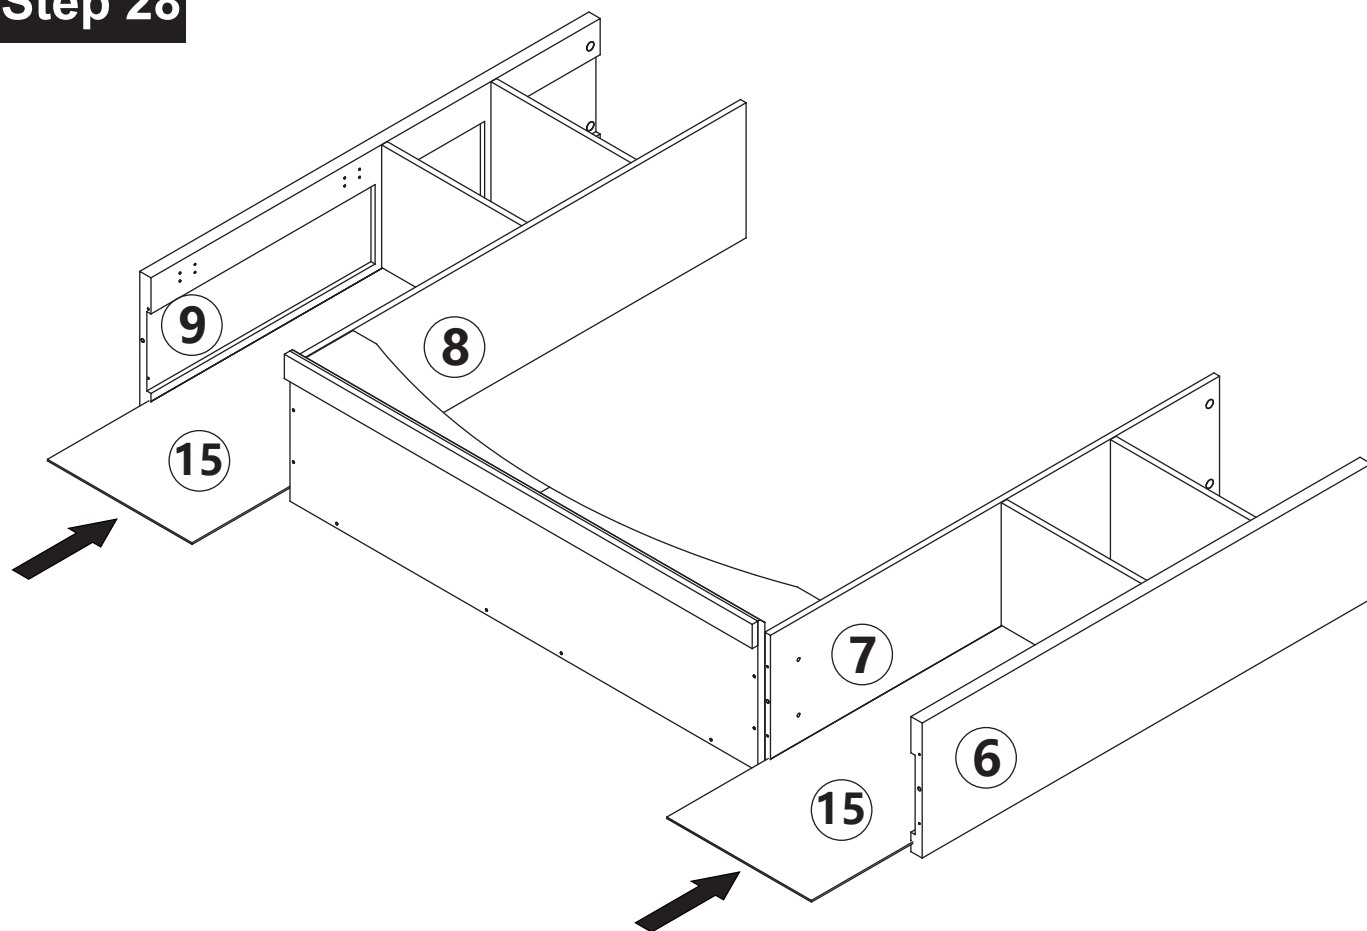

Step 29

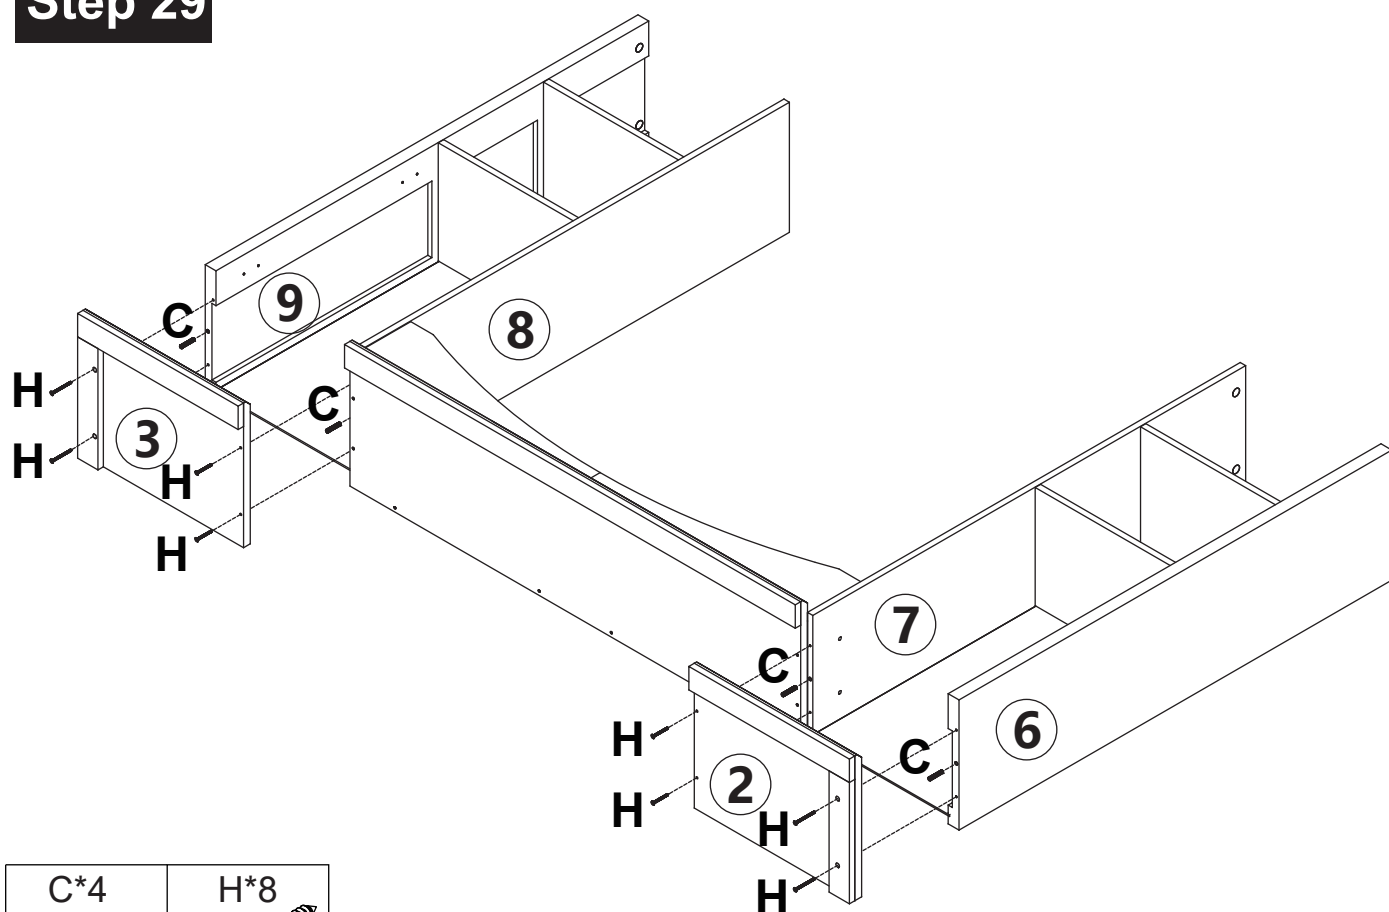



C*4



H*8




Step 30

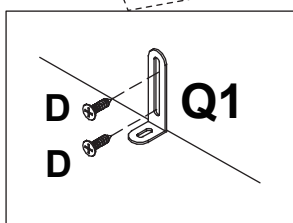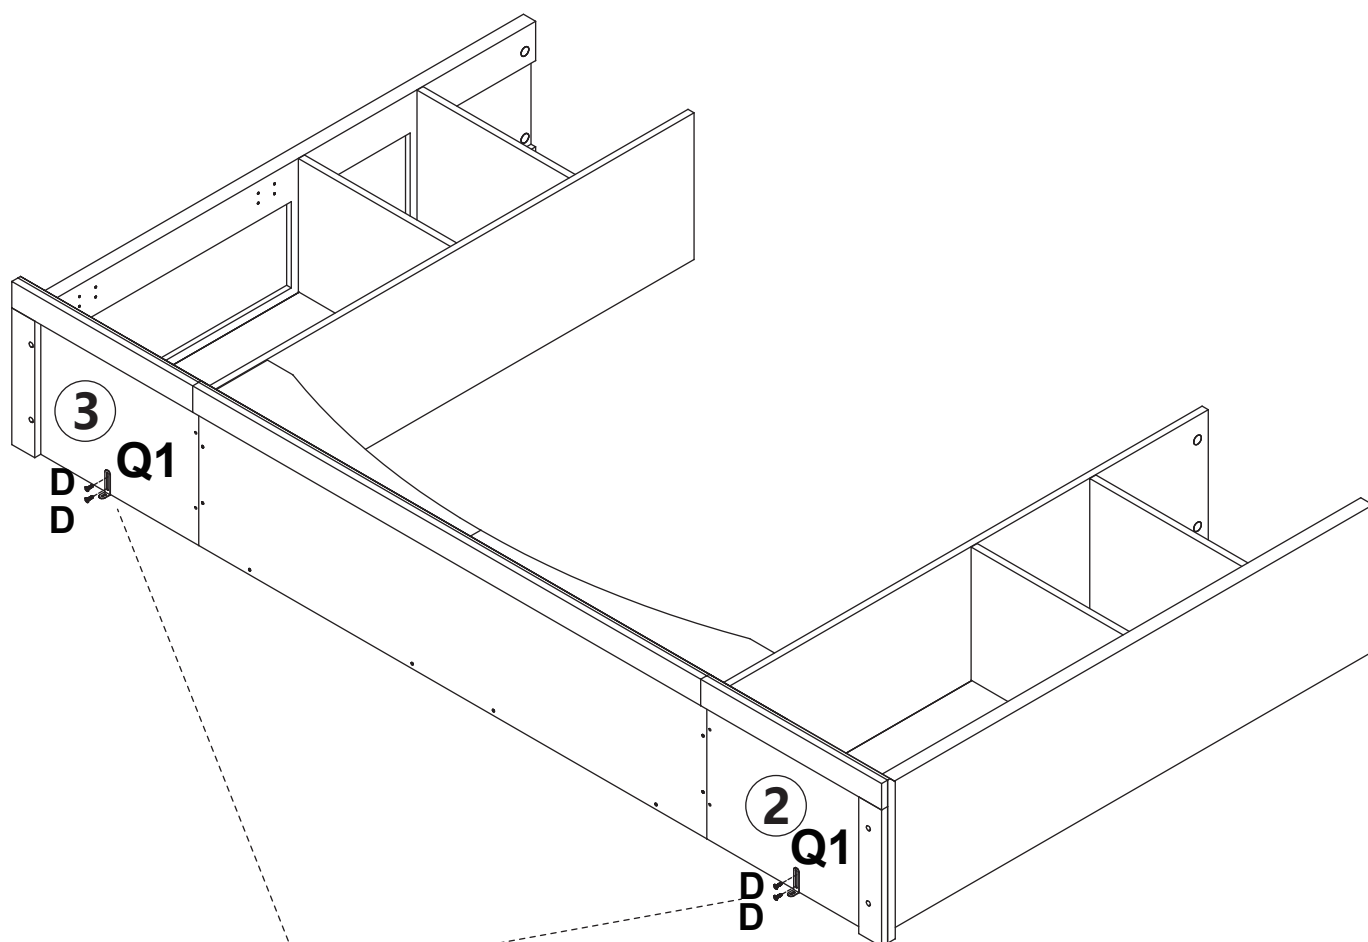





D*4



Q1*2







Step 31

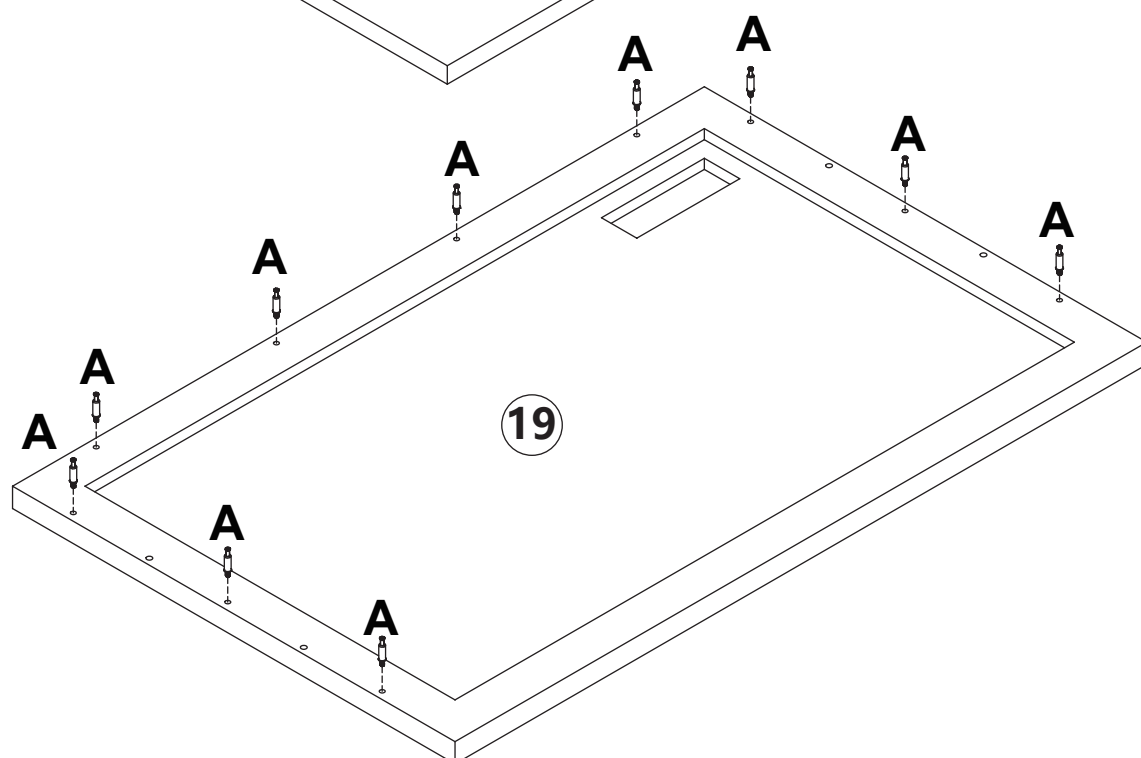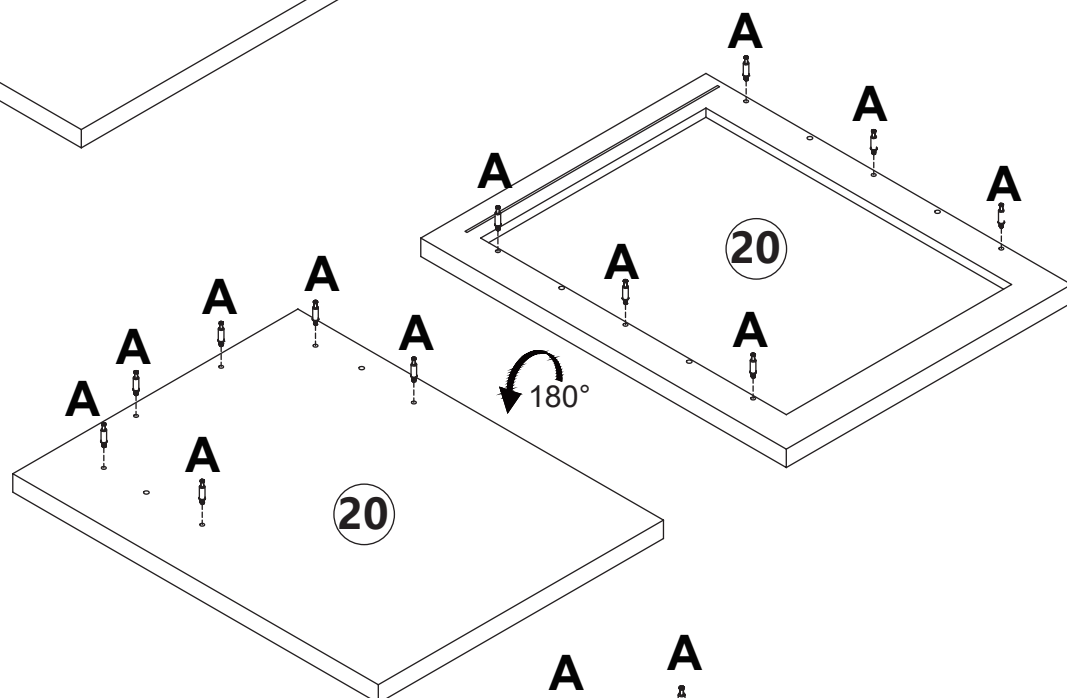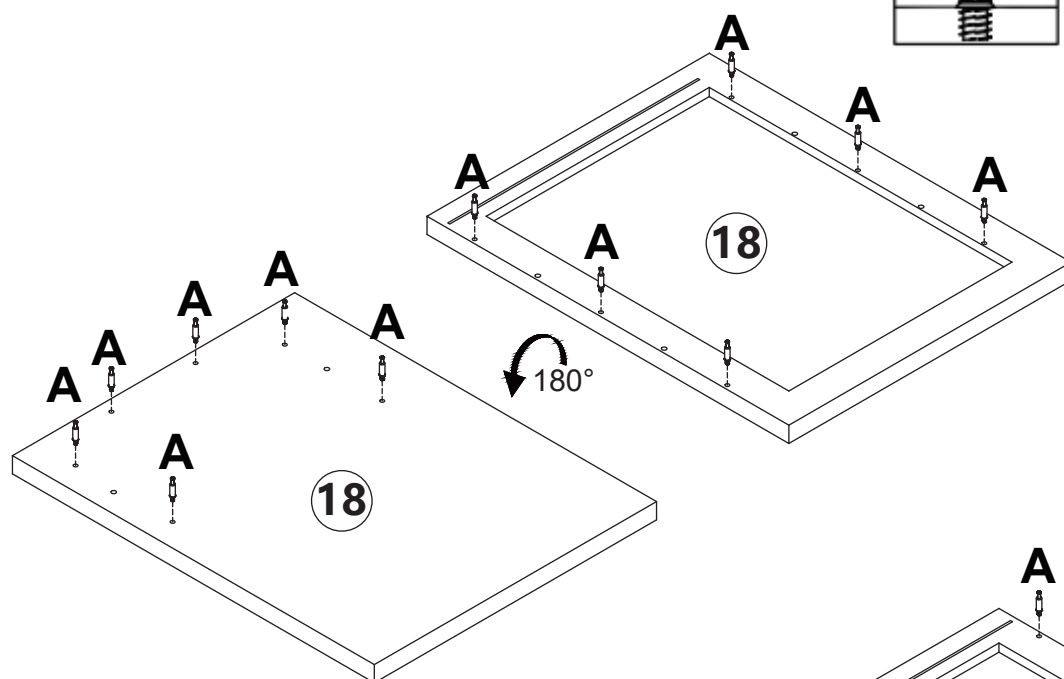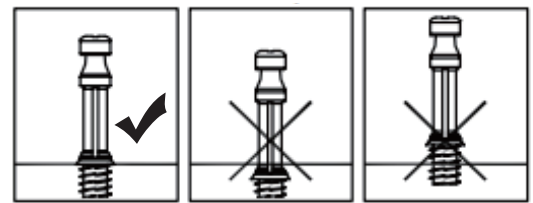





A*34







Step 32

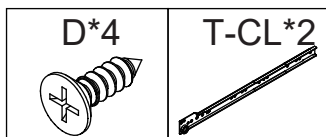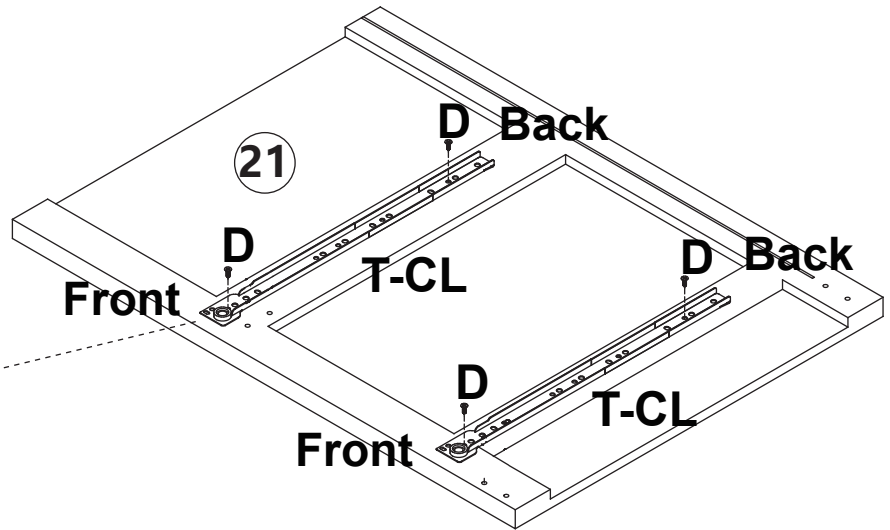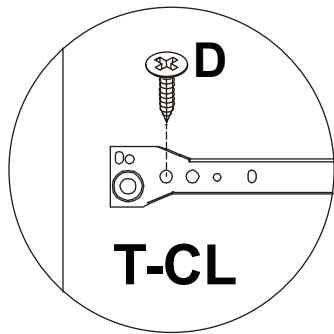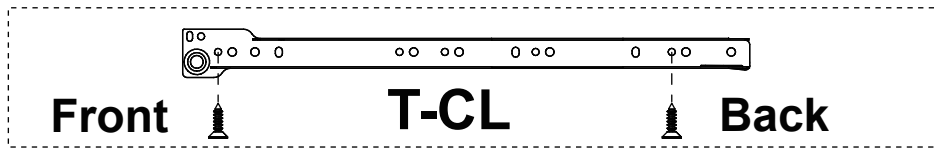





Step 33

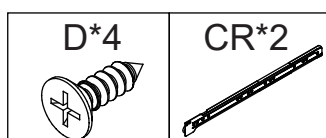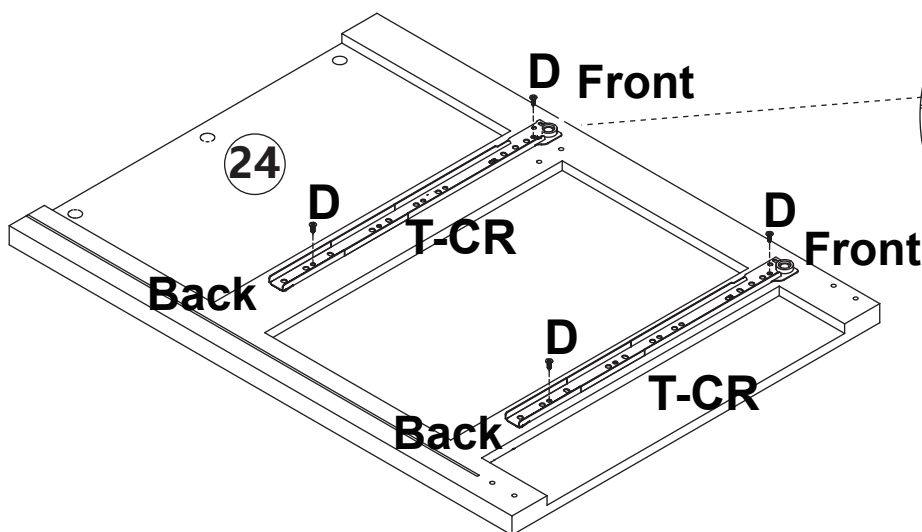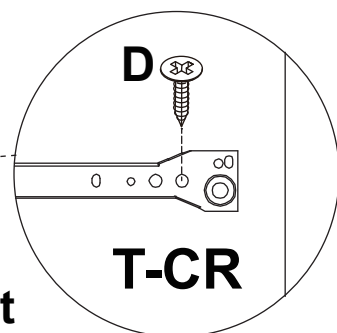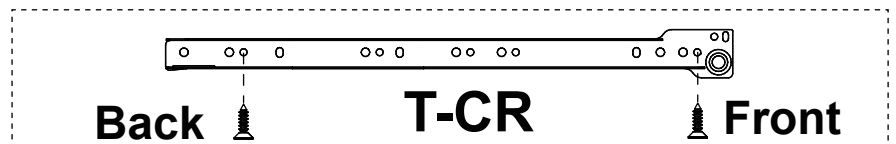


Step 34

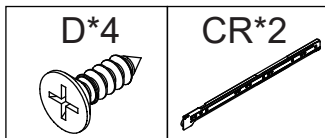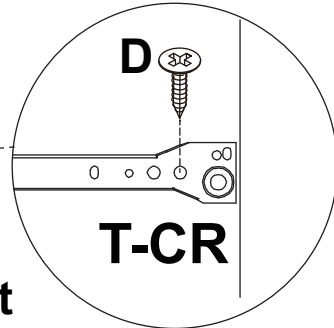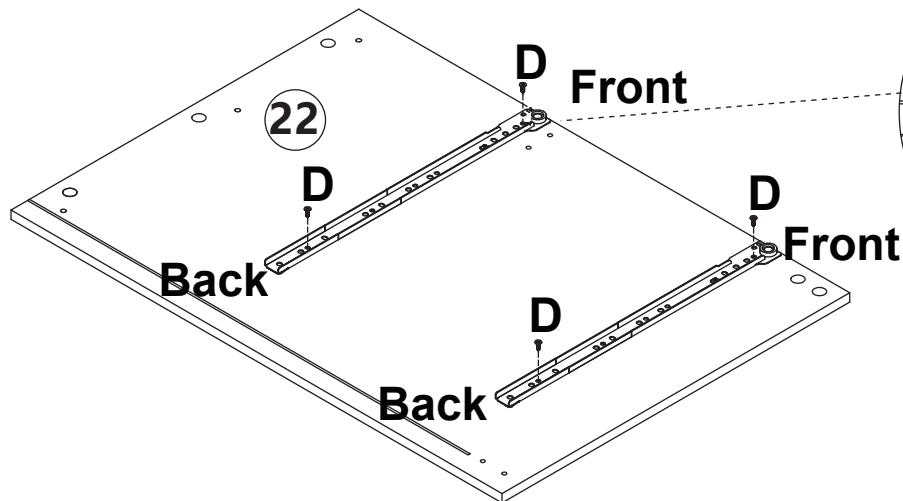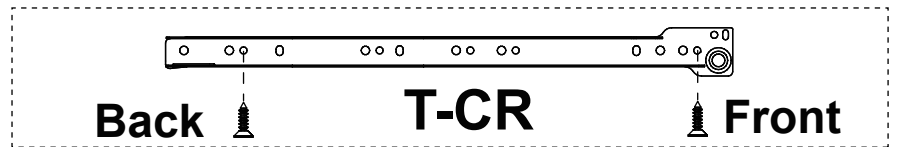



Step 35

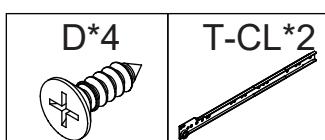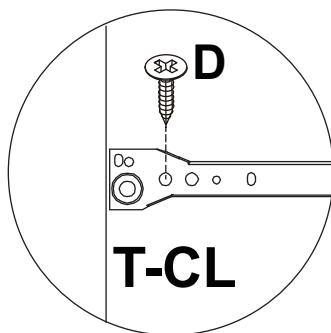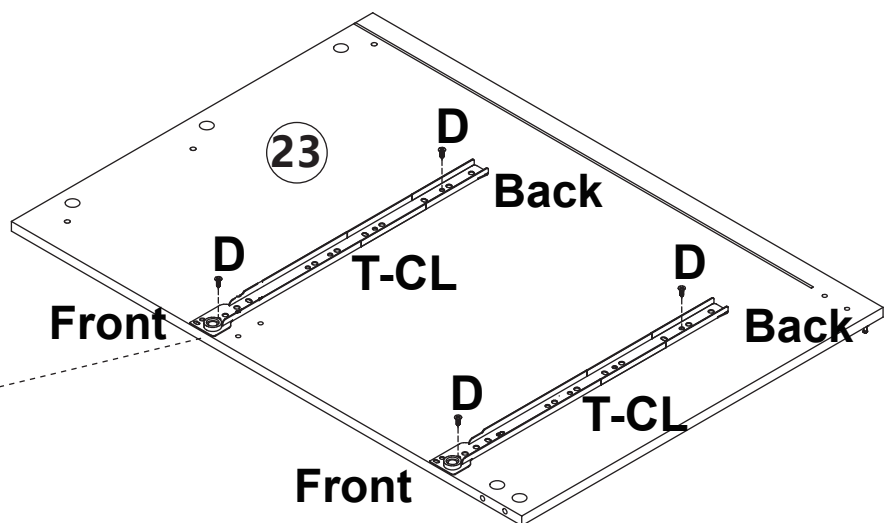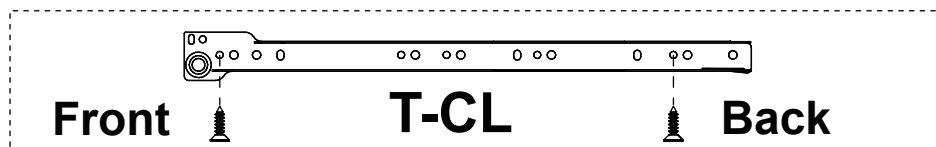




Step 36

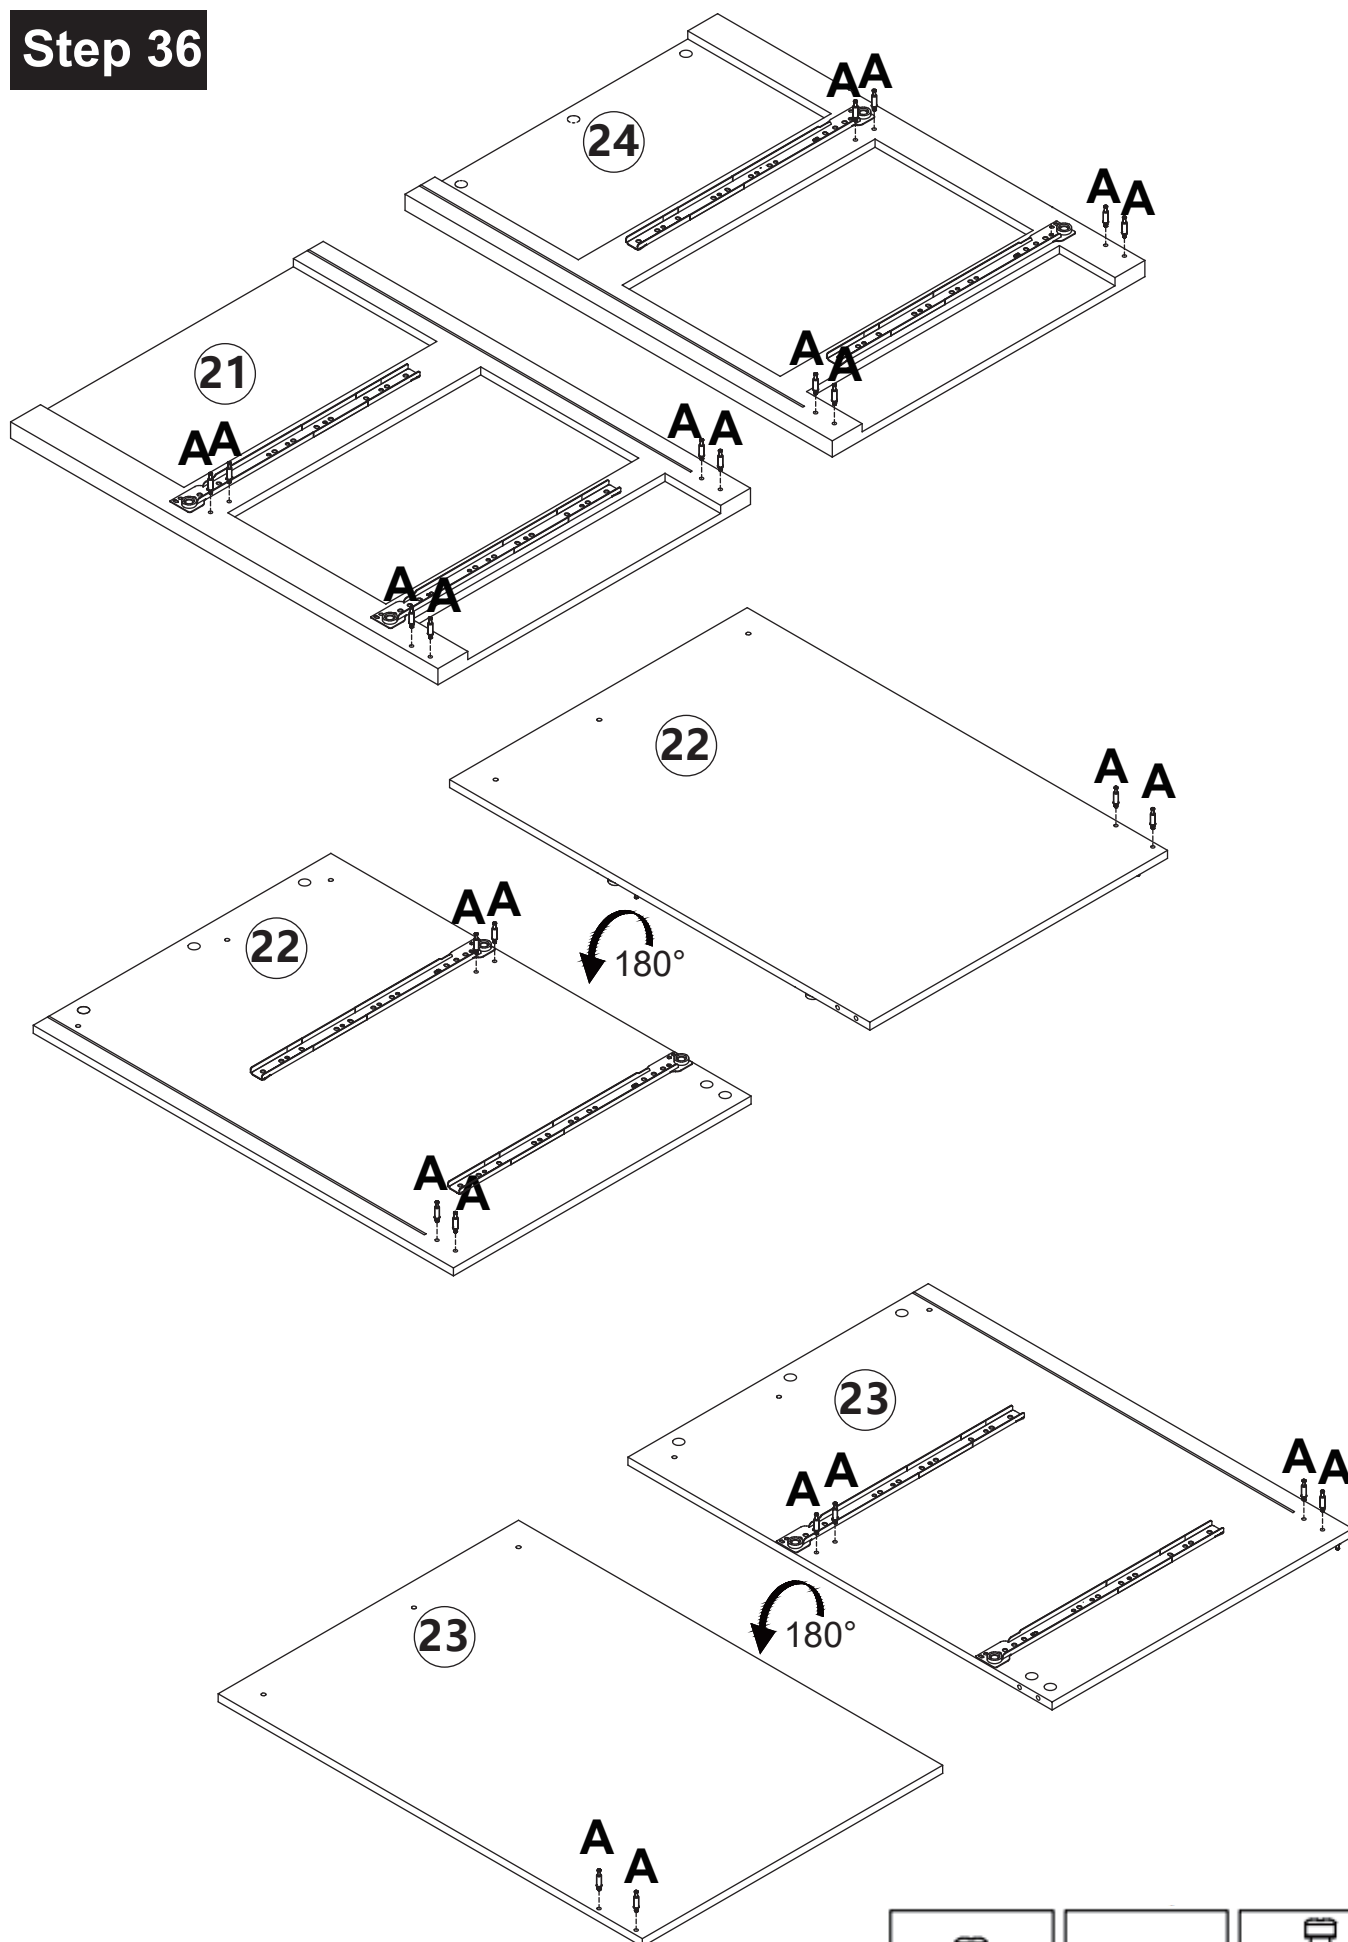




A*24

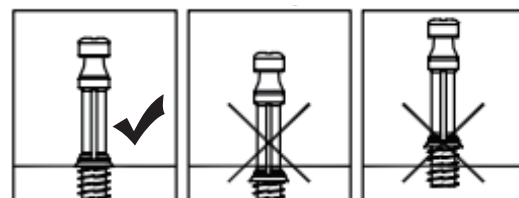


Step 37

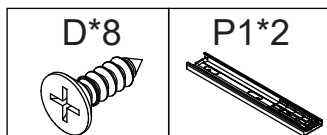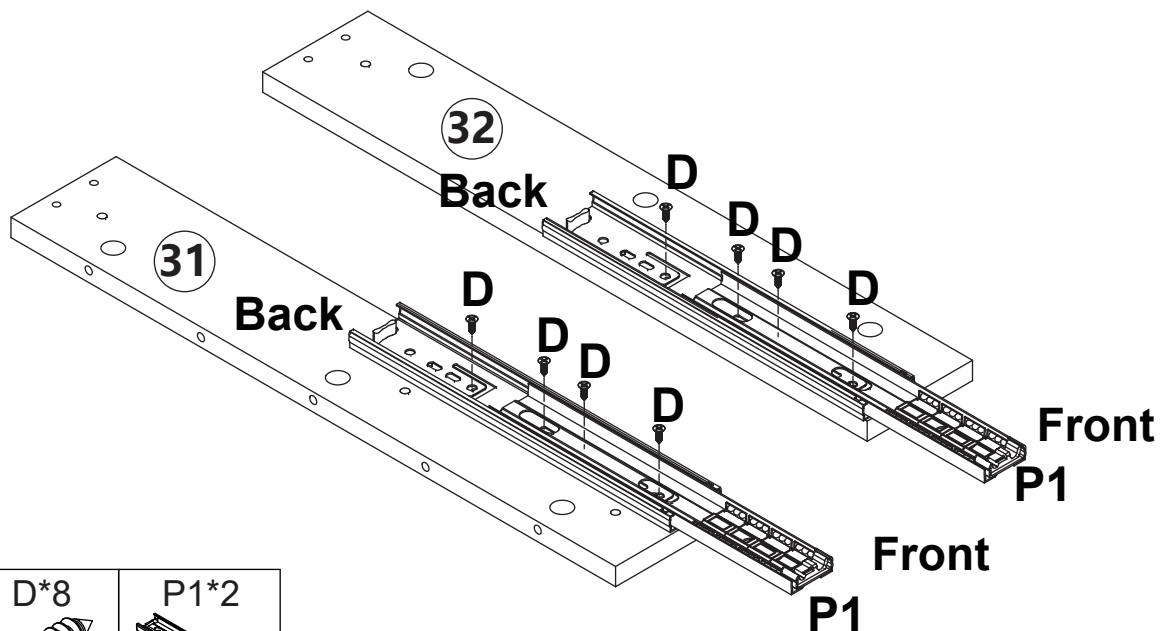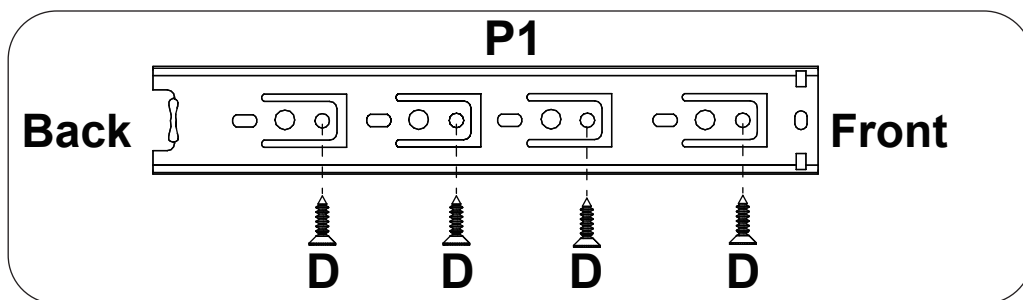


Step 38

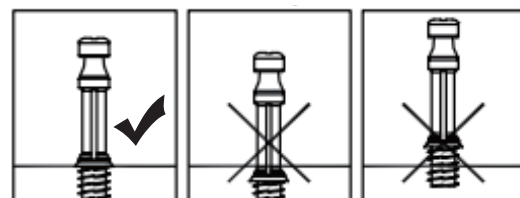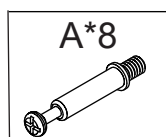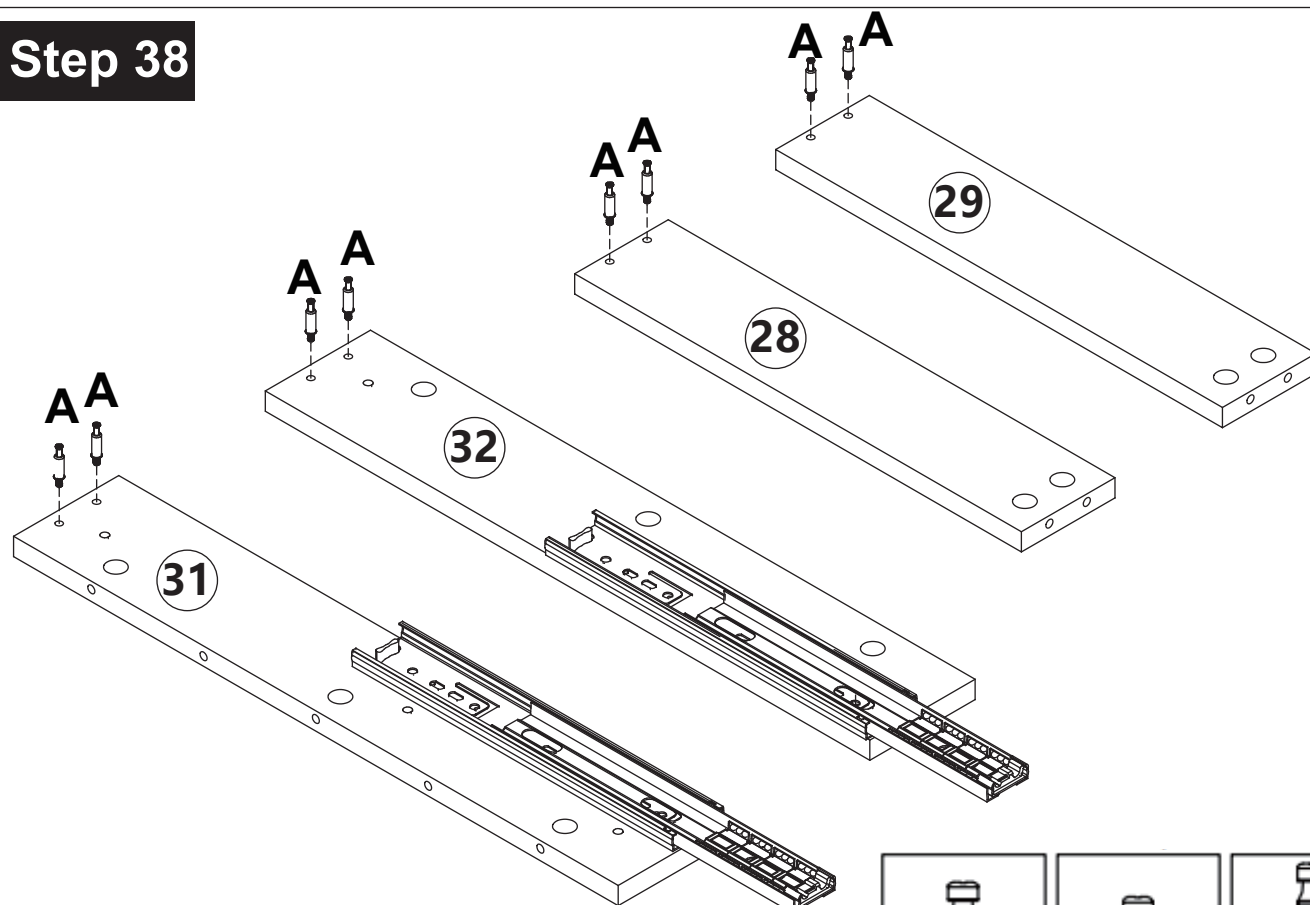


Step 39

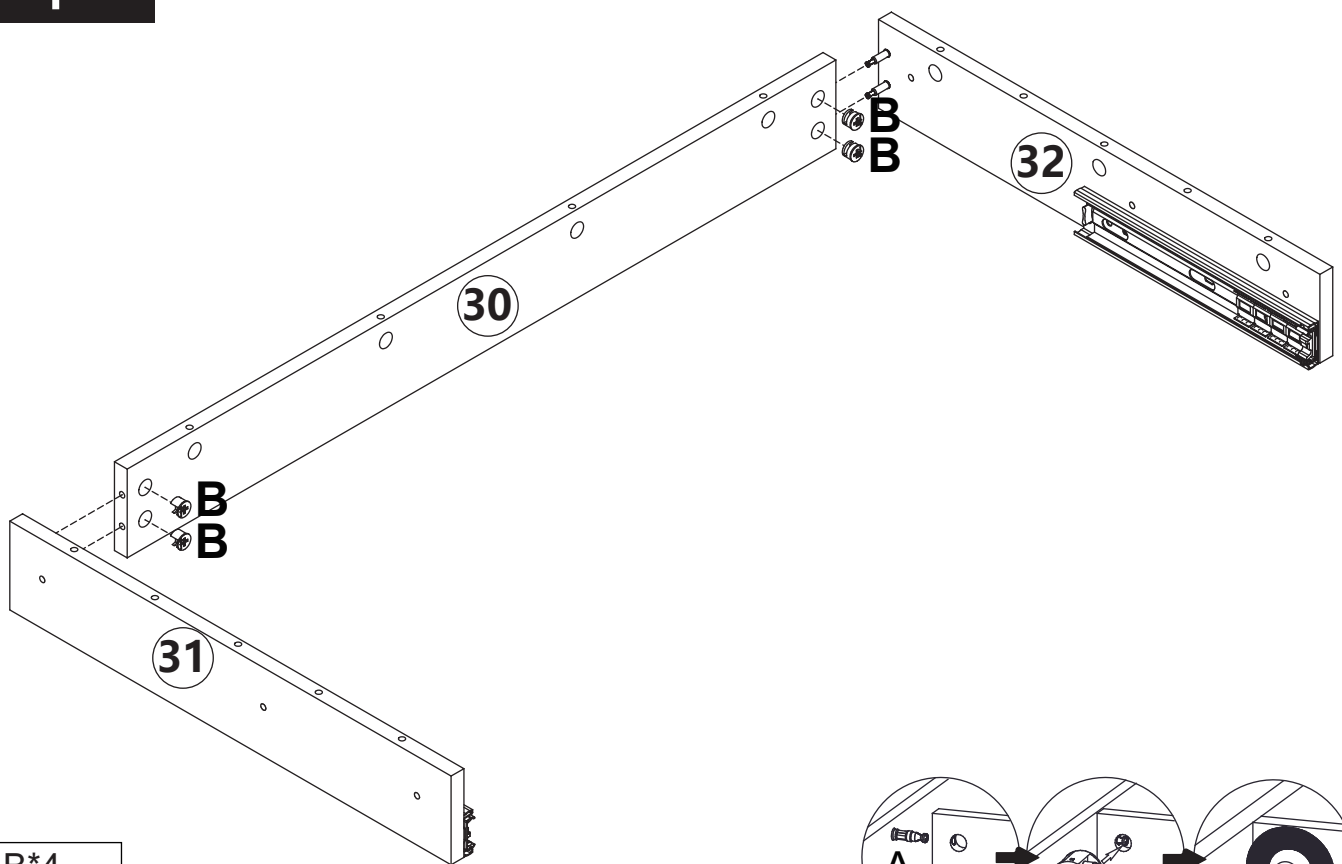

B*4

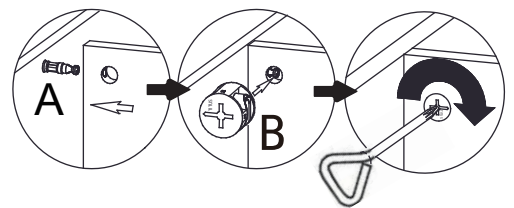


Step 40

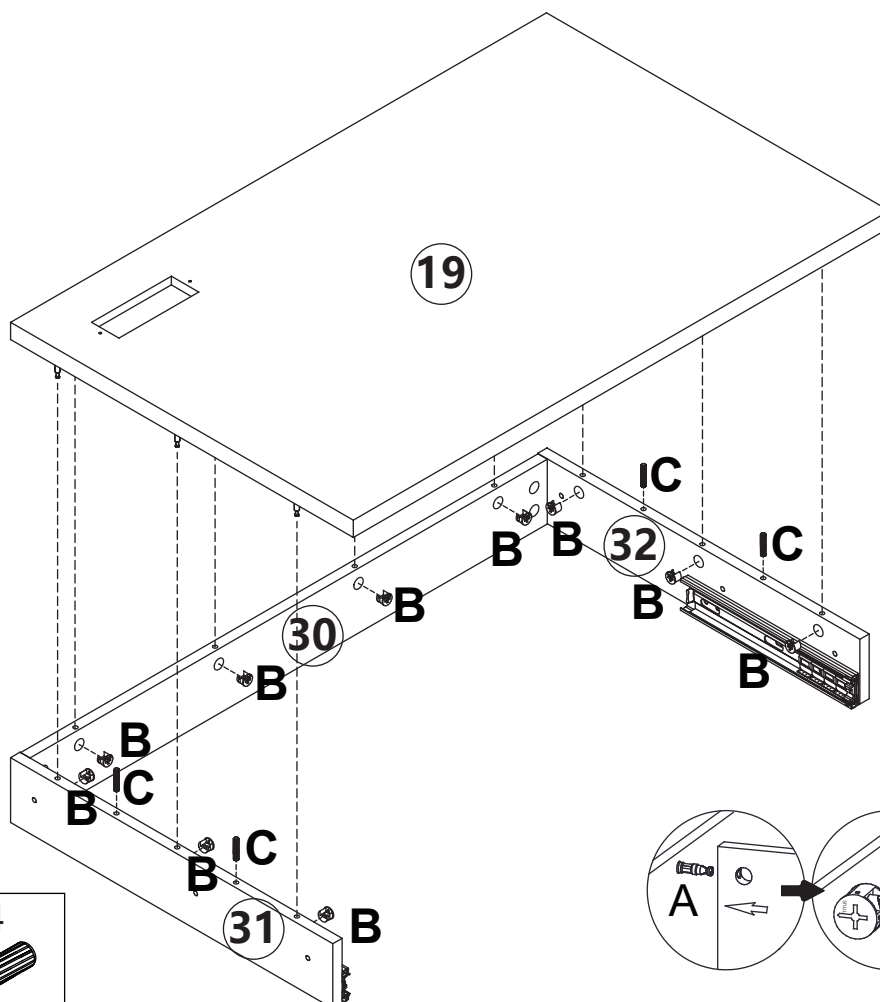






B*10




C*4

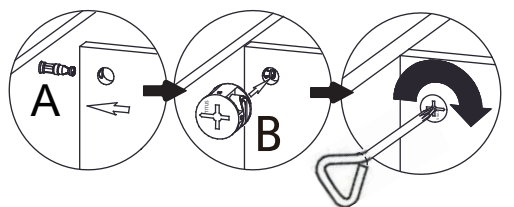

Step 41

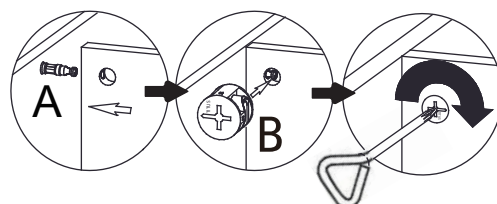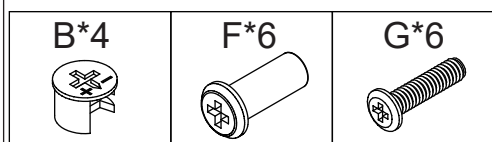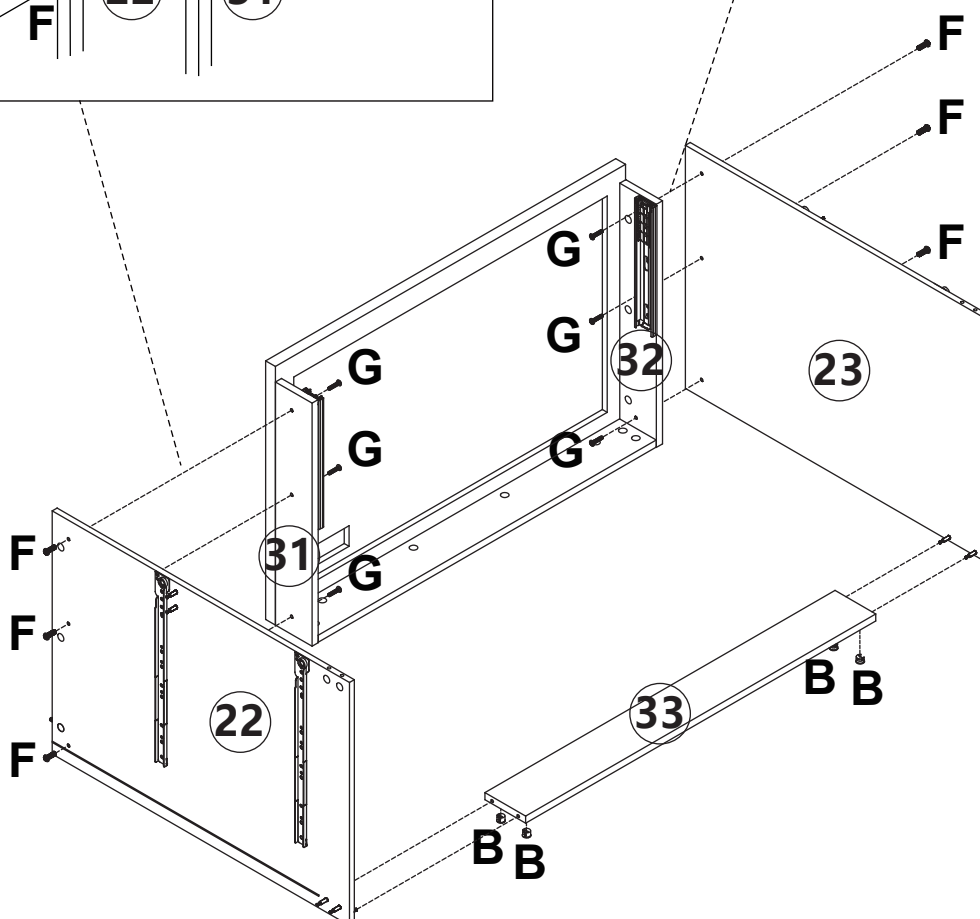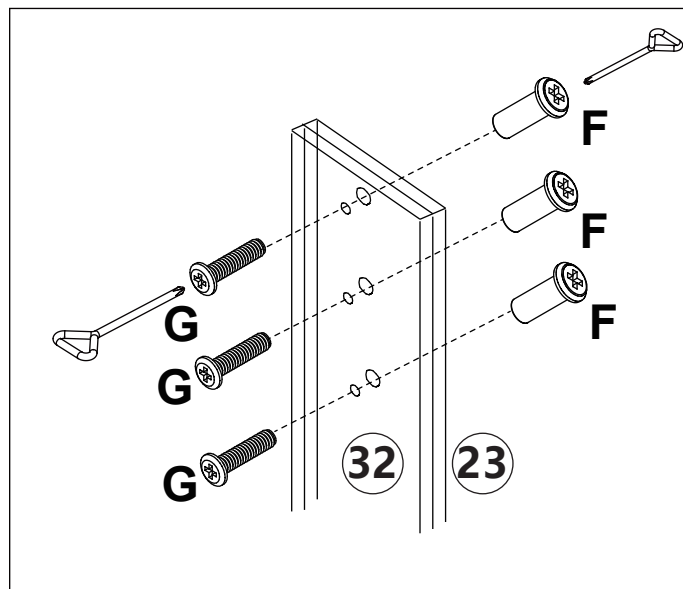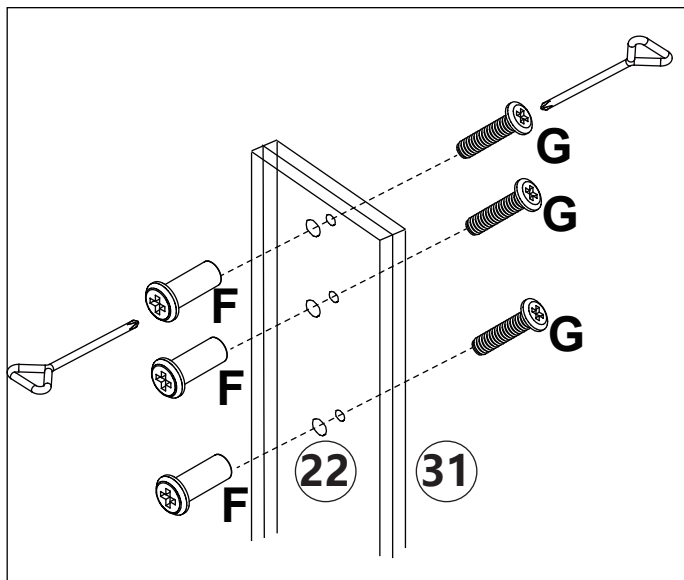


Step 42

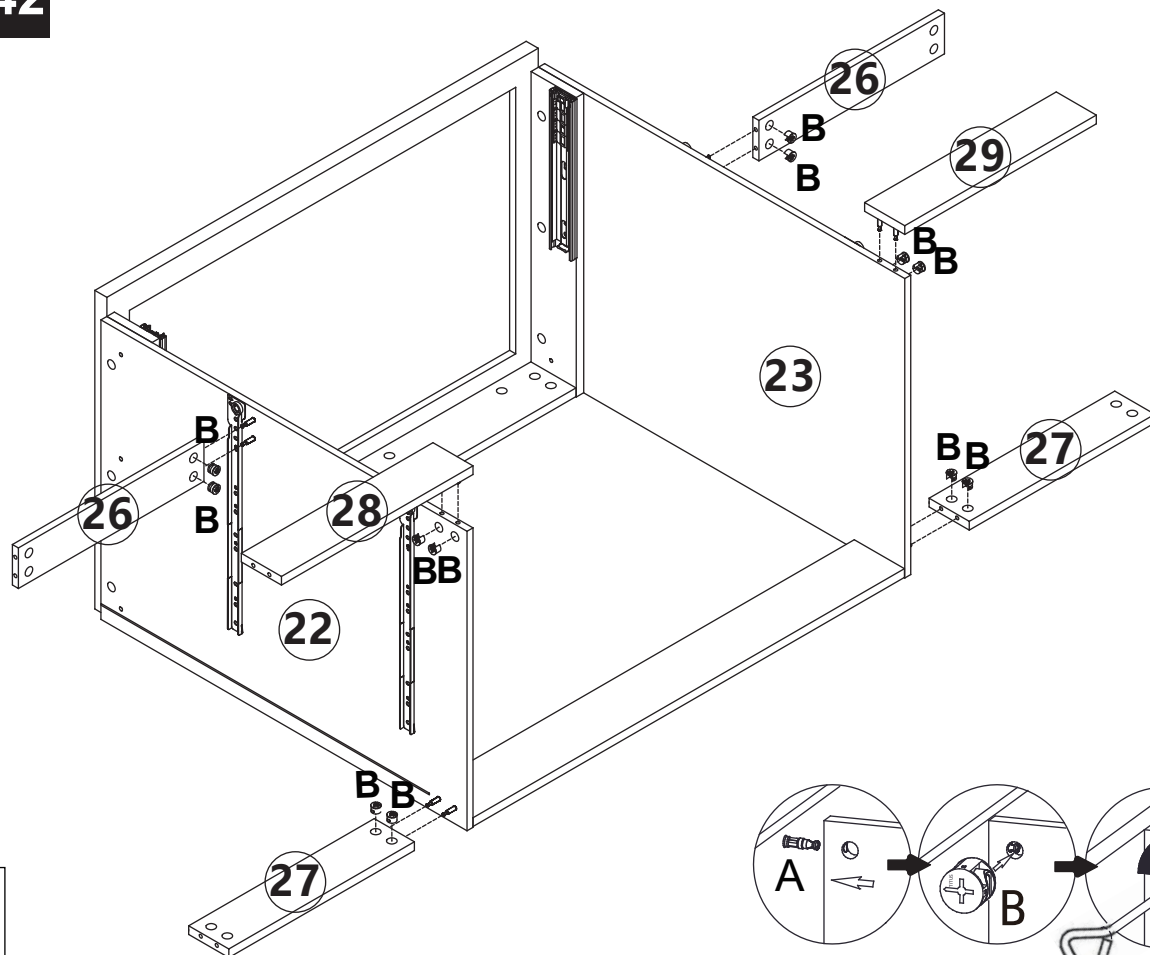

B*12



Step 43

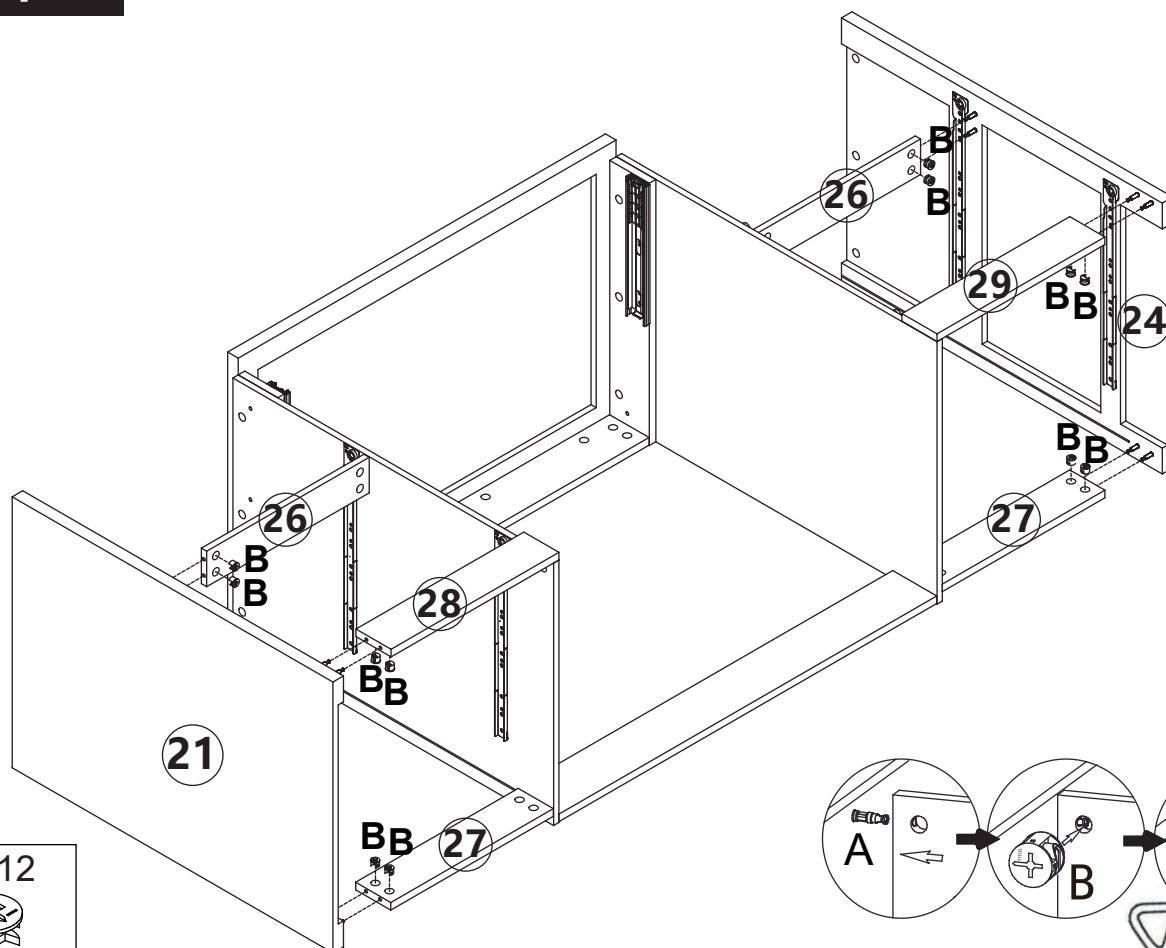


B*12




Step 44

It's better if two people work together on this step.

Please flip carefully!

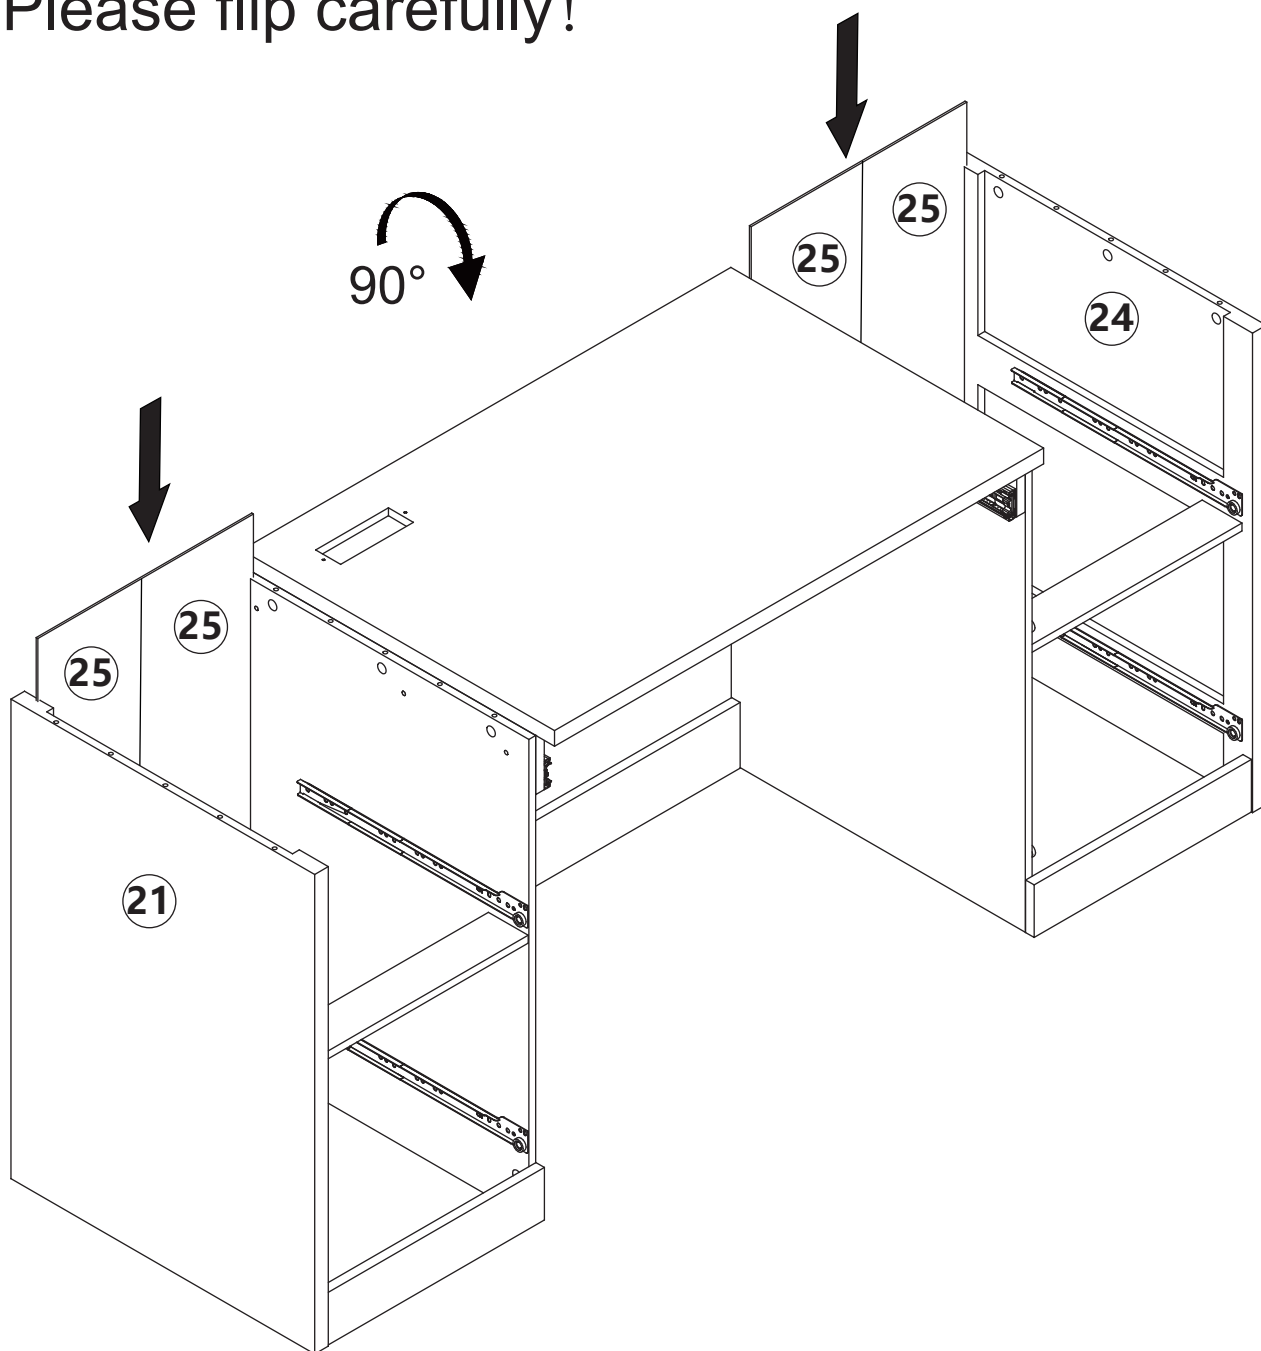


Step 45

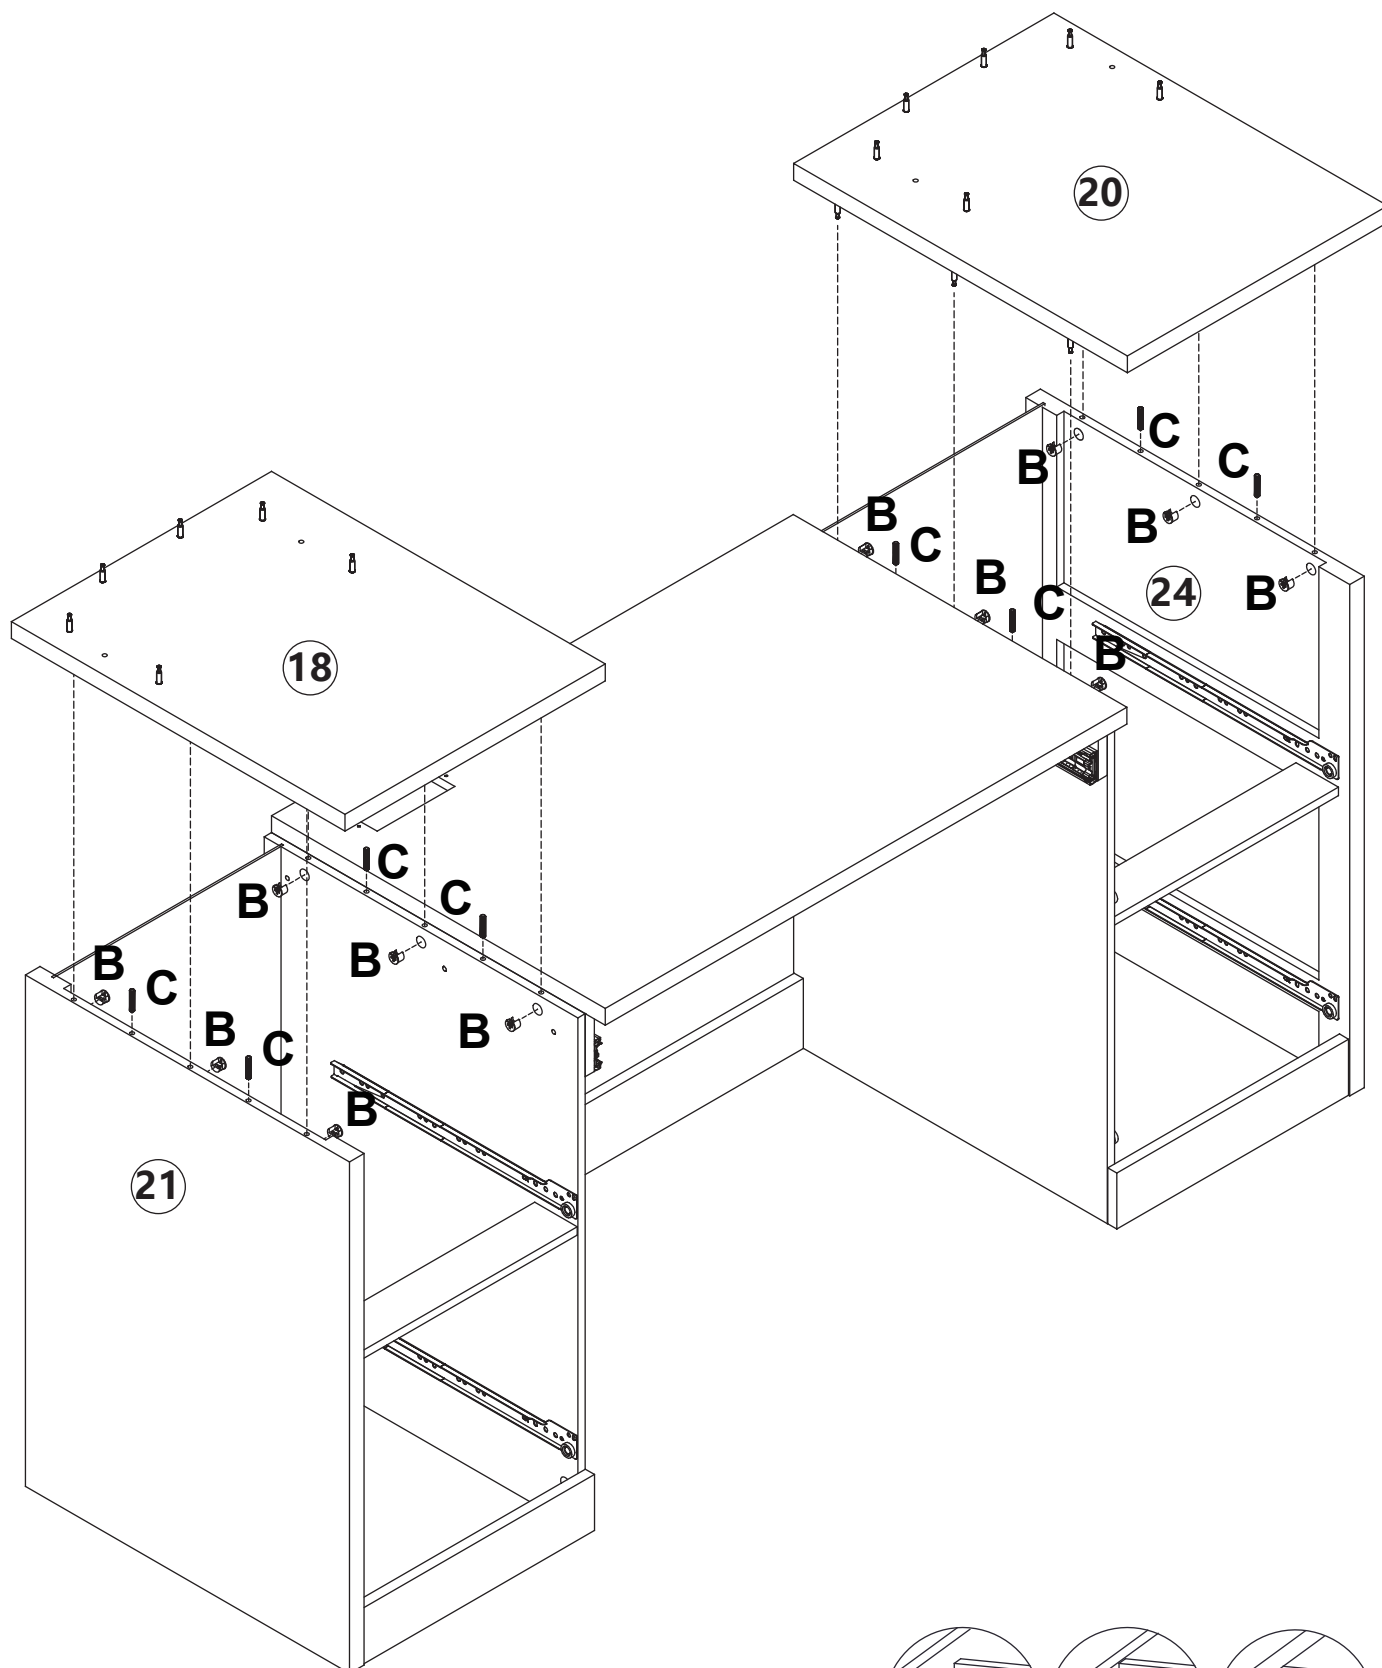

B*12






C*8

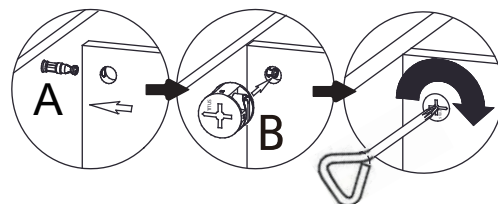

Step 46




It's better if two people work together on this step.

Please flip carefully!

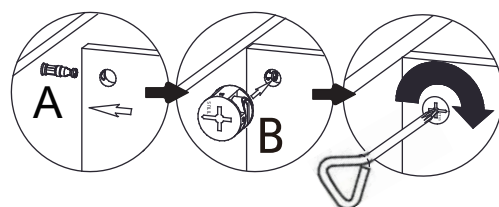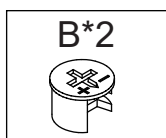
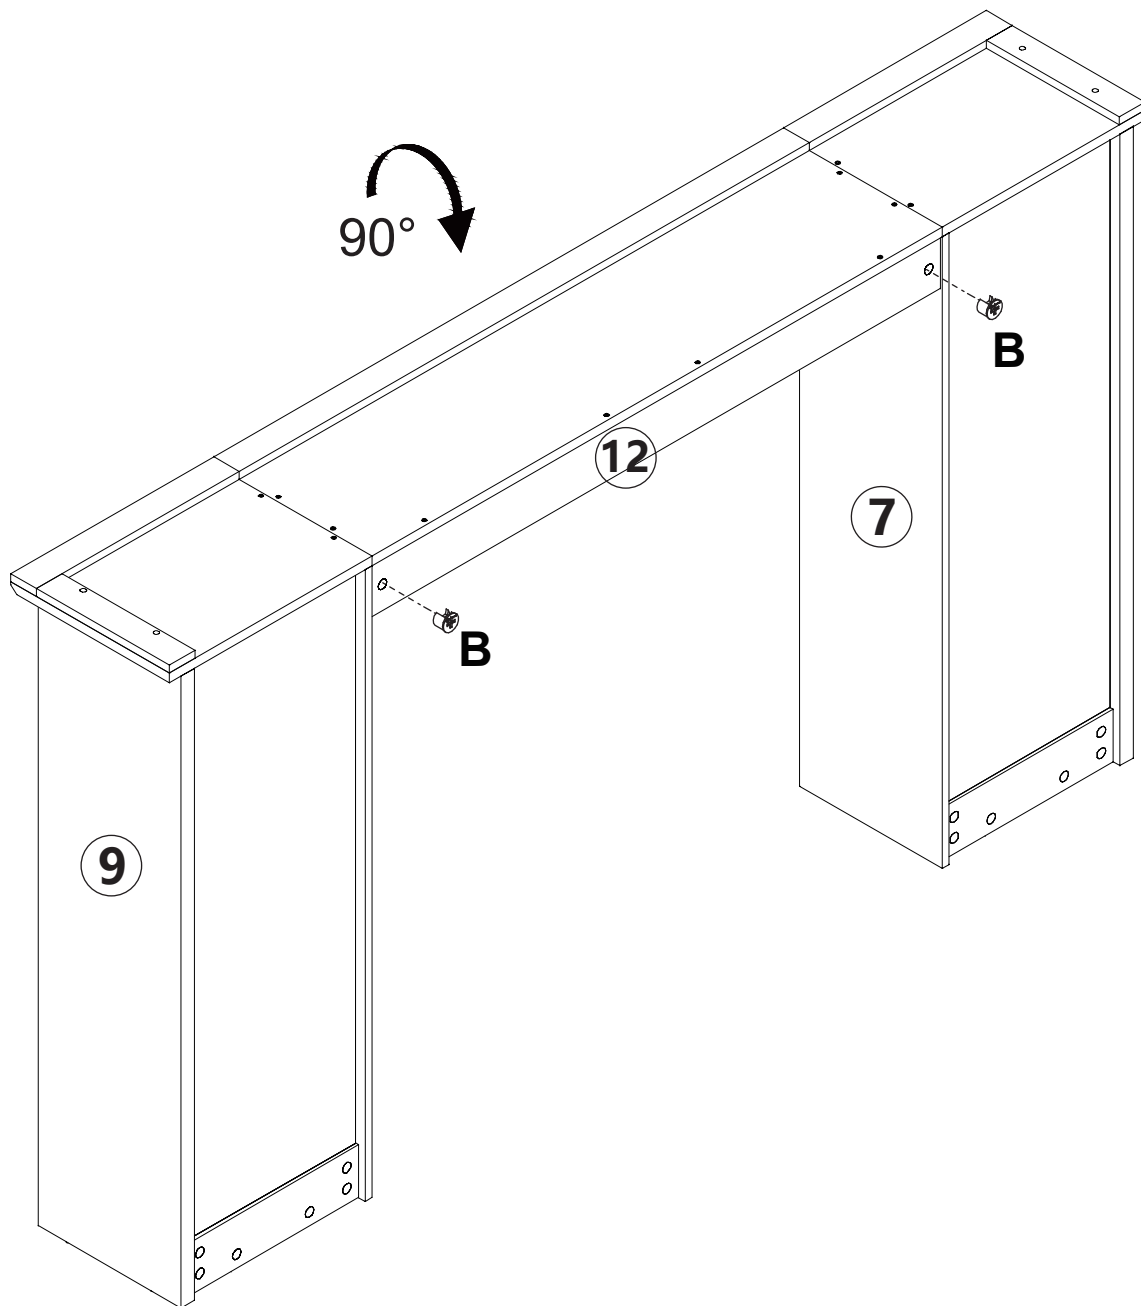


Step 47



It's better if two people work together on this step.

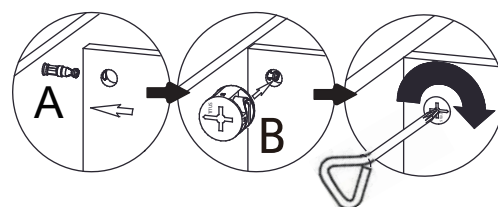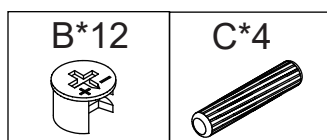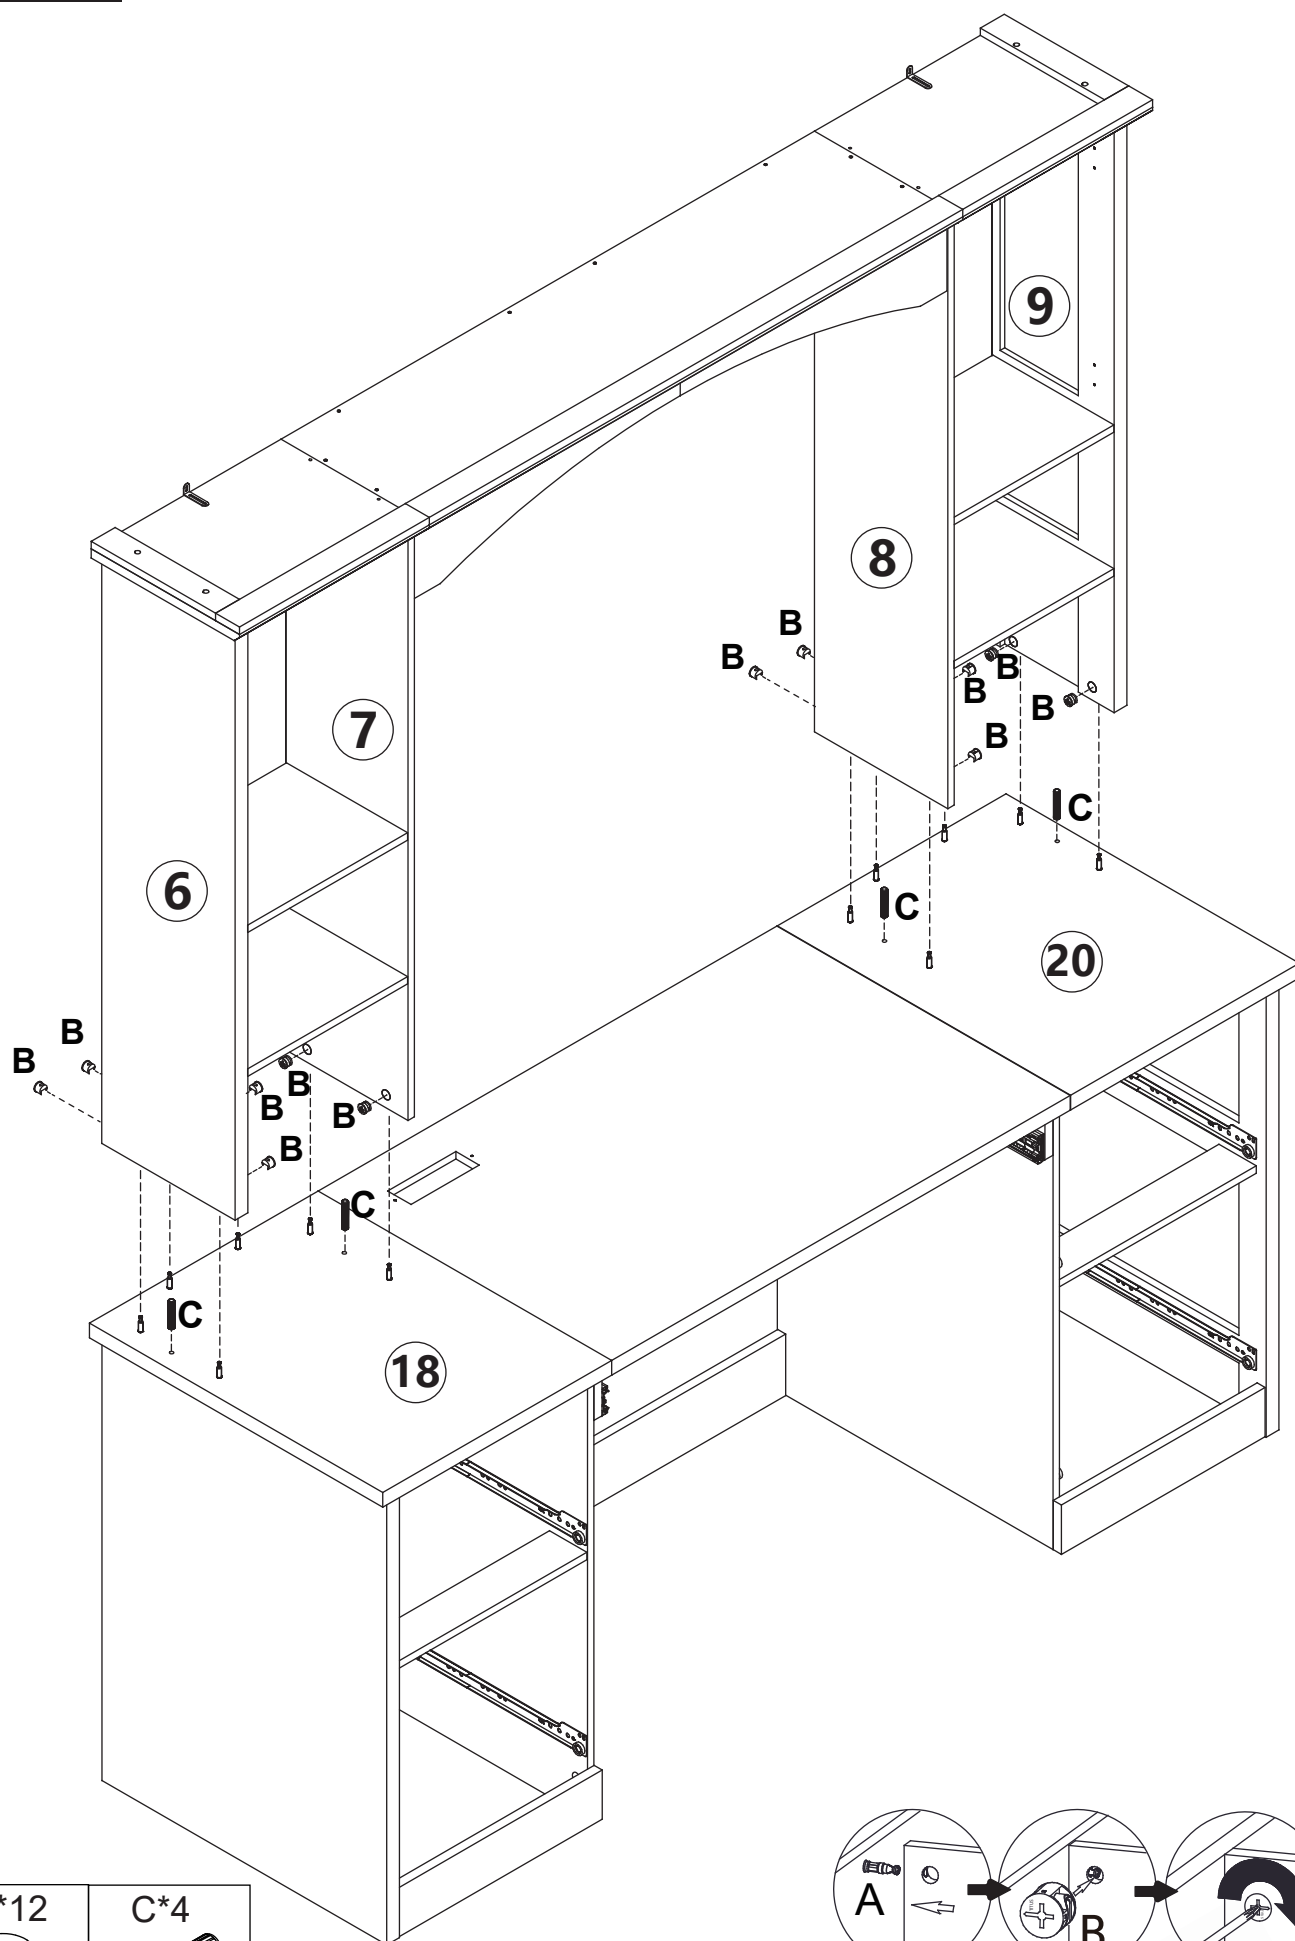



Step 48

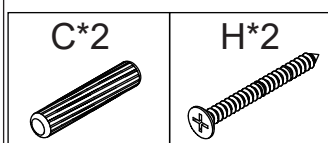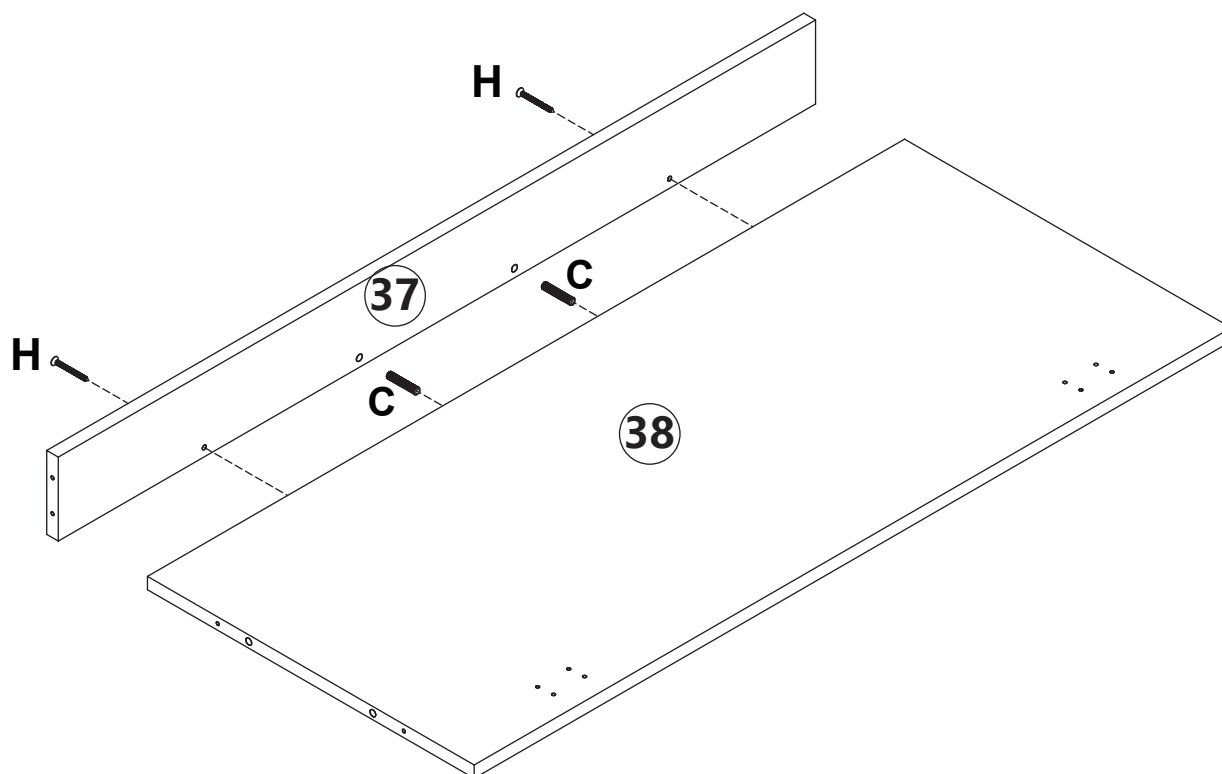



Step 49

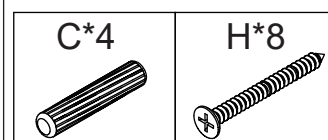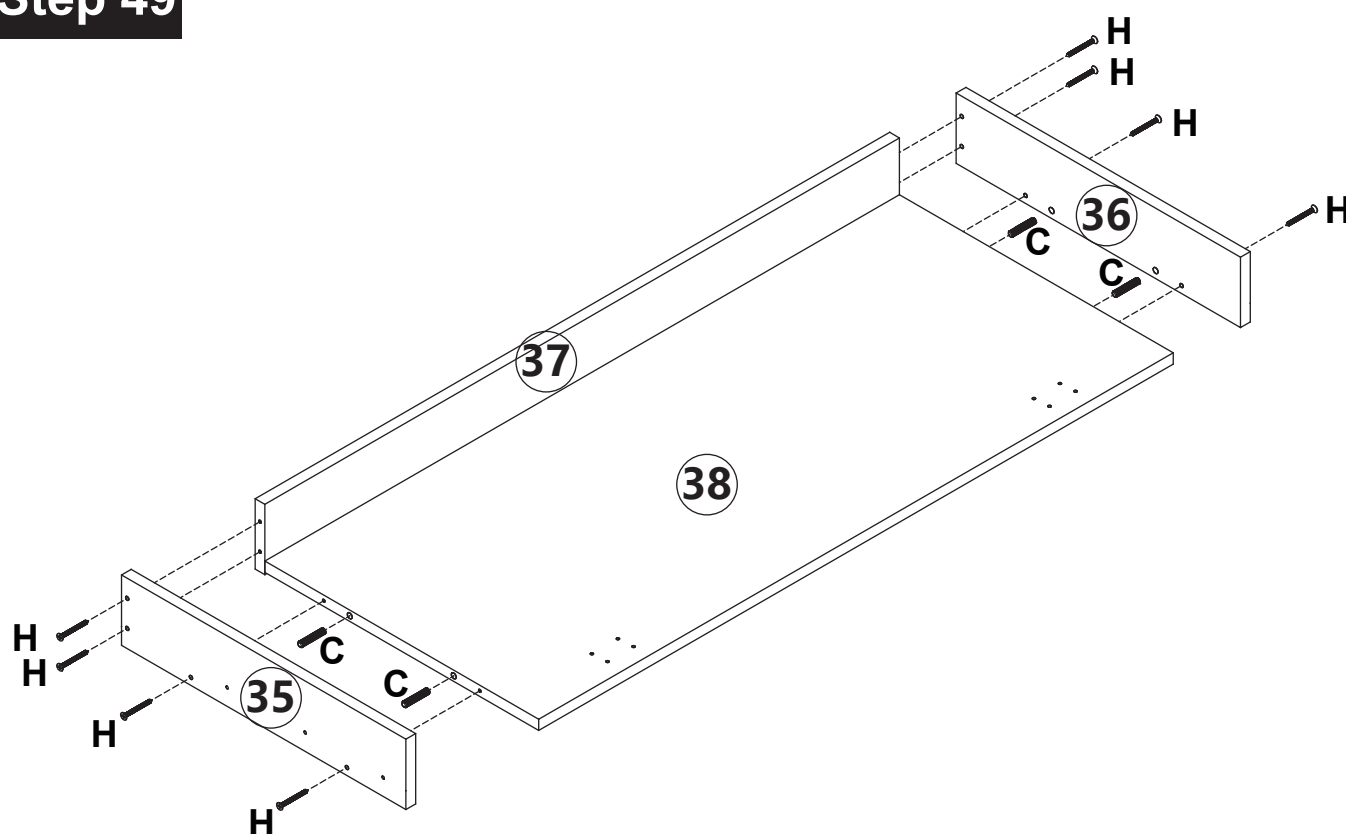




Step 50

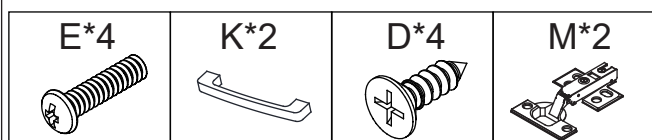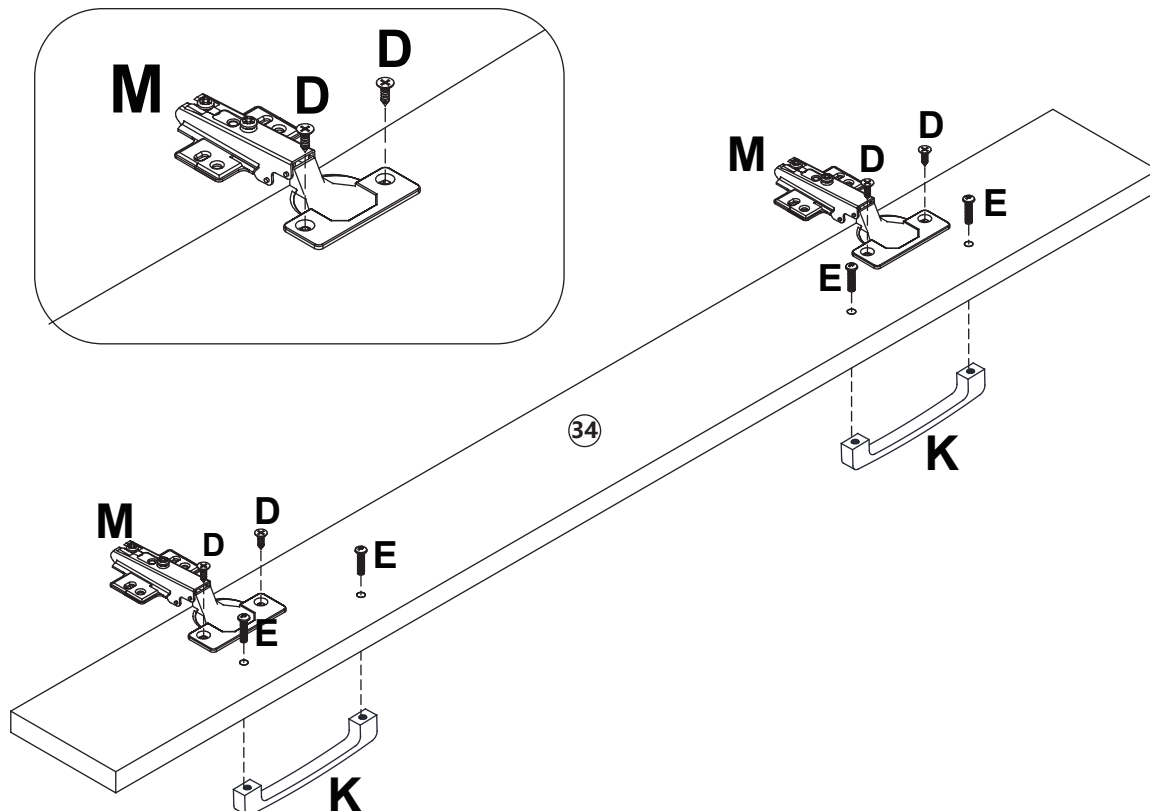




Step 51

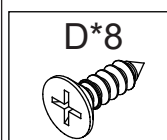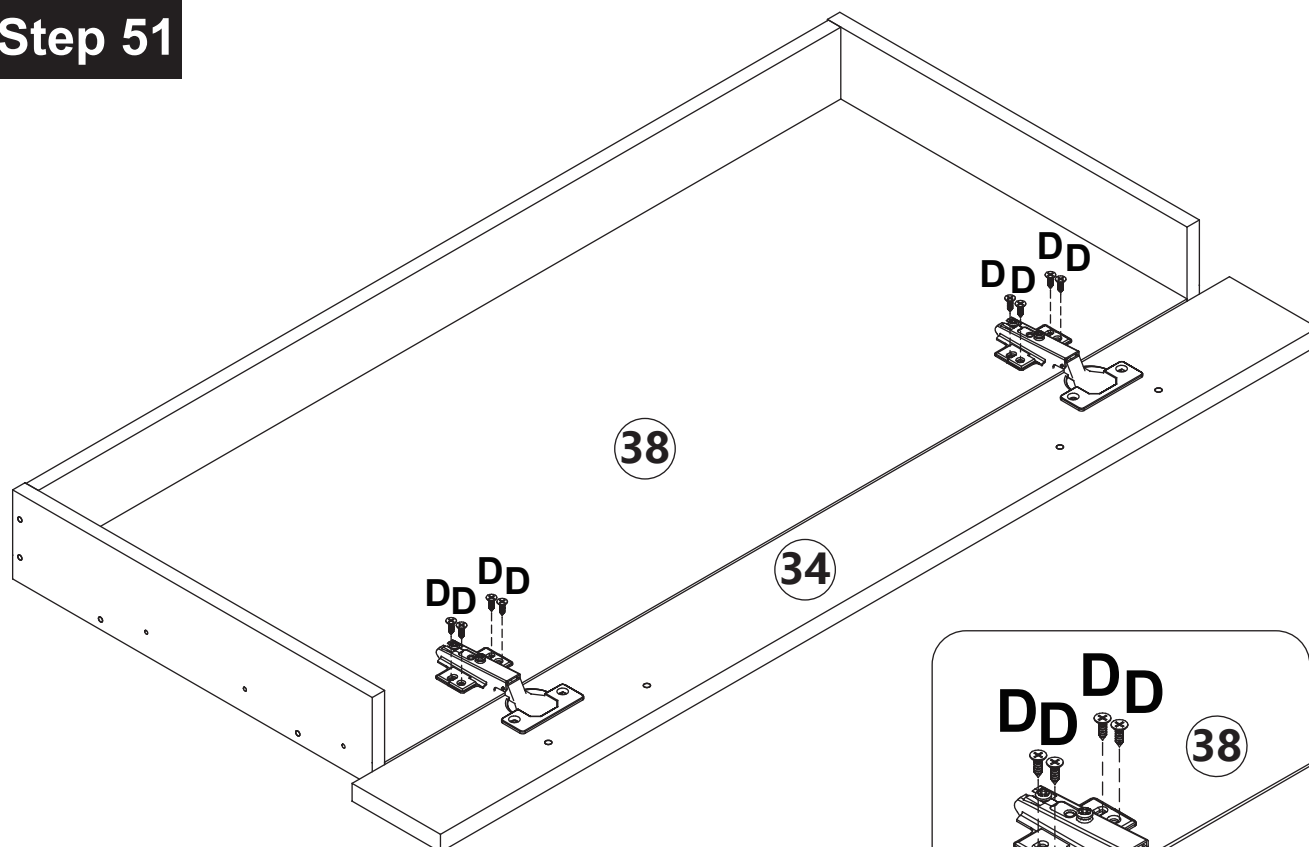


Step 52

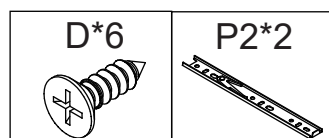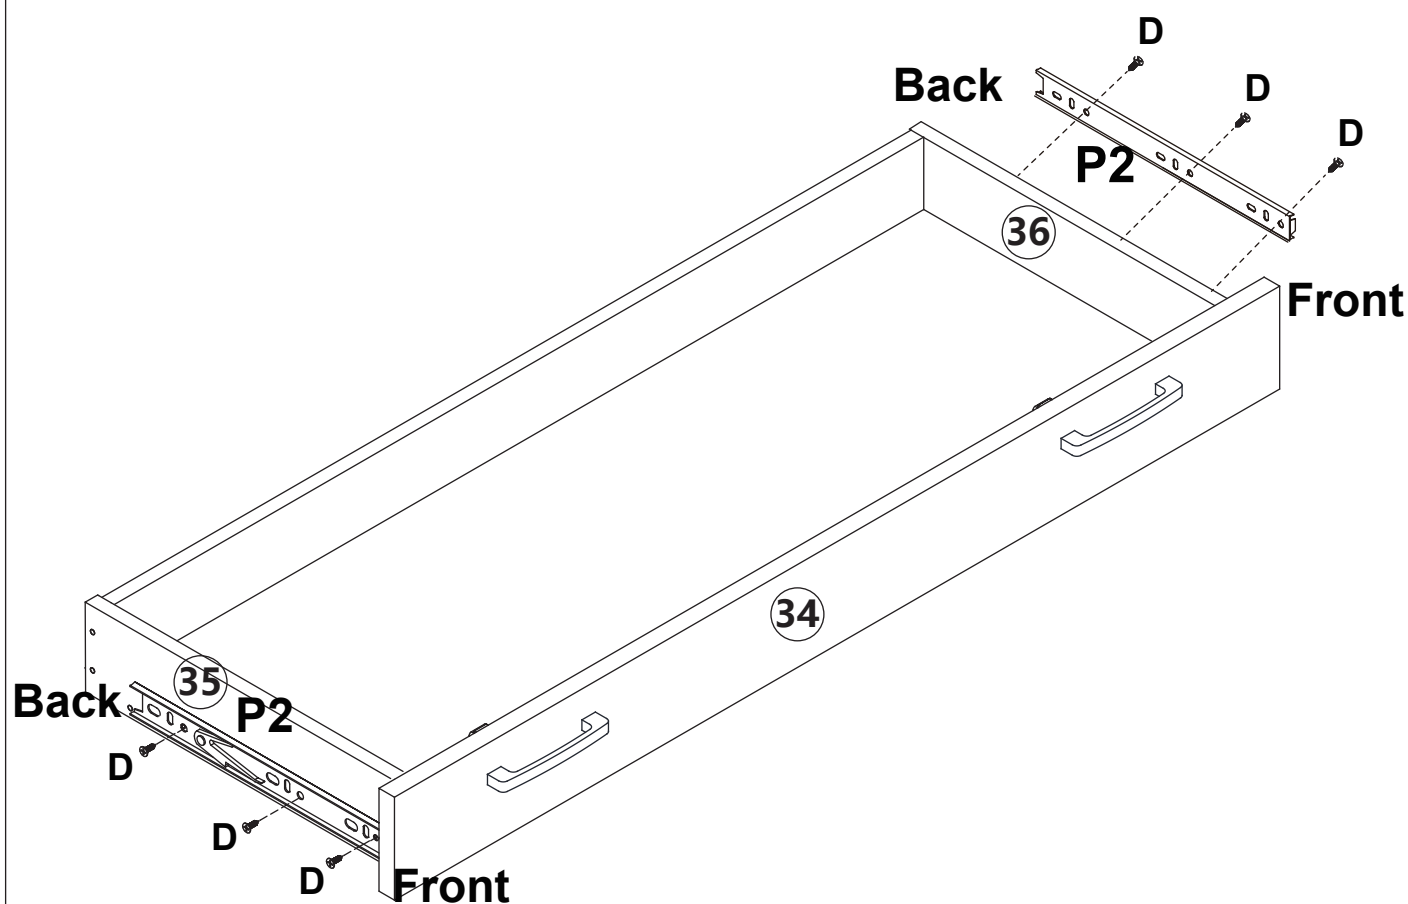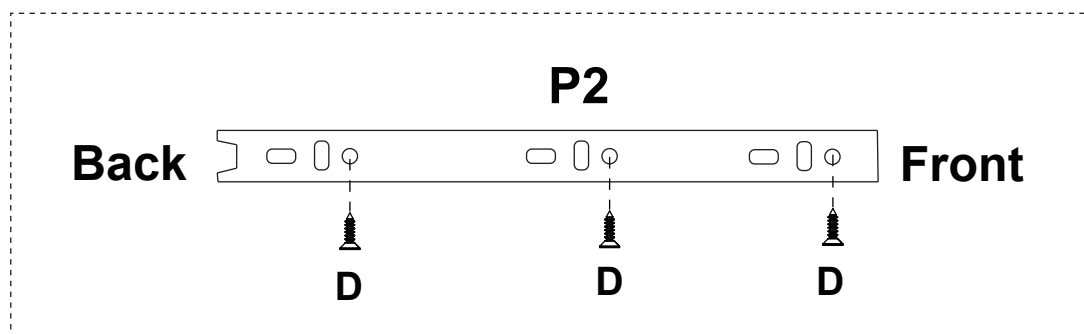


Step 53

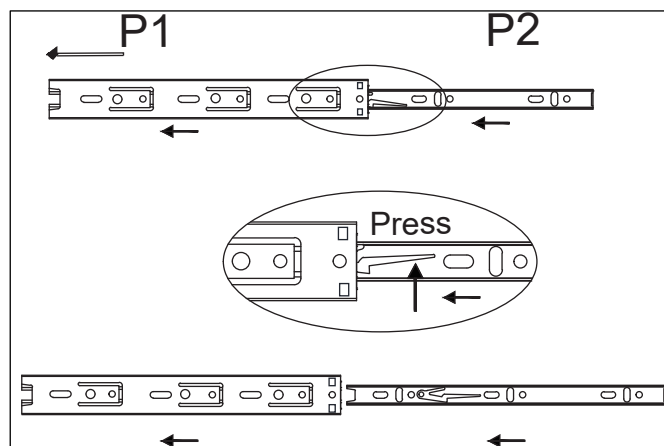
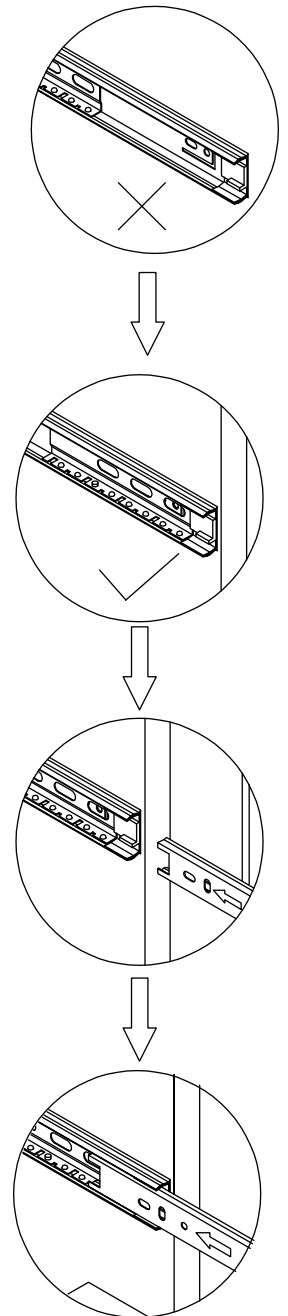
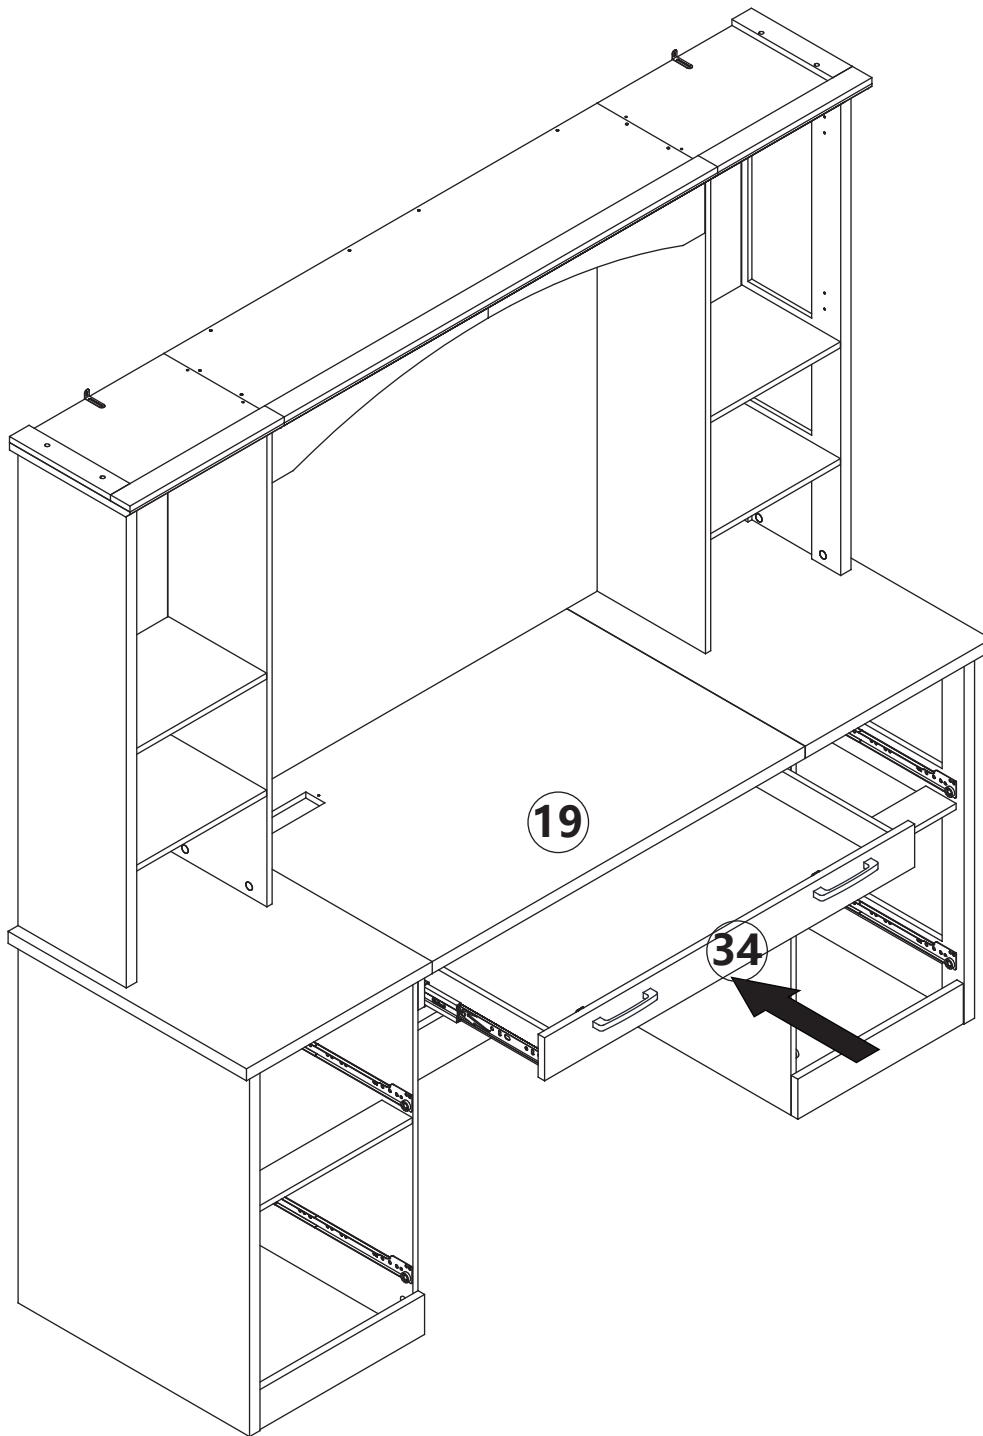


Step 54

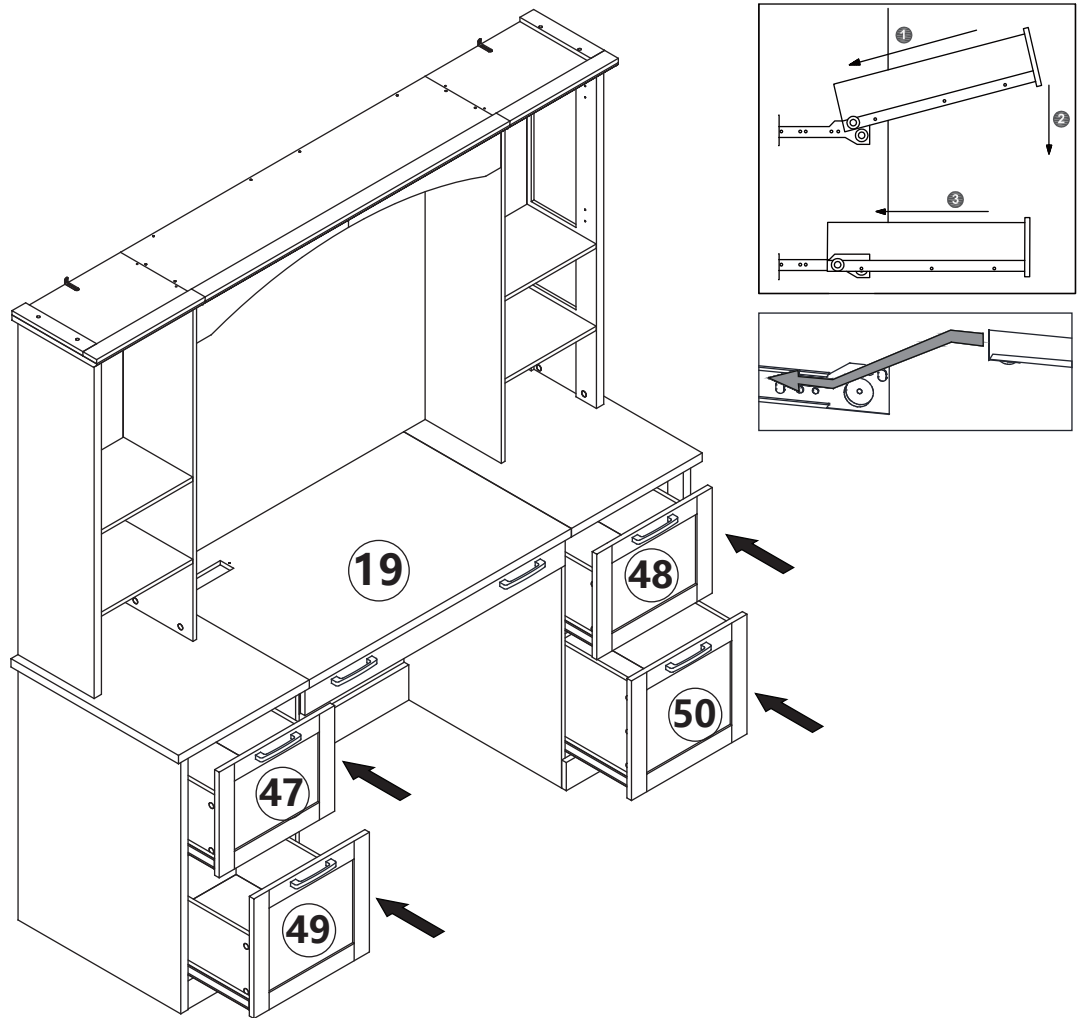


Step 55

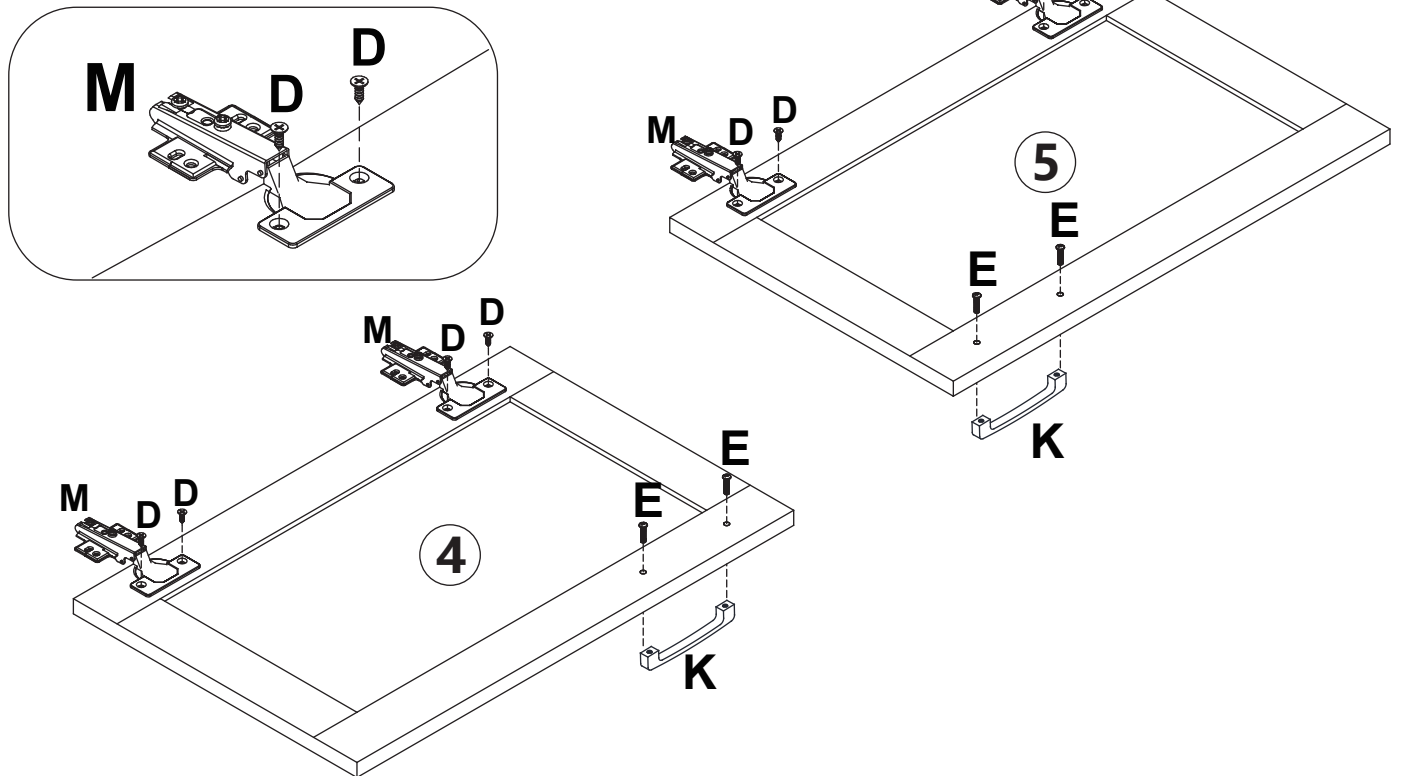

E*4	K*2	D*8	M*4
			


Step 56

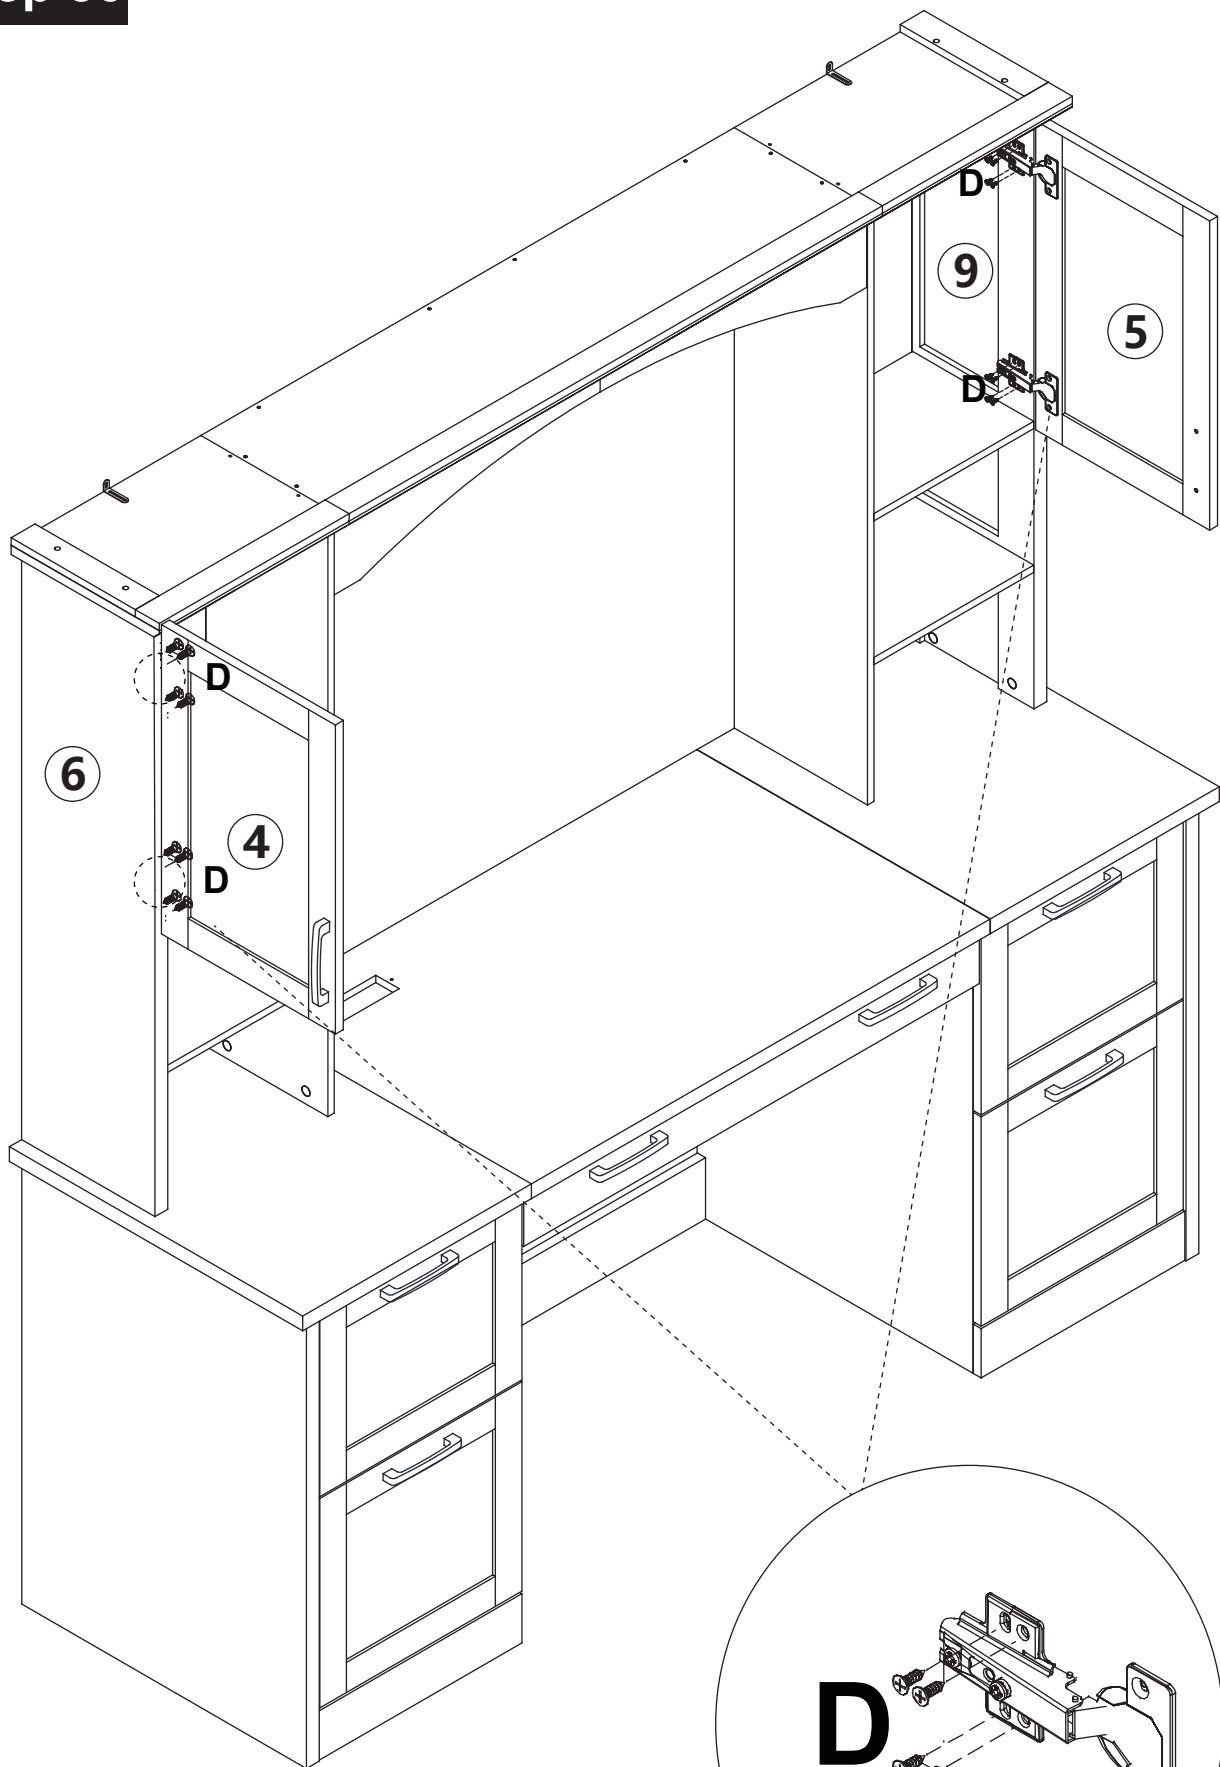



D*16





When the hinges are installed, you can refer to the pictures to adjust the screws of the doors till it's perfect.

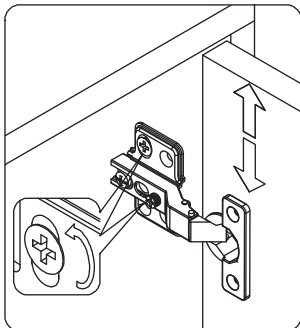



1. Adjust the screws shown in Figure 1 to adjust the door up and down.

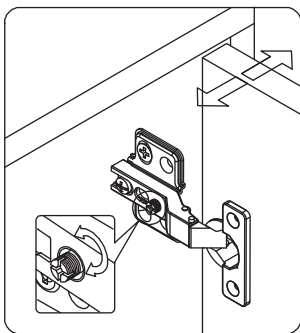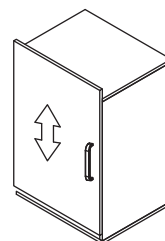

2. Adjust the screws shown in Figure 2 to adjust the door left and right to the right position.


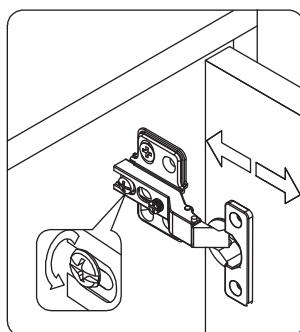
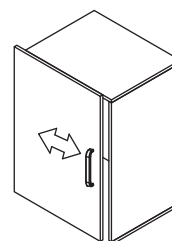


3. Adjust the screws shown in Figure 3 and pull the door back and forth so that it can be opened smoothly.

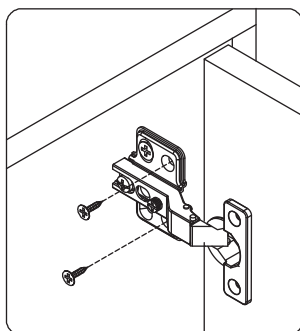
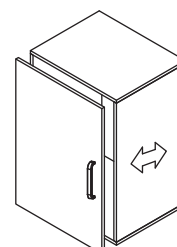


4. After the adjustment is complete, secure the remaining two screws to secure the door in place.


Step 57

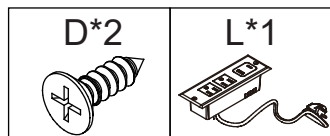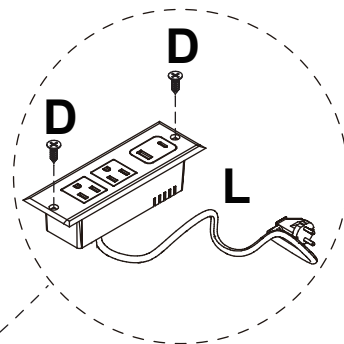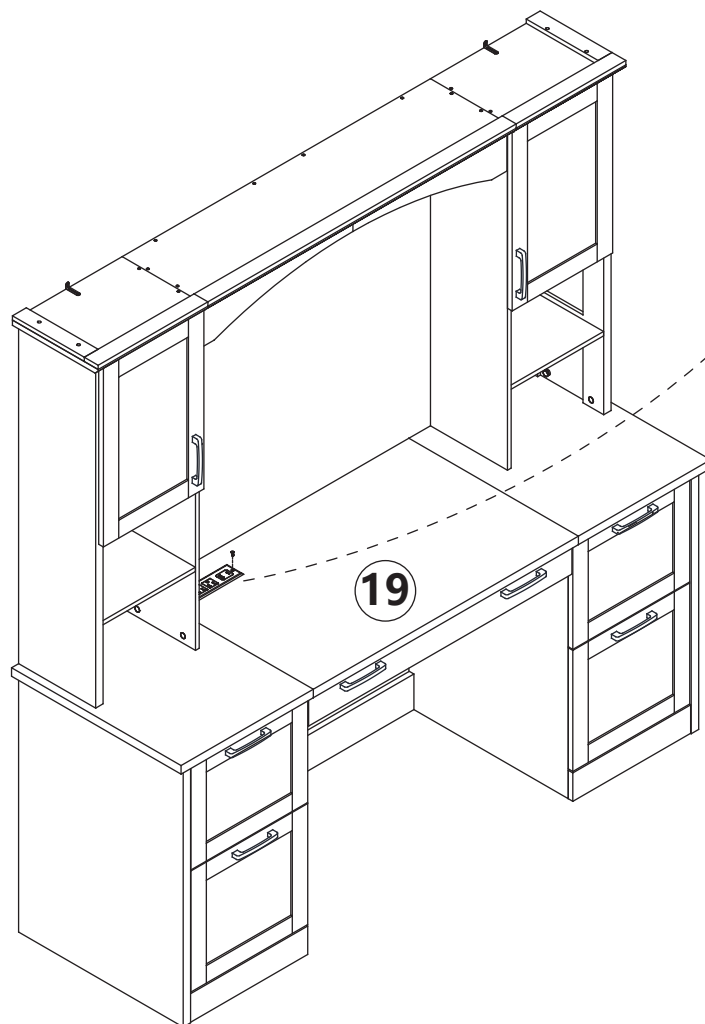



Step 58

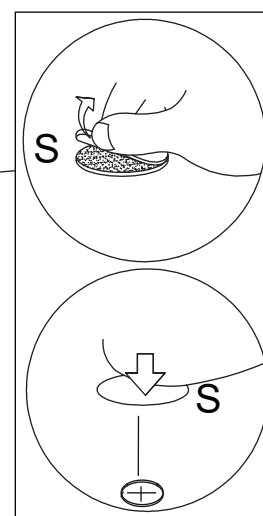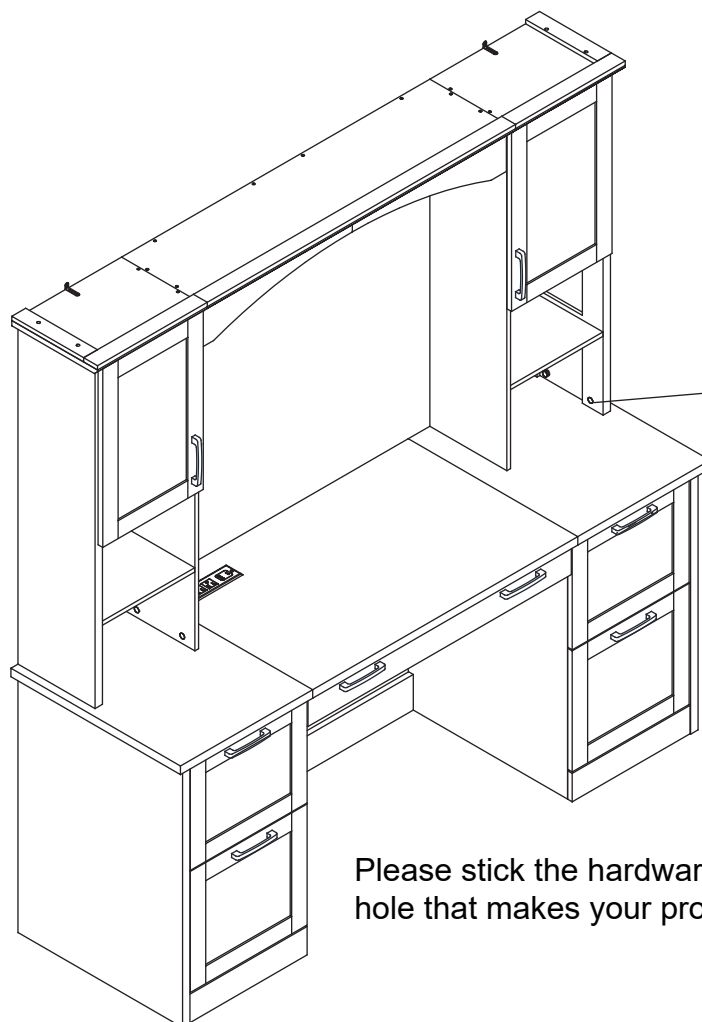

Please stick the hardware "S" on the exposed hole that makes your product more beautiful.



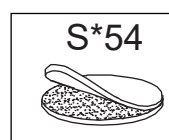


Step 59

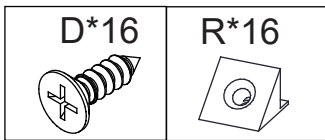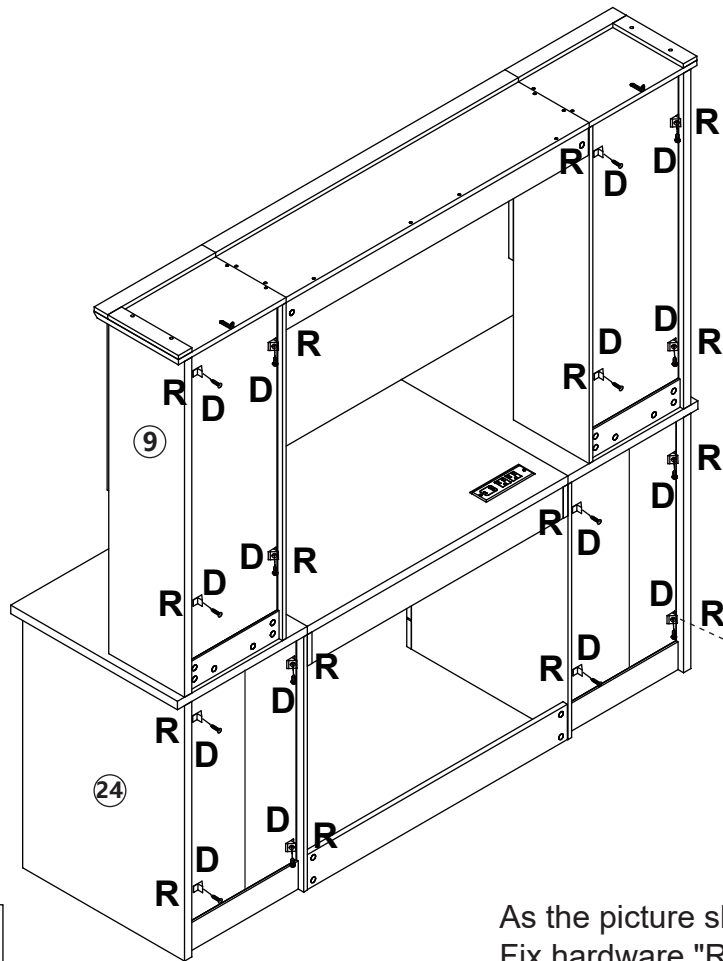

As the picture shows,
Fix hardware "R" into the gap with screws
to make the back panel more stable.

Step 60

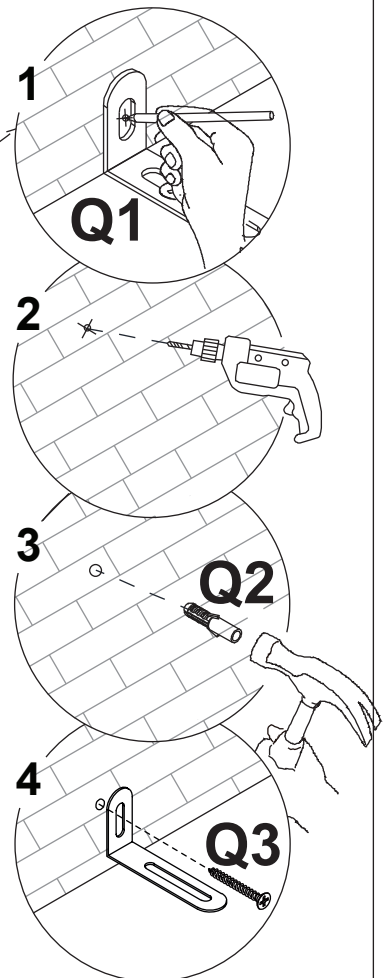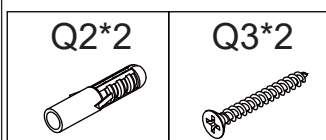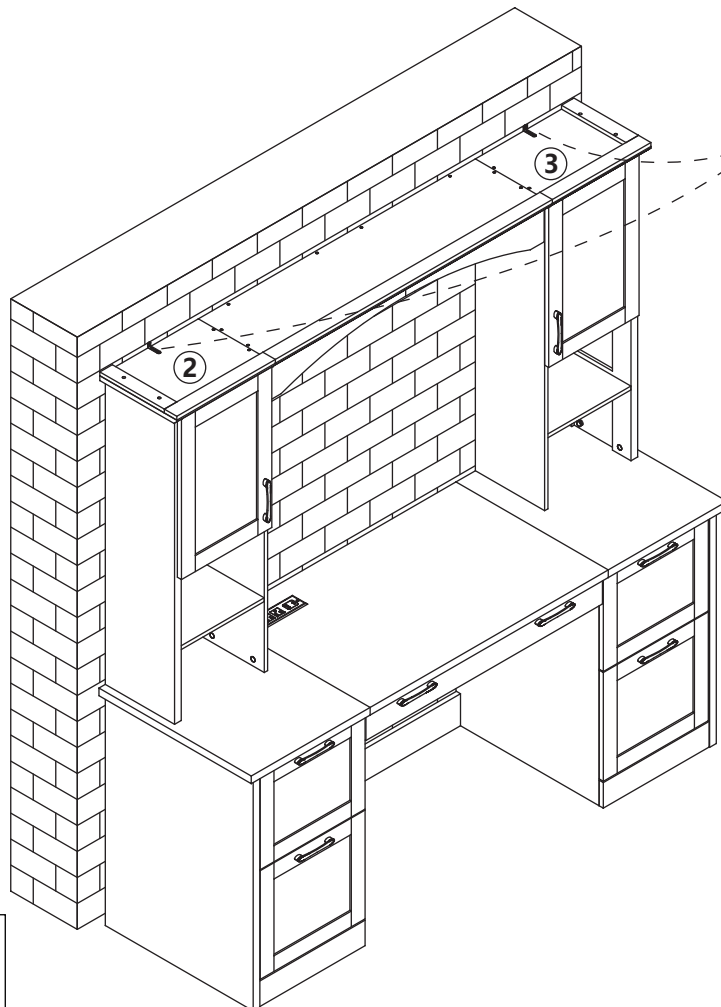

FINISH

