



Installation Instruction

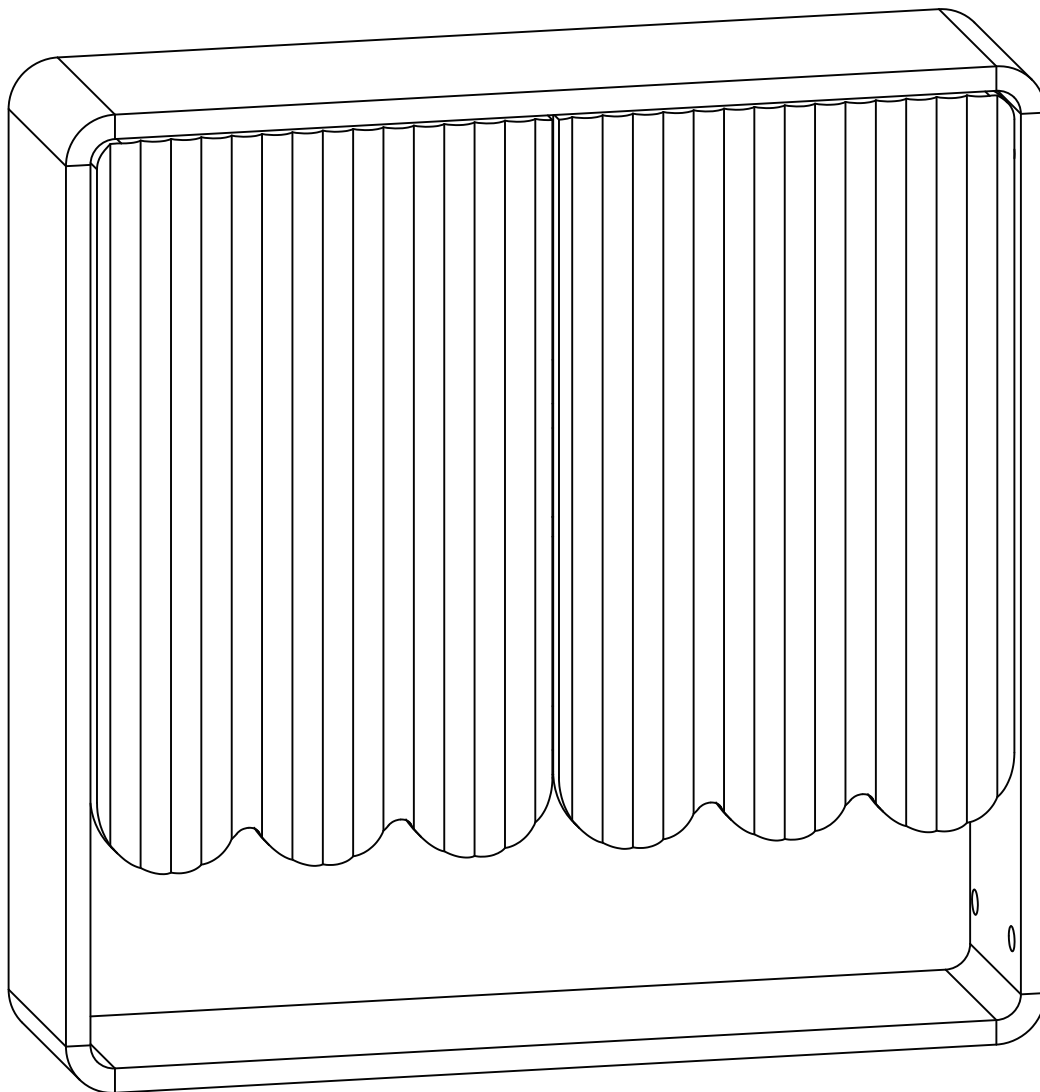

Assembling

What you need

- Use the packaging carton as a working surface to prevent product damage during assembly
- Phillips head screwdriver



Weight Limitation




100

lbs table top

| 35






lbs per

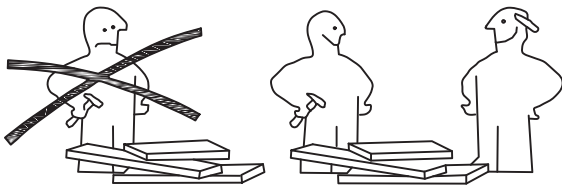

What' included

Code	Description	Qty
A	Cam Bolt M6X35MM	25
B	Cam Lock M15X9.5MM	25
C	Wooden Dowel M8X30MM	14
D	Screw M3X12MM	18
E	Screw M3X14MM	10
F	Screw M4X40MM	2
G	Shelf bracket	4
H	The back button	8
I	Anchor	2
J	Magnetic latch	1
K	Hole position sticker	25
L	Hinge	4
M	Soldering patch	2
N	Phillips screwdriver	1

The Hardwares

A	B	C	D	E
				
F	G	H	I	J
				
K	L	M	N	
				


IMPORTANT:

- 1.Do not tighten bolts / screws completely until all bolts / screws are lined up and inserted into holes.
- 2.Do not over tighten screws and bolts to avoid stripping
- 3.Please use hand tools to assemble this product,you can also use power tools(please use power tools carefully).

Included Accessories


Code	Description	Qty
1	Top Panel	1
2	Bottom Panel	1
3	Left Side Panel	1
4	Right Side Panel	1
5	Curved wooden strip	4
6	H-shaped plastic strip	1
7	Activity layer panel	1
8	Layer panel	1
9	Left door panel	1
10	Right door panel	1
11	Back strip	1
12	Lock the wall panel	1
13	Upper back panel	2

The Accessoriess

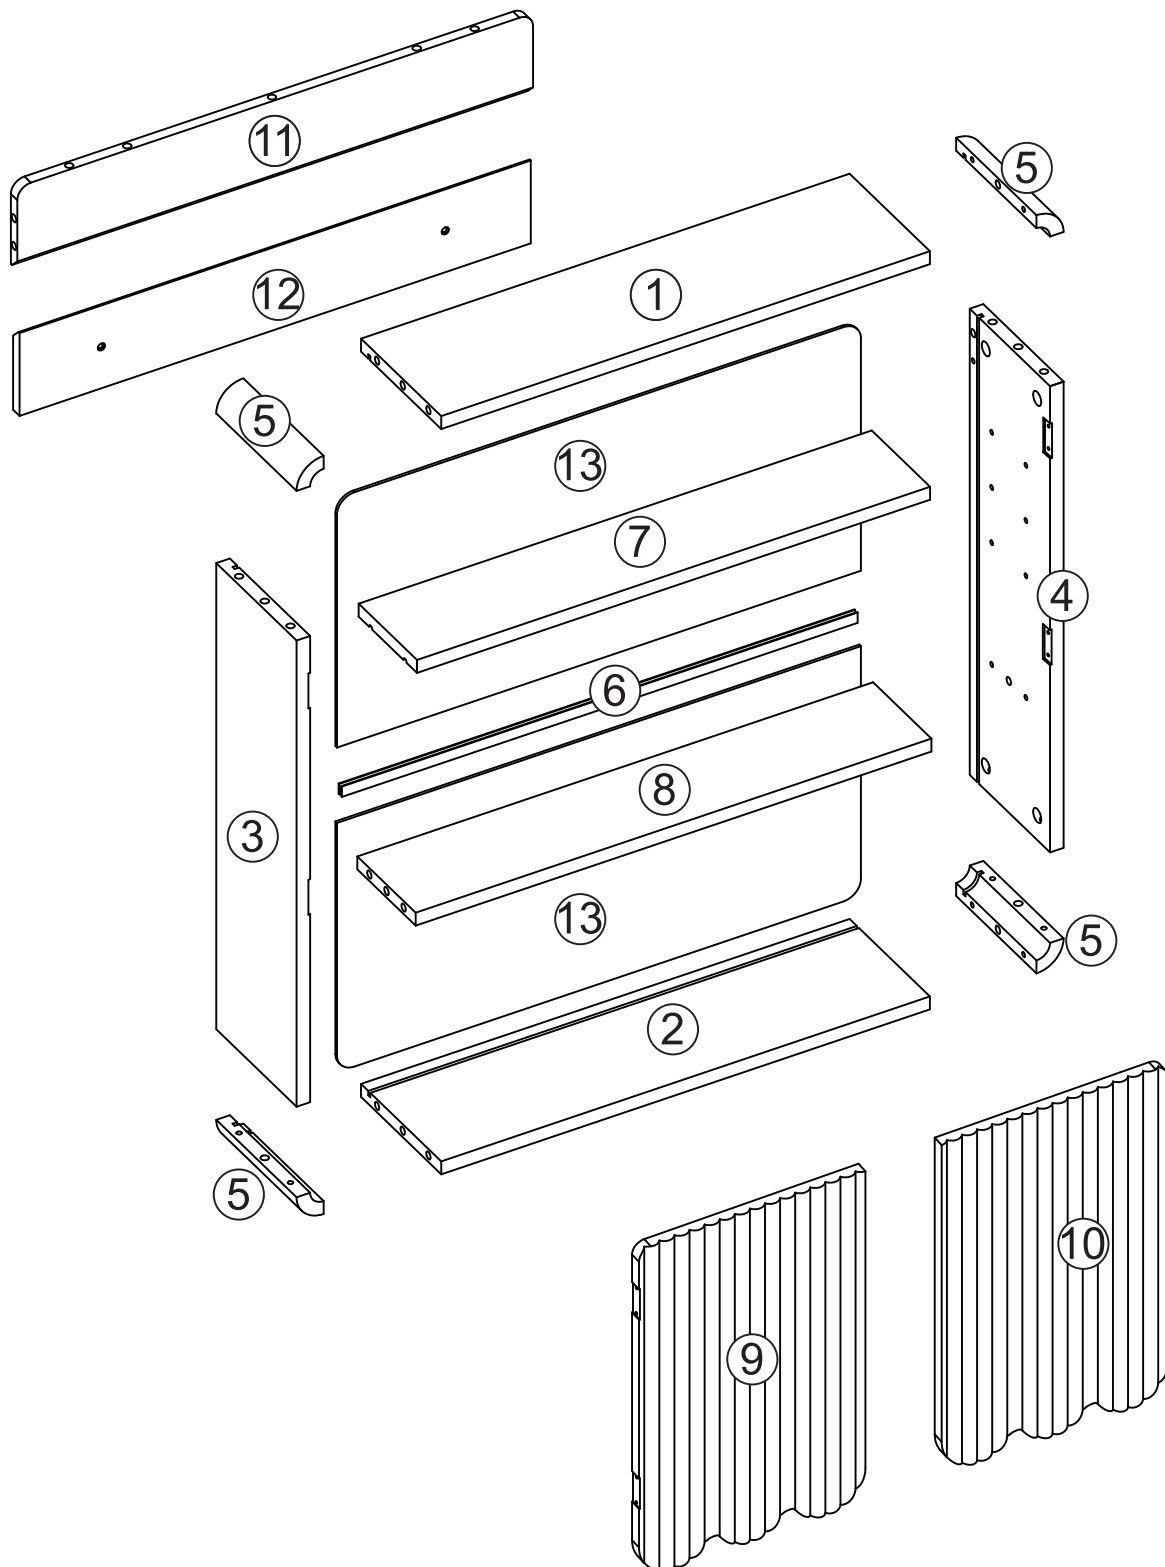


HARDWARE USAGE GUIDE


Hidden Cam Bolt/Cam Lock Usage Instructions

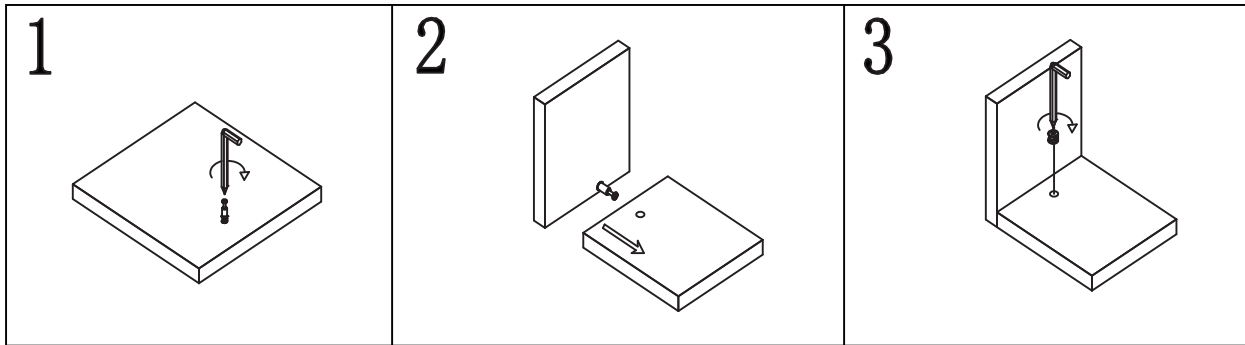

Step 1

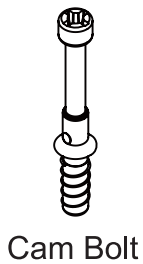


Turn the Cam Bolt until the shoulder is firmly against the part.


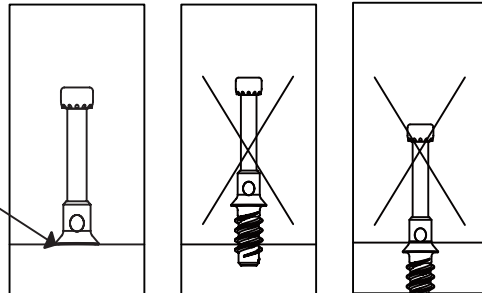


Step 2

Connect the two plates at 90 degrees.

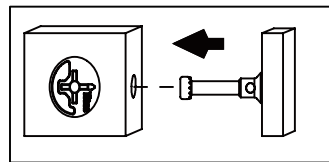


Step 3.1

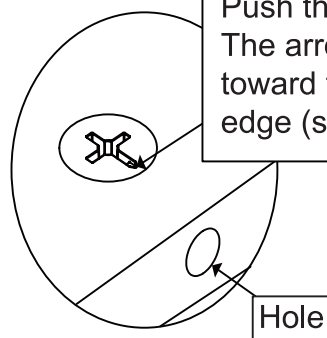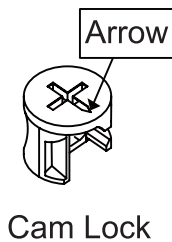


Push the cam lock into the part. The arrow must point directly toward the hole on the board's edge (see diagram).

Step 3.2


Install the cam lock nut and fix it by rotation.

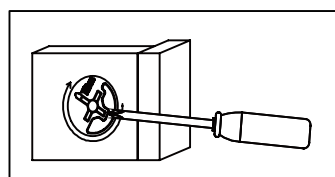




Step 01

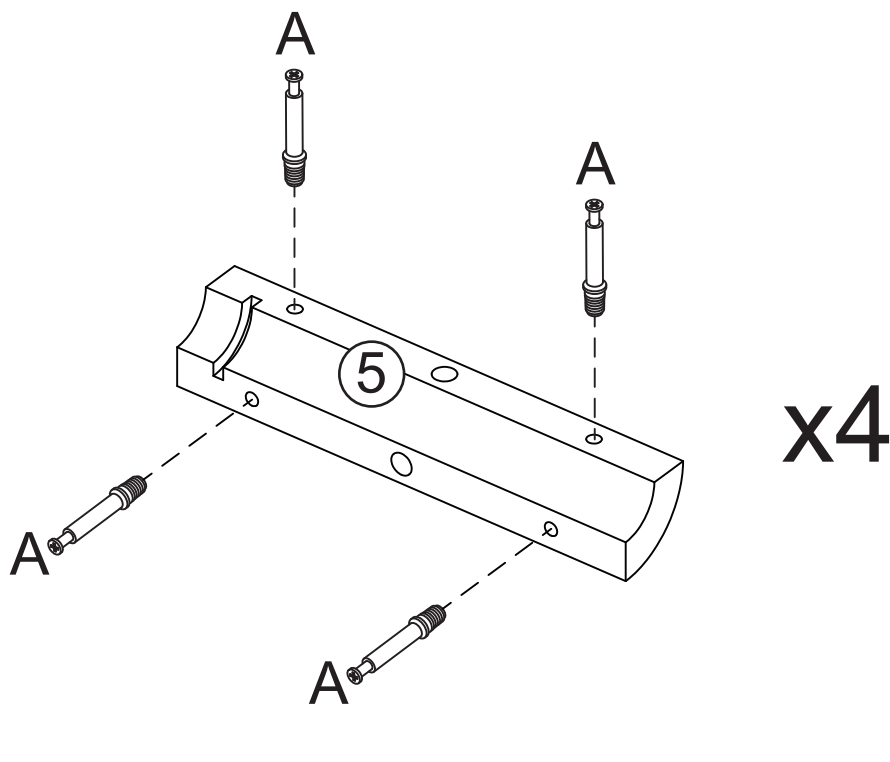


Step 02


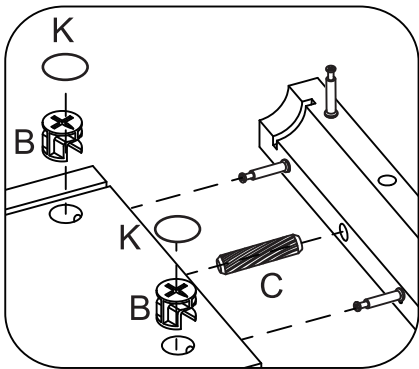




A x 3	B x 4	C x 2	K x 4

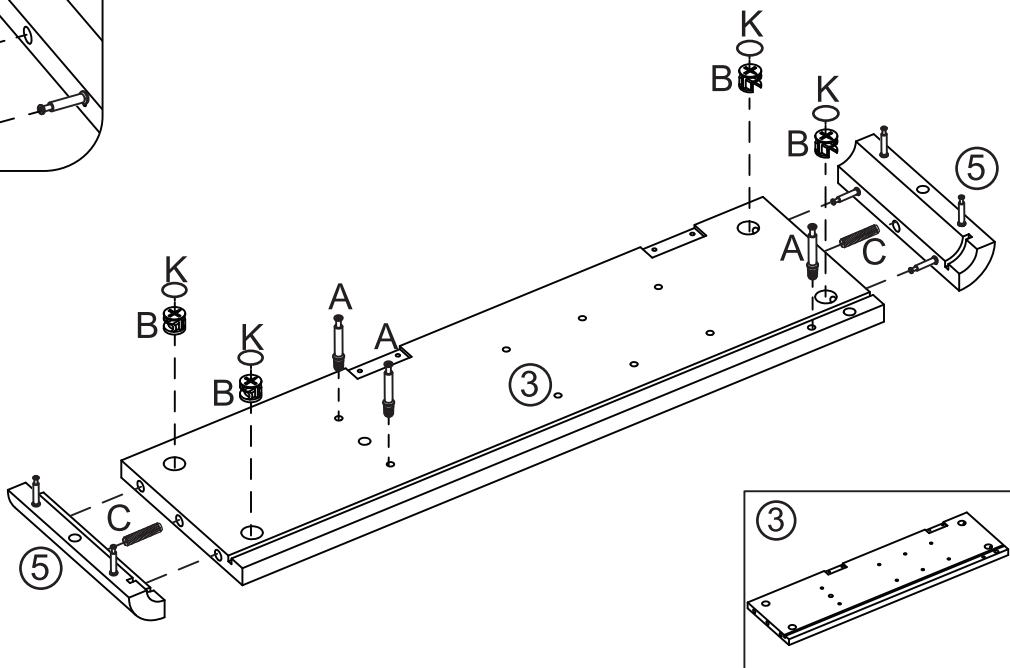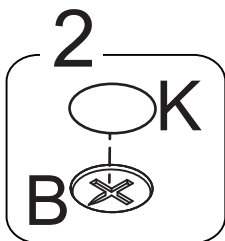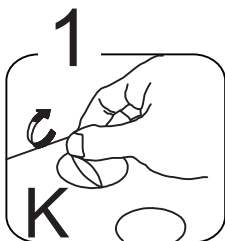




Step 03

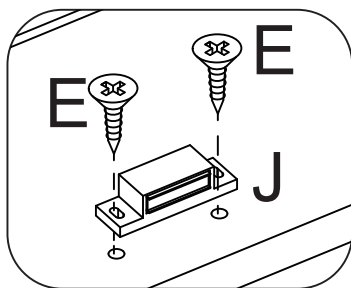




A x 3	E x 2	J x 1
		

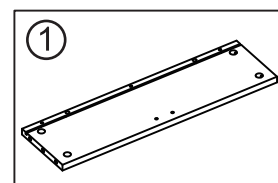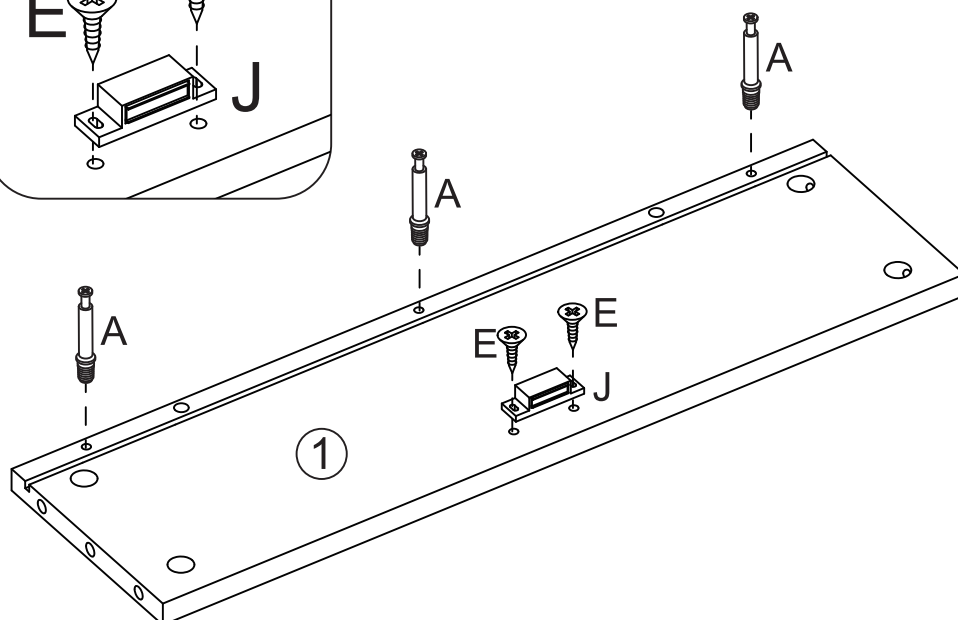


Step 04

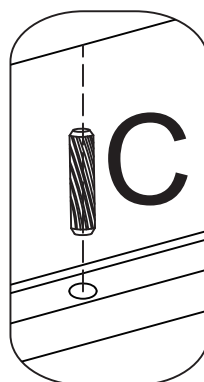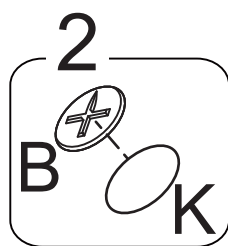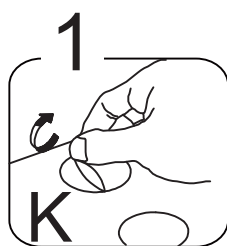







B x 3	C x 2	K x 3
		

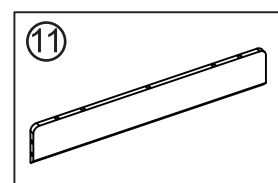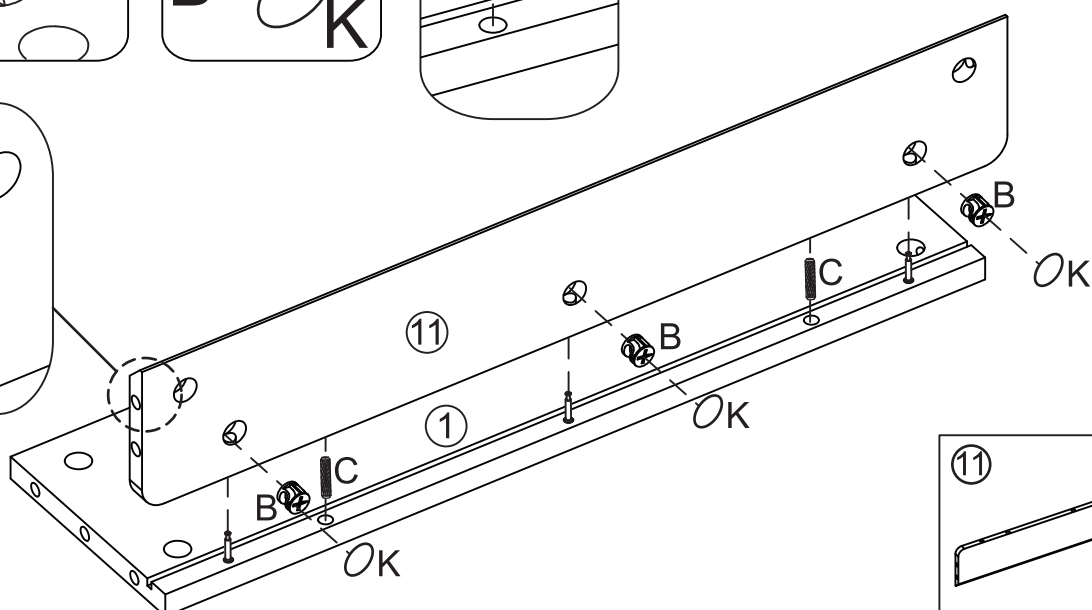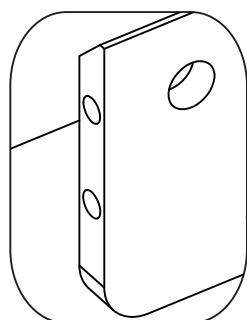




Step 05

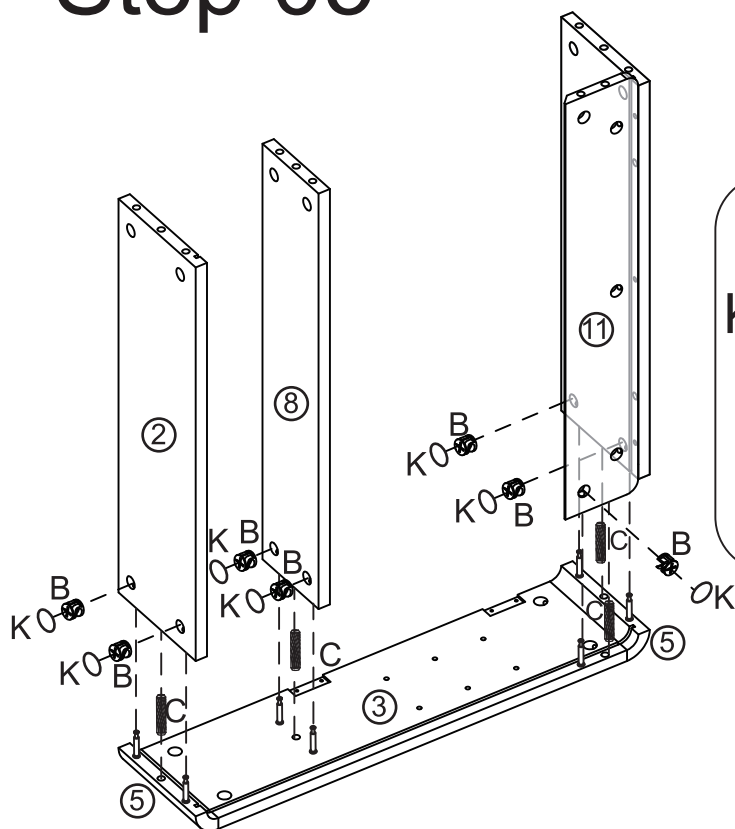


B x 7	C x 4	K x 7
		

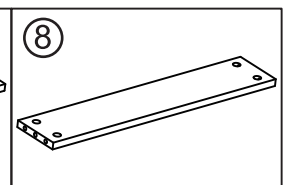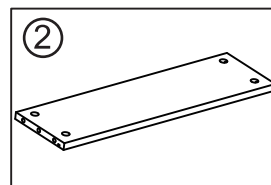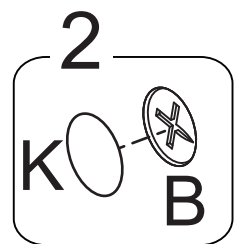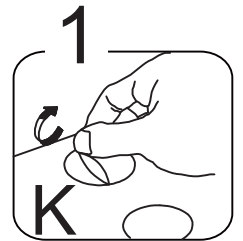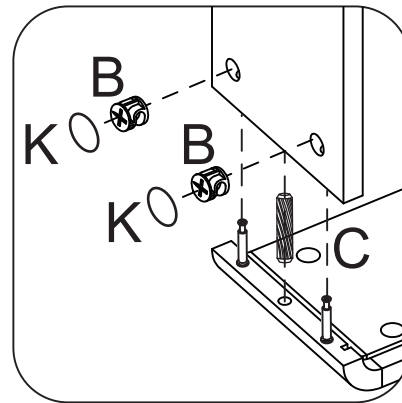


Step 06

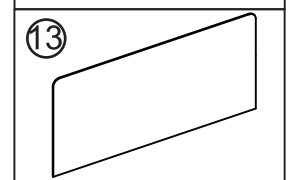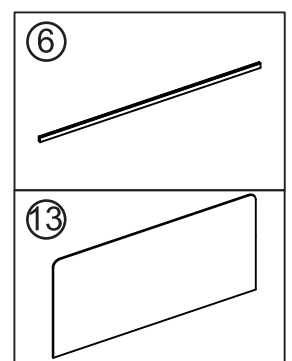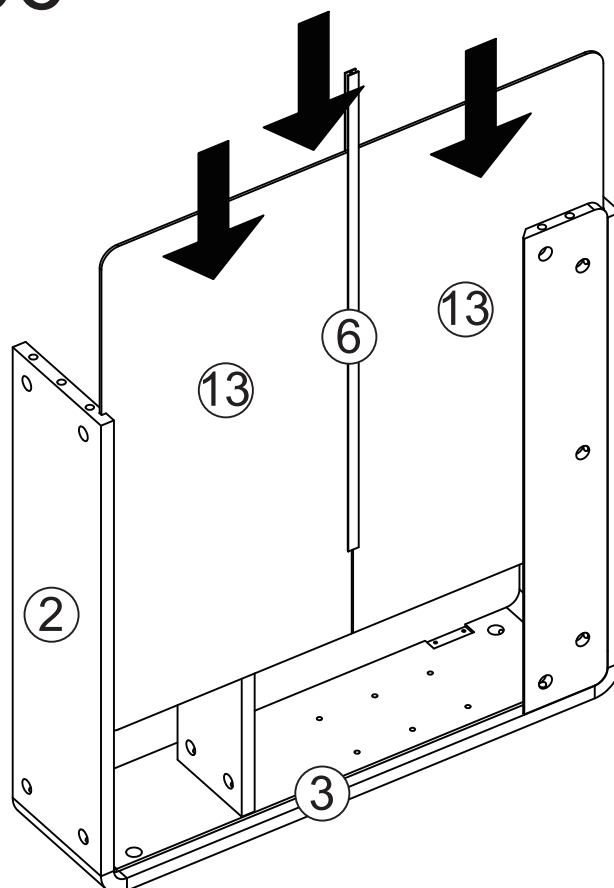


Step 07

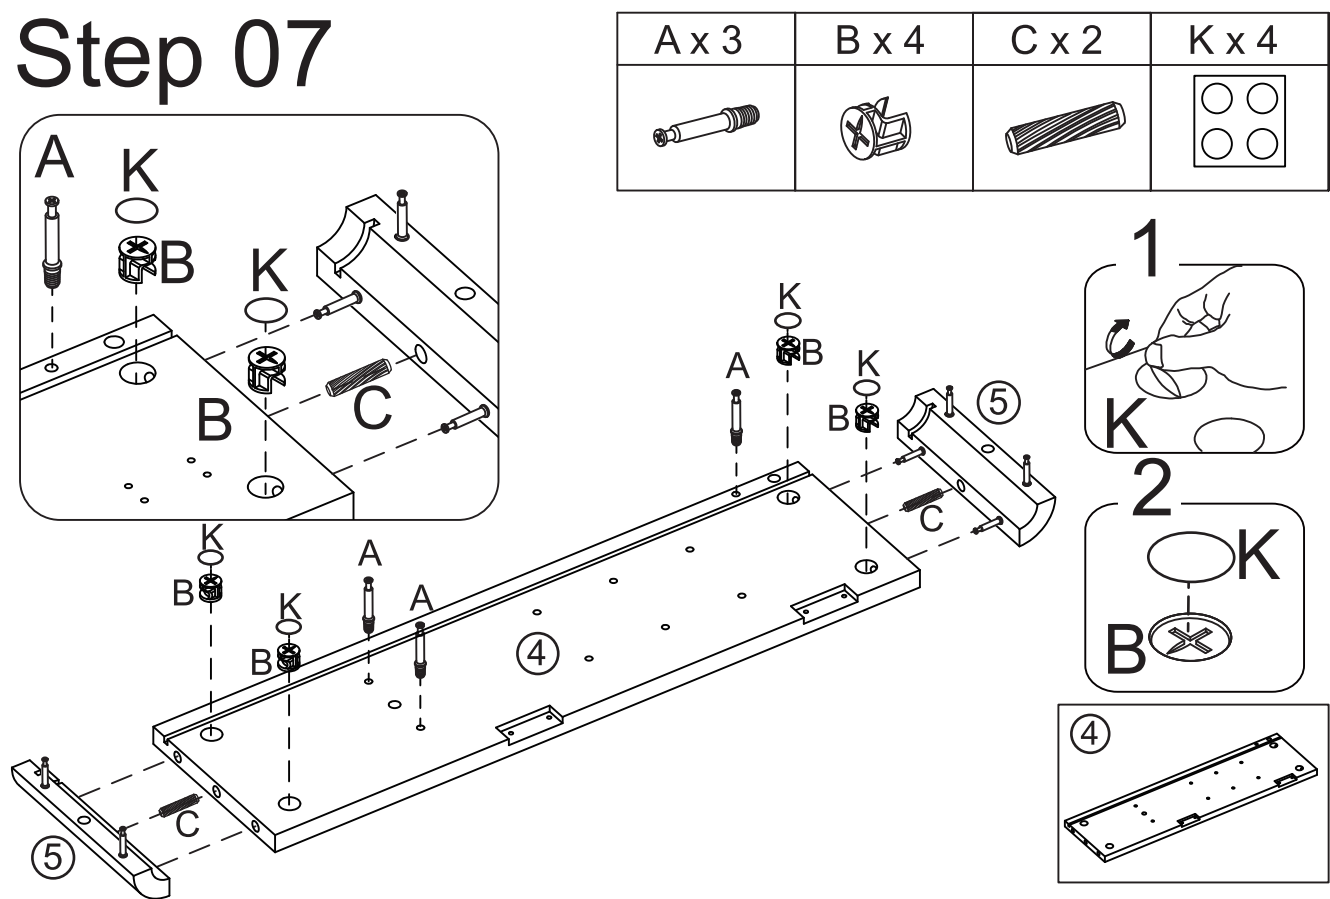


Step 08

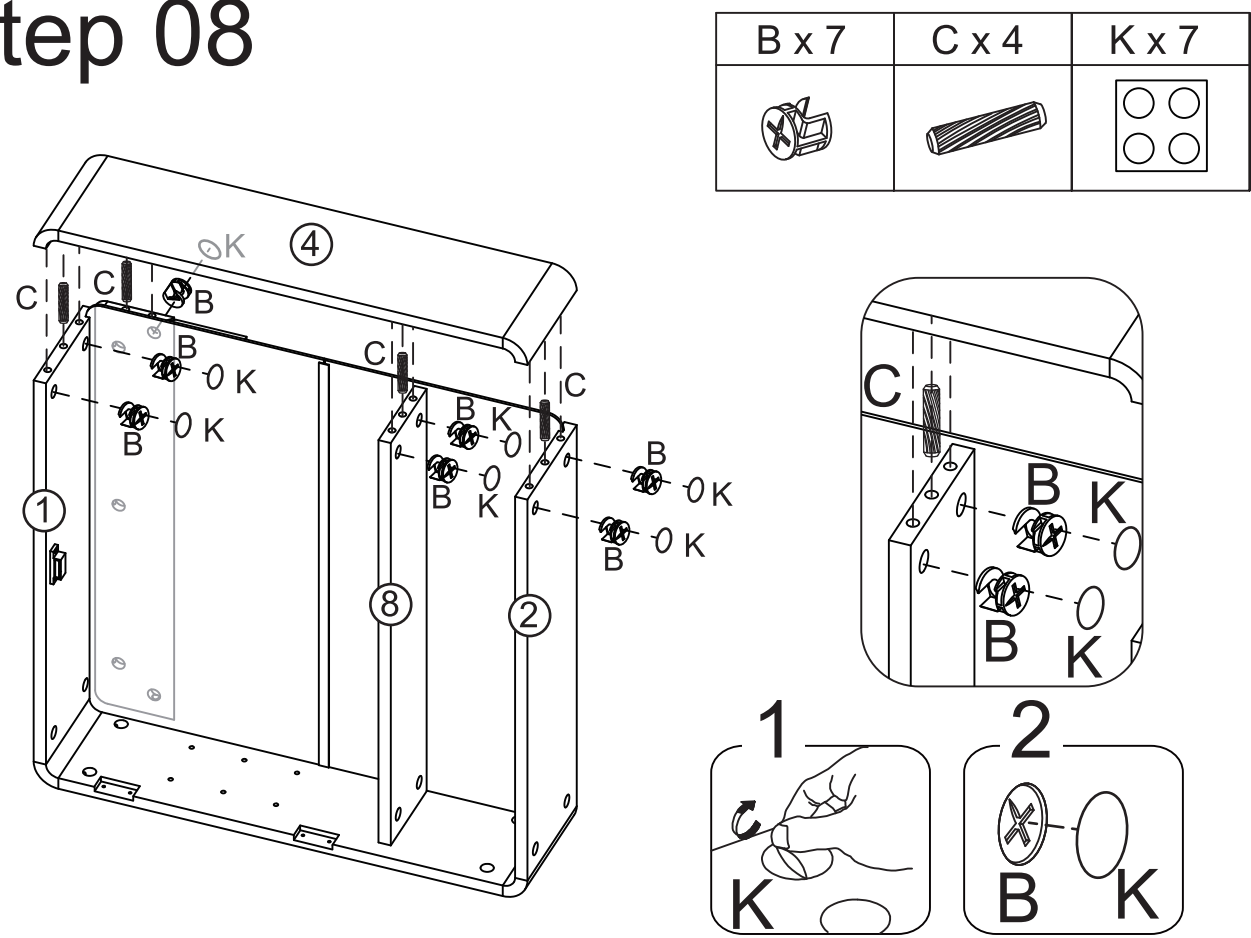


Step 09

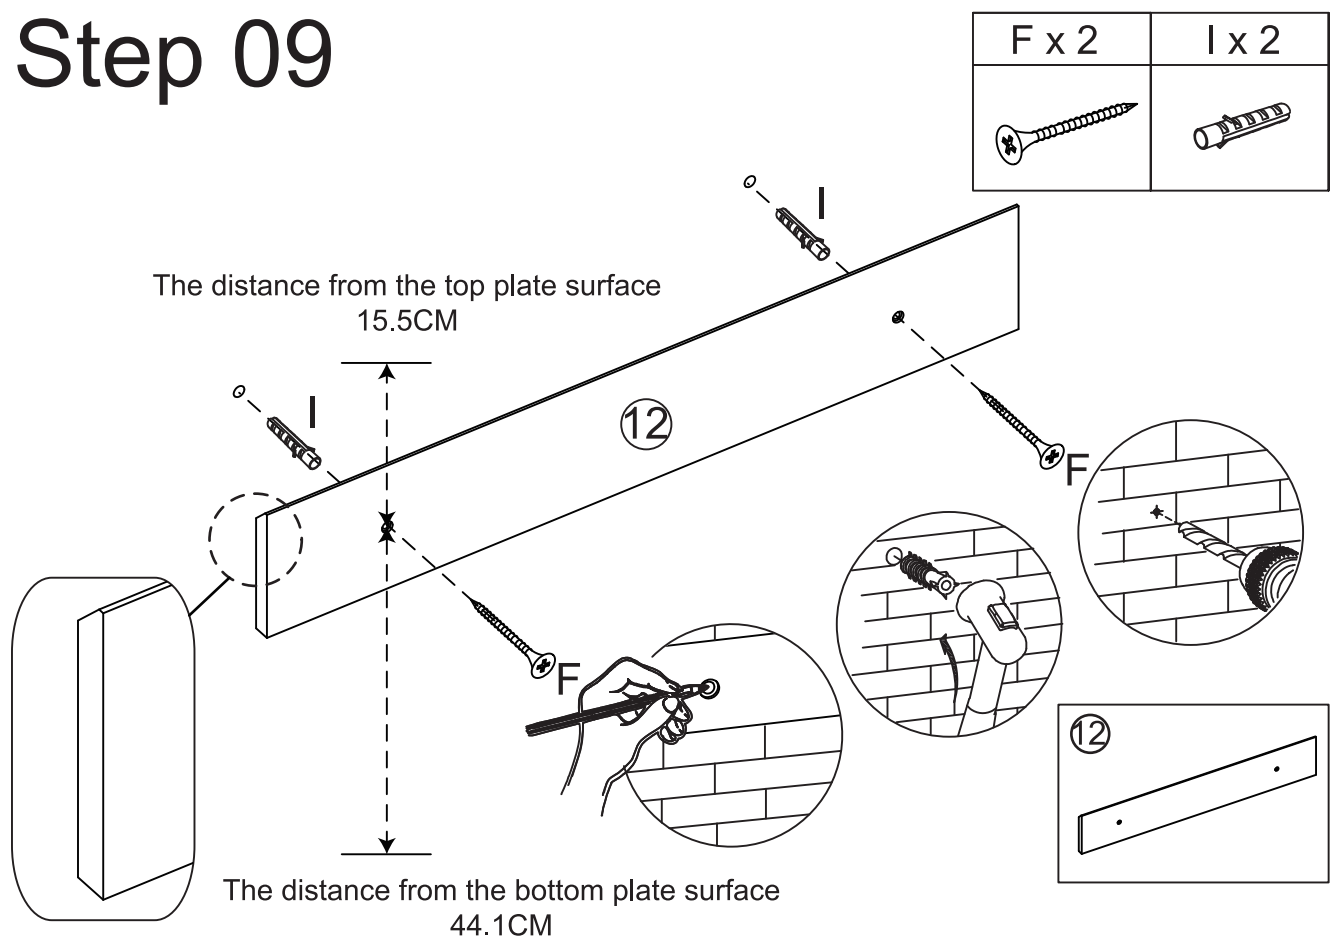




Step 10

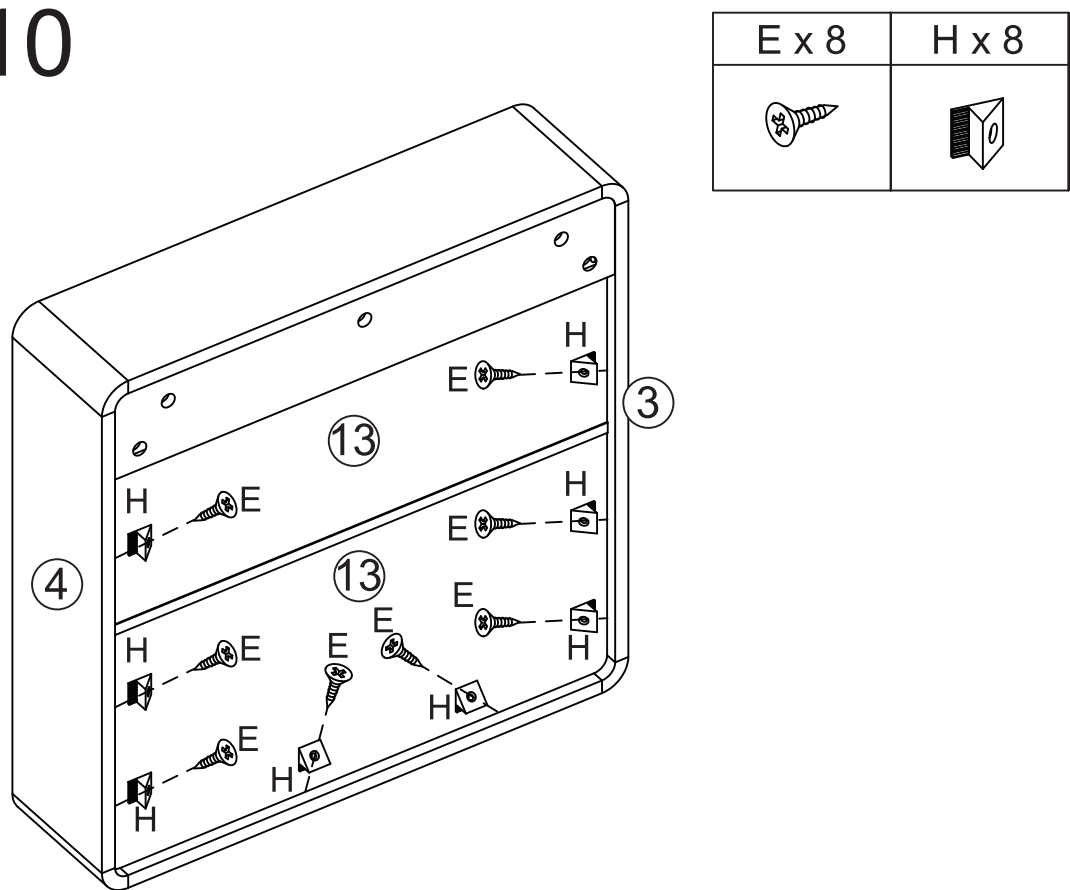






Step 11

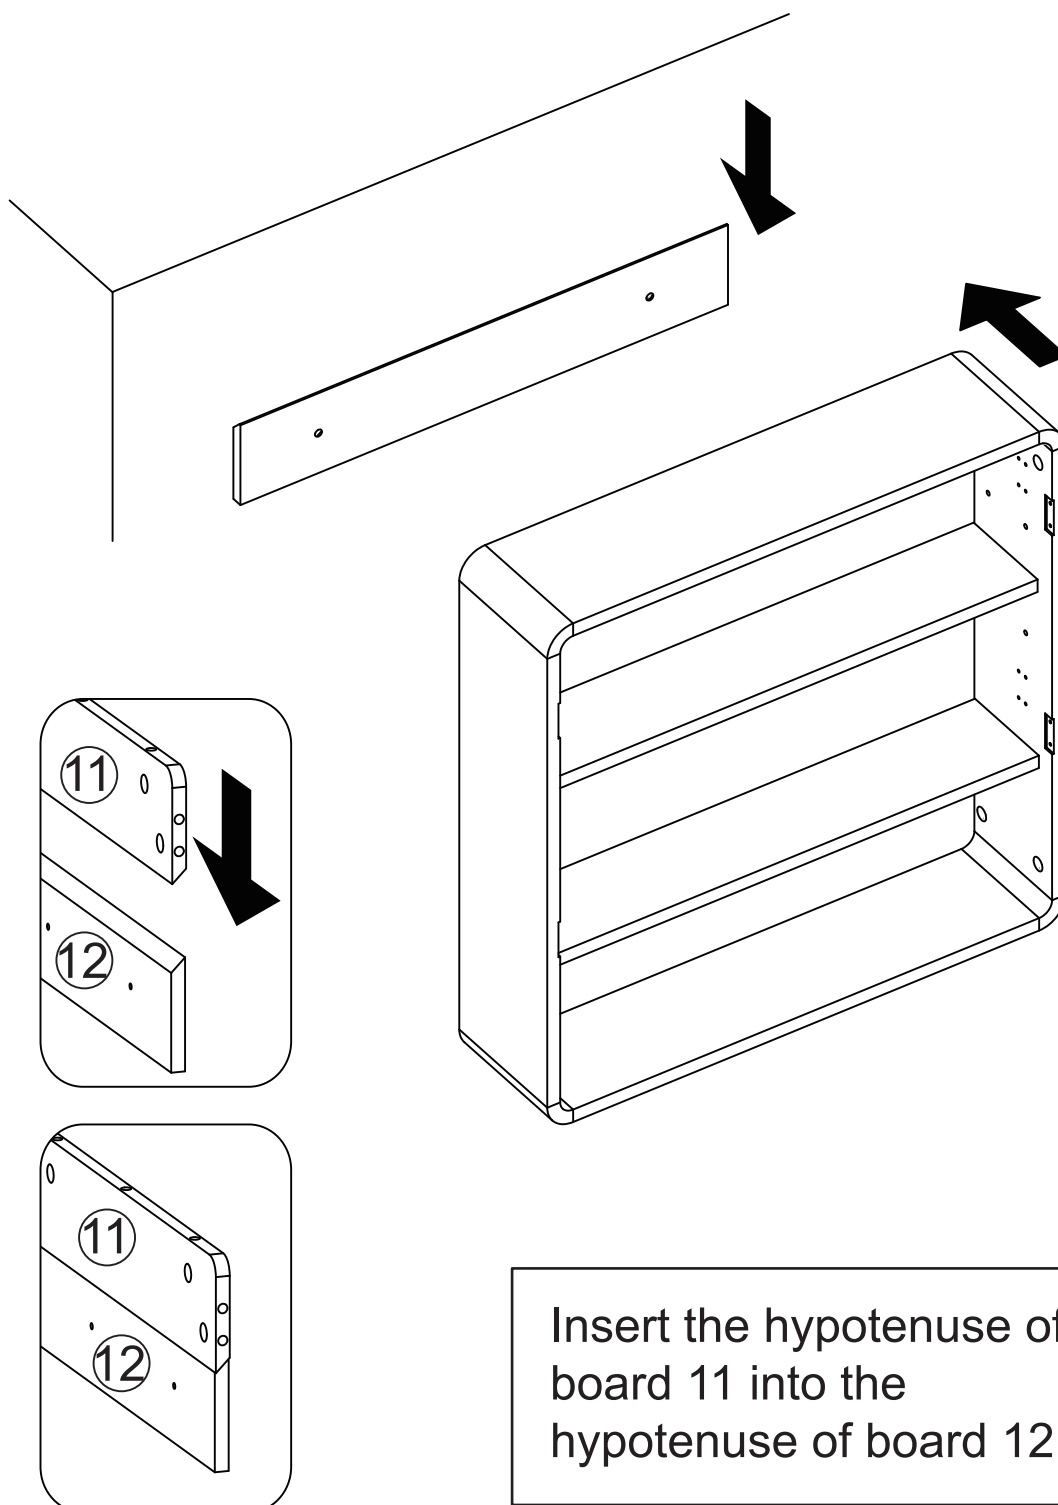






Step 12

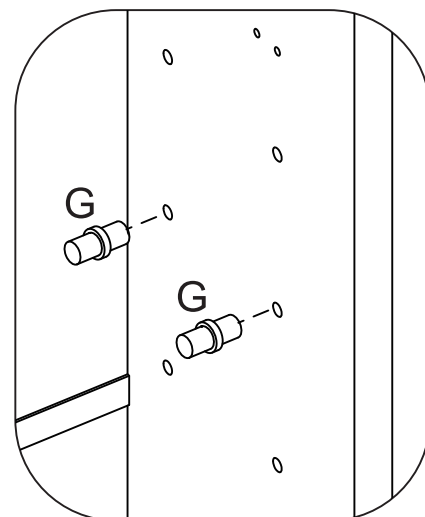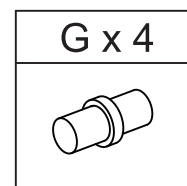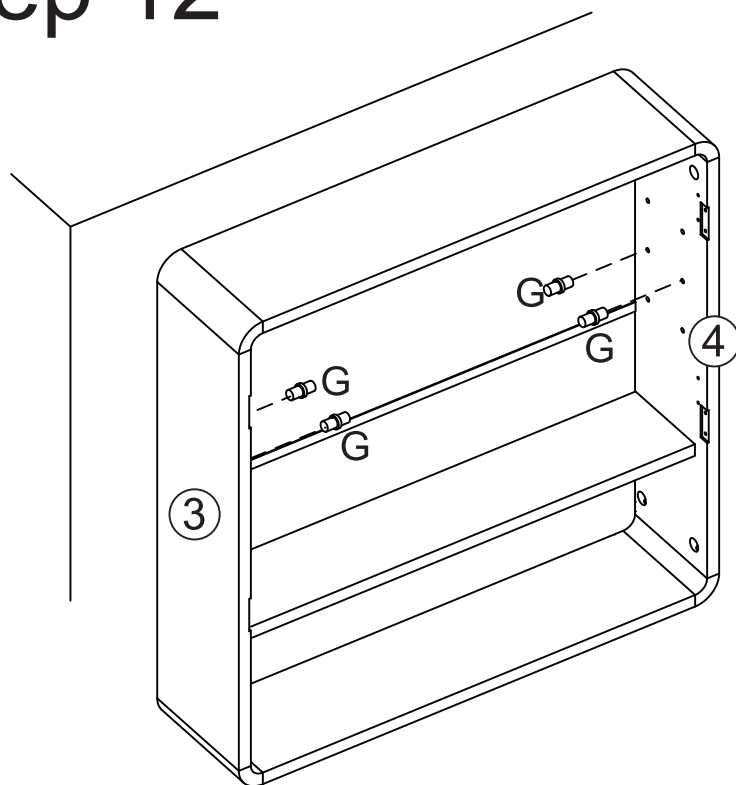

Step 13

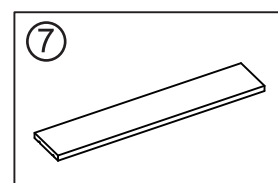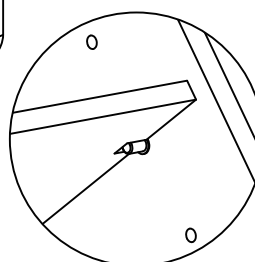
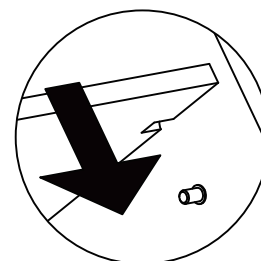
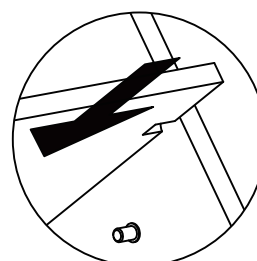
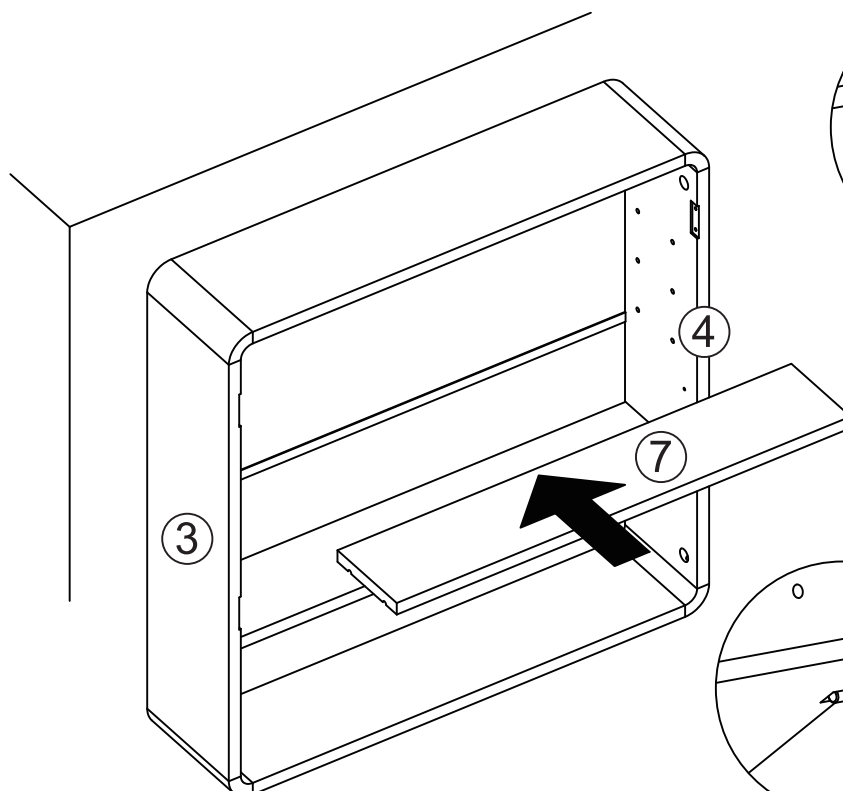


Step 14

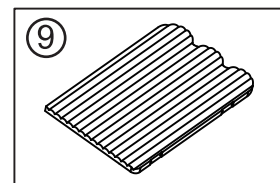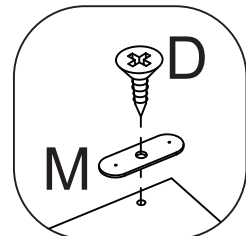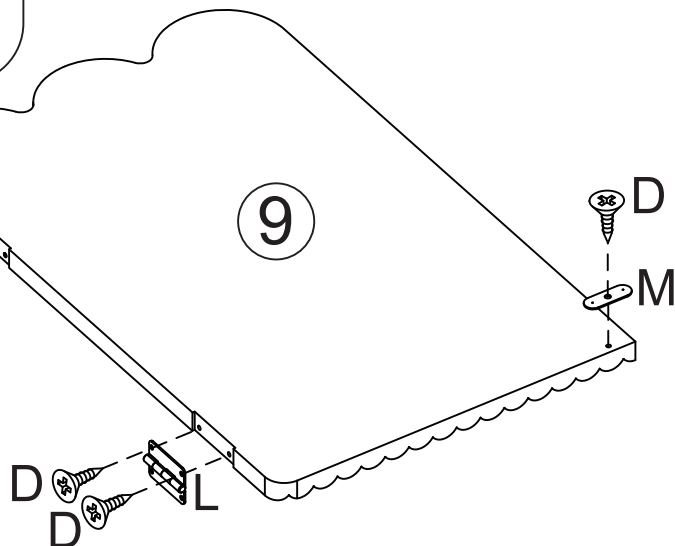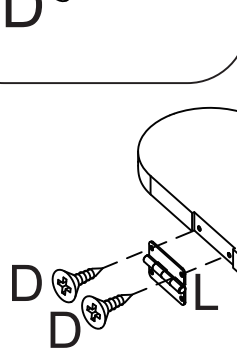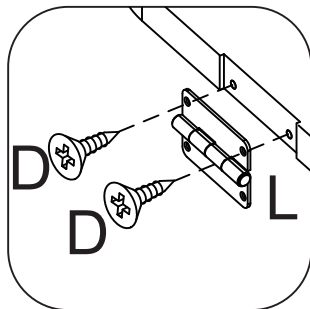




L x 2	M x 1	D x 5

Step 15

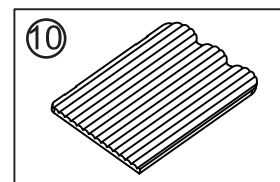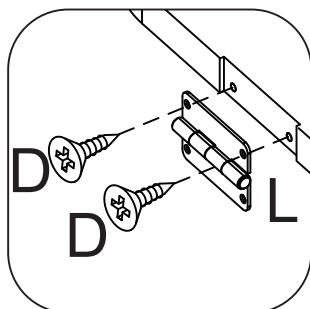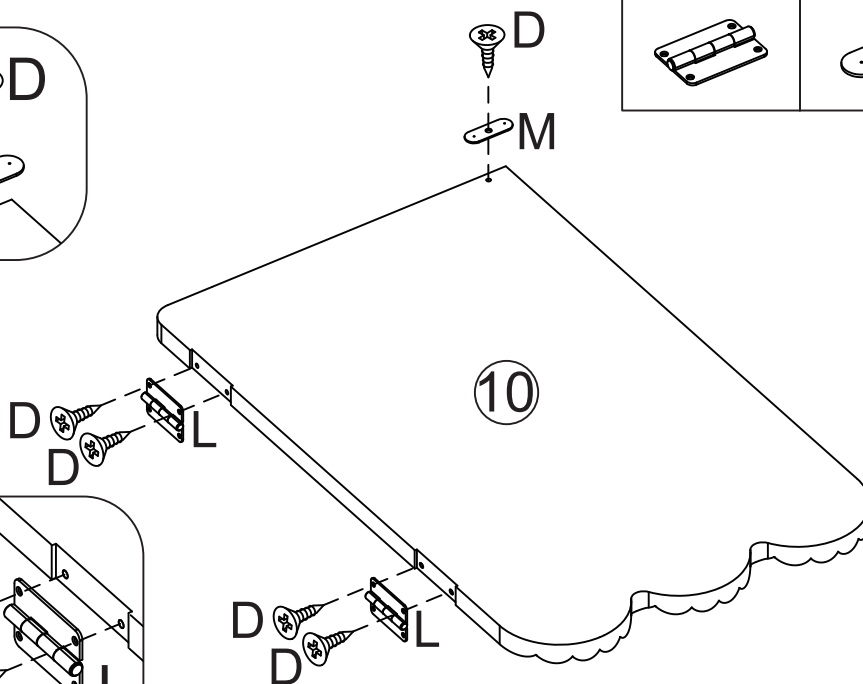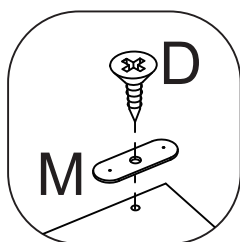

L x 2	M x 1	D x 5

Step 16

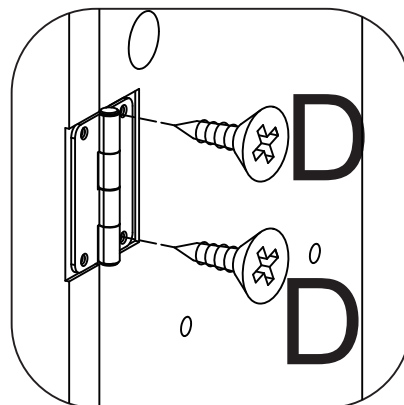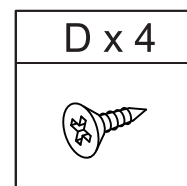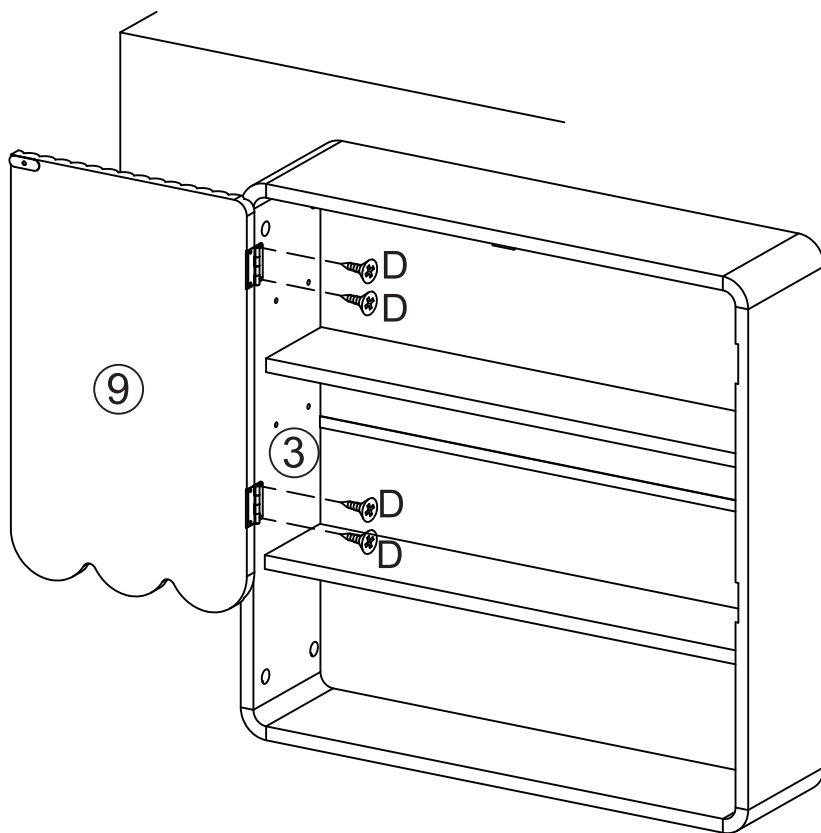

Step 17

