


Installation & Assembly

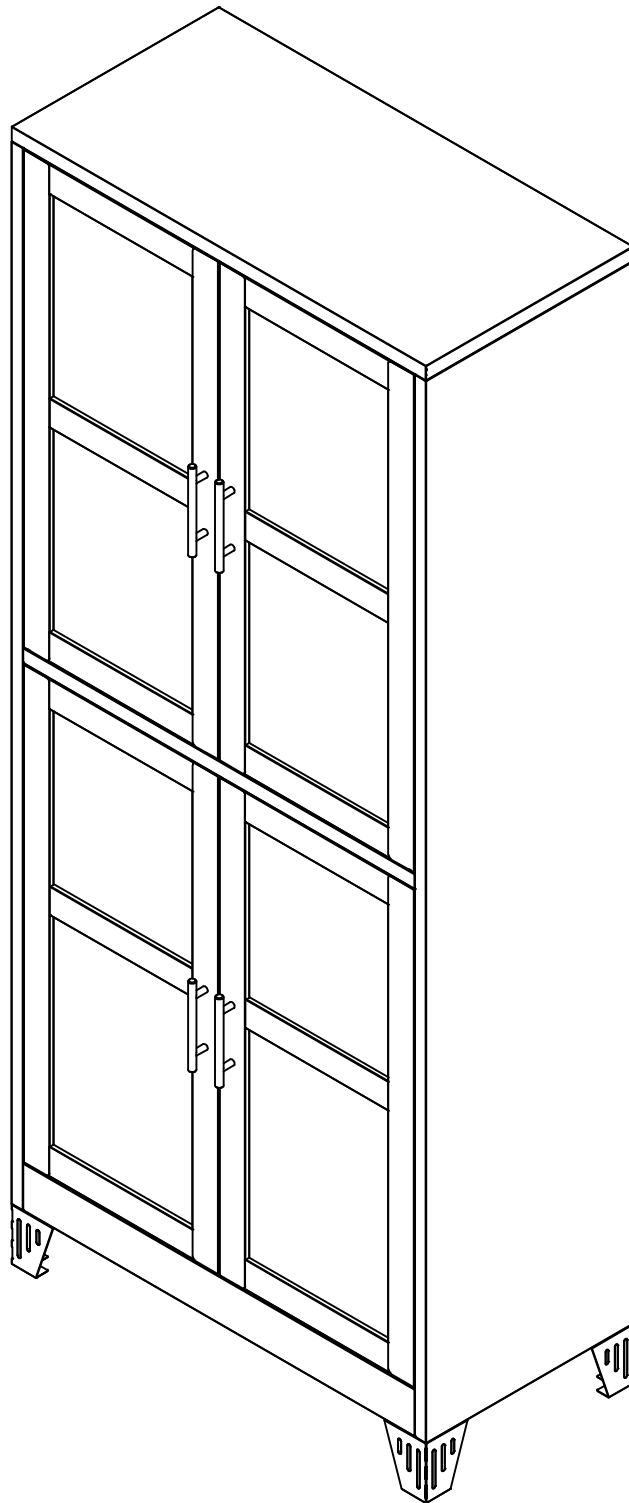


Important!

Thank you for your purchase. Please open it carefully.

If you encounter any problems during assembly and use, please contact us through the email platform.

We have the ability to solve all your problems.










Service tenet - to enable customers to enjoy high-quality service.

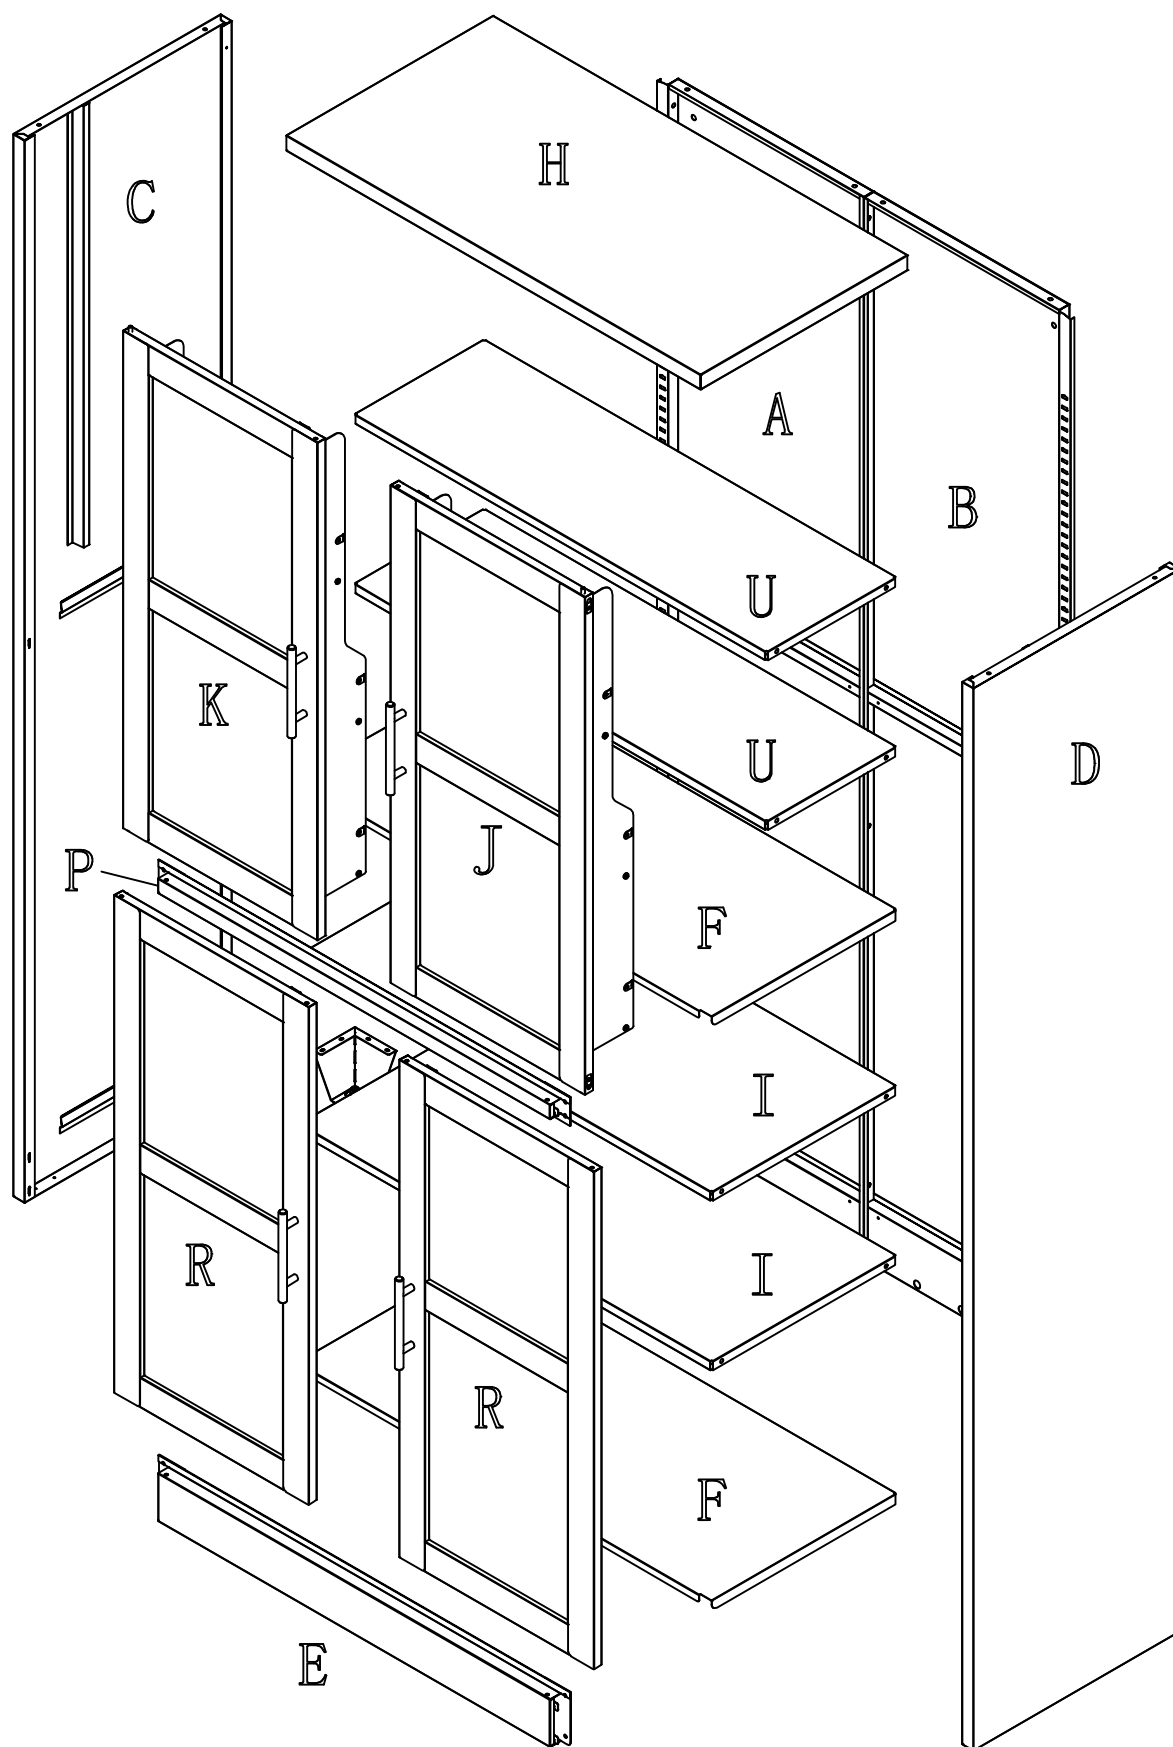





PARTS LIST

LISTE DES PIÈCES

LISTA DE PIEZAS

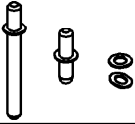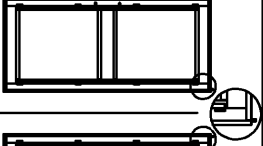


Name Nom Nombre		Part Piece Pieza	Qty Qte	Spare Epargner Sobranante	Name Nom Nombre		Part Piece Pieza	Qty Qte	Spare Epargner Sobranante
A	Left Back Panel		1		X	railing		6	
B	Right Back Panel		1		Y	Partition in a confined space (little)		2	
C	Left Side		1		Z	Partition in a confined space (big)		4	
D	Right Side		1		L	M6 * 8 screws and nuts		4	
E	kick plate		1		N	Self-tapping screw 4*10		76	4
P	middle beam		1		G	Standing leg		4	
F	bootom panel		2		G	Adjustable foot		4	
H	top panel		1		O	Shelf support		16	
I	The partition board below		2		V	lamine fastening buckle		16	
U	The partition board above		2		S	Door Pivot Pin/Shim		2	
K	Top left door panel		1		T	Door handle and Screw		4	
J	Top right door panel		1		Q	magnet		8	
R	Lower door panel		2		W	fixing bolt		2	
M	Hanging card type connecting board		4						

1

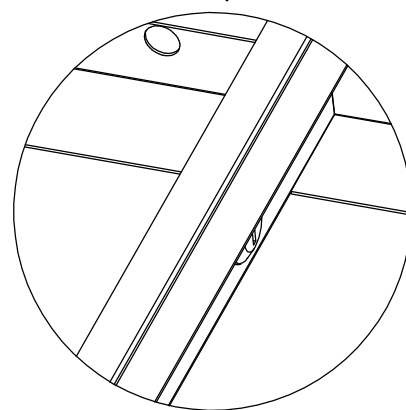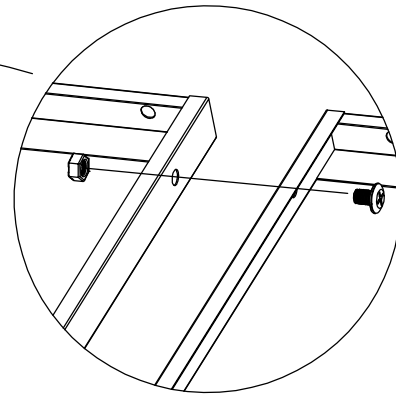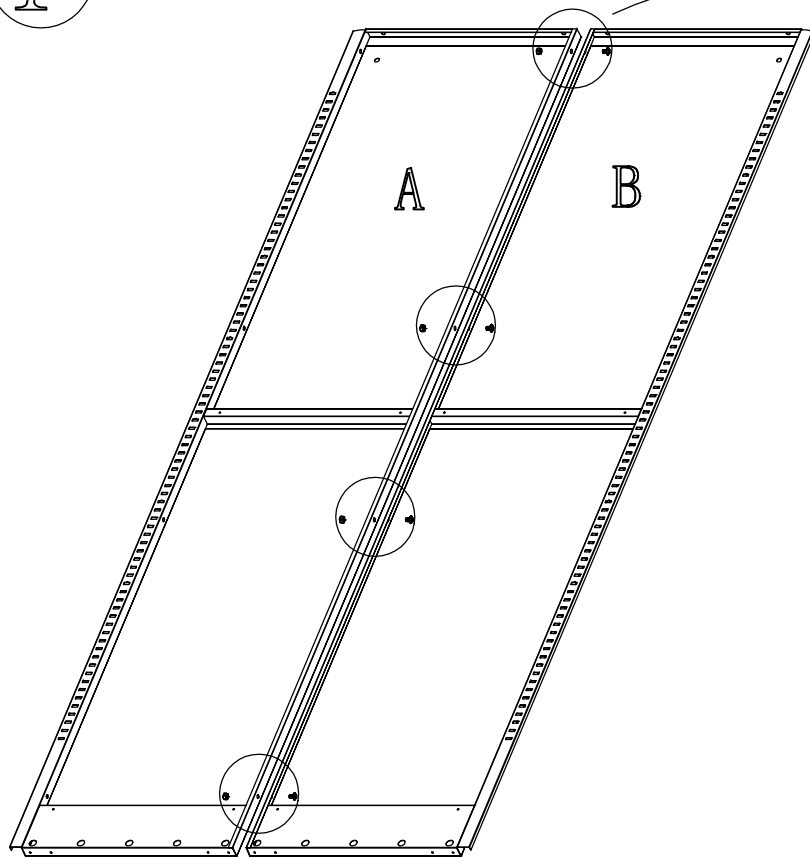

L-4





2

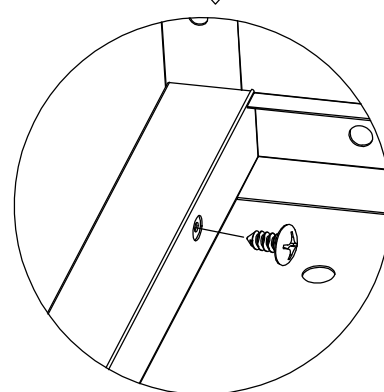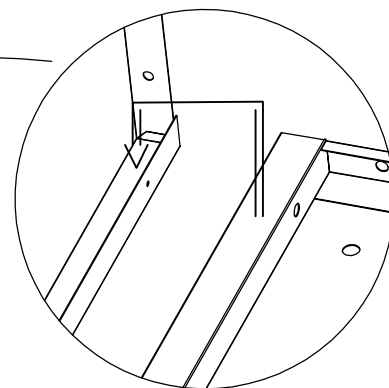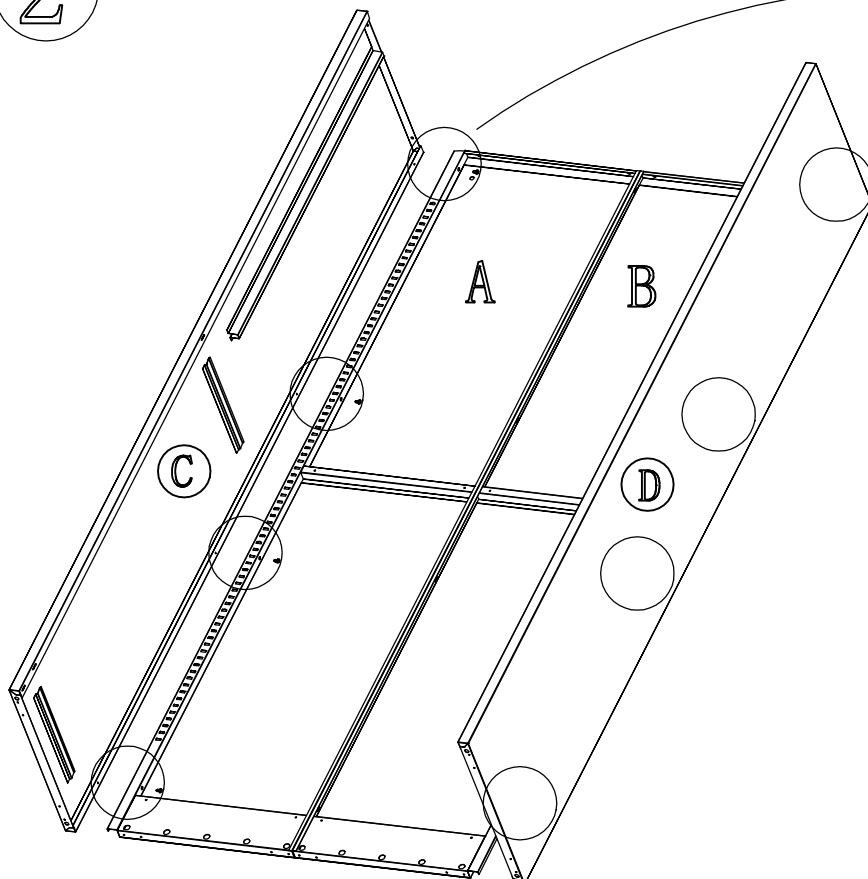

N-8

3






Please align the edge of the top plate with the edge of the side plate.

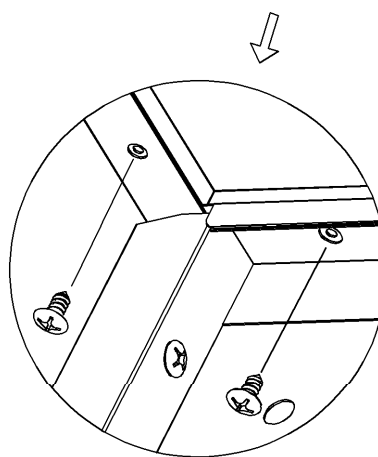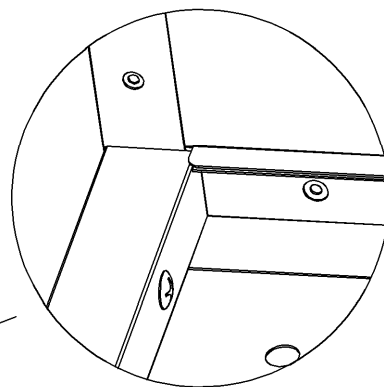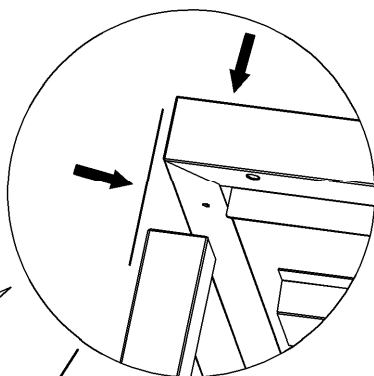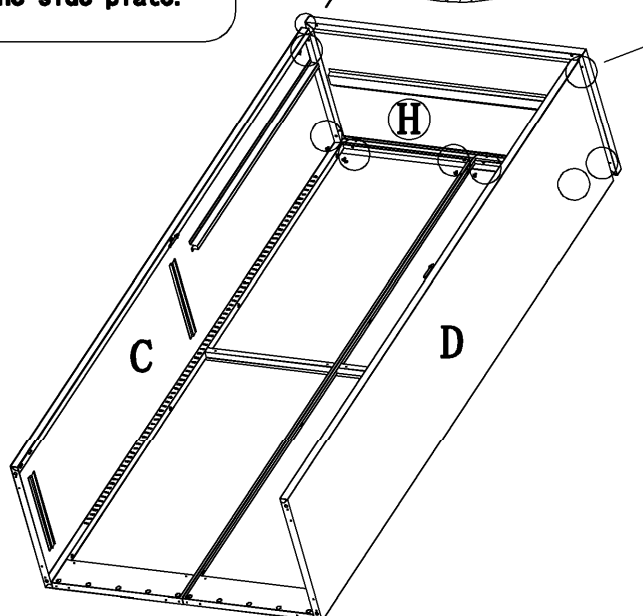

N-8


4

Snap the two buckles on either side of Part E into the two holes in both side panels and then push it down so that it snaps into the bottom of the cabinet

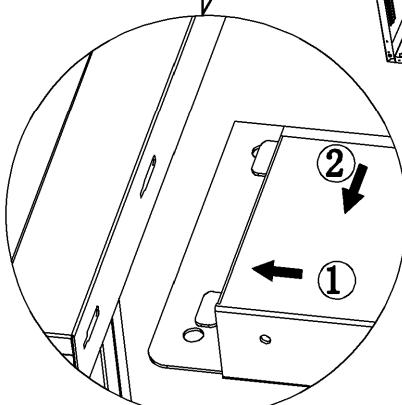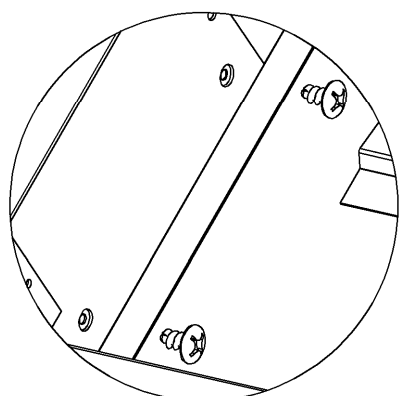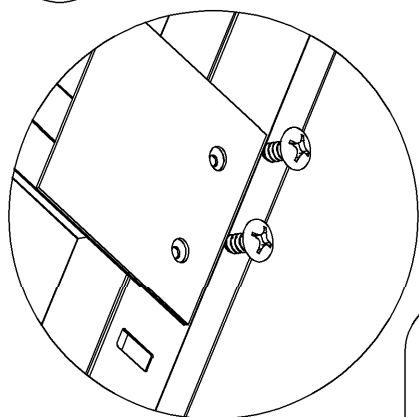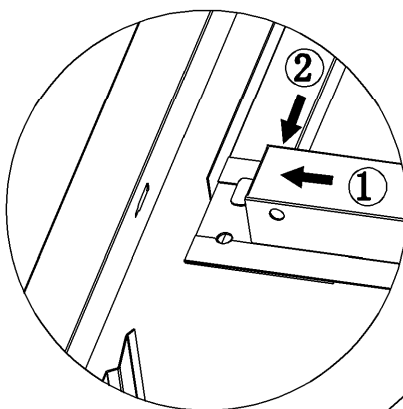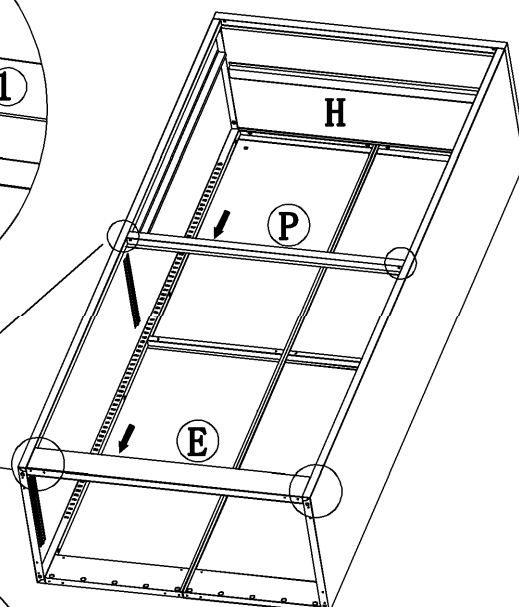


N-8

5



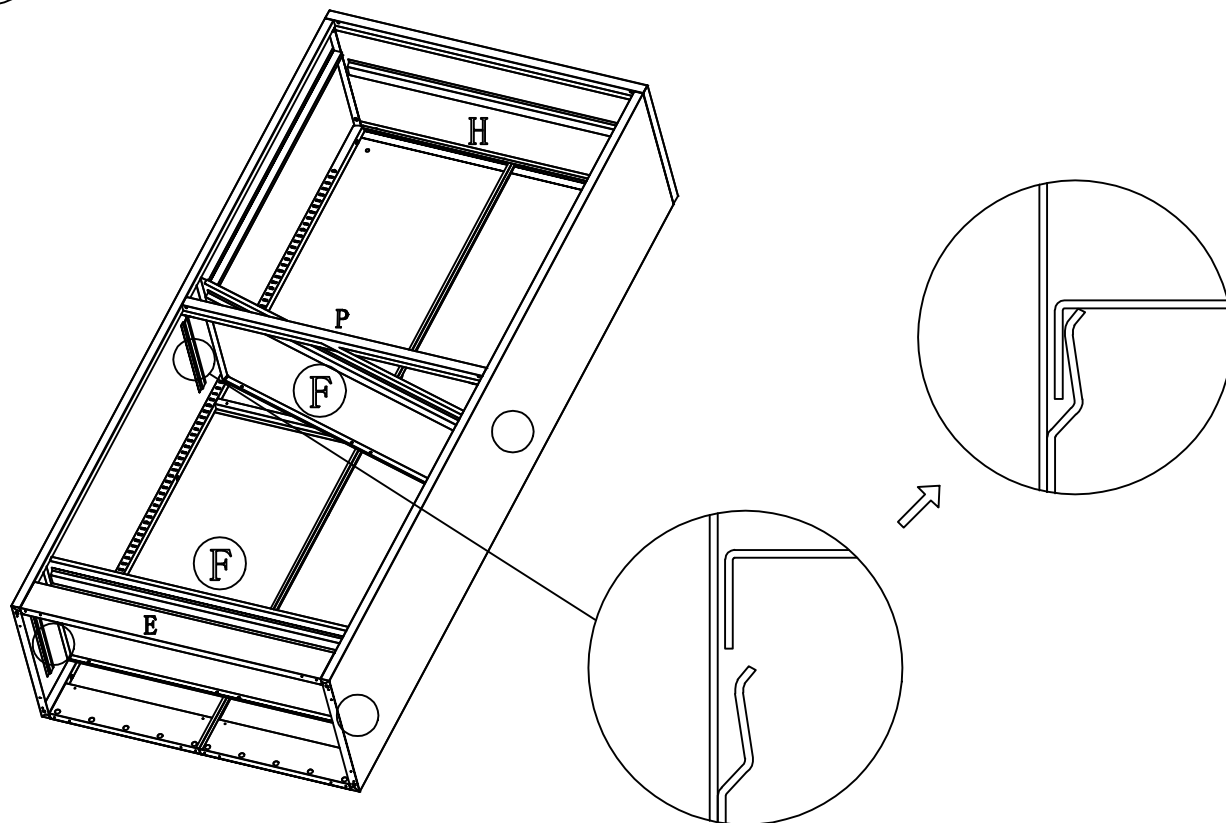


6

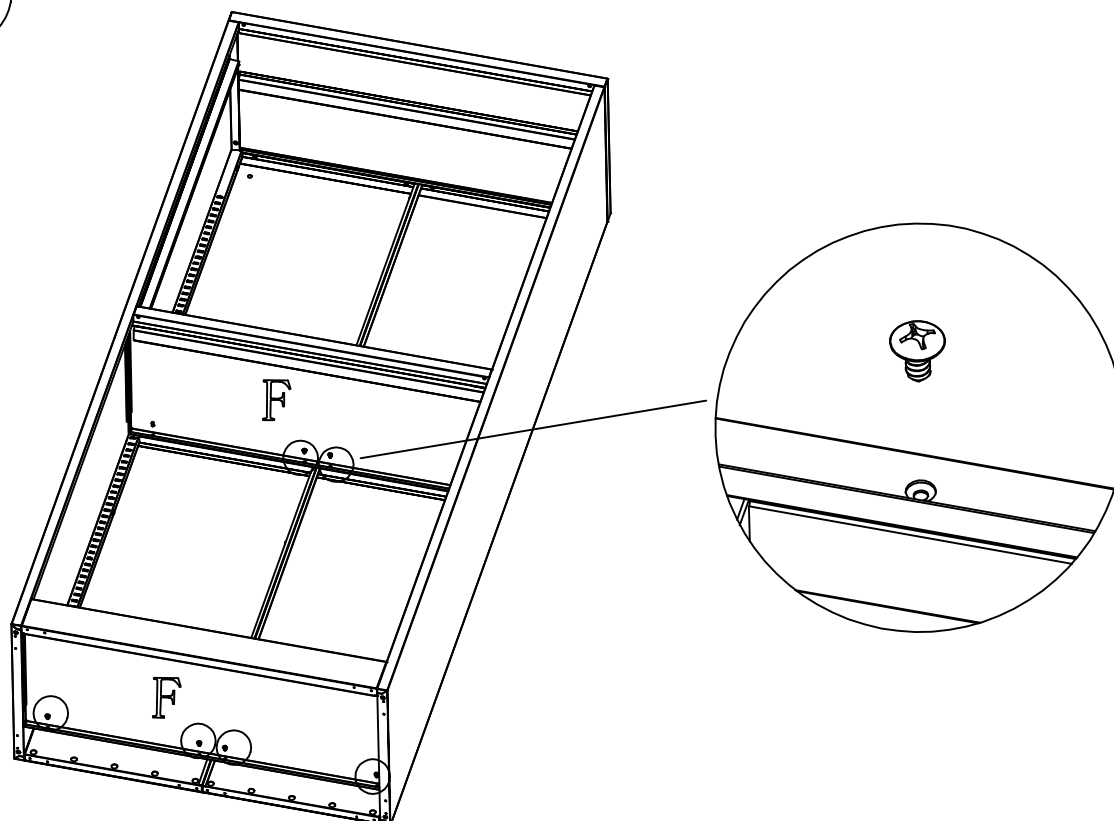


N-6

7

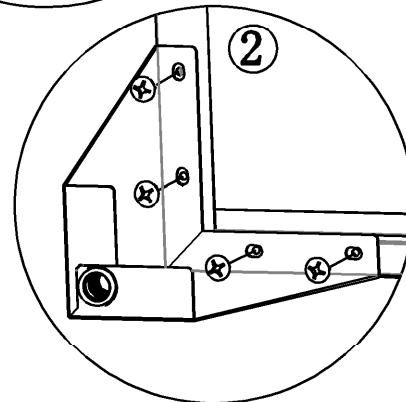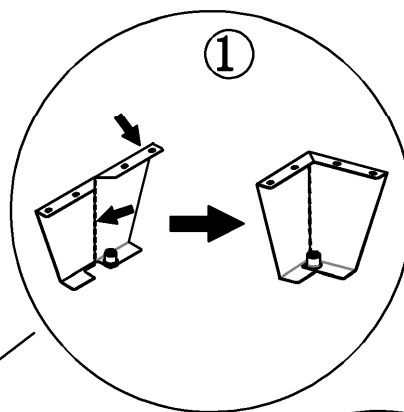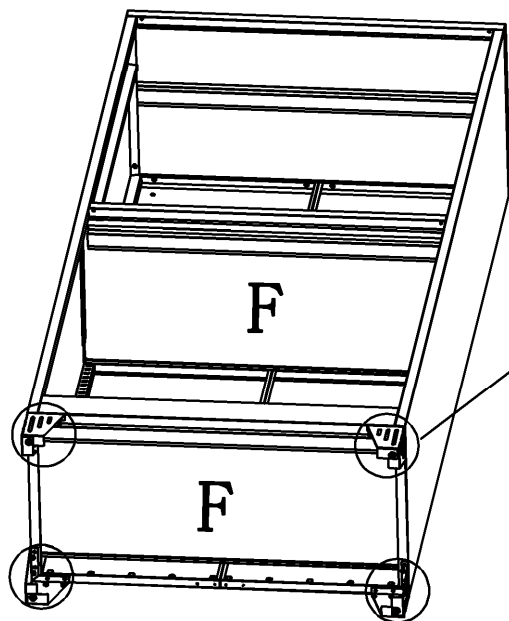

If you think it looks better without the standing corner, you can choose to skip this step (7) and the next step (8)



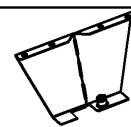


G-4






N-16

8

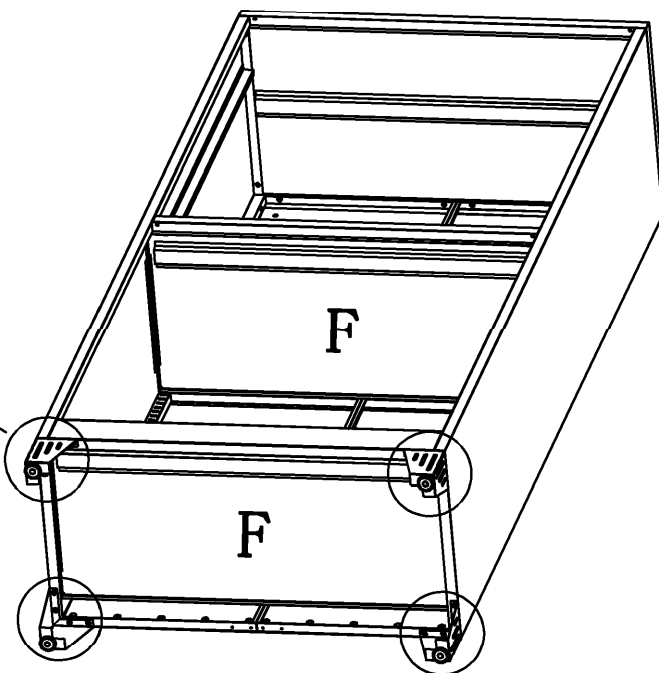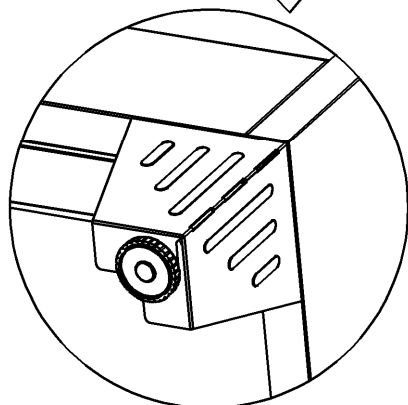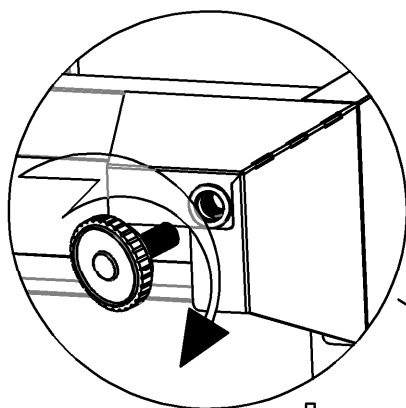





G-4

9

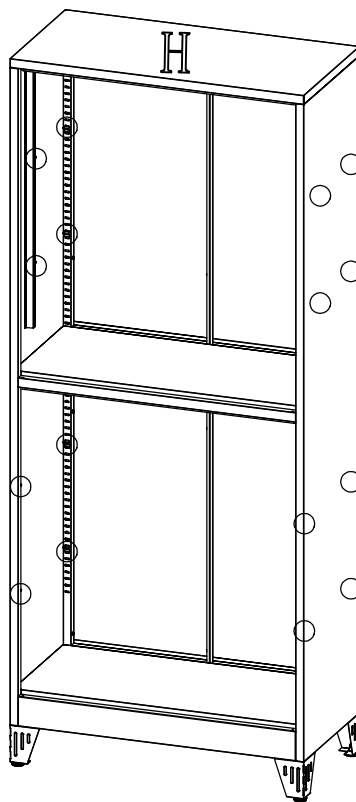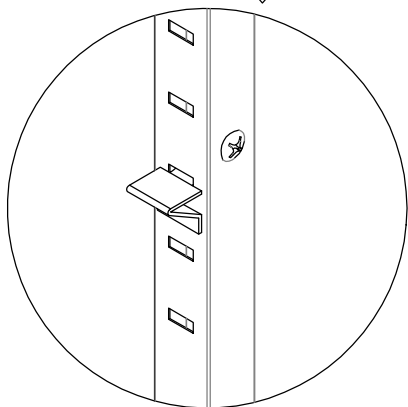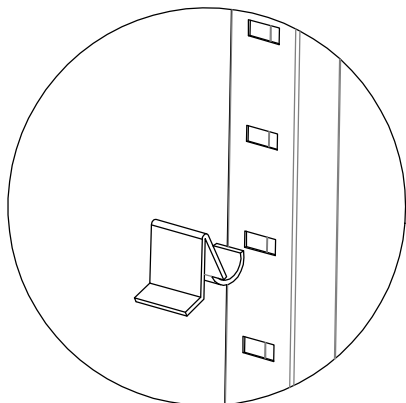






0-16

10


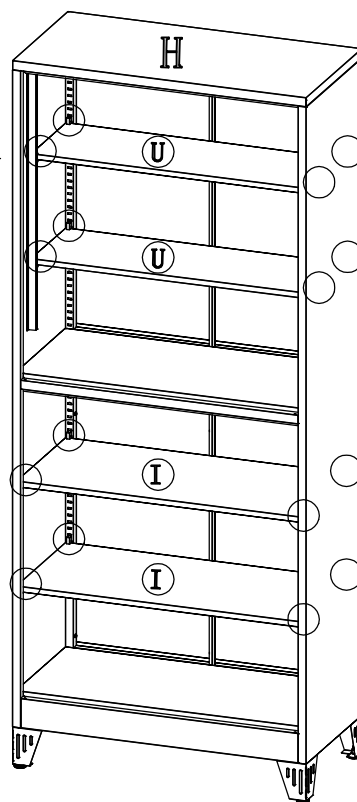
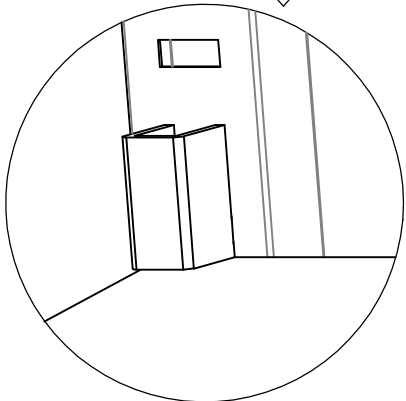
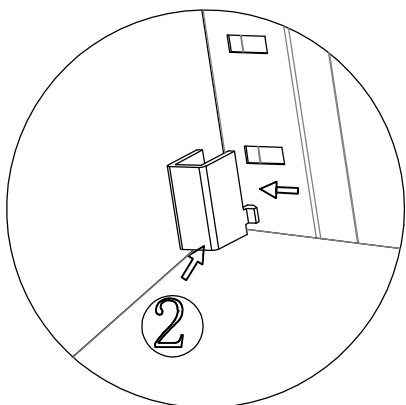


V-16

11

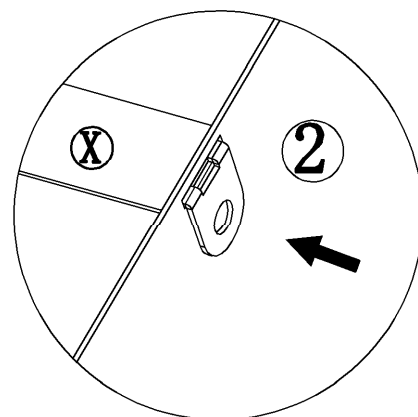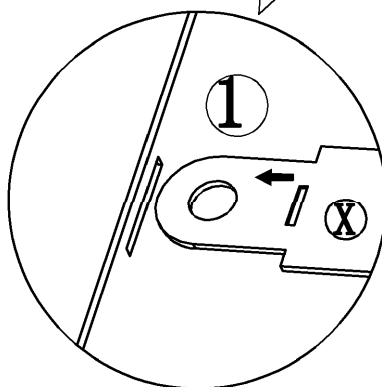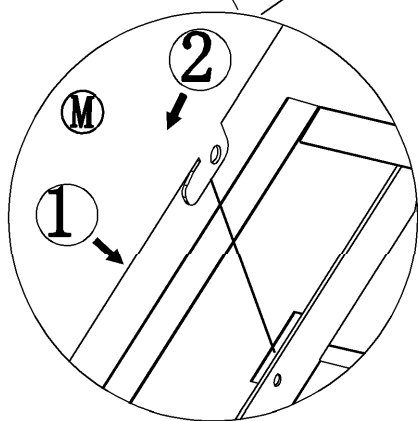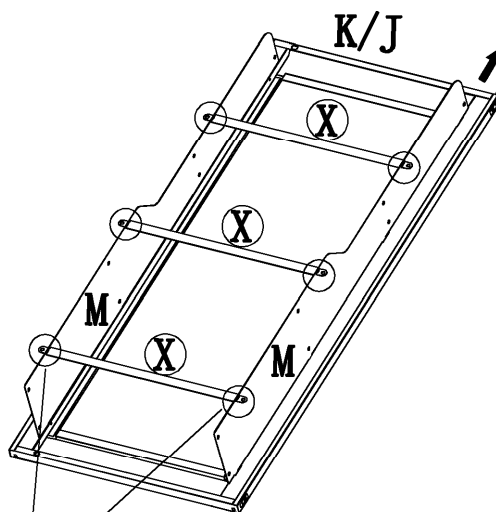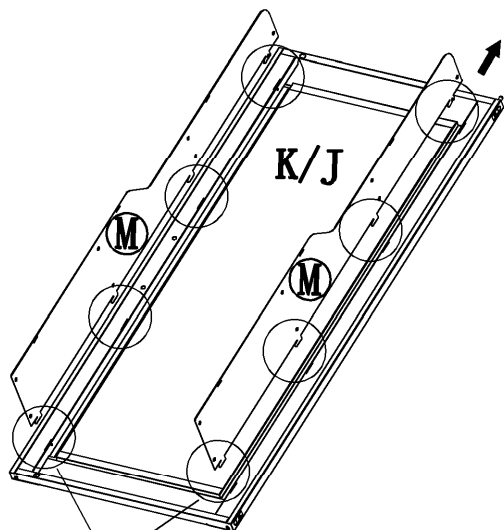


12

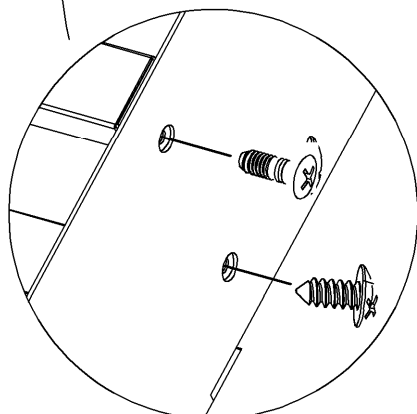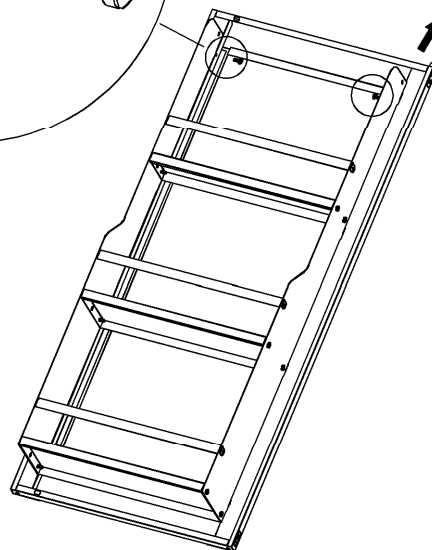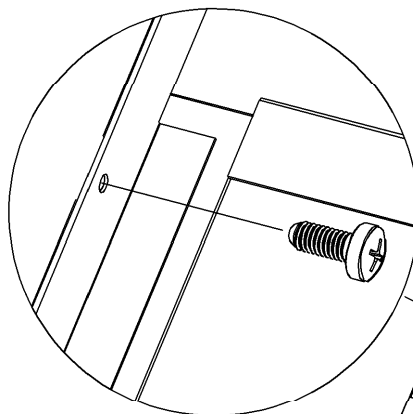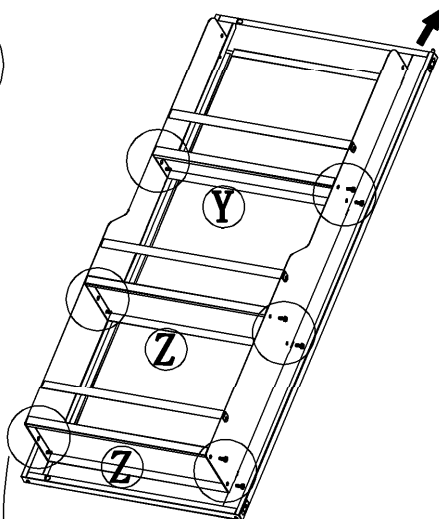


N-28




13

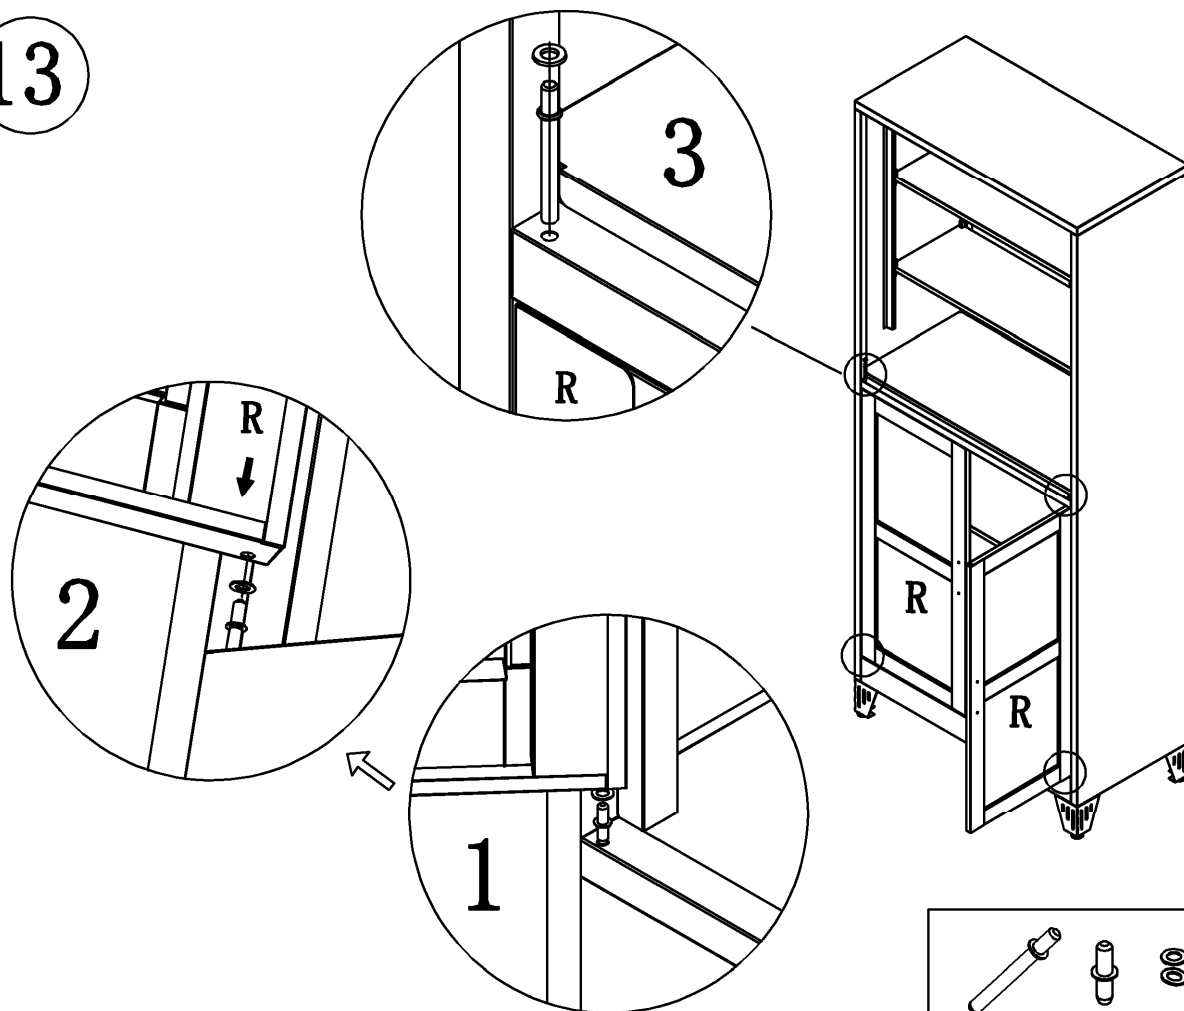

14

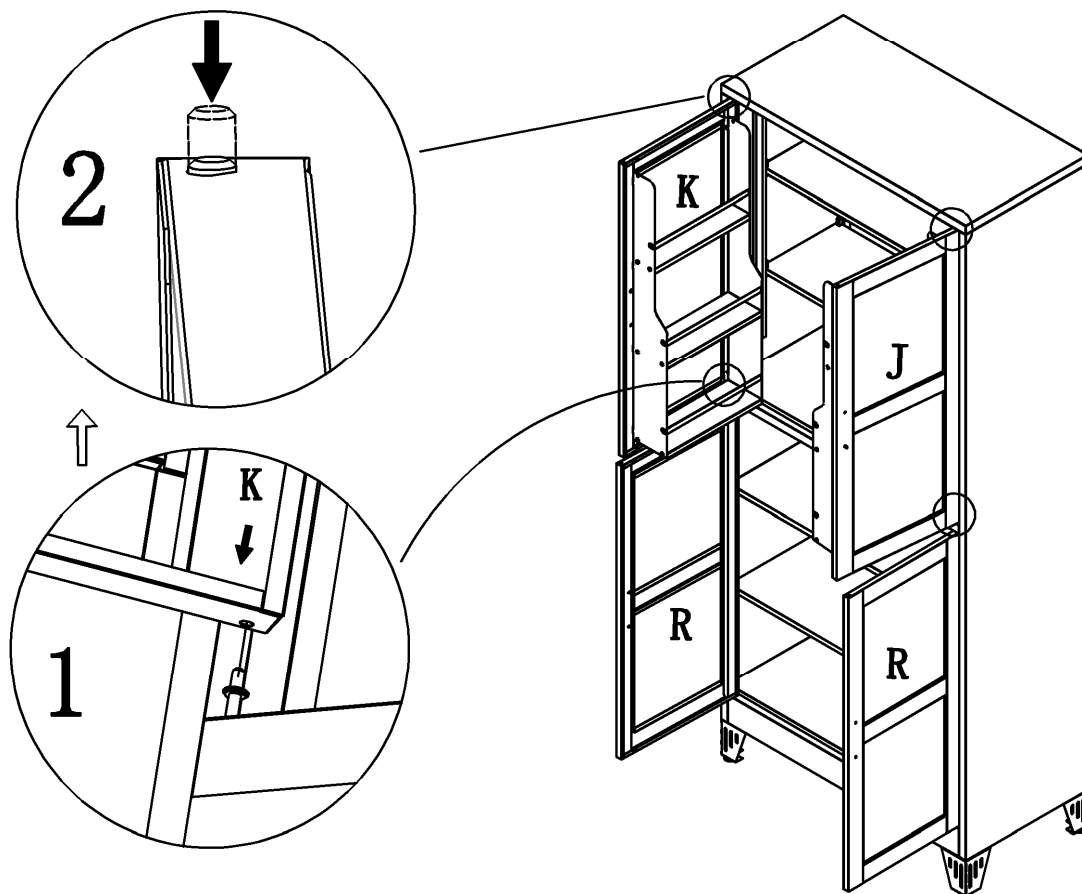

15

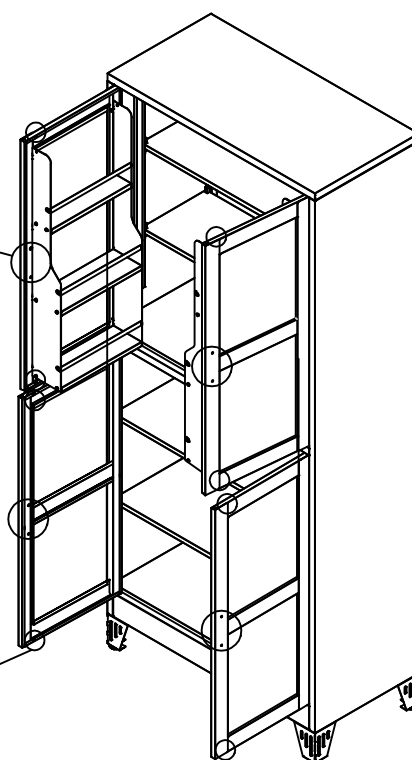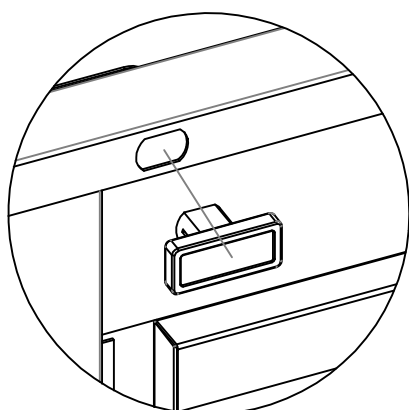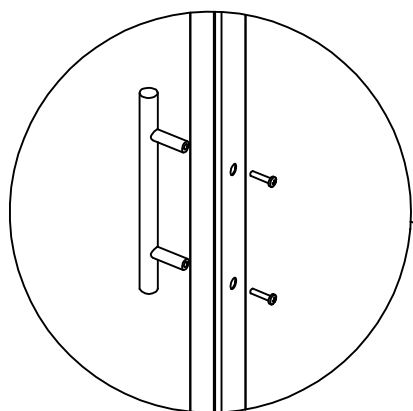


T-4



Q-8

16

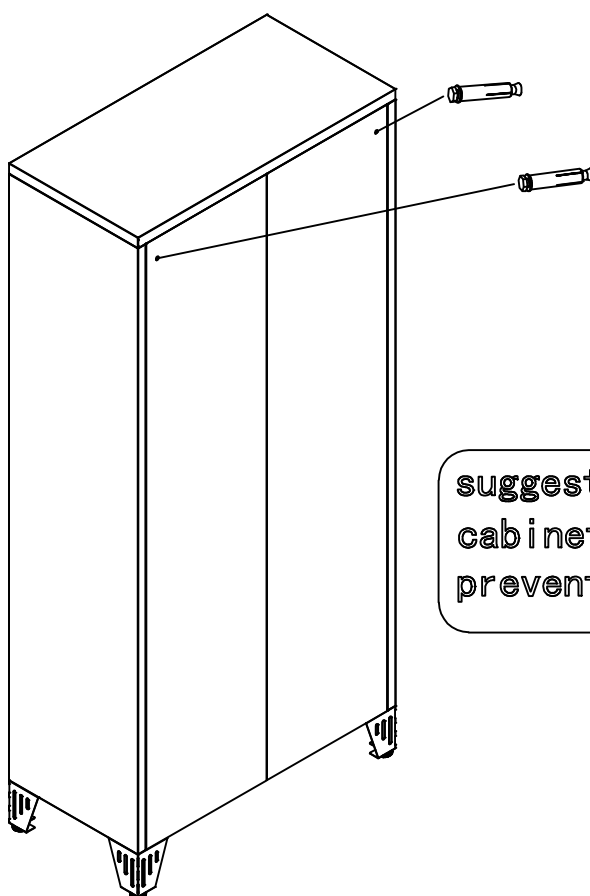



suggest fixing the
cabinet to the wall to
prevent tipping over!



W-2

Problems and Solutions

Question 1: when encountering uneven height of two door panels, adjust the bottom adjustment foot to make it flat.

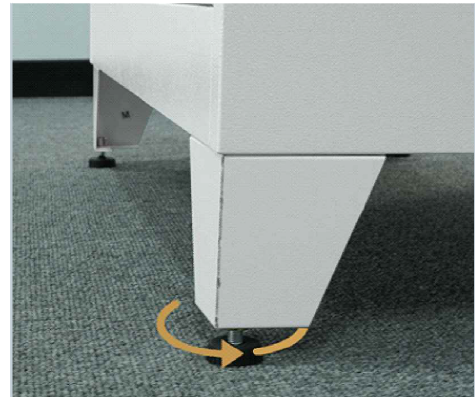

**Question 2: When the door is closed, it still protrudes outward.
That's because the door is made of steel plate and has stretchability.
You can adjust it according to the method shown in the picture.**

