


# Assembly Instructions

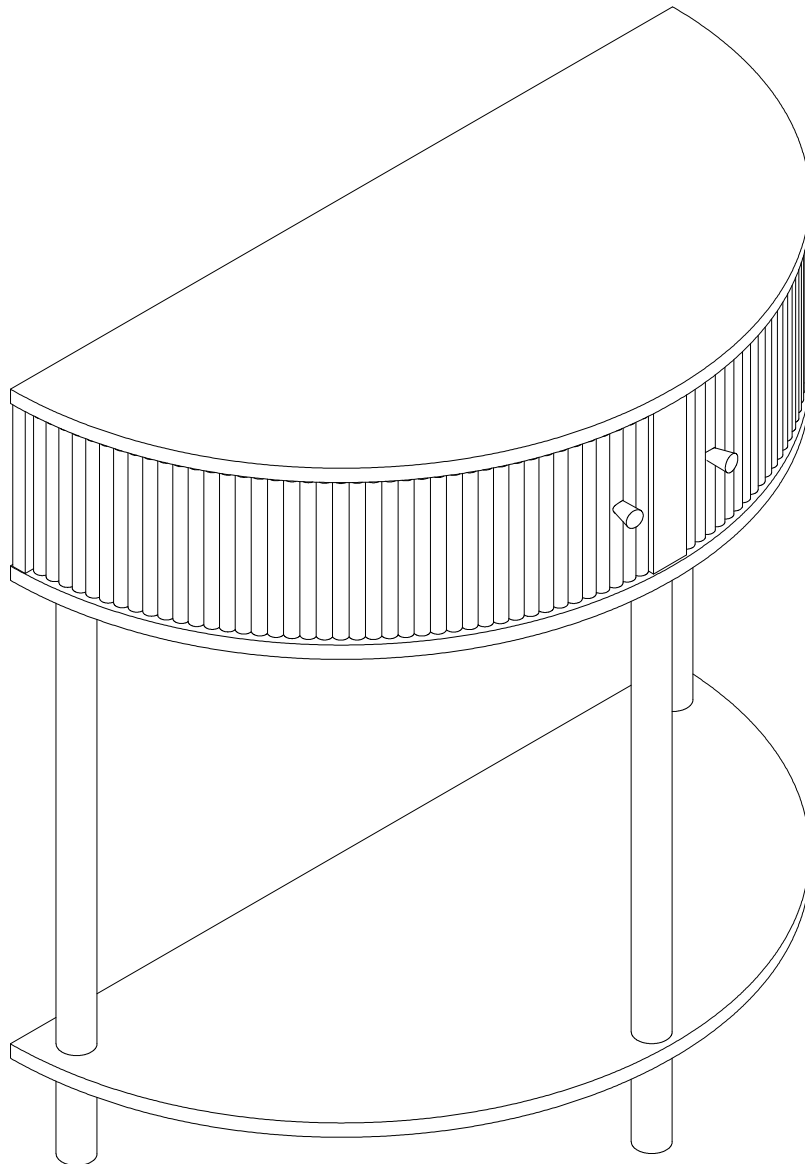


# Before Assembly

## Tips Before Your Start:


- Remove all wrapping material, including staples & packing straps before you start to assemble.
- DO NOT tighten all screws and bolts until the assembly is completely assembled.
- Keep all hardware parts out of reach of children.

## QUICKFIT

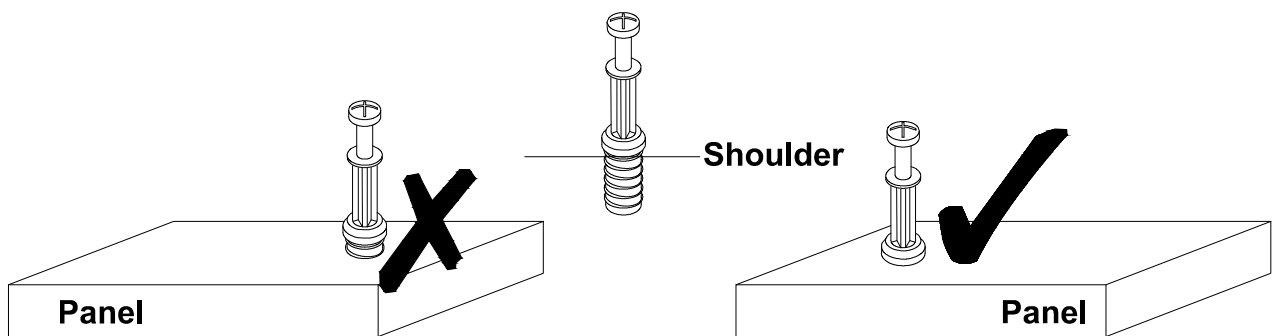

Tighten quickfit until shoulder is flush with panel. Do not overtighten or undertighten.


## CAM LOCK

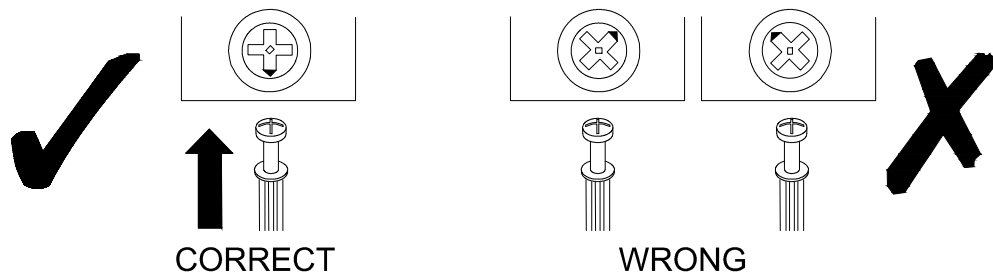

When fitting a cam lock, ensure the starting position is correct before inserting the connecting QUI CKFIT



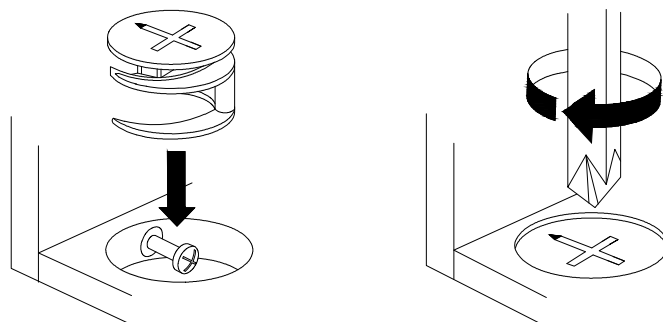










Quickfit head should be in the centre of the cam lock when the two panels are joined.

Cam lock should be inserted before quickfit.




Turn cam lock clockwise to tighten.


# Part List

<b>No. A</b> Quantity:9 Pcs Cam Lock Dowel 8*28mm 	<b>No. B</b> Quantity:9 Pcs Cam φ15 	<b>No. C</b> Quantity:9 Pcs Sticker Ø20 	<b>No. D</b> Quantity:8 Pcs Dowel 8*30mm 
<b>No. E</b> Quantity:32 Pcs Screw 3.5*14mm 	<b>No. F</b> Quantity:2 Pcs Screw M4*18mm 	<b>No. G</b> Quantity:2 Pcs Handle 	<b>No. H</b> Quantity:2 Sets Magnetic Door Catcher 
<b>No. I</b> Quantity:3 Pcs Foot Pad Ø20 	<b>No. J</b> Quantity:4 Pcs Hinge 	<b>No. K</b> Quantity:5 Pcs Screw M6*40mm 	<b>No. L</b> Quantity:1 Pcs Allen Key 4# 
<b>No. M</b> Quantity:1 Sets Anti-falling Parts 			

# Product structure

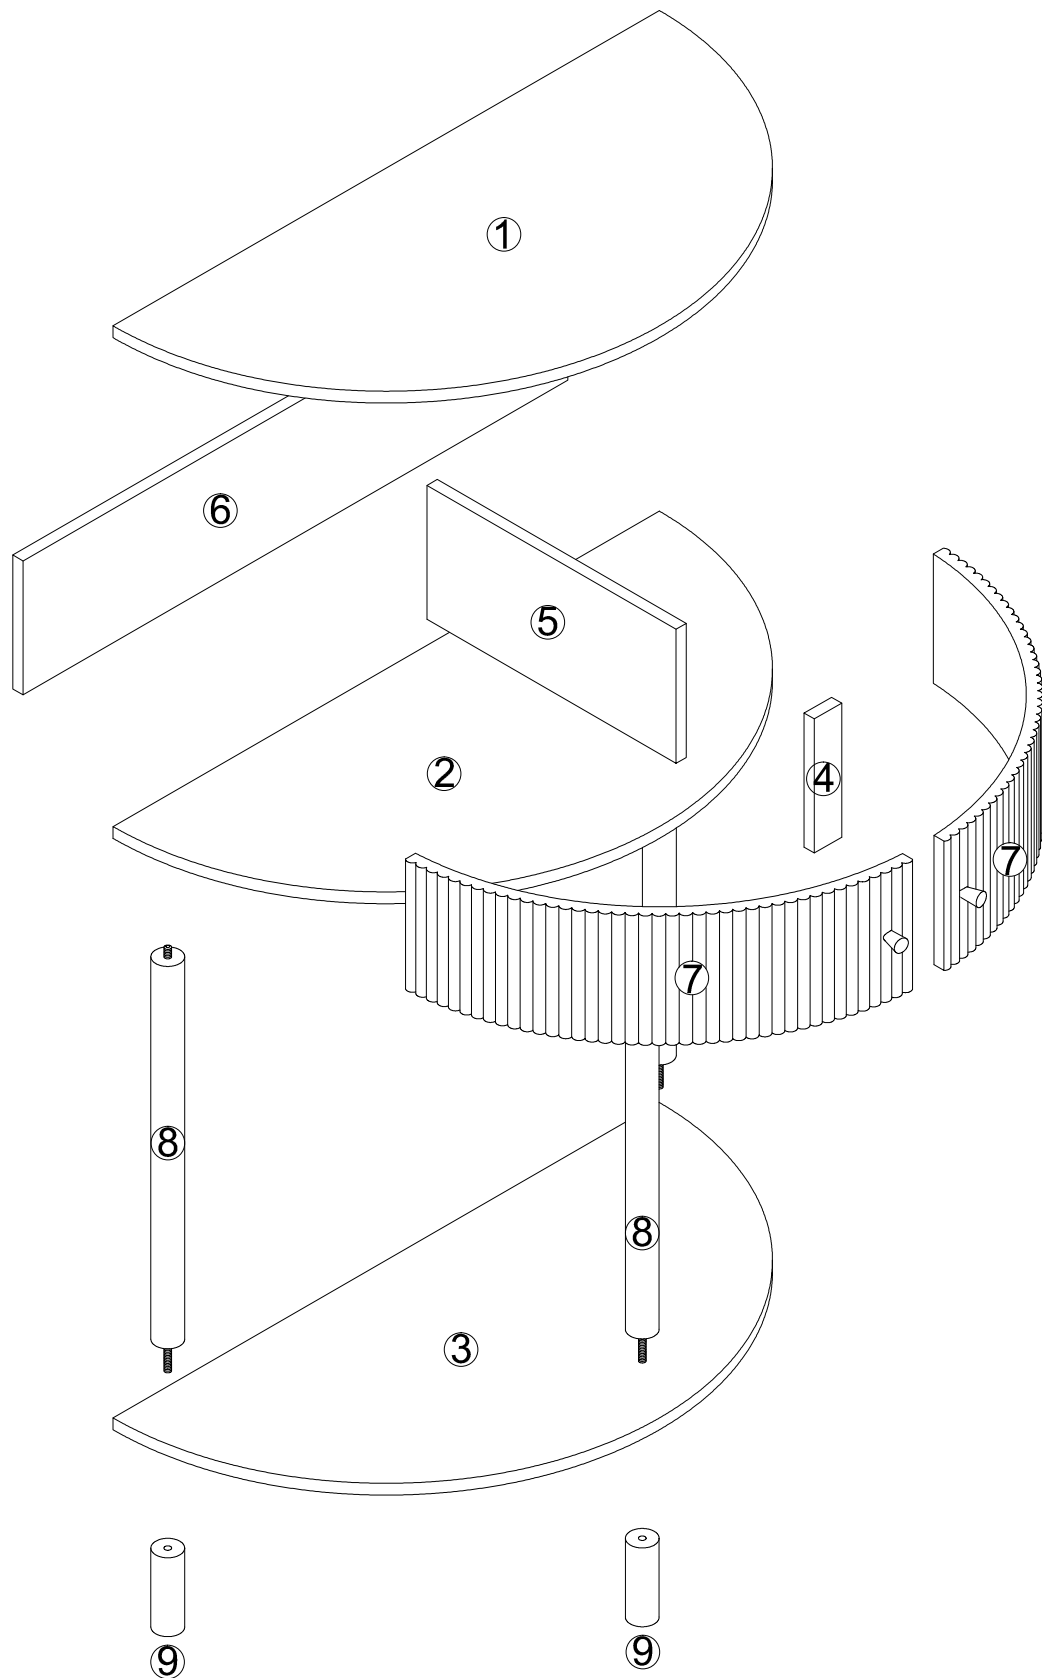

## STEP 1

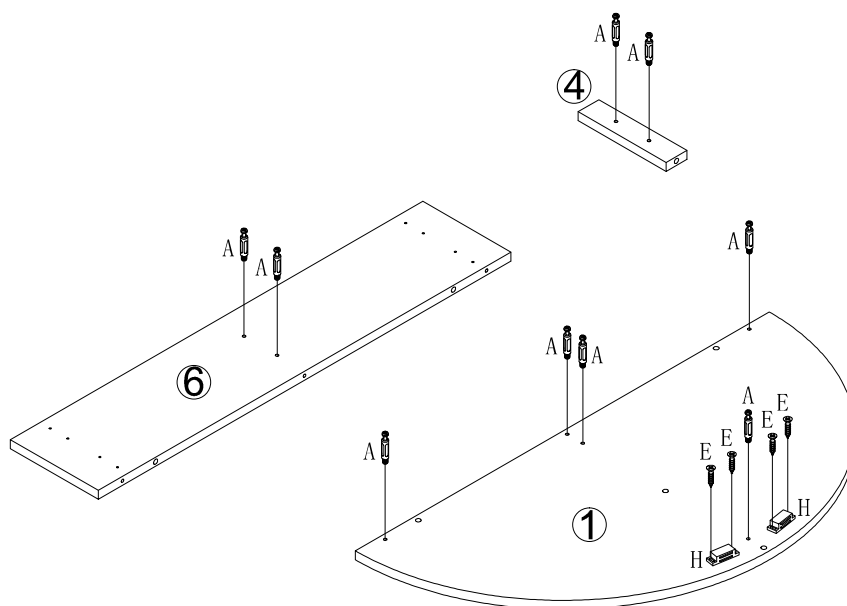


No. A  
Quantity: 9 Pcs  
8\*28 mm




No. E  
Quantity: 4 Pcs  
3.5\*14mm



No. H  
Quantity: 2 Pcs




## STEP 2

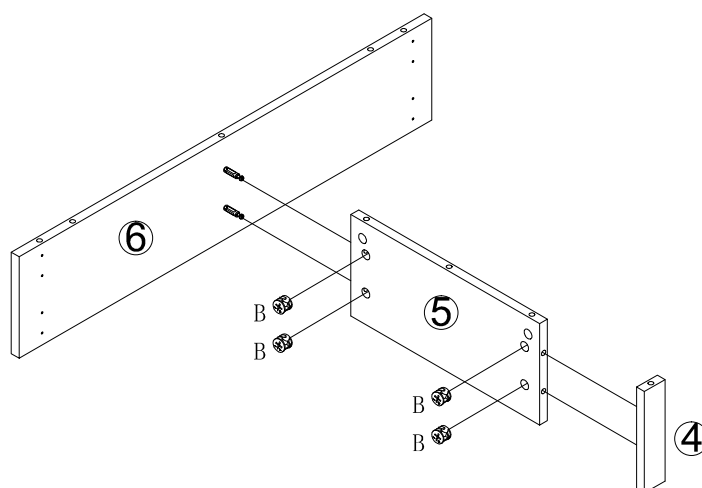

No. B  
Quantity: 4 Pcs  
Ø15




## STEP 3

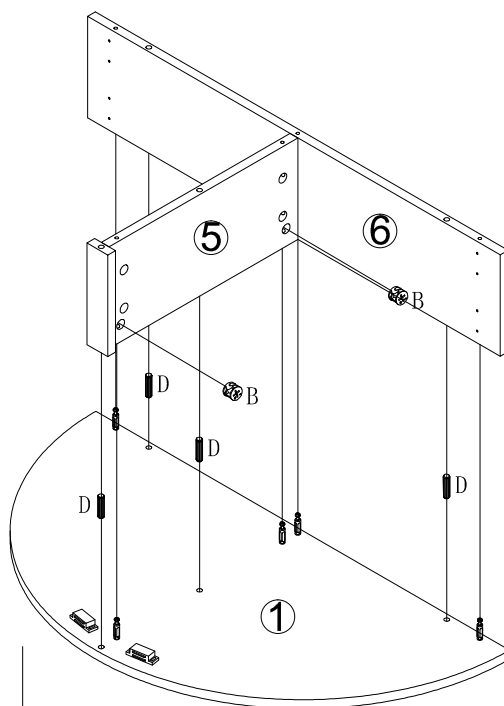


No. B  
Quantity: 2 Pcs  
Ø15



No. D  
Quantity: 4 Pcs  
8\*30mm




## STEP 4

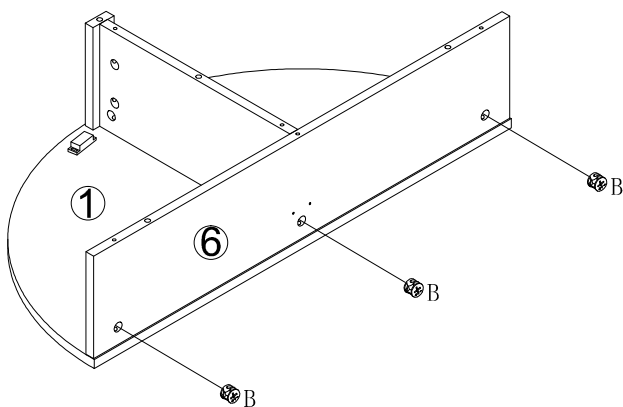


No. B  
Quantity: 3 Pcs  
Ø15



## STEP 5

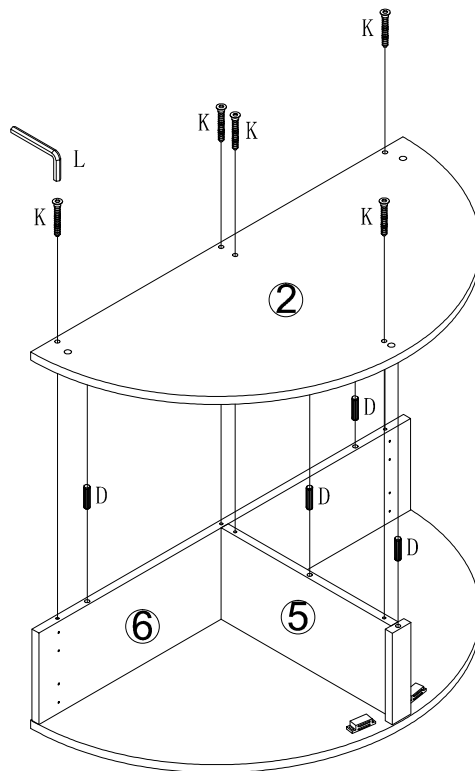

No. D  
Quantity: 4 Pcs  
8\*30mm




No. K  
Quantity: 5 Pcs  
M6\*40mm



No. L  
Quantity: 1 Pcs  
4#




## STEP 6

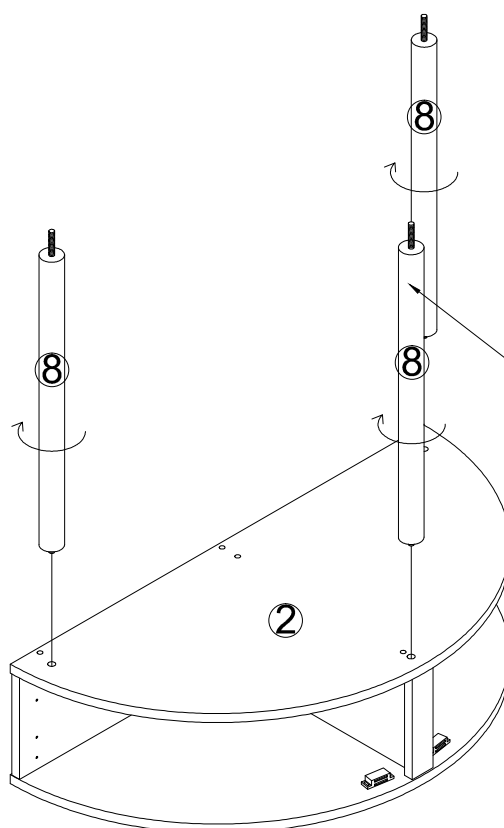


**Note: The long screw rod should face upwards.**

## STEP 7

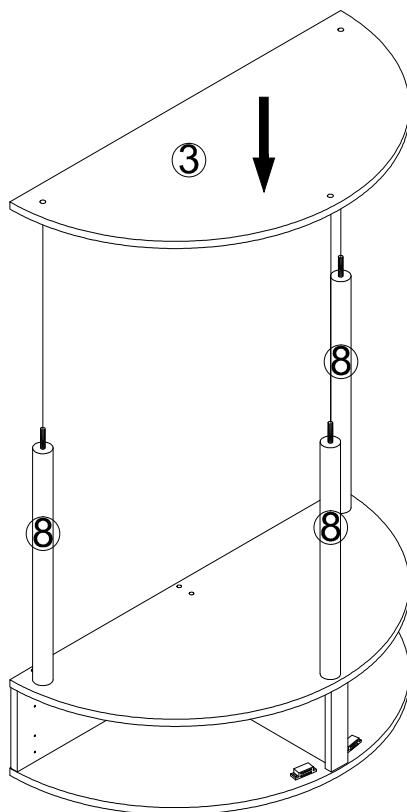


## STEP 8

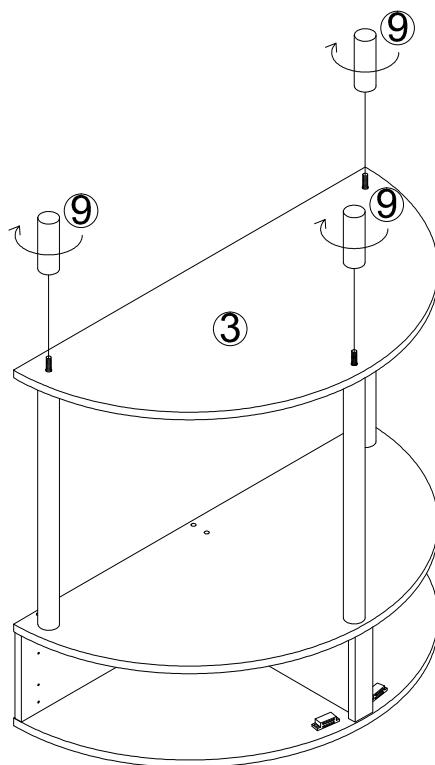





# STEP 9

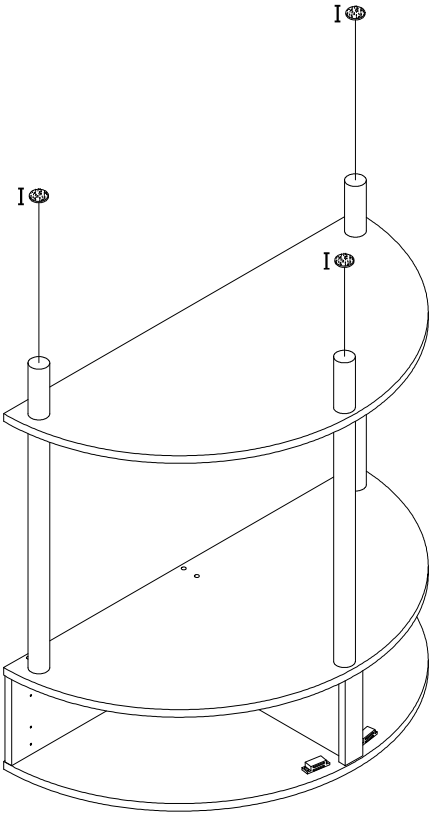

No. I  
Quantity: 3 Pcs  
Ø20



# STEP 10

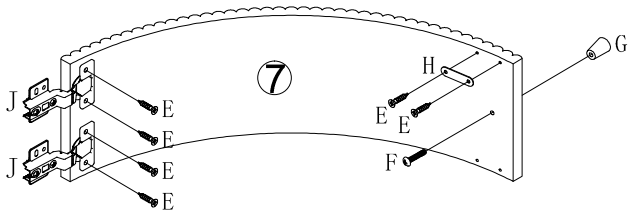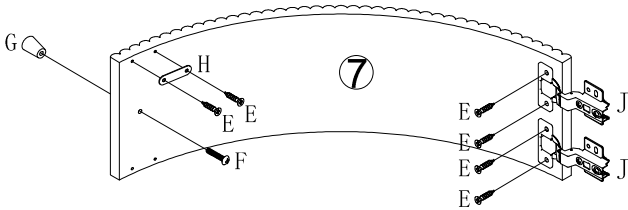

No. E  
Quantity: 12 Pcs  
3.5\*14mm



No. F  
Quantity: 2 Pcs  
M4\*18mm




No. G  
Quantity: 2 Pcs




No. H  
Quantity: 2 Pcs



No. J  
Quantity: 4 Pcs




## STEP 11

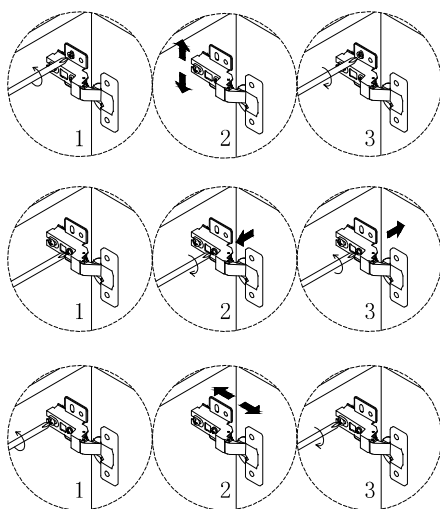


**Note: The lock iron sheet is oriented with one side facing up.**

No. E  
Quantity: 8 Pcs  
3.5\*14mm

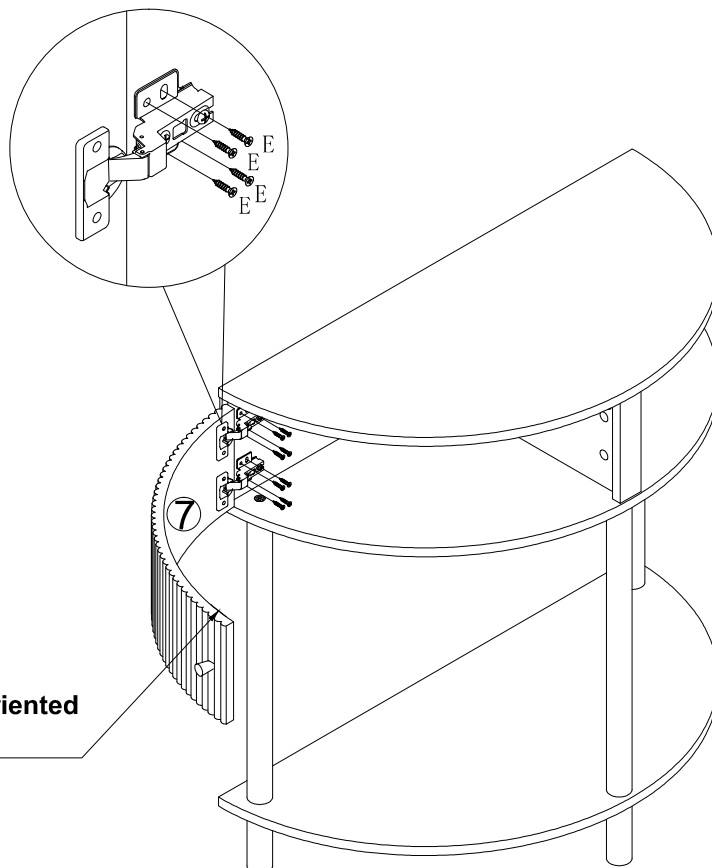


## STEP 12

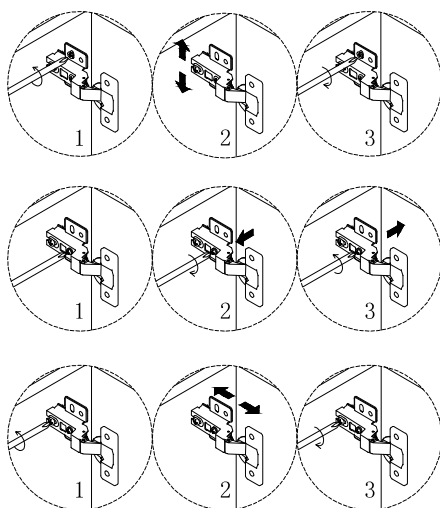


No. E  
Quantity: 8 Pcs  
3.5\*14mm




**Note: The lock iron sheet is oriented with one side facing up.**

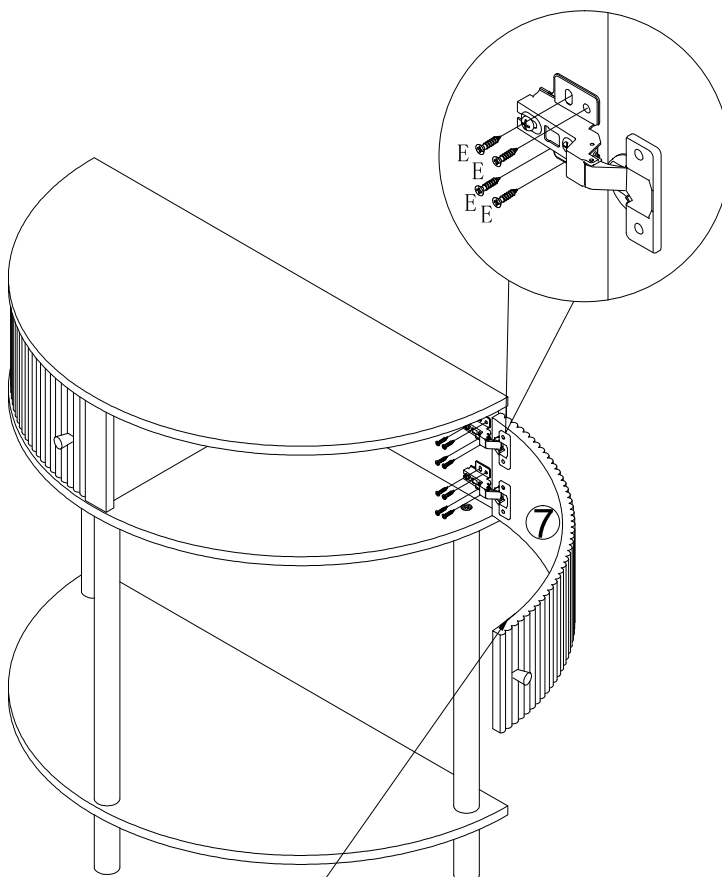

## STEP 13

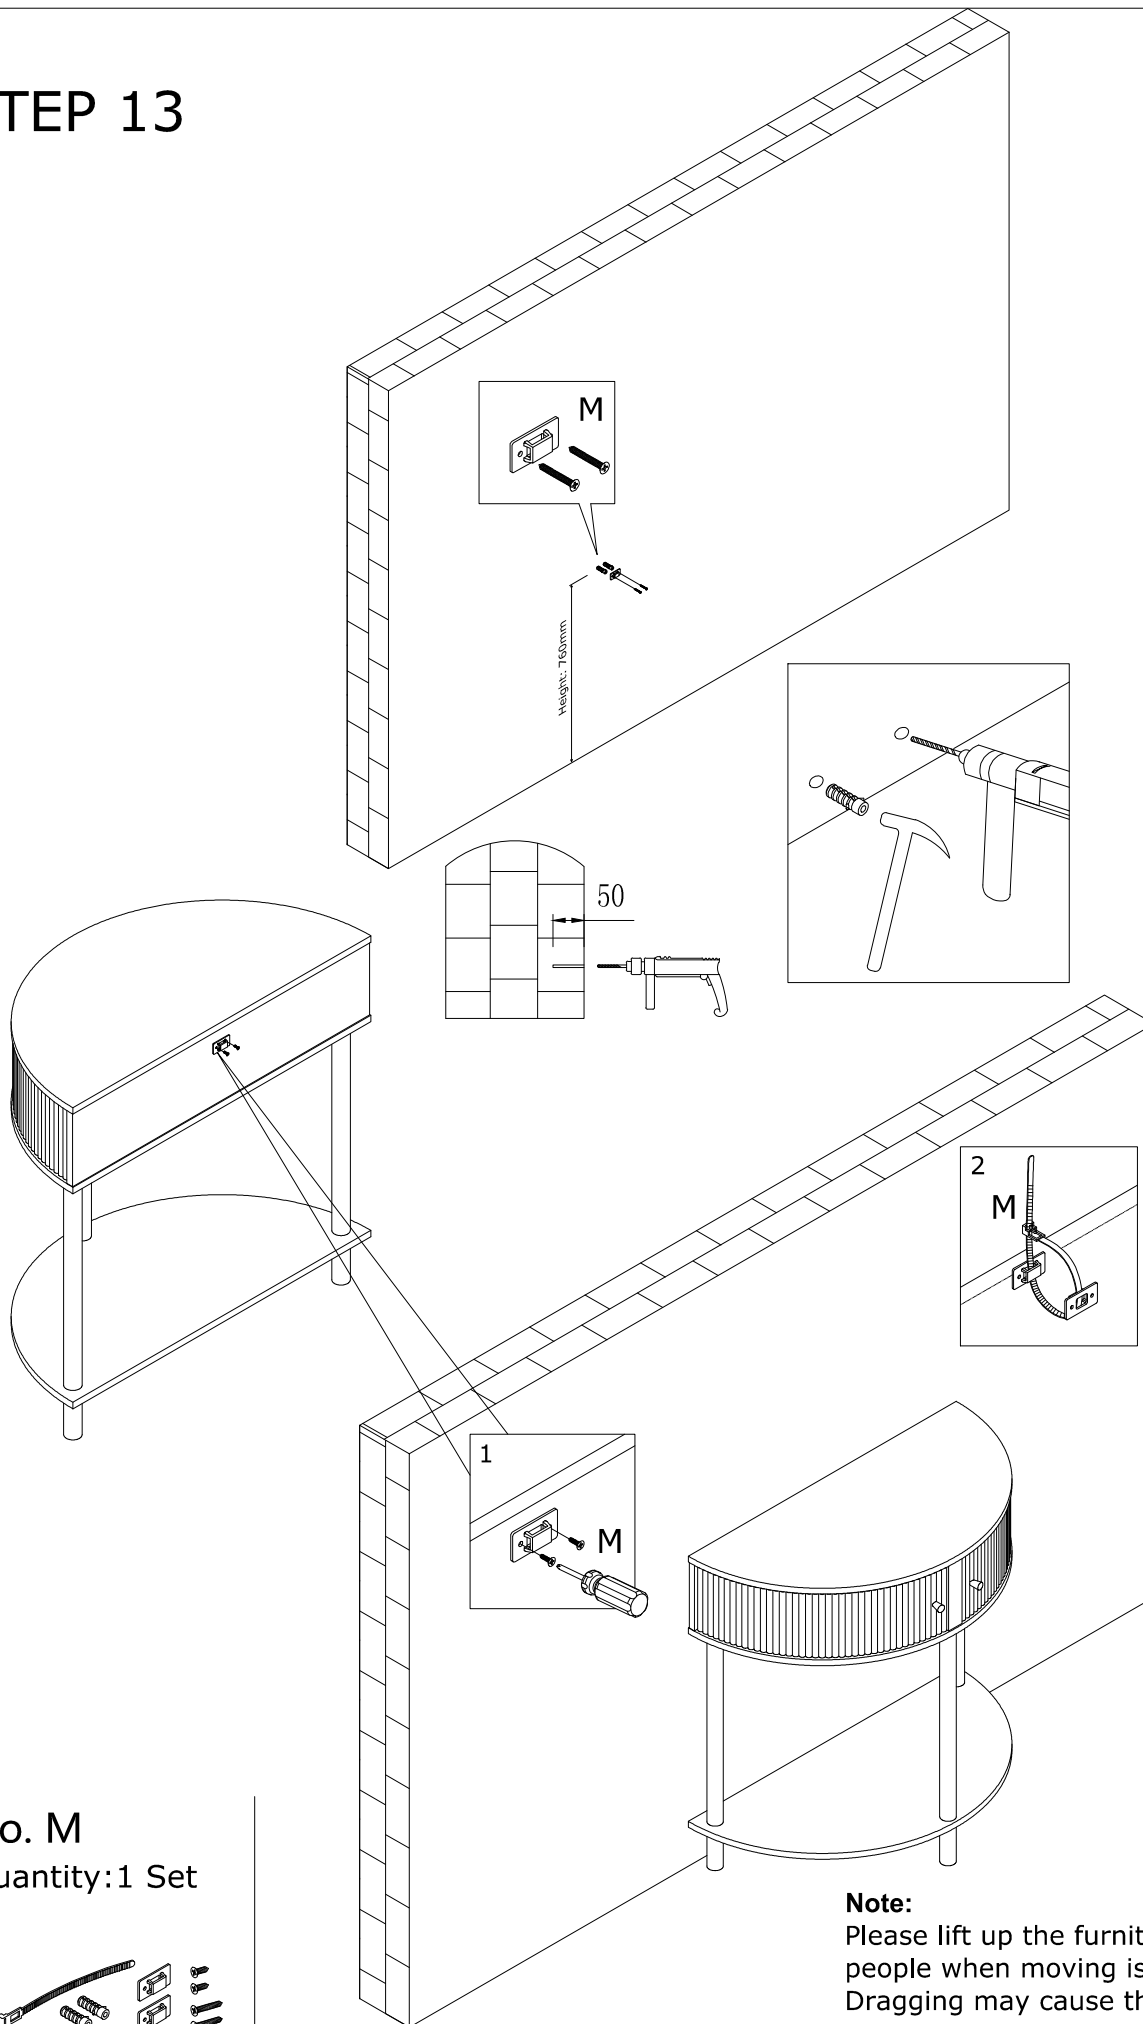

No. M  
Quantity:1 Set



**Note:**  
Please lift up the furniture by two people when moving is needed.  
Dragging may cause the legs failure.