

QUEEN SIZE STORAGE BED

ASSEMBLY INSTRUCTIONS




ASSEMBLY TIPS:

- 1.Remove hardware from box and sort by size.
- 2.Please check to see that all hardware and parts are present prior to start of assembly.
- 3.Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



Warning!


- 1.Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
- 2.This product is for home use only and not intended for commercial establishment.

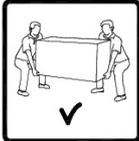


ASSEMBLY TIME	90 MINUTES
----------------------	-------------------

PARTS IDENTIFICATION

B1 (BOX 1)

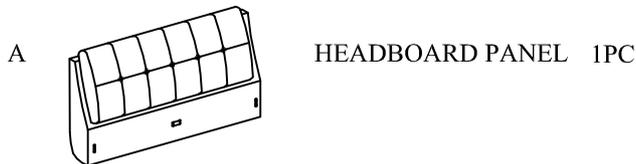

B2 (BOX 2)

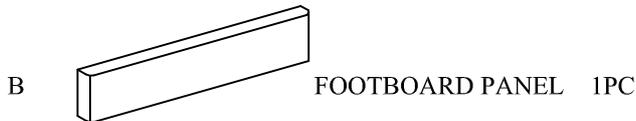

B3 (BOX 3)



B4 (BOX 4)



H		DRAWER FRONT PANEL (WITH "1" LABEL)	4PCS
I		DRAWER BACK PANEL (WITH "2" LABEL)	4PCS
J		DRAWER SIDE PANEL (WITH "3" LABEL)	8PCS
K		DRAWER BOTTOM PANEL (WITH "4" LABEL)	4PCS
L		DRAWER SUPPORT BAR (WITH "5" LABEL)	8PCS
M		SIDE FRAME (WITH "6" LABEL)	2PCS
N		SMALL RIGHT CENTER FRAME (WITH "7" LABEL)	2PCS
O		SMALL LEFT CENTER FRAME (WITH "8" LABEL)	2PCS
P		LARGE CENTER FRAME (WITH "9" LABEL)	2PCS
Q		SUPPORT BAR (WITH "10" LABEL)	4PCS

ASSEMBLY TIPS:

- 1.Remove hardware from box and sort by size.
- 2.Please check to see that all hardware and parts are present prior to start of assembly.
- 3.Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.





Warning!

- 1.Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
- 2.This product is for home use only and not intended for commercial establishment.


PARTS IDENTIFICATION

B5 (BOX 5)

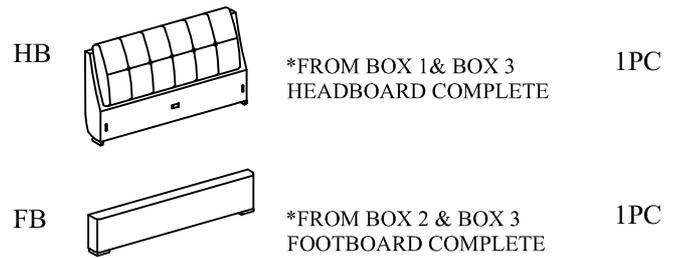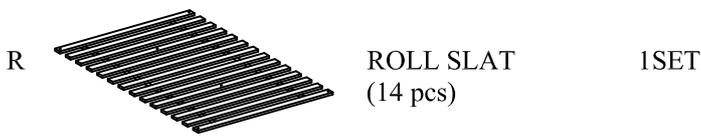

HARDWARE IDENTIFICATION


Z - B3 (BOX 3) - Hardware pack is located in (B3)




NOTE : PHILLIPS HEAD SCREW DRIVER AND RUBBER Mallet ARE REQUIRED IN THE ASSEMBLY PROCESS. HOWEVER,MANUFACTURER DOES NOT PROVIDE THESE ITEMS.

(B4) - BOX4


STEP 1

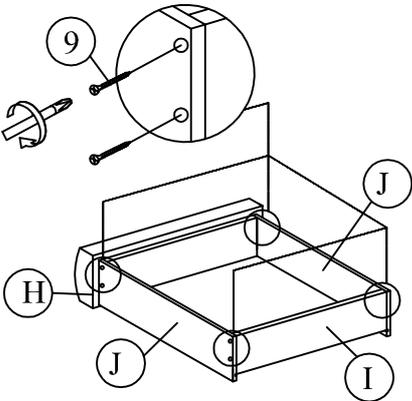


STEP 2

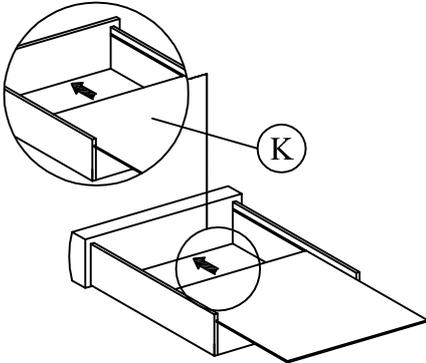


STEP 3

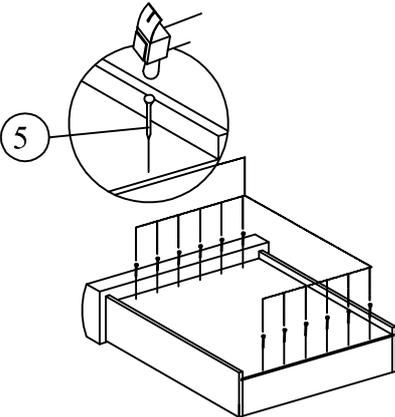


STEP 4

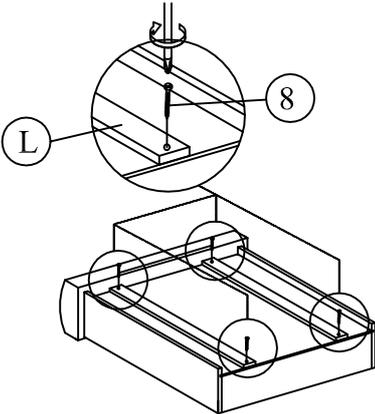


STEP 5

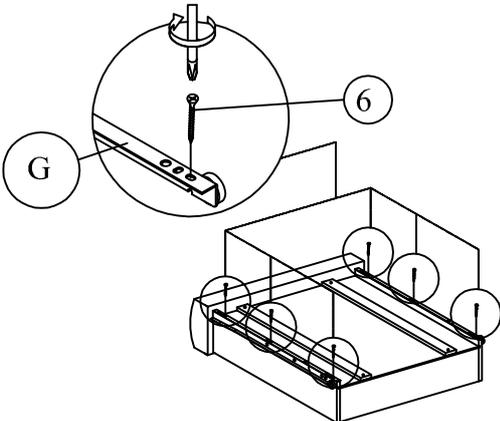


STEP 6

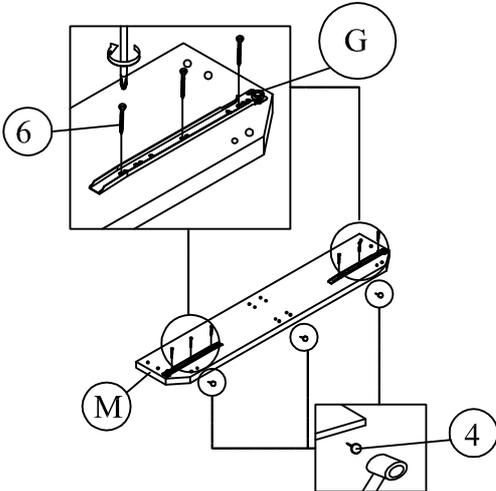


STEP 7

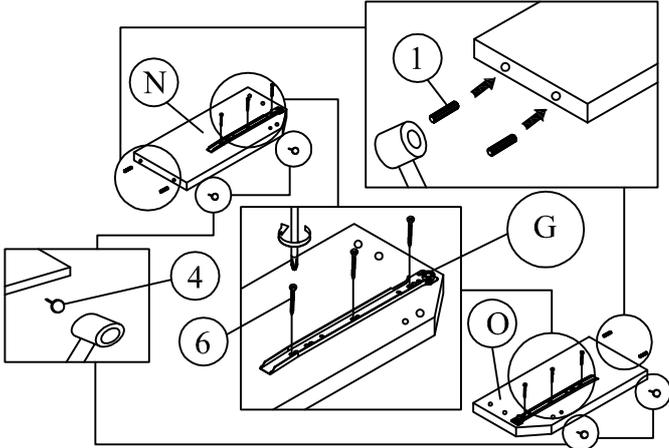


STEP 8

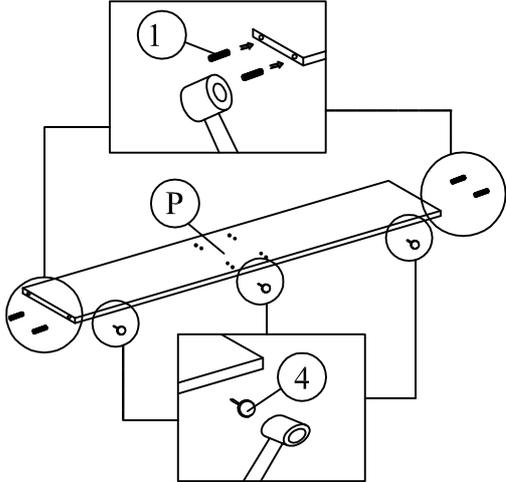


STEP 9

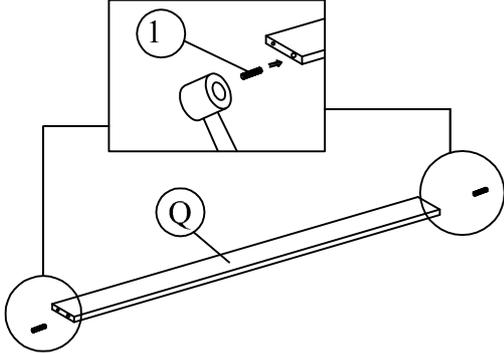


STEP 10

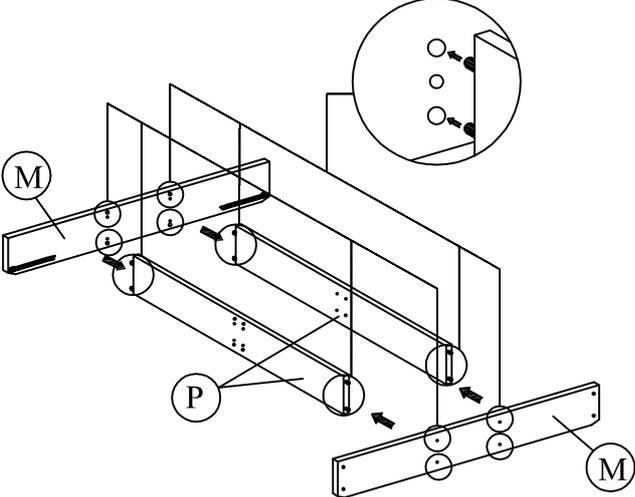


STEP 11

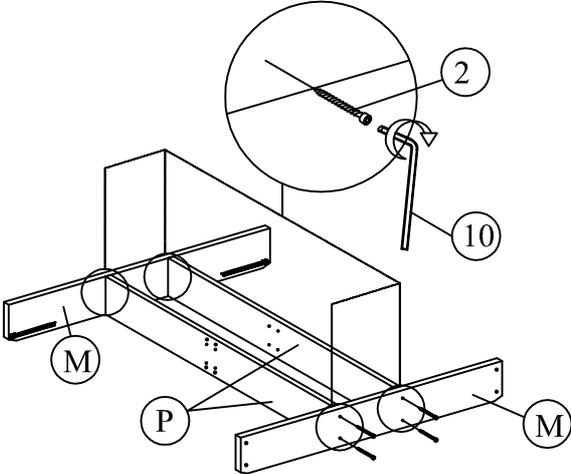


STEP 12

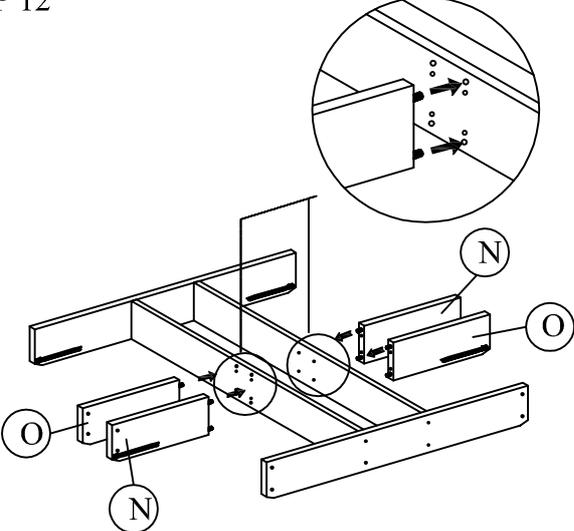


STEP 13

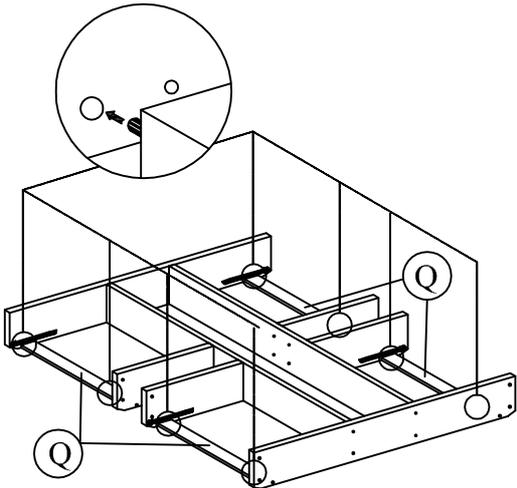

STEP 14

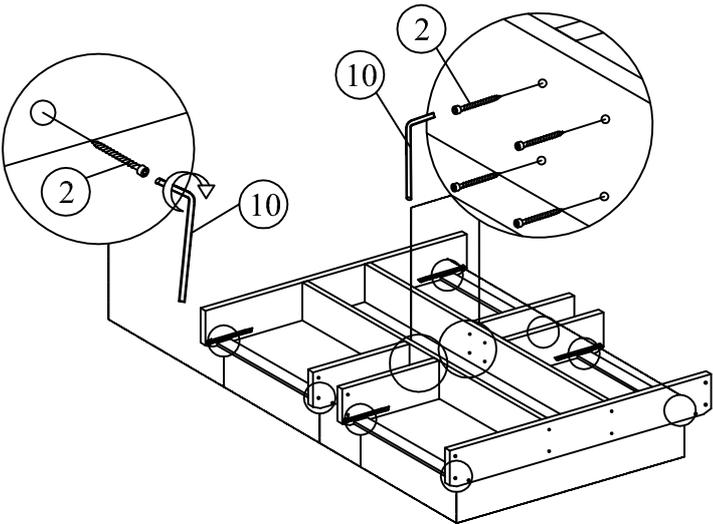


STEP 15

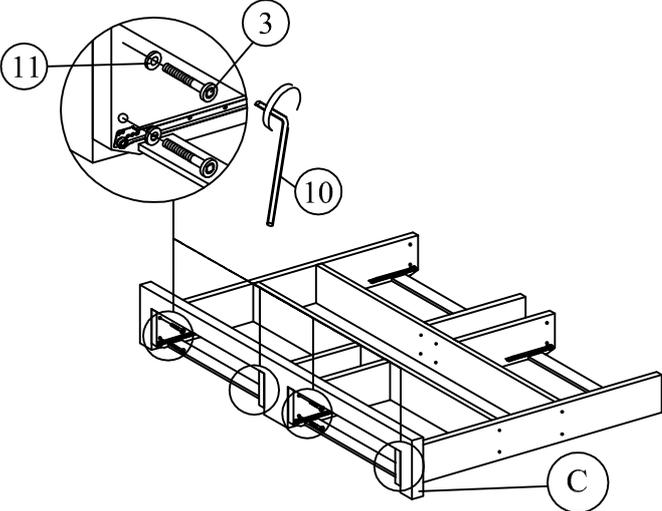


(B1-B3) - BOX1 TO BOX 3

STEP 16

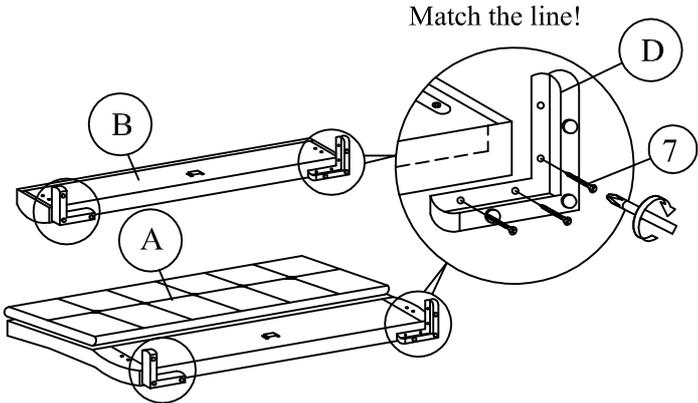

STEP 17


Remove the bolt and flat washer from headboard panel and footboard panel (as shown).

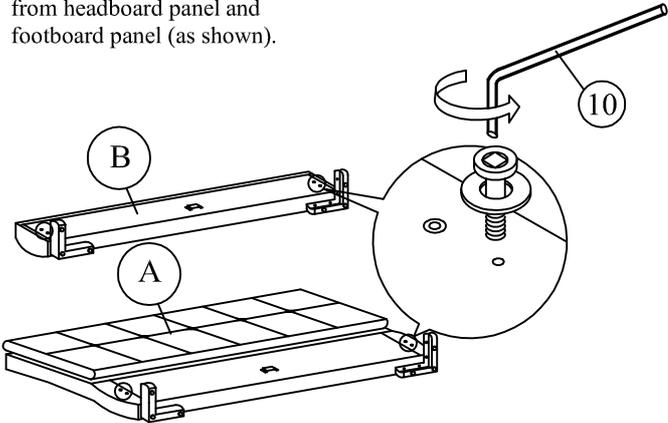


(B1-B5) - BOX1 TO BOX 5

STEP 18


Align and fasten bolt and flat washer using Allen wrench . DO NOT FULLY TIGHTEN AT THIS STEP

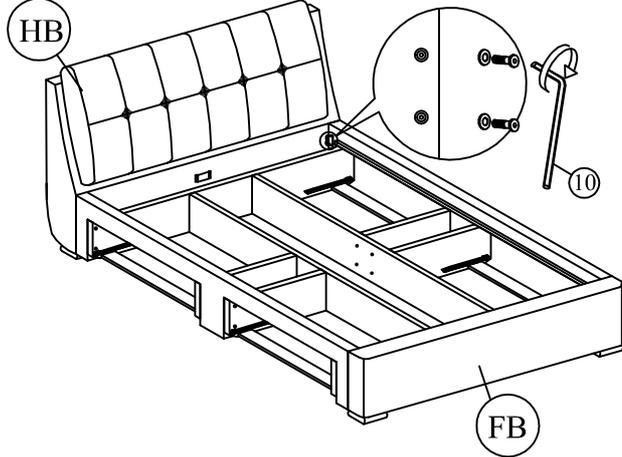


STEP 19

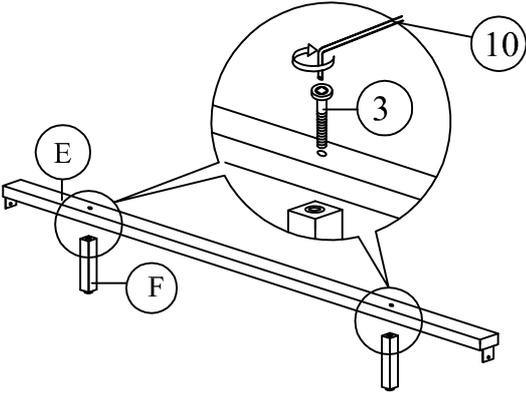


STEP 20

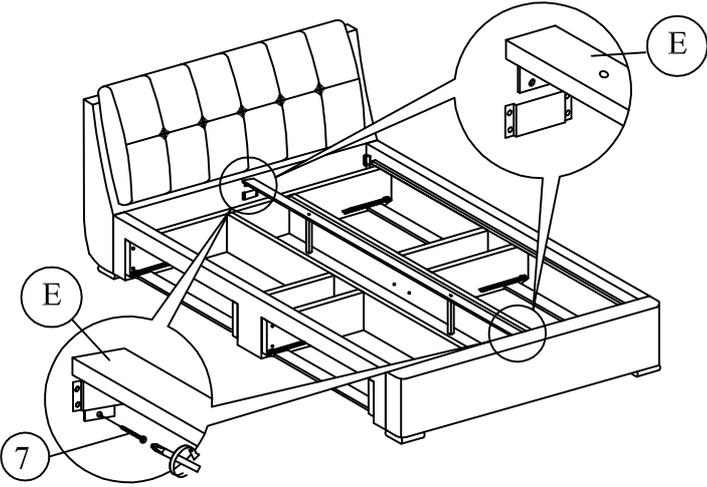

STEP 21

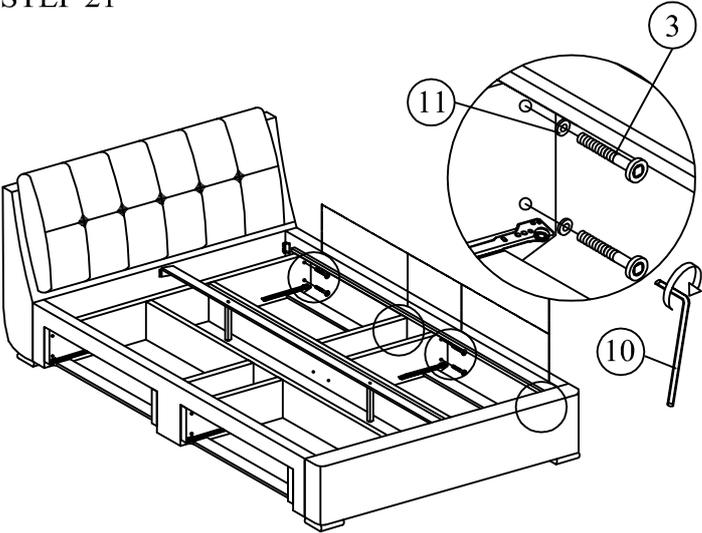

STEP 22

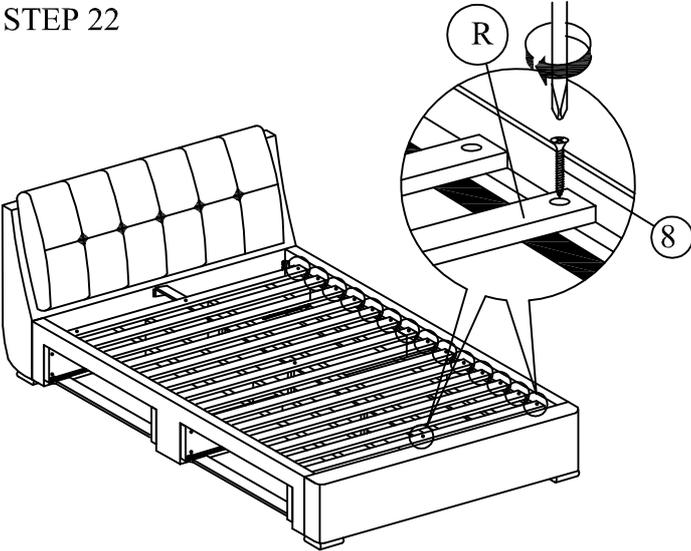

STEP 23

Fully tighten the bolt from STEP 18 with Allen wrench .

