


Instruction Book

For specification: 100cm(L)x40cm(W)x140cm(H)

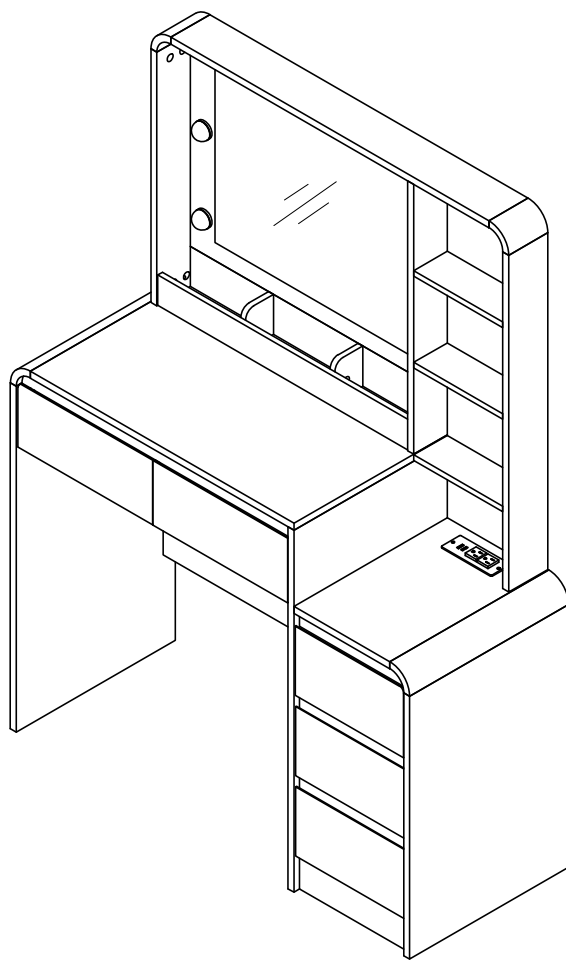

Thank you for choosing our product ! We hope
good shopping experience ! We aim to provide
satisfaction product and customer service. If

product has missing parts or components,
arrived damaged, dissatisfaction with the order,
or has questions
about the assemble, please do not hesitate

Our customer service will reply within 12 hours.

Specifications:

Product name: Multi-Functional Compuret Desk.


Package Dimension: 35.04x22.64 x8.07in /
89x57.5x20.5cm

Product Size: 39.37 x15.74x 55.11in /
100 x 40 x 140 cm






Weight: 78.76lb/35.8kg


Dressing Table

A,B,G,H. installation guide

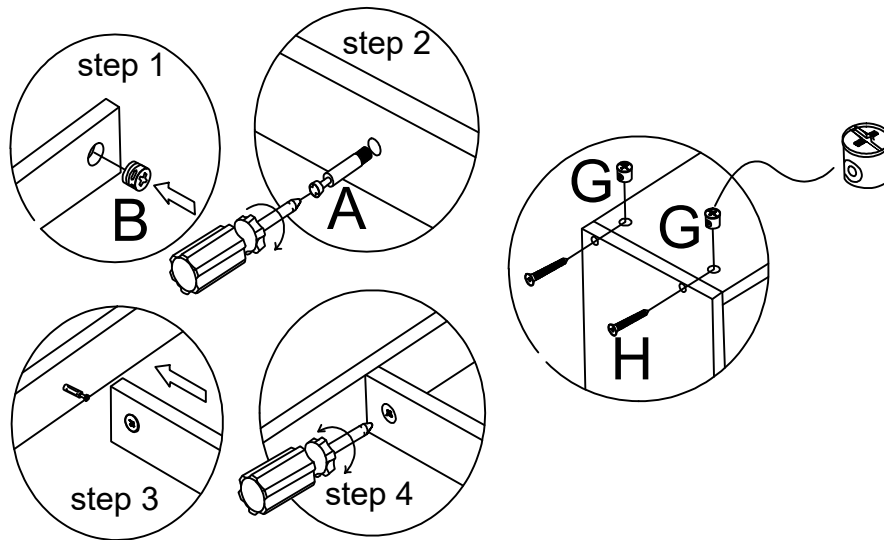



Accessories

 Three-in-one pole A*91	 Solid wheel B*113	 Three-in-one pole A2*22	 3.5*12 Small Screw D*50	 Plastic Hammer G*2	 5*40 Chamfer self tapping H*2
 Iron sheet I*2	 hole patch adhesive K*14	 L*1set	 Stool foot nail M*8	 3.5*30 Chamfer self tapping X*28	 usb power Y*1
 Support Rail CR*5	 Support Rail CL*5	 Support Rail DR*5	 Support Rail DL*5	 screwdriver Z*1	


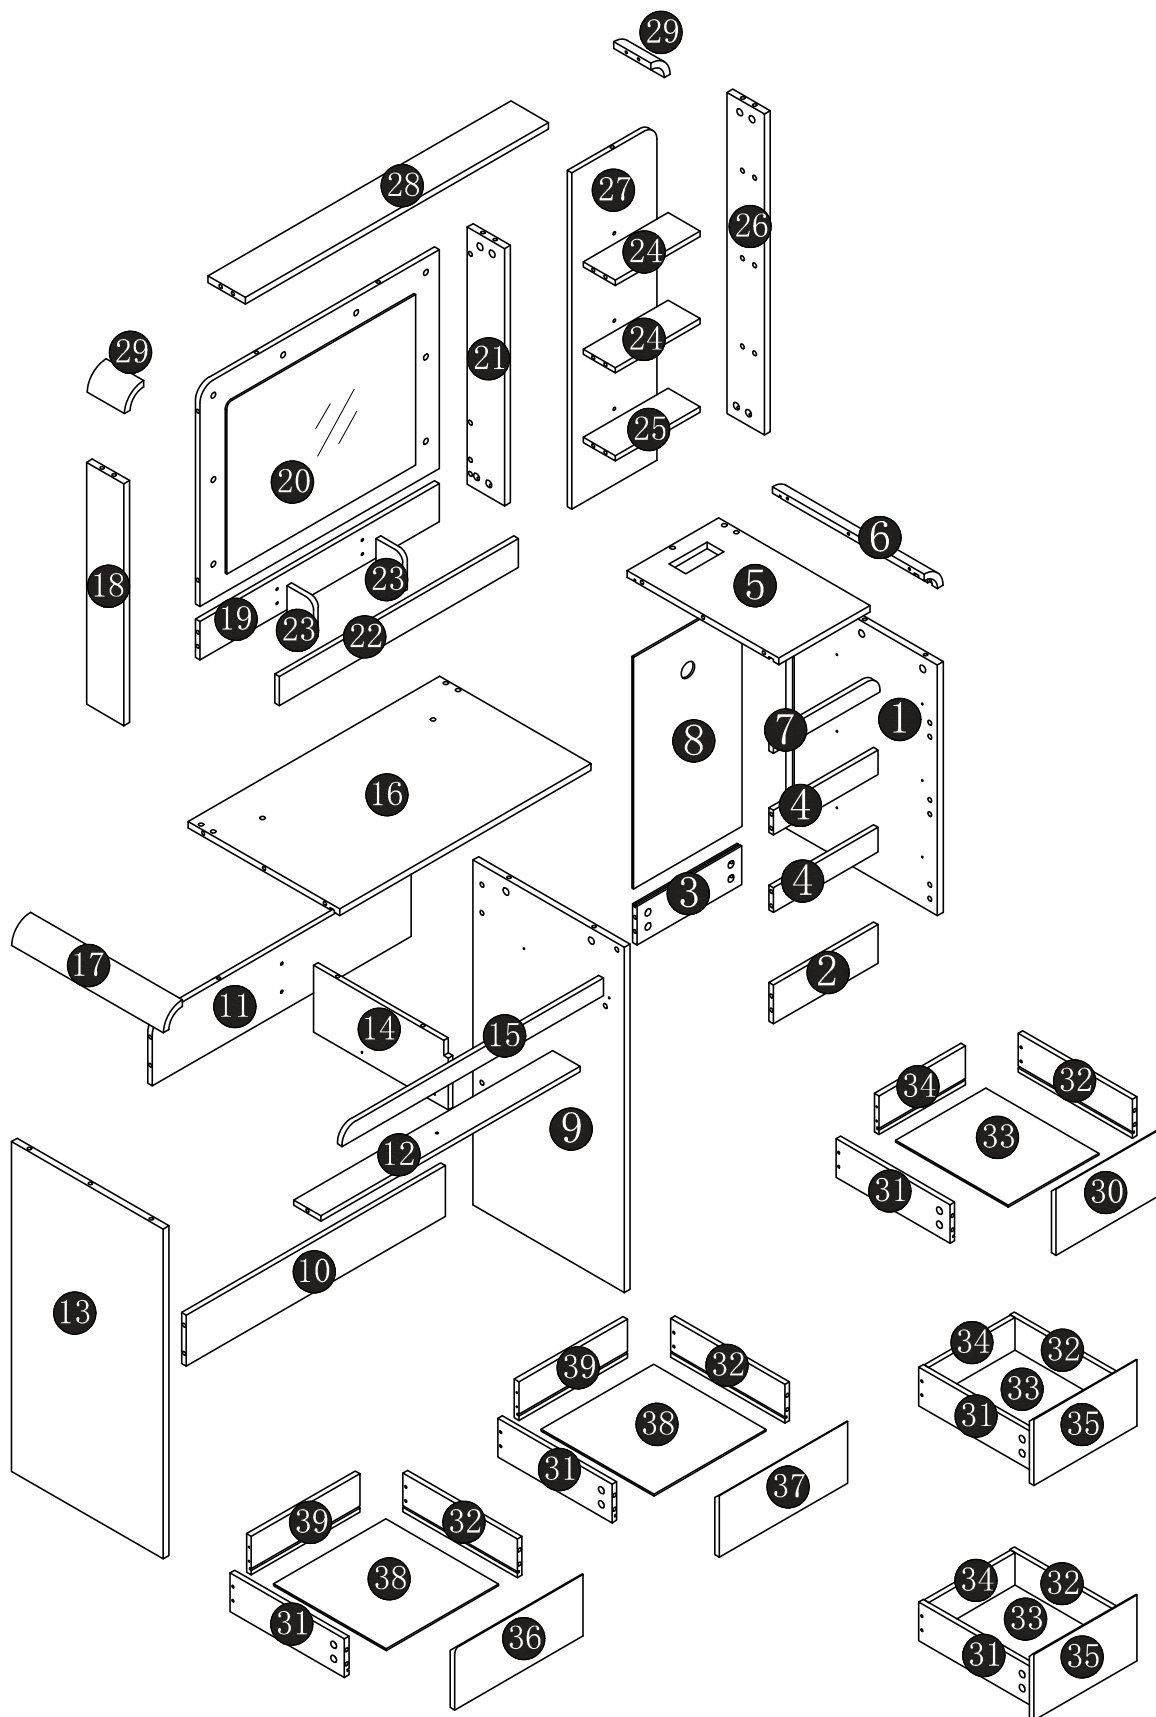


STEP 1


Place all the blue rubber sleeves into the reserved holes to ensure they are flush with the board surface, and then tighten the screws.

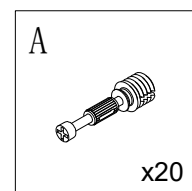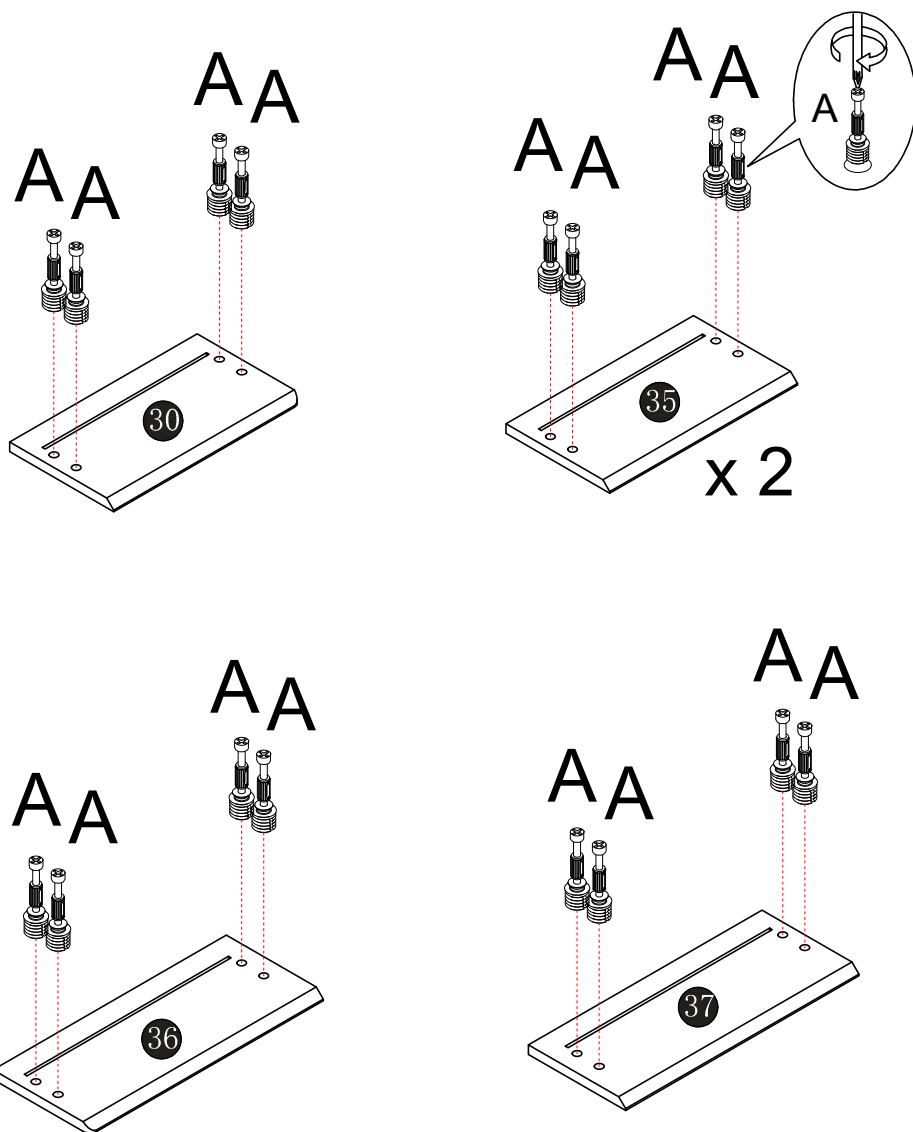

STEP 2

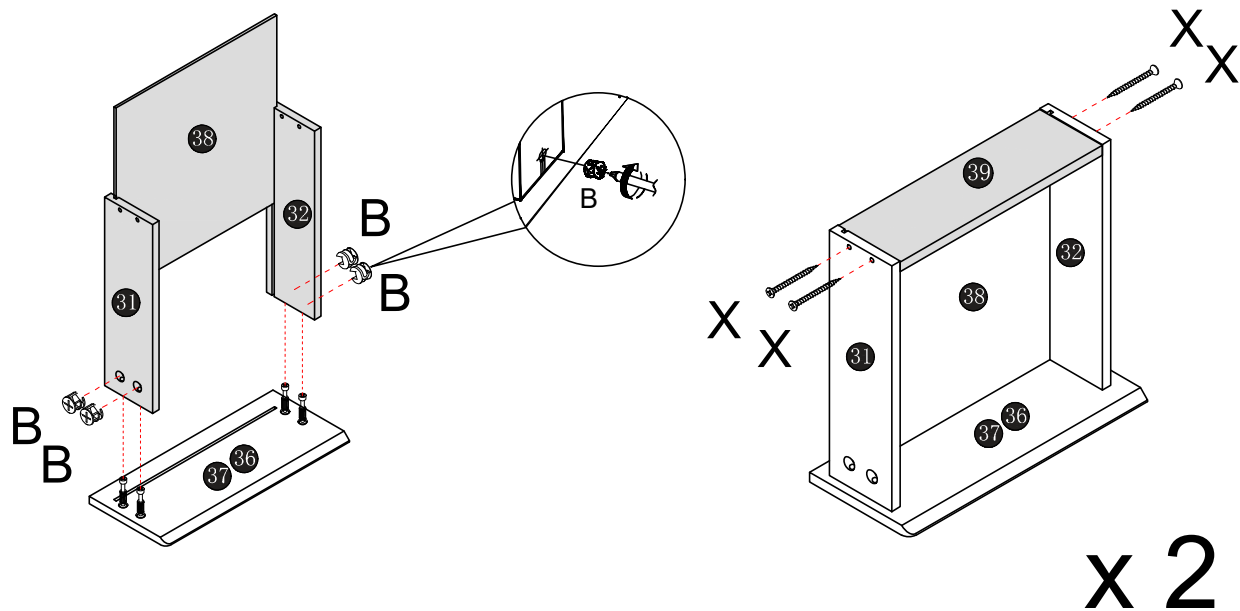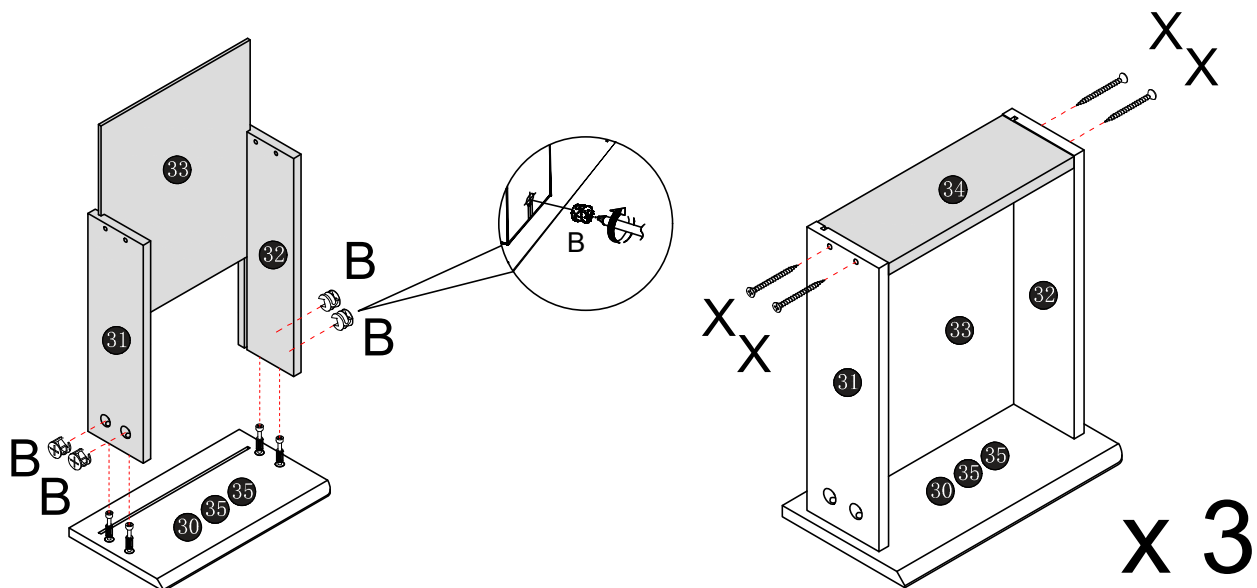


Drawer bottom plate No. 38
has left and right directions!
Please pay attention to the
installation!

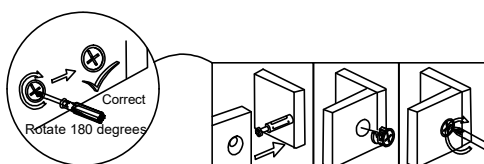


B	X
	
x20	x20



STEP 3

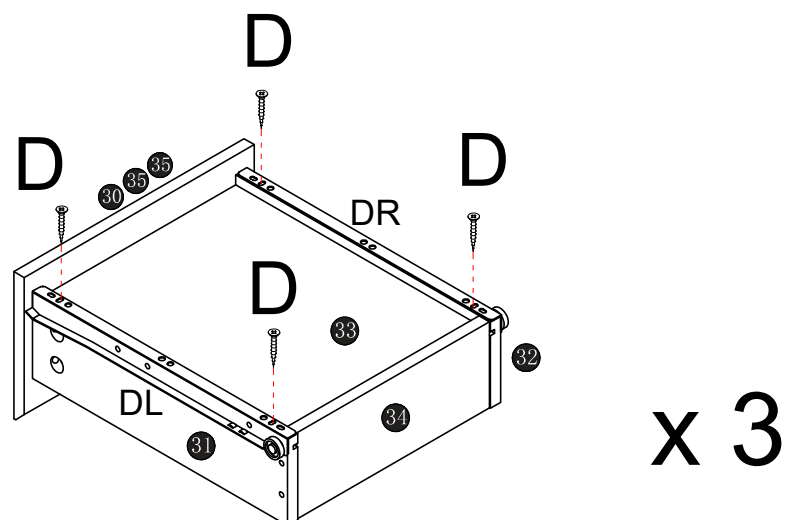


Note: All part DR and part DL should be installed at the BOTTOM of the drawers (As shown in the pic).

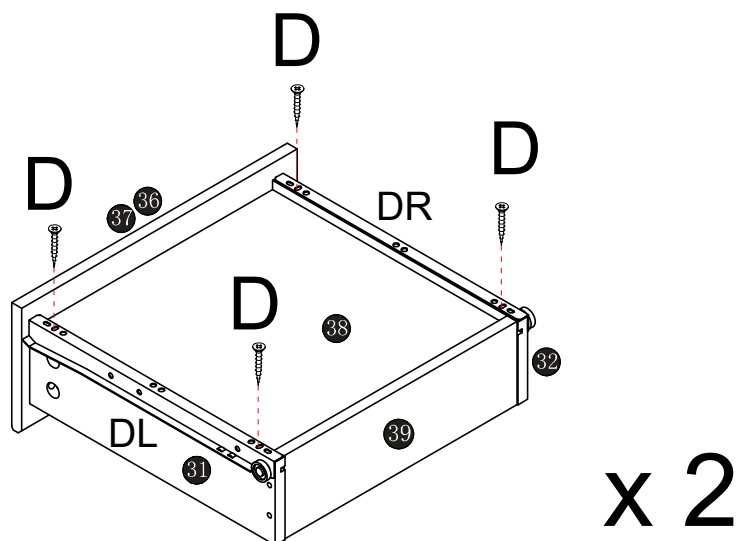






No pre-drilled holes for mounting screws; just install with self-tapping screws D.

D	DR	DL
		
x20	x5	x5

STEP 4



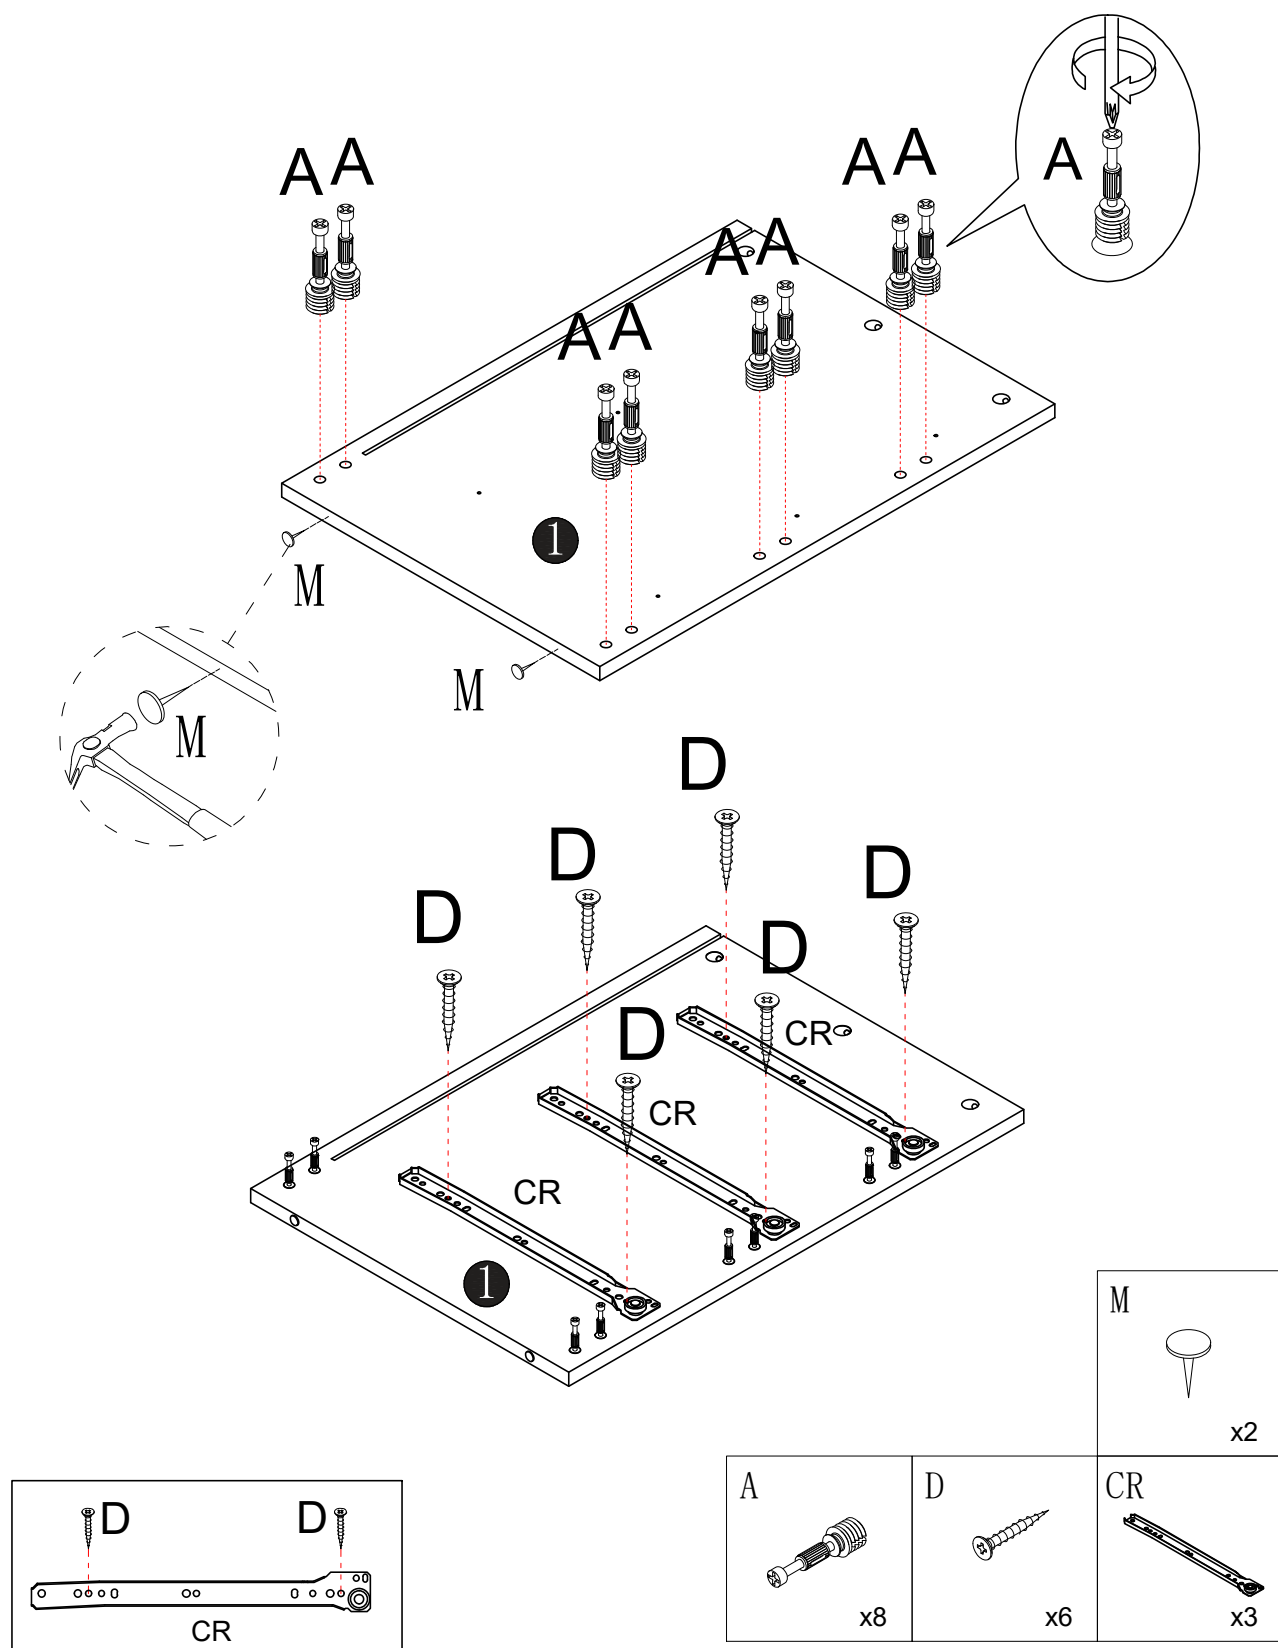


STEP 5

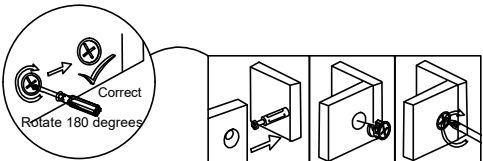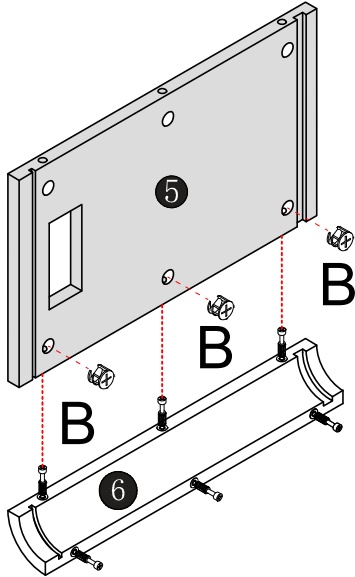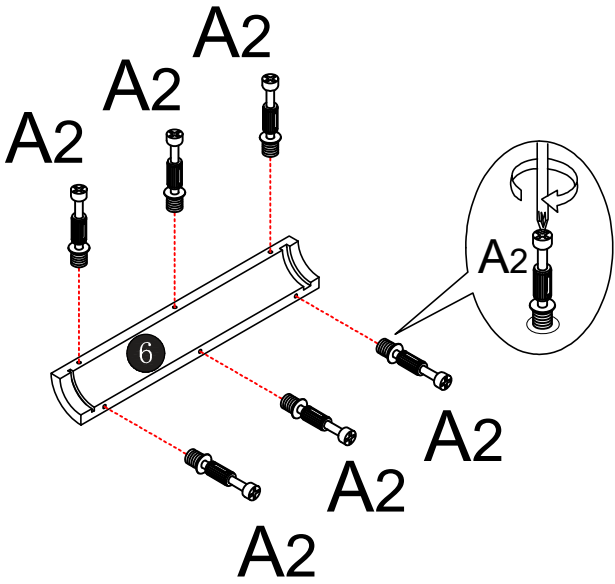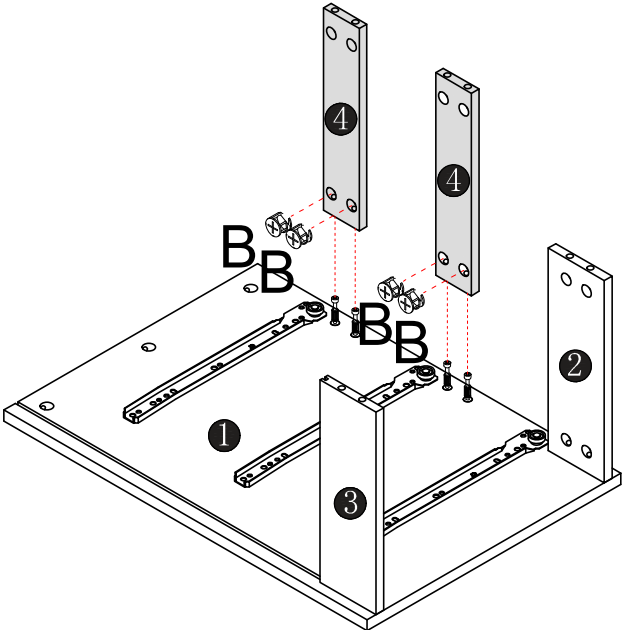
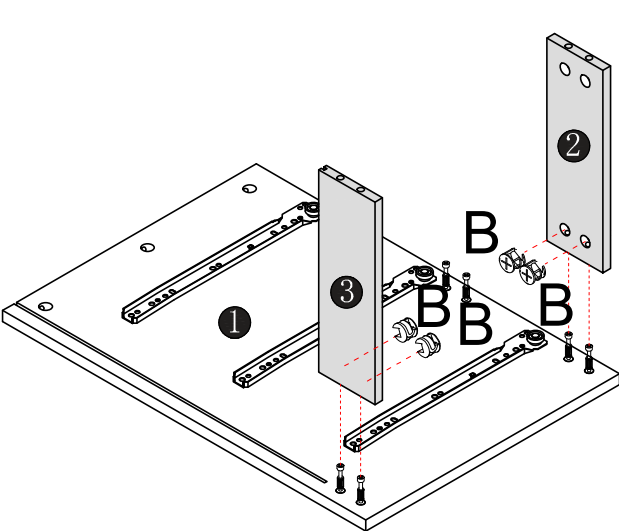


A2	B
	
x6	x11



STEP 6

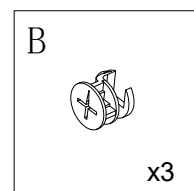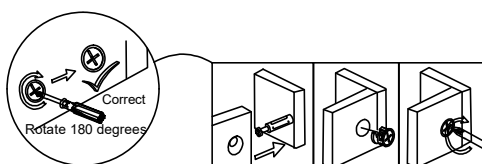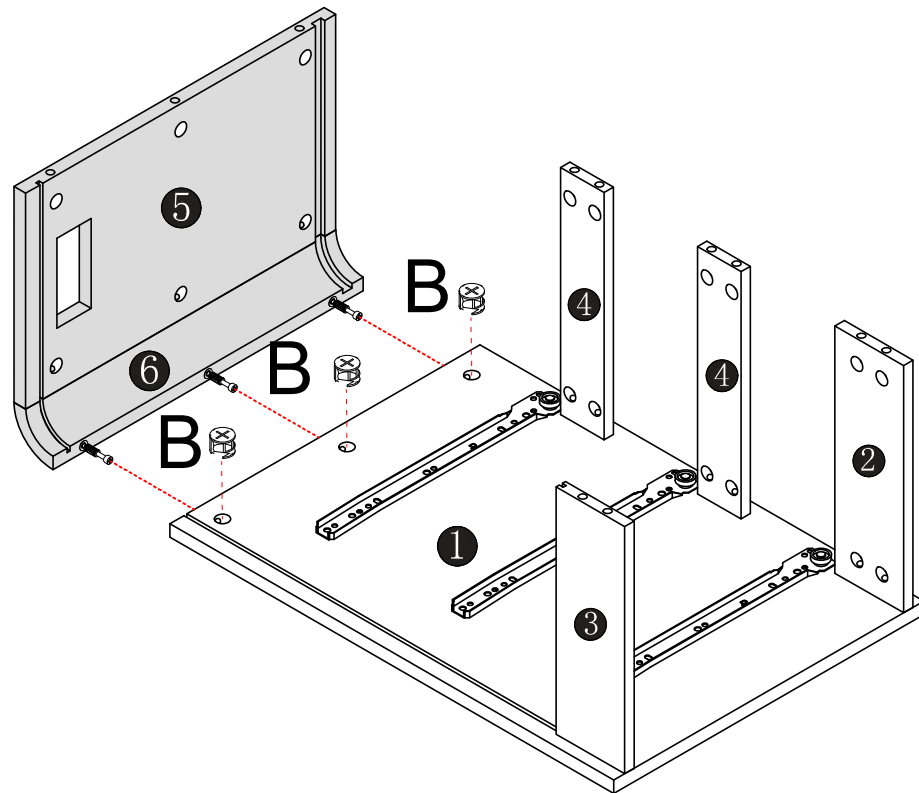




STEP 7

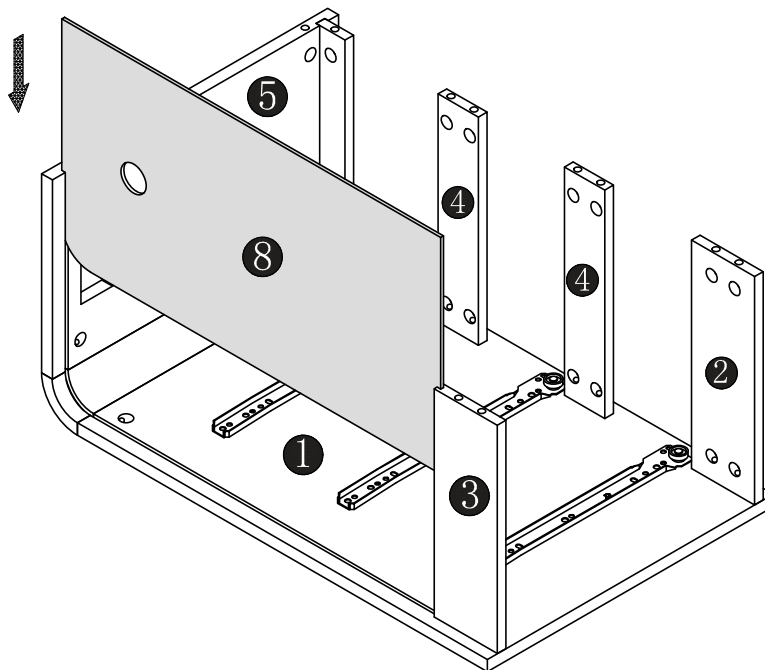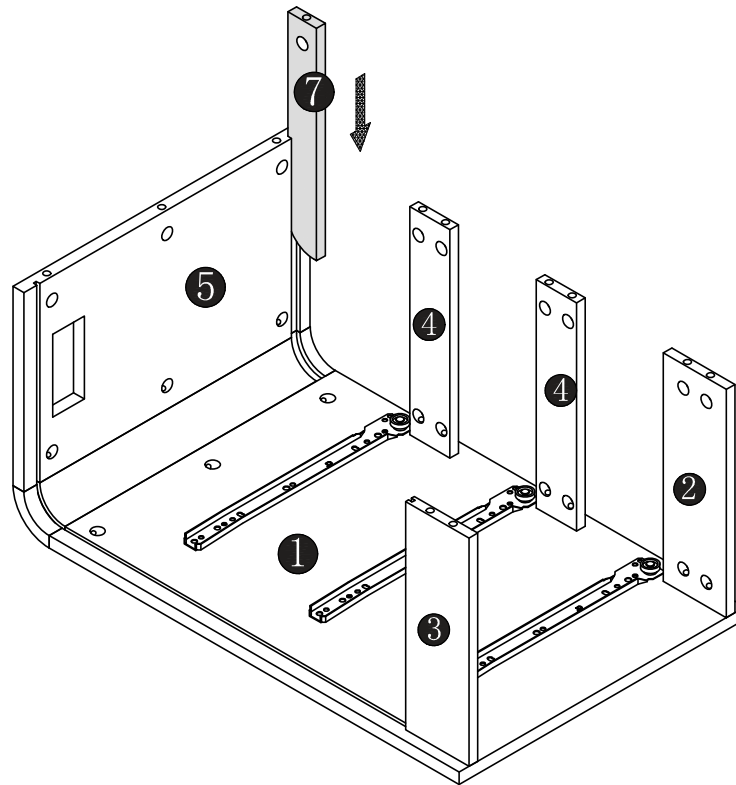




STEP 8

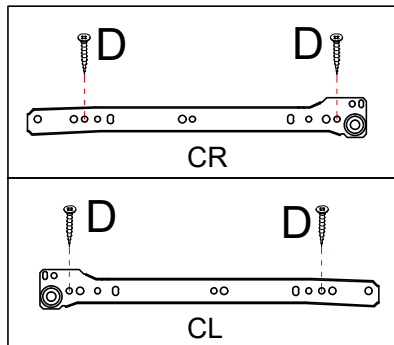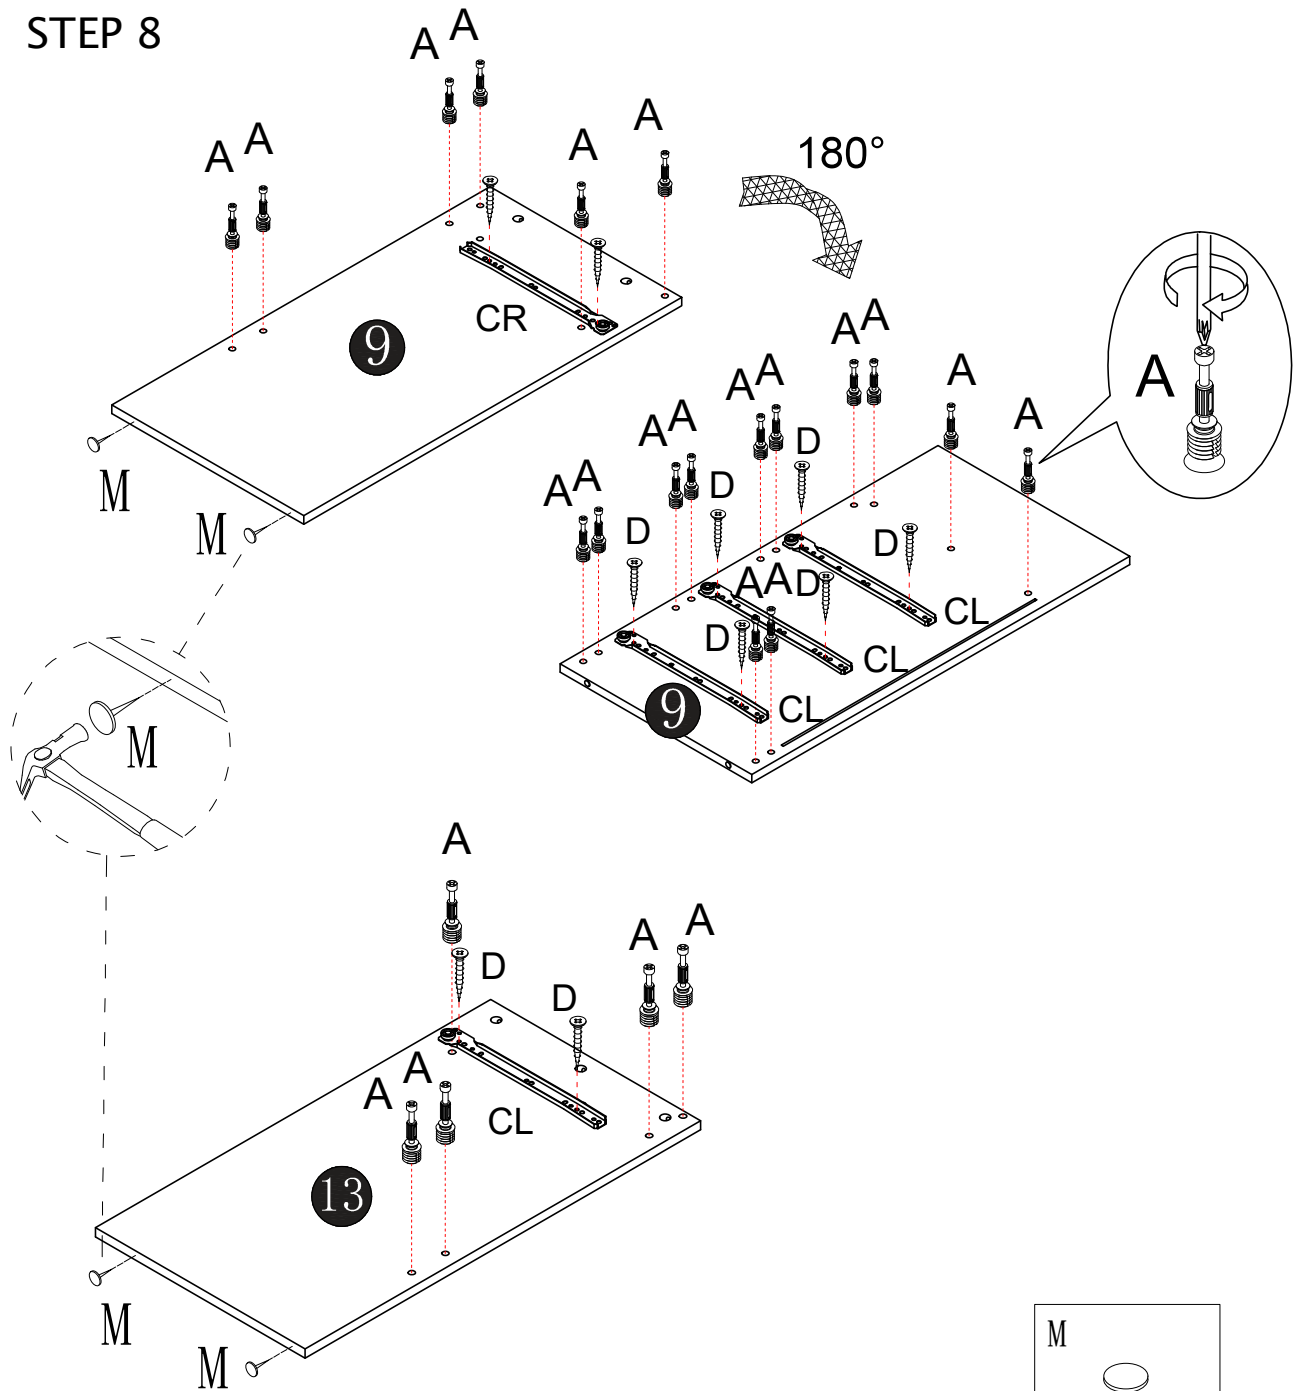


11

A  x23	D  x10
CR  x1	CL  x4
M  x4	




STEP 9

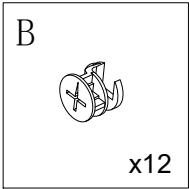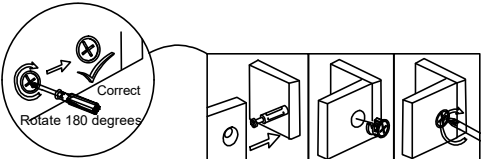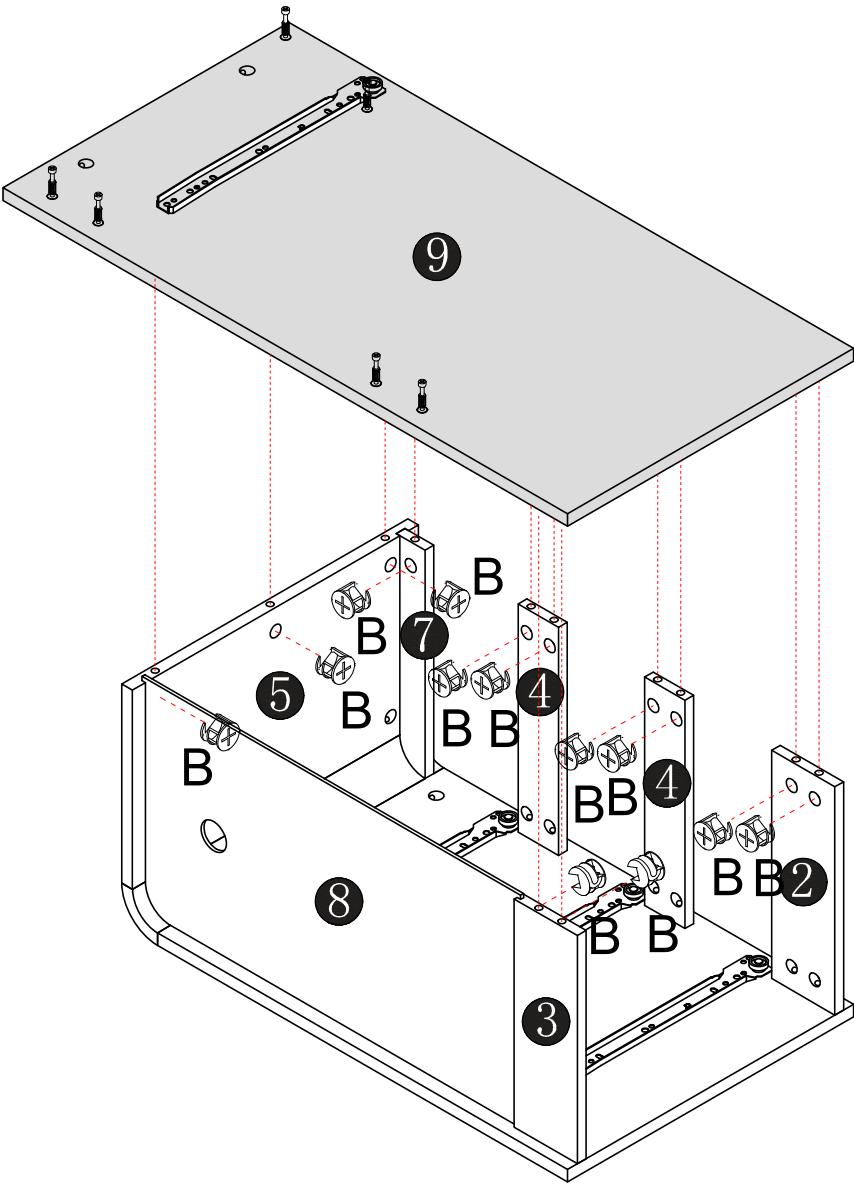



STEP 10

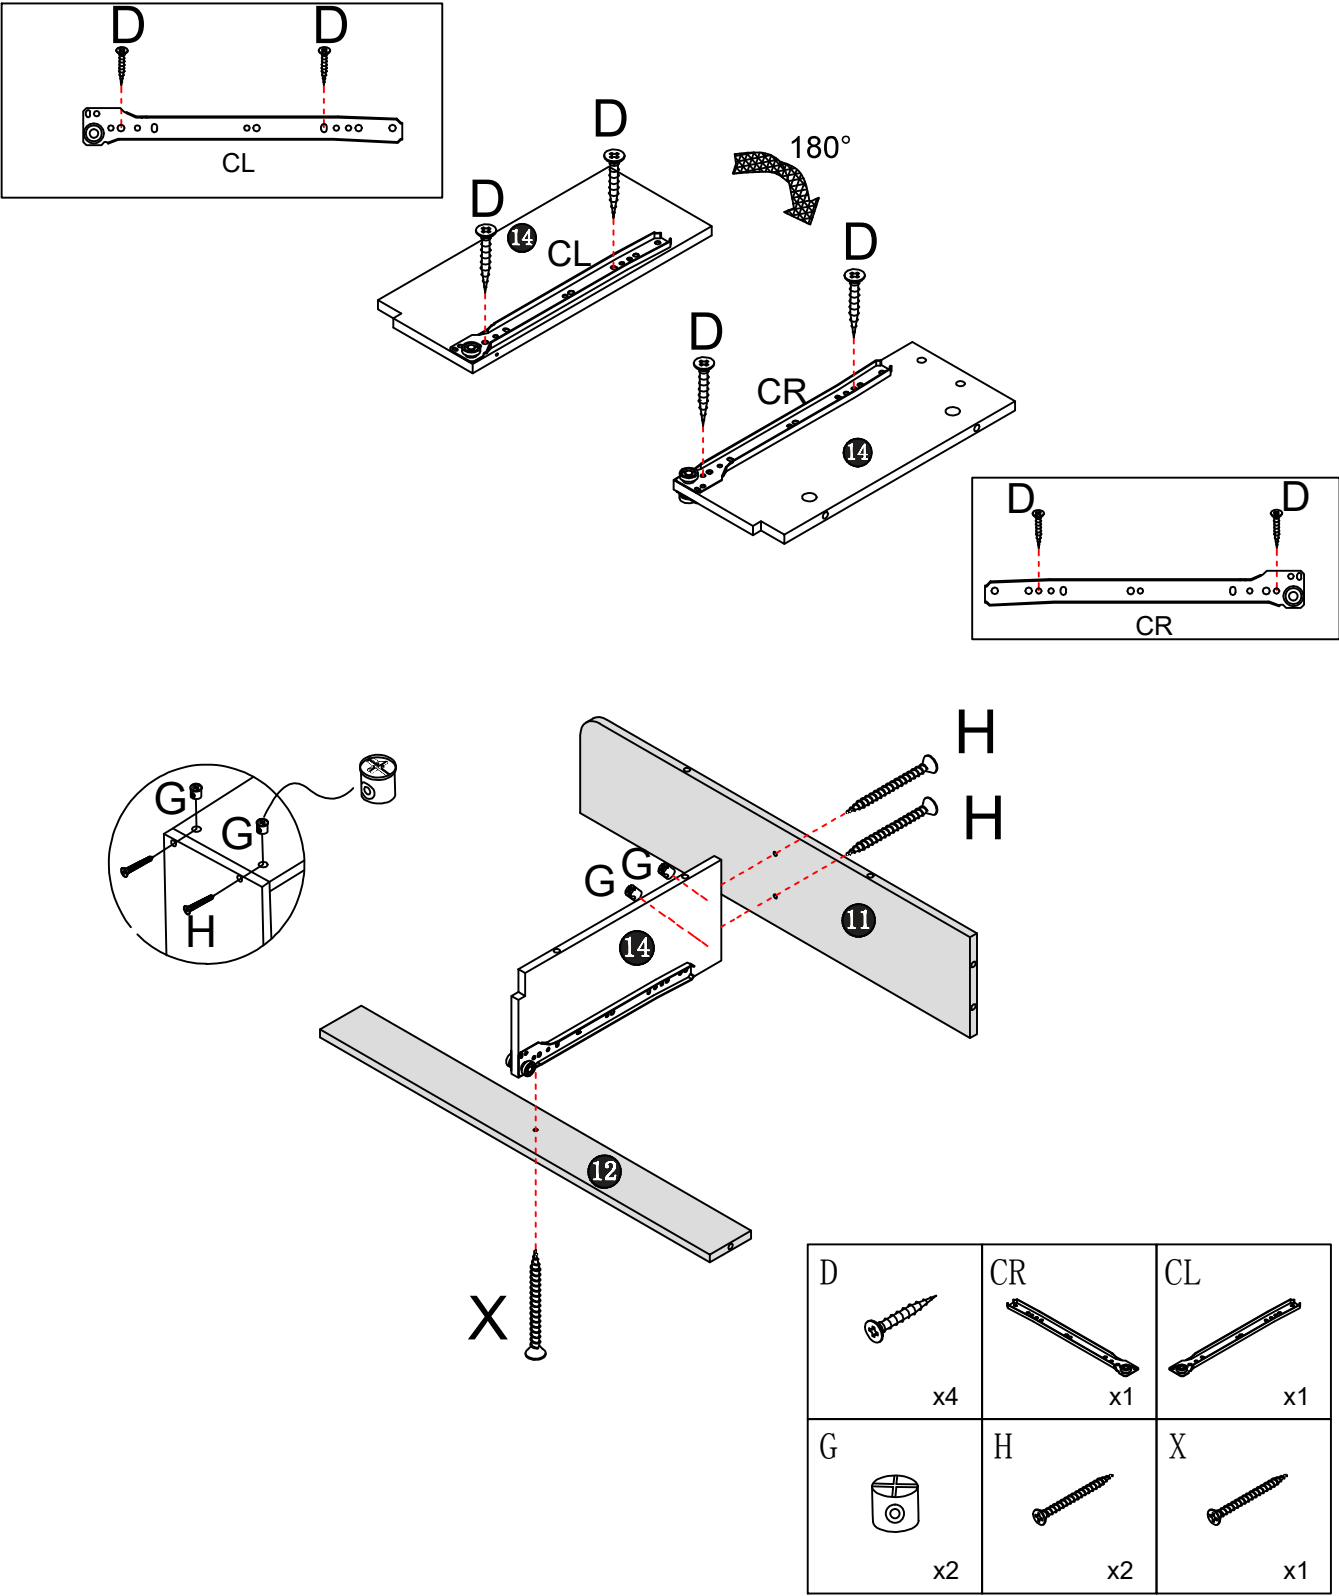

STEP 11

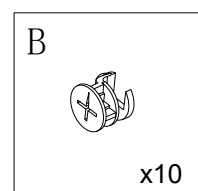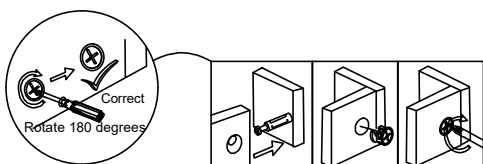
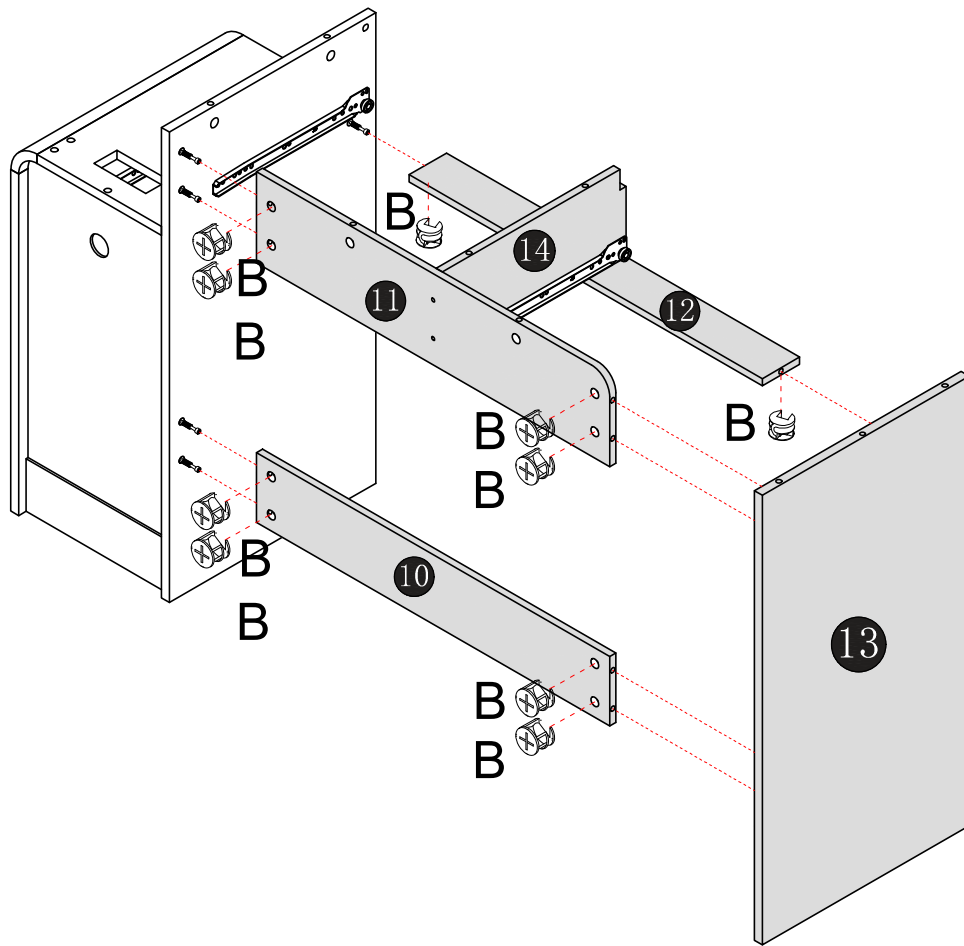



STEP 12

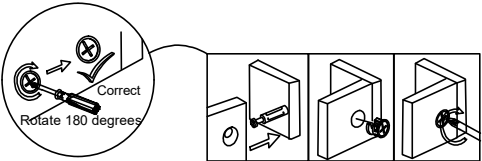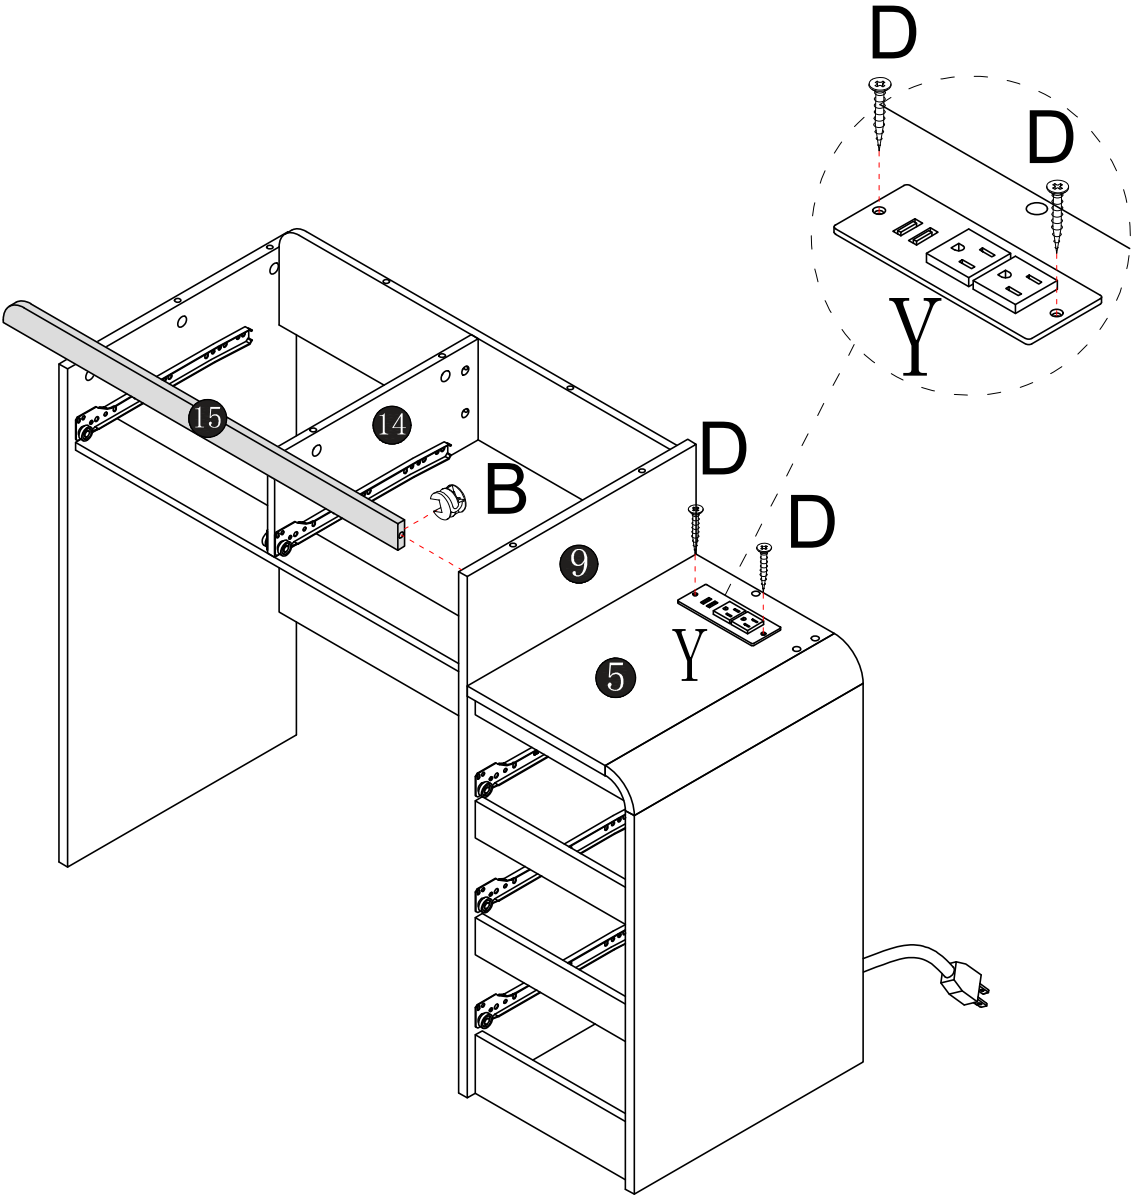




B	D	Y
		
x1	x2	x1

STEP 13

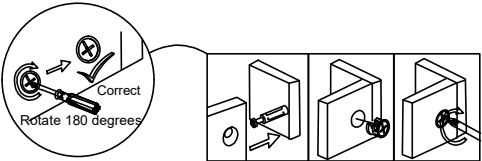
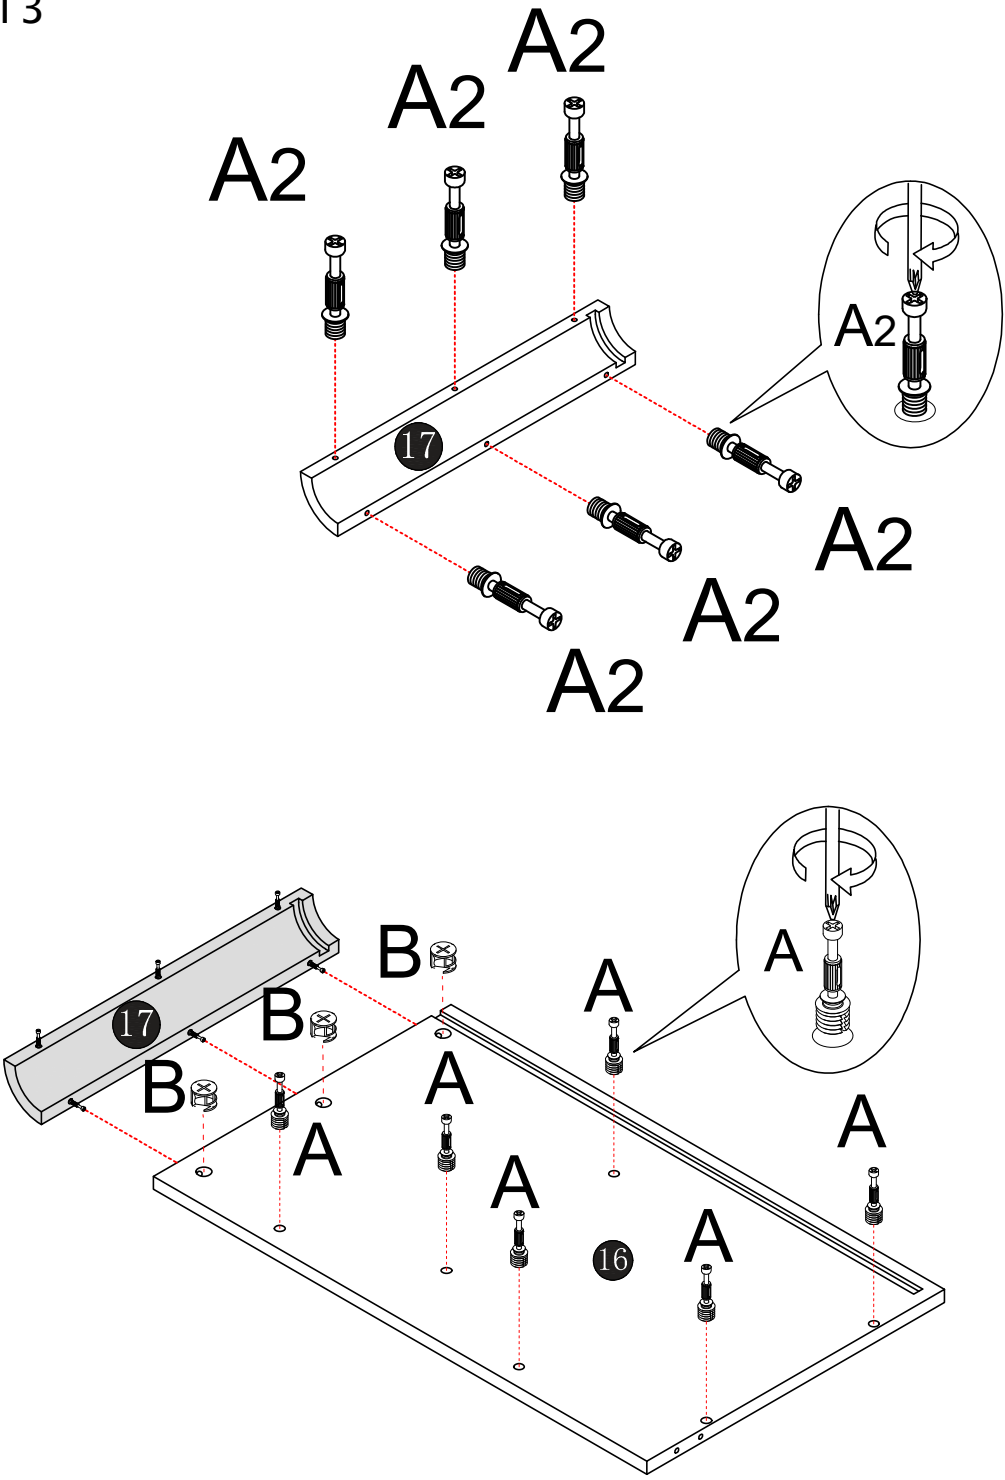


A	A2	B
		
x6	x6	x3





STEP 14

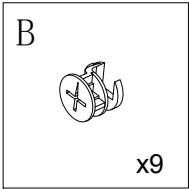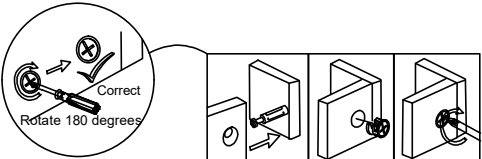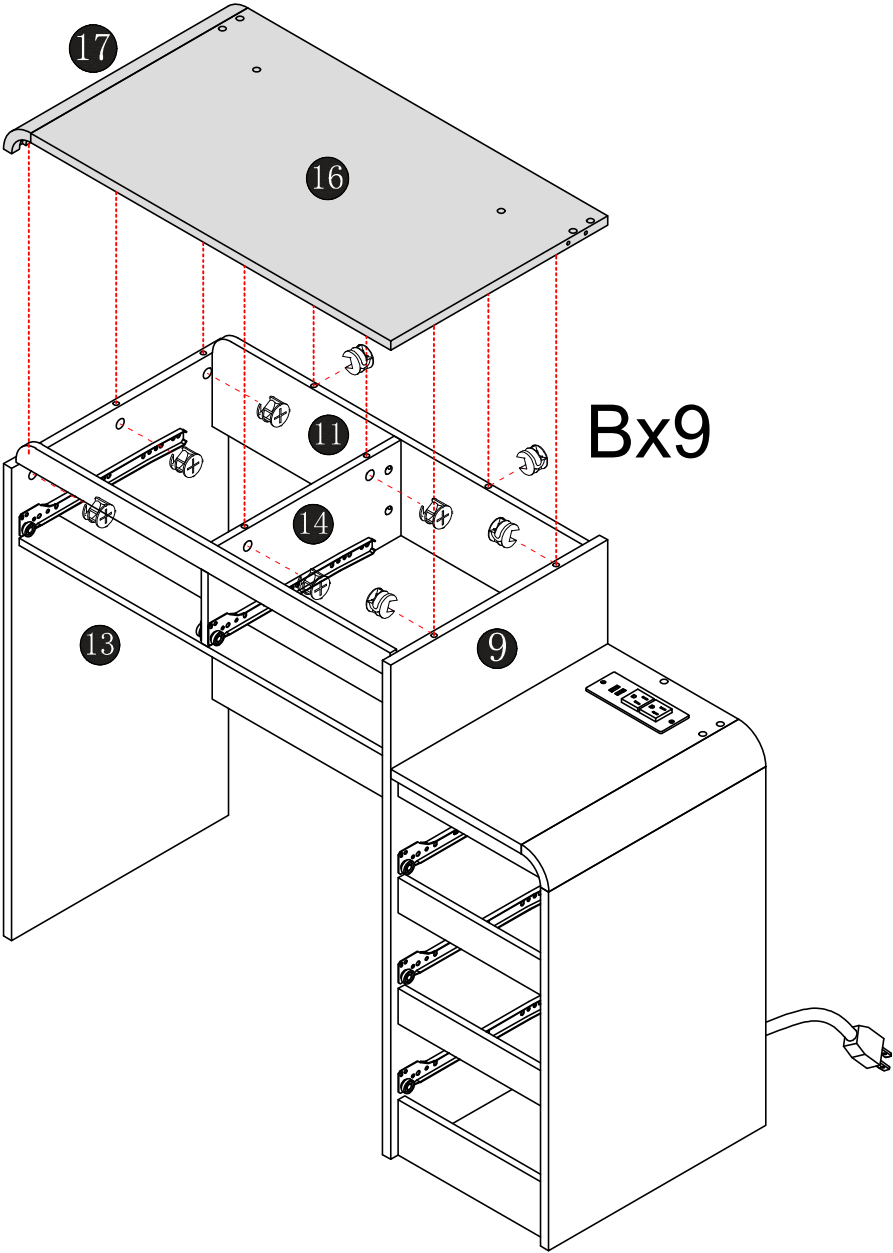




STEP 15

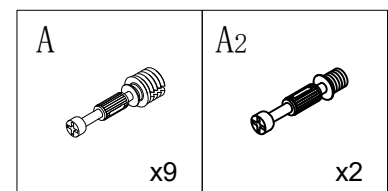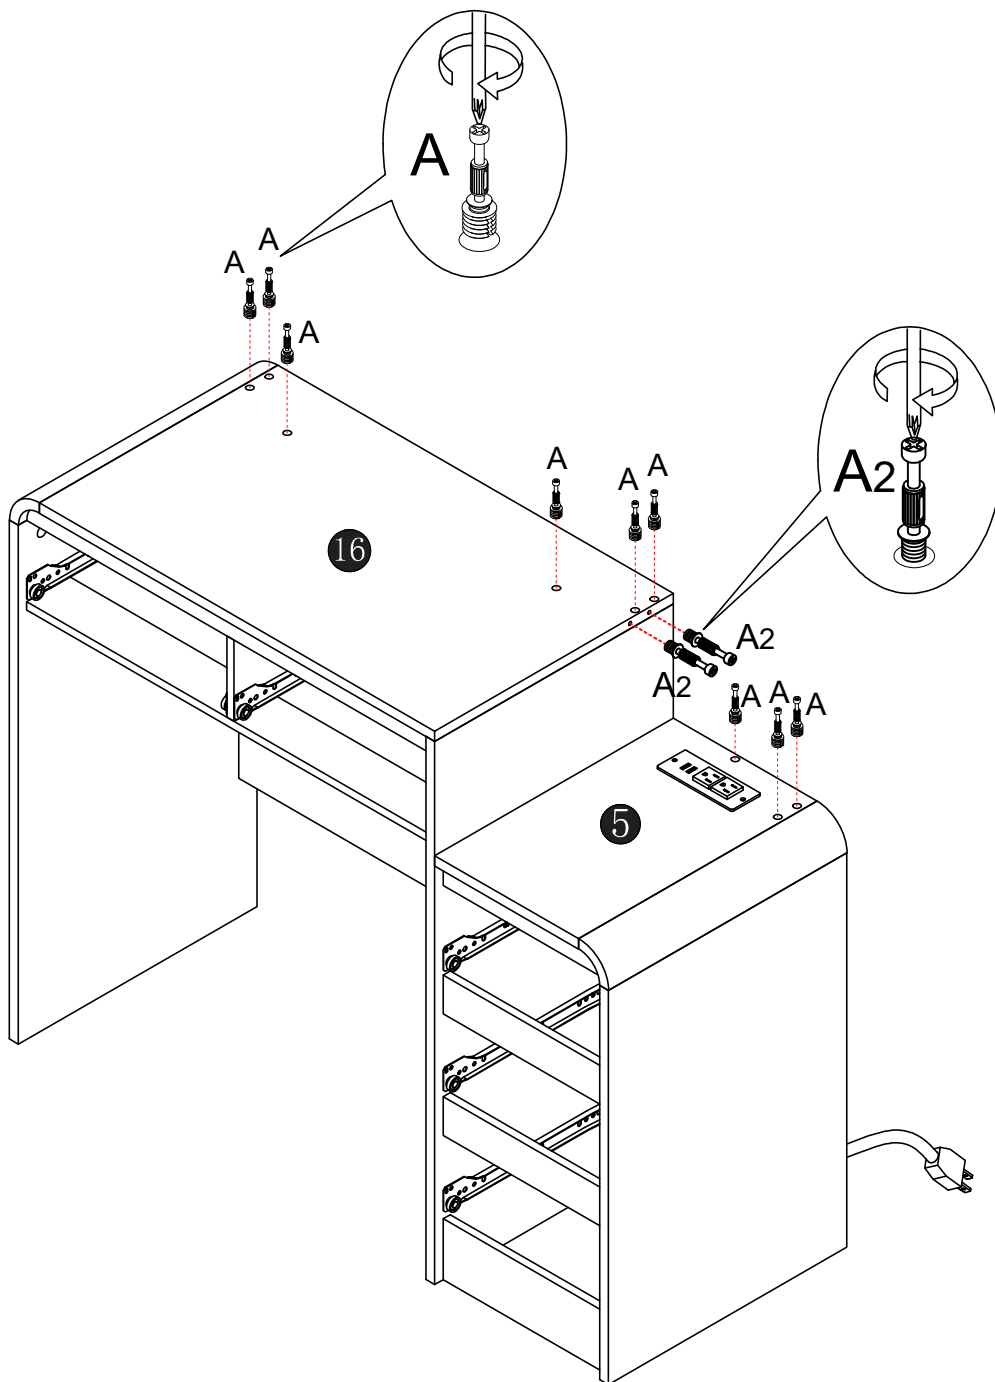





STEP 16

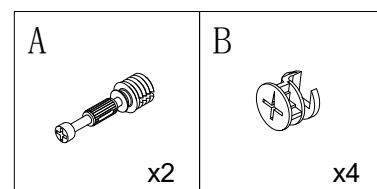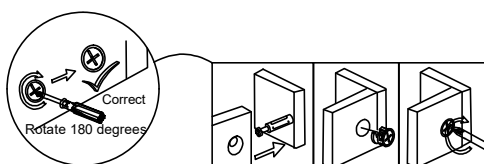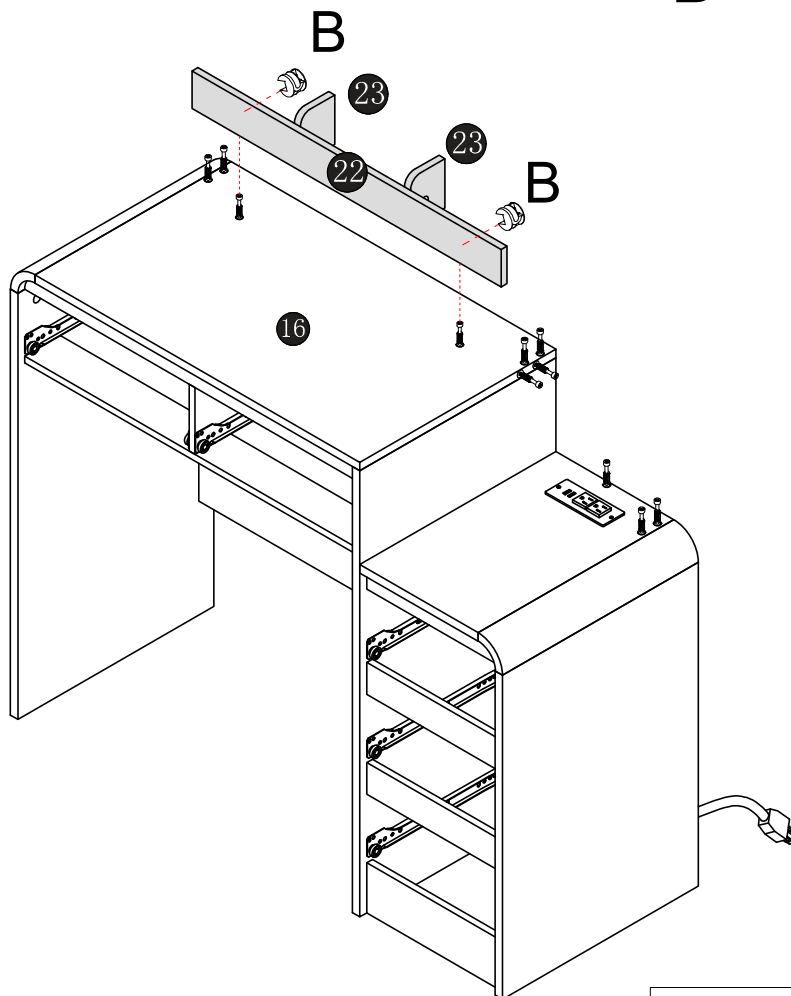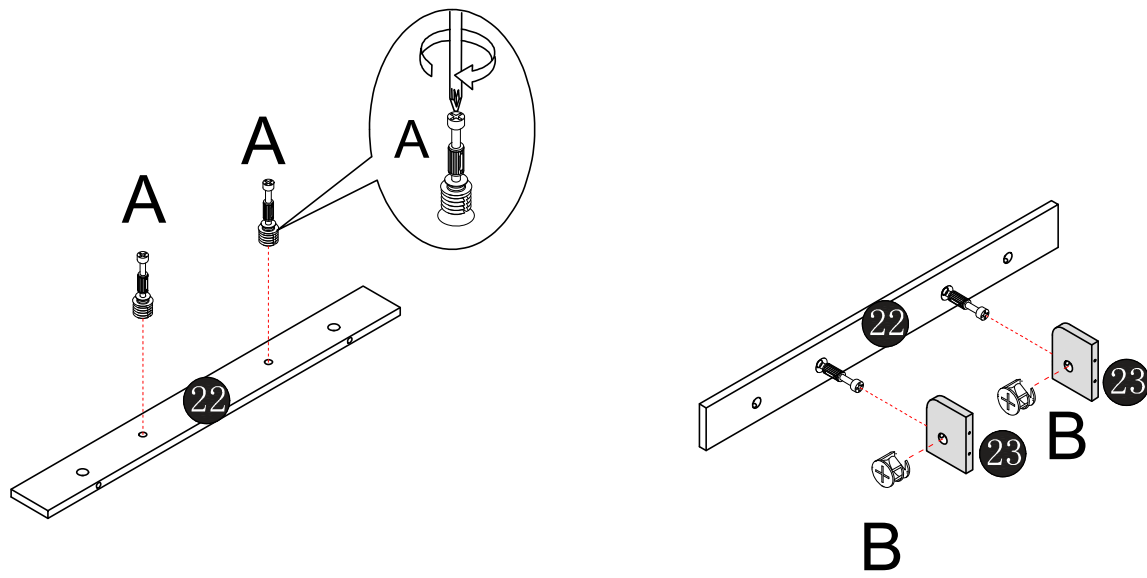


STEP 17

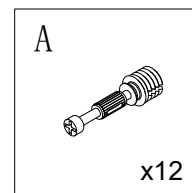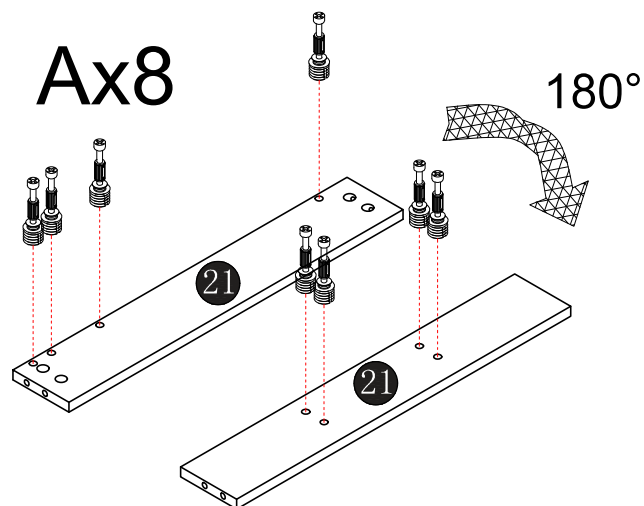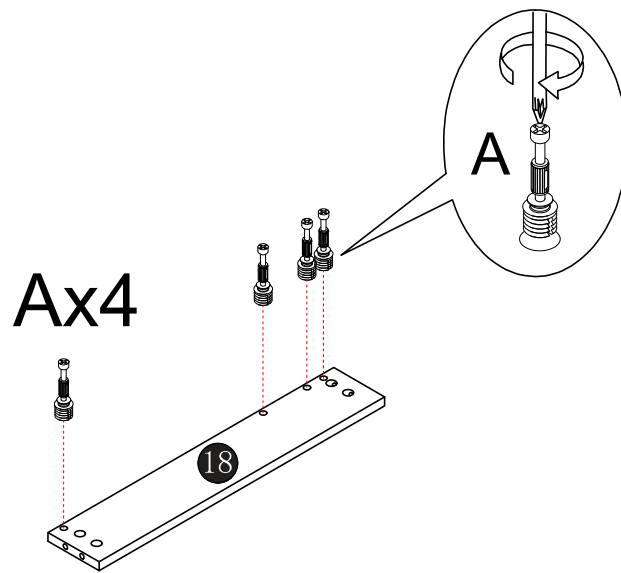






STEP 18

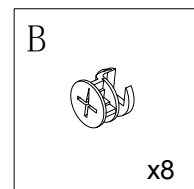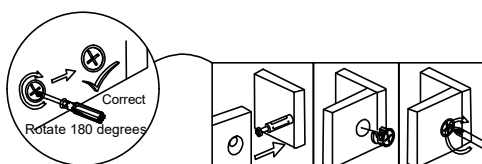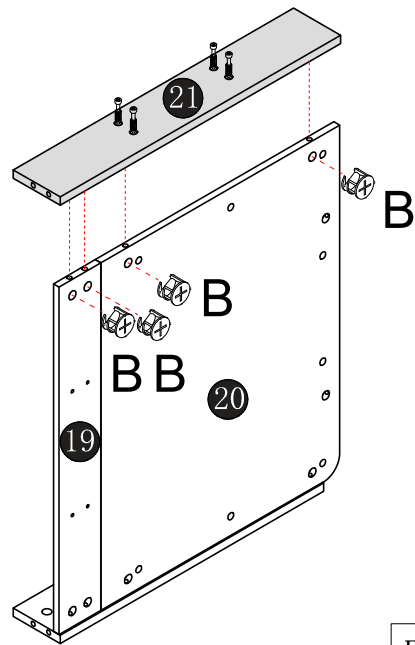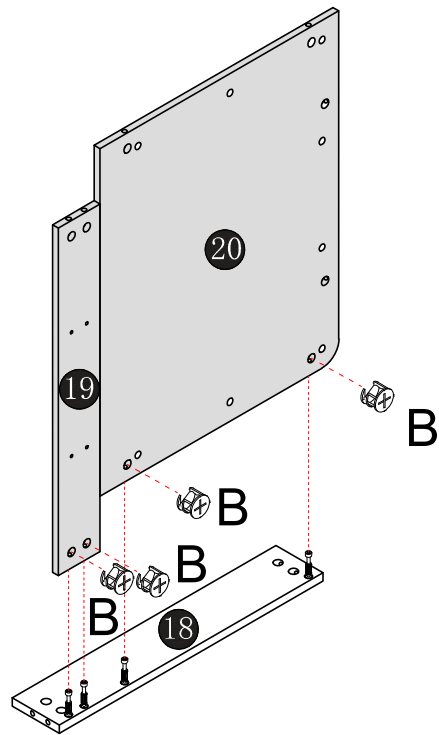

STEP 19

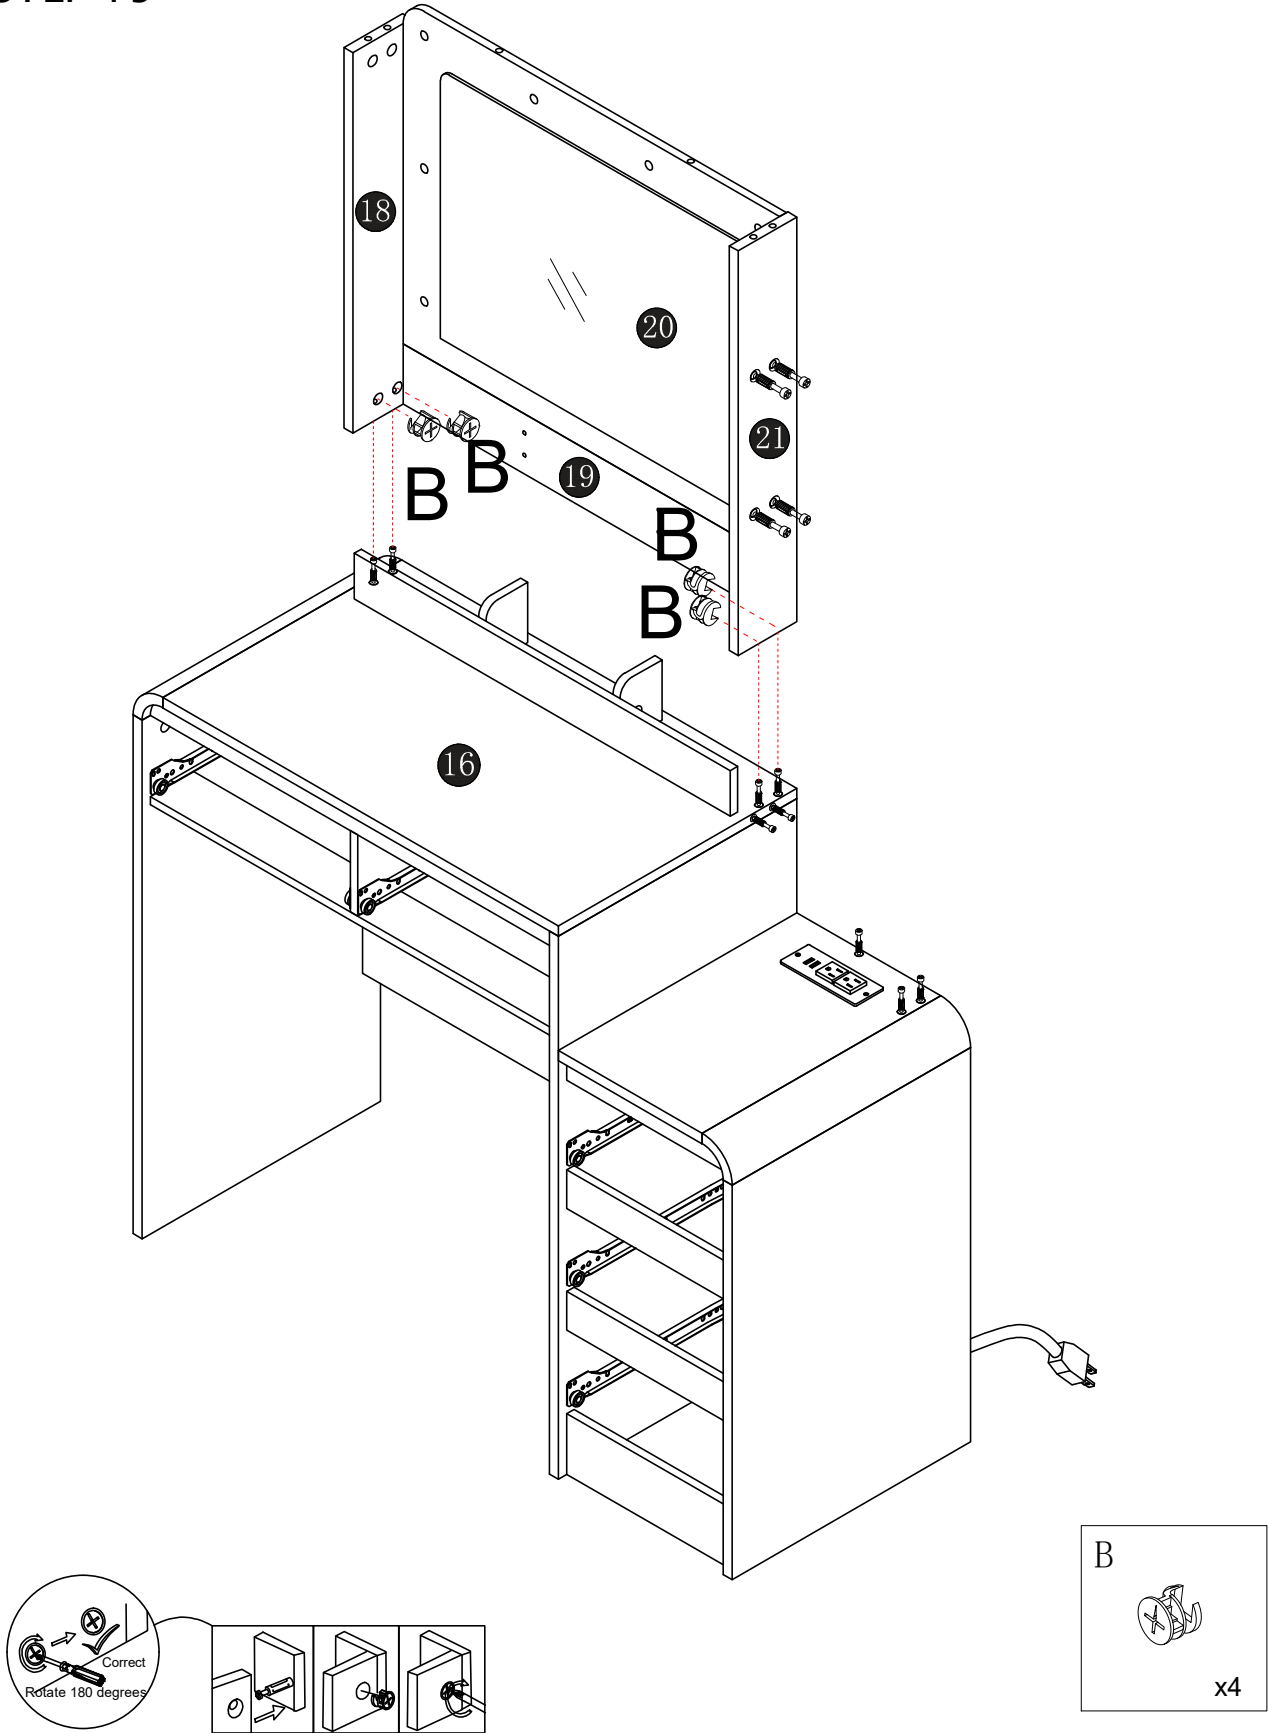


STEP 20

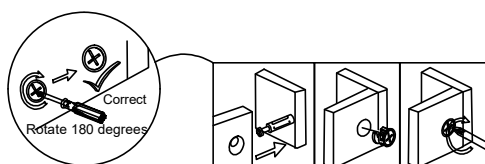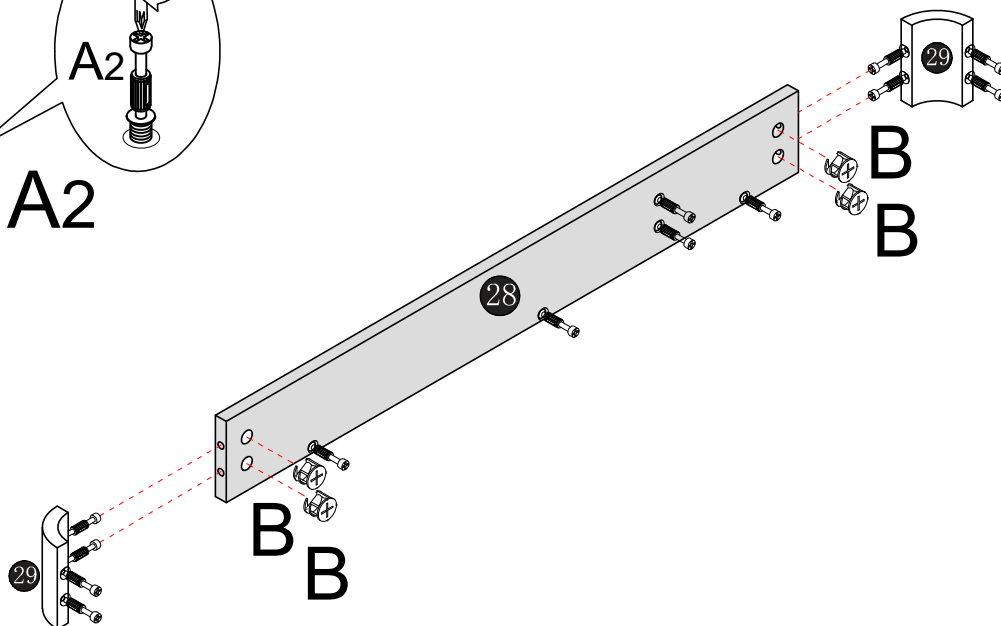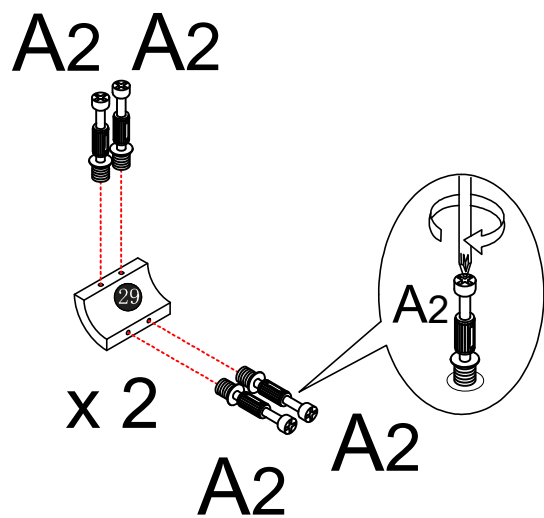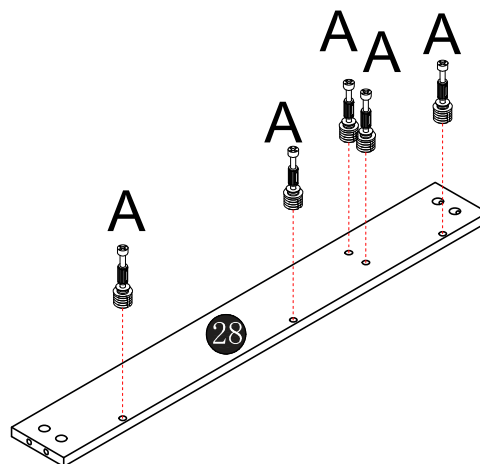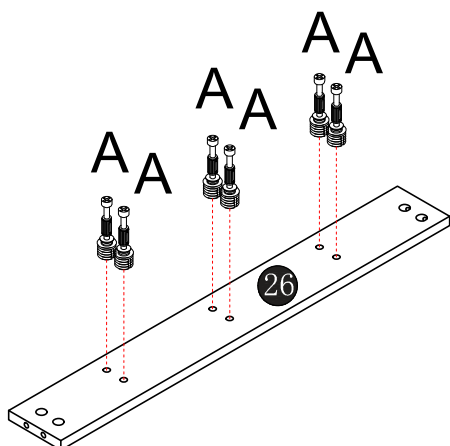


A	A2	B
		
x11	x8	x4

STEP 21

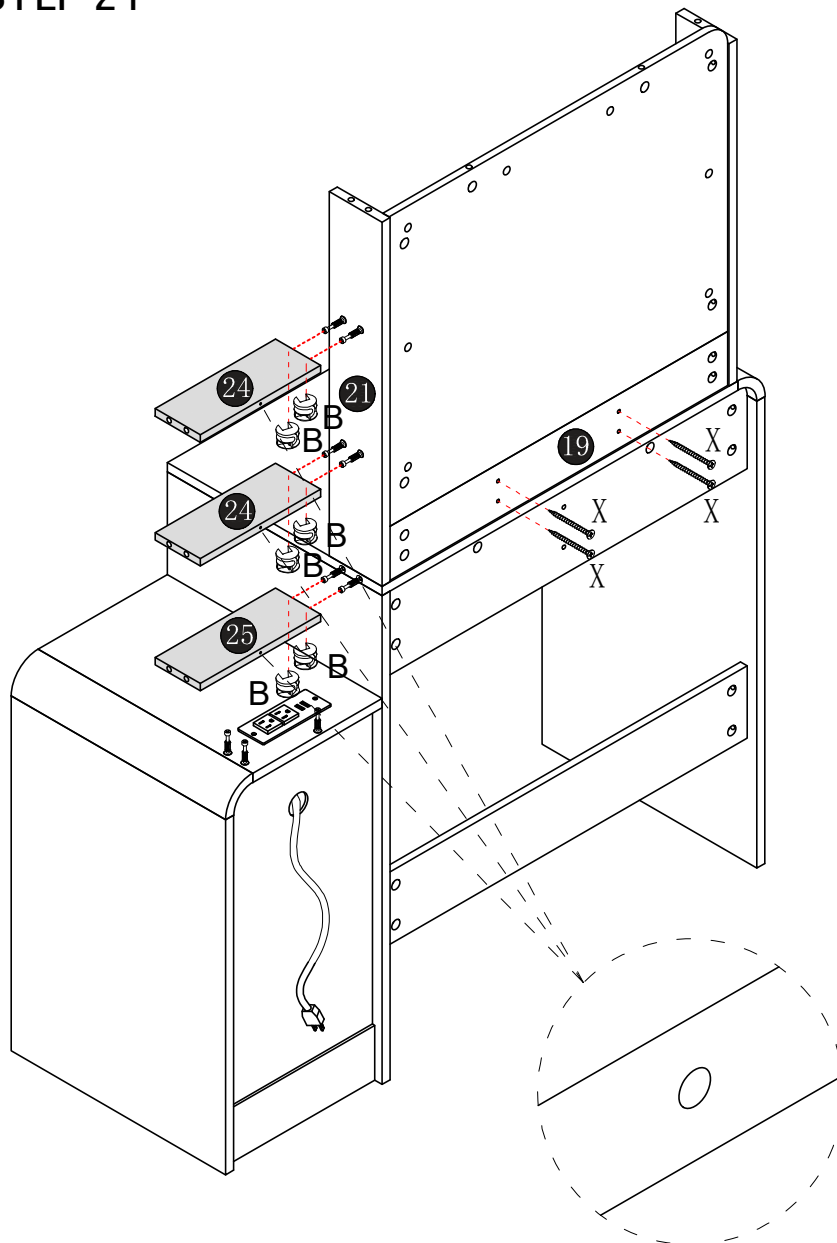


Install with the pre-drilled hole position facing backward.



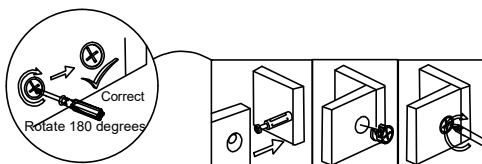


B	X
	
x6	x4

STEP 22

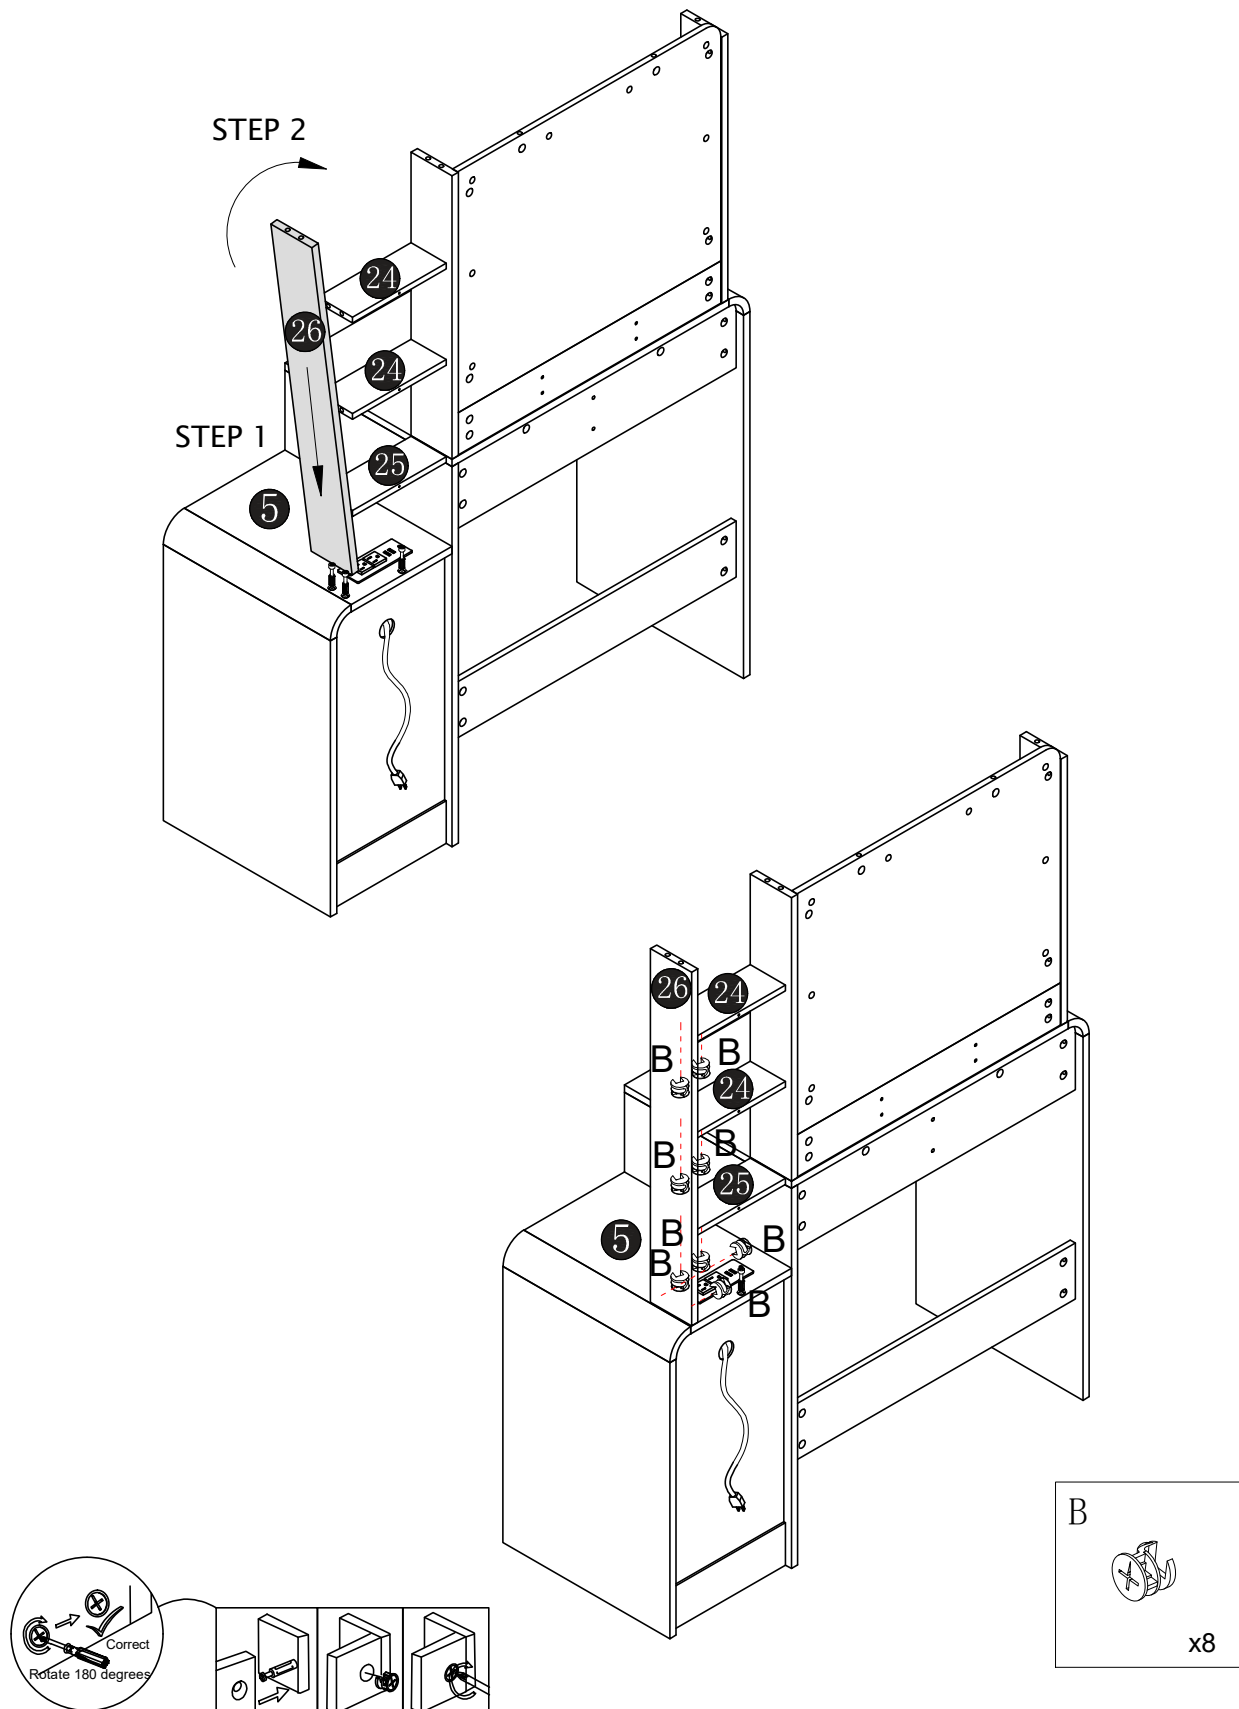




STEP 23

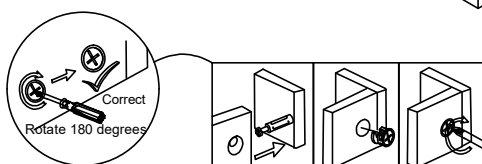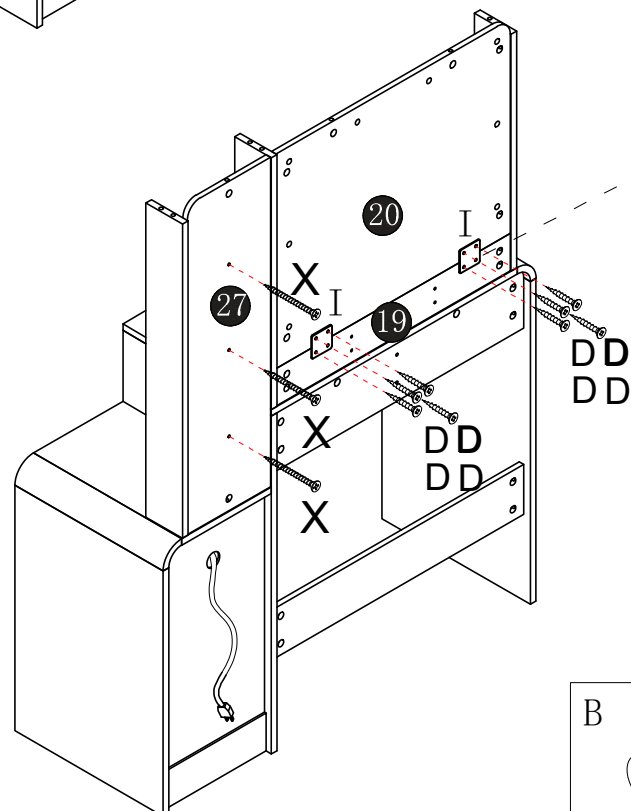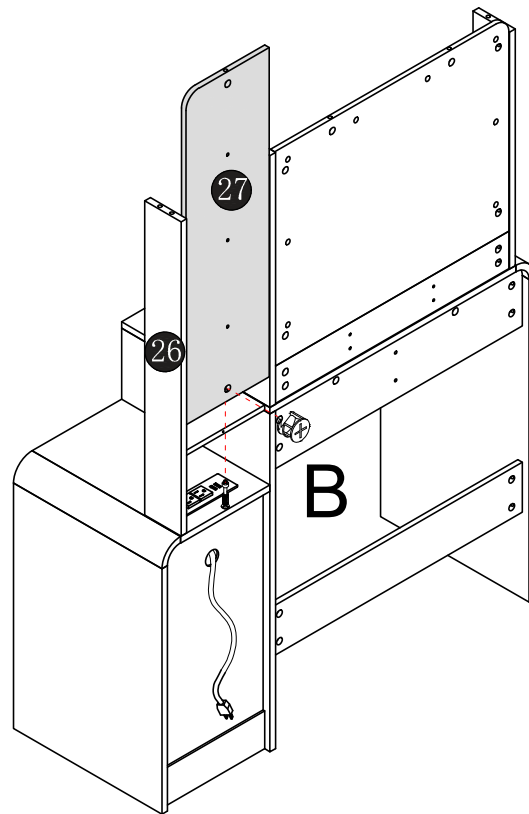



B  x1	D  x8
I  x2	X  x3

26


STEP 24

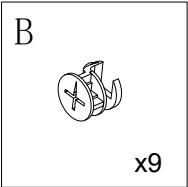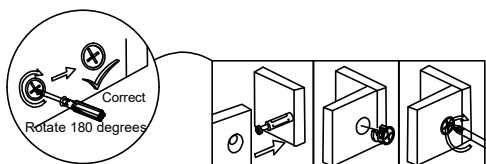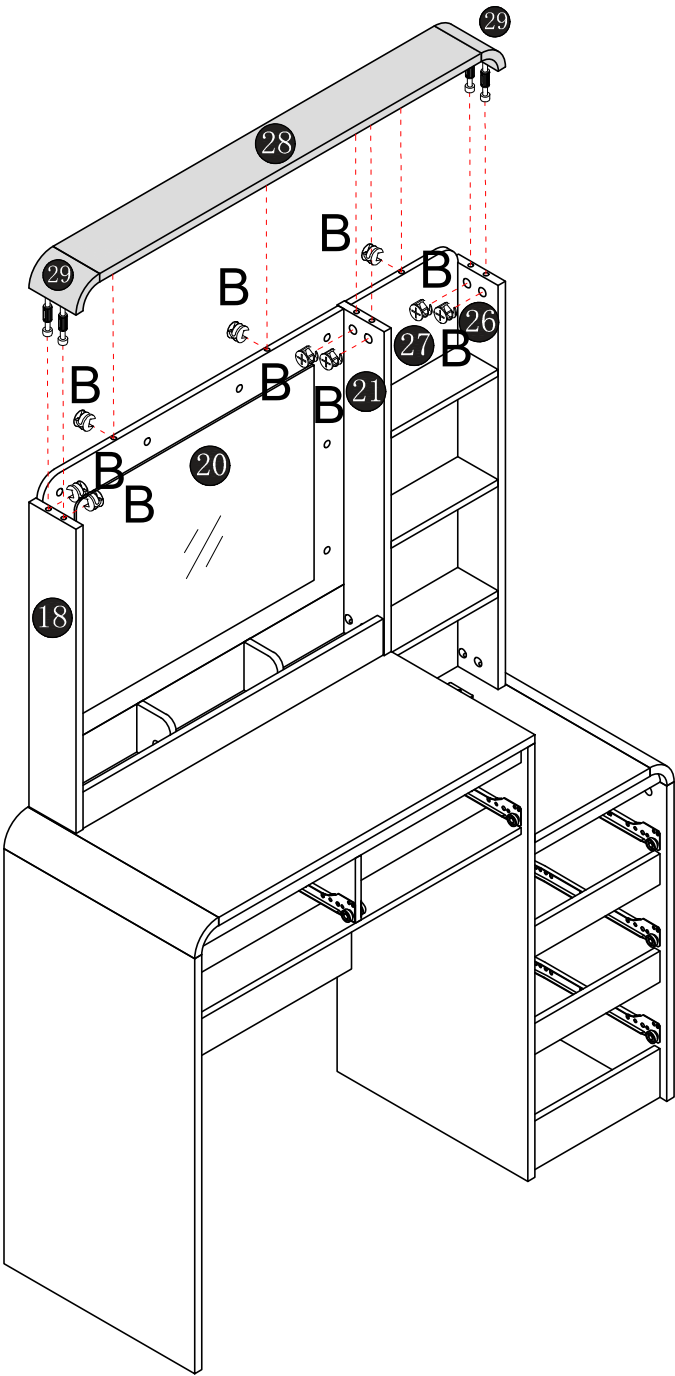


STEP 25

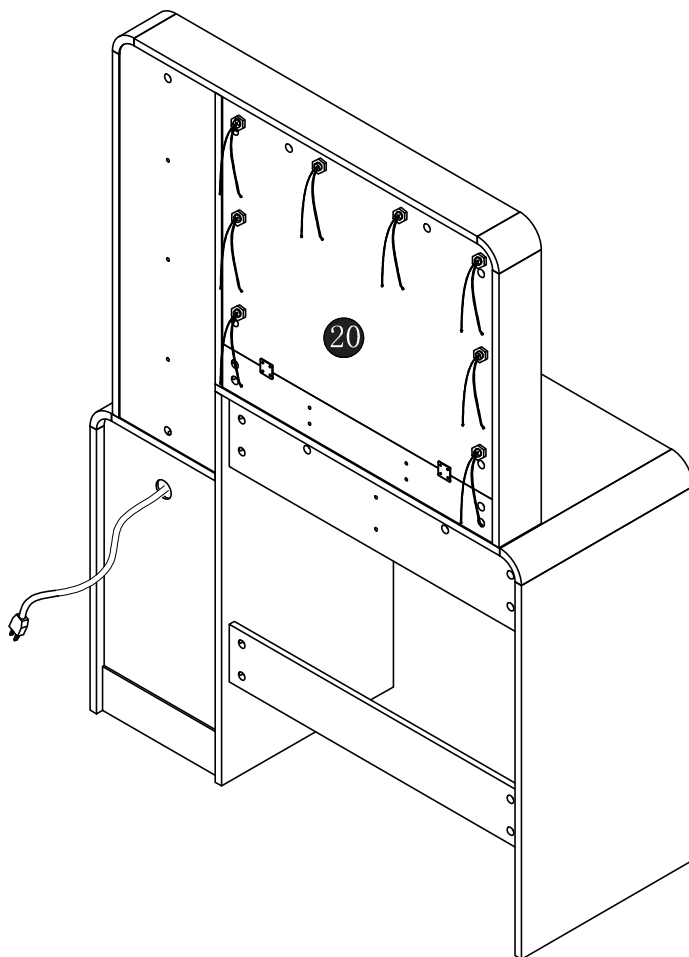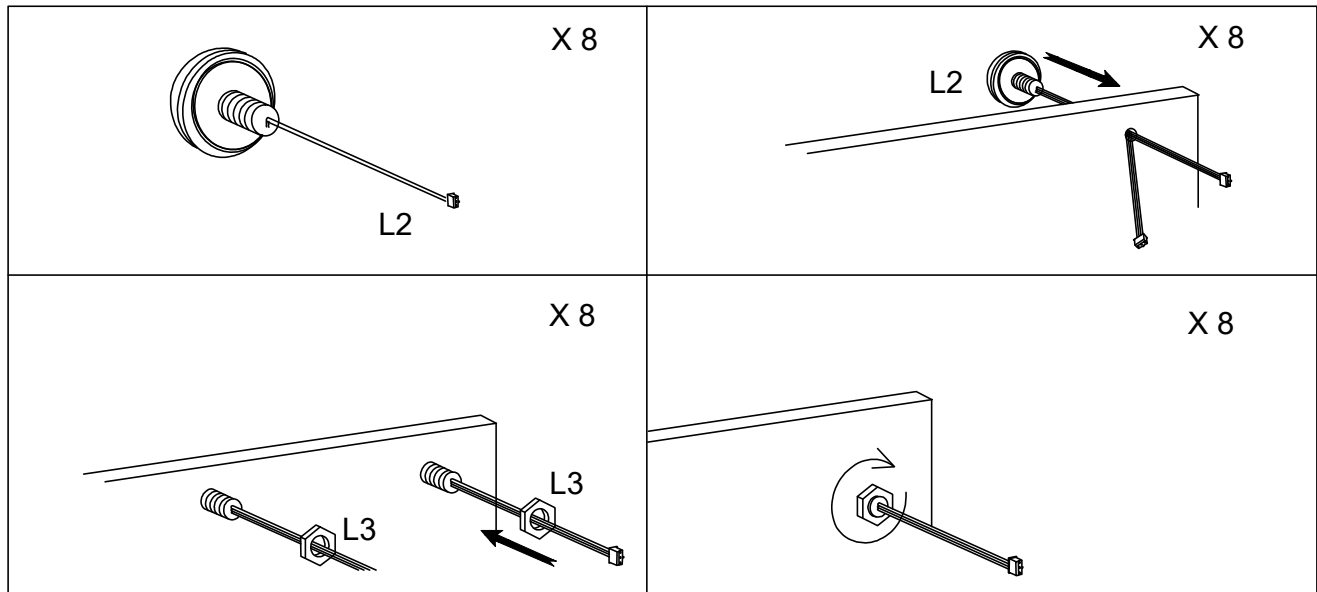



28

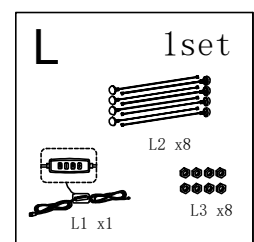

STEP 26

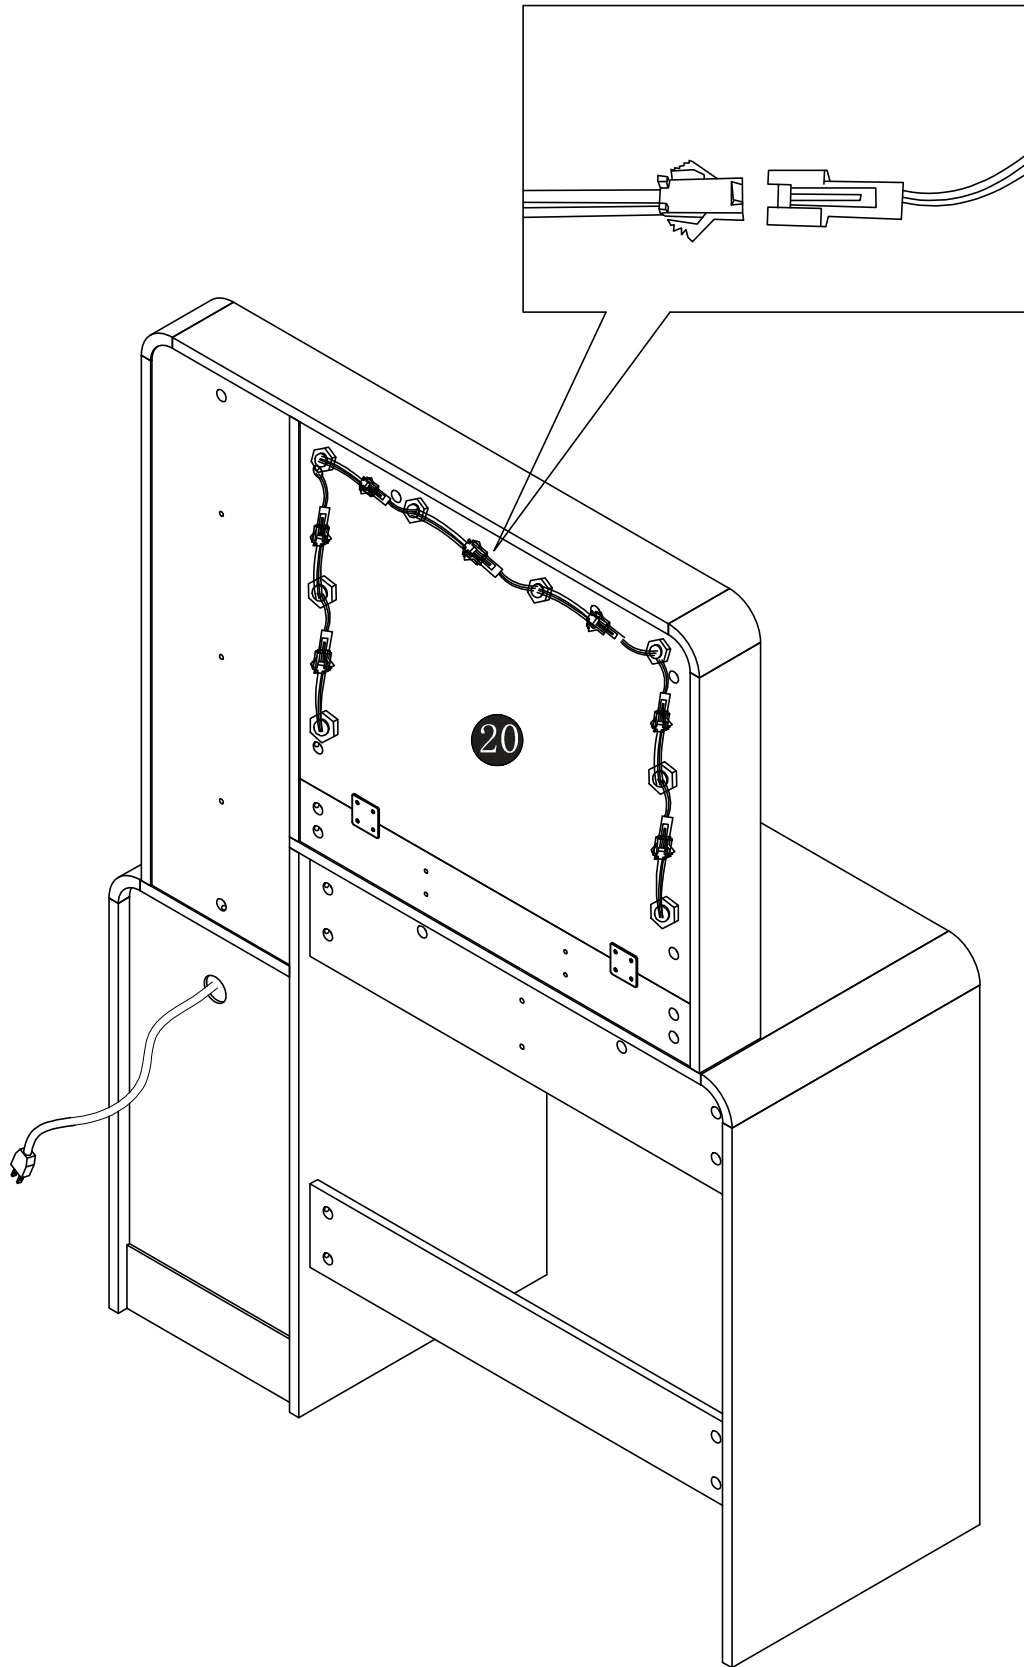

STEP 27

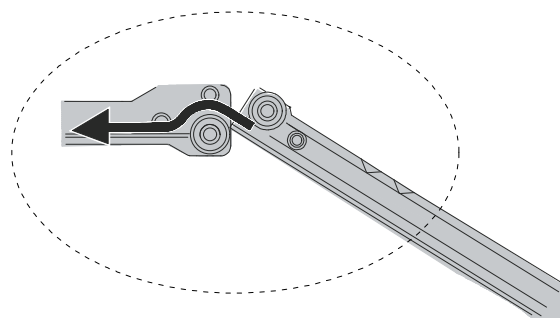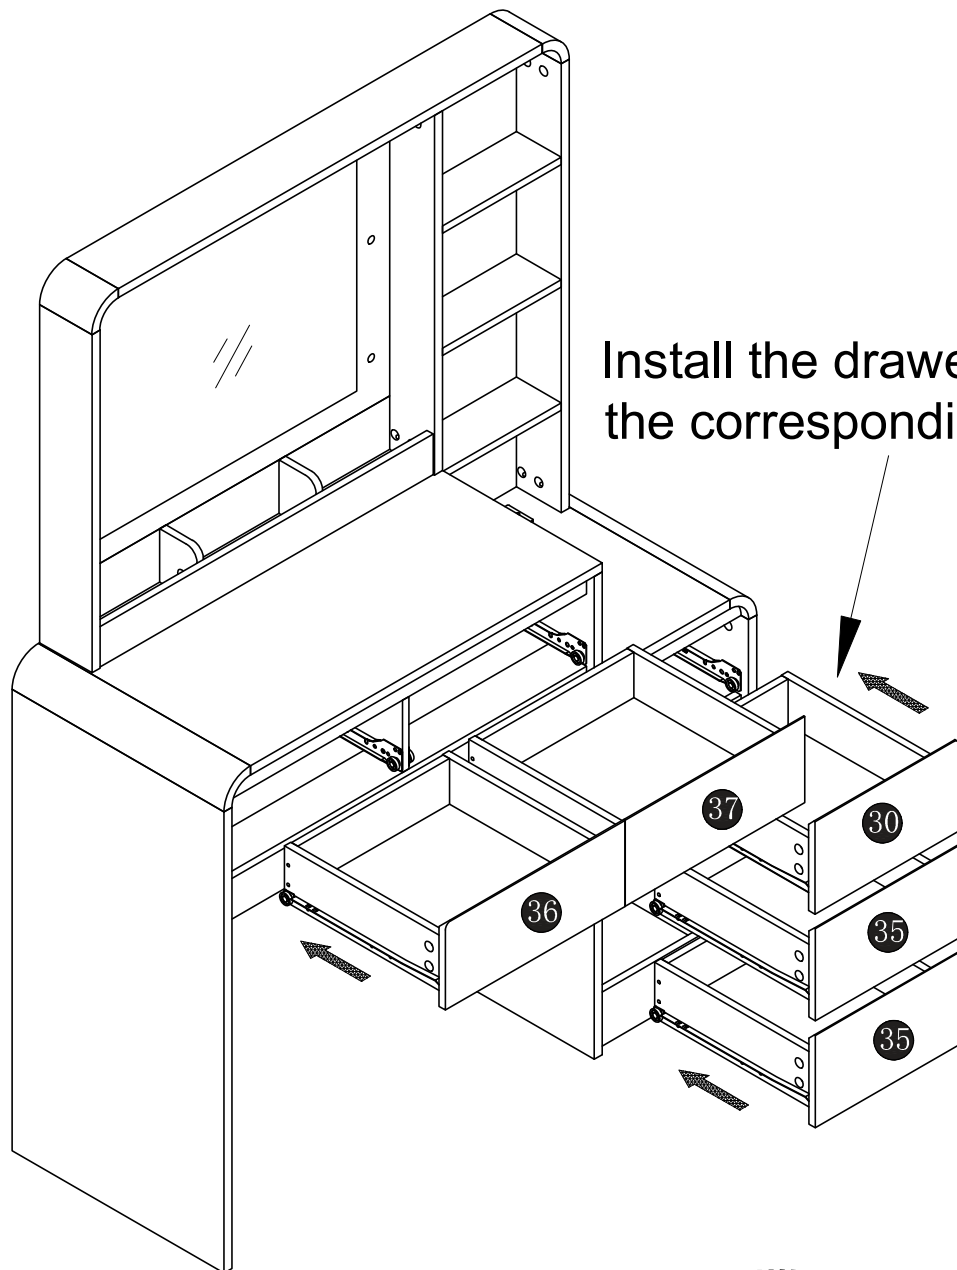

30

STEP 28

