

# ASSEMBLY INSTRUCTIONS


## 36INCH BATH VANITY (COMBO)





Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts which may have come loose inside the carton during shipment. Separate, identify and count all parts and hardware.


Compare with the parts list to be sure all parts are present.

**"DO NOT TIGHTEN SCREWS UNTIL COMPLETELY ASSEMBLED"**


  
\* Use of power tool to assemble this product will invalidate any claim and damage this product making unsafe !!!  
\* Please assemble on a clean soft surface to avoid damage.

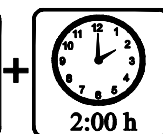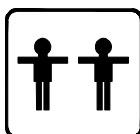

### Tools Required



(Not included)



(Not included)

**IMPORTANT:**

**PLEASE READ INSTRUCTION BEFORE STARTING THE ASSEMBLY**

**Thank you for buying our products.**

**Please read the installation manual carefully before installation,**

**we need you to follow the instructions on the accessories and hardware**

**step by step assembly complete, our instructions are very detailed.**

**Products are environmentally friendly products,**

**Please rest assured that you do not soak in water, do not place very heavy items,**


**do not malicious push and pull,**

**if you have any problems in the process of assembly and use, please contact us.**

**Thank you again for your purchase of our products,**















**I wish you a happy life.**
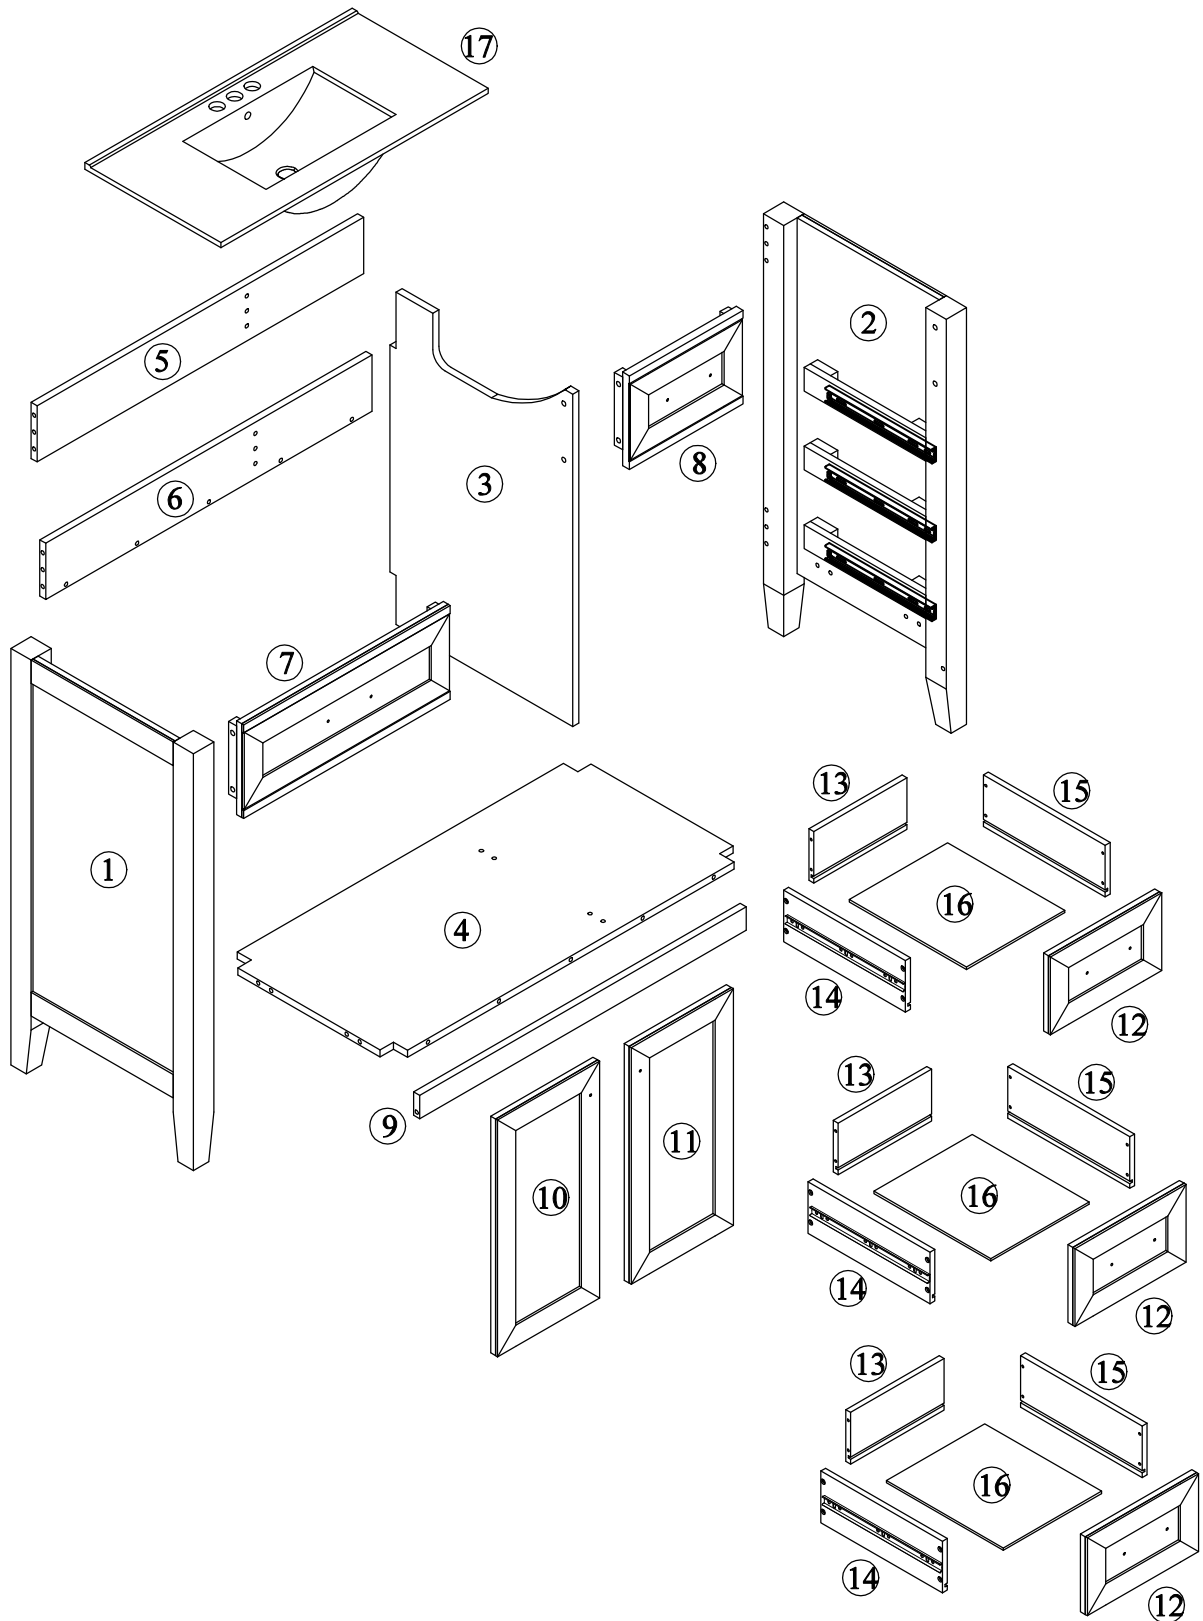
## Detail View - CABINET




**Identifying the Hardware**-Identify the hardware using the illustrations below.
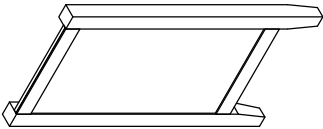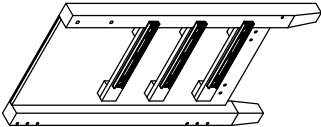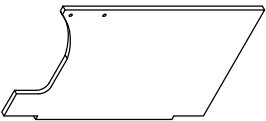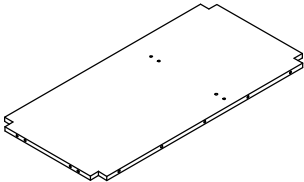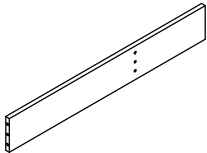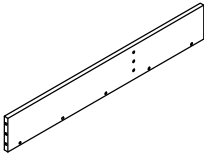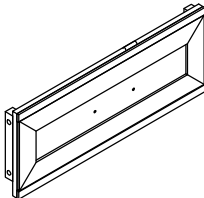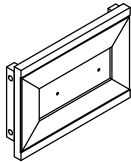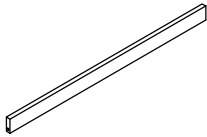
# Part List

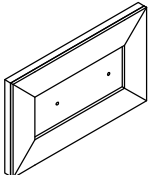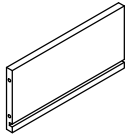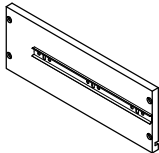1		2	
	Side Panel (L) - 1pc		Side Panel (R) - 1pc
3		4	
	Center Panel - 1pc		Bottom Panel - 1pc
5		6	
	Back Panel Top - 1pc		Back Panel Bottom - 1pc
7		8	
	Front Panel (L) - 1pc		Front Panel (R) - 1pc
9		10	
	Bottom Rail - 1pc		Door (L) - 1pc
11		12	
	Door (R) - 1pc		Drawer Front - 3pcs
13		14	
	Drawer Back - 3pcs		Drawer Side (L) - 3pcs


## Part List

15

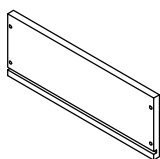


Drawer Side (R) - 3pcs

16

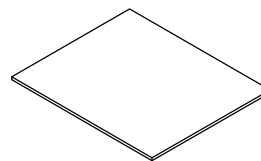




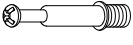


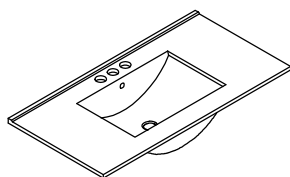




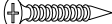



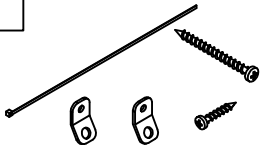
Drawer Bottom - 3pcs

17



Sink - 1pc

# Hardware List



<b>A</b>  $\varnothing 13 \times 1/4" \times 50 \text{mm}$ Hex-Head bolts(2pcs)	<b>B</b>  $\varnothing 13 \times 1/4" \times 32 \text{mm}$ Hex-Head bolts(4pcs)	<b>C</b>  $\varnothing 1/4" \times 16 \times 1 \text{mm}$ Washer(6pcs)
<b>D</b>  $\varnothing 6 \times 35 \text{mm}$ Three in one bolts(22pcs)	<b>E</b>  $\varnothing 14.5 \times 12 \text{mm}$ Three in one lock(22pcs)	<b>F</b>  $\varnothing 8 \times \varnothing 4 \times 32 \text{mm}$ Round head screw(24pcs)
<b>G</b>  Handle(2pcs)	<b>H</b>  Handle(5pcs)	<b>I</b>  $\varnothing 5/32" \times 15 \text{mm}$ Handle screw(4pcs)
<b>J</b>  $\varnothing 5/32" \times 25 \text{mm}$ Handle screw(8pcs)	<b>K</b>  Damping hinge (4pcs)	<b>L</b>  $\varnothing 7 \times \varnothing 3.5 \times 15 \text{mm}$ Flat head screw(24pcs)
<b>P</b>  $\varnothing 8 \times 30 \text{mm}$ Wood dowel(24pcs)	<b>Q</b>  $\varnothing 8 \times \varnothing 4 \times 25 \text{mm}$ Round head screw(4pcs)	<b>R</b>  4mm Allen key(1pc)
<b>S</b>  Anti fall hardware(1set)		

# STEP: 1


**D**



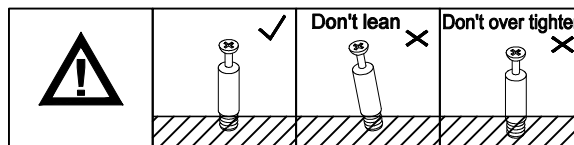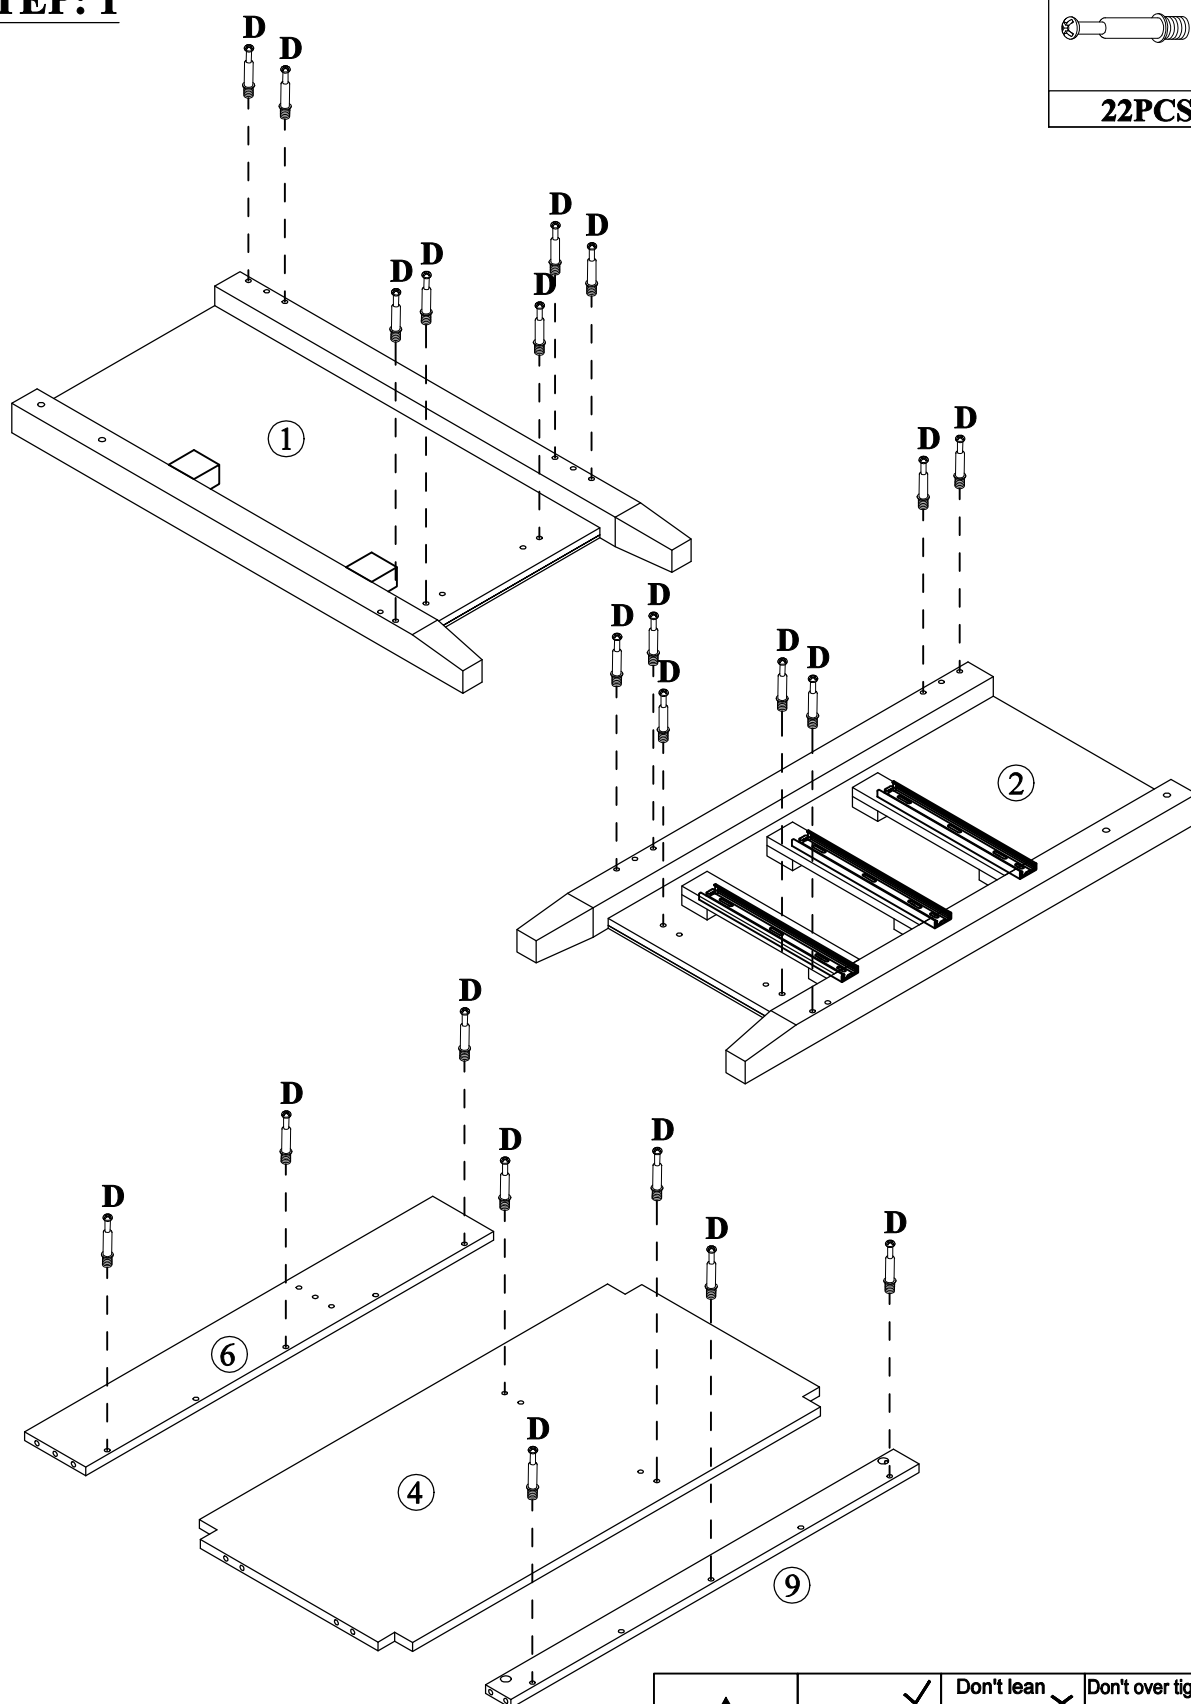


**22PCS**

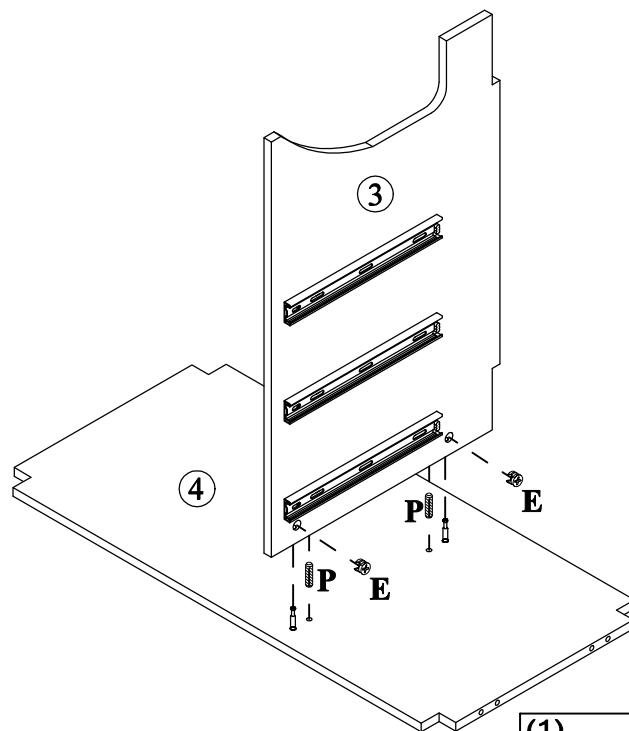


**STEP: 2**



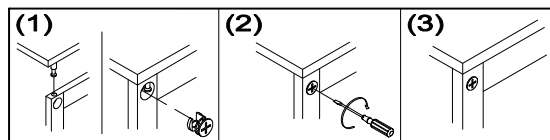


<b>E</b>		<b>P</b>	
<b>2PCS</b>		<b>2PCS</b>	

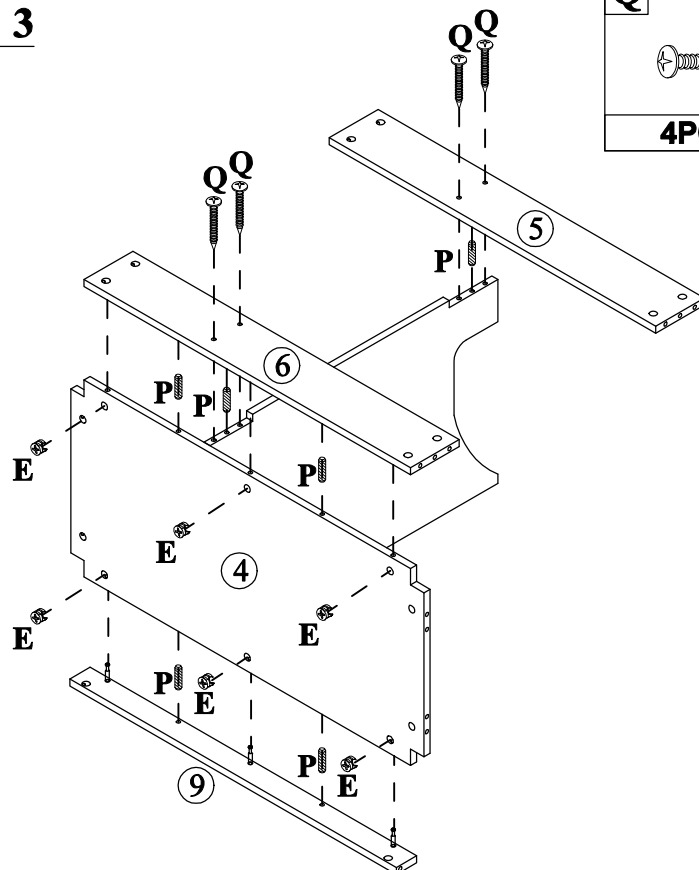


**STEP: 3**







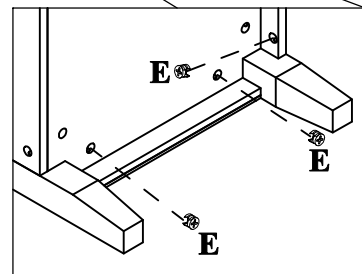
<b>Q</b>	<b>E</b>	<b>P</b>
		
<b>4PCS</b>	<b>6PCS</b>	<b>6PCS</b>

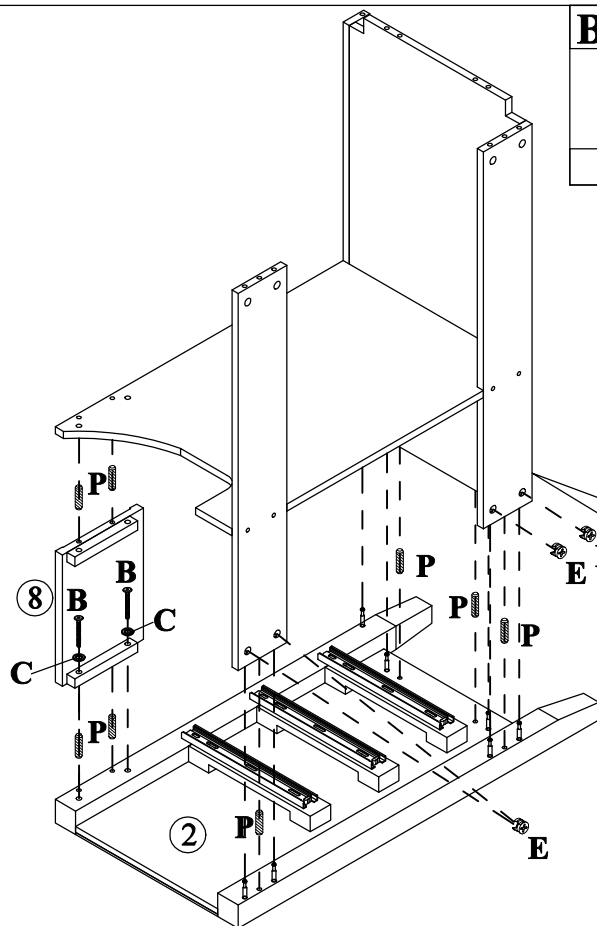


## STEP: 4



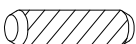




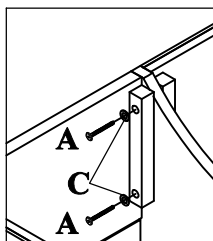
<b>B</b>		<b>E</b>		<b>P</b>	
<b>2PCS</b>		<b>7PCS</b>		<b>8PCS</b>	
				<b>C</b>	
				<b>2PCS</b>	

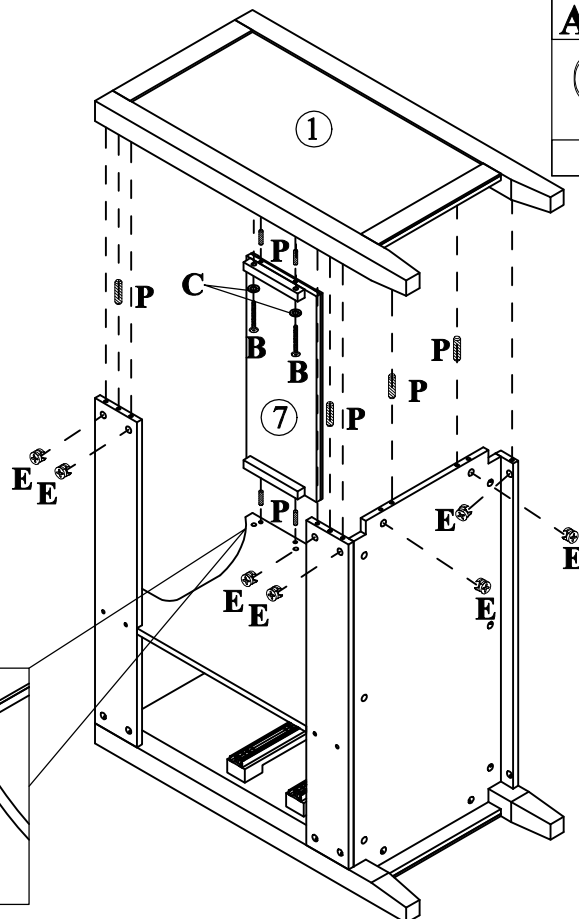


## STEP: 5





<b>A</b>		<b>E</b>		<b>P</b>	
<b>2PCS</b>		<b>7PCS</b>		<b>8PCS</b>	
		<b>B</b>		<b>C</b>	
					
		<b>2PCS</b>		<b>4PCS</b>	






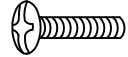
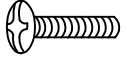

## STEP: 6

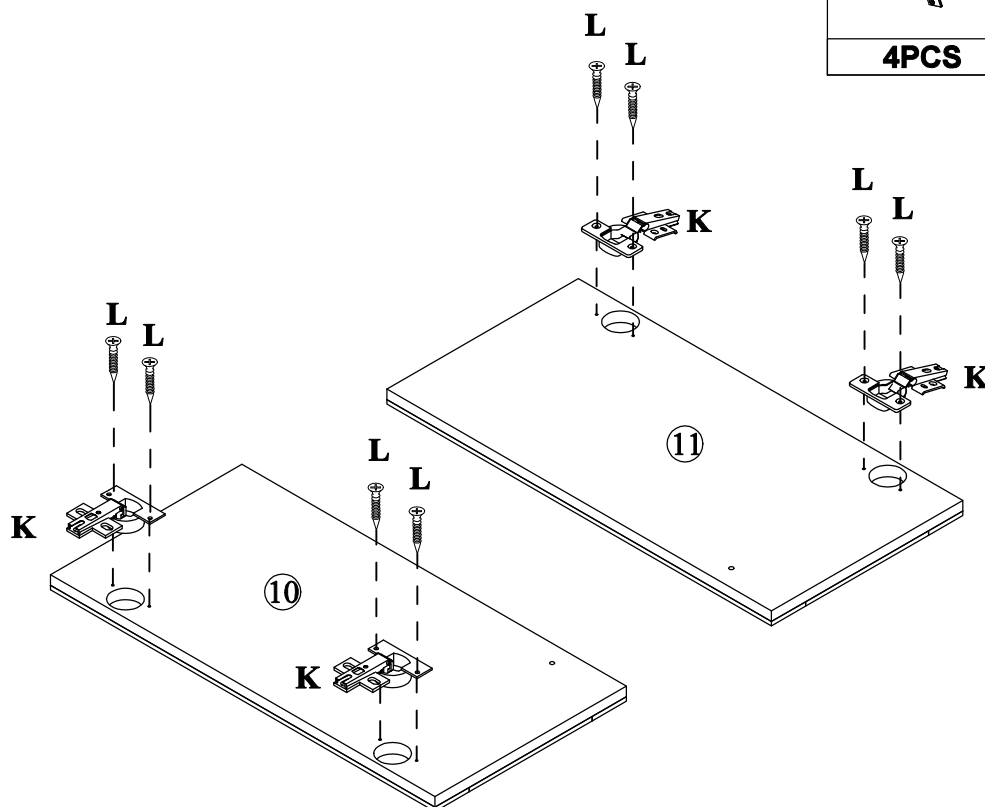

<b>K</b>	<b>L</b>
	
<b>4PCS</b>	<b>8PCS</b>



## STEP: 7

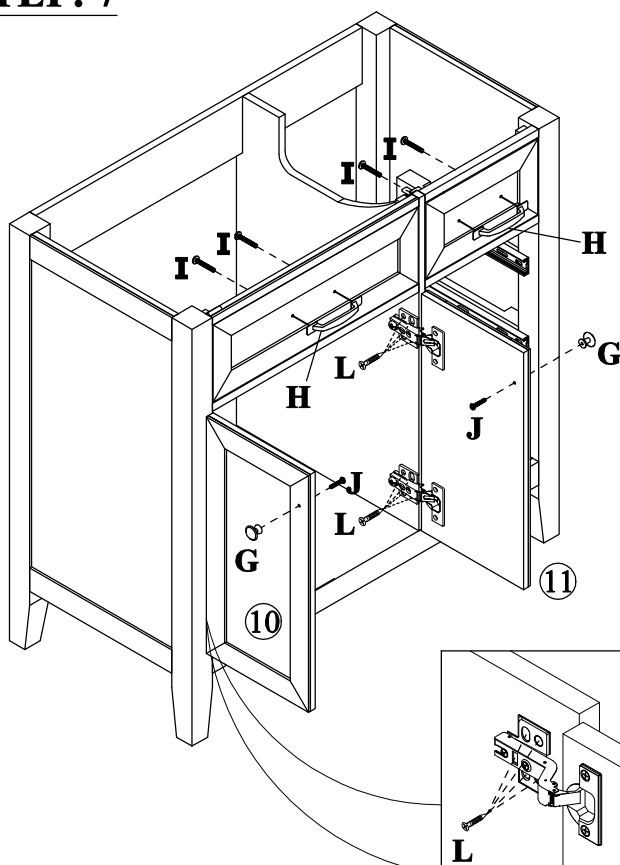
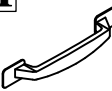
<b>H</b>	<b>G</b>	<b>I</b>
		
<b>2PCS</b>	<b>2PCS</b>	<b>4PCS</b>
	<b>J</b>	<b>L</b>
		
	<b>2PCS</b>	<b>16PCS</b>



Use the screws to adjust up or down

Use the screws to permanent

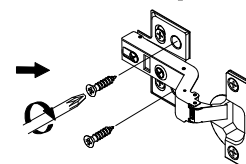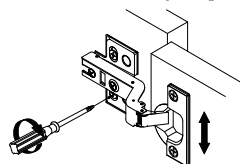
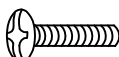



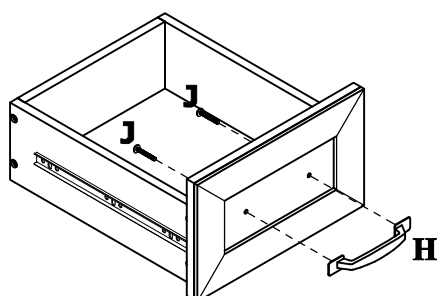
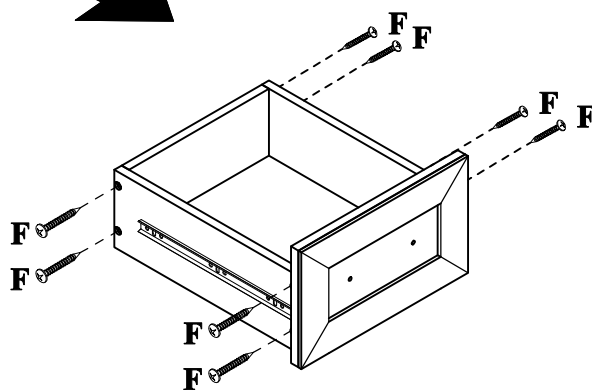
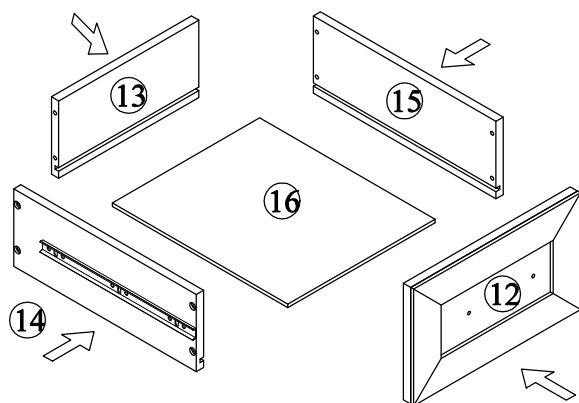
Use the screws to adjust left or right

Use the screws to adjust in or out

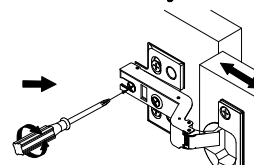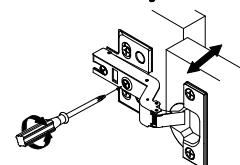


## STEP: 8

<b>H</b>		<b>J</b>		<b>F</b>	
<b>3PCS</b>		<b>6PCS</b>		<b>24PCS</b>	





**X3**

## **STEP: 10**

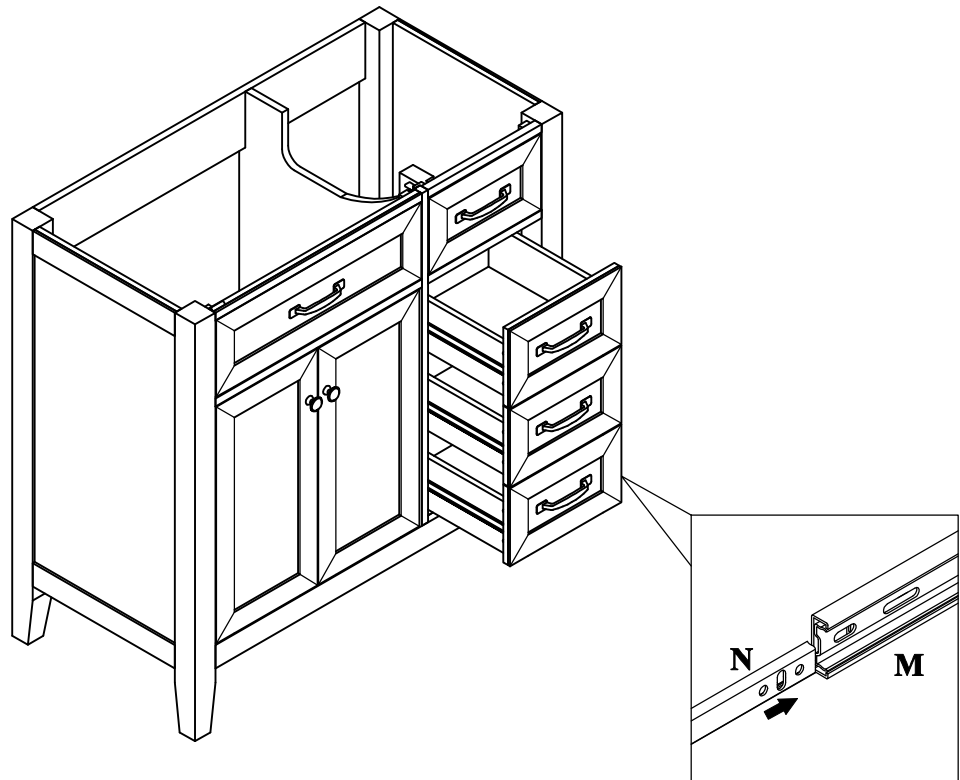


## **STEP: 11**

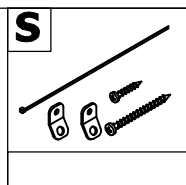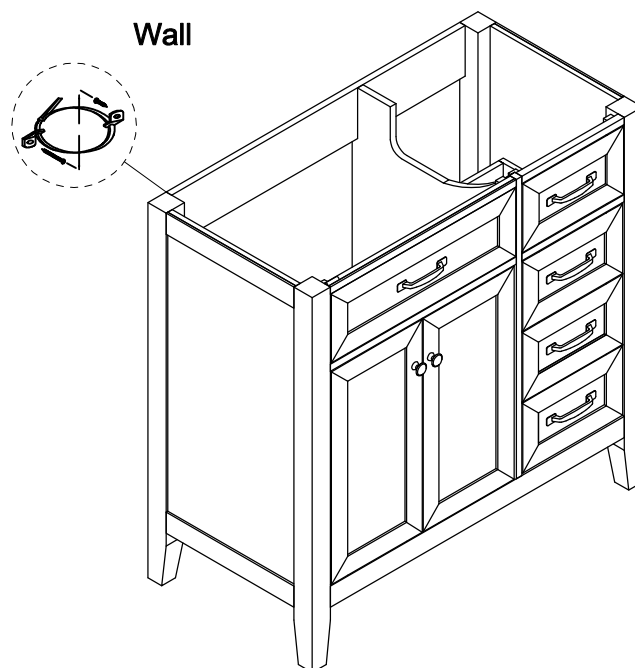


## **STEP: 17**

**Install the sink on the cabinet with glue.  
Let stand for 24 hours**

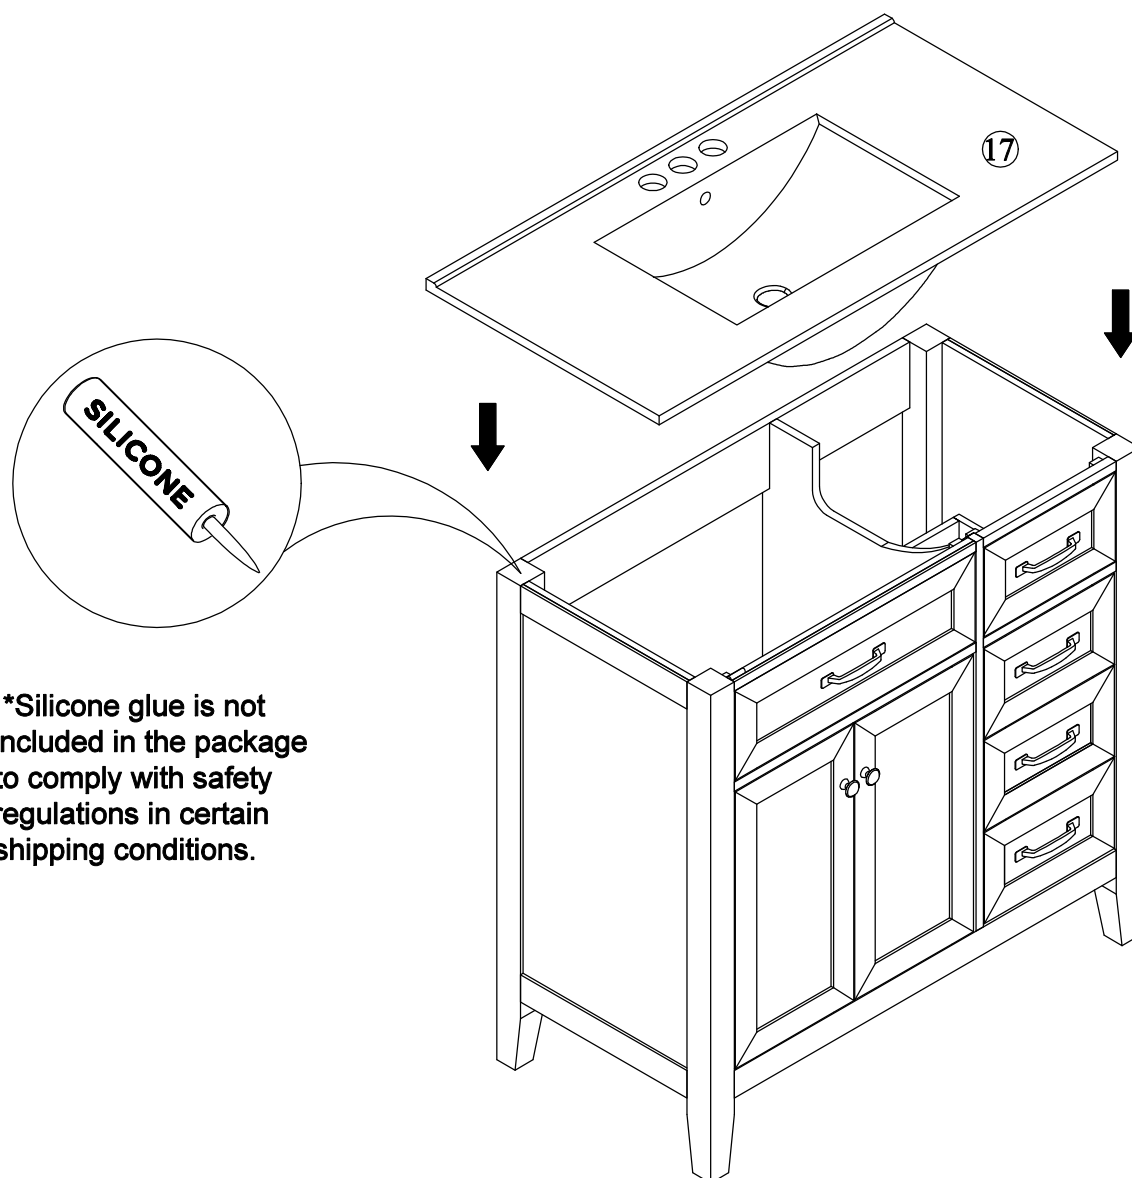


**\*Silicone glue is not included in the package to comply with safety regulations in certain shipping conditions.**

## **STEP: 12**

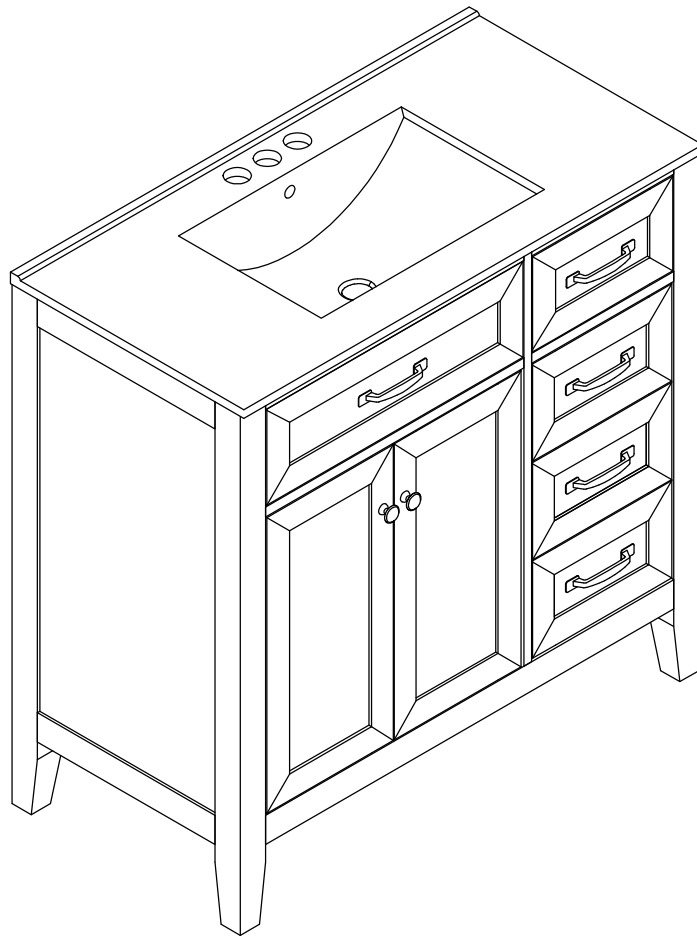

# HINGE ADJUSTMENTS

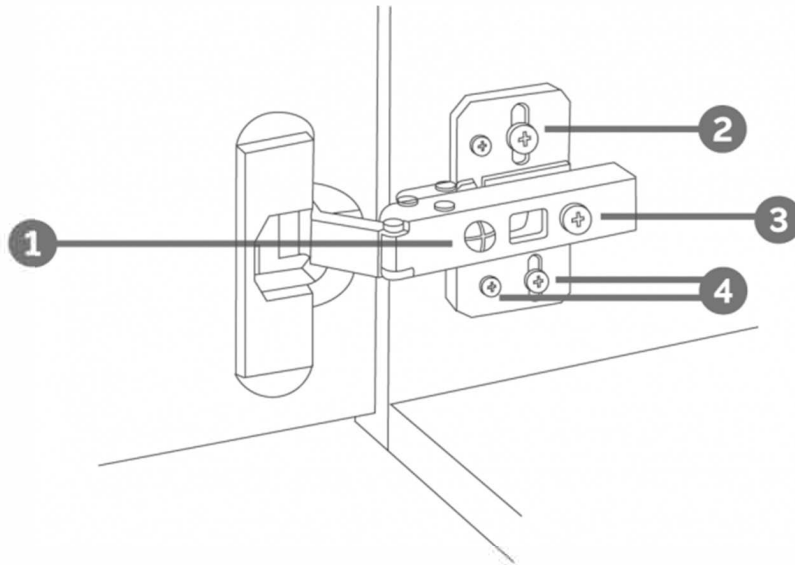


## ① Sideways / Tilt adjustment

Turn the screw

**clockwise** to move the door further away from the side of the cabinet

**anticlockwise** to move the door closer to the side of the cabinet

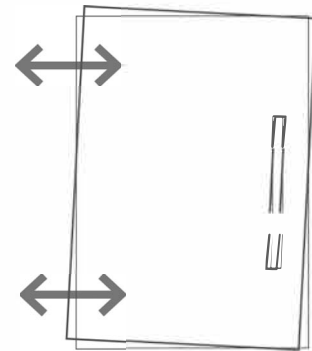


## ② ④ Height adjustment

While supporting the weight of the door, turn the screws

**clockwise** to move the door up

**anticlockwise** to move the door down

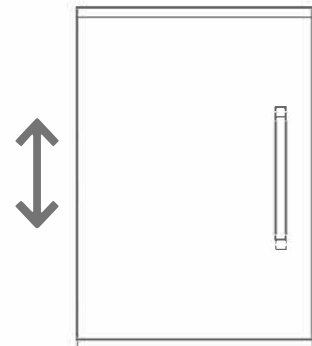

## ③ Forward and back adjustment

If the gap between the back of the door and the cabinet is too small, and the door may not close fully. Turn the screw

**clockwise** to decrease the gap between the door and the cabinet

**anticlockwise** to increase the gap between the door and the cabinet

