


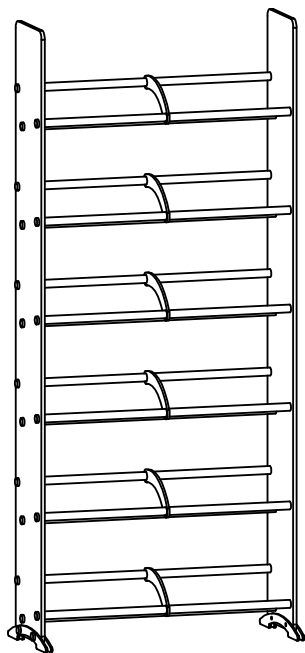







Assembly Instructions



Hardware


Part #	Description		QTY
A	Screw M6x18mm		36
B	Metal Cap		40
C	Brass Washer		40
D	Screw M6x25mm		4
E	Metal Washer		4
F	Nut		4
G	Allen Wrench		1
H	Wrench		1

Parts

Part #	Description		QTY
1	Right Glass Panel		1
2	Left Glass Panel		1
3	Rod		18
4	Metal Feet		4
5	Stopper		6


STEP 1

- 1a. Install the metal feet as shown in the diagram.
- 1b. Do not fasten the screws until the whole unit set up and leveled in upright position.

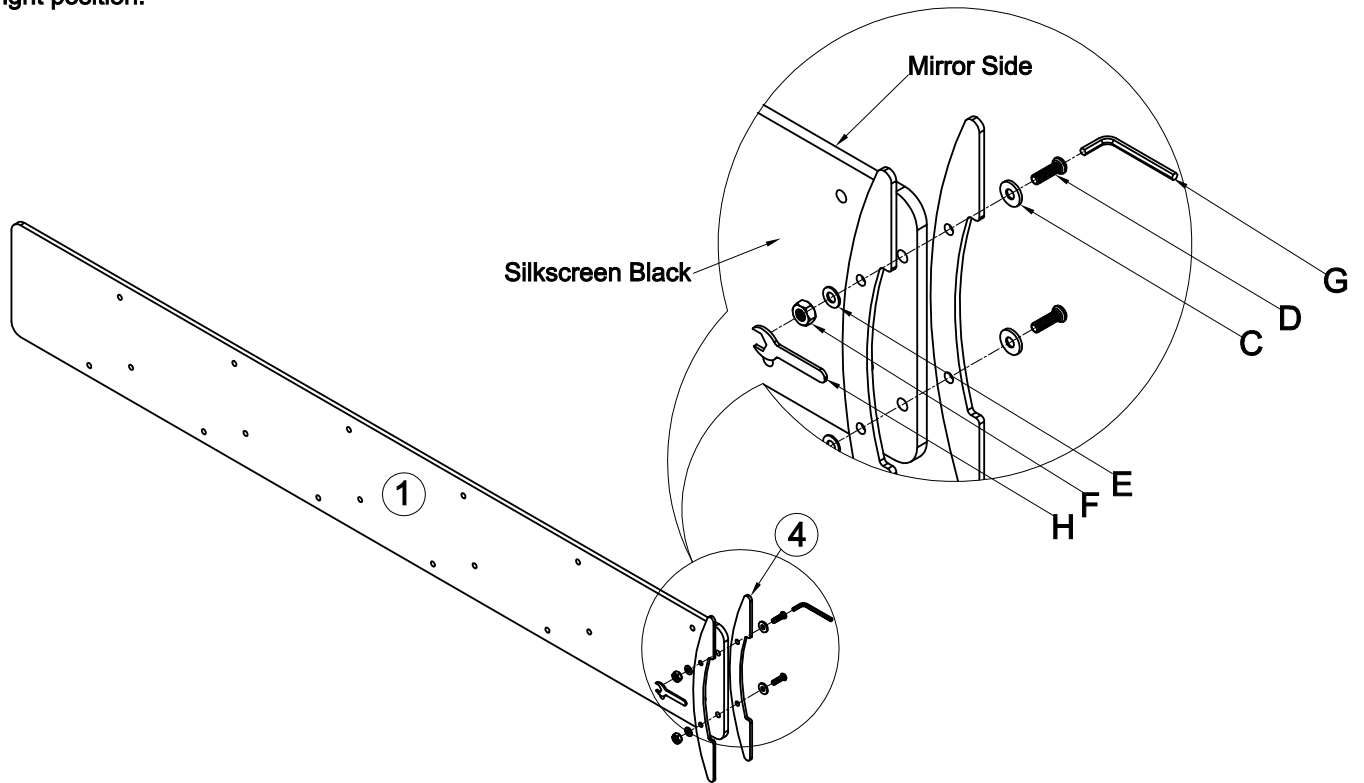


STEP 2

- 2a. Install the rods with the brass washers (flat side against the glass) and screws (Part A).
- 2b. Fasten the screws to 90% tight, do not over tighten the screws.

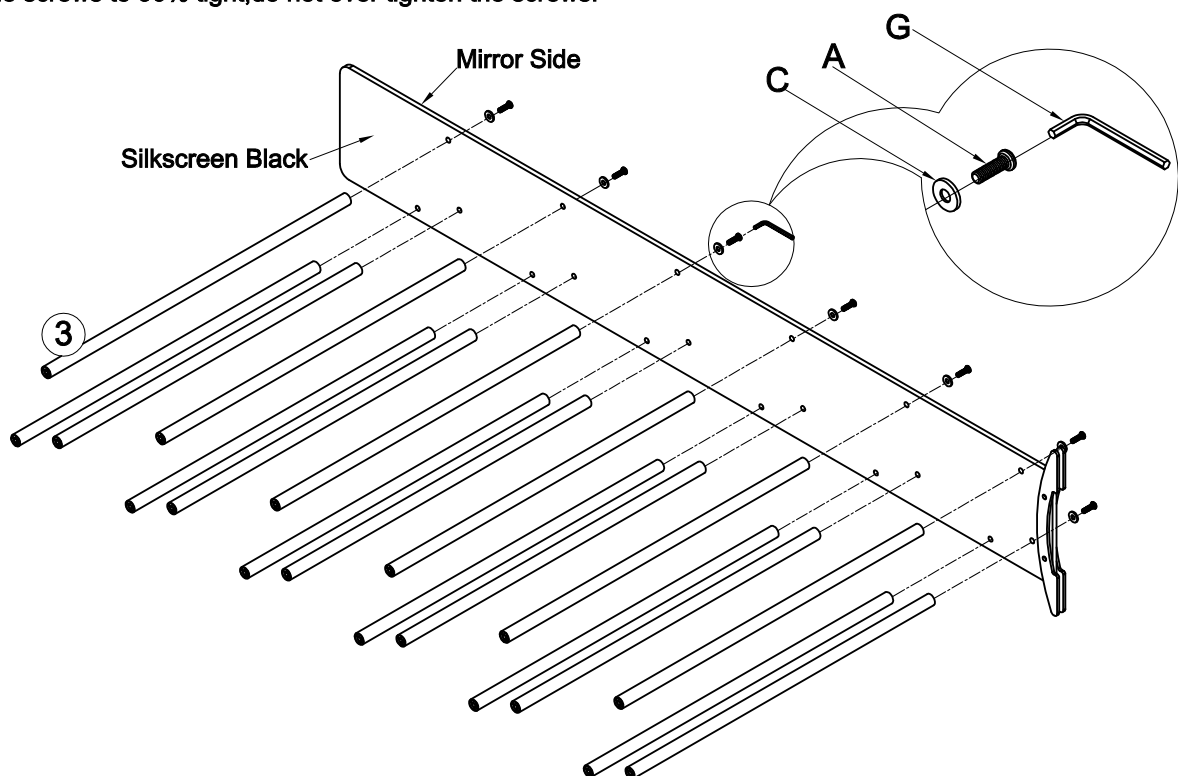


STEP 3

Insert the stoppers into the rods as shown.

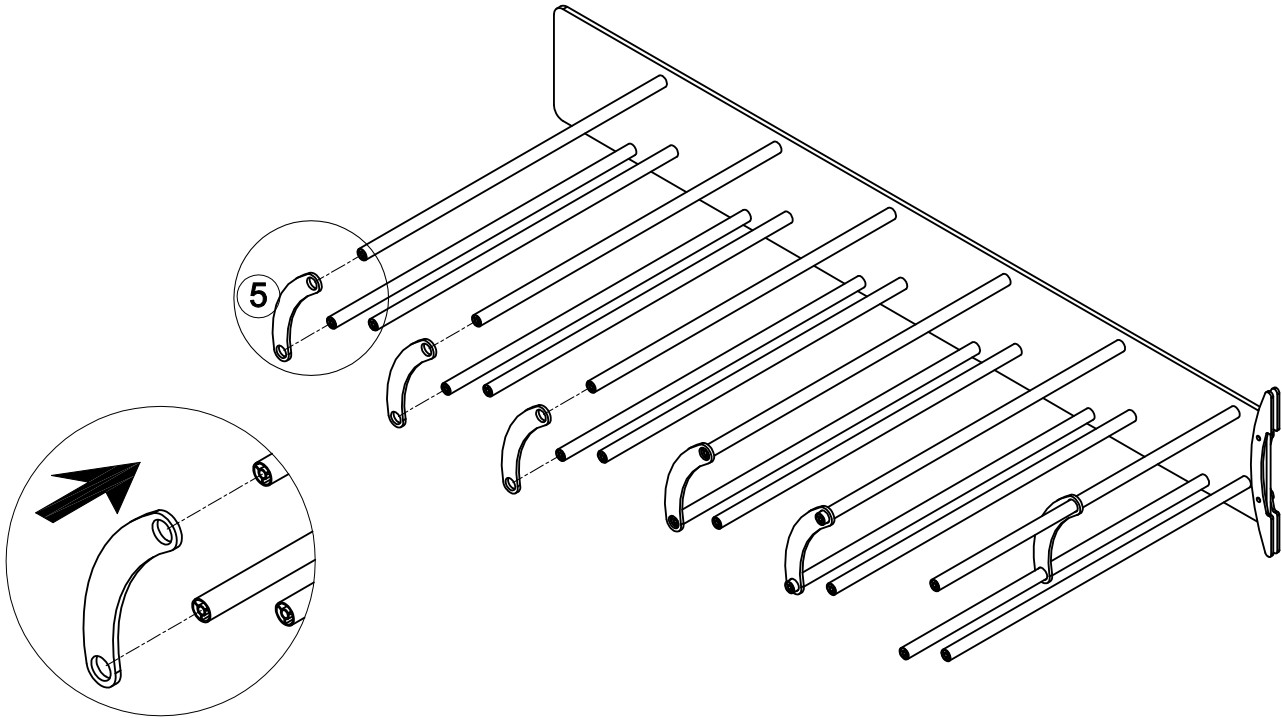

STEP 4


- 4a. Install the metal feet as shown in the diagram.
- 4b. Do not fasten the screws until the whole unit set up and leveled in upright position.

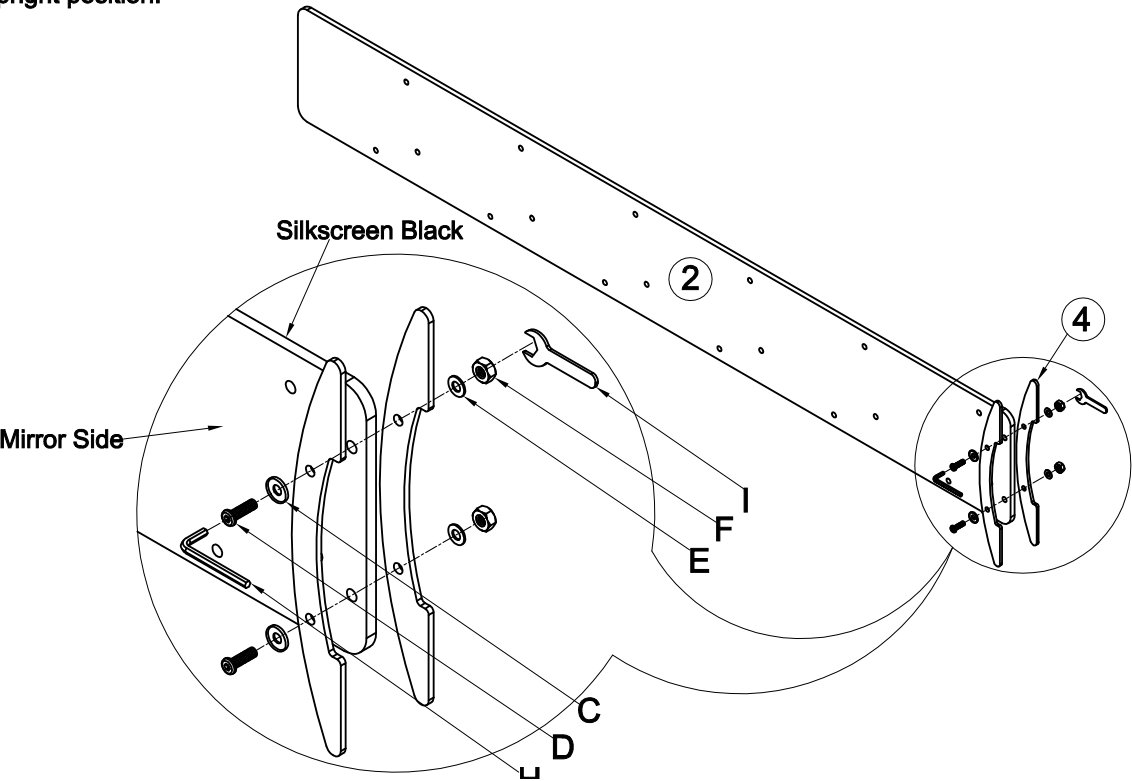

STEP 5

5a. Install the glass panel with the brass washers (flat side against the glass) and screws (Part A).

5b. Fasten the screws to 90% tight, do not over tighten all the screws.

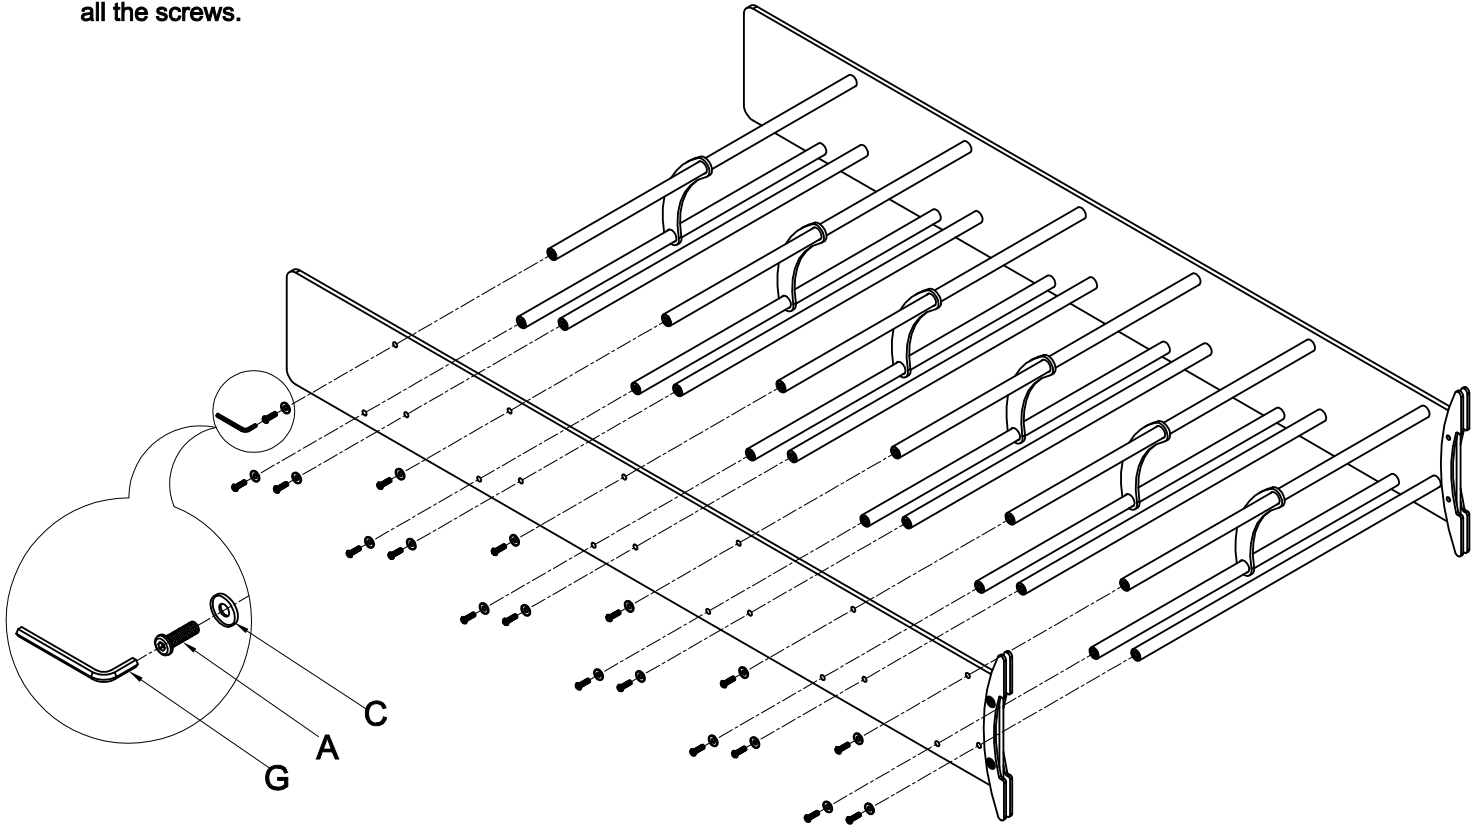

STEP 6

6a. Slide each stopper from one side to the other, if it's not smooth then adjust the rod(s); loosen the screw(s) if necessary.

6b. Level the metal feet and fasten all the screws. Do not over tighten the screws.

6c. Install all the caps.

