

Installation Instruction


Merritt #'s: 9111-1W, 9139-1W, 9143-1W

Sheridan #'s: 9110-1W, 9138-1W, 9142-1W

WARNING: To avoid risk of electrical shock, be sure to shut off power while installing or servicing this fixture.

NOTE: We advise calling a qualified electrician when making the wire connections to the junction box.

1. Carefully unpack your new fixture and lay out all the parts on a clean surface.
2. Thread the 2 mounting screws through the mounting screw holes from the back of the mounting bracket.
3. Attach mounting bracket to the outlet box using 2 box screws. The side of the mounting bracket marked "GND" must face out.
4. Follow the wiring instruction carefully as detailed below.
5. Attach the fixture main body onto the outlet box by protruding 2 mounting screws through the mounting screw holes on the fixture cover plate (A), then tighten with 2 ball nuts (B).
6. Assemble the shade (C) onto the socket sleeve (D).
7. Install the bulb into the socket.
8. BULB(S) NOT INCLUDED. DO NOT EXCEED THE MAXIMUM WATTAGE RATING.
8. Installation is now complete. Turn on power.

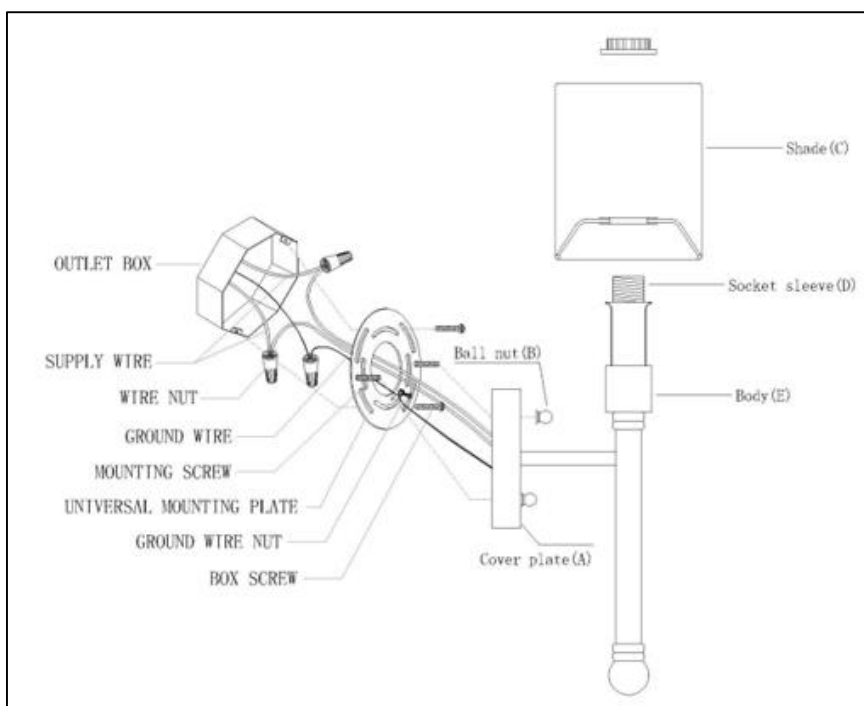

Note: 120V/60W

CONNECT THE ELECTRICAL WIRES AS FOLLOWS:

1. Connect the black wire from the fixture to the black (HOT) house wire with wire connector.
2. Connect the white wire from the fixture to the white (NEUTRAL) house wire with wire connector.
3. Connect the ground wire to the house ground wire (GREEN OR BARE COPPER). Or attach the bare copper fixture wire to the green ground screw on the cross bar.
4. Tuck the wire connections neatly into the junction box.

