
CONTEMPORARY SOFA Assembly Instruction

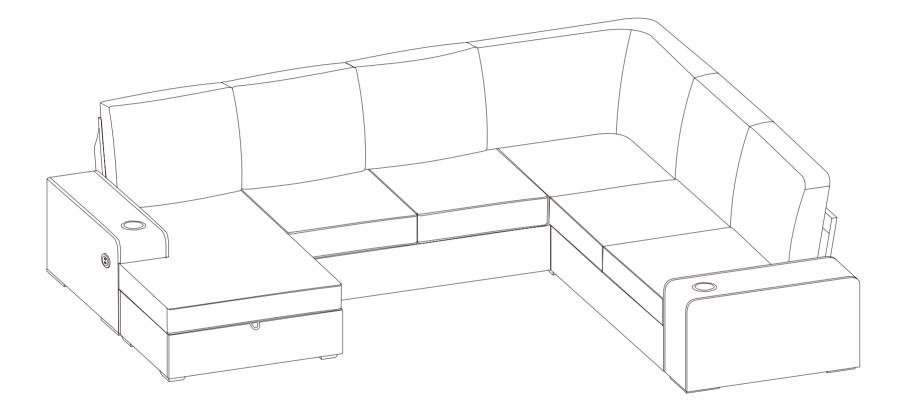



Delivered with TWO PACKAGES with TWO TRACKINGS, may NOT be deliverded at the same time.

merioxyhome.comTEL:901-347-2181

Safety and Care Advice


Important – Please read these instructions fully before starting assembly

Thanks for your purchase. Before assembling, please follow the instructions to check if all the spare parts and screws are intact.


- Considering the size and weight of the sofa, we recommend two adults to assemble the sofa, on a carpeted or padded area, in the room that it is intended for. Approximate assembly time: 60 minutes.
- Keep all components and packaging out of reach of children or animals to avoid the risk of choking or suffocation.


- Please do not throw away any of the packaging or the instruction until you have checked all the components and hardware and the furniture is fully assembled.
 Please ensure that the packaging is disposed in a safe and environmentally friendly way.
- Please do not take off the cover, and do not wash.

Your cushions come vacuum packed and sealed for shipping. To restore the cushion's original shape, follow the steps below.

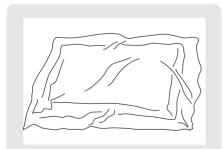


Open the vacuum bag carefully.

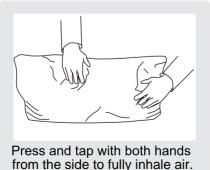

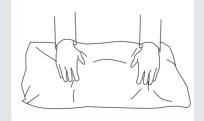

Press and tap with both hands from the front to fully inflate.

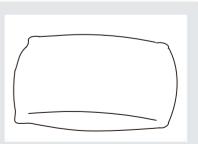


Carefully smooth out each section until the surface is even.


After packing up, place them somewhere dry and ventilated. After about 72-96 hours, it can be restored to the best-use condition.

Seller's Notice:

Our product is packed in separate boxes as shown below, and they might be shipped in different batches. Please wait until you received all the boxes then start the assembly. Noted:Assembly instruction is only provided in Box1.


The following is the list of components contained in these boxes.

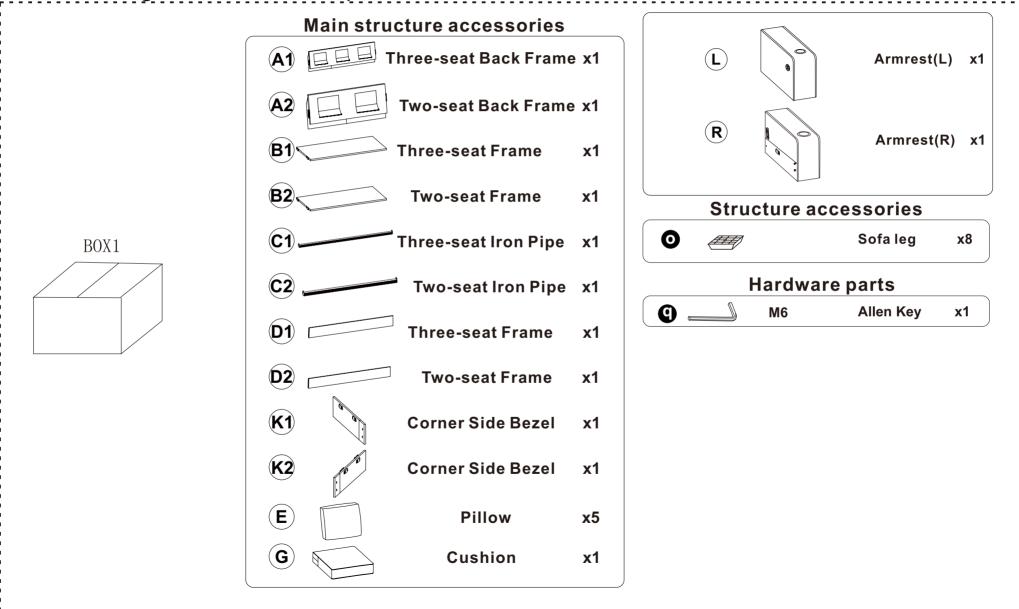


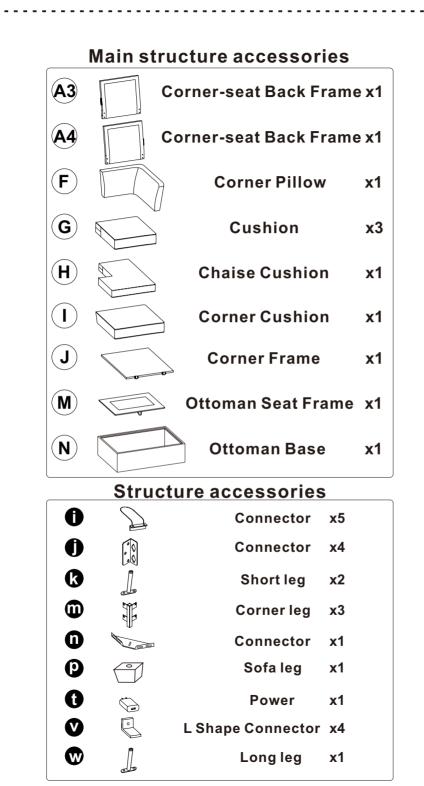


Hardware parts a M8*60 Bolt x8 6 M6*30 Bolt x1 000000 C 0)..... M6*20 Bolt x24 Ø (θ) M8*25 Bolt x12 e (D))))) M6*25 Bolt x8 0 (0)))) M6*16 Bolt **x8** Ø M6 Nut x1 9 6 \bigcirc M6*18*1.2 Wahser x1 M6 Allen Key x1 Q -7 Wrench x1






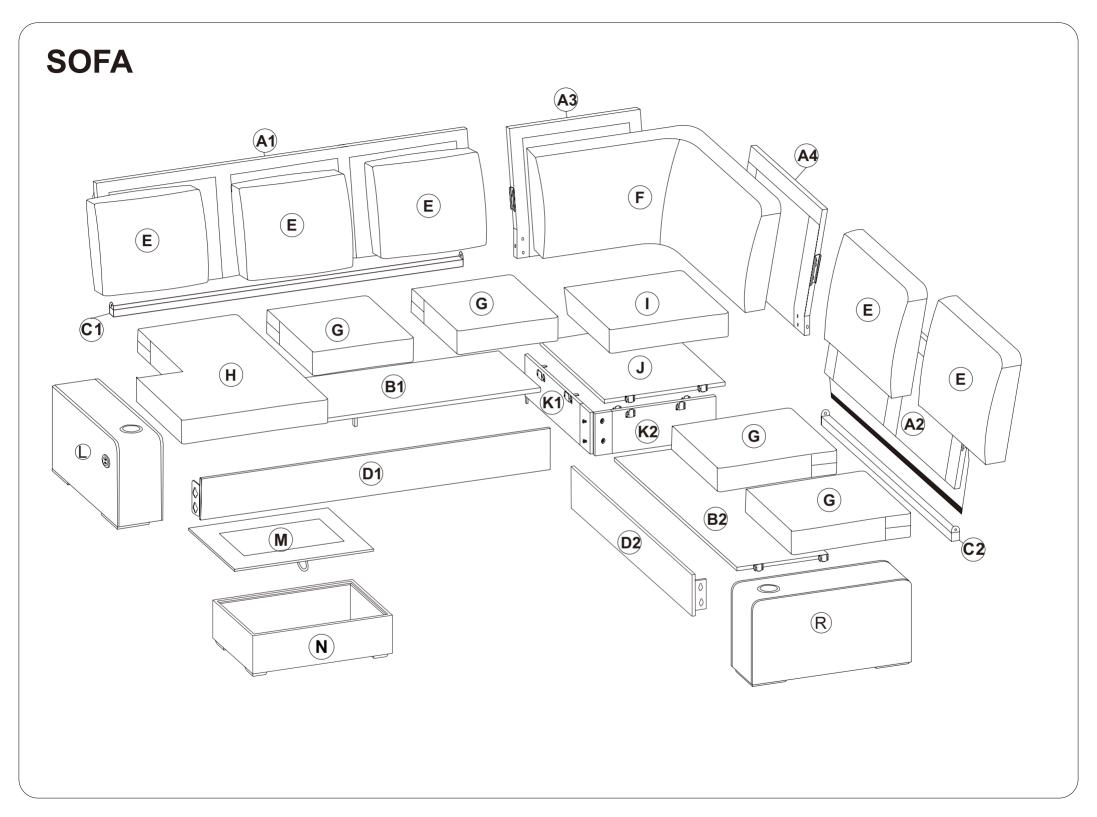

Main structure accessories

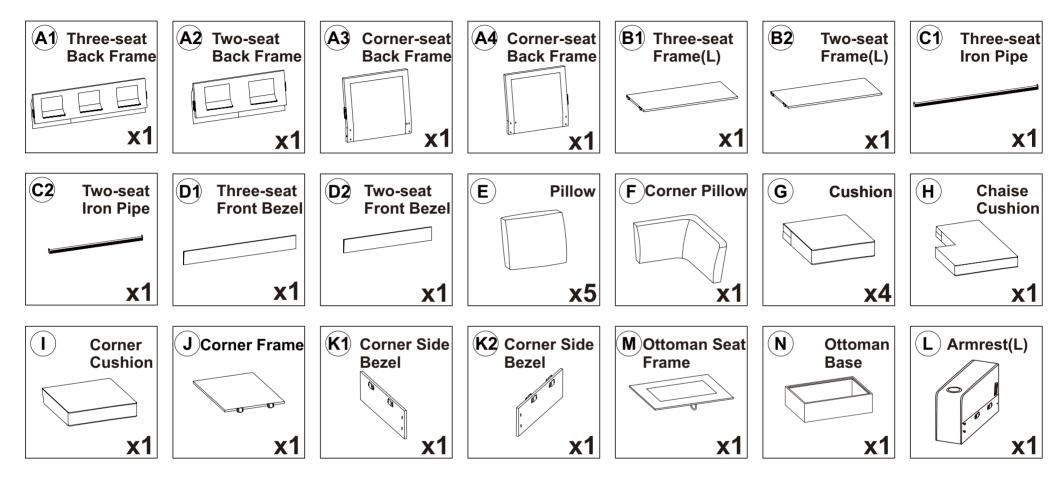

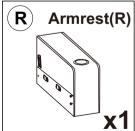

Structural accessories

