

1 Installation tool



Paper ruler



pencil



Traceless
nail



expansion anchor




level

2 Choose the appropriate nail



Non marking nails are suitable
for most wall surfaces

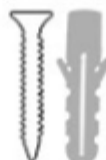

expansion anchor

The surface coating thickness or
gypsum board needs to be drilled on
the wall with an electric drill first

3 Determine the position of the hanging painting

Measure with a paper ruler and use a pencil to make a cross mark for positioning. It is important to note that the distance between the nails is equal to the distance between the left and right hooks. When marking the nail position, it is necessary to keep it horizontal.

