


ALISSA BUNFOOT 48" SINGLE SINK VANITY

DESIGN # CVN4002-48

Assembly Instructions

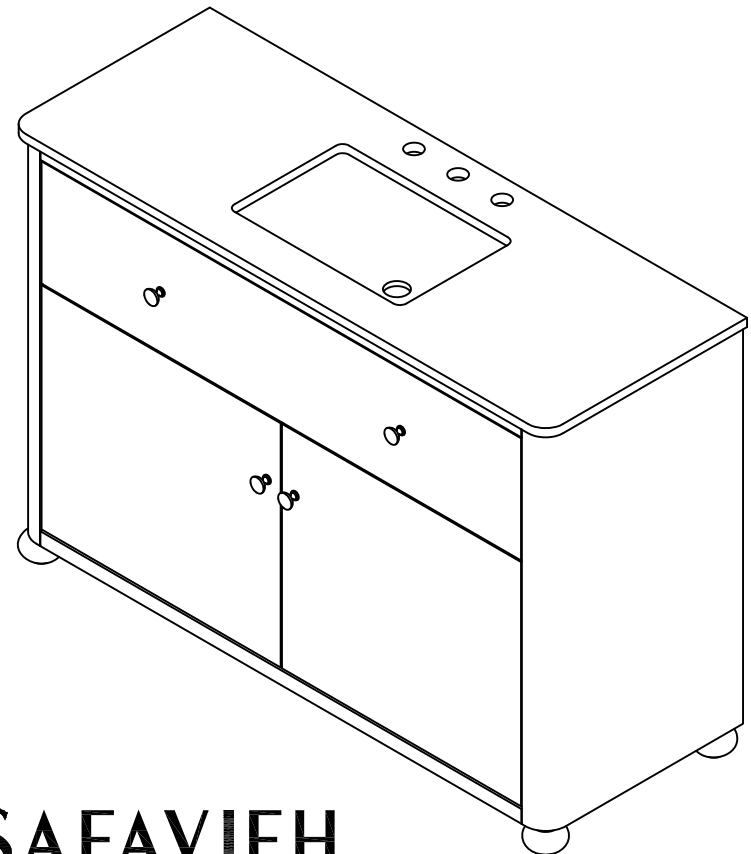

Need help?

Feel free to contact us via email or call
if you have any specific questions!

contact us:

cs@safavieh.com
866-422-9070

SAFAVIEH
C O U T U R E


Thanks for bringing Safavieh Couture into your home

Every thing we make is incredibly
simple to set up, including your new
vanity.

Parts List


A x 1
TOP SINK

B x 1
UNIT

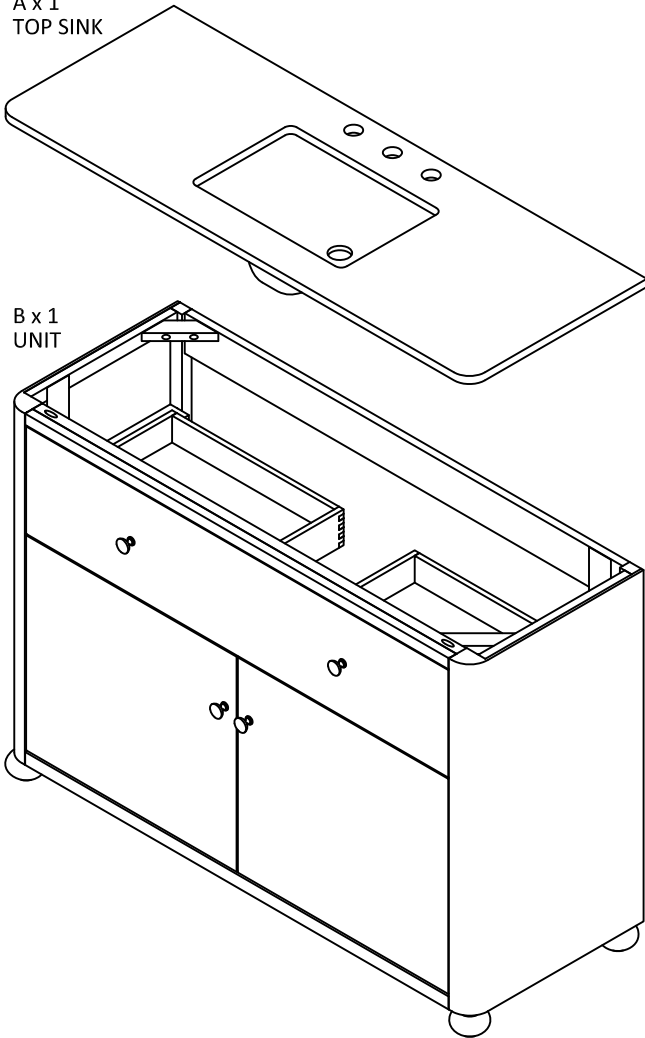


1

Place the vanity Unit (B) upright on a soft and clean surface. Apply silicone sealant (not included) around the top of the vanity Unit (B). Gently align the Top Sink (A) with the vanity Unit (B) and place on top. Let the sealant dry.

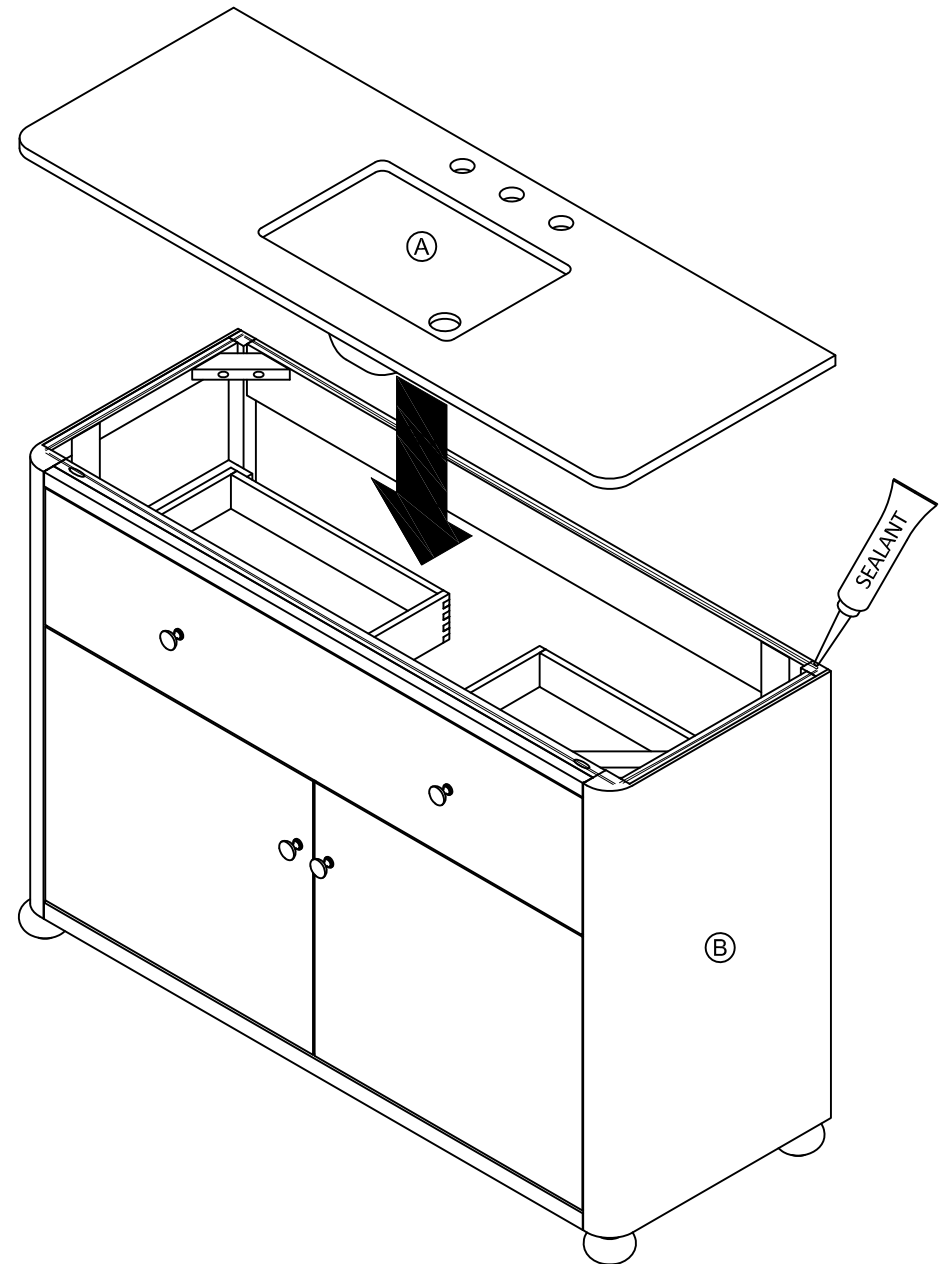


2

If the edge on the left or right are not balanced, please follow this step

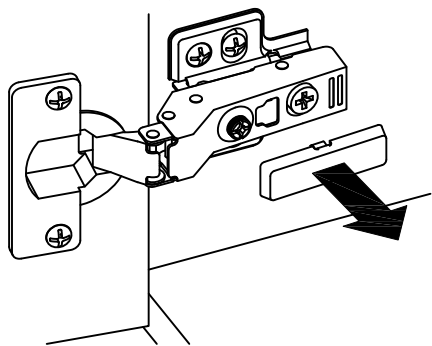


2.1. Remove the screw cover from the hinges

Note: You can reattach the screw cover once all adjustment steps are completed

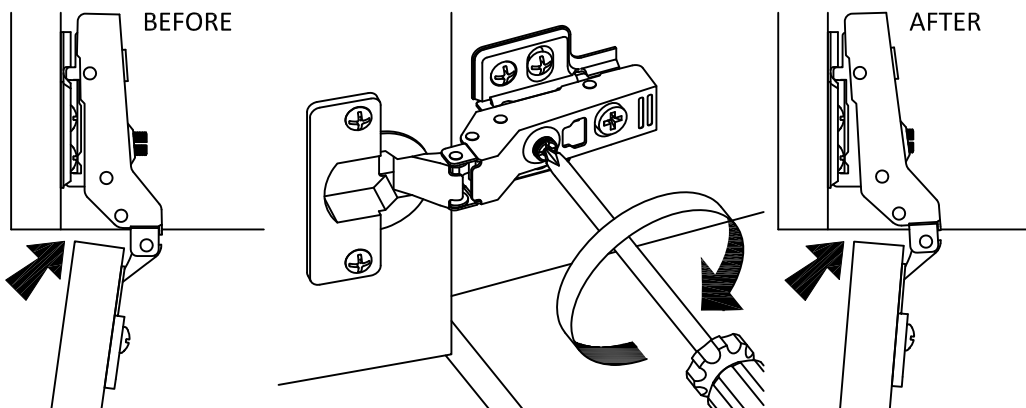


2.2. If the edge on the left side is too narrow, you will need to slide the doors slightly to the right by turning the front center screw counter clockwise.

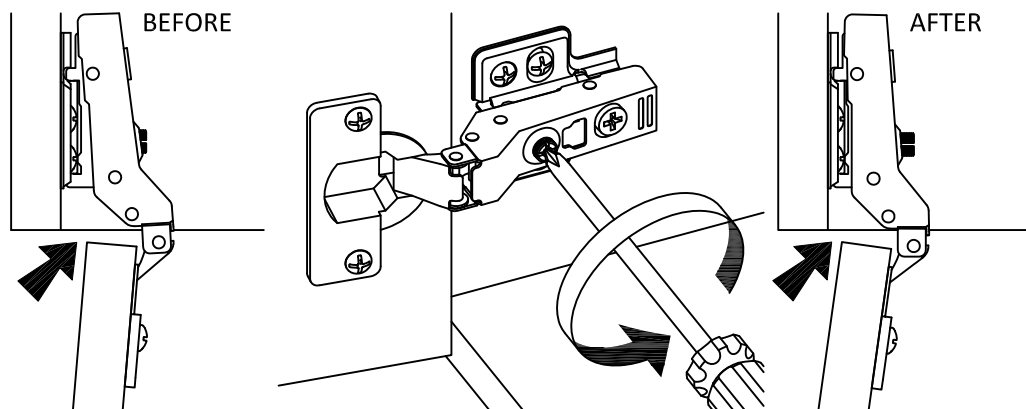


2.3. If the edge on the left side is too wide, you will need to slide the door slightly to the left by turning the front center screw counter clockwise.

3

If you need to slide the door forward or backward, please follow this step.

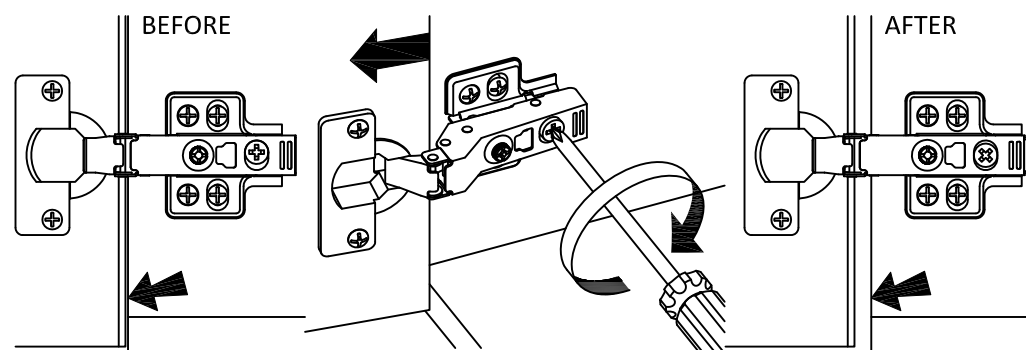


3.1. If you need to slide the door forward. Turn the back center screw clockwise.

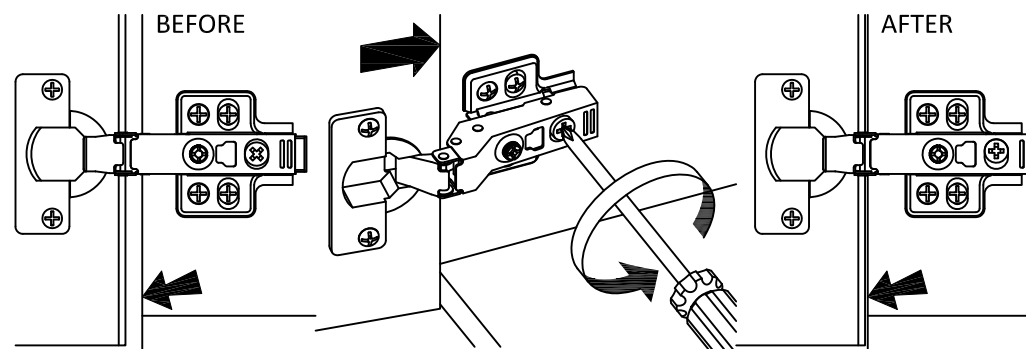

3.2. If you need to slide the door backward. Turn the back center screw counter clockwise.

Adjust the levelers on the bottom of the vanity as needed to make it level.

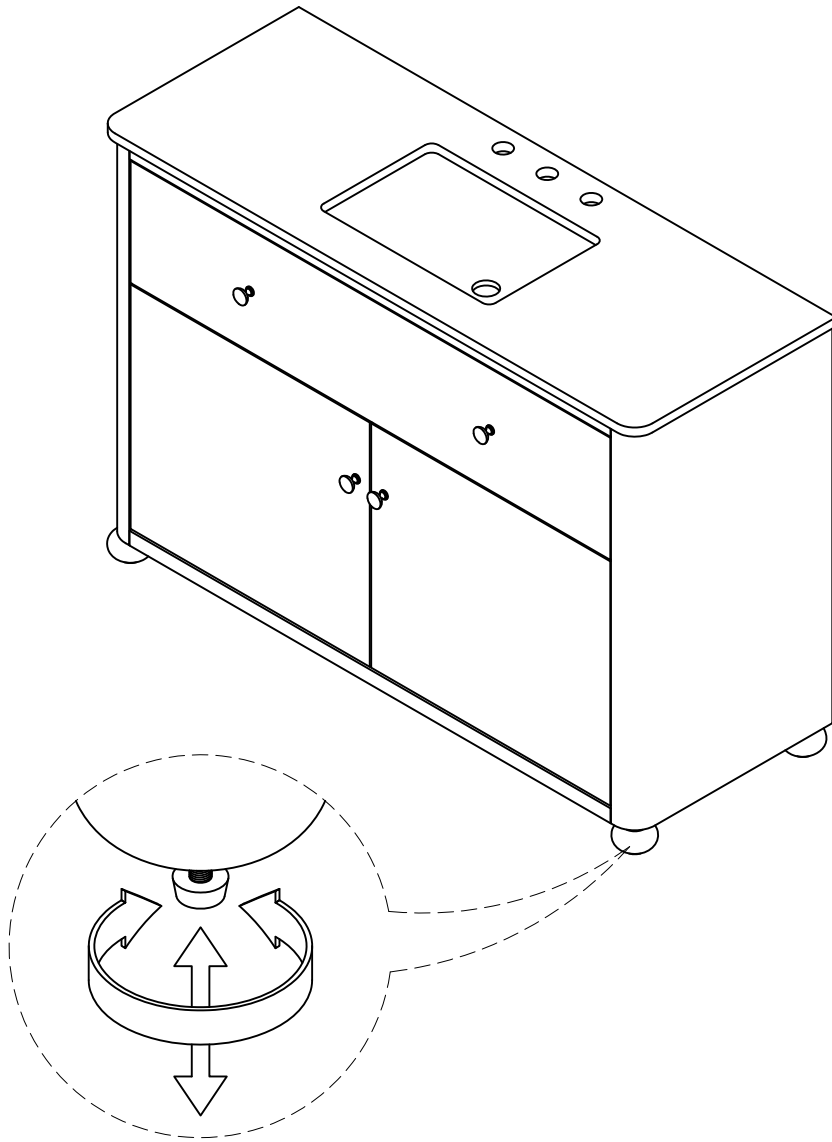

Place the vanity in the place where you will use it. We'd love to see it - just tag us (we're @safavieh) and use the hashtag #safavieh on Instagram!

