
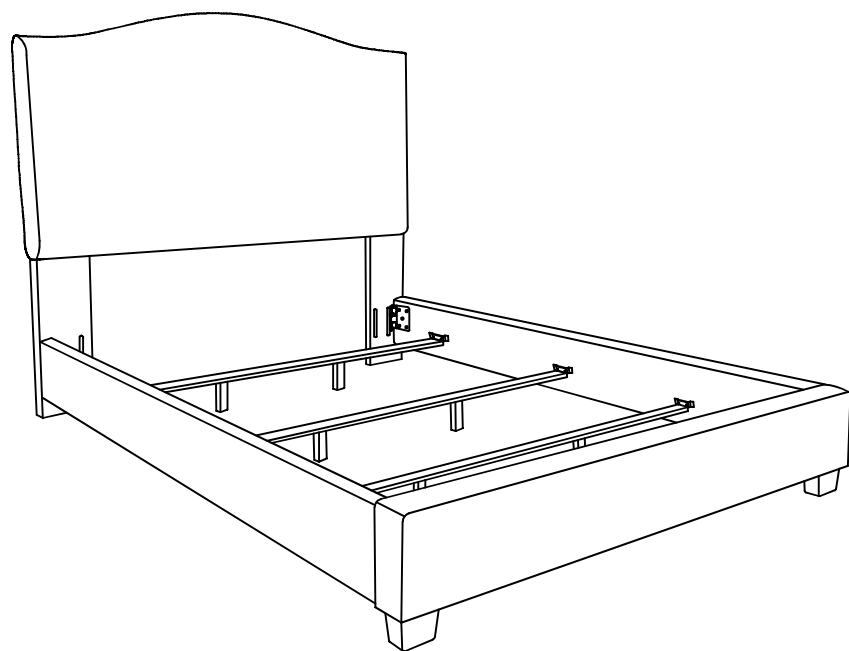
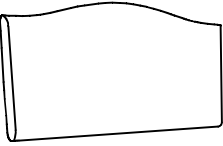


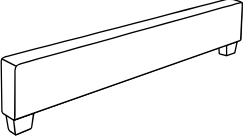
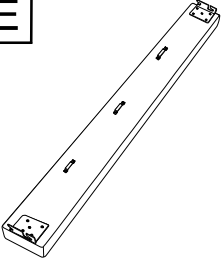



# Upholstered Bed

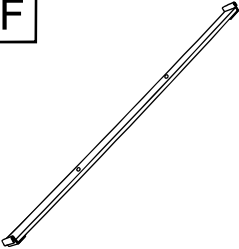

# PART LIST


|                                                                                                |                                                                                                |                                                                                                        |                                                                                                 |                                                                                                  |
|------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------|
| <div>A</div>  | <div>B</div>  | <div>C</div>          | <div>D</div>  | <div>E</div>  |
| Headboard Panel<br>1 PC                                                                        | Left Headboard Post<br>1 PC                                                                    | Right Headboard Post<br>1 PC                                                                           | Footboard Panel<br>1PC                                                                          | Side Rail<br>2 PCS                                                                               |
| <div>F</div>  | <div>G</div>  | <p>*Please note headboard panel, left headboard post and right headboard post will ship separately</p> |                                                                                                 |                                                                                                  |
| Slat<br>3 PCS                                                                                  | Support Leg<br>6 PCS                                                                           |                                                                                                        |                                                                                                 |                                                                                                  |

# HARDWARE LIST

|                                                                                                   |                                                                                                   |                                                                                                   |                                                                                                    |
|---------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------|
| <div>#1</div>  | <div>#2</div>  | <div>#3</div>  | <div>#4</div>  |
| 5/16"x1-3/4"L<br><br>Bolt<br>11PCS(Extra1)                                                        | Spring Washer<br>11PCS(Extra1)                                                                    | Flat Washer<br>11PCS(Extra1)                                                                      | M5<br><br>Allen Wrench<br>1 PC                                                                     |


Step 1. Lay headboard panel (part A) down on a soft surface, such as carpet, as shown below. Attach left headboard post (part B) and right headboard post (part C) to headboard panel (part A) using bolts (part #1), spring washers (part #2), flat washers (part #3) and allen wrench (part #4).

NOTE: Please do not fully tighten bolts until unit is fully assembled.

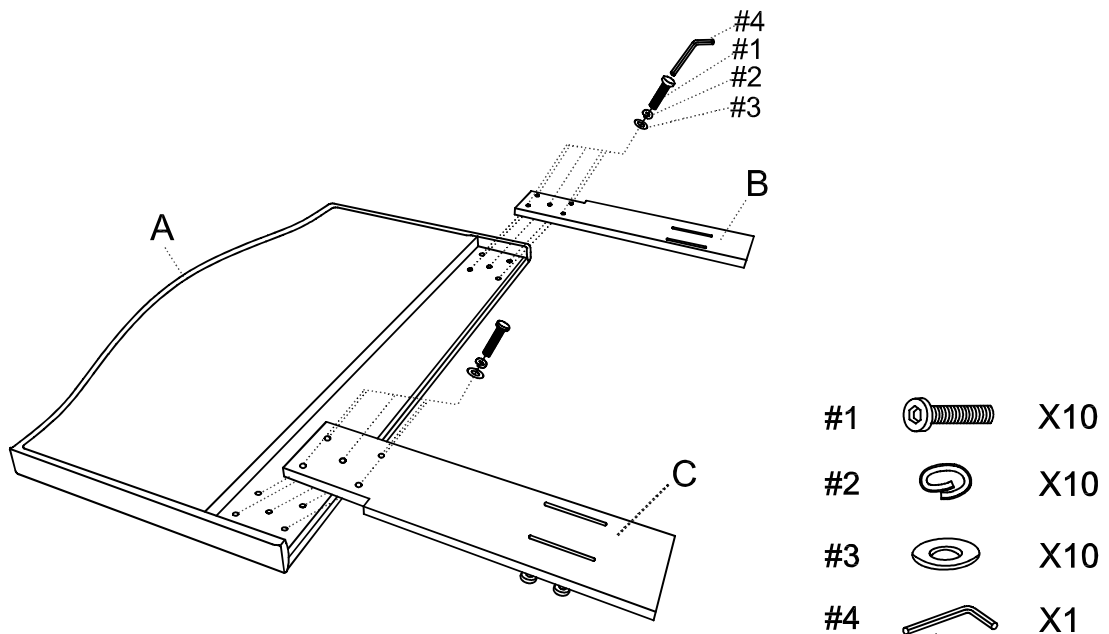


Step 2. Carefully turn assembled headboard upright. Attach side rails (part E) to headboard posts (parts B & C) and footboard panel (part D) using allen wrench (part #4) to screw out the bolts on the headboard posts (parts B & C) and footboard panel (part D), then hang up the side rails (part E) and secure the bolts using allen wrench (part #4).

NOTE: Please do not fully tighten bolts until unit is fully assembled.

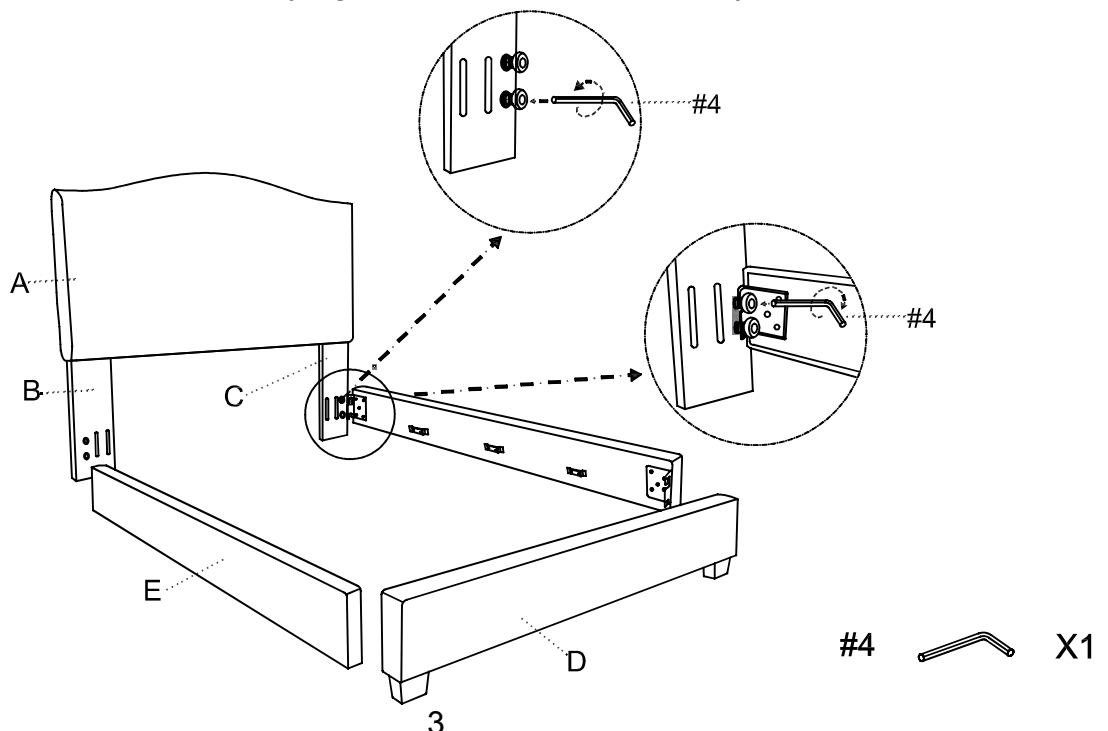

Step 3. Attach support legs (part G) to slats (part F).

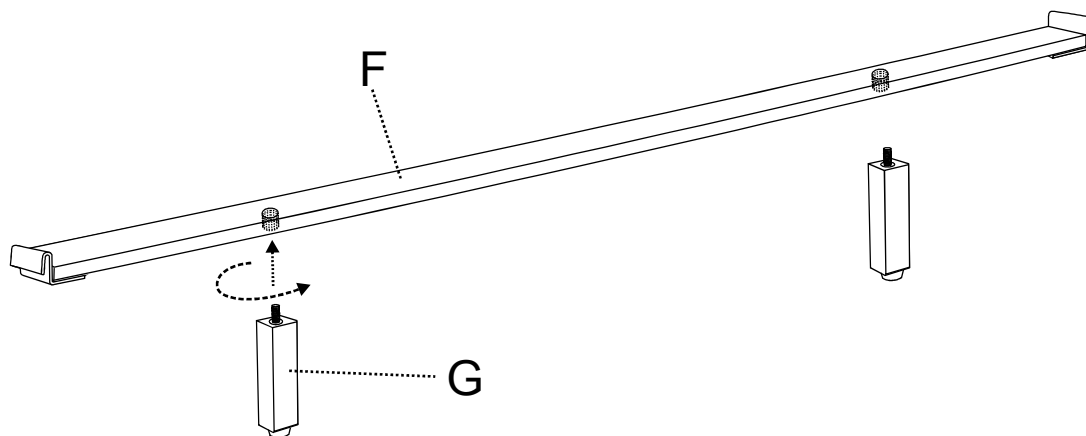

Step 4. Attach assembled slats (parts F & G) to side rails (part E) by fitting the metal supports in place.

NOTE: Please fully tighten all bolts at this time.

