WARNING!!

Furniture Tipping Risk.

Serious risk of severe or fatal crush injuries can occur from furniture tipping over if not secured.

Children like to climb on furniture and Unsecured furniture can pose a serious danger.

Please follow all instructions and install the tip-over restraints provided.

In addition to installing the restraints, to help prevent tip-over:

- 1. Place heaviest items in the lowest drawers,
- 2. Unless specifically designed to accommodate, do not set TV's or other heavy objects on top of this product,
- 3. Never allow children to climb or hang on drawers, doors, or shelves.
- 4. Do no leave drawers open,
- 5. Never open more than one drawer at a time, and
- 6. Do not step on the base.

Assembly Instructions

Caution: You must read this before you proceed

Care & Maintenance



Not for commercial use. For residential use only.



Do not put hot items directly on furniture surface.



Do not clean furniture with harsh cleansers or polish.



 To obtain the longest lifespan of your outdoor products, minimizing exposure to direct sunlight is recommended.



Children should not climb or jump on the furniture.



• Do not write on furniture without a padded barrier to protect the surface.



 To obtain the longest lifespan of your outdoor products, avoid extended and lengthy exposure to rain, snow, and direct sunshine. Whenever possible cover the product and /or place under patio or awnings.




 Stains may be removed with mild soap solution and damp cloth.



 Dust and pick-up spills using a clean, non-colored, lintfree cloth. Please look under the Cabinet for hardware pack.

Cabinet

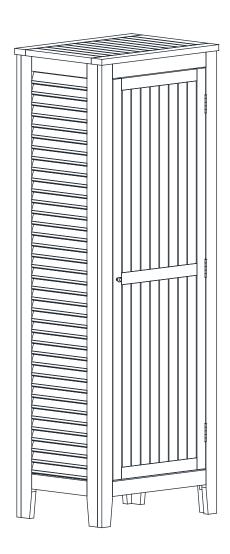

CAUTION: This Cabinet is NOT a TOY. Keep your child / children at bay in the process of assembly.

For turning / flipping the cabinet and to prevent damage to the cabinet, 02 persons may be needed to execute this action.

Parts List				
Label	Picture	Description	Qty	
A		Side panel right	1	
В		Side panel left	1	
С		Back panel	1	
D		Door frame	1	
E		Top panel	1	
F		Removable shelf	4	

<u>Hardware</u>				
Label	Picture	Description	Qty	
1		Screw (M6x 35mm)	13	
2		Bolt (M6 x 35mm)	13	
3		Bolt (M4 x 30 mm)	1	
4		Handle	1	
5		Dowel wood (M8x30mm)	8	
6		Allen Wrench (M4)	1	
7		L-shape Metal Brackets	2	
8	O WARRING TO THE PARTY OF THE P	Plastic Anchor (5F)	3	
9		Washer (Ø6,5x14x1mm)	3	
10	E DITTITION DO	Self Tapping Screws (M5x 40mm)	3	
11)	Opposition.	Self Tapping Screws (M4x20mm)	5	
12		Screwdriver (not provided)		
13		Power Drill (not provided)		
14)		Hammer (not provided)		

Assembly Preparation Before Beginning Assembly: x 13 x 13 х3 x 1 х3 x 5 x 8 x not provided x 1 x not provided x not provided



Read instructions, cover to cover.




Have 2 adults on hand for assembly. Do not assemble on flooring or carpet.




Assemble on a clean non-marring surface (packing foam).




Save all packaging until finished.

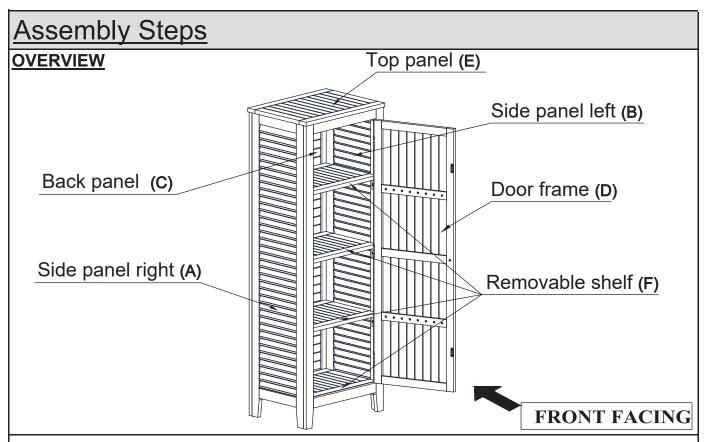

This Cabinet has multiple parts and may require up to 45 minutes to assemble. To give you an overview of the Cabinet parts, we've provided the above picture to put the various parts in perspective. Please read through the instructions below to familiarise yourself with the parts and steps before assembly.

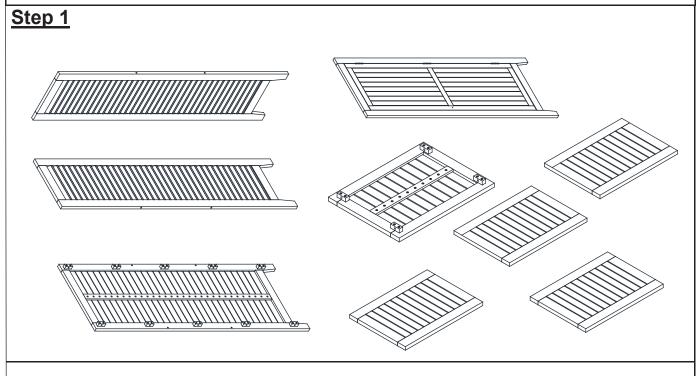


Unpack and place all parts on a clean, non-marring surface.

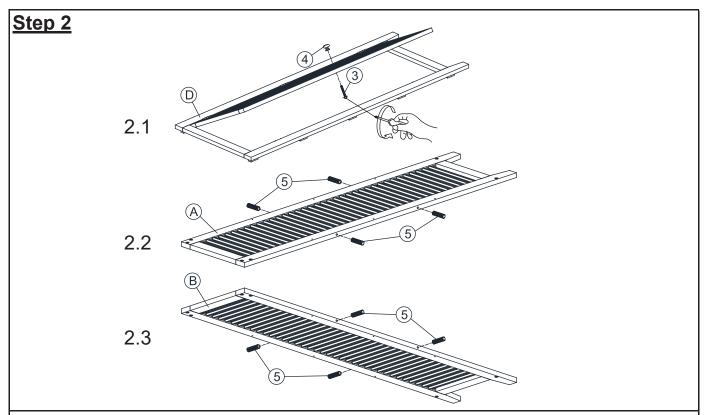


With assistance from your adult partner, please carefully place the panels on a clean surface, scratch-free surface as shown, as shown in the above picture.

Step 2.1: Attach Handle (4) to the Door Frame (D) with Bolt (3) using a Screwdriver (12) (Not Provided).


Step 2.2 + step 2.3: Attach Dowel wood (5) to the Side Panel Right (A) and Side Panel Left (B) fixed position.

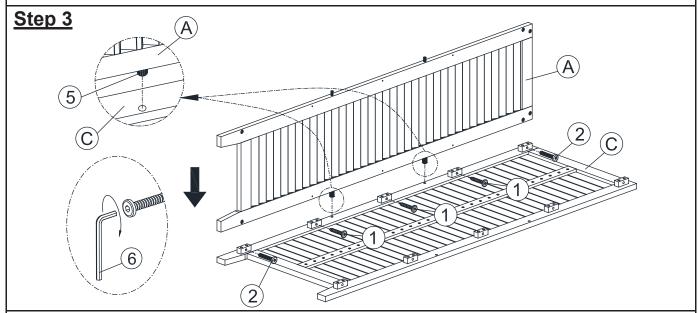


From step 2, attach Back Panel (C) to the Side Panel Right (A) to the wooden dowel position hole. Use Allen Wrench (6) to link the two panel with Bolts (2) and Screws (1). DO NOT: Fully tighten the bolts and Screw

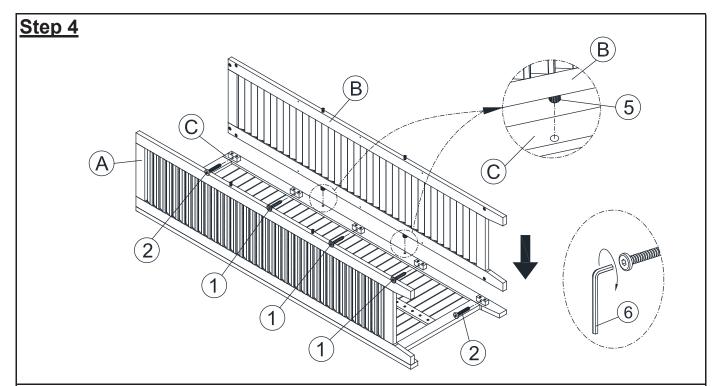


From step 3, Using the Allen Wrench (6), attach Side Panel Left (B) into assembly Back Panel (C) as shown above by using Bolts (2) and Screw (1). DO NOT: Fully tighten the bolts and Screw

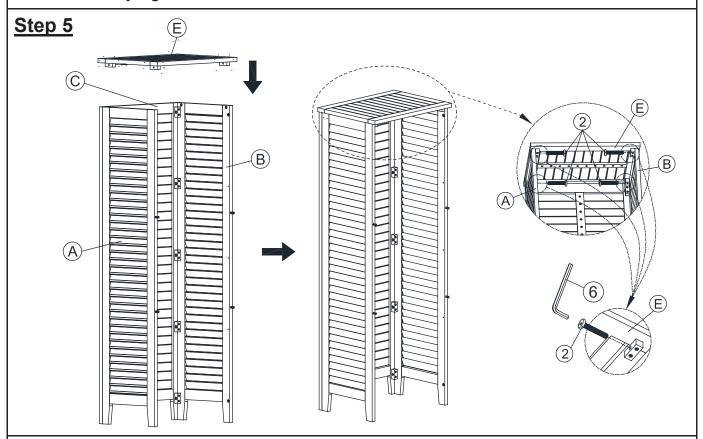

Stand up the assemble in step 4, then using the Allen Wrench (6), attach Top Panel (E) to the assembly in step 4 as shown above by using Bolts (2). DO NOT: Fully tighten the bolts

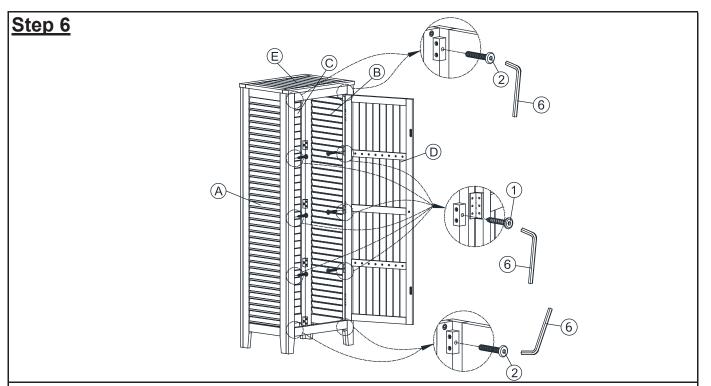


From step 5, Attach Door Frame (D) into the wooden dowel position hole. After open Door Frame. Next using Bolts (2) and screw (1) by Allen Wrench (6)In a sequential manner, gradully tighten all Bolts and Screws until evenlysecured

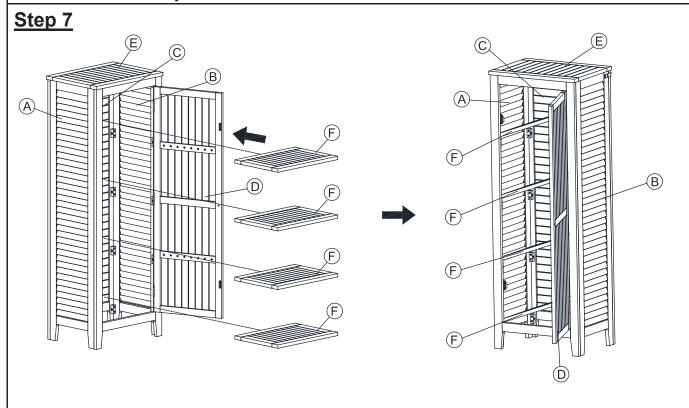


From step 6, Rotate the Removable shelf (F) to place it inside the cabinet. as shown in the above picture.

Step 8

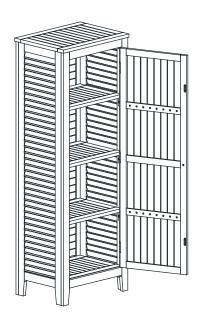

After step 7, Put removable shelf inside the cabinet as shown in the picture

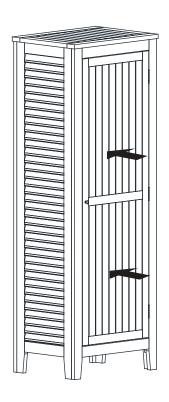

Inspect the cabinet and make sure all parts are adequately connect Your Cabinet is ready for you


Cabinet Restraint Device Installation Instruction

⚠ WARNING

Serious or fatal crushing injuries can occur from tipping furniture.


To help prevent tip-over: ALWAYS secure this furniture to the wall using Nightstand Restraint Device.

See product instructions for more ways to help prevent furniture tip-overs.

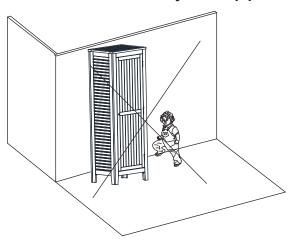


Uasge For Cabinet Restraint Device

To secure the Cabinet against the wall, affix 2pcs Metal Brackets (7) to the wall and to the Cabinet, then use the Self tapping screws (10) to connect the Brackets (7) to the wall. Find details as below:

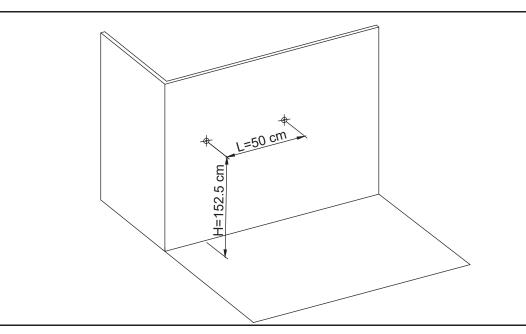


A : Determine the location where the screws should be inserted into the wall. Mark the point at the same height and lenght on the wall as shown above.

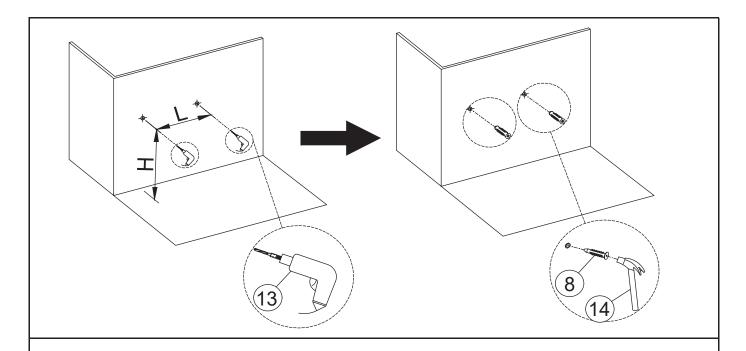

B: Affix the Plastic Anchor to the wall


Using a Power Drill(13)(not provided), drill a hole in the wall, then insert a Plastic Anchor (8) into the hole using a Hammer(14) (not provided). Repeat this step to affix the other Plastic Anchor (8) into the wall, as shown above.

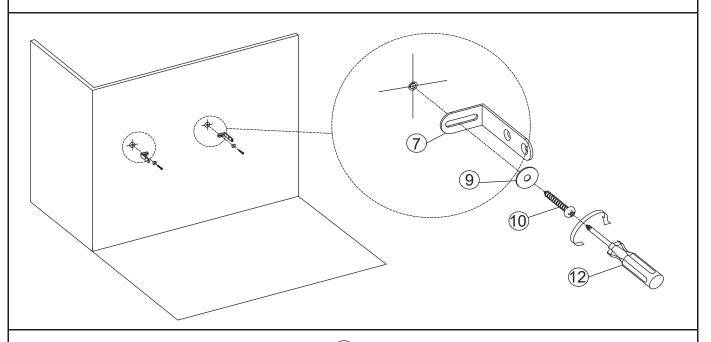

C: Affix the L-shaped Metal Bracket (7) to the wall.

Then affix one L-shaped Metal Bracket (7) to the hole in the wall using the Self Tapping Screws (10), Washer (9) and Screwdriver (12) (not provided), as shown above.

Repeat this step to affix the other Metal Bracket (7) to the wall as shown above.height.

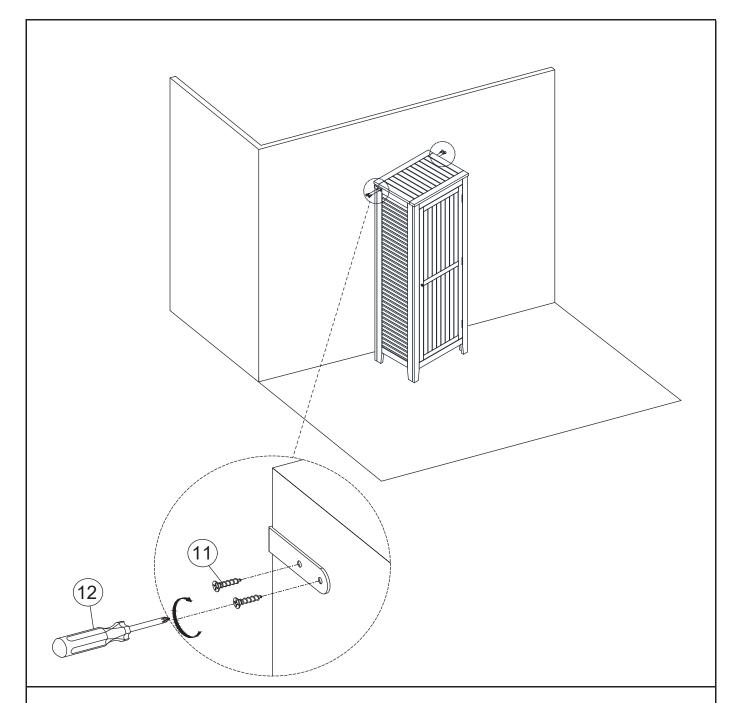

D: Move the Cabinet against the wall. Then connect the L-shaped Metal Bracket (7) to Cabinet position in the wall using the Self Tapping Screws (11) and Screwdriver (12)(not provided), as shown above. The Cabinet Restraint Device is now installed and is ready for use.