

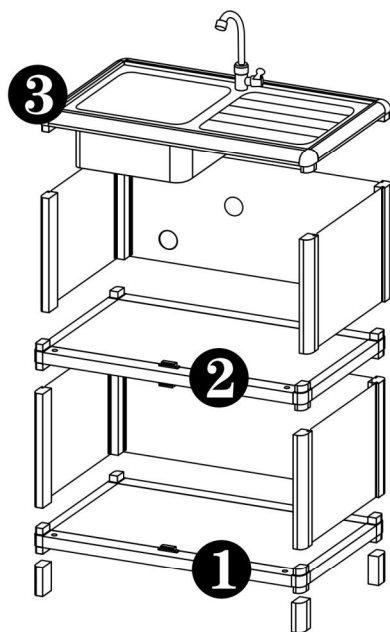

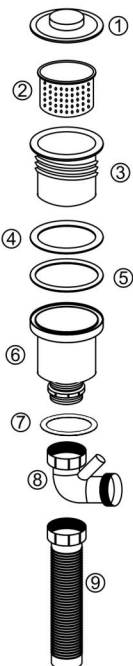

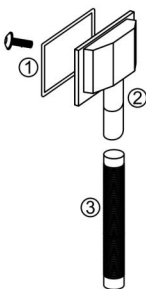


Assembly Drawing




No	Parts	Qty	No		No	
A	  Feet	X4	K	 Faucet	M	Basin funnel and outlet pipe 
B	  Standpipe	X8				
C	 Sideboard	X4				
D	 Backboard	X1				
E	 Backboard	X1	L	 Water basin side leakage pipe		
F	 Door	X4				
G	 Door handle	X4				
H	 Install handle screws	X8				
I	 Foot mat	X4				
J	 Inlet pipe	X1				


- 1** First, turn the bottom board upside down, the magnet facing downwards, install foot (A) on the plastic part and use glue hammer to tighten it, then screw the (I) into the foot.

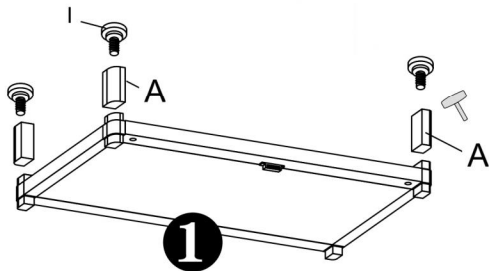


2

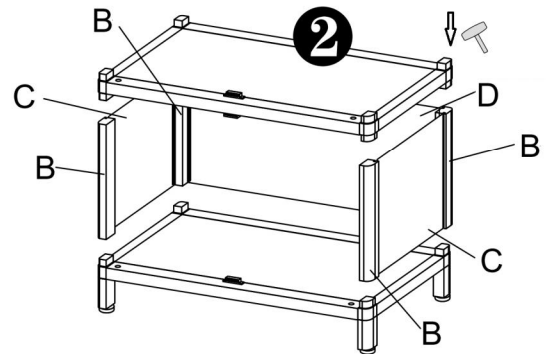


3

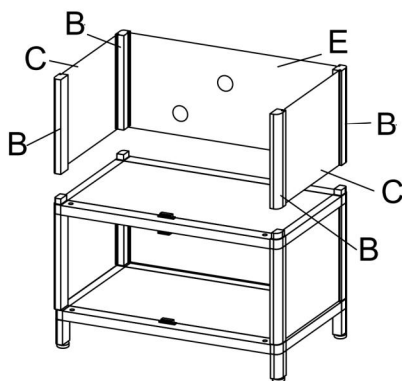


4

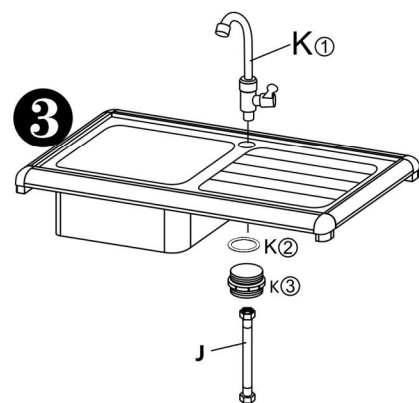


5

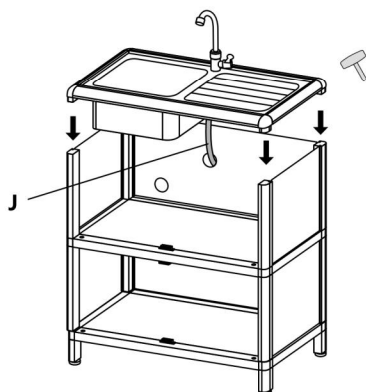


6

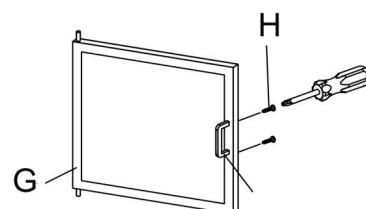


7

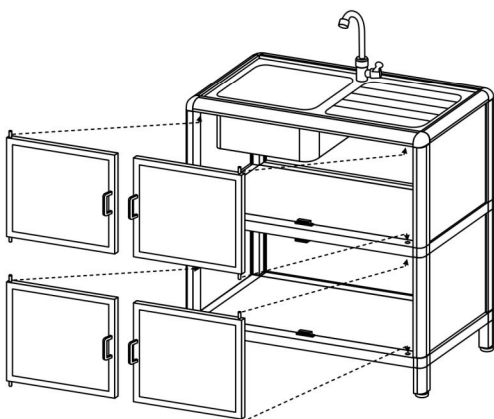


8

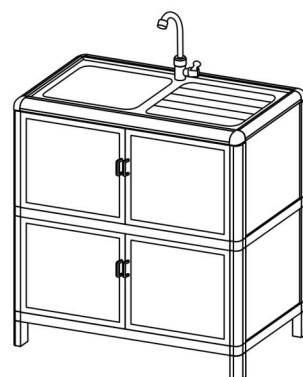

9

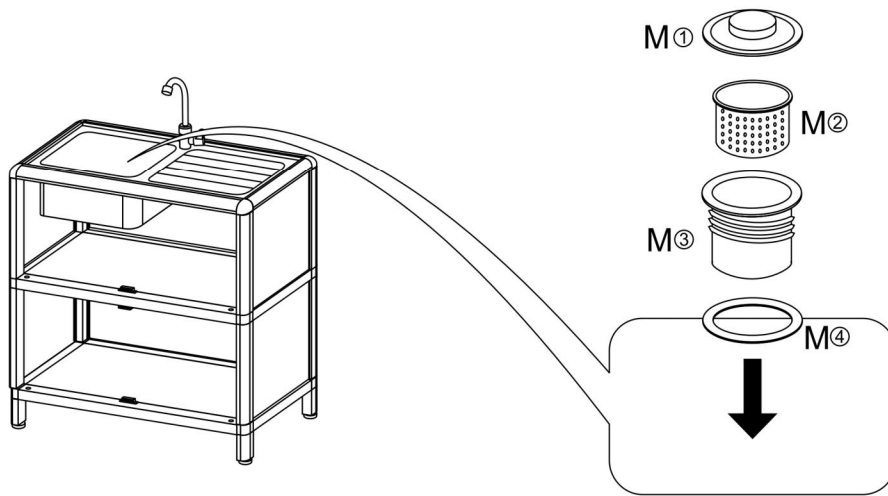

10

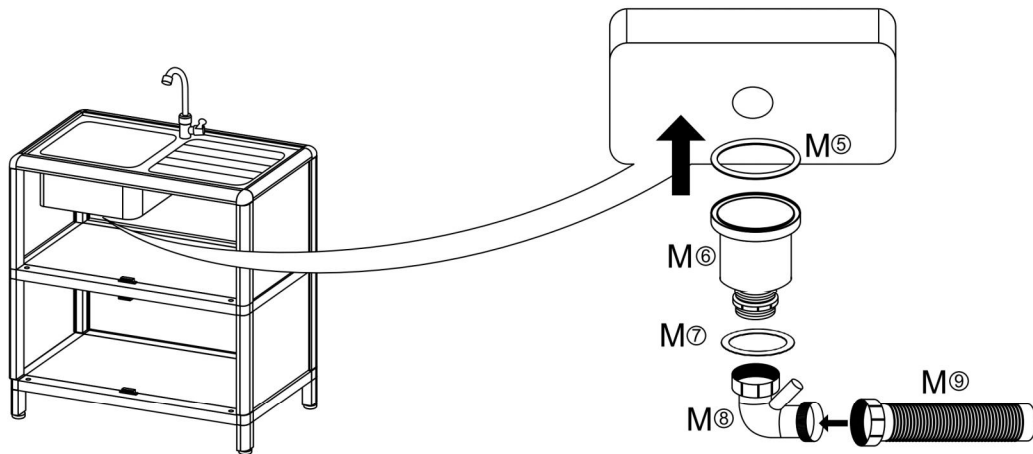

11

