


ASSEMBLY INSTRUCTIONS

EEI-7203

V2.01.21.25

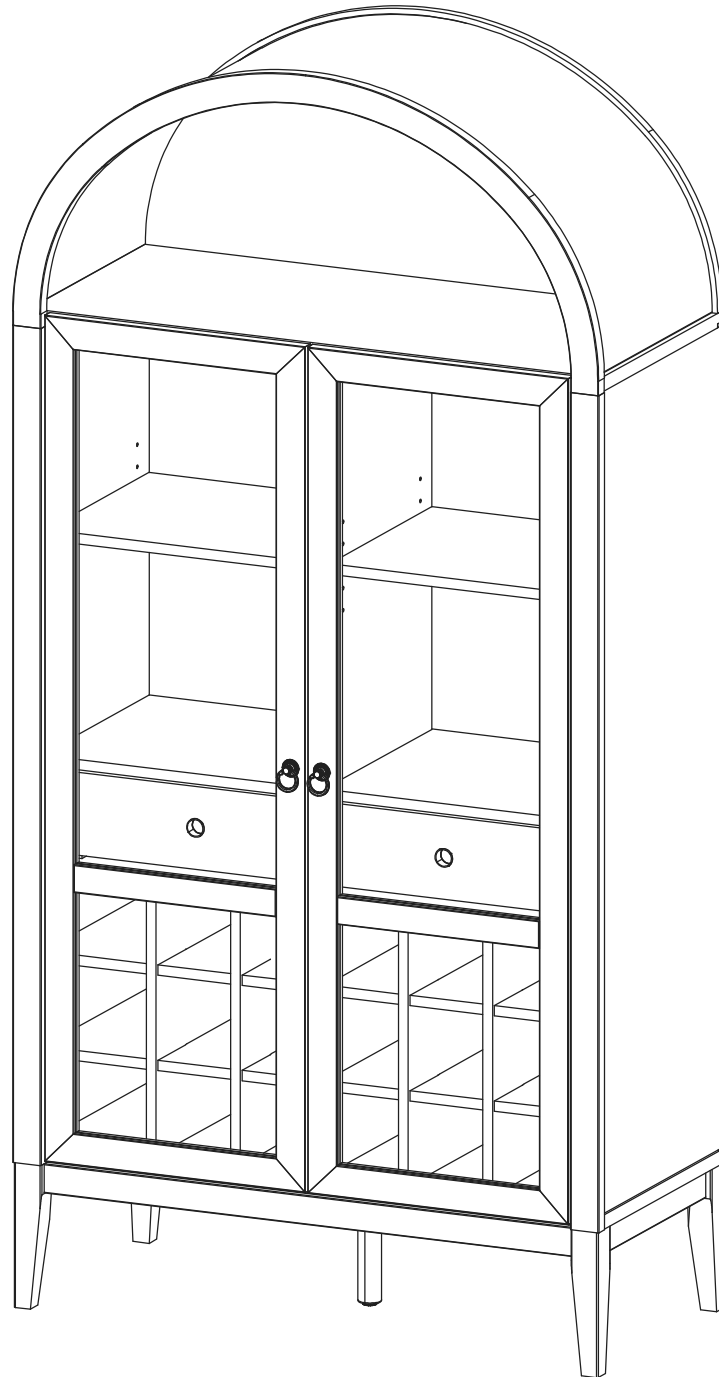

Questions? Contact us!

609.256.9000 • cs@modway.com
www.modway.com

*modway



Read through all of the instructions before starting



Approx. 90 minutes assembly time



2 people recommended for assembly



Care instructions are listed in the last step of this manual



Make sure you have all parts and components before discarding any packing materials

Only use hand tools to assemble this item. Do not use power tools. Do not tighten bolts or screws completely until all hardware is lined up and inserted into the holes.

Do not over-tighten screws and bolts to avoid stripping the hardware or cracking the item.

Assemble your item on a flat, carpeted area, with plenty of space to work. This will prevent damage and scratches to your floors or the item while you're assembling the product.

Keep all components and packaging out of reach of children or animals to avoid risk of choking or suffocation.

Furniture components:

1	Top Board	x1
2	Bottom Board	x1
3	Side Board Left	x1
4	Side Board Right	x1
5	Front Board Hutch	x1
6	Support Board Hutch	x3
7	Back Board Hutch	x1
8	PVC Board	x1
9	Bottom Skirt 1	x1
10	Bottom Skirt 2	x1
11	Bottom Skirt 3	x2
12	Leg	x4
13	Front Skirt 1	x1
14	Front Skirt 2	x1
15	Center Board 1	x1

16	Adjustable Shelf	x2
17	Side Board Drawer 1	x1
18	Side Board Drawer 2	x1
19	Support Board 1	x2
20	Center Board 2	x1
21	Fixed Shelf 1	x1
22	Front Drawer	x2
23	Side Drawer Left	x2
24	Side Drawer Right	x2
25	Back Drawer	x2
26	Bottom Drawer	x2
27	Door Left	x1
28	Door Right	x1
29	Fixed Shelf 2	x1
30	Center Board 3	x1

31	Fixed Shelf 3	x4
32	Center Board 4	x4
33	Stemware Holder 1	x4
34	Stemware Holder 2	x4
35	Back Board 1	x2
36	Back Board 2	x1
37	Back Board 3	x1
LC20A1	Center Leg	x1

Wait!

Missing parts or hardware? Need assistance?
Contact us before returning your item. We're here to help!
609.256.9000 • cs@modway.com

Let's get started!

*modway



Read through all of the instructions before starting



Care instructions are listed in the last step of this manual



Approx. 90 minutes assembly time



Make sure you have all parts and components before discarding any packing materials



2 people recommended for assembly



Only use hand tools to assemble this item. Do not use power tools. Do not tighten bolts or screws completely until all hardware is lined up and inserted into the holes.

Do not over-tighten screws and bolts to avoid stripping the hardware or cracking the item.

Assemble your item on a flat, carpeted area, with plenty of space to work. This will prevent damage and scratches to your floors or the item while you're assembling the product.

Keep all components and packaging out of reach of children or animals to avoid risk of choking or suffocation.



Furniture components:

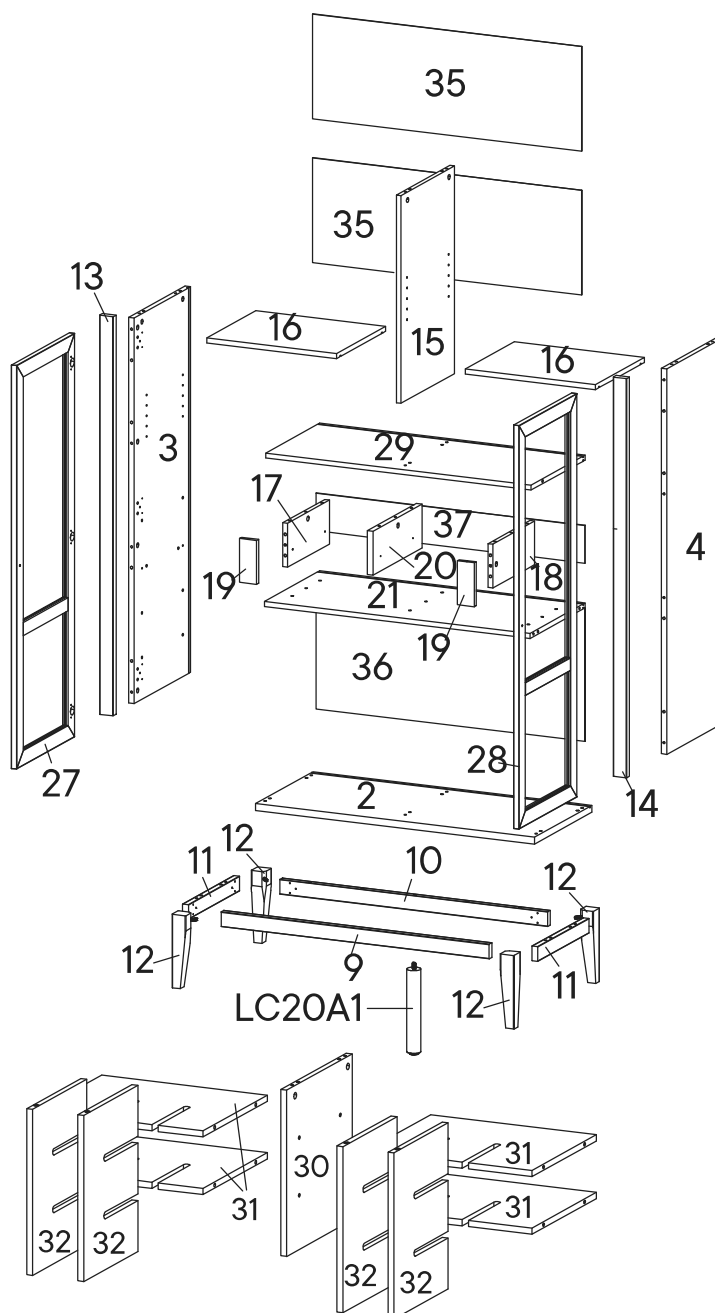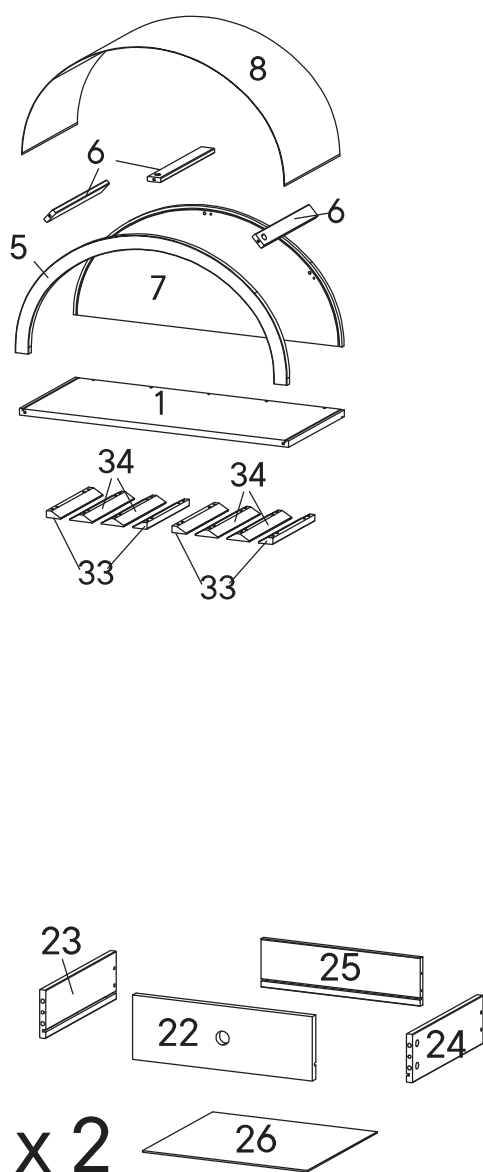

Wait!

Missing parts or hardware? Need assistance?
Contact us before returning your item. We're here to help!
609.256.9000 • cs@modway.com

Provided hardware:

A		Cam Bolt Ø6 x 35 mm	x41	N		Screw M 3.5 x 15.5 mm	x38	AA		Screw M 3.5 x 13 mm	x12
B		Cam Lock Ø15 mm	x33	O		Screw M 7 x 50 mm	x11	AB		Wood Dowel Ø6 x 30 mm	x4
C		Wood Dowel Ø8 x 30 mm	x75	P		Screw Cap Ø15 mm	x4	AC		Handle	x2
D		Screw M 6.4 x 14 mm	x3	Q		Plate	x3	AD		Wood Dowel Ø8 x 50 mm	x8
E		Shelf Pin	x8	R		Screw M 6.4 x 53 mm	x7	AE		Floor Protector	x4
F		Screw M 6.4 x 25 mm	x6	S		Cam Lock Ø12 mm	x8	AF		Pin Per	x4
G		Screw Cap Ø15 mm	x12	T		Joining Strip	x1	AG		List	x2
H		Screw M 4.5 x 12.5 mm	x79	U		Support Hinge	x6	HS26C		Hinge	x6
I		Handle	x2	V		Silicon Bumper	x4	BC410		Corner Brace	x4
J		Screw M 4 x 22 mm	x2	W		Flange Nut	x4	RM30A		Drawer Runner	x2
K		Screw M 6.4 X 35 mm	x16	X		Wrench	x1	PM3		Mounting Plate	x1
L		Allen Key	x2	Y		Screw M 8 x 39 mm	x11	What you need:   Phillips Head Screwdriver			
M		Wedge	x38	Z		Screw M 6 x 10.5 mm	x8				

Wait!

Missing parts or hardware? Need assistance?
Contact us before returning your item. We're here to help!
609.256.9000 • cs@modway.com

Components Carton Placement

Carton 1 of 2

Label	Description	Qty
1	Top Board	x1
2	Bottom Board	x1
5	Front Board Hutch	x1
6	Support Board Hutch	x3
7	Back Board Hutch	x1
12	Leg	x4
15	Center Board 1	x1
16	Adjustable Shelf	x2
21	Fixed Shelf 1	x1
22	Front Drawer	x2
23	Side Drawer Left	x2
24	Side Drawer Right	x2
25	Back Drawer	x2
26	Bottom Drawer	x2
29	Fixed Shelf 2	x1

Carton 2 of 2

Label	Description	Qty
30	Center Board 3	x1
31	Fixed Shelf 3	x4
32	Center Board 4	x4
33	Steamware Holder 1	x4
34	Steamware Holder 2	x4
35	Back Board 1	x2
36	Back Board 2	x1
37	Back Board 3	x1
LC20A1	Center Leg	x1
	Hardware Pack	x1
3	Side Board Left	x1
4	Side Board Right	x1
8	PVC Board	x1
9	Bottom Skirt 1	x1
10	Bottom Skirt 2	x1
11	Bottom Skirt 3	x2
13	Front Skirt 1	x1
14	Front Skirt 2	x1
17	Side Board Drawer 1	x1
18	Side Board Drawer 2	x1
19	Support Board 1	x2
20	Center Board 2	x1
27	Door Left	x1
28	Door Right	x1



Missing parts or hardware? Need assistance?
Contact us before returning your item. We're here to help!
609.256.9000 • cs@modway.com


Step 1

HARDWARE

- A** Cam Bolt Ø6 x 35 mm x8
- AB** Wood Dowel Ø6 x 30 mm x4

COMPONENTS

- 22** Front Drawer x2
- 23** Side Drawer Left x2
- 24** Side Drawer Right x2

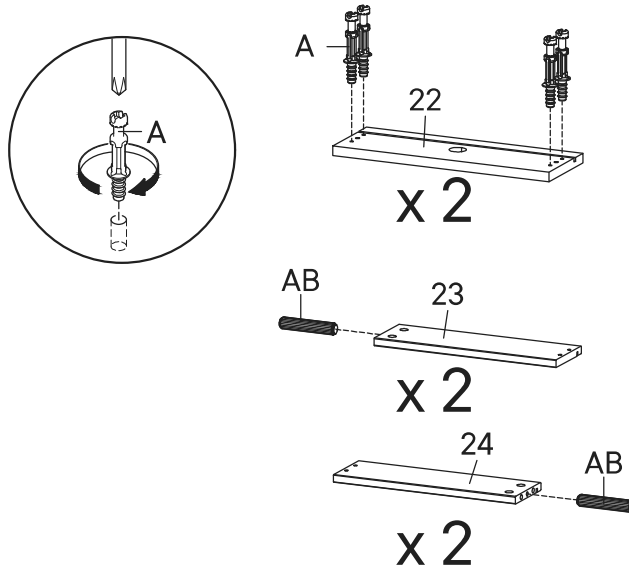


Step 2

HARDWARE

- S** Cam Lock Ø12 mm x8

COMPONENTS

- 22** Front Drawer x2
- 23** Side Drawer Left x2
- 24** Side Drawer Right x2
- 26** Bottom Drawer x2

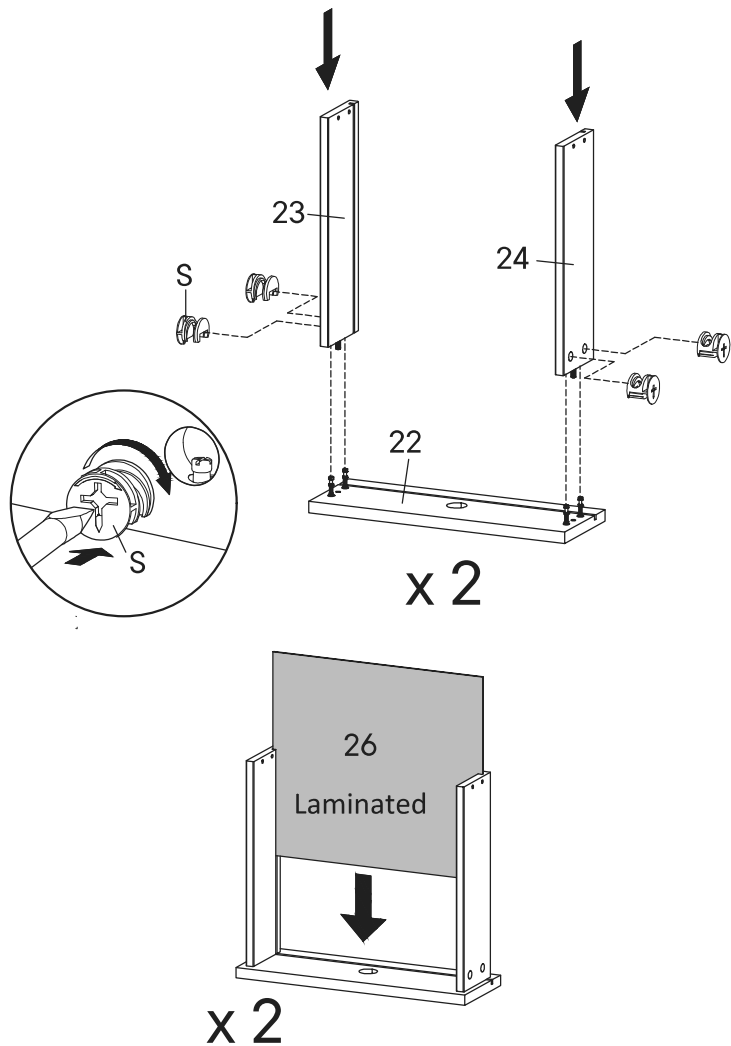


Step 3

HARDWARE

Y Screw M 8 x 39 mm x8

COMPONENTS

25 Back Drawer x2

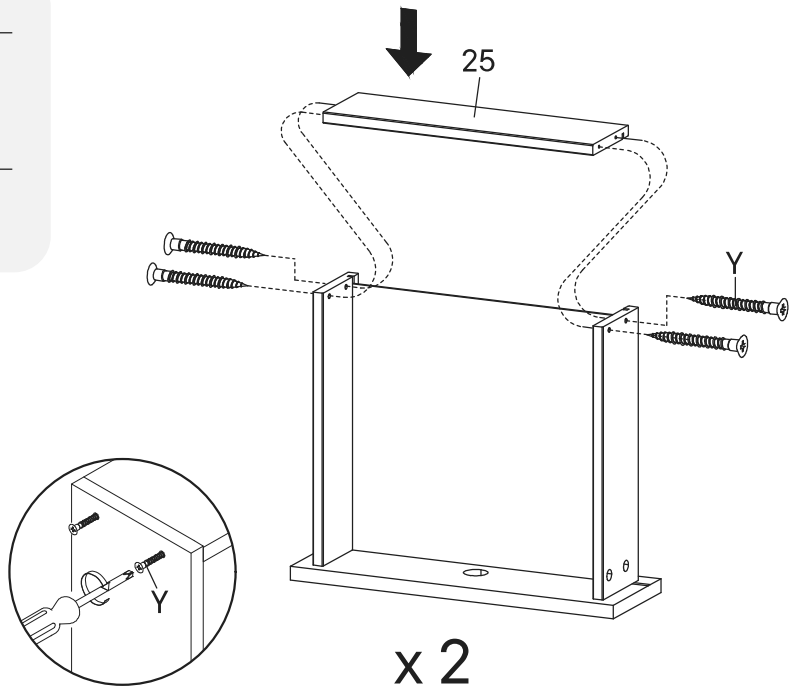


Step 4

HARDWARE

AA Screw M 3.5 x 13 mm x12




RM30A Drawer Runner x2

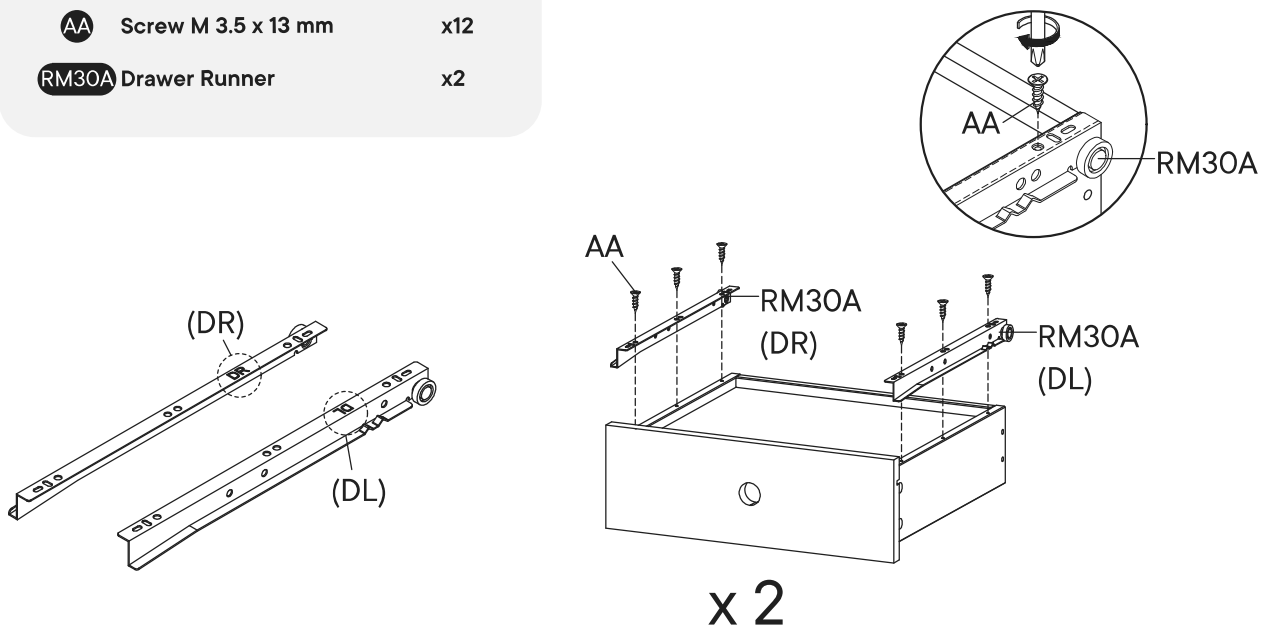


Step 5

HARDWARE

M	Wedge	x8
N	Screw M 3.5 x 15.5 mm	x8
AC	Handle	x2

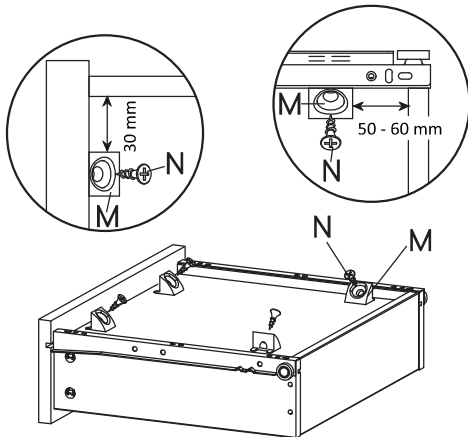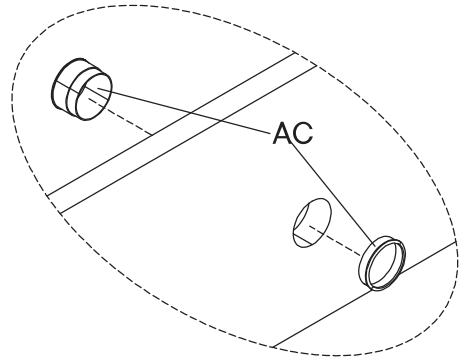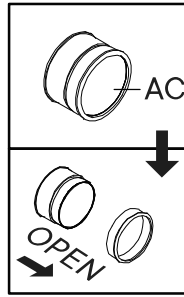

x 2

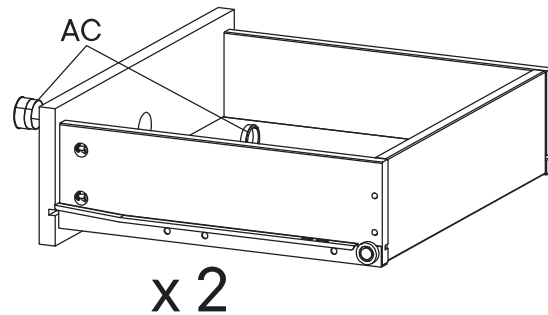

x 2



Step 6

HARDWARE

A	Cam Bolt Ø6 x 35 mm	x4
C	Wood Dowel Ø8 x 30 mm	x16

COMPONENTS

3	Side Board Left	x1
4	Side Board Right	x1

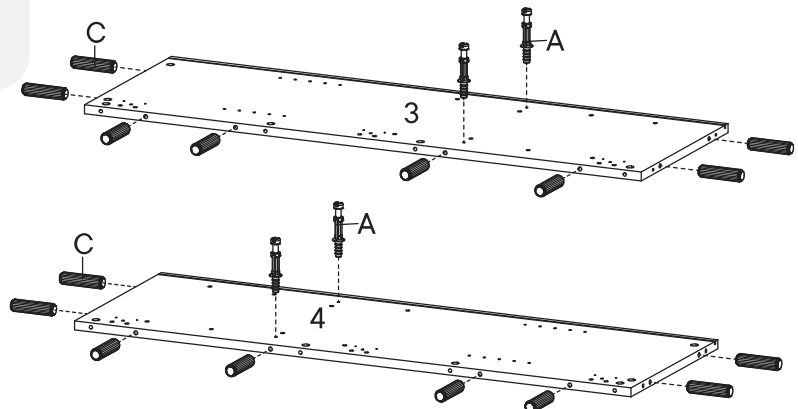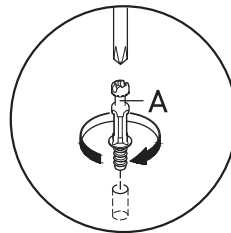


Step 7

HARDWARE

F	Screw M 6.4 x 25 mm	x6
H	Screw M 4.5 x 12.5 mm	x12
L	Allen Key	x1
U	Support Hinge	x6

COMPONENTS

3	Side Board Left	x1
4	Side Board Right	x1

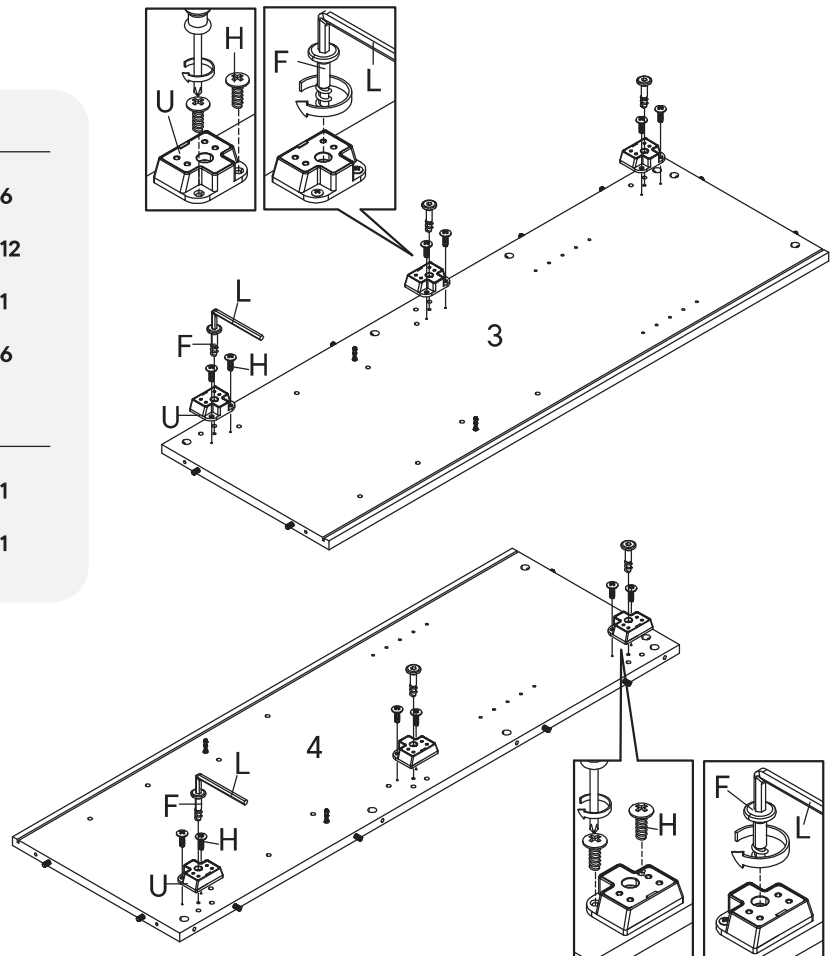


Step 8

HARDWARE

A	Cam Bolt Ø6 x 35 mm	x3
C	Wood Dowel Ø8 x 30 mm	x12
AD	Wood Dowel Ø8 x 50 mm	x2

COMPONENTS

15	Center Board 1	x1
21	Fixed Shelf 1	x1
29	Fixed Shelf 2	x1
30	Center Board 3	x1

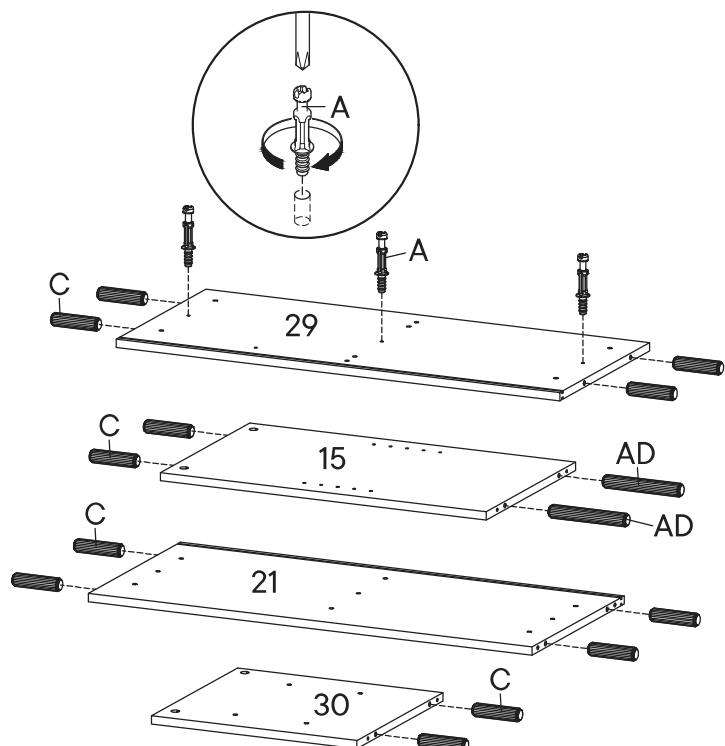


Step 9

HARDWARE

- | | | |
|----------|-------------------|----|
| L | Allen Key | x1 |
| O | Screw M 7 x 50 mm | x2 |

COMPONENTS

- | | | |
|-----------|----------------|----|
| 15 | Center Board 1 | x1 |
| 29 | Fixed Shelf 2 | x1 |

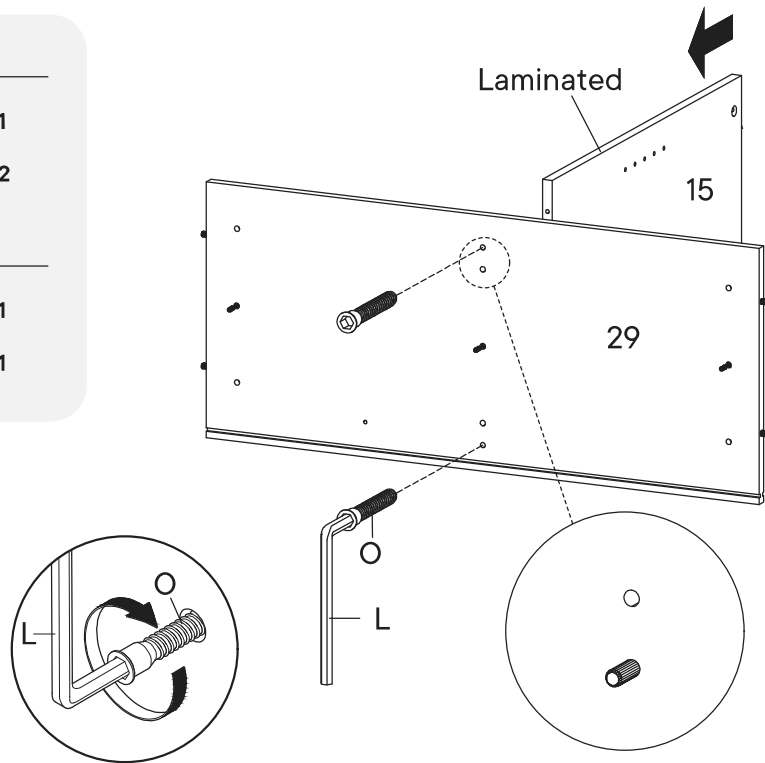


Step 10

HARDWARE

- | | | |
|----------|-----------------------|-----|
| A | Cam Bolt Ø6 x 35 mm | x2 |
| C | Wood Dowel Ø8 x 30 mm | x12 |

COMPONENTS

- | | | |
|-----------|---------------------|----|
| 17 | Side Board Drawer 1 | x1 |
| 18 | Side Board Drawer 2 | x1 |
| 19 | Support Board 1 | x2 |

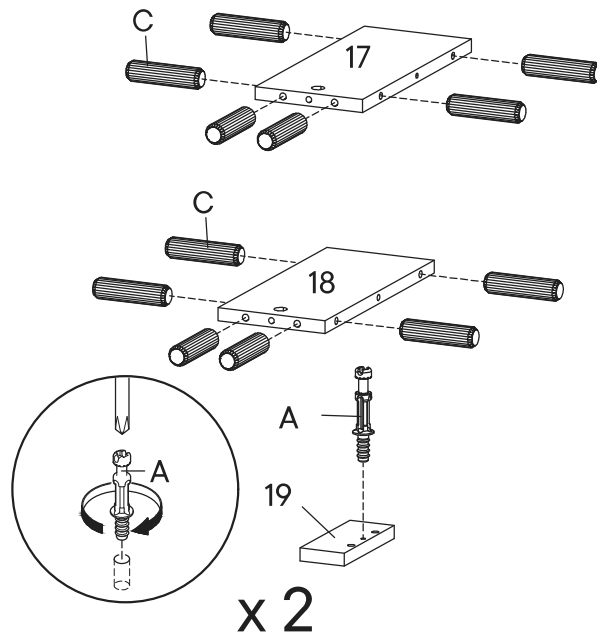

Step 11

HARDWARE


B Cam Lock Ø15 mm x2

COMPONENTS

17 Side Board Drawer 1 x1

18 Side Board Drawer 2 x1

19 Support Board 1 x2

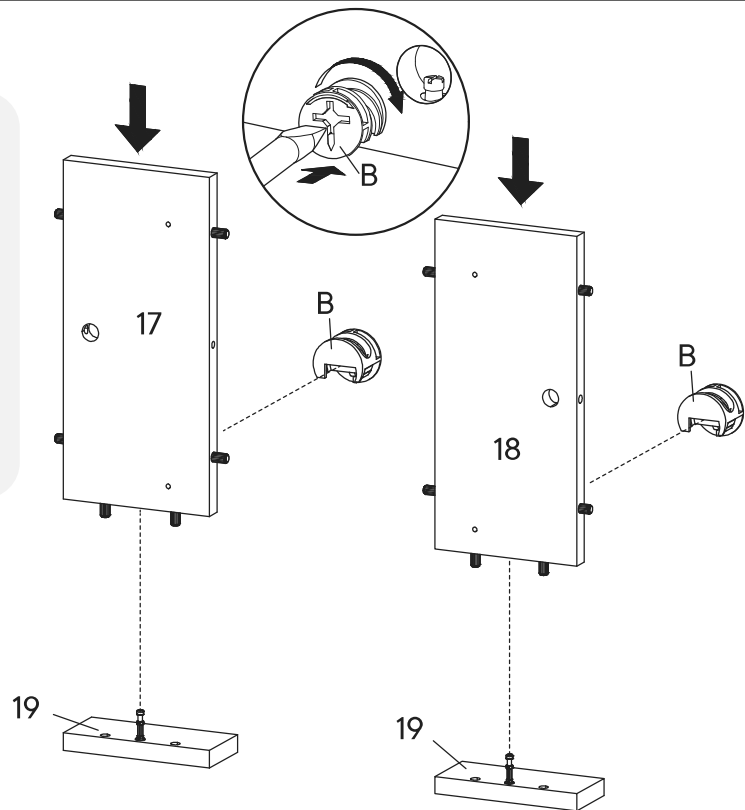

Step 12


HARDWARE

Z Screw M 6 x 10.5 mm x2

RM30A Drawer Runner x1

COMPONENTS

17 Side Board Drawer 1 x1

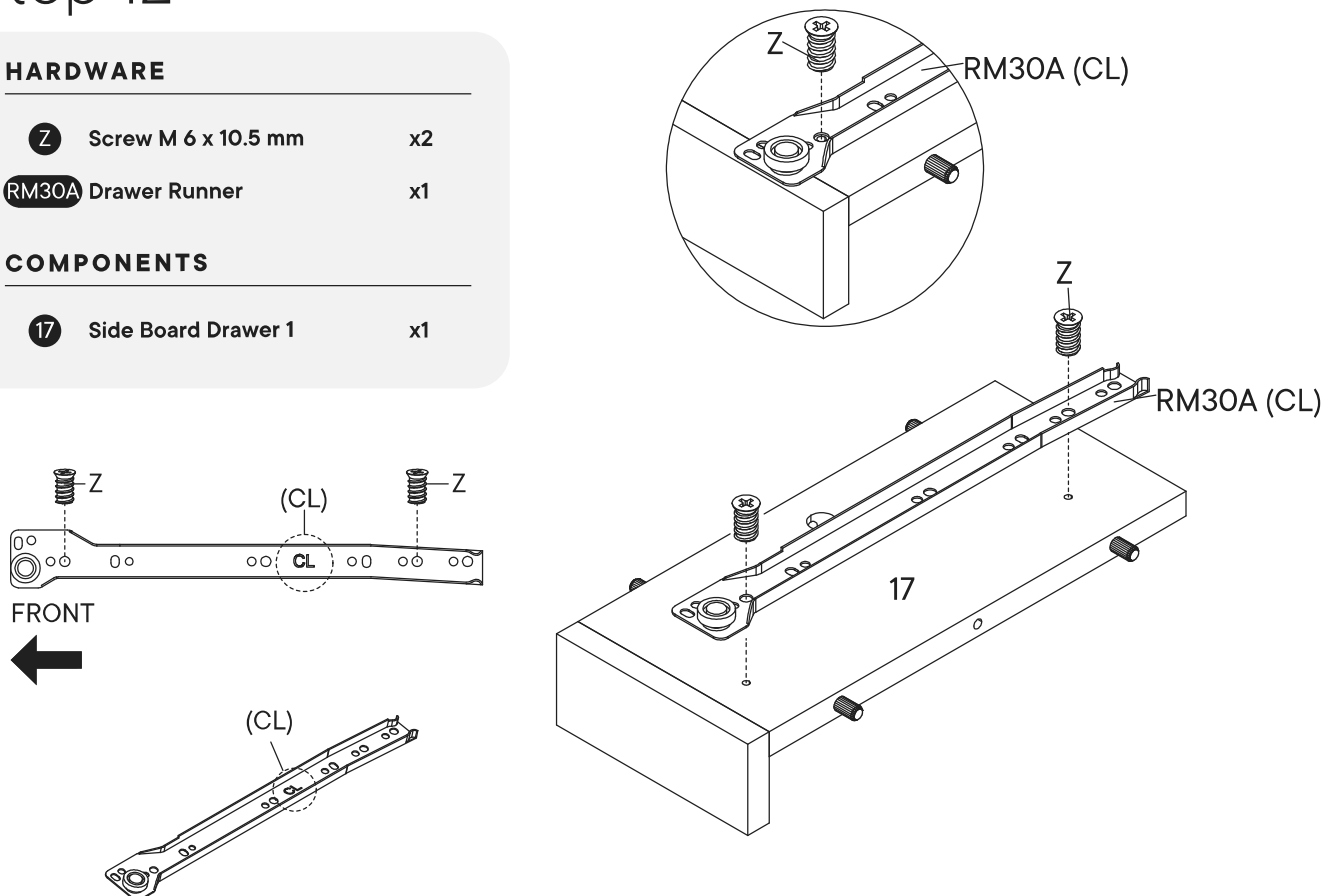

Step 13



HARDWARE

Z Screw M 6 x 10.5 mm x2

RM30A Drawer Runner x1

COMPONENTS

18 Side Board Drawer 2 x1

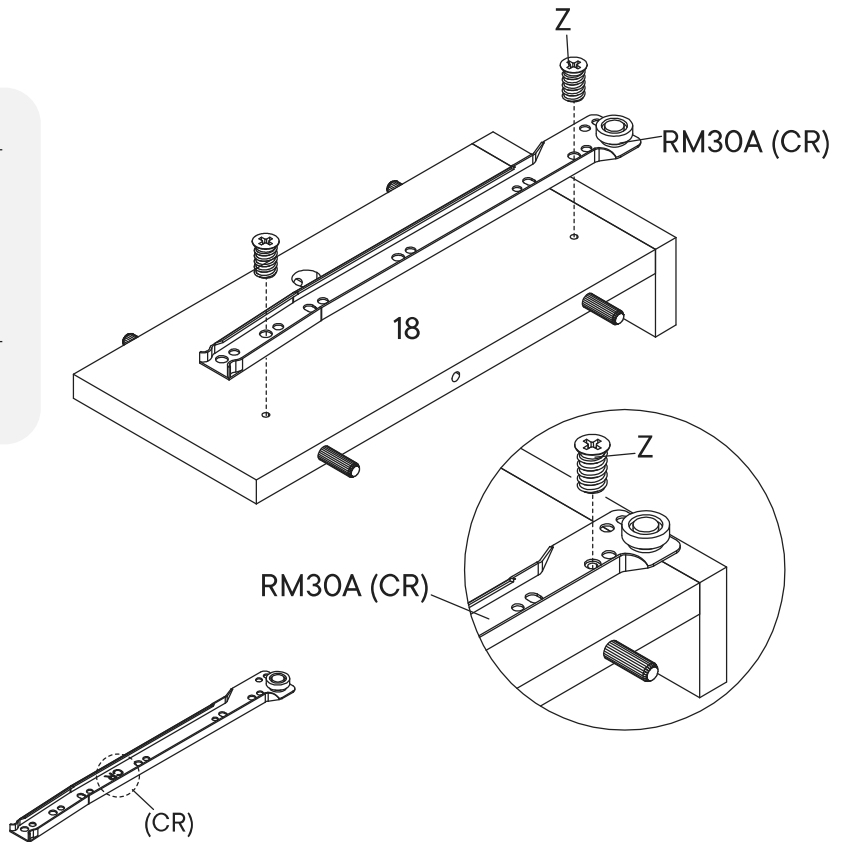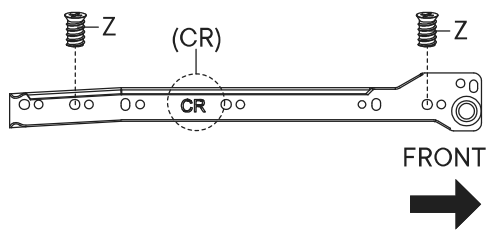

Step 14

HARDWARE




Z Screw M 6 x 10.5 mm x4

AD Wood Dowel Ø8 x 50 mm x2

RM30A Drawer Runner x1

COMPONENTS

20 Center Board 2 x1

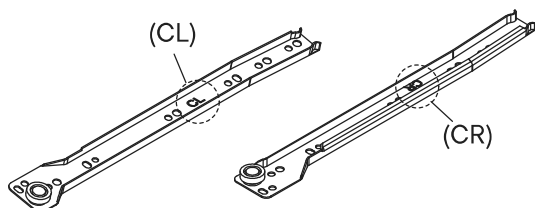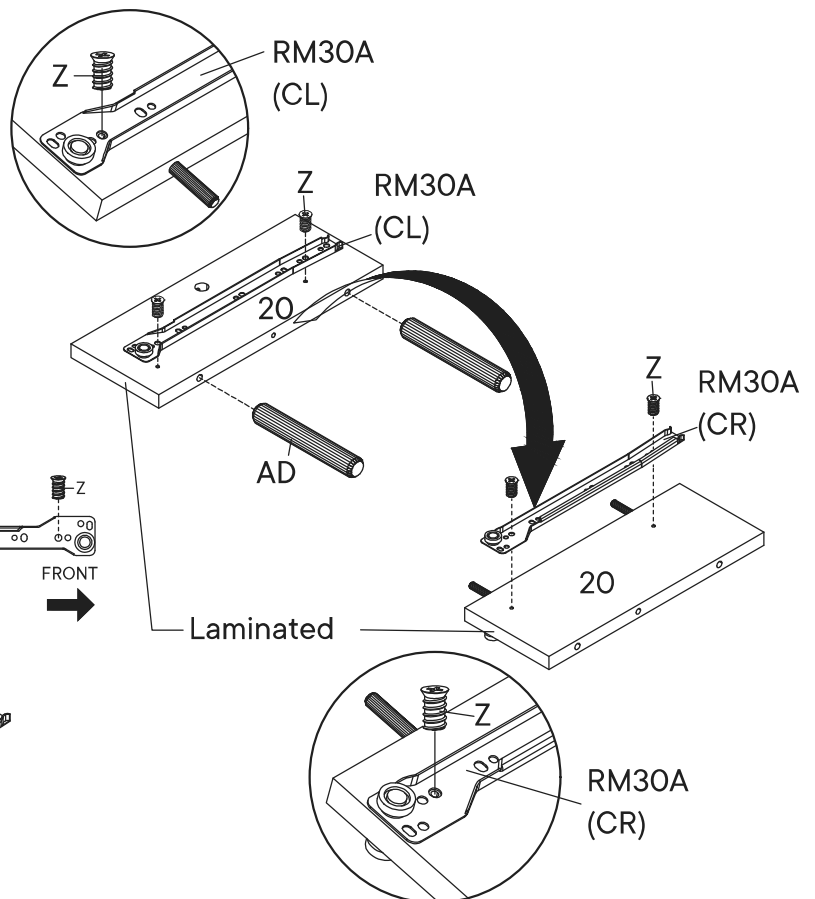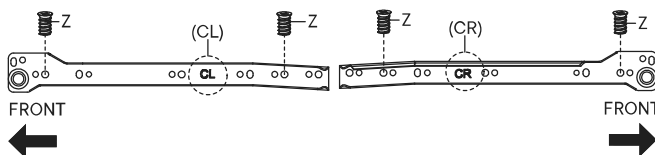


Step 15

HARDWARE

- B** Cam Lock Ø15 mm x3

COMPONENTS

- 17** Side Board Drawer 1 x1
18 Side Board Drawer 2 x1
20 Center Board 2 x1

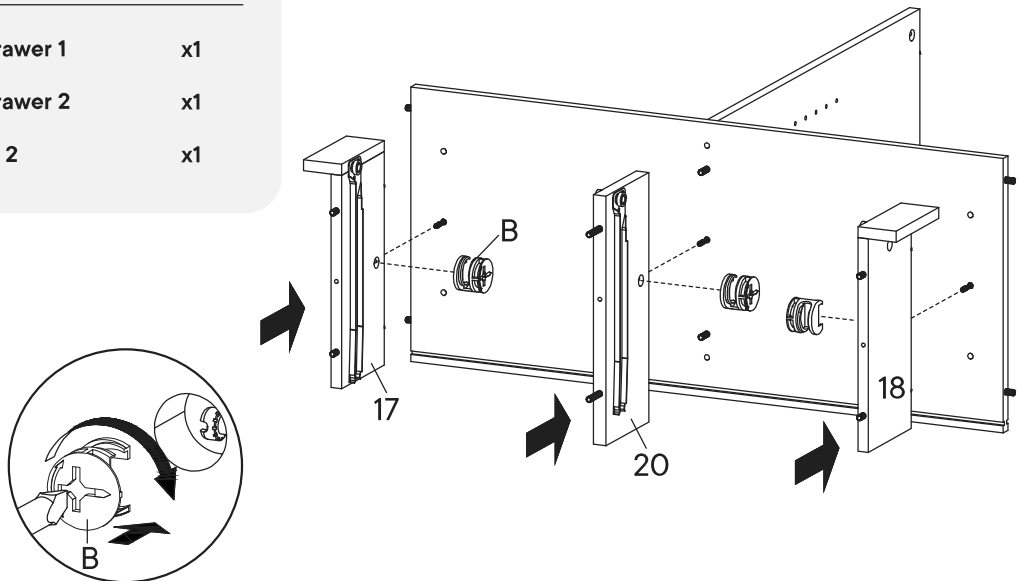


Step 16

HARDWARE

- L** Allen Key x1
O Screw M 7 x 50 mm x3

COMPONENTS


- 21** Fixed Shelf 1 x1

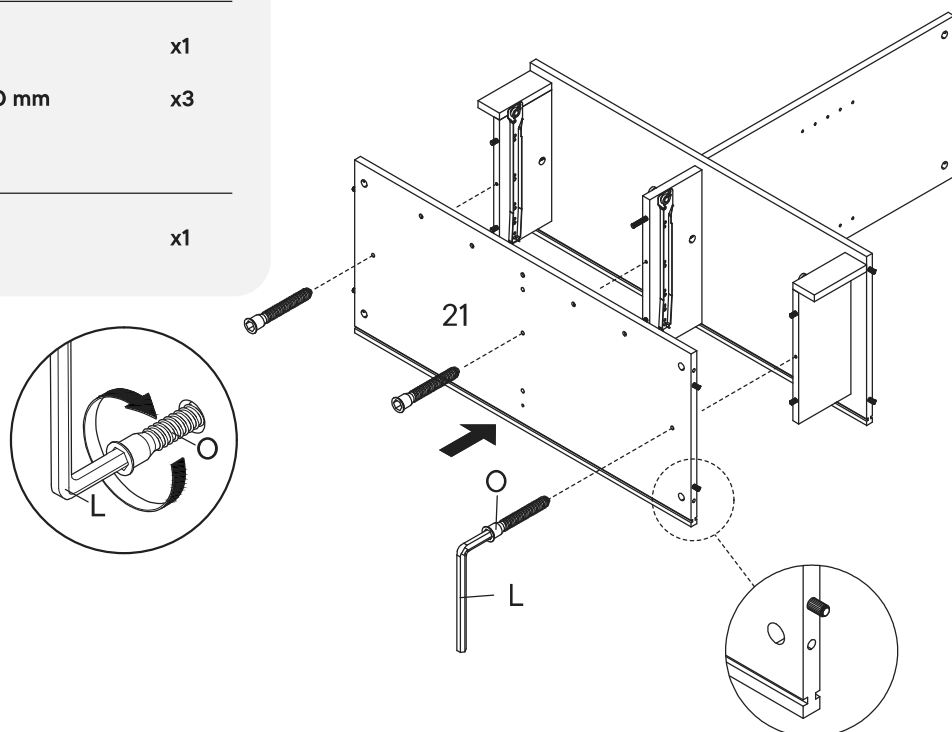

Step 17

HARDWARE

- A** Cam Bolt Ø6 x 35 mm x2

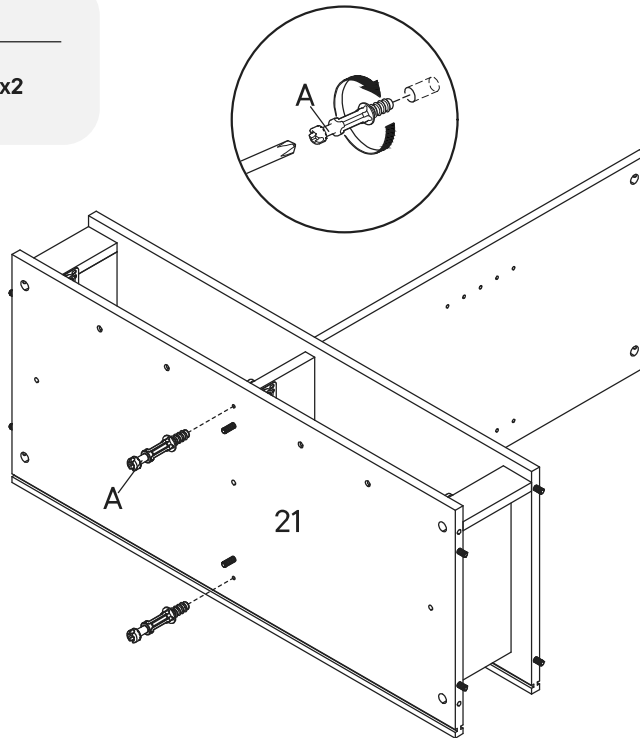


Step 18

HARDWARE

- B** Cam Lock Ø15 mm x2
P Screw Cap Ø15 mm x2
AD Wood Dowel Ø8 x 50 mm x4

COMPONENTS

- 30** Center Board 3 x1

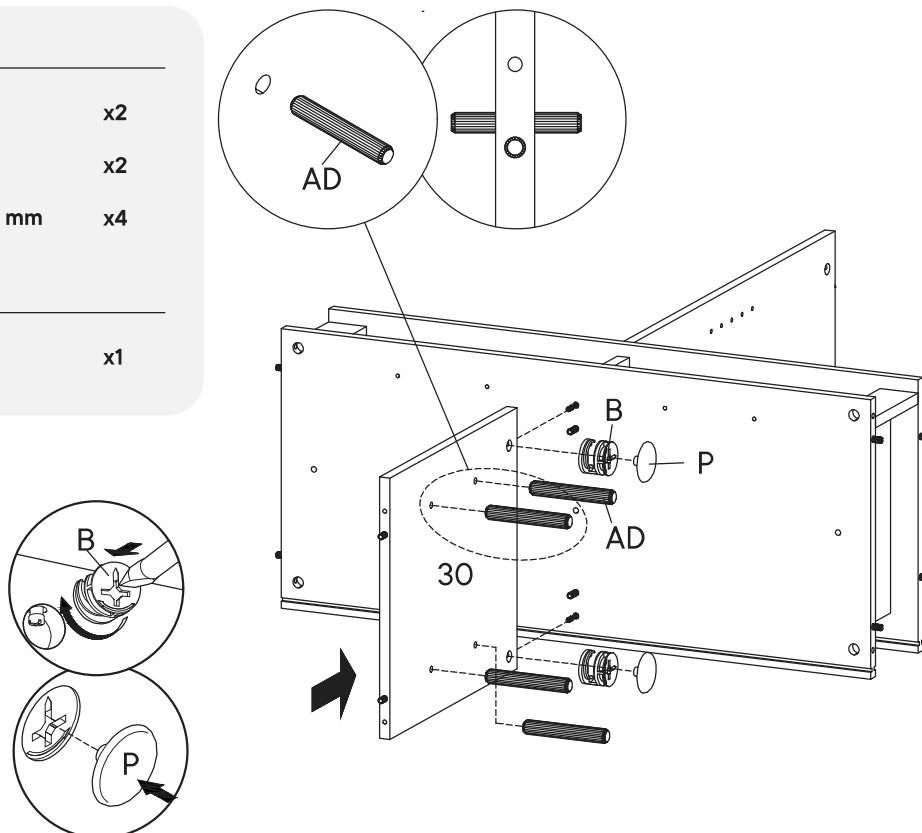


Step 19

HARDWARE

C Wood Dowel Ø8 x 30 mm x8

COMPONENTS

31 Fixed Shelf 3 x2

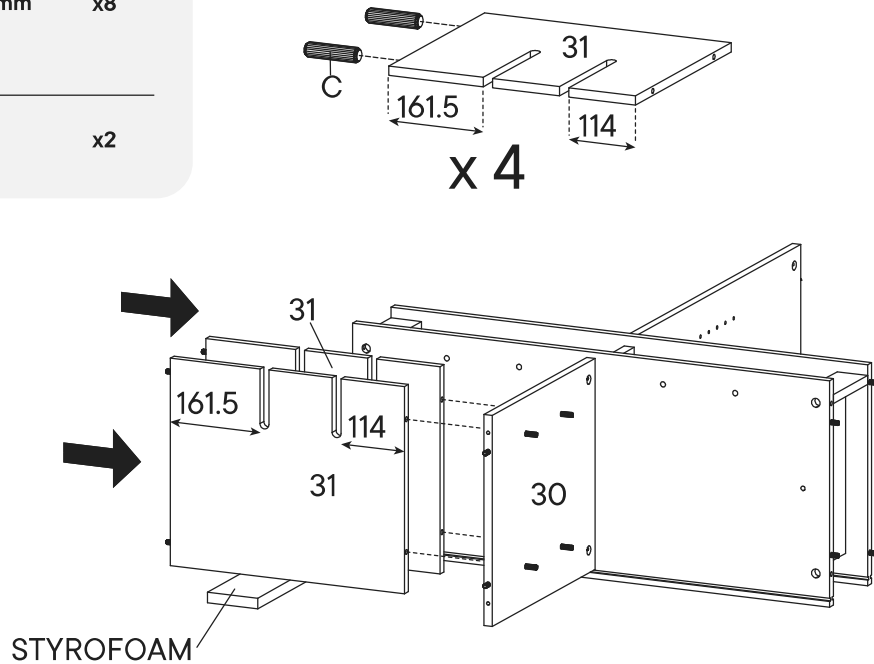

Step 20


HARDWARE

B Cam Lock Ø15 mm x2

L Allen Key x1

COMPONENTS


3 Side Board Left x1

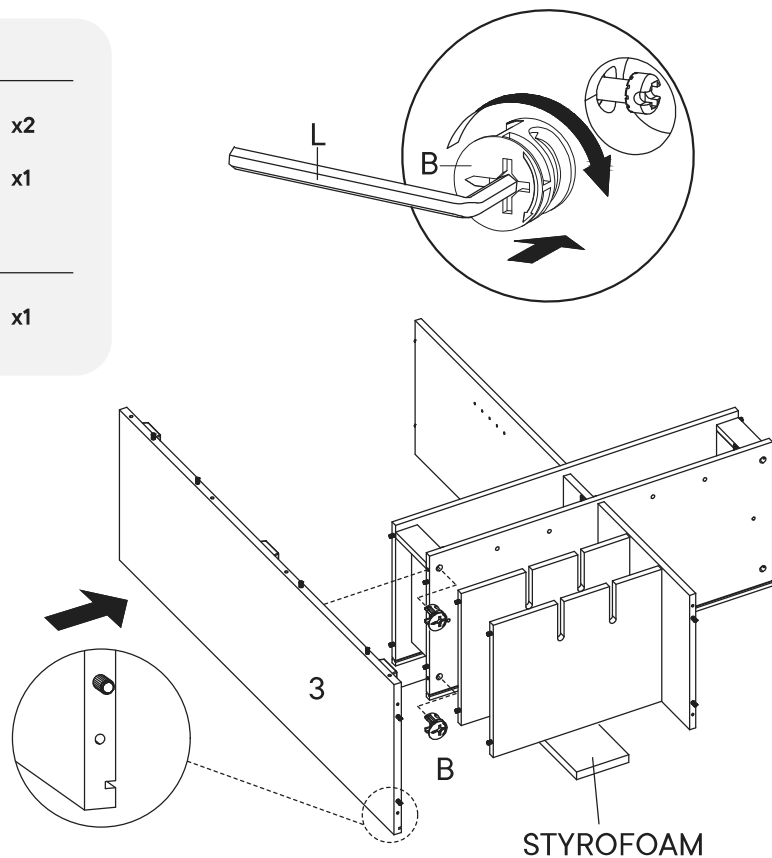

Step 21

COMPONENTS


31 Fixed Shelf 3 x2

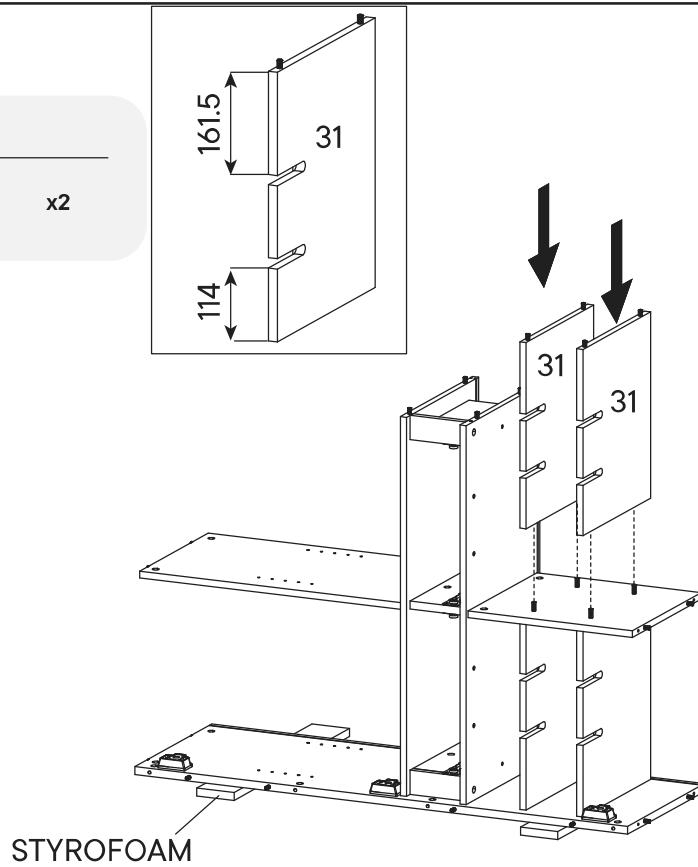

Step 22

COMPONENTS

37 Back Board 3 x1

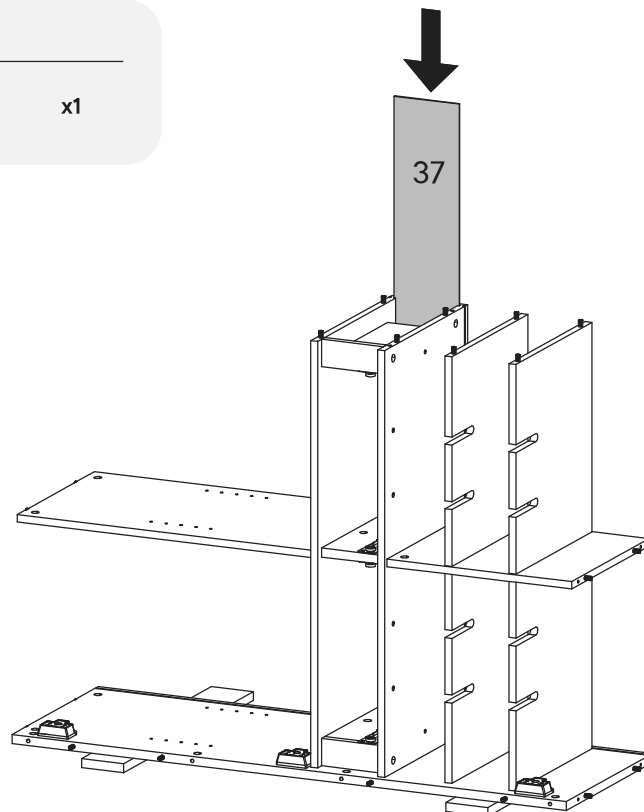



Step 23

HARDWARE

- | | | |
|----------|-----------------|----|
| B | Cam Lock Ø15 mm | x2 |
| L | Allen Key | x1 |

COMPONENTS

- | | | |
|----------|------------------|----|
| 4 | Side Board Right | x1 |
|----------|------------------|----|

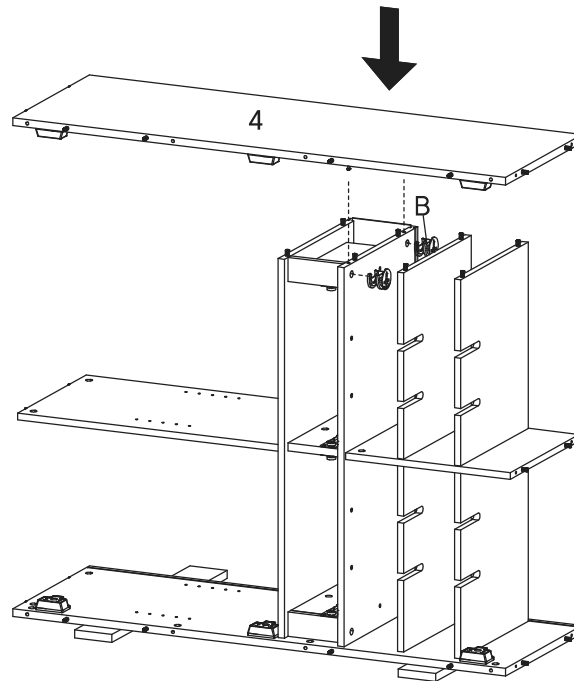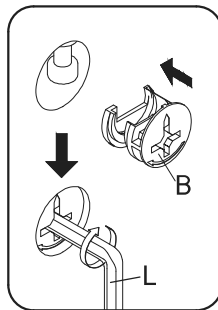



Step 24

HARDWARE

- | | | |
|----------|-------------------|----|
| L | Allen Key | x1 |
| O | Screw M 7 x 50 mm | x6 |

COMPONENTS

- | | | |
|-----------|--------------|----|
| 2 | Bottom Board | x1 |
| 36 | Back Board 2 | x1 |

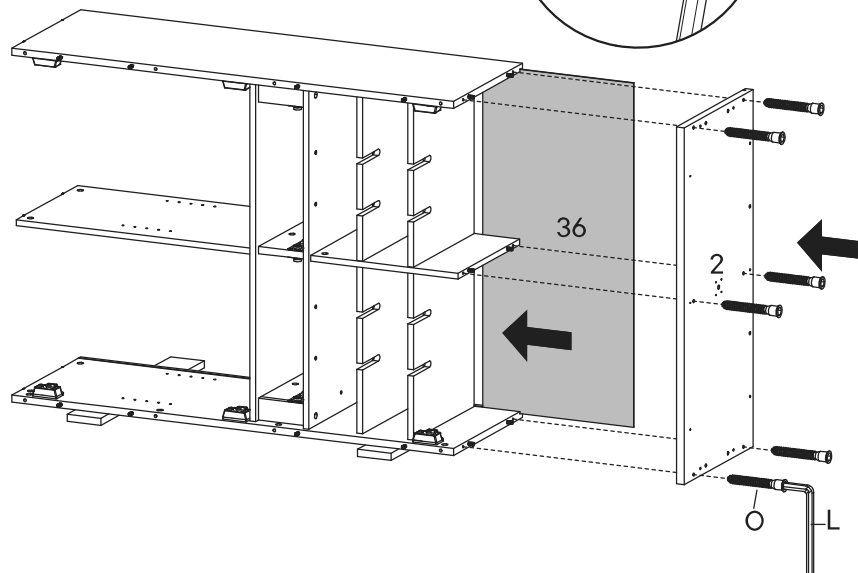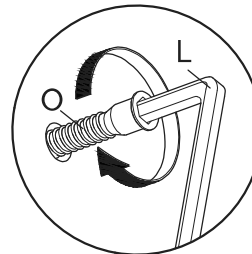

Step 25



HARDWARE

A Cam Bolt Ø6 x 35 mm x8

COMPONENTS

13 Front Skirt 1 x1

14 Front Skirt 2 x1

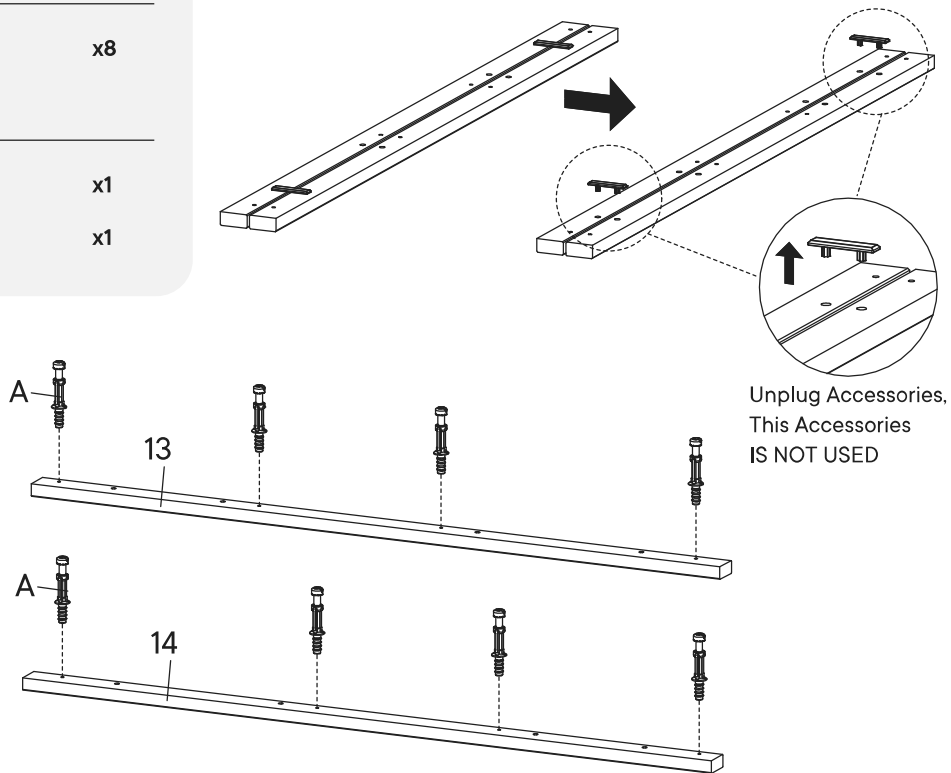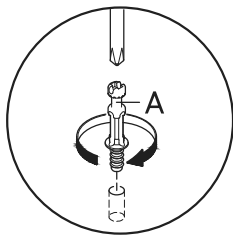

Step 26

HARDWARE


B Cam Lock Ø15 mm x8

G Screw Cap Ø15 mm x8

COMPONENTS

13 Front Skirt 1 x1

14 Front Skirt 2 x1

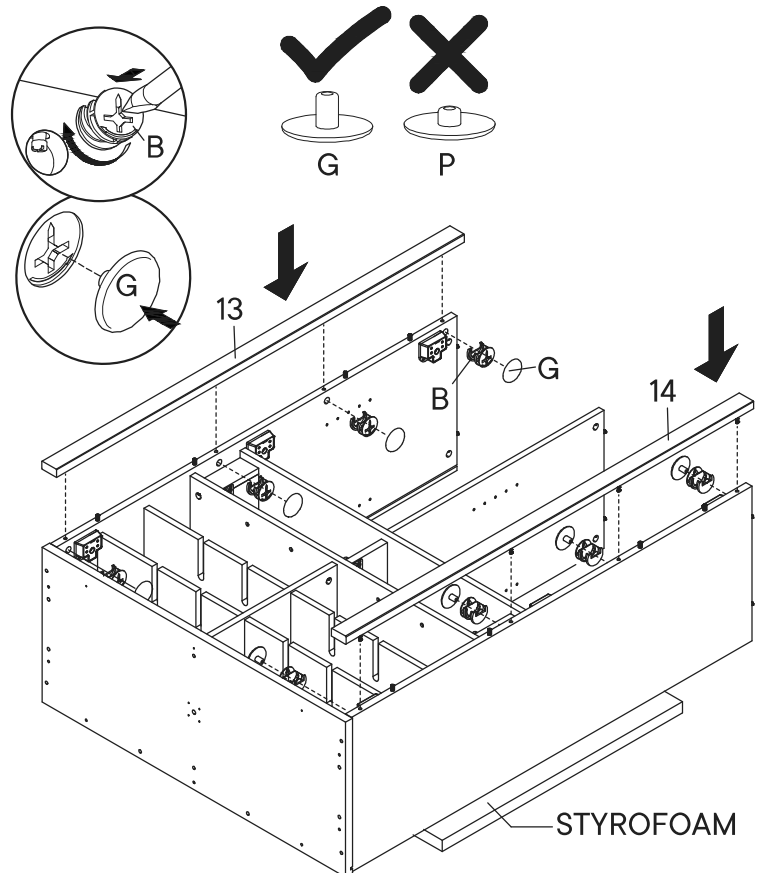

Step 27


HARDWARE

H Screw M 4.5 x 12.5 mm x12

BC410 Corner Brace x4

COMPONENTS

11 Bottom Skirt 3 x2

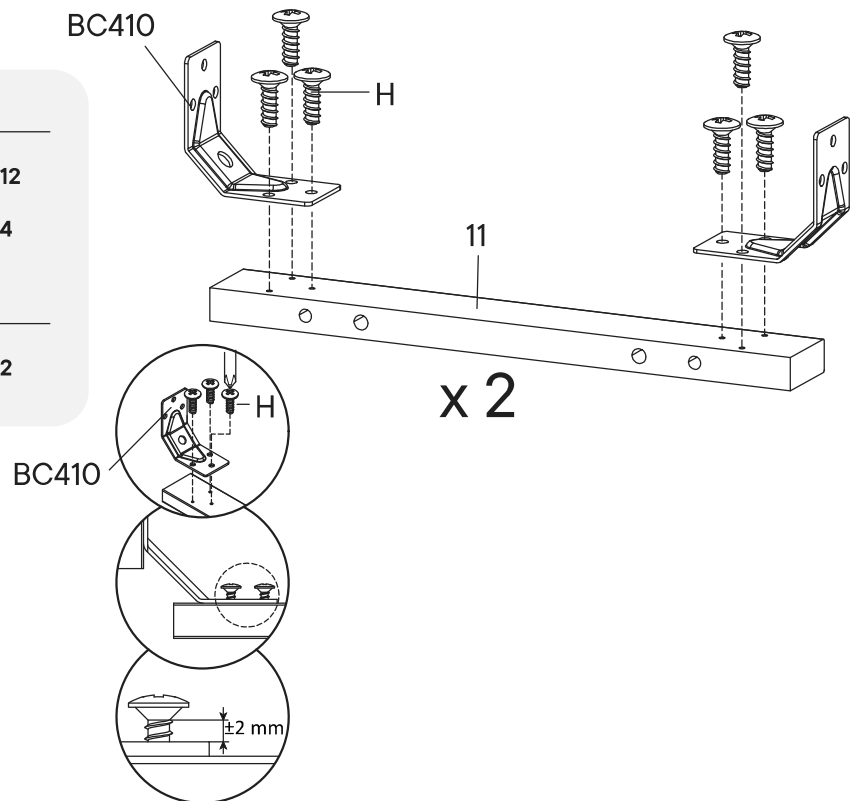

Dont'over
tighten ± 2 mm

Step 28

HARDWARE



D Screw M 6.4 x 14 mm x3

L Allen Key x1

Q Plate x3

COMPONENTS

9 Bottom Skirt 1 x1

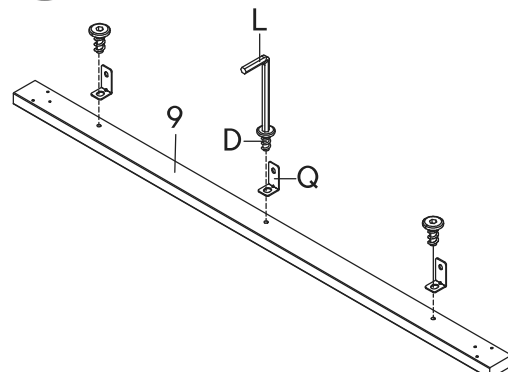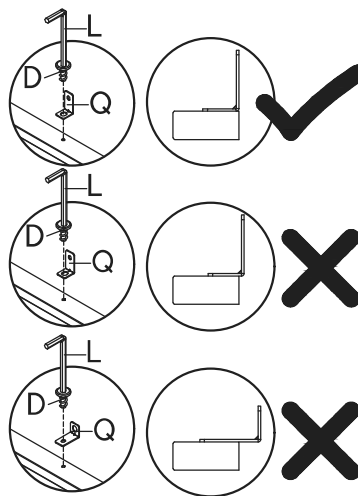

Step 29



HARDWARE

H Screw M 4.5 x 12.5 mm x6

COMPONENTS

10 Bottom Skirt 2 x1

11 Bottom Skirt 3 x2

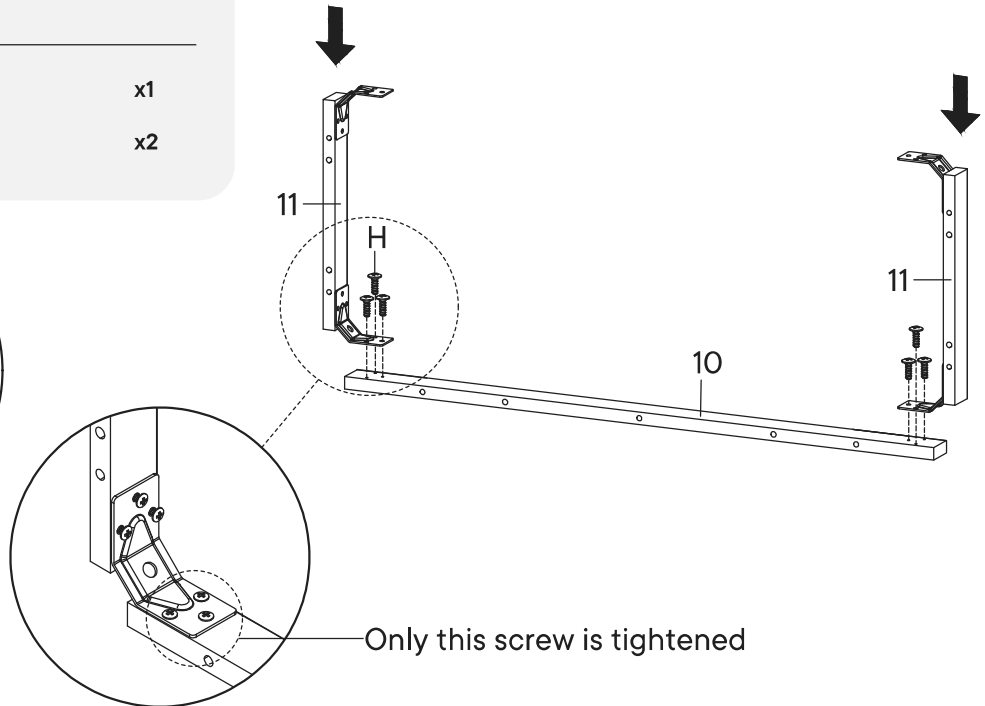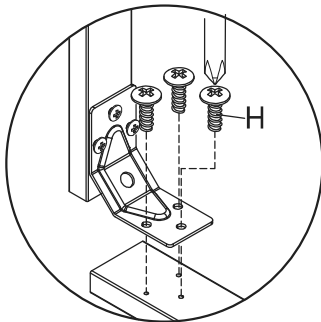



Step 30

HARDWARE

H Screw M 4.5 x 12.5 mm x6

COMPONENTS


9 Bottom Skirt 1 x1

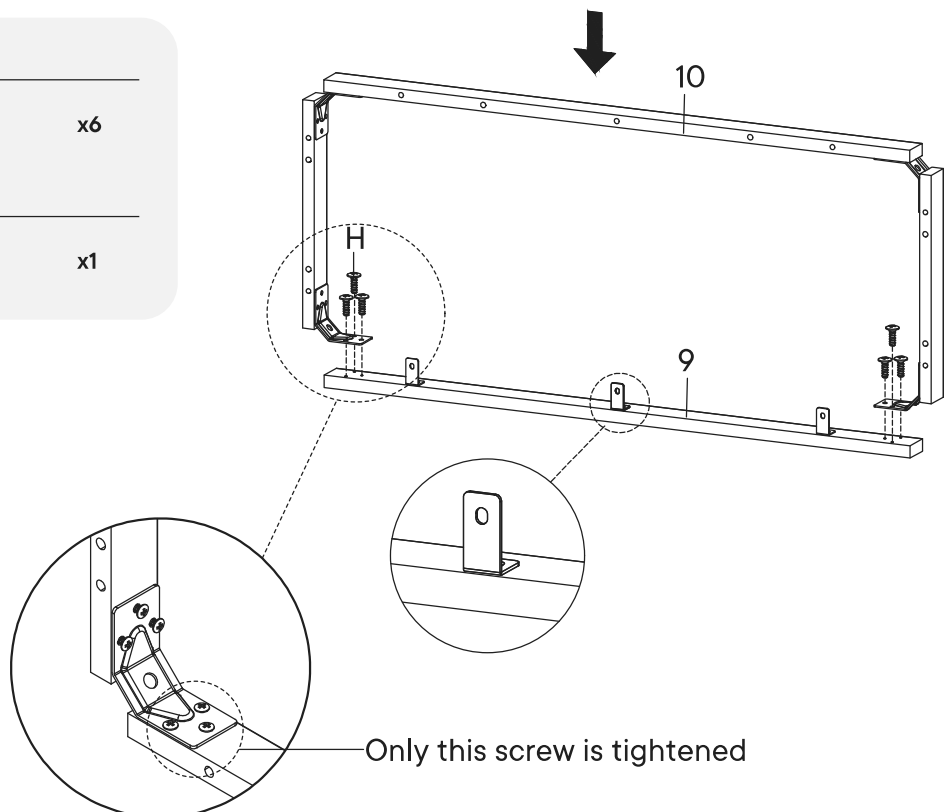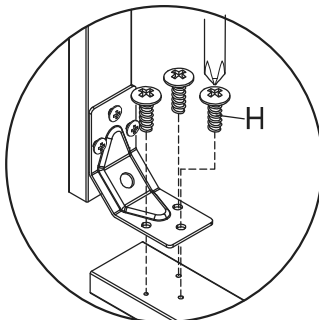

Step 31

HARDWARE



- C** Wood Dowel Ø8 x 30 mm x6

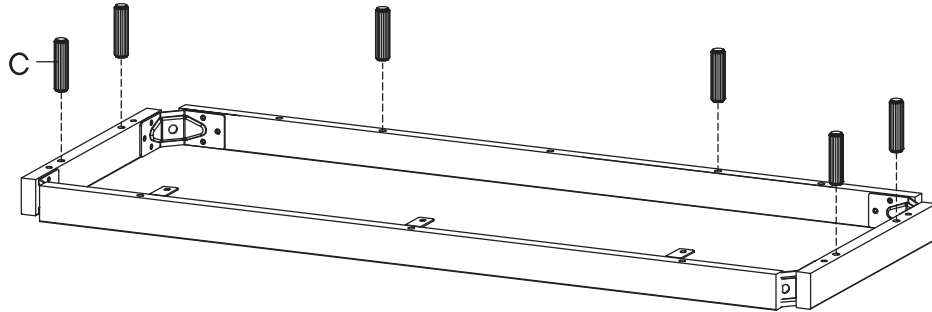

Step 32

HARDWARE

- L** Allen Key x1
R Screw M 6.4 x 53 mm x7

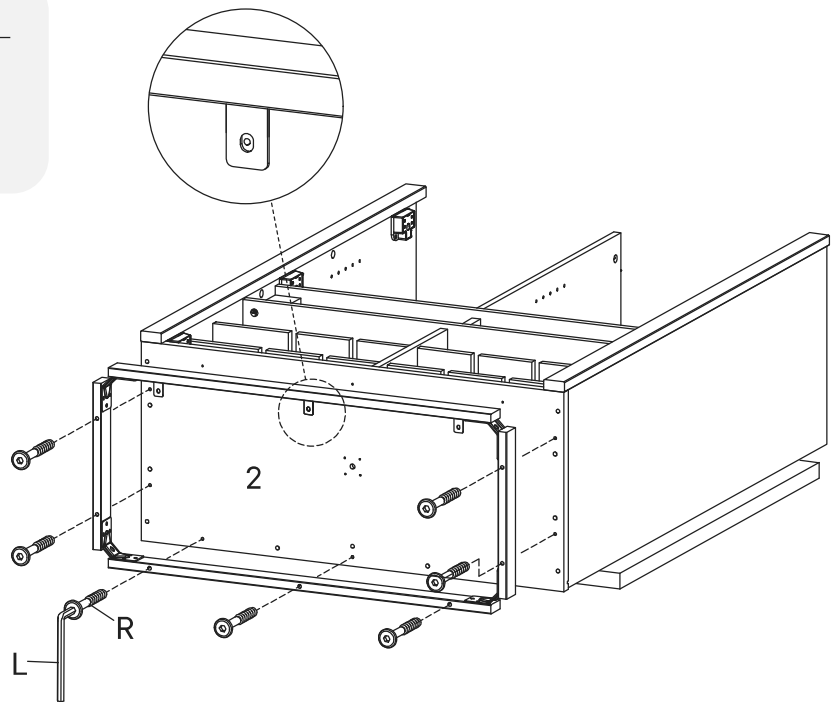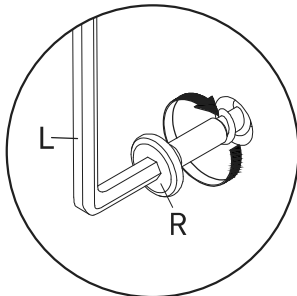




Step 33

HARDWARE

- W** Flange Nut x4
- X** Wrench x1

COMPONENTS



- 12** Leg x4

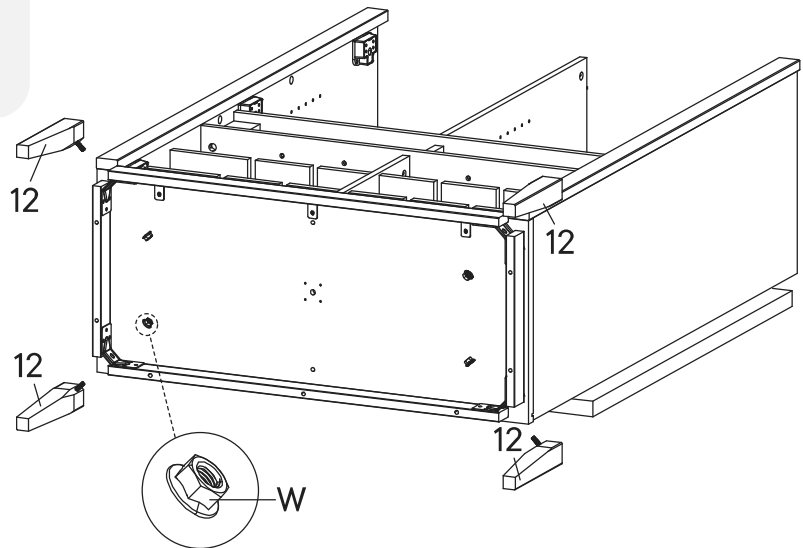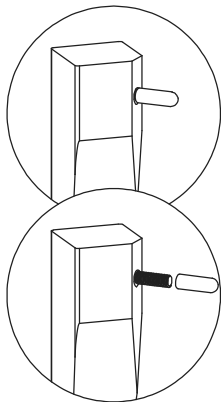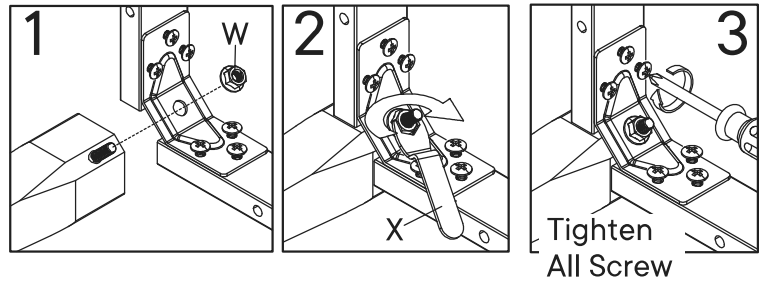


Step 34

HARDWARE

- H** Screw M 4.5 x 12.5 mm x7
- AE** Floor Protector x4
- PM3** Mounting Plate x1

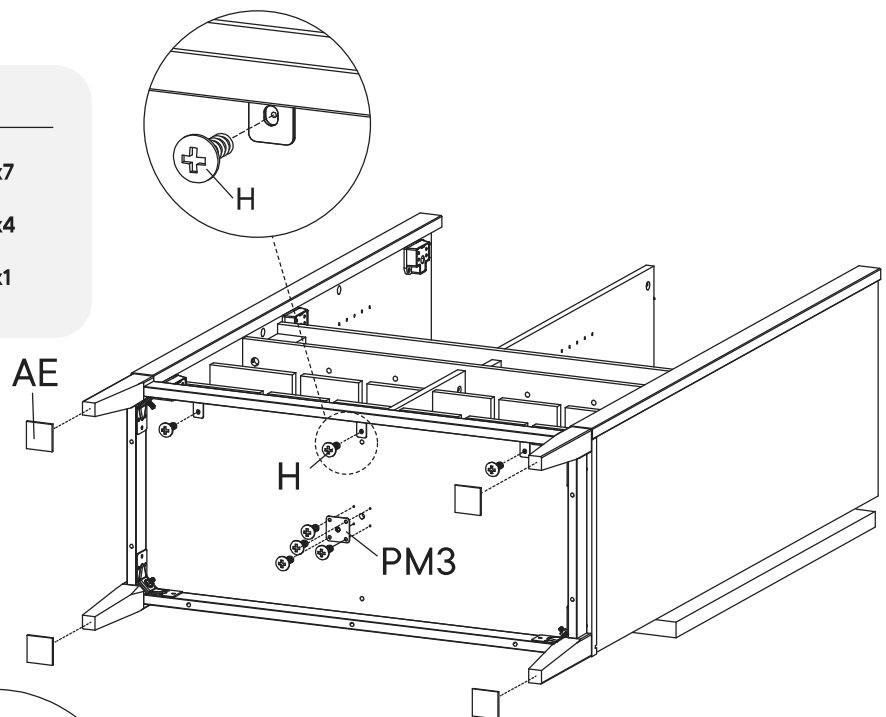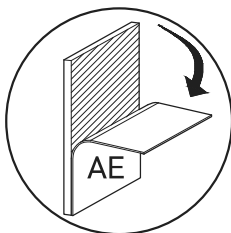

Mounting Plate
Sitting Correct Potition

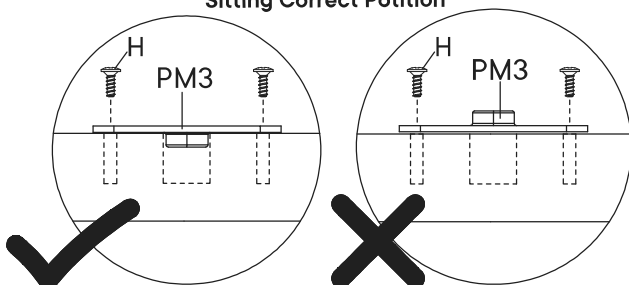


Step 35

COMPONENTS

LC20A1 Center Leg

x1

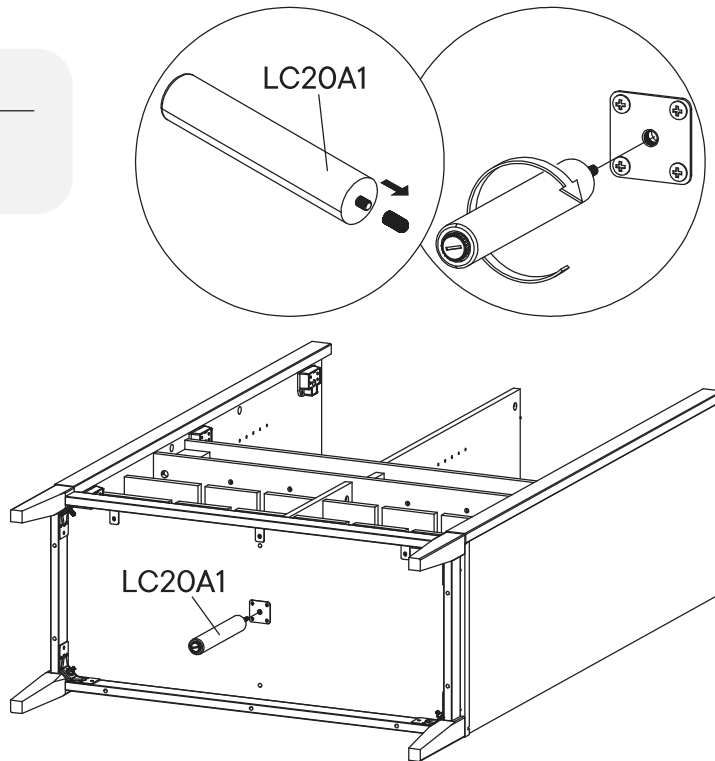

Step 36


HARDWARE

C Wood Dowel Ø8 x 30 mm x16

COMPONENTS

33 Steamware Holder 1 x4

34 Steamware Holder 2 x4

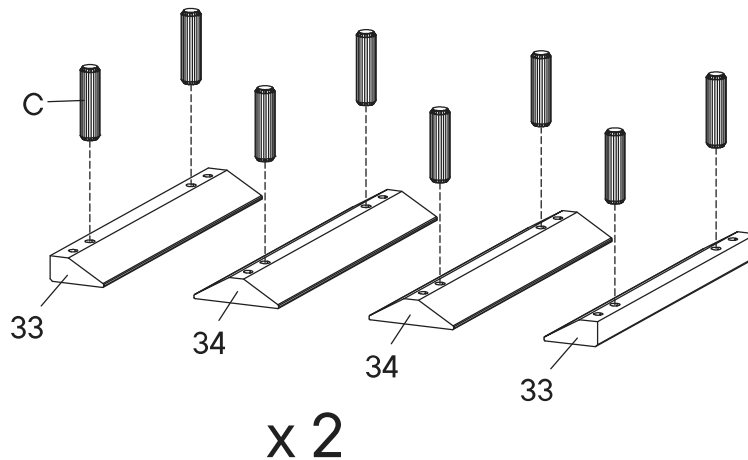



Step 37

HARDWARE

- | | | |
|----------|---------------------|----|
| L | Allen Key | x1 |
| K | Screw M 6.4 x 35 mm | x8 |

COMPONENTS

- | | | |
|-----------|--------------------|----|
| 1 | Top Board | x1 |
| 33 | Steamware Holder 1 | x4 |

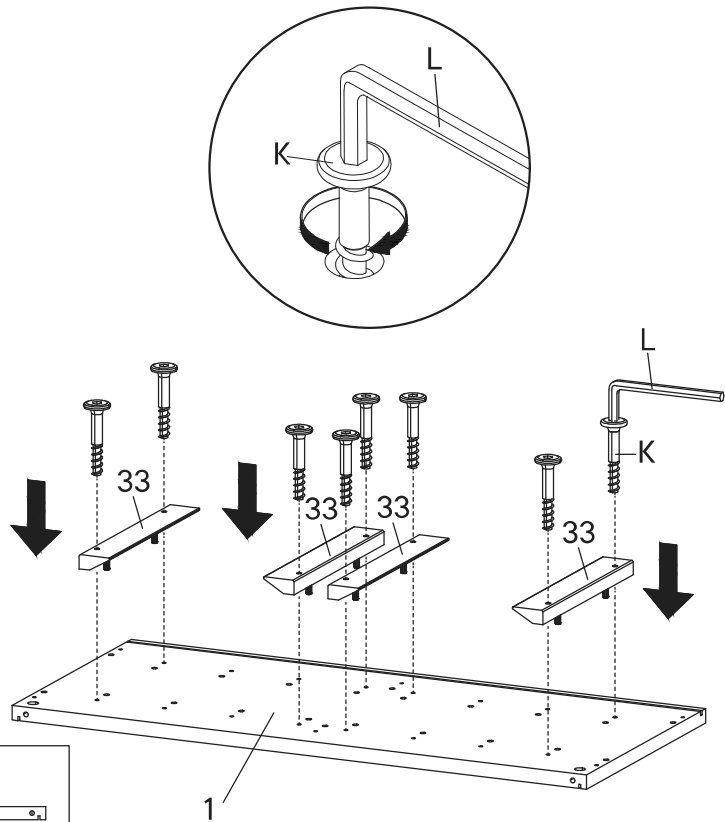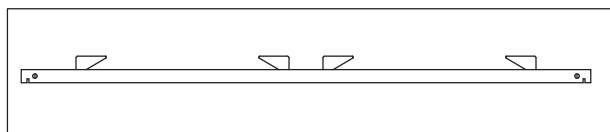


Step 38

HARDWARE

- | | | |
|----------|---------------------|----|
| L | Allen Key | x1 |
| K | Screw M 6.4 x 35 mm | x8 |

COMPONENTS

- | | | |
|-----------|--------------------|----|
| 34 | Steamware Holder 2 | x4 |
|-----------|--------------------|----|

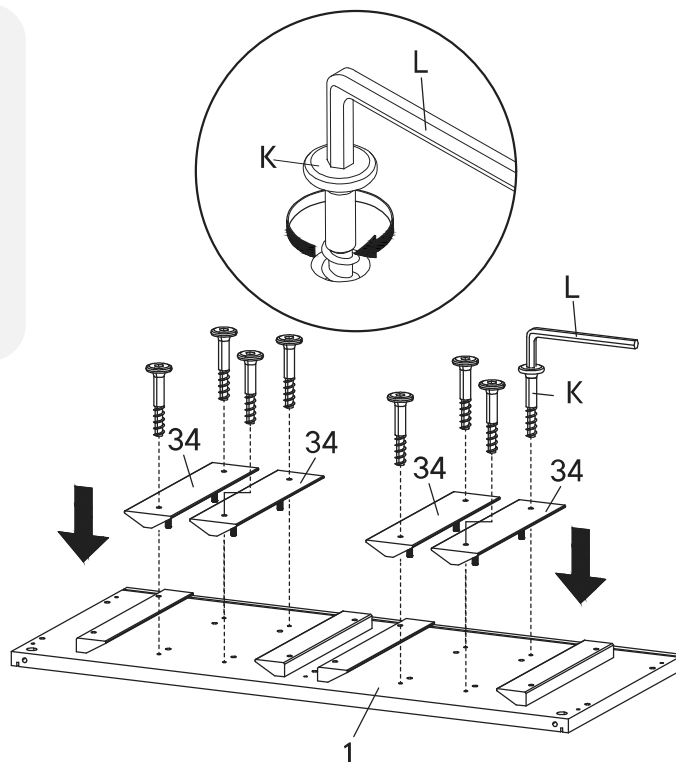


Step 39

HARDWARE

- | | | |
|----------|-----------------------|----|
| A | Cam Bolt Ø6 x 35 mm | x8 |
| C | Wood Dowel Ø8 x 30 mm | x5 |

COMPONENTS

- | | | |
|----------|---------------------|----|
| 1 | Top Board | x1 |
| 5 | Front Board Hutch | x1 |
| 6 | Support Board Hutch | x3 |
| 7 | Back Board Hutch | x1 |

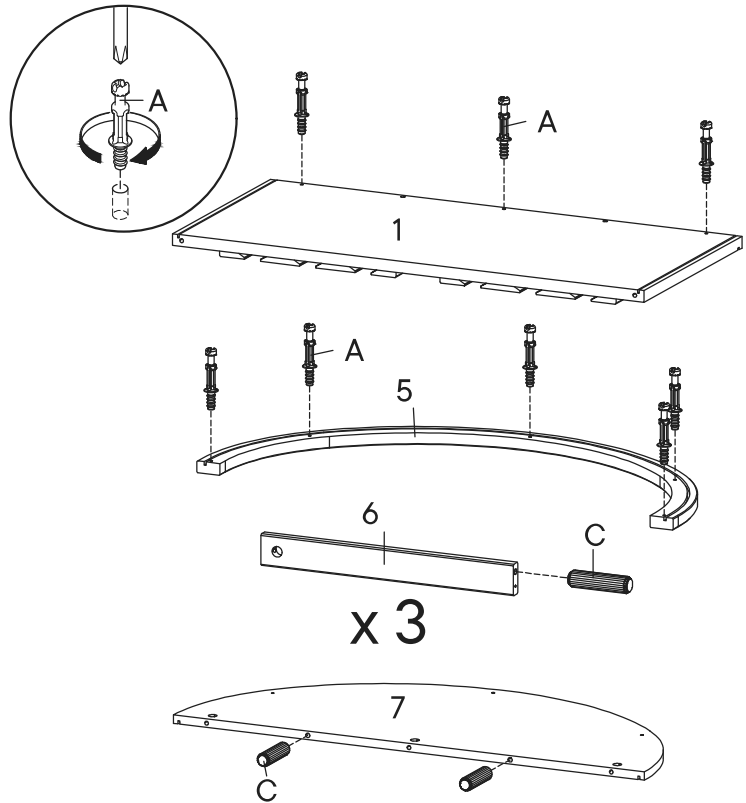



Step 40

HARDWARE

- | | | |
|----------|-----------------|----|
| B | Cam Lock Ø15 mm | x3 |
|----------|-----------------|----|

COMPONENTS

- | | | |
|----------|---------------------|----|
| 5 | Front Board Hutch | x1 |
| 6 | Support Board Hutch | x3 |

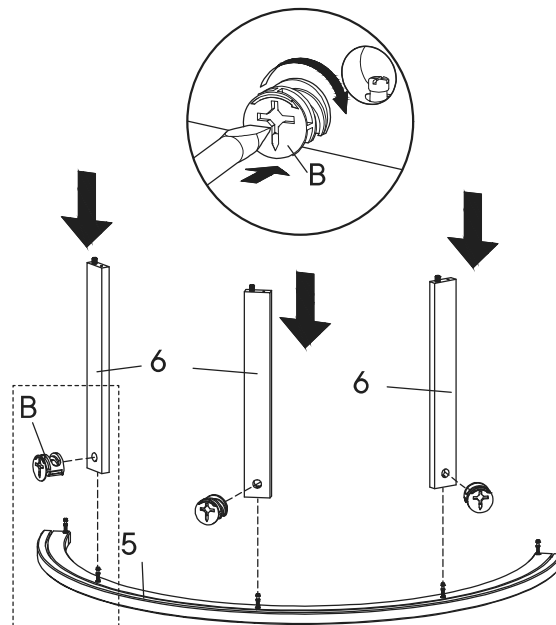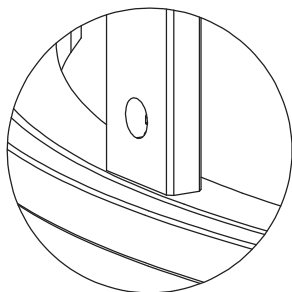


Step 41

HARDWARE

Y Screw M 8 x 39 mm x3

COMPONENTS


7 Back Board Hutch x1

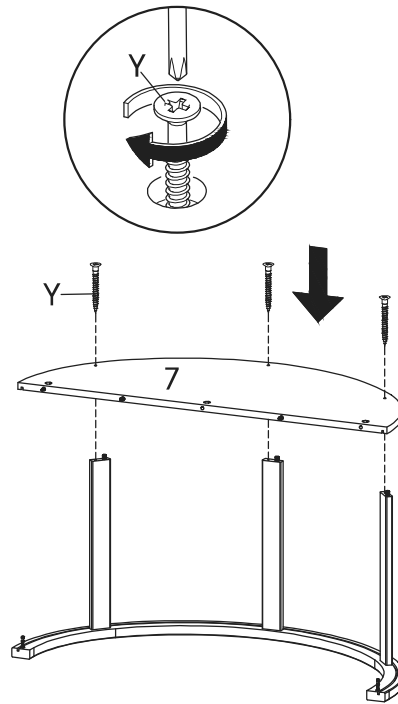

Step 42

COMPONENTS

8 PVC Board x1

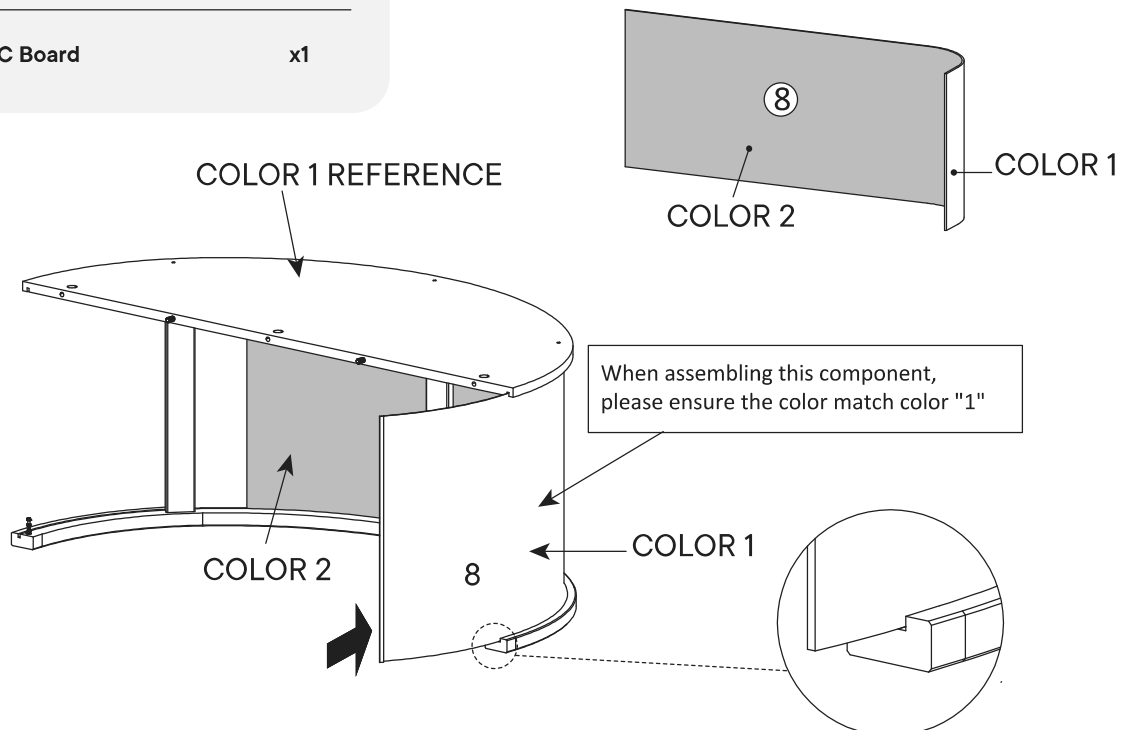



Step 43

HARDWARE

B Cam Lock Ø15 mm x5

COMPONENTS



1 Top Board x1

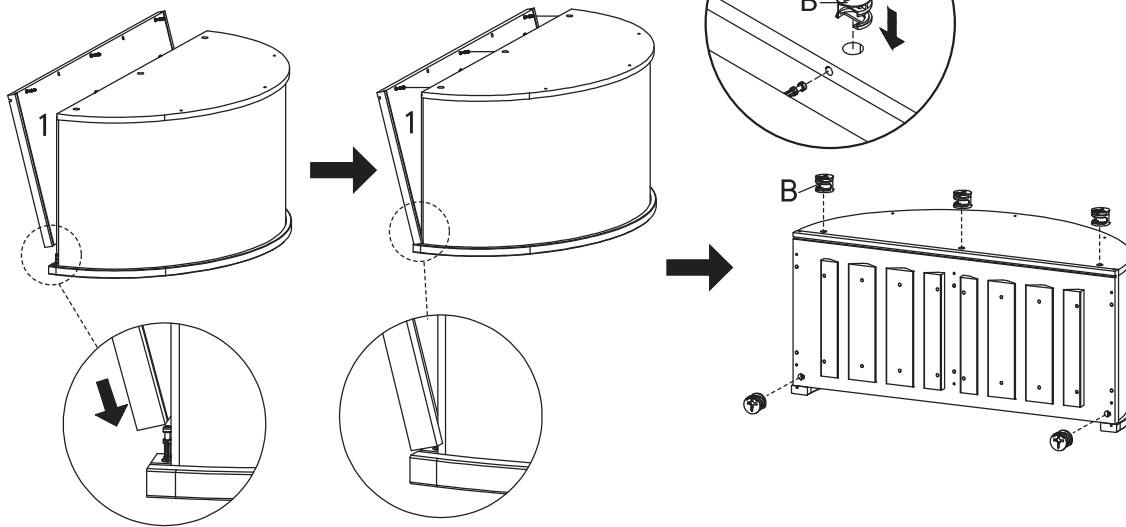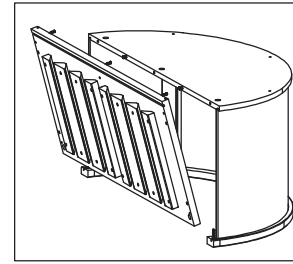

Step 44

HARDWARE

A Cam Bolt Ø6 x 35 mm x6

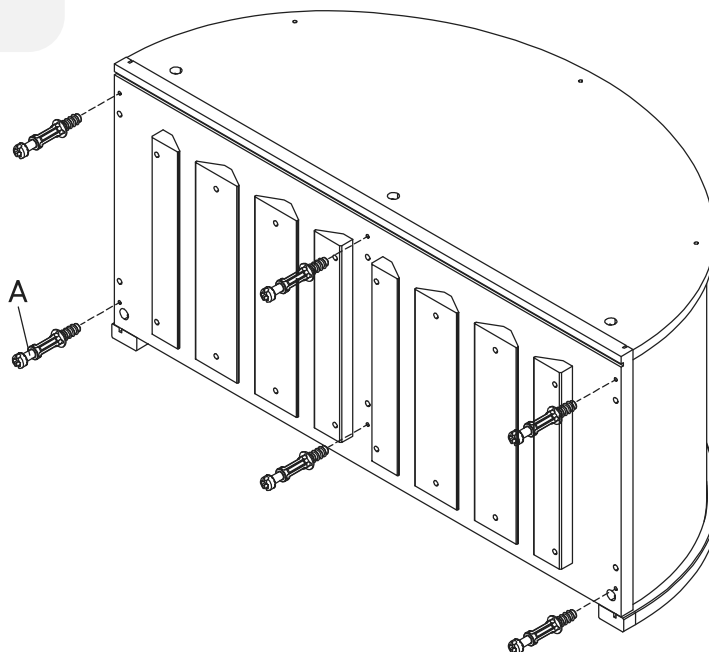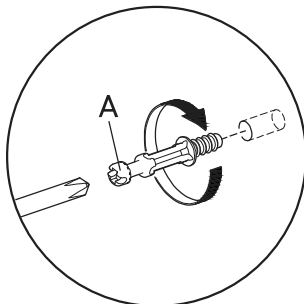

Step 45


HARDWARE

T Joining Strip x1


COMPONENTS

35 Back Board 1 x2

When assembling this component, please ensure the color match color "2"

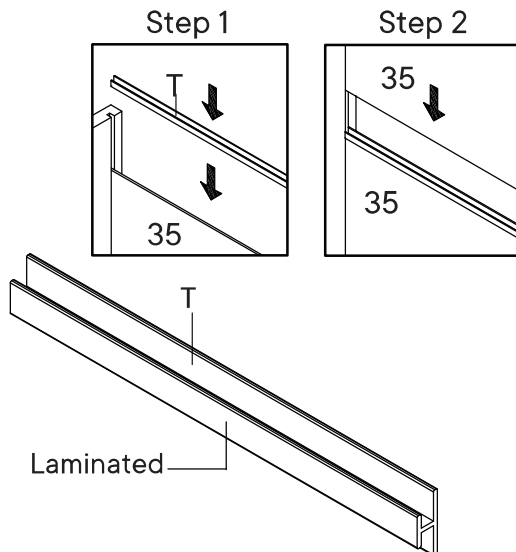

COLOR 2
REFERENCE

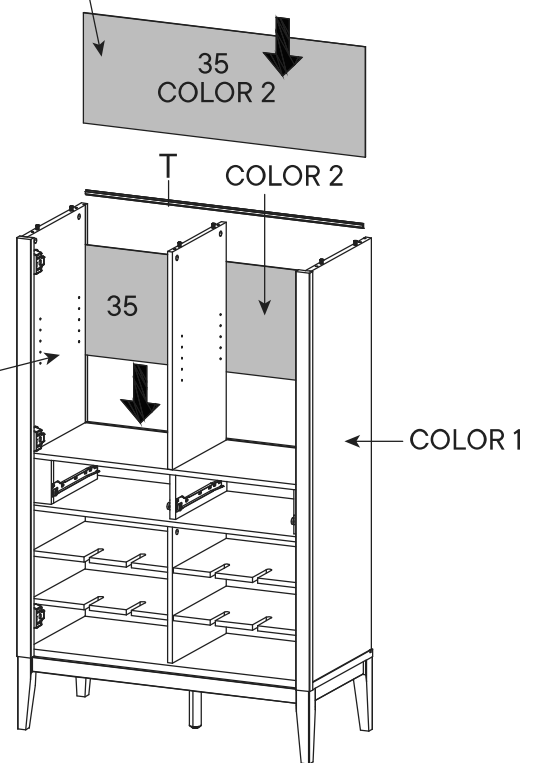



Step 46

HARDWARE



B Cam Lock Ø15 mm x6

G Screw Cap Ø15 mm x4

P Screw Cap Ø15 mm x2

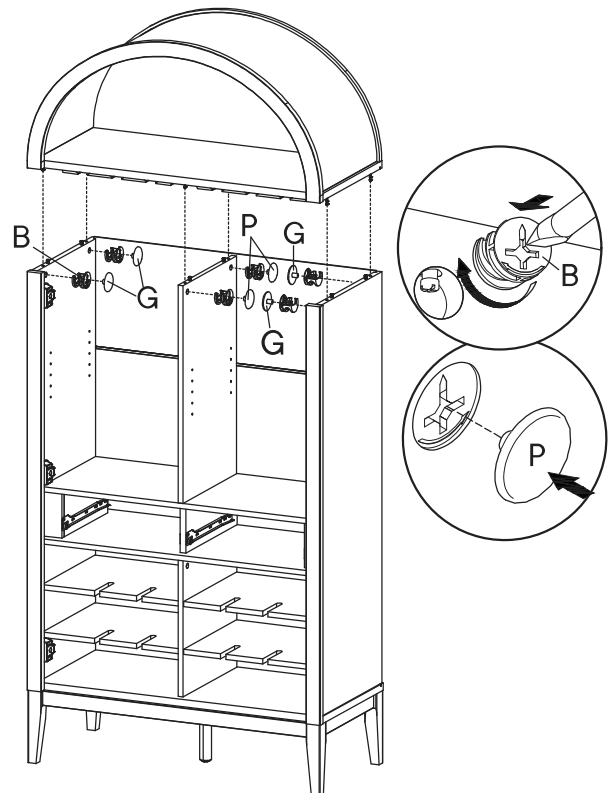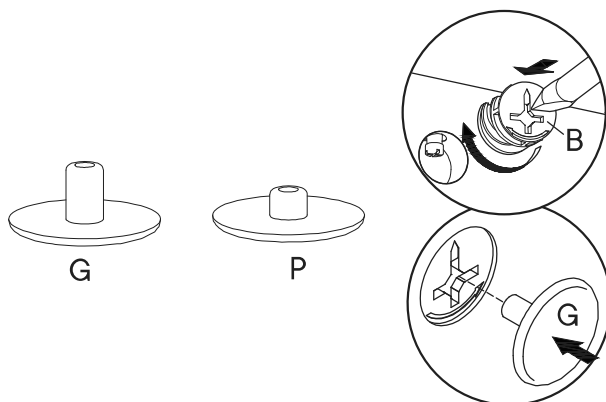

Step 47

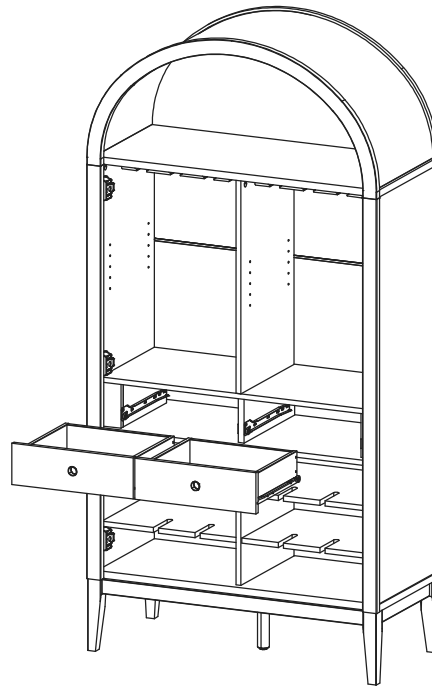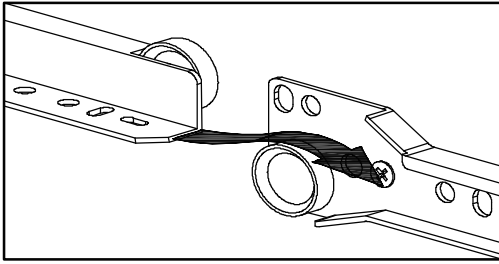



Step 48

HARDWARE

E Shelf Pin x8

COMPONENTS

16 Adjustable Shelf x2

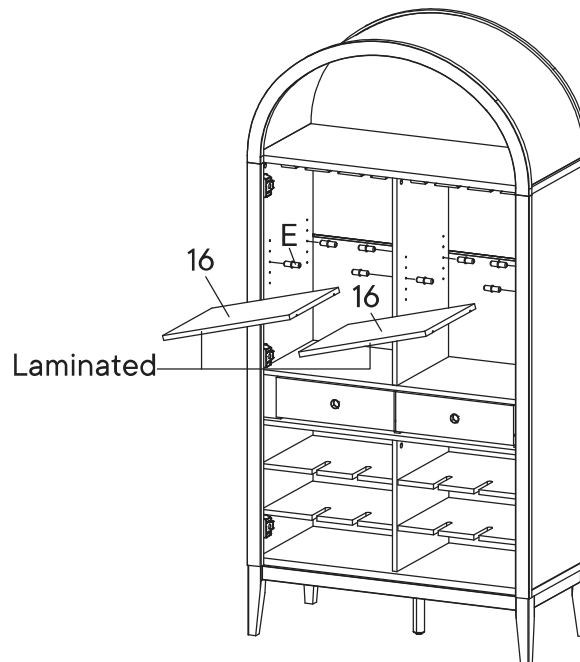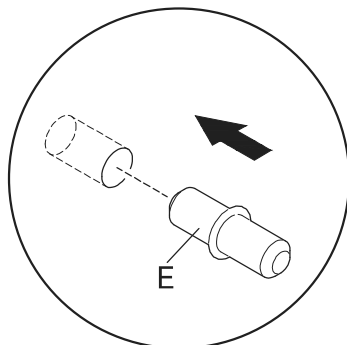


Step 49

HARDWARE

H	Screw M 4.5 x 12.5 mm	x12
HS26C	Hinge	x6

COMPONENTS

27	Door Left	x1
28	Door Right	x1

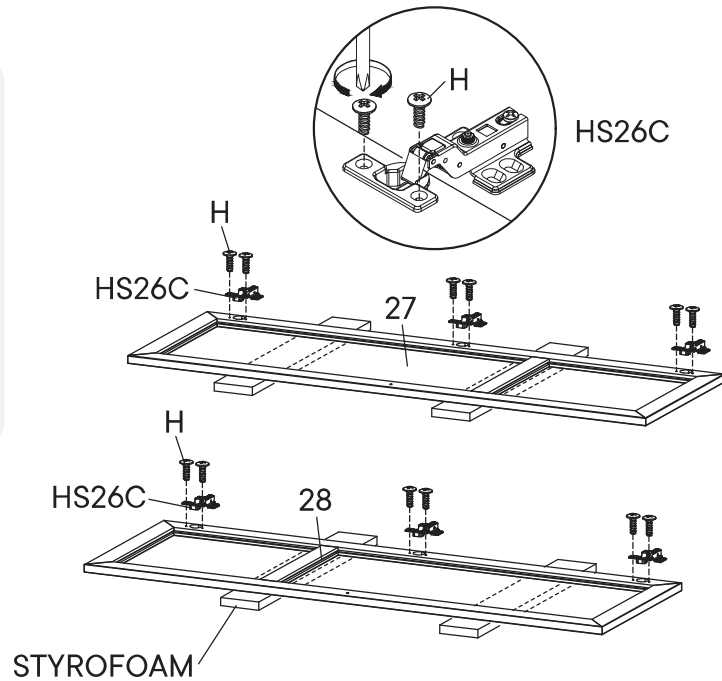





Step 50

HARDWARE

H	Screw M 4.5 x 12.5 mm	x24
I	Handle	x2
J	Screw M 4 x 22 mm	x2
V	Silicon Bumper	x4

COMPONENTS

27	Door Left	x1
28	Door Right	x1

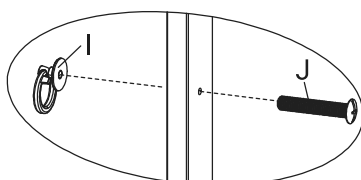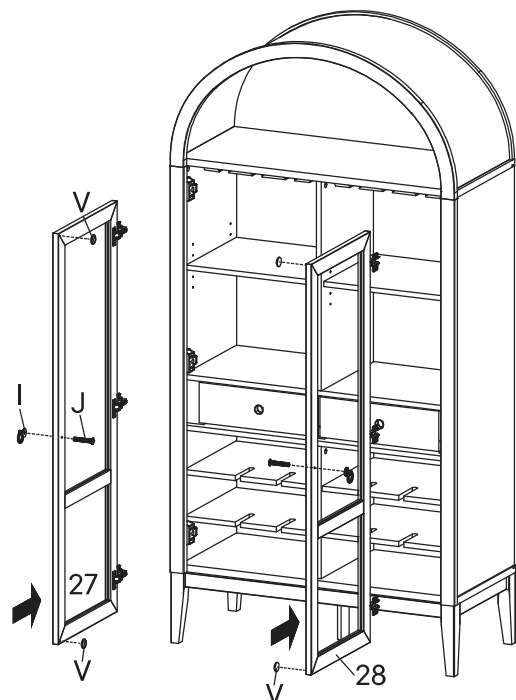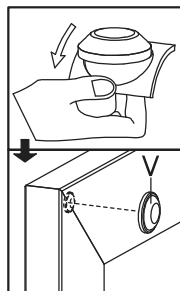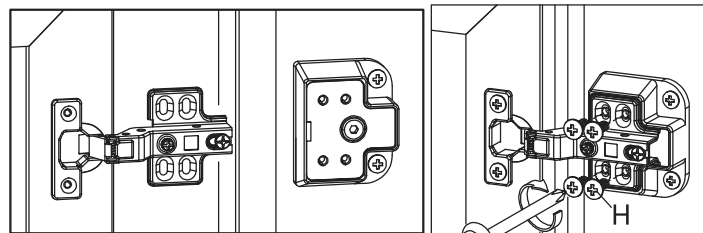




Step 51

HARDWARE

Ⓐ Pin Per x4

COMPONENTS

32 Center Board 4 x4

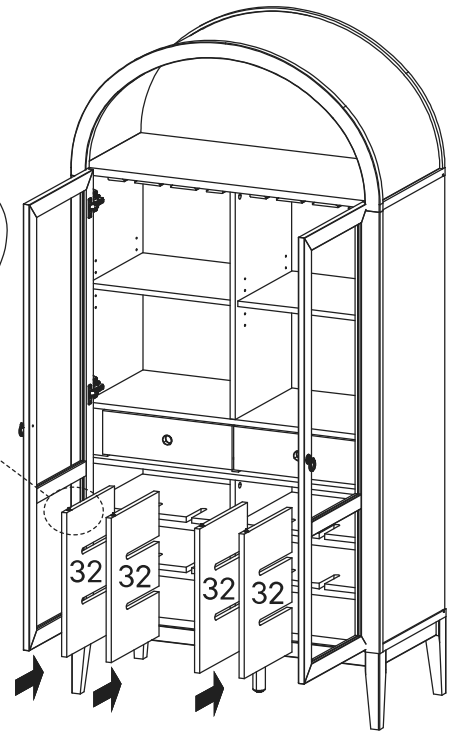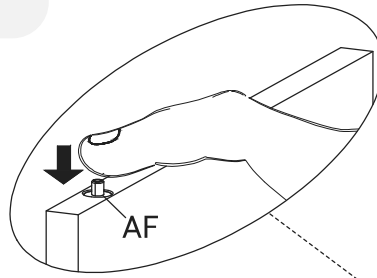
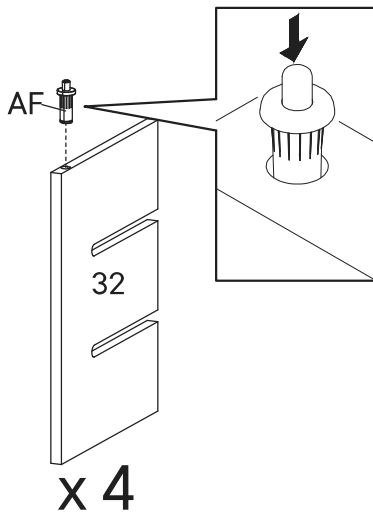


Step 52

HARDWARE

Ⓜ Wedge x30

Ⓝ Screw M 3.5 x 15.5 mm x30

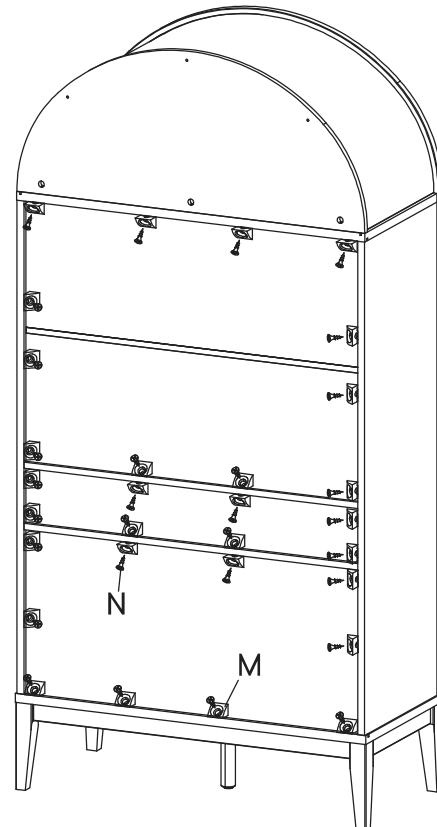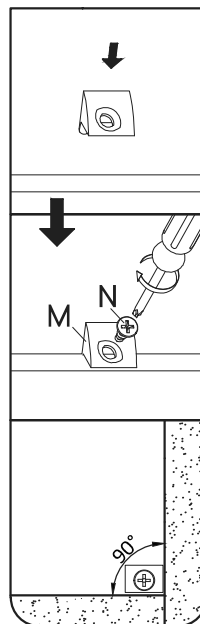


Step 53

HARDWARE



List

x2

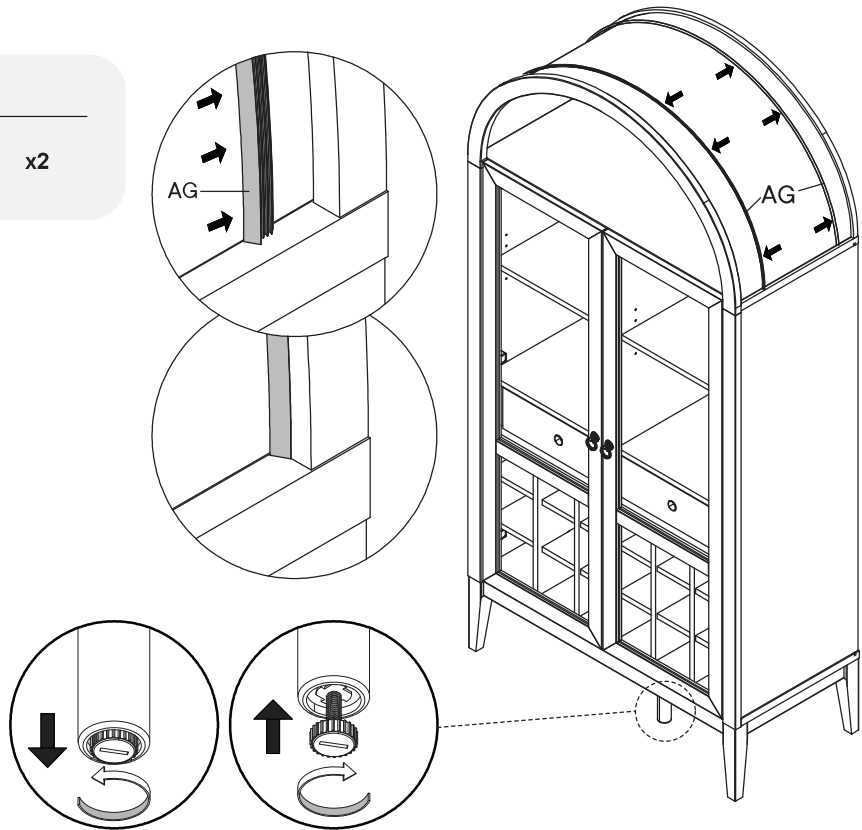

Great job!

Bookcase assembly is complete.




CARING FOR YOUR ITEM

Indoor use only.

Not contract grade.

Clean using a non-abrasive cloth and a mild cleaner.



Never use harsh chemicals, as they could damage the finish or integrity of the item.

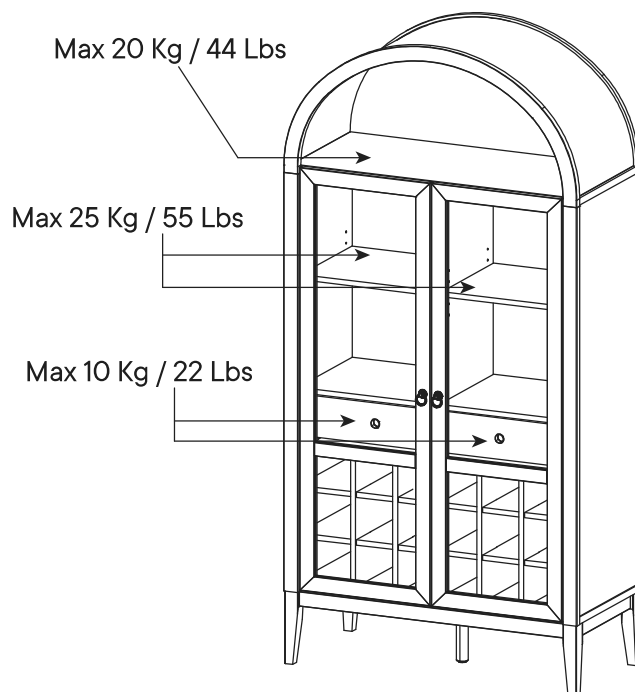

CONNECT WITH US!


Tag us @modway_furniture and #modway for a chance to be featured.

Cabinet Door Alignment

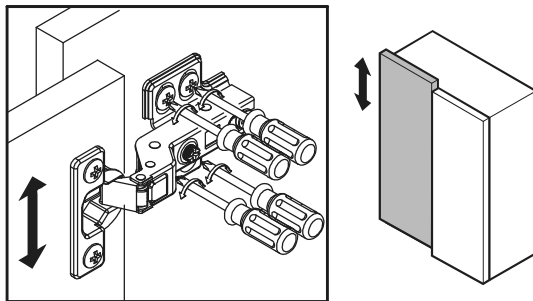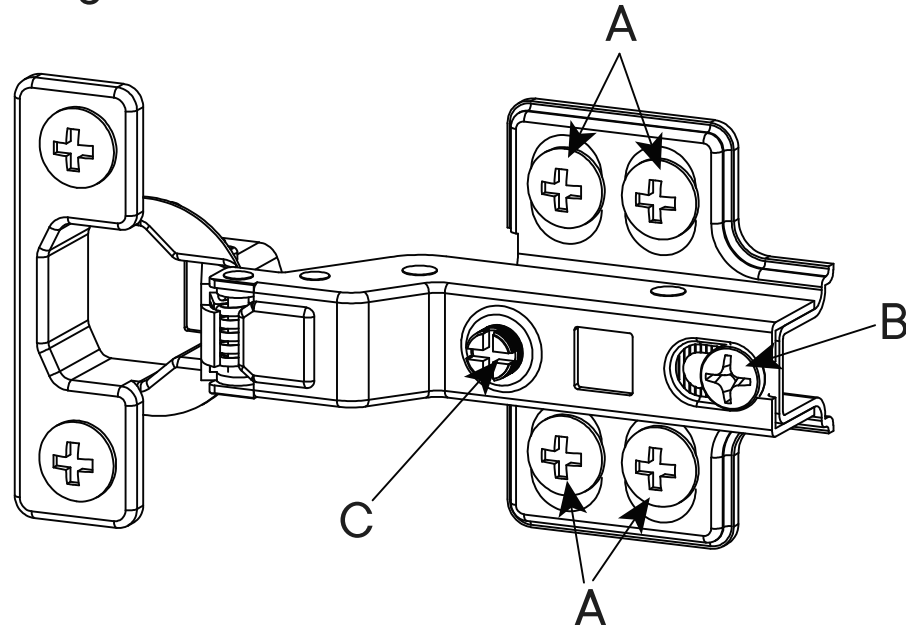


To adjust the vertical height.

Loosen the four screws "A" on both hinges. Two of them are usually in slotted holes which allows you to adjust up or down by few mm. Then tighten back up.

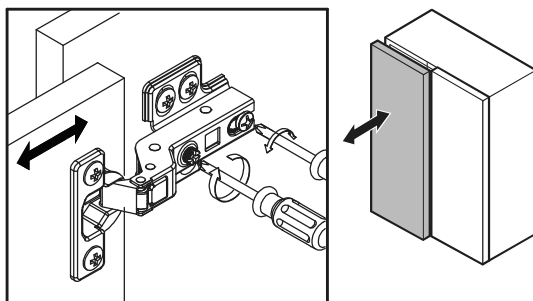

To adjust depth.

Loosen screw "B" and adjust door, if the door can not be adjusted, please loosen screw "C", then try again. Tighten screw "B" and "C".

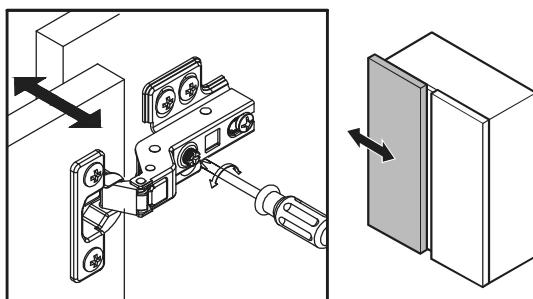

To adjust side ways.



Turn screw "C" on BOTH hinges on each door.

TIPPING RESTRAINTS KIT INSTALLATION GUIDANCE

Different wall materials require unique wall fasteners.

The wall plugs (AA2) and screws (AA3) are designed for fixing to concrete walls only.

Please consult your local hardware store to ensure you are using the correct hardware for you wall type.

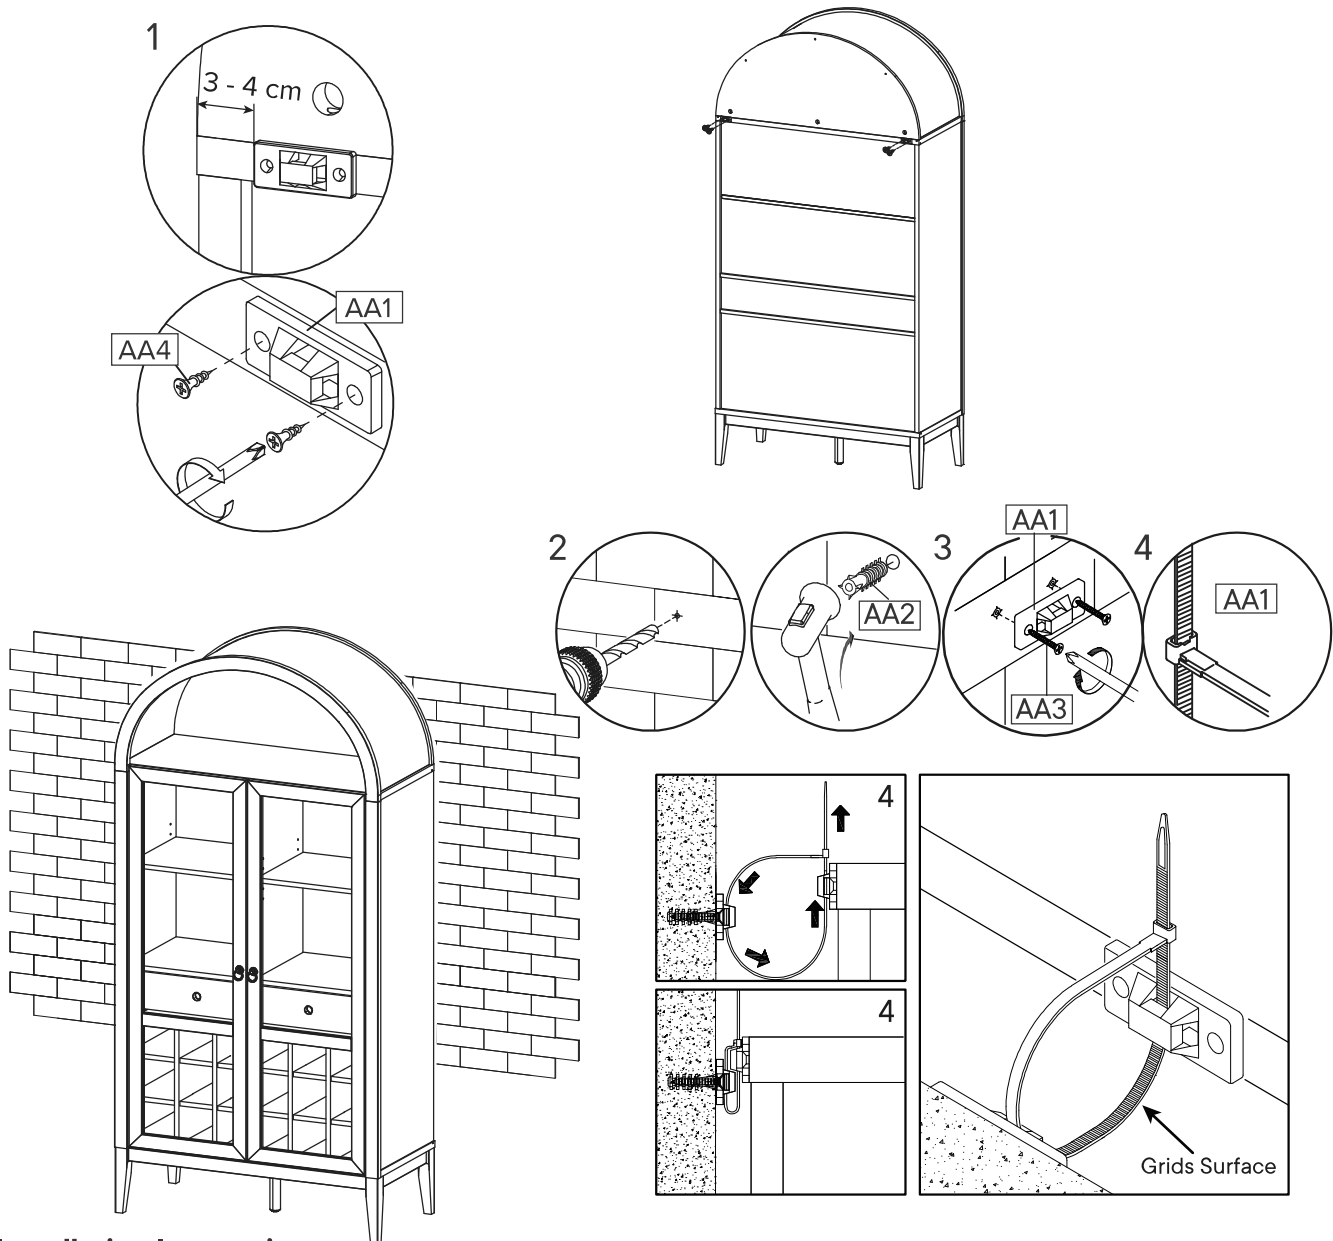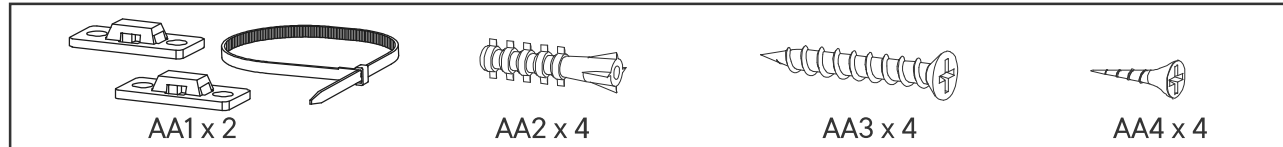

Installation Instructions :

1. Attach bracket (AA1) securely to the back top of the furniture using screw (AA4) provided. Allow 8 – 10 cm from each side.
2. Please make a hole for wall plugs position on the wall and minimum 15 mm below bracket secured to the back of unit. Attach the wall plugs (AA2).
3. Install the other bracket (AA1) on the wall over wall plugs (AA2), secure with screw (AA3). Place furniture into position so both brackets (AA1) are aligned.
4. Lace the end of the restraints strap through the larger hole in each bracket. Ensure the restraints strap with grids surface facing the inner loops. Bring both ends together and slide the flat end through the locking end and draw it through until all slack is removed.
5. Make sure that the strap is securely laced & locked.