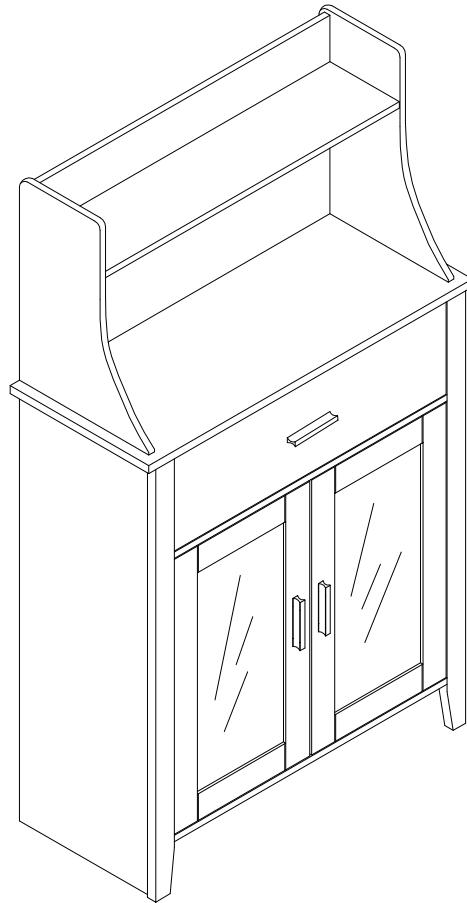


# ASSEMBLY INSTRUCTIONS


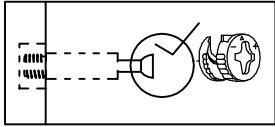

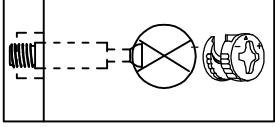

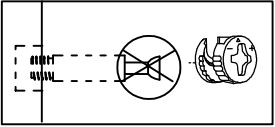
## Kitchen Cabinet






### NOTE TO CUSTOMERS:

- For ease and speed of assembly we recommend that before you commence each step of the assembly that you identify all the parts required to complete that step.
- We recommend that where possible you allow sufficient space to assemble the item as close as possible to the place where it will be once assembled.
- For the protection of your furniture we recommend that the product is placed on protected surfaces during assembly to prevent any damage.
- During assembly do not over tighten, as this may damage the product.
- Please ensure you retain all the product packaging until the item completely assembled.
- Please periodically check all fittings and re-tighten as necessary.
- Please never allow any liquids to remain on your furniture as absorption can cause the wood to warp or finish to de-laminate.
- It is recommended that this item should be assembled by two adults.

## To insert a cam lock: (Please read below instructions before assembling)

















|                                                                                   |                                                                                                           |                                                                                                                                                                                   |
|-----------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|  | <p><b>Diagram A</b></p>  | <p>1. Insert cam screw into hole as shown in diagram A .</p>                                                                                                                      |
|  | <p><b>Diagram B</b></p>  | <p><b>Make sure not to insert the cam screw:</b><br/>Too deep as shown in figure B as this will cause the cam screw to be misaligned and unable to interlock properly.</p>        |
|  | <p><b>Diagram C</b></p>  | <p>Also avoid inserting the cam screw too close to the surface of the hole as shown in figure C, as this will cause the cam lock to be too loose, and not interlock properly.</p> |
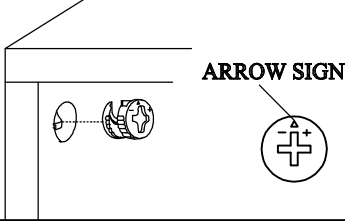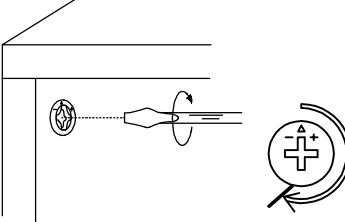
|                                                                                     |                                                                                                                                                                                                                                  |
|-------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|  | <p>2. Connect the panels together.</p>                                                                                                                                                                                           |
|  | <p>3. When inserting the cam lock make sure the arrow of the cam lock faces the cam screw.</p>                                                                                                                                   |
|  | <p>4. To tighten the cam lock turn the cam lock clockwise 90-180 degree or until the arrow is facing opposite the place cam lock was inserted.</p> <p><b>NOTE: DO NOT USE AN AUTOMATIC SCREWDRIVER TO TIGHTEN CAM LOCKS.</b></p> |






### Note:

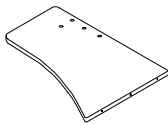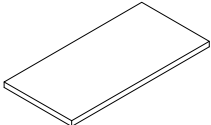- Read these instructions carefully before assembling.
- Tools required : Phillips screwdriver, flat screwdriver.
- Find a clean, smooth area on which to work , such as a carpet, in order to avoid scratching the wood surfaces.
- Wait to dispose of the packing material until assembly is complete and all parts and hardware are accounted for.
- Two or more people might be required for assembly.

# Part List


|                                                                                                                                              |                                                                                                                                                |                                                                                                                                                     |                                                                                                                                                        |
|----------------------------------------------------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------|
| <p>A1</p> <p>Quantity of 1</p>  <p>Top Panel</p>            | <p>A2</p> <p>Quantity of 2</p>  <p>Side Panel (L&amp;R)</p>   | <p>A3</p> <p>Quantity of 1</p>  <p>Bottom Panel</p>               | <p>A4</p> <p>Quantity of 1</p>  <p>Cross Bar</p>                    |
| <p>A5</p> <p>Quantity of 1</p>  <p>Top Apron</p>            | <p>A6</p> <p>Quantity of 1</p>  <p>Top Shelf</p>              | <p>A7</p> <p>Quantity of 2</p>  <p>Upper Side Panel (L&amp;R)</p> | <p>A8</p> <p>Quantity of 1</p>  <p>Upper Back Panel</p>             |
| <p>A9</p> <p>Quantity of 1</p>  <p>Back Panel</p>           | <p>A10</p> <p>Quantity of 2</p>  <p>Door (L&amp;R)</p>        | <p>A11</p> <p>Quantity of 1</p>  <p>Drawer Front Panel</p>        | <p>A12</p> <p>Quantity of 2</p>  <p>Drawer Side Panel (L&amp;R)</p> |
| <p>A13</p> <p>Quantity of 1</p>  <p>Drawer Back Panel</p> | <p>A14</p> <p>Quantity of 1</p>  <p>Drawer Bottom Panel</p> | <p>A15</p> <p>Quantity of 1</p>  <p>Drawer Supporter</p>        | <p>A16</p> <p>Quantity of 1</p>  <p>Shelf</p>                     |

# Hardware List

|                                                                                                                                       |                                                                                                                                         |                                                                                                                                              |                                                                                                                                           |
|---------------------------------------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------|
| <p>B1</p> <p>Quantity of 16</p>  <p>Wood Dowel</p> | <p>B2</p> <p>Quantity of 22</p>  <p>Cam-Lock</p>     | <p>B3</p> <p>Quantity of 30</p>  <p>Screw</p>             | <p>B4</p> <p>Quantity of 7</p>  <p>Screw</p>         |
| <p>B5</p> <p>Quantity of 4</p>  <p>Screw</p>       | <p>B6</p> <p>Quantity of 1</p>  <p>Magnet</p>        | <p>B7</p> <p>Quantity of 3</p>  <p>Handle</p>            | <p>B8</p> <p>Quantity of 4</p>  <p>Shelf Support</p> |
| <p>B9</p> <p>Quantity of 4</p>  <p>Door Pin</p>    | <p>B10</p> <p>Quantity of 1</p>  <p>Anti-tip Kit</p> | <p>B11</p> <p>Quantity of 1</p>  <p>Anchor with Screw</p> |                                                                                                                                           |

# Assembly instructions

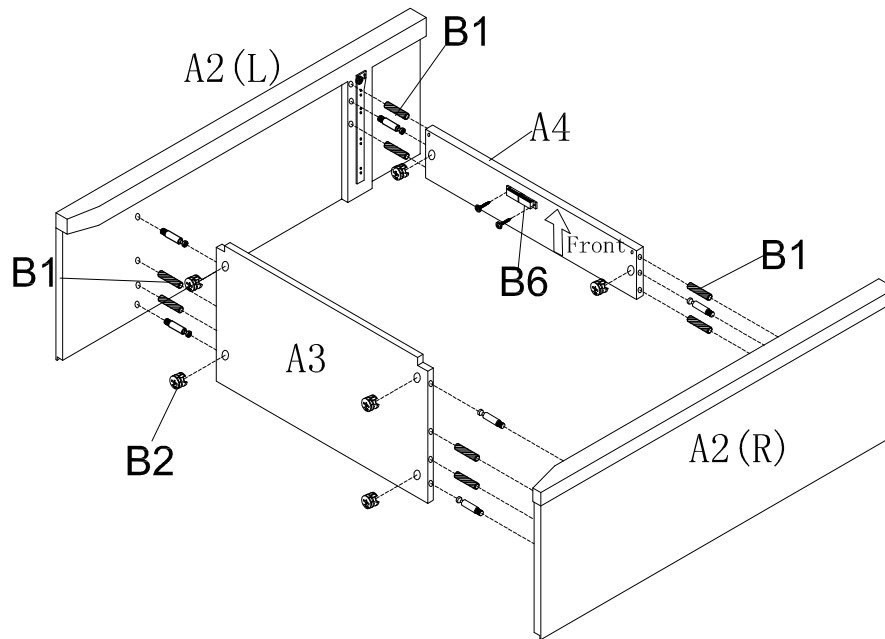
## Step :1



|    |  |       |
|----|--|-------|
| B1 |  | 8pcs  |
| B2 |  | 6sets |
| B6 |  | 1pcs  |

- 1). Attach Magnet B6 to Cross Bar A4 with included screws.
- 2). Assemble Bottom Panel A3 and Cross Bar A4 to Side Panels A2(L&R) using Camlocks B2 and Wood Dowels B1.


## Step :2

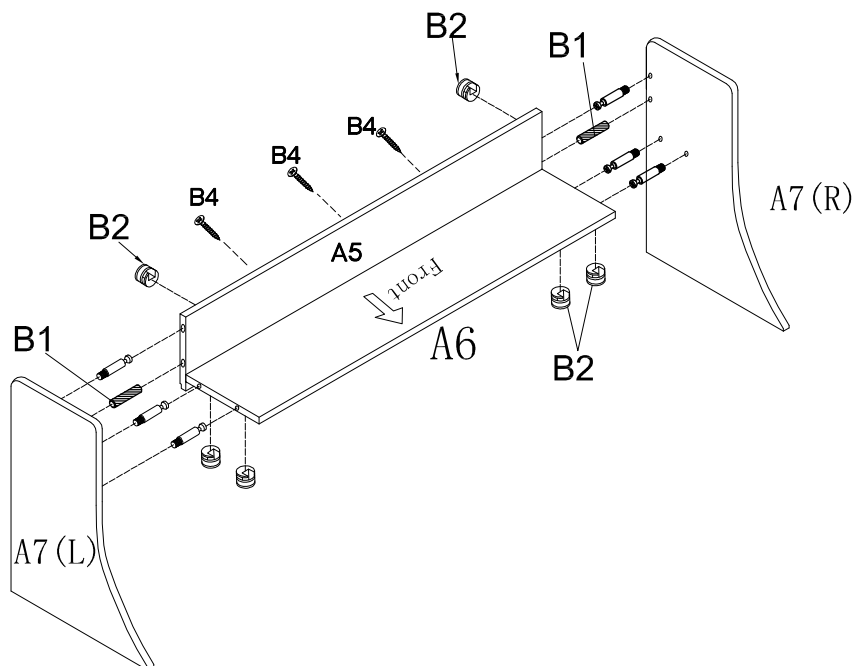

|    |  |       |
|----|--|-------|
| B1 |  | 2pcs  |
| B2 |  | 6sets |
| B4 |  | 3pcs  |


1. Assemble Upper Side Panels A7(L&R) to Top Apron A5 and Top Shelf A6 using Camlocks B2 and Wood Dowels B1.
2. Attach the Top Apron A5 to Top Shelf A6 using Screws B4.

### Step :3

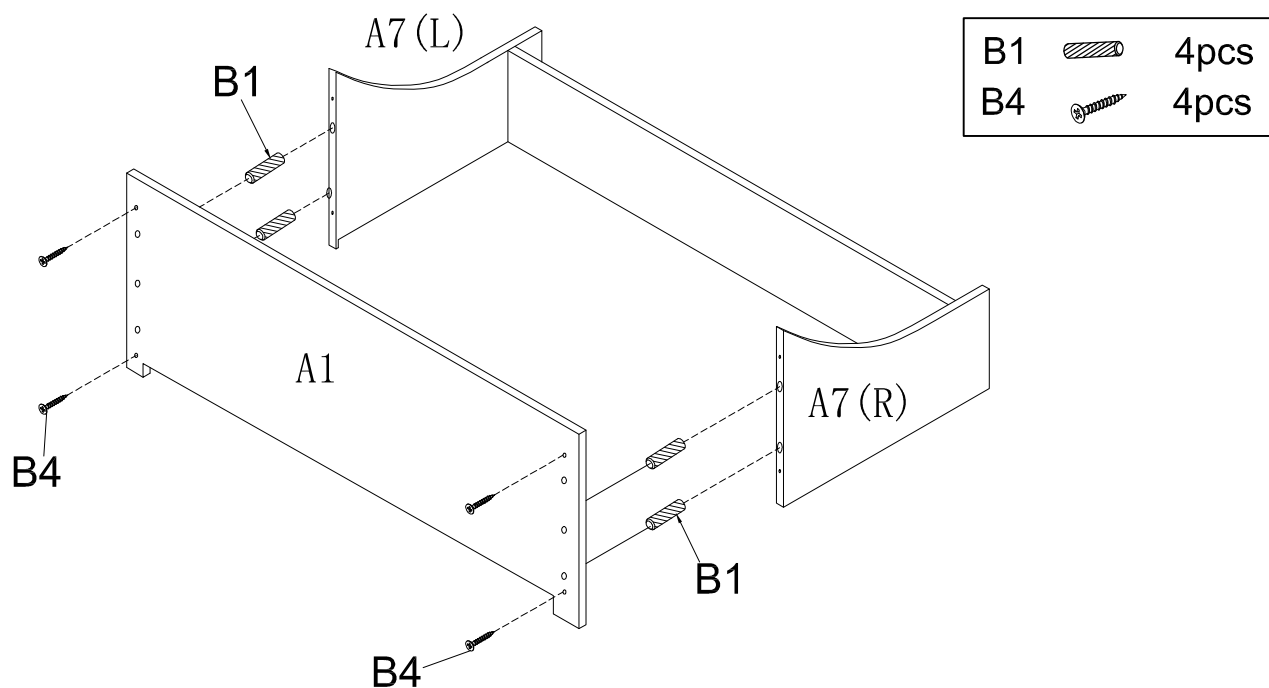

Attach Top Panel A1 to Upper Side Panels A7(L&R) using Wood Dowels B1 and Screws B4.


### Step :4

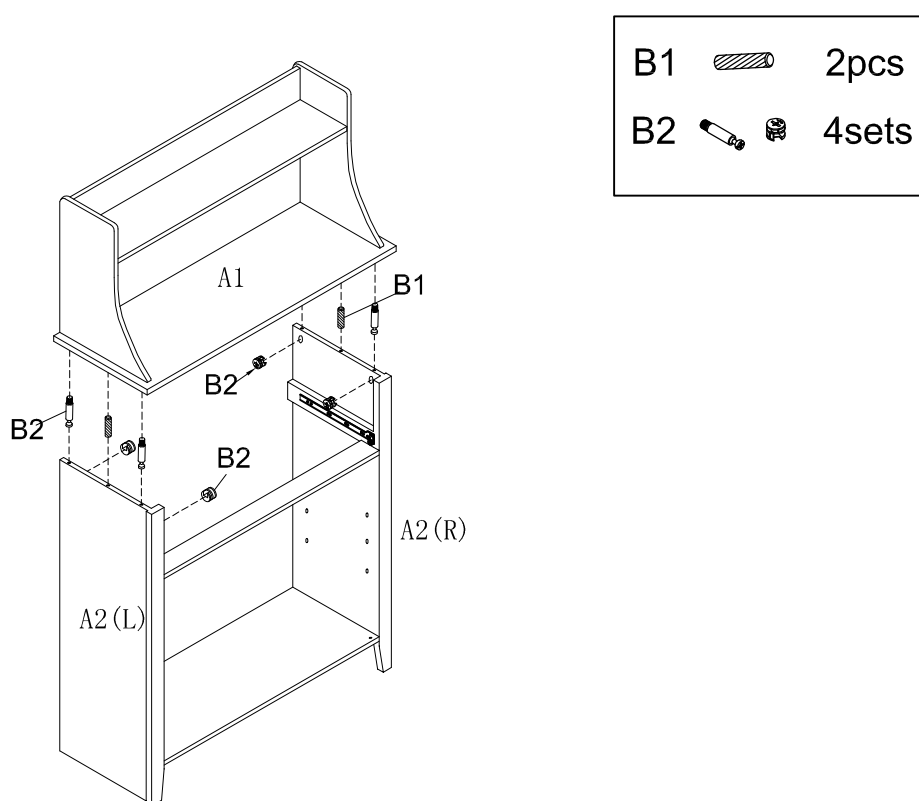

Attach Top Panel A1 to Side Panels A2(1L&R) using Camlocks B2 and Wood Dowels B1.

## Step :5

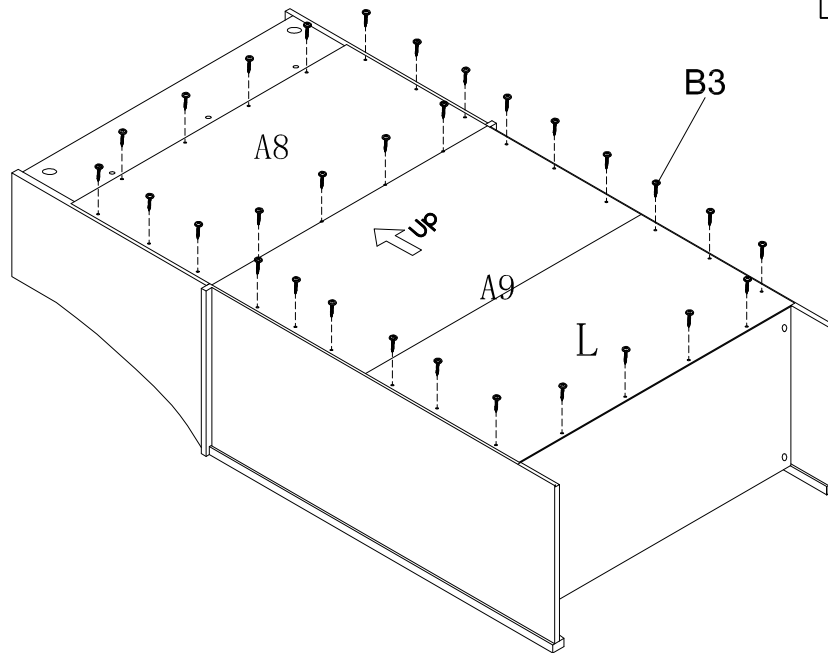
B3  30pcs



Attach Upper Back Panel A8 to Upper Side Panels A7(L&R) , Top Apron A5 and Top Panel A1 using Screws B3, then attach Back Panel A9 to the back of Side Panels A2(L&R), Top Panel A1 and Bottom Panel A3 using Screws B3.


## Step :6

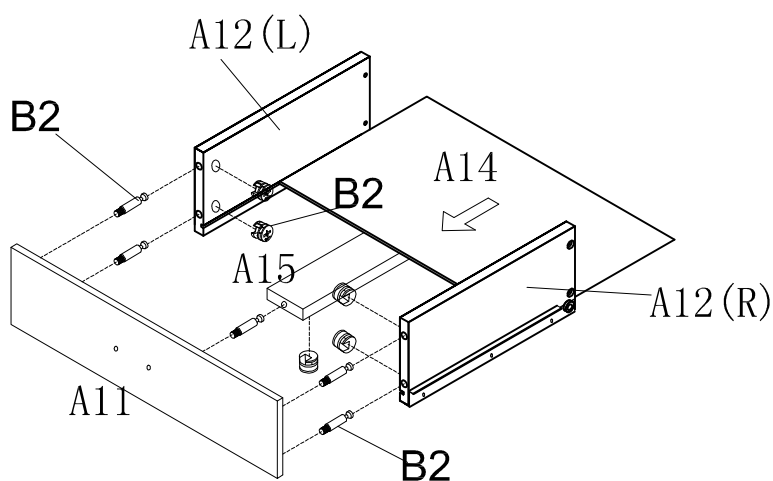B2   5sets




- 1). Assemble Drawer Supporter A15 and Drawer Side Panels A12(L&R) to Drawer Front Panel A11 using Camlocks B2.
- 2). Then insert Drawer Bottom Panel A14 into grooves on Drawer Side Panels A12(L&R) and Drawer Front Panel A11.

## Step :7

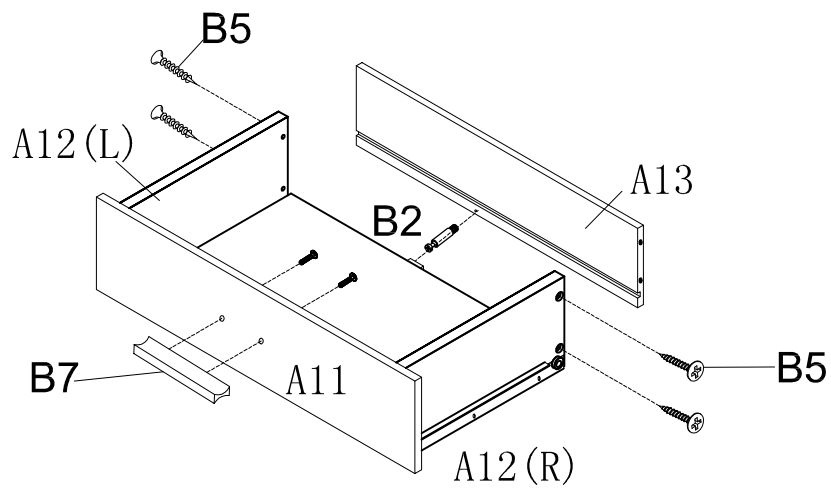


- 1). Assemble Drawer Back Panel A13 to Drawer Side Panels A12(L&R) using Screws B5 and Camlocks B2.
- 2). Attach Handle B7 to Drawer Front Panel A11 with included bolts.

## Step :8

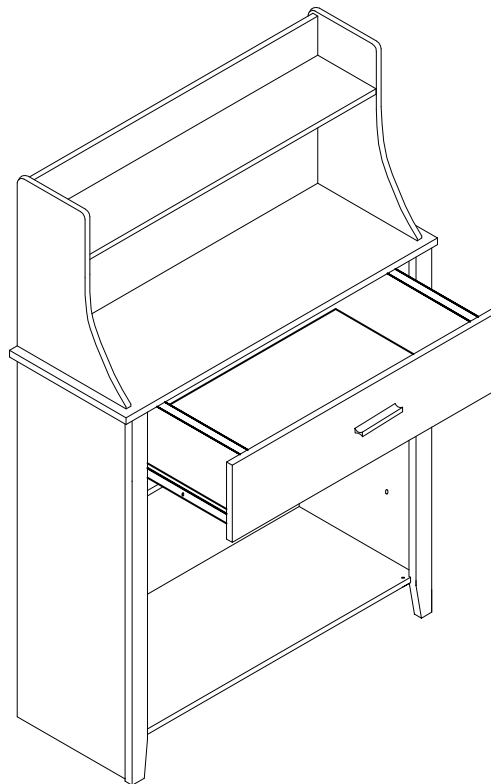


Insert the drawer into the unit.

## Step :9

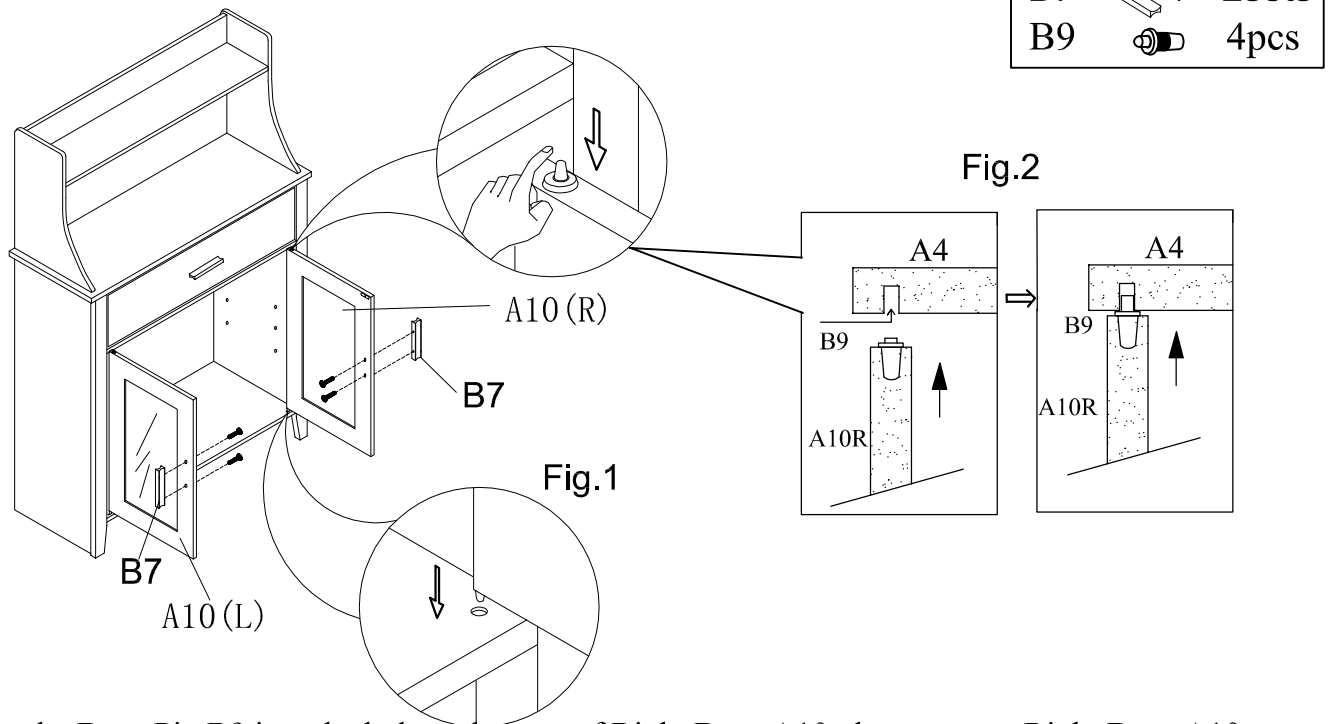


- 1). Insert the Door Pin B9 into the hole on bottom of Right Door A10, then connect Right Door A10 to Bottom Panel A3 as Fig1. Insert Door Pin B9 into the hole on the top of Right Door A10. Then press down Door Pin B9 see Fig 2. and hold the Door Panel carefully into the cabinet with the upper pin popping up into the hole of Cross Bar A4.
- 2). Attach Handle B7 to Doors A10(L&R) with included bolts.
- 3). Repeat the above Steps to assemble Left Door A10.

## Step :10

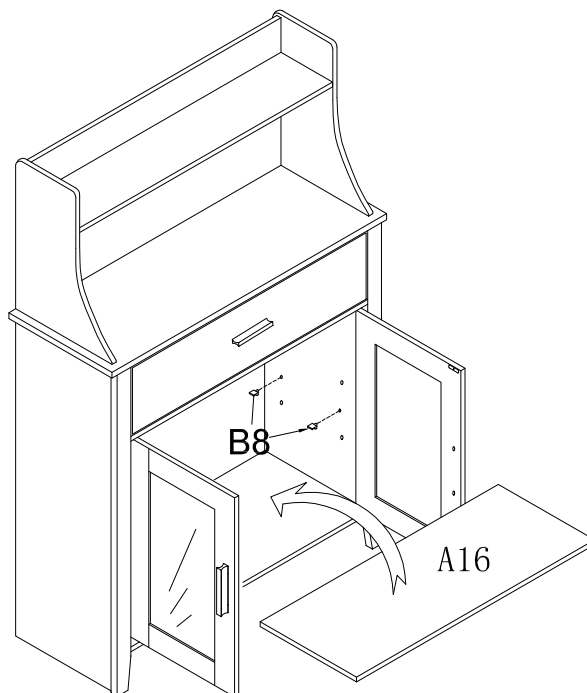

Insert Shelf Support B8 into holes on Side Panels A2(L&R), then place Shelf A16 onto Shelf Supports.

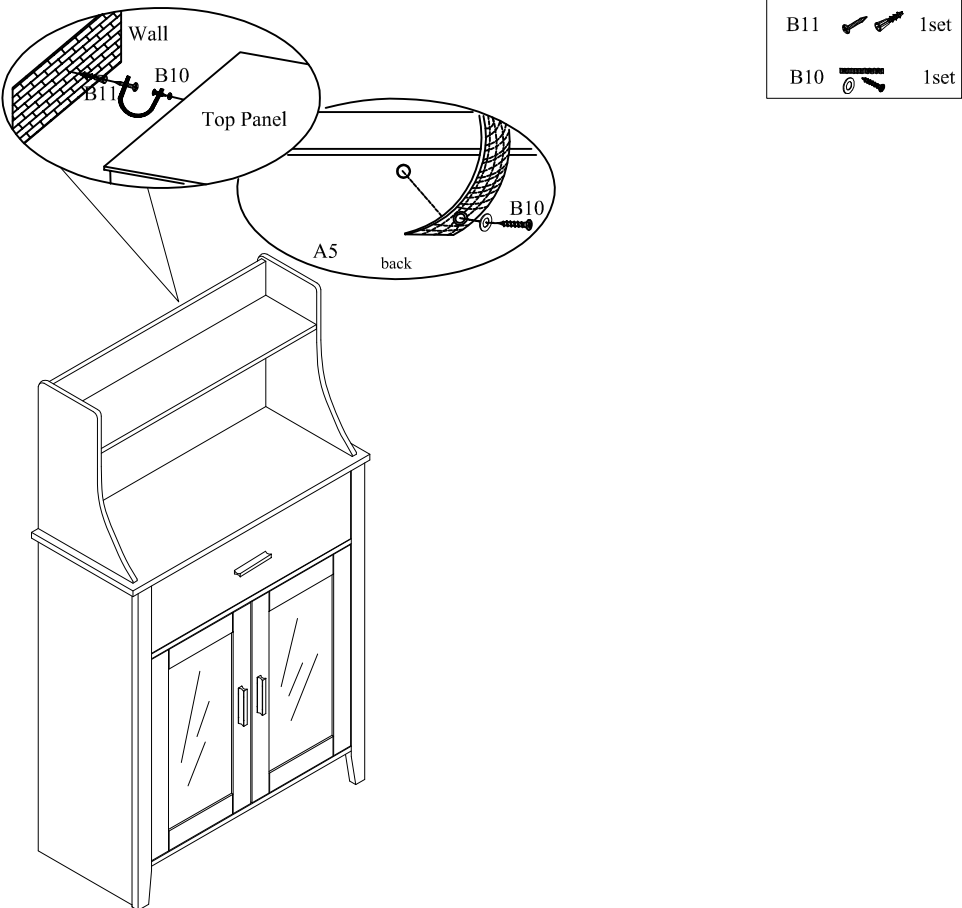Step :11



For your safety, please attach the unit to the wall by Anti-tip kit B10, Anchor with Screw B11 as shown above.

APPENDIX: Dimension of Hardwares in this AI.

|                                     |                           |                        |                                |
|-------------------------------------|---------------------------|------------------------|--------------------------------|
| <p>B1</p> <p>Wood Dowel</p>         | <p>B2</p> <p>Cam-Lock</p> | <p>B3</p> <p>Screw</p> | <p>B4</p> <p>Screw</p>         |
| <p>B5</p> <p>Screw</p>              | <p>B6</p> <p>Screw</p>    | <p>B7</p> <p>Screw</p> | <p>B10</p> <p>Anti-tip kit</p> |
| <p>B11</p> <p>Anchor with Screw</p> |                           |                        |                                |