




84031 Product Installation Instructions

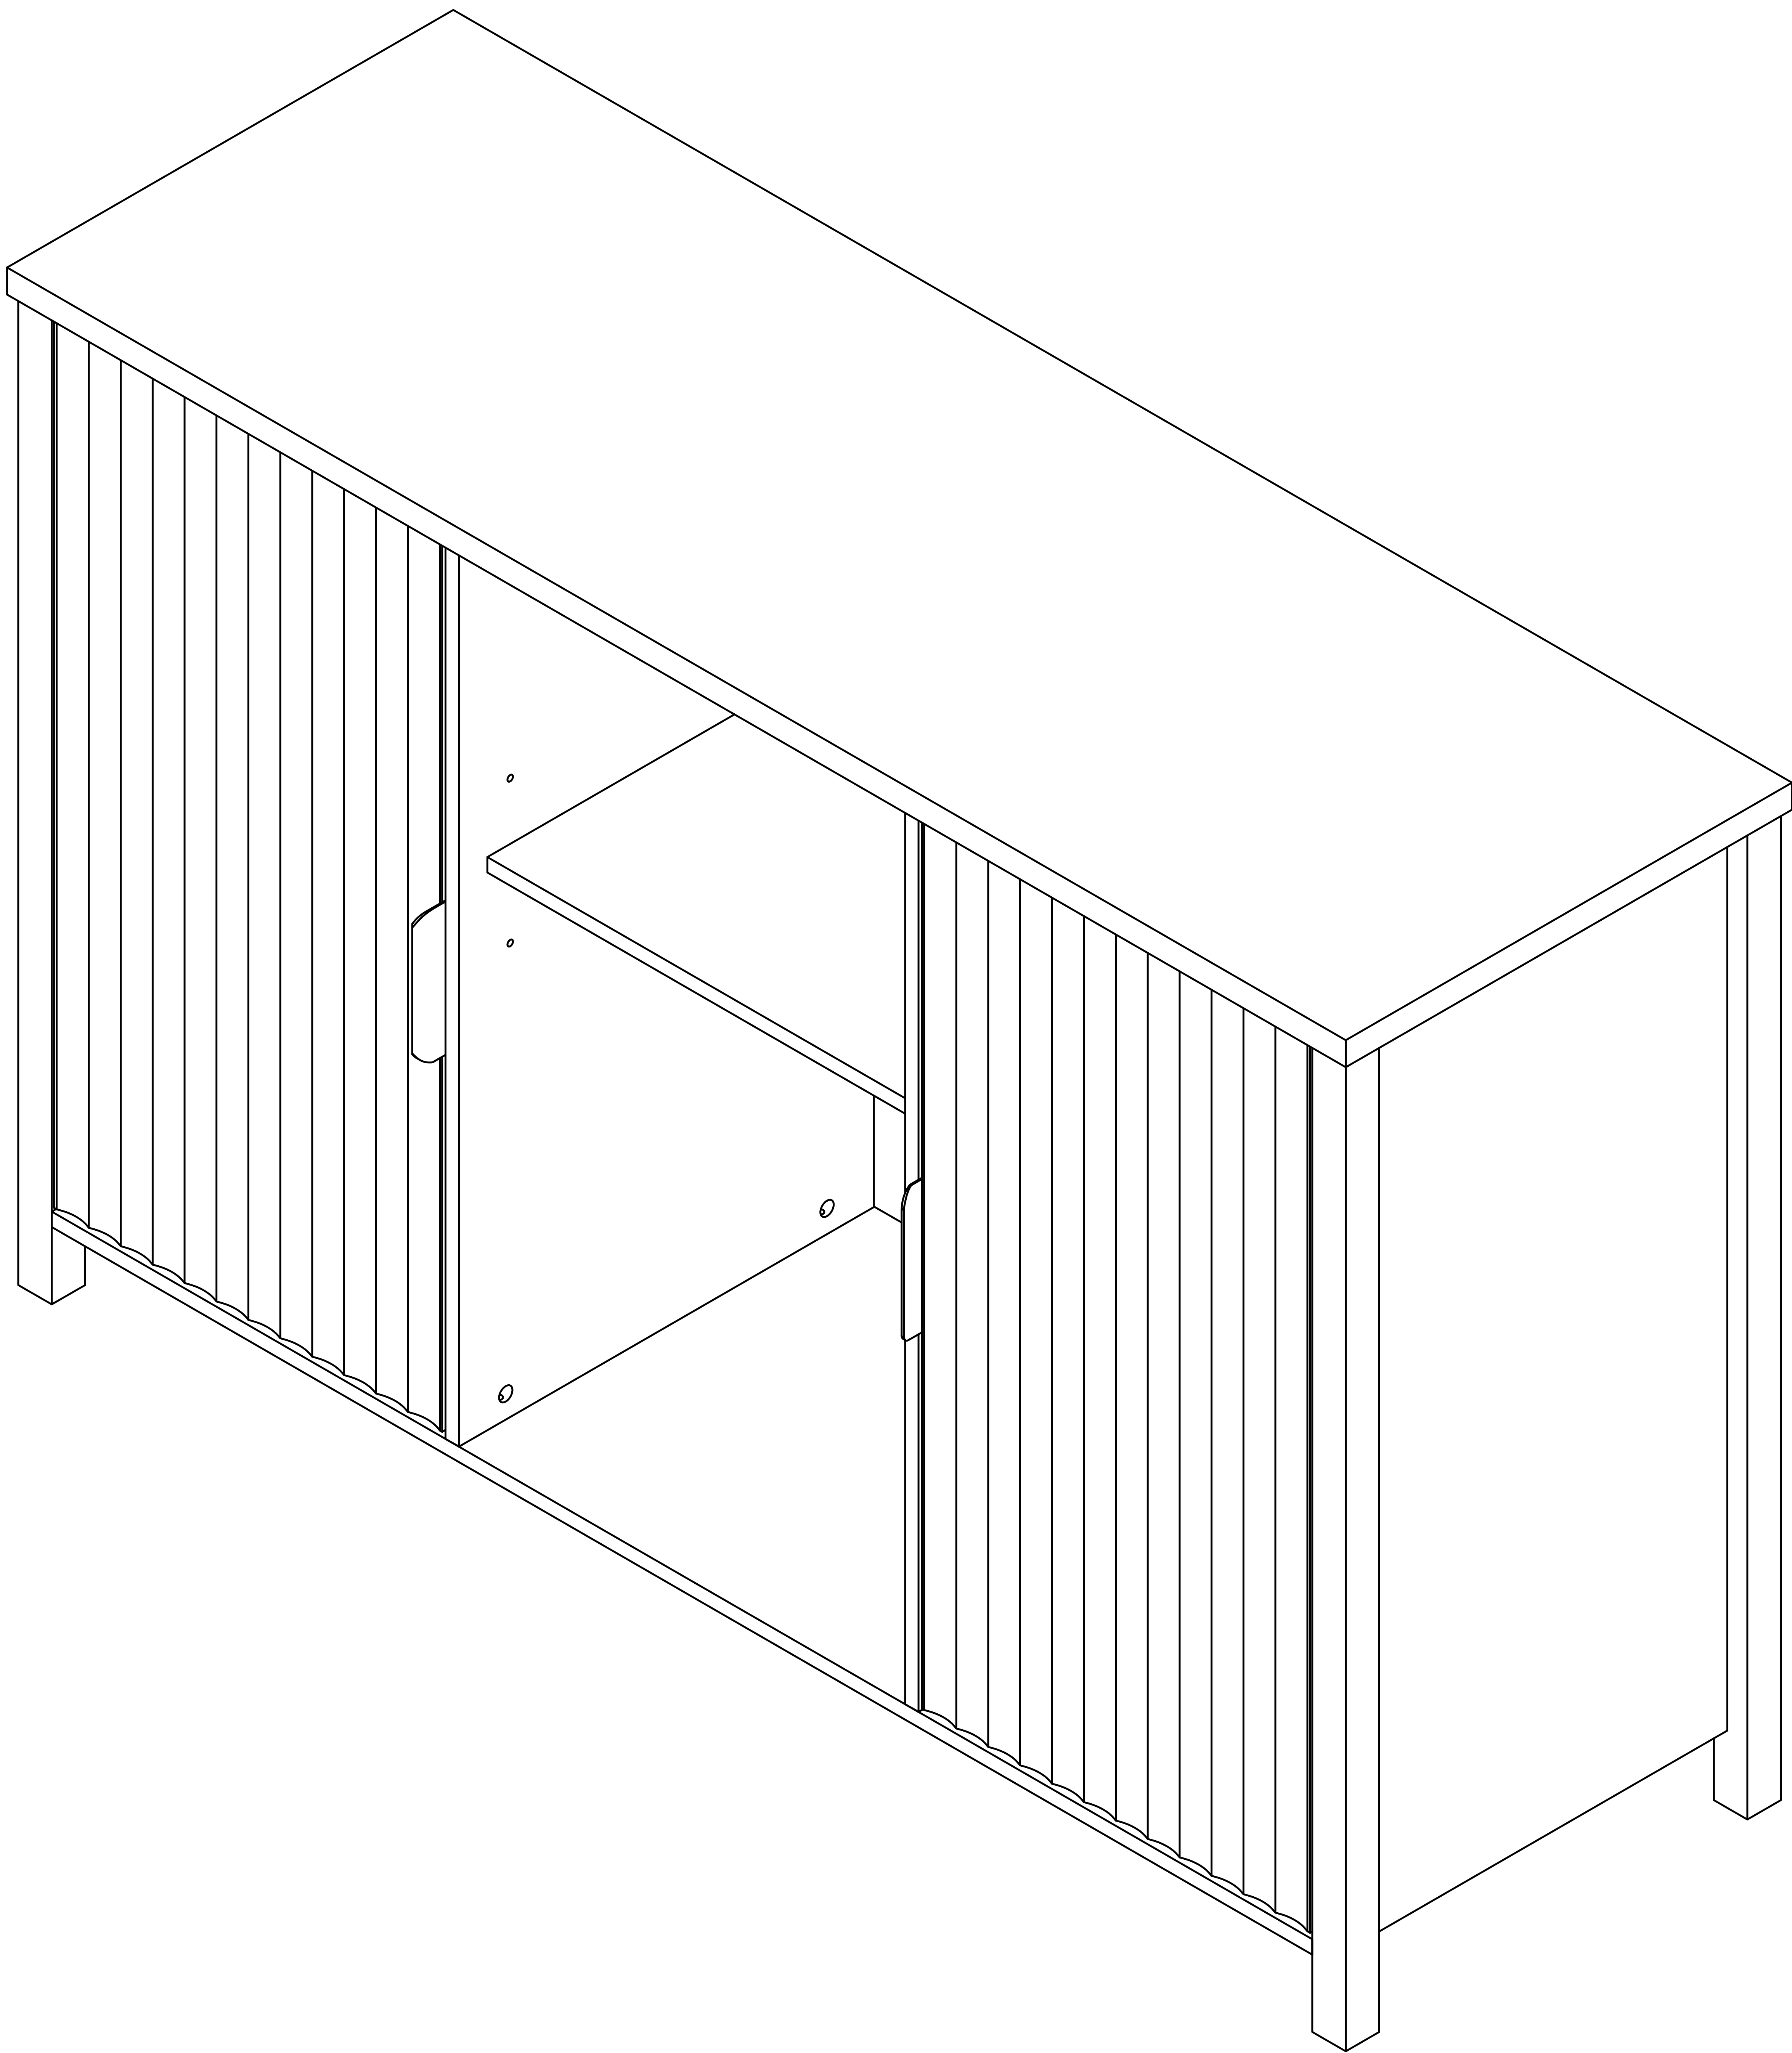


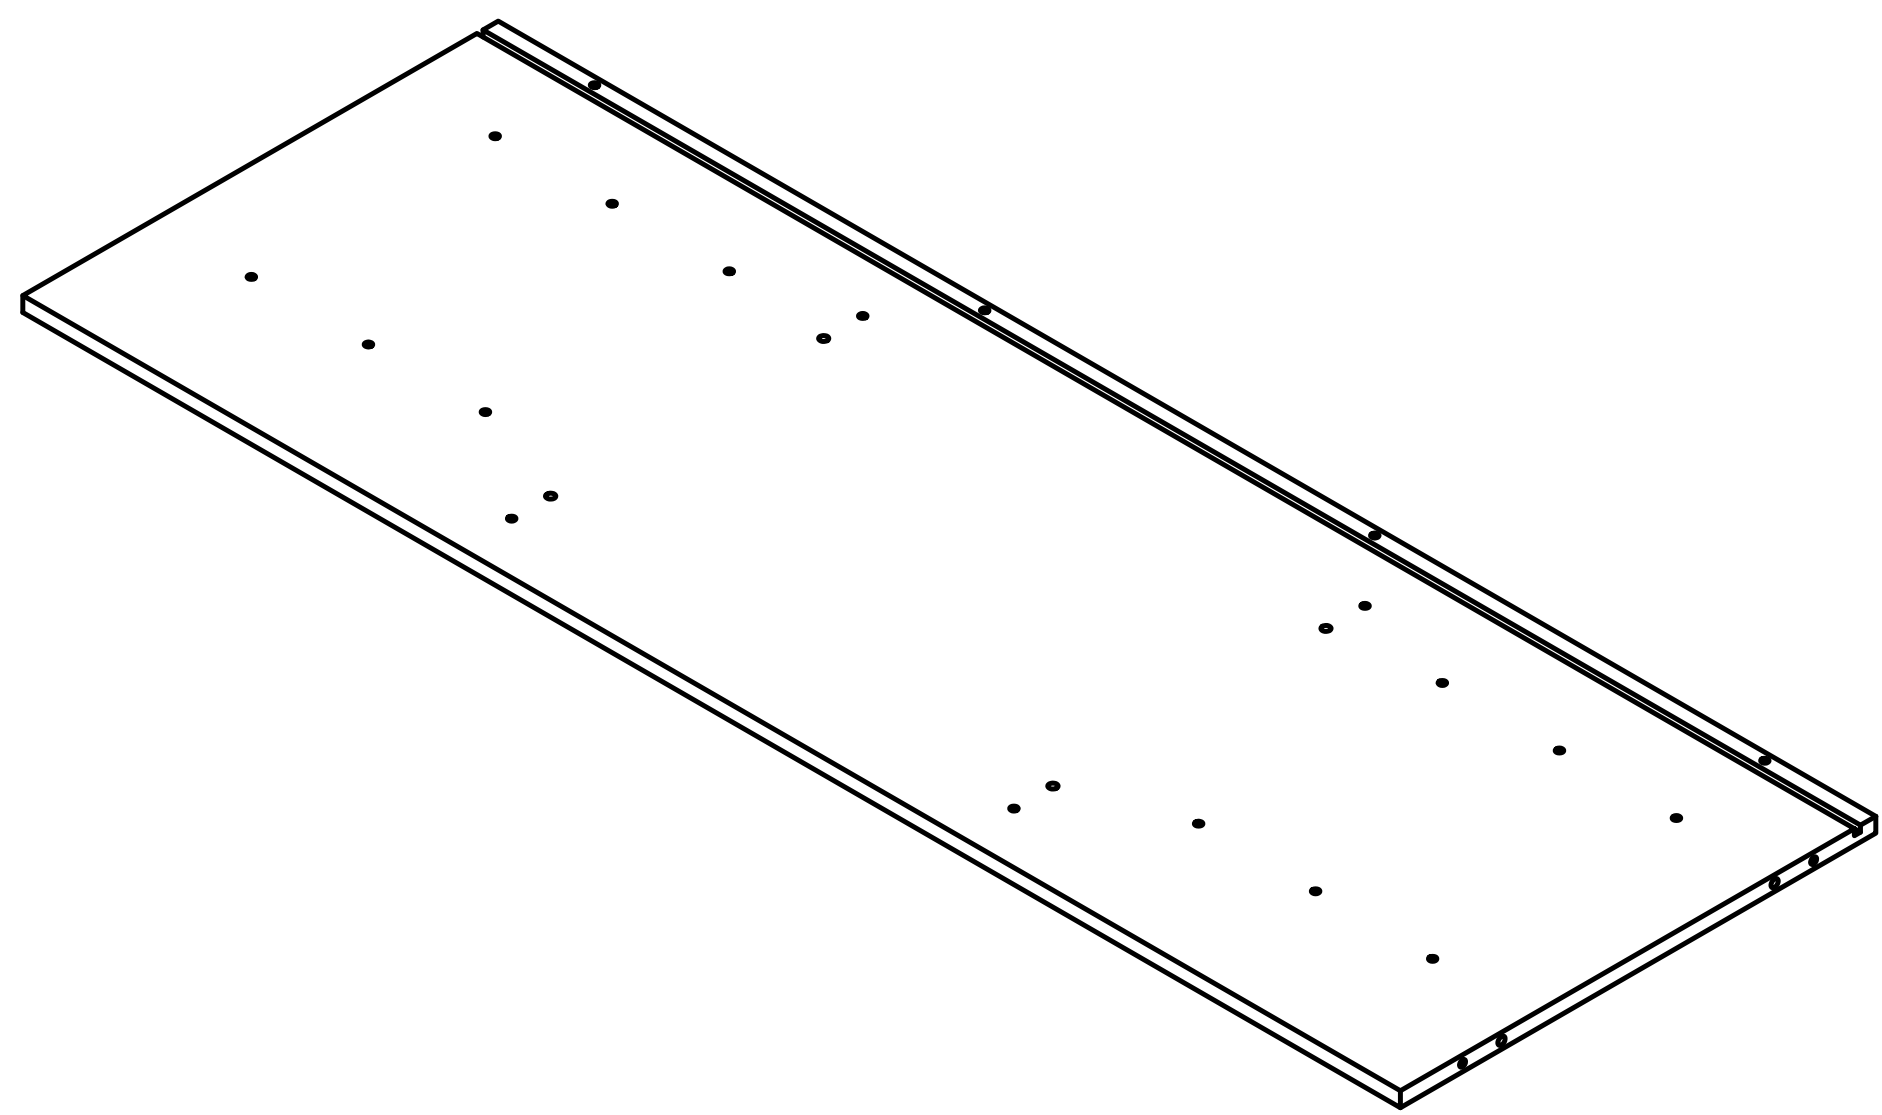


A x1

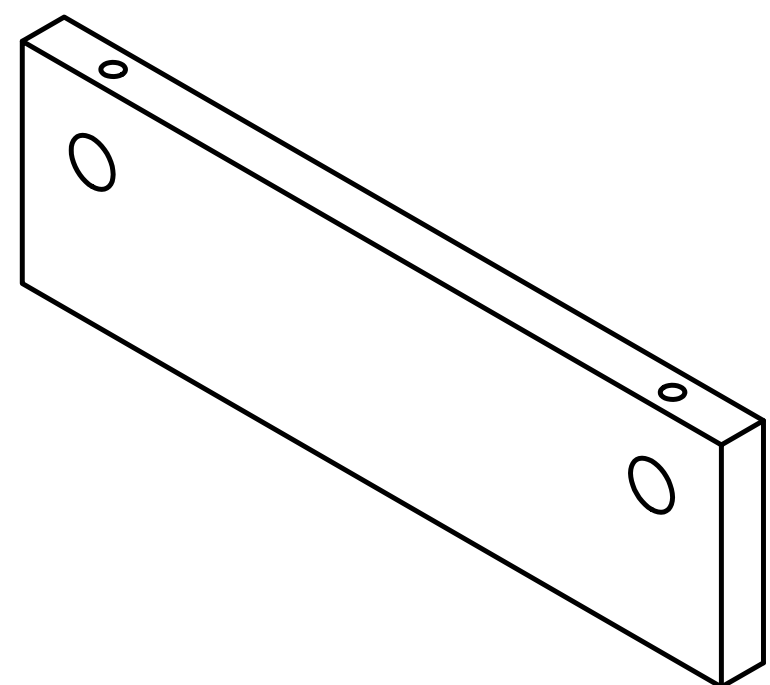


B x2

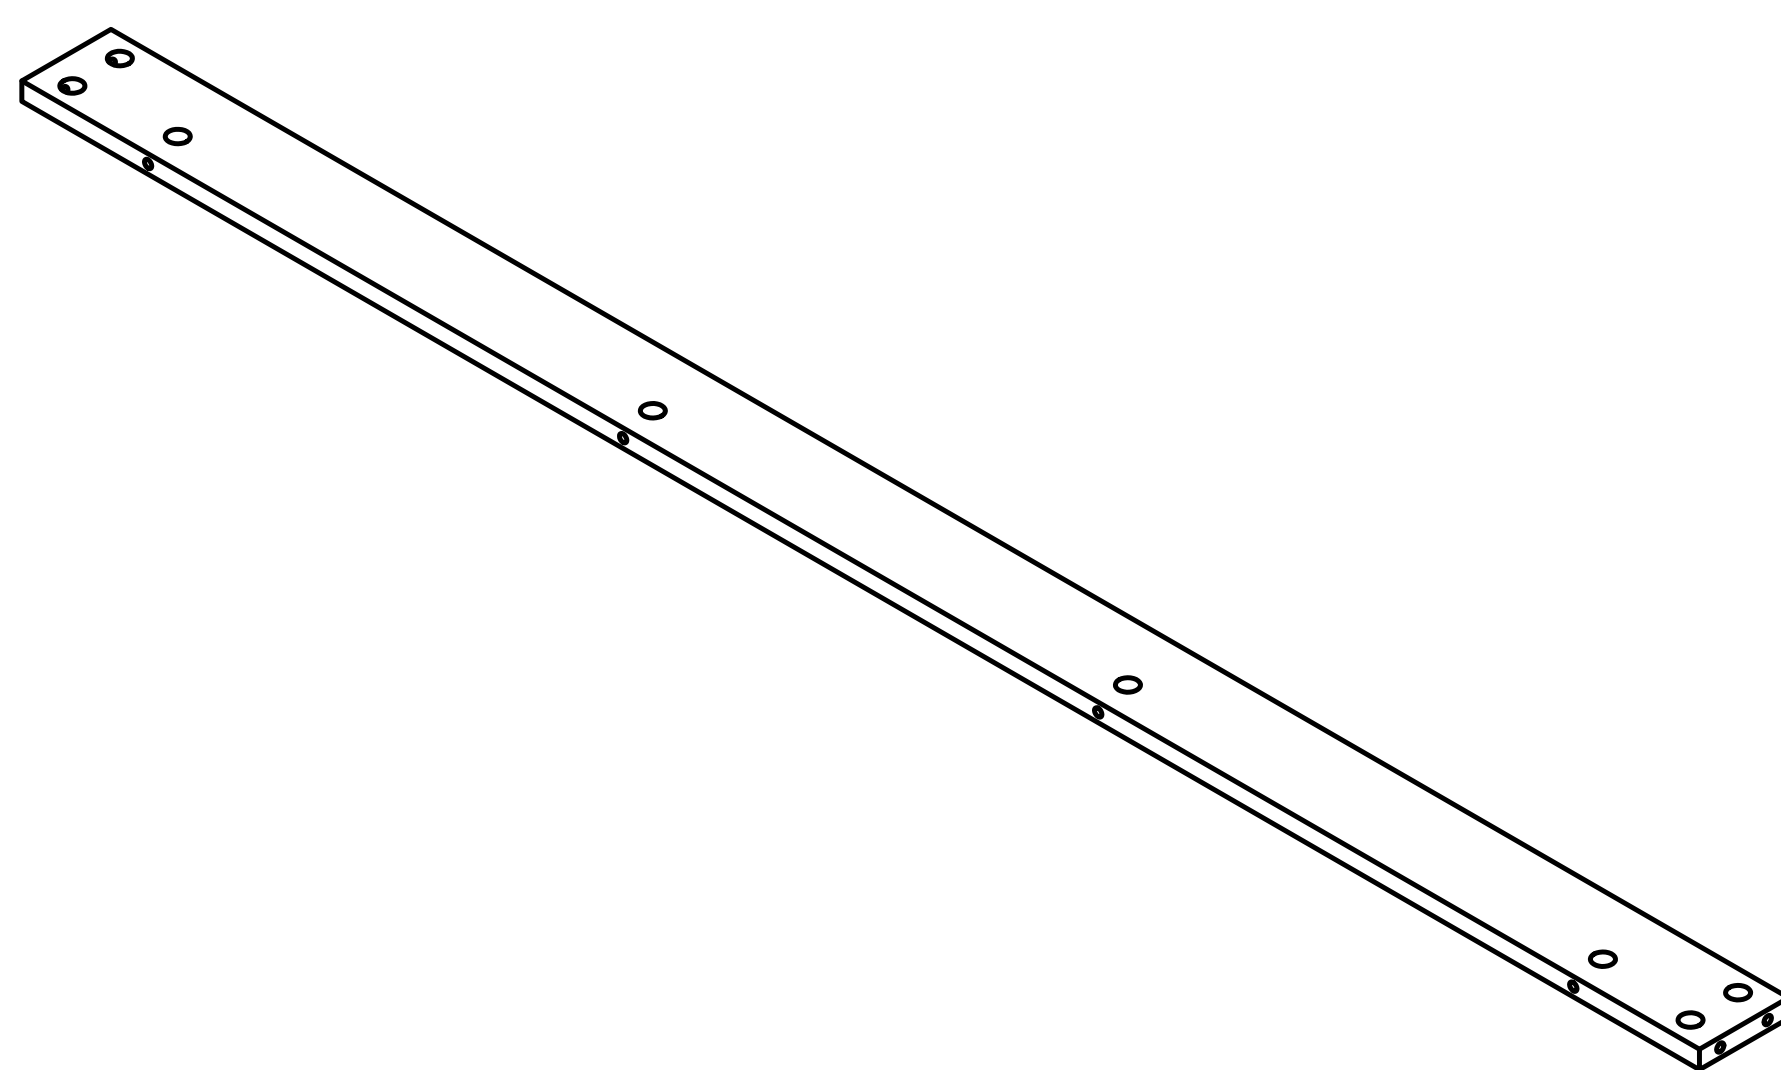


C x2

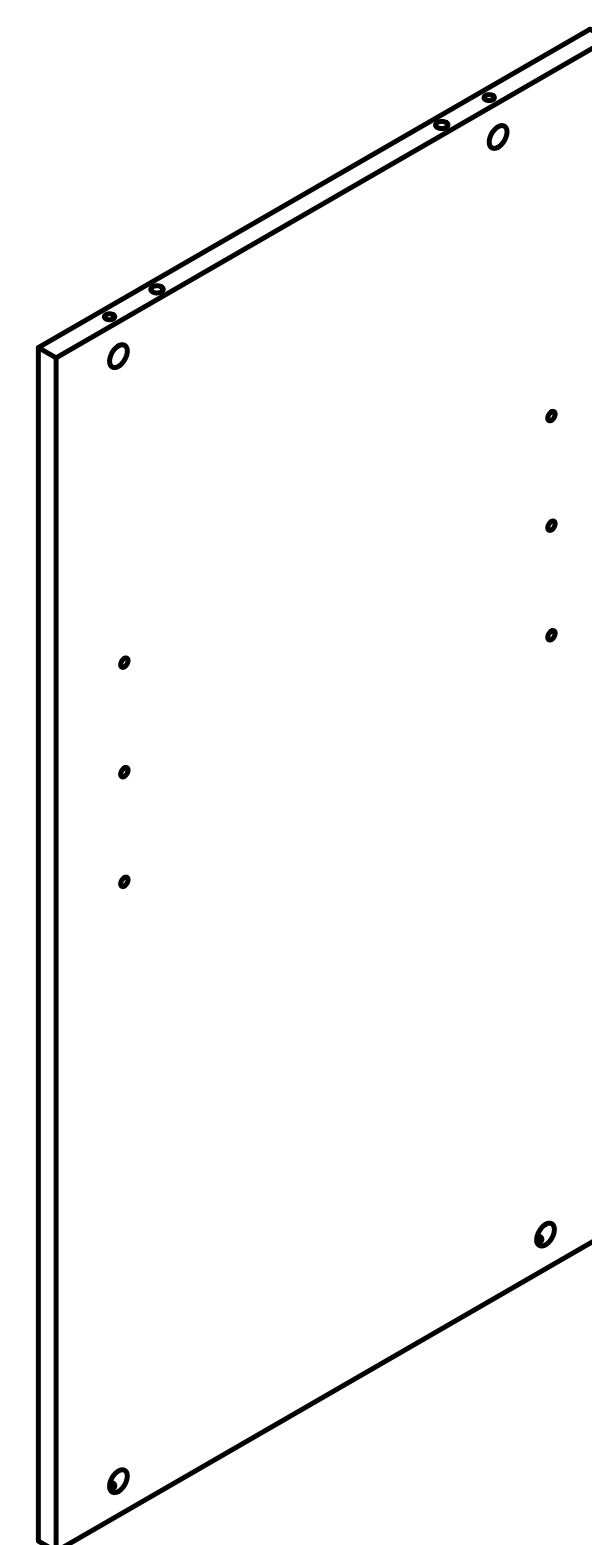


D x1

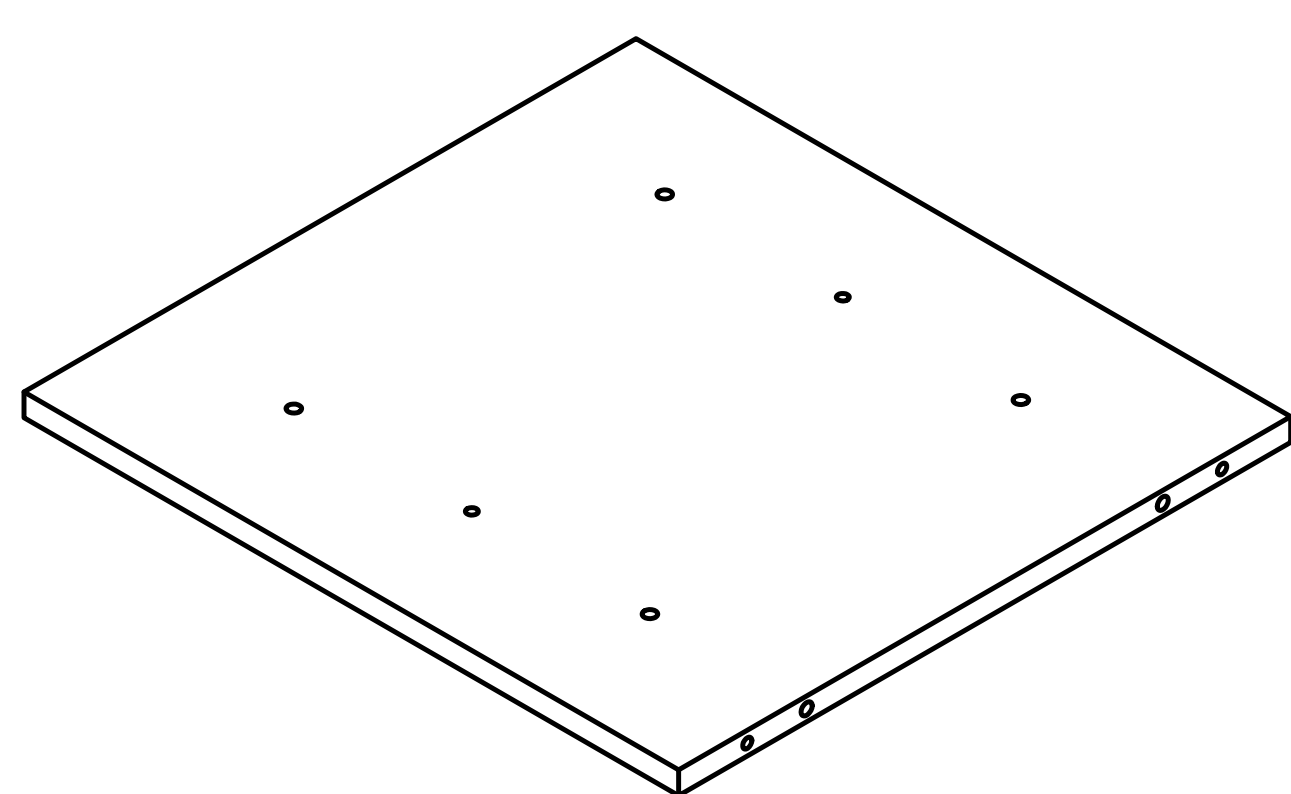


E x2

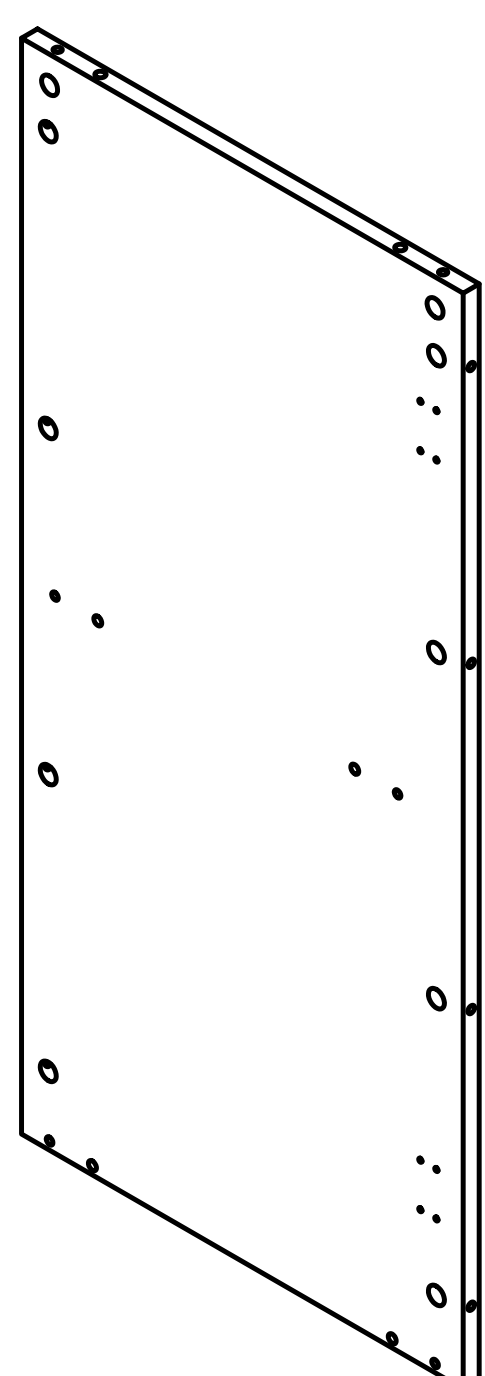


F x1

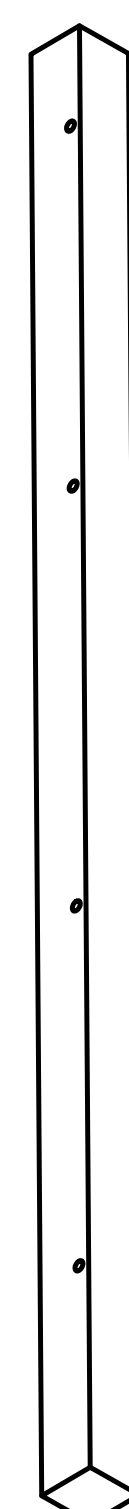


G x1

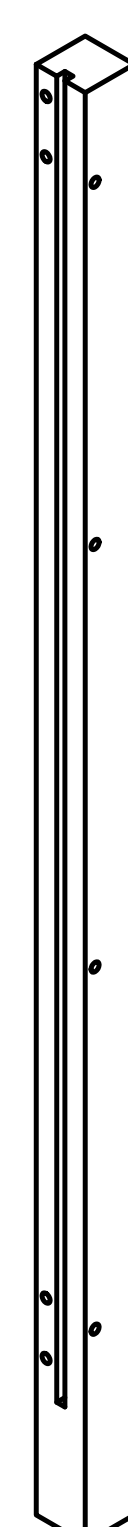


H x1

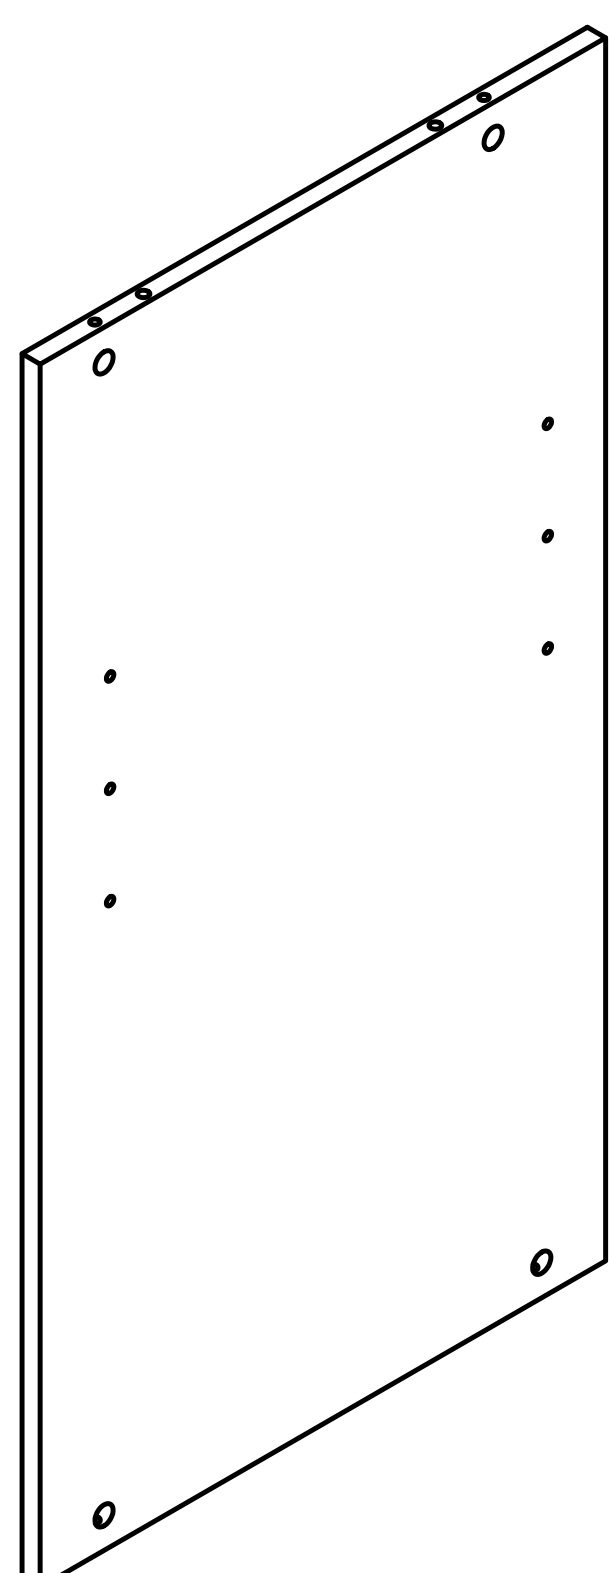


I x1

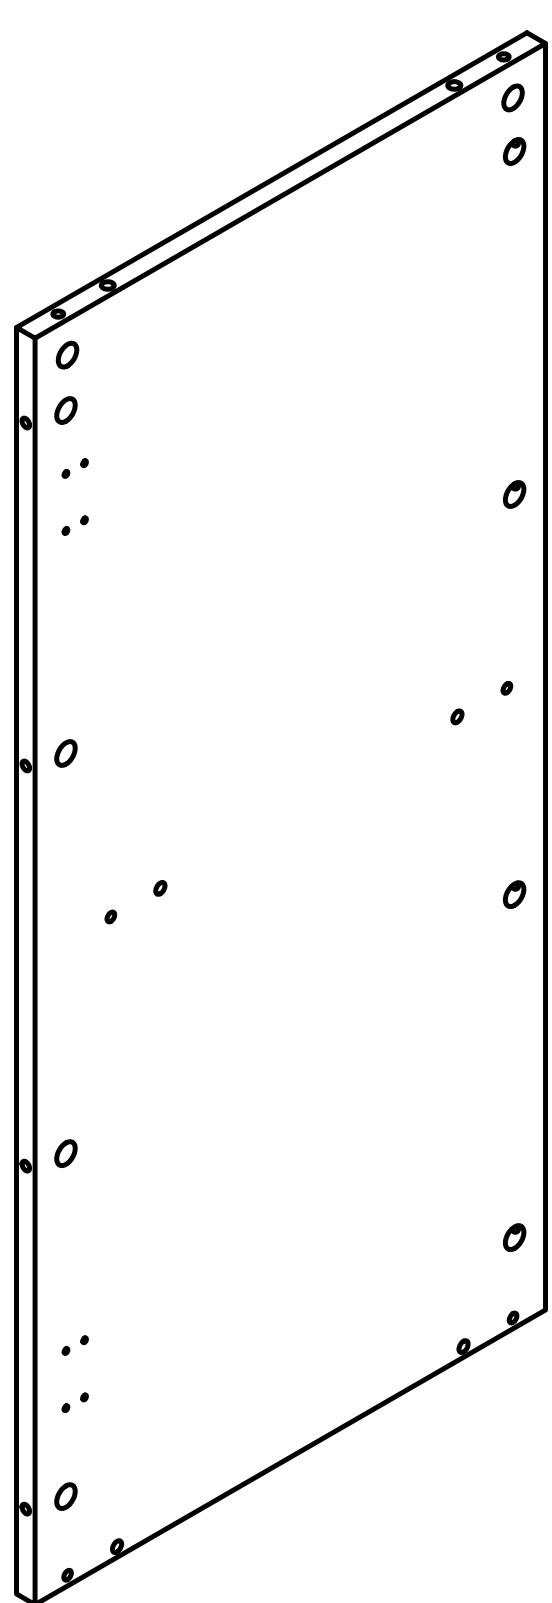


J x1

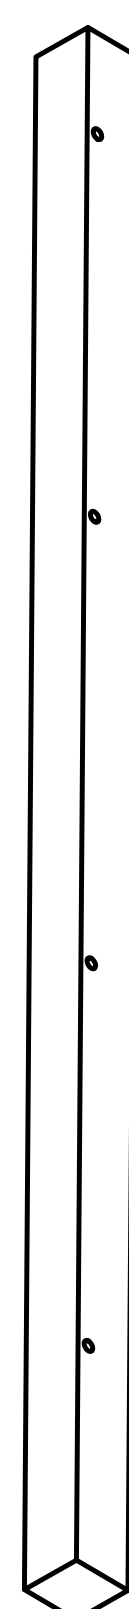


K x1

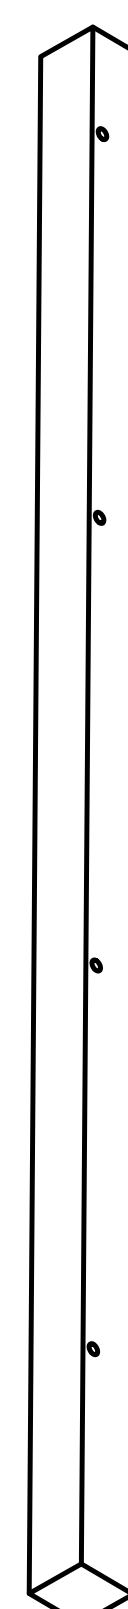


L x1

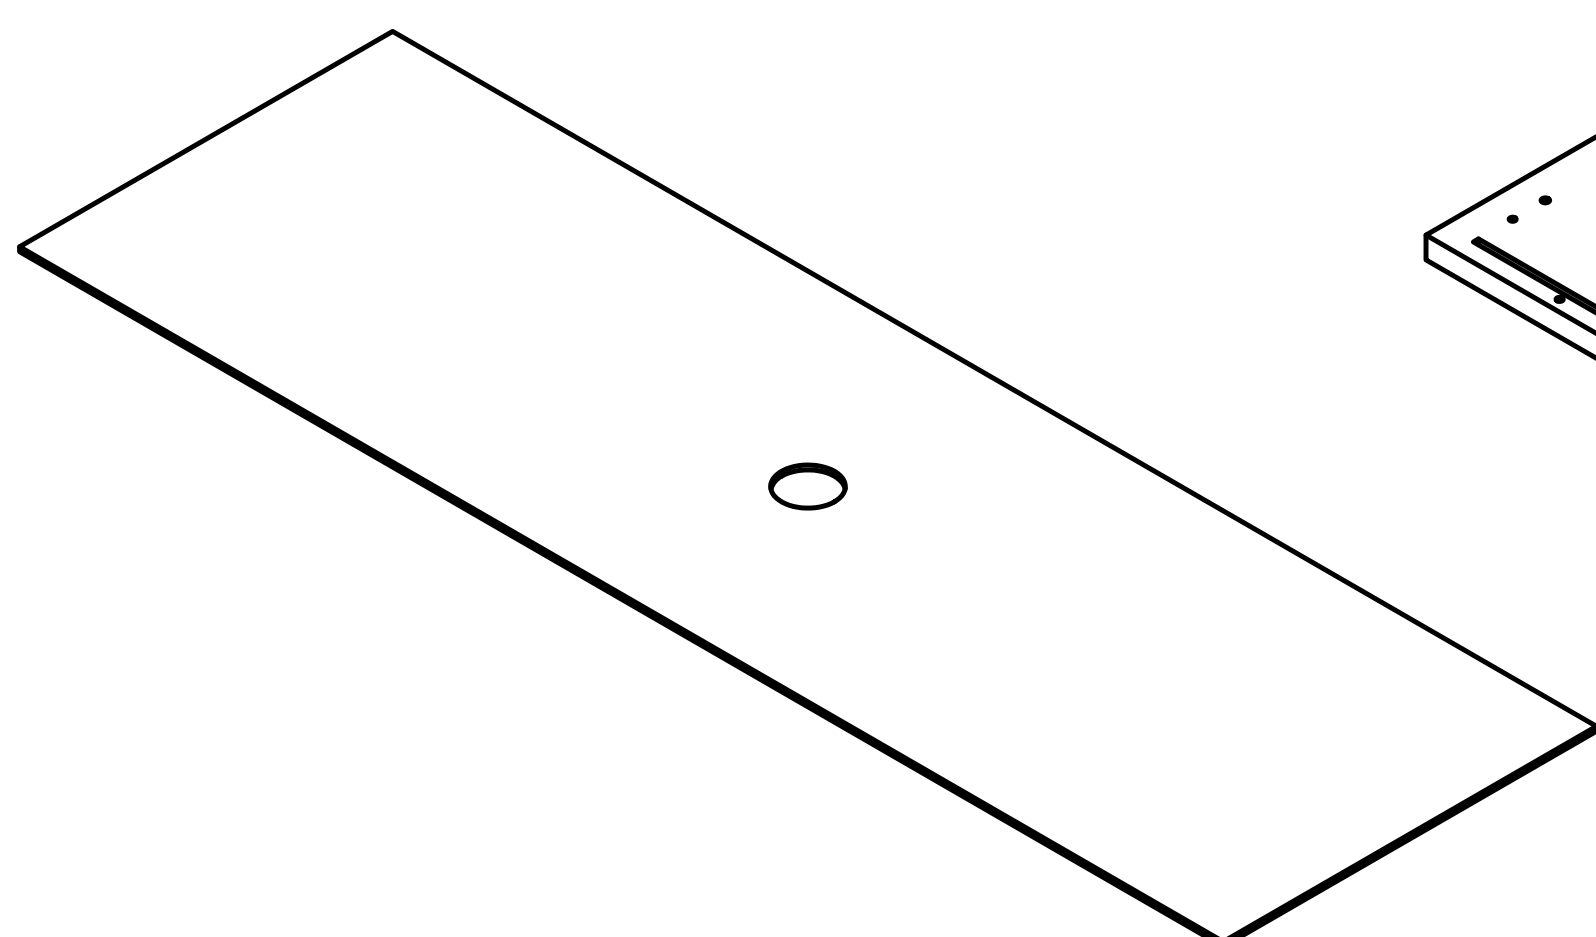


M x2

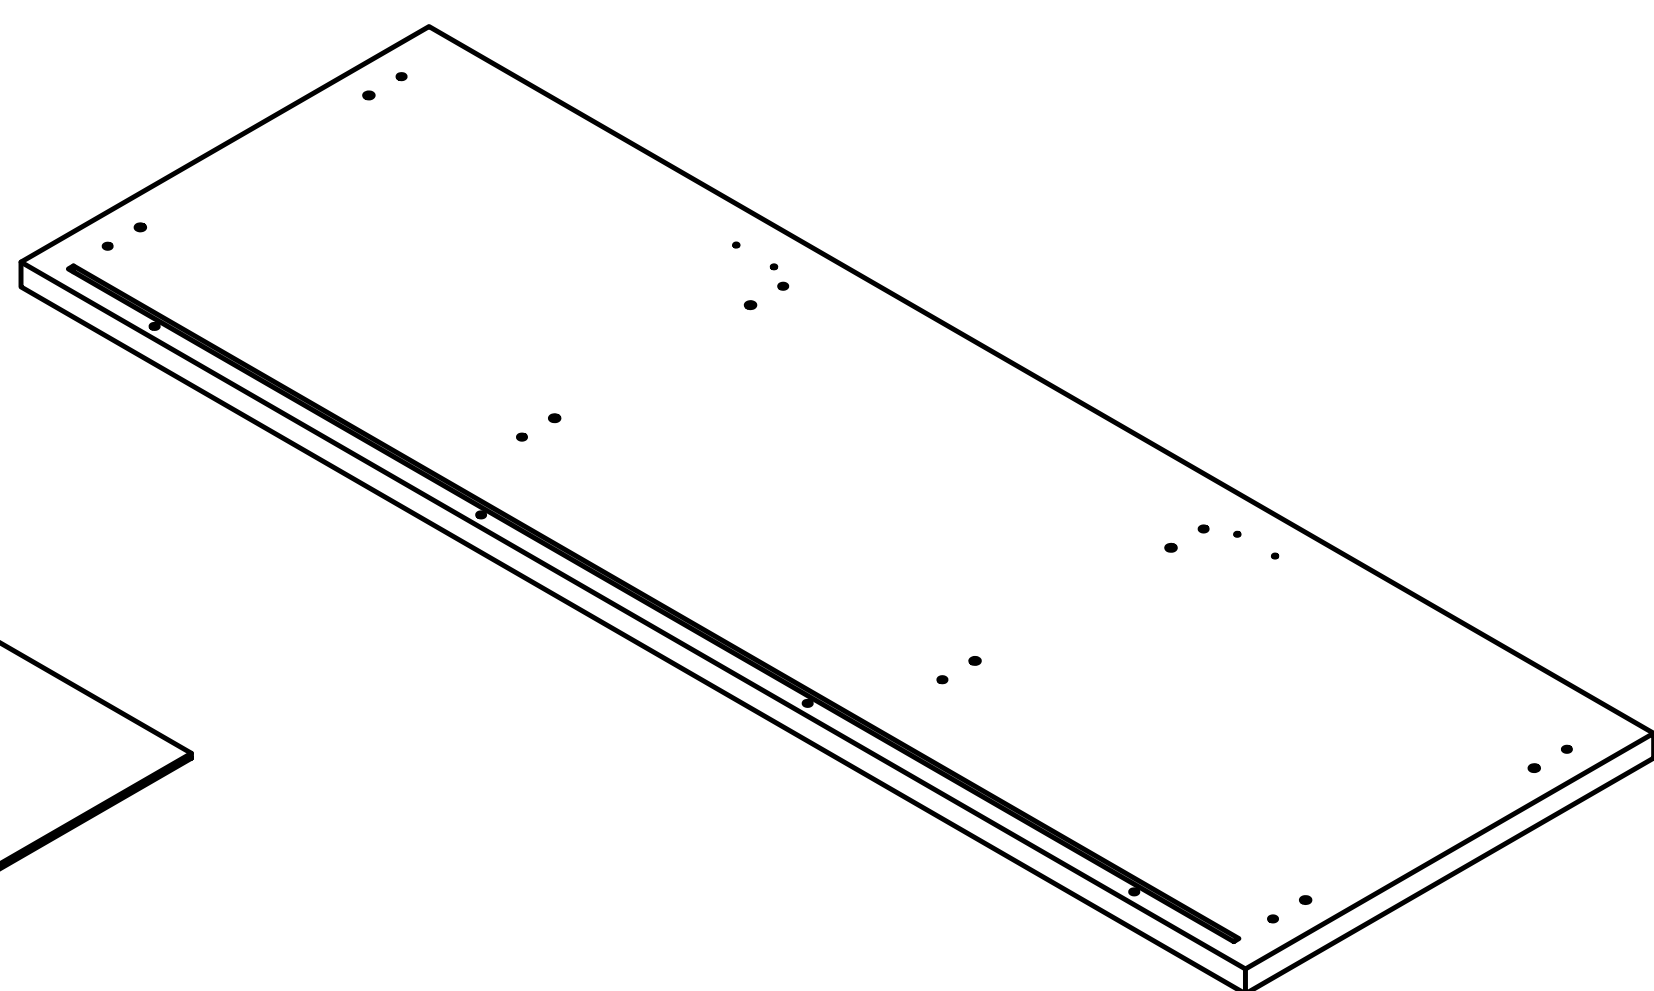

N x1

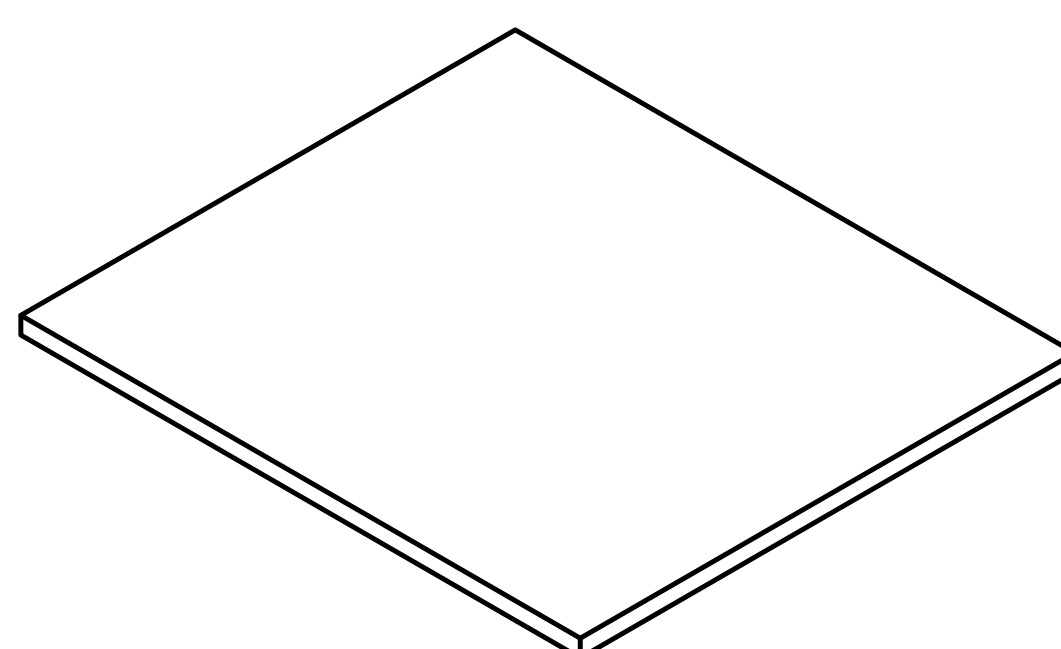
















O x1

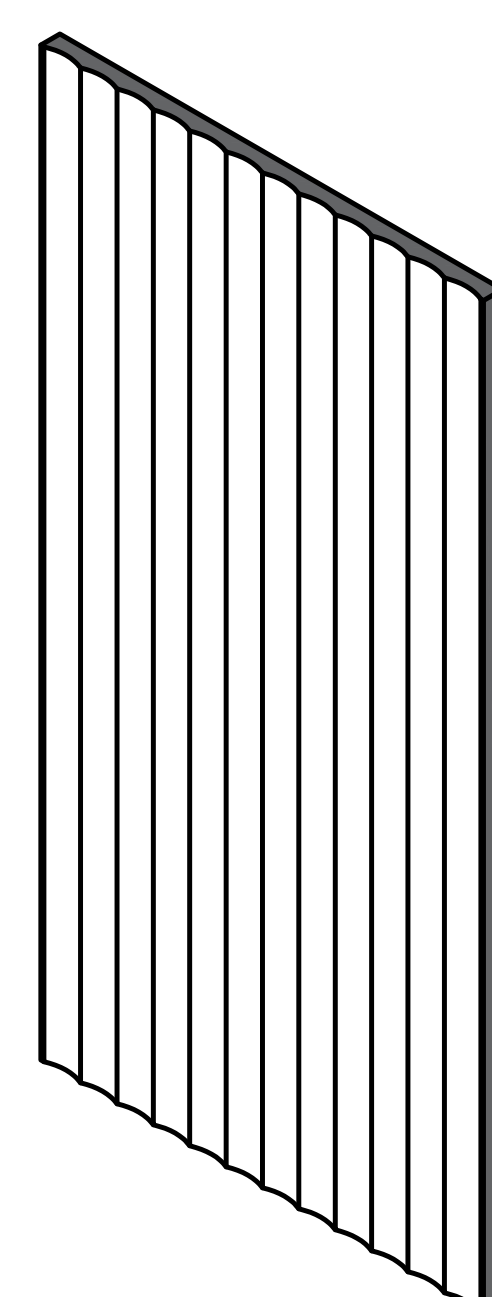


P x2



1

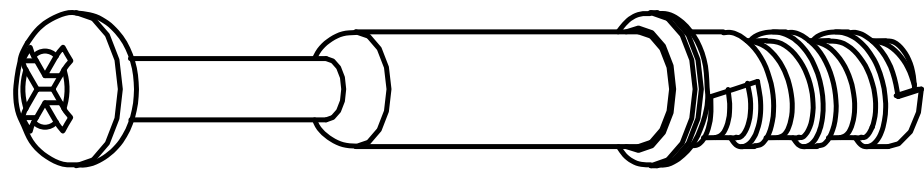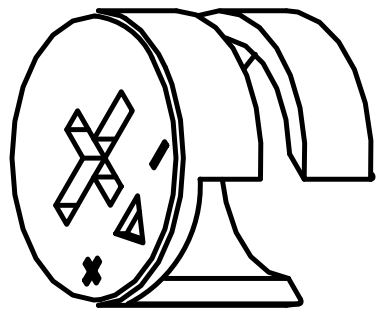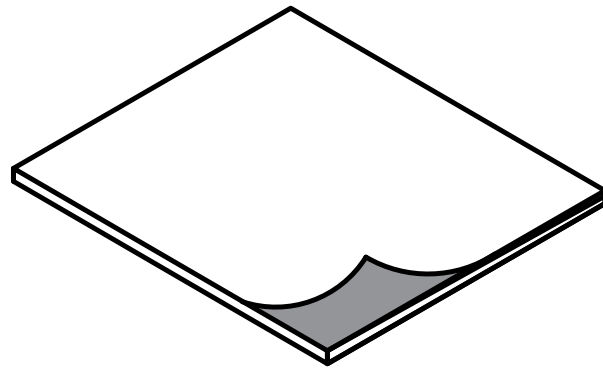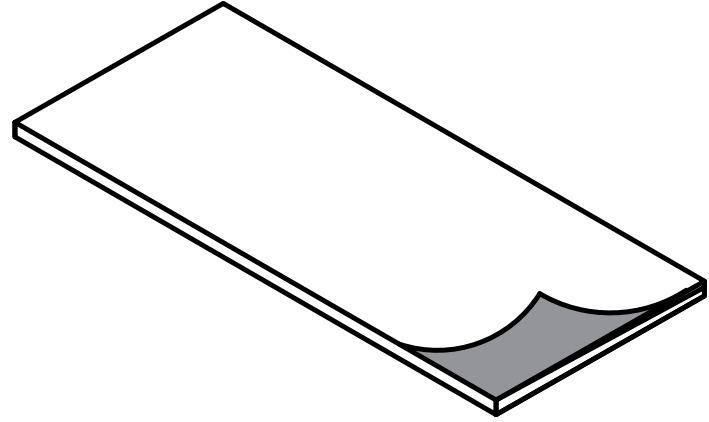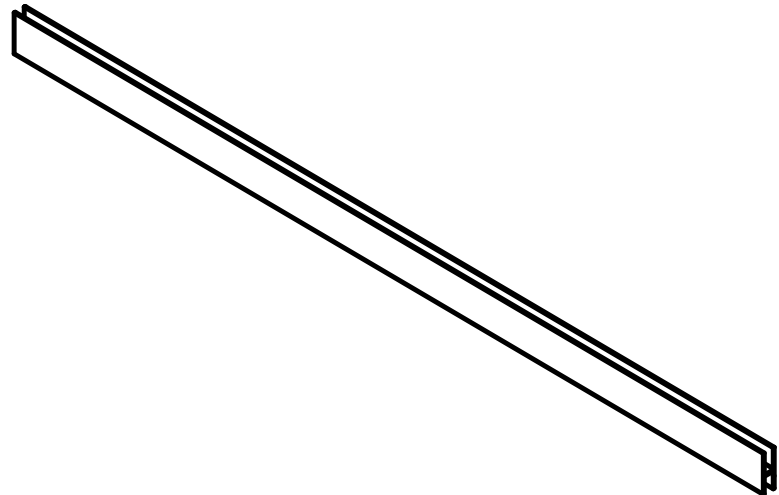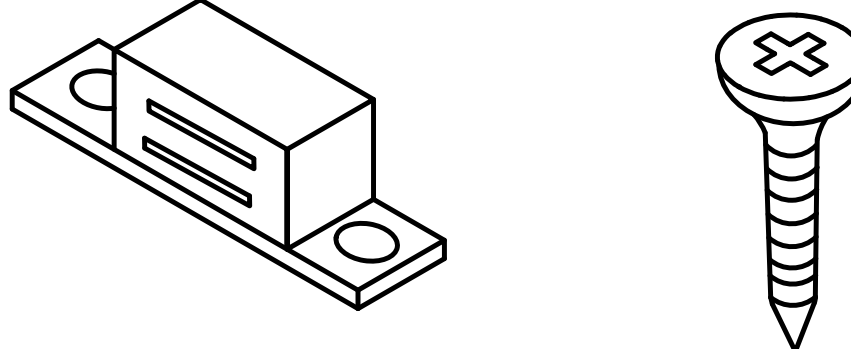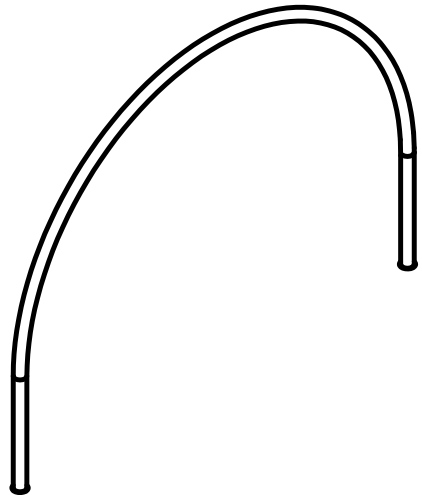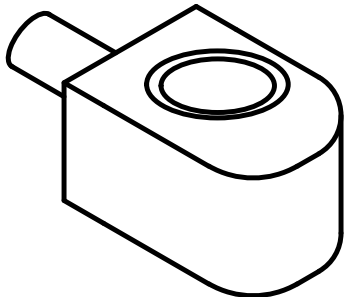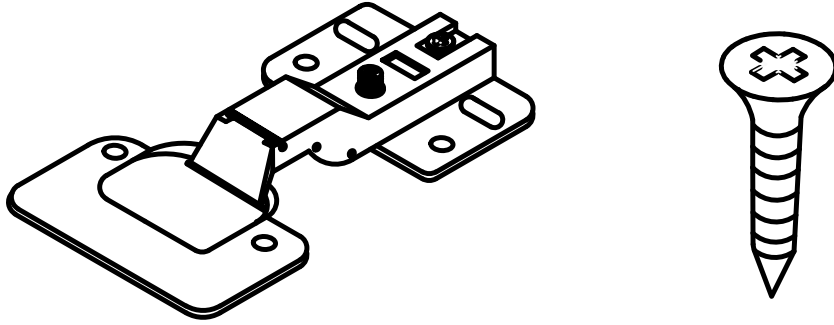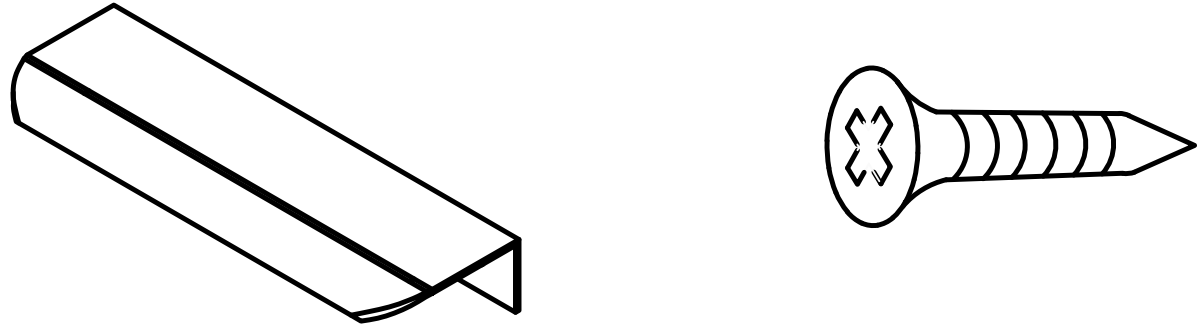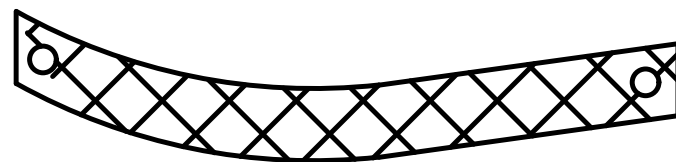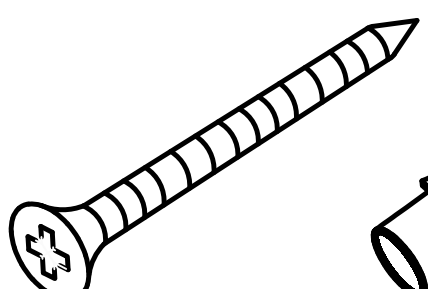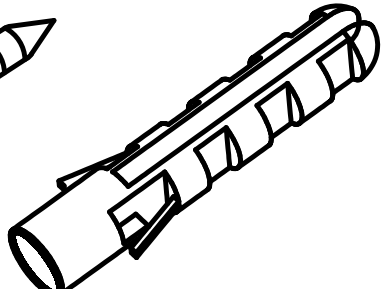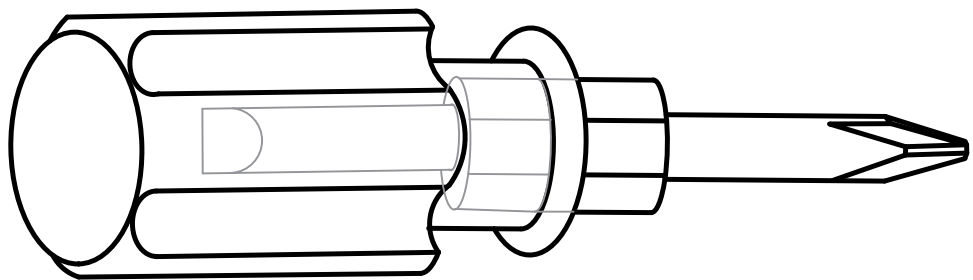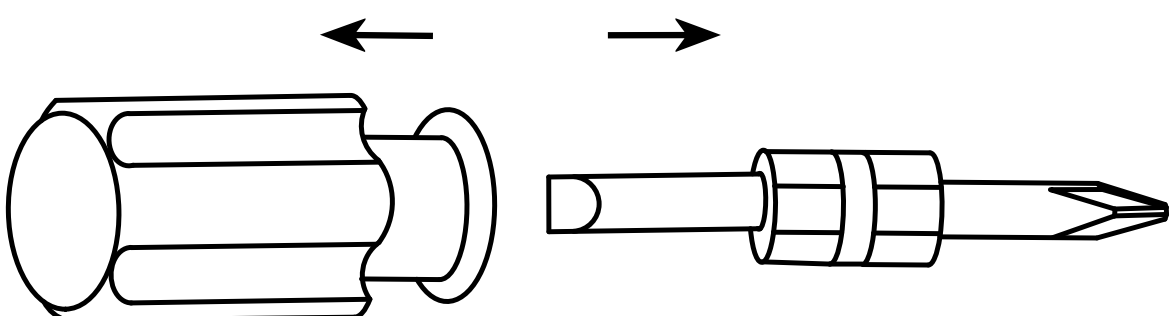
Accessories list			
①		Two In One Screw (6x28mm)	60pcs +5pcs
②		Two In One Nut (10x12mm)	60pcs +5pcs
③		Wood Chipping (6x30mm)	24pcs +2pcs
④		Non-slip pads (30x30mm)	4pcs +2pcs
⑤		Non-slip pads (50x10mm)	2pcs +1pcs
⑥		Backboard card strip (1100mm)	1pcs
⑦		Door Magnet & Screw (3x14mm)	4pcs +1pcs 2pcs
⑧		iron bar	12pcs
⑨		Laminate Support Nail	4pcs +2pcs
⑩		Hinge & Screw (3.5x12mm)	24pcs +2pcs 4pcs
⑪		Handle & Screw (3.5x12mm)	4pcs +1pcs 2pcs
⑫		Fixing clip & screw (3x16mm)	10pcs +2pcs
⑬	 1pcs  1pcs  1pcs  1pcs  2pcs	anti-tipping tape Screw & gasket (3.5x12mm) Screw (4x45mm)	1pcs
 1pcs  Double-head screwdriver, use as required 2			

Product structure decomposition

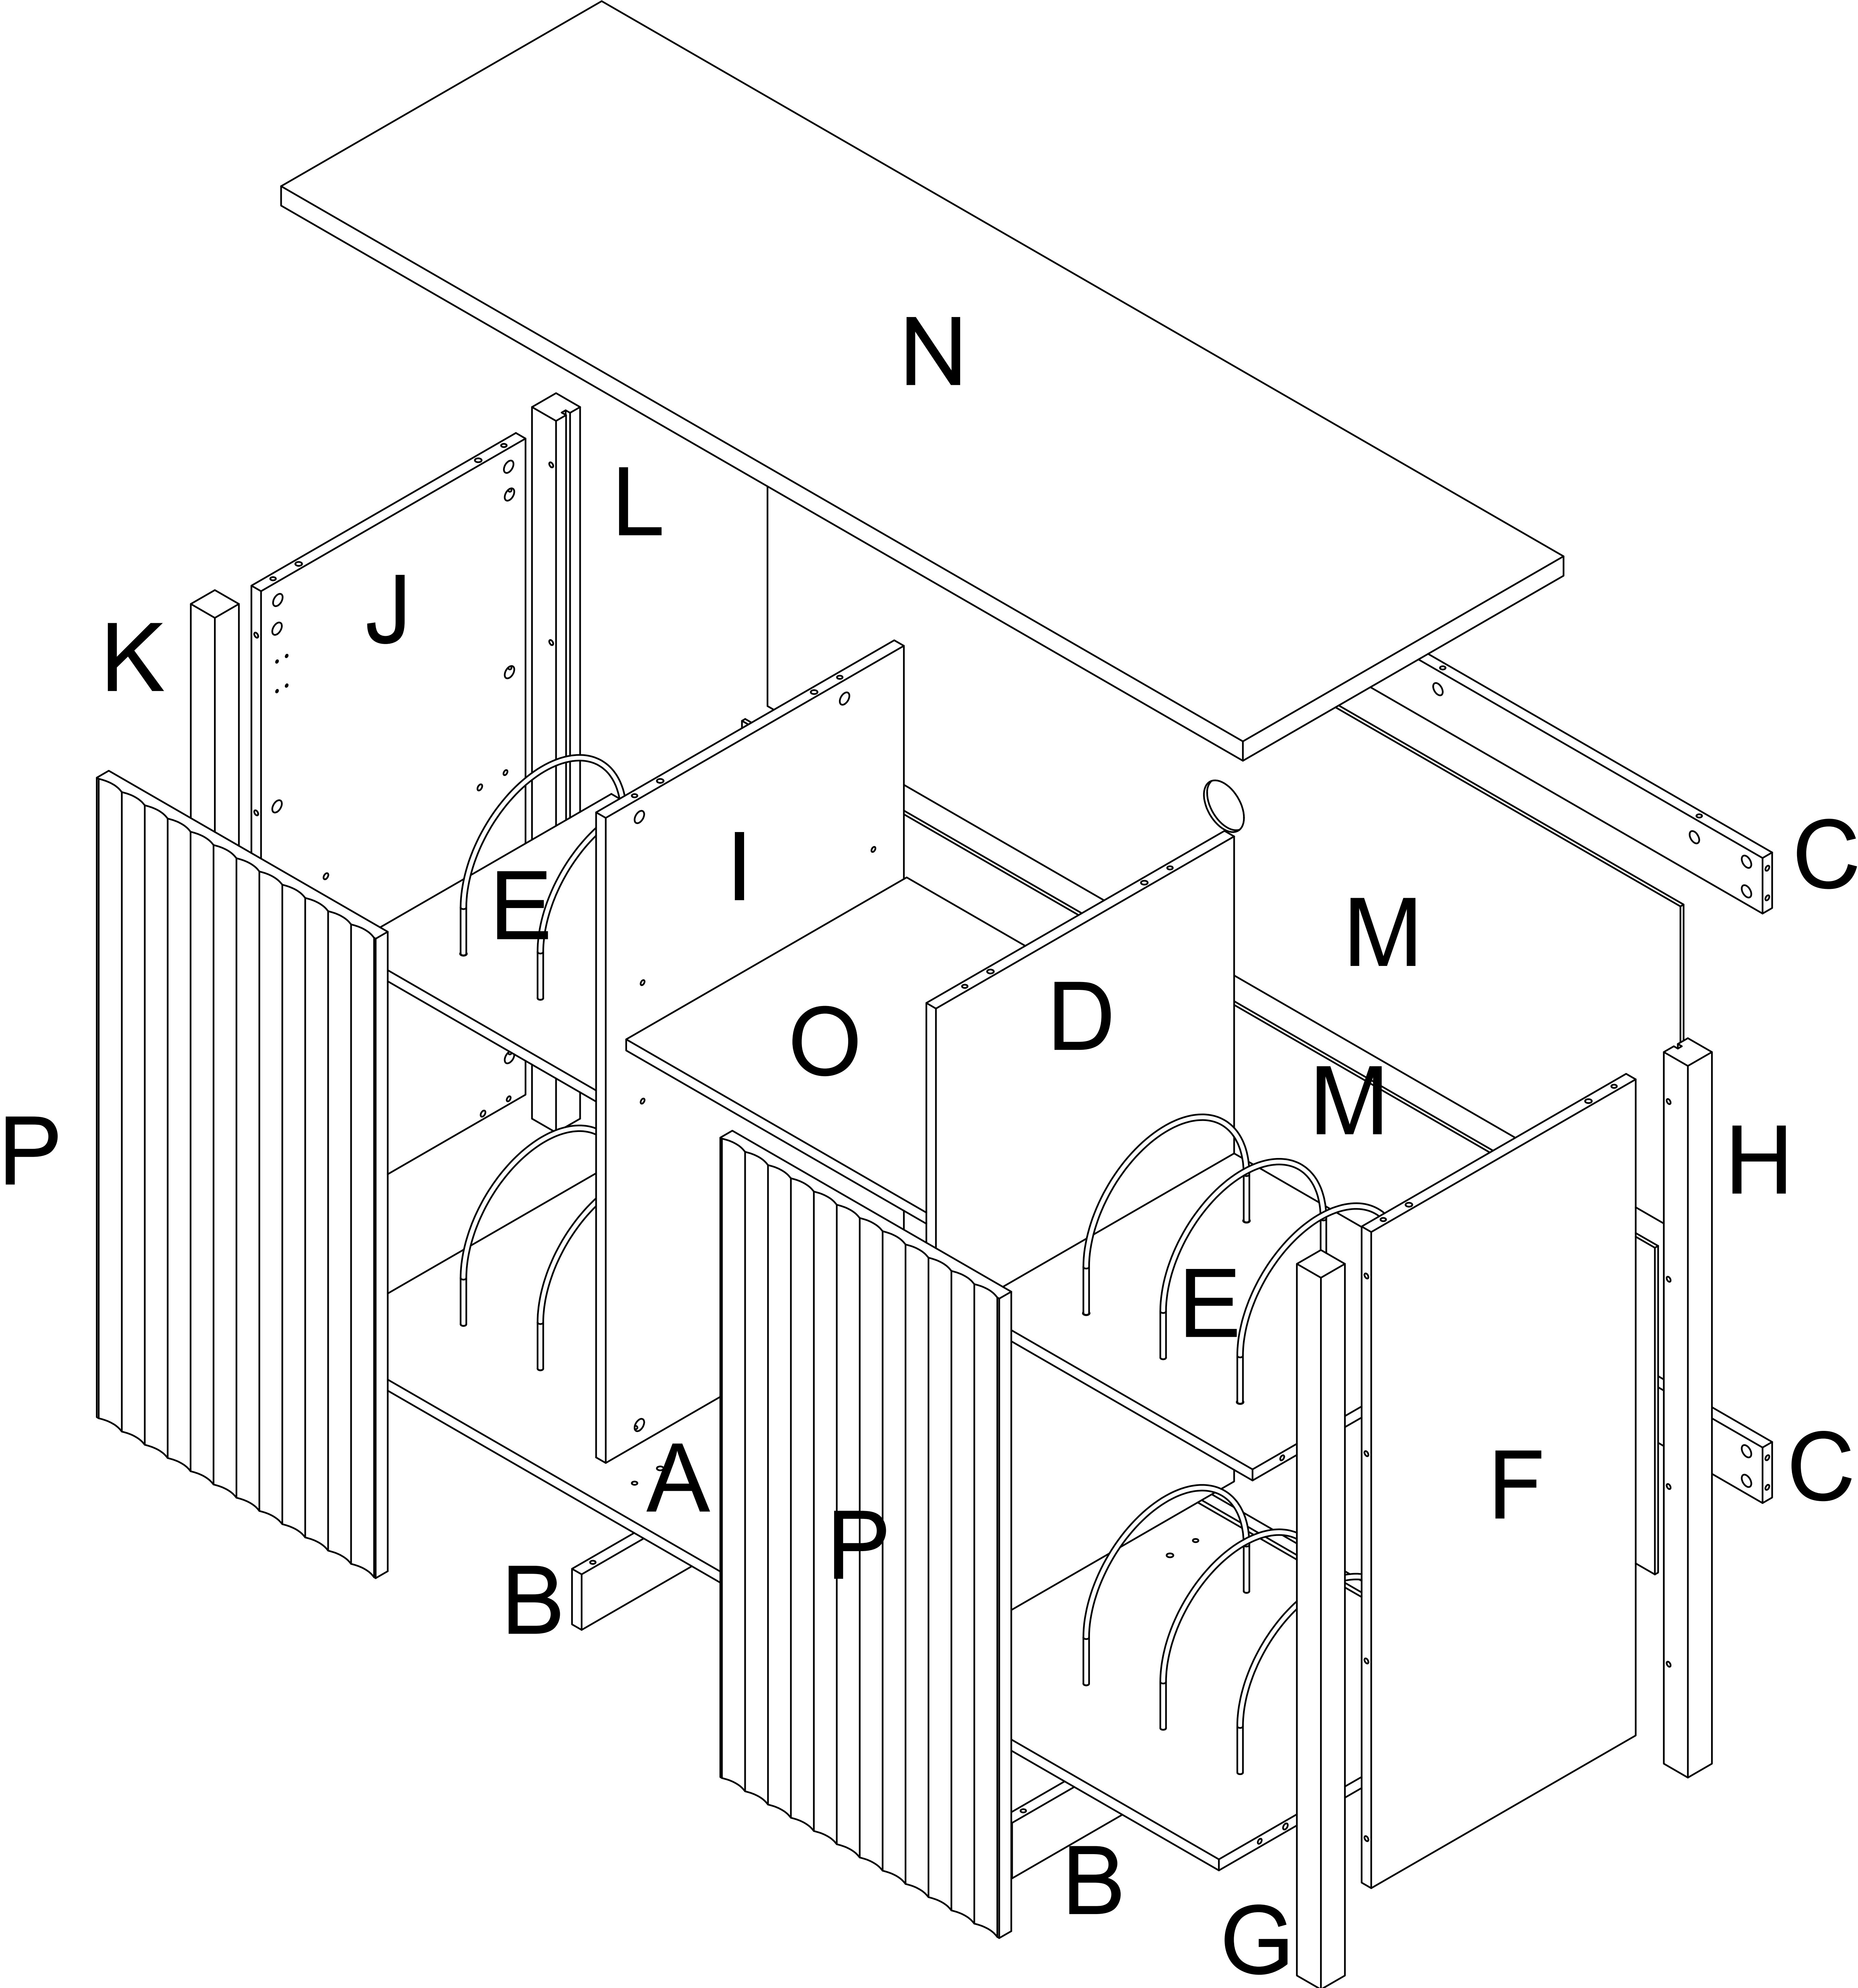


Use parts 1 and 2




Step1

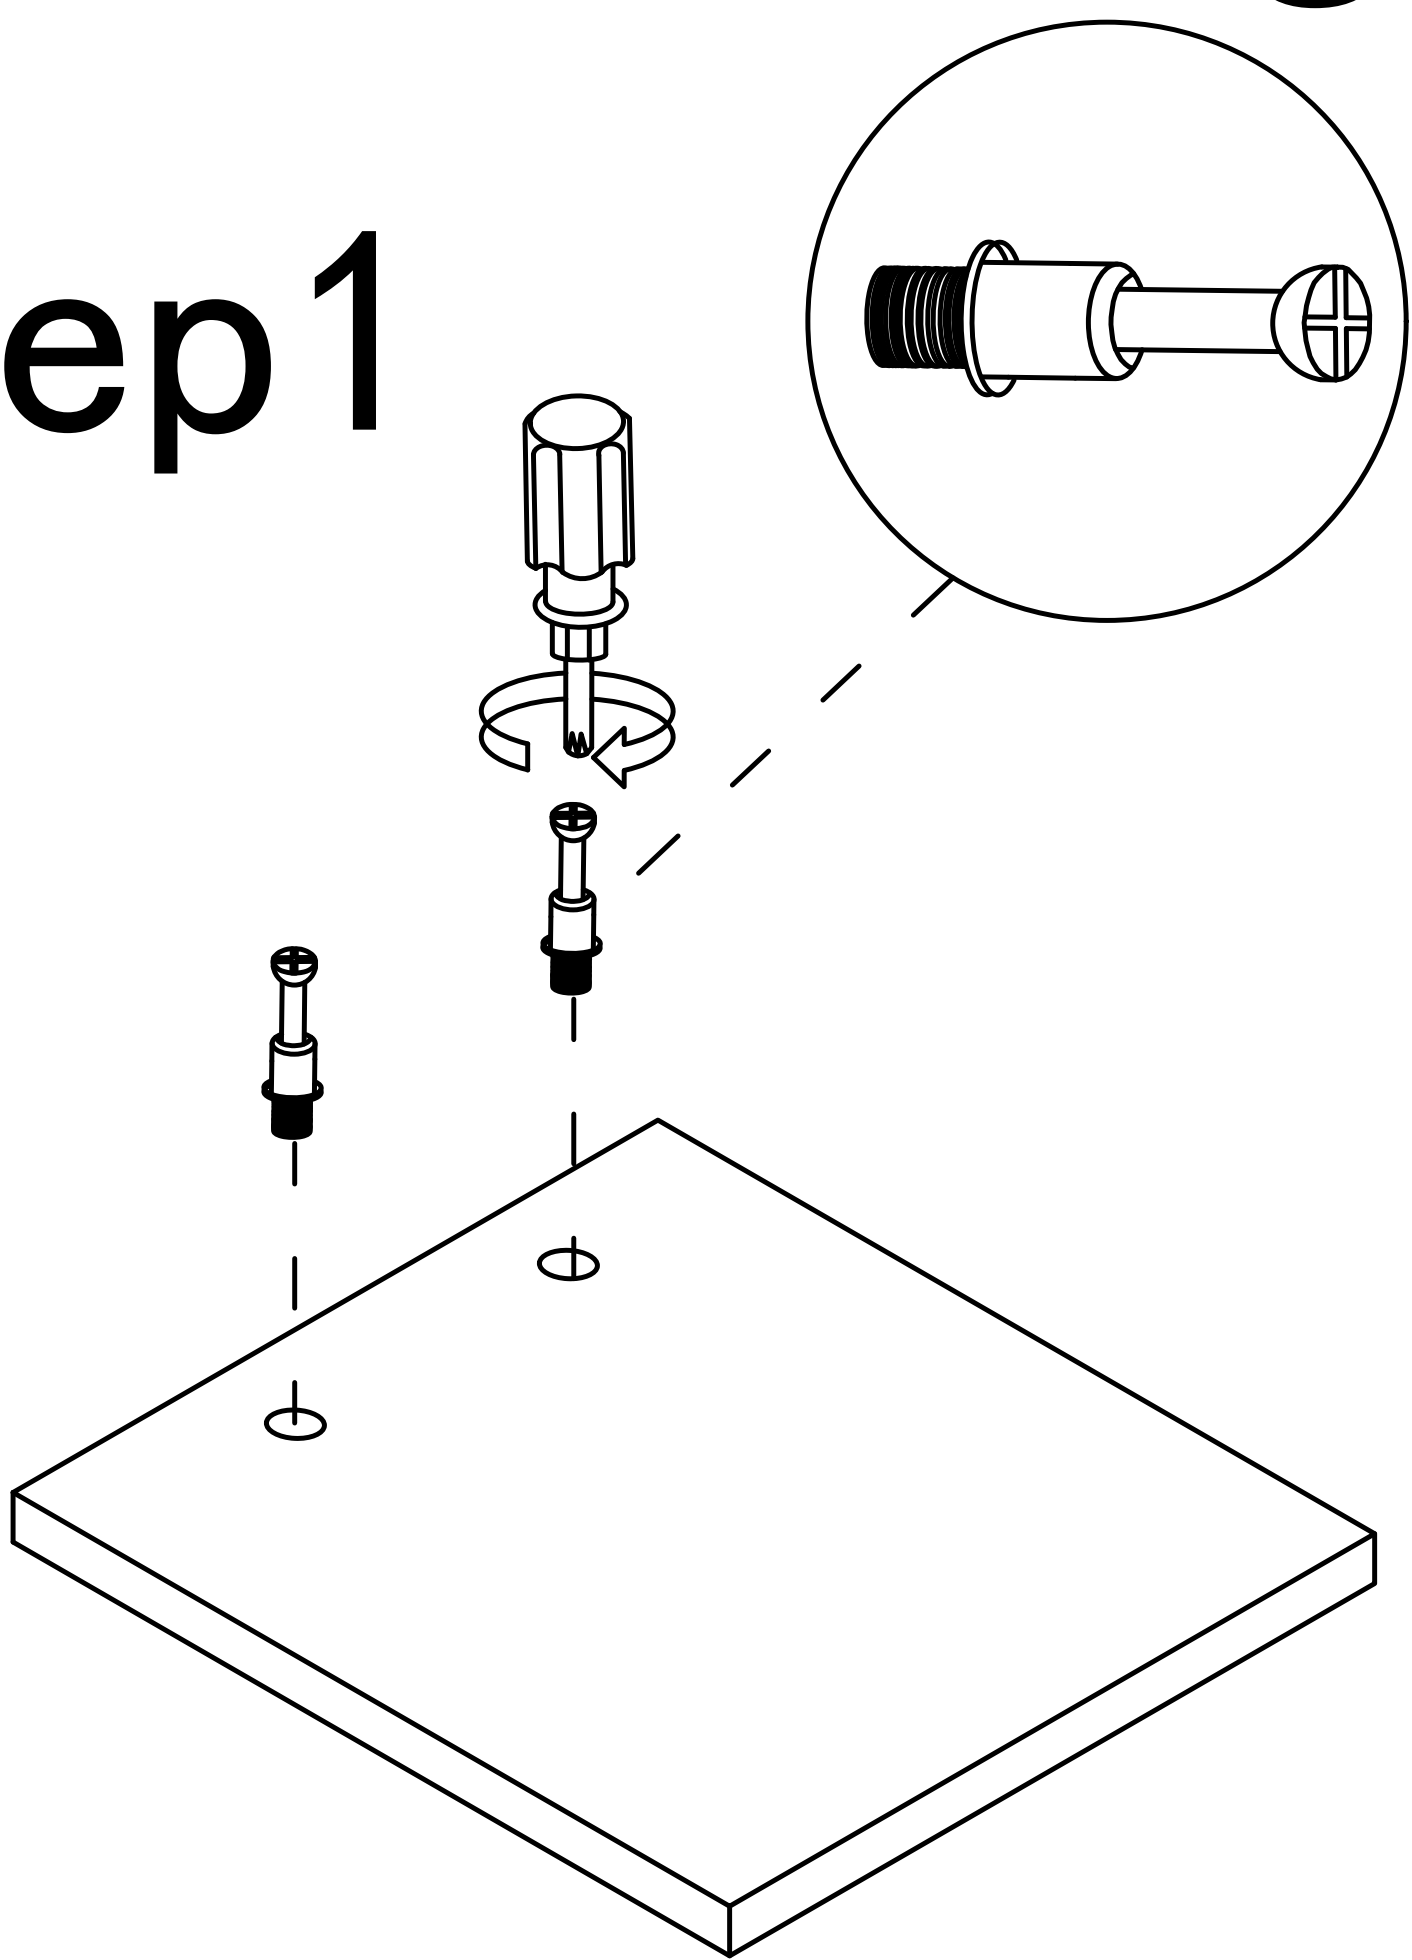

Step2

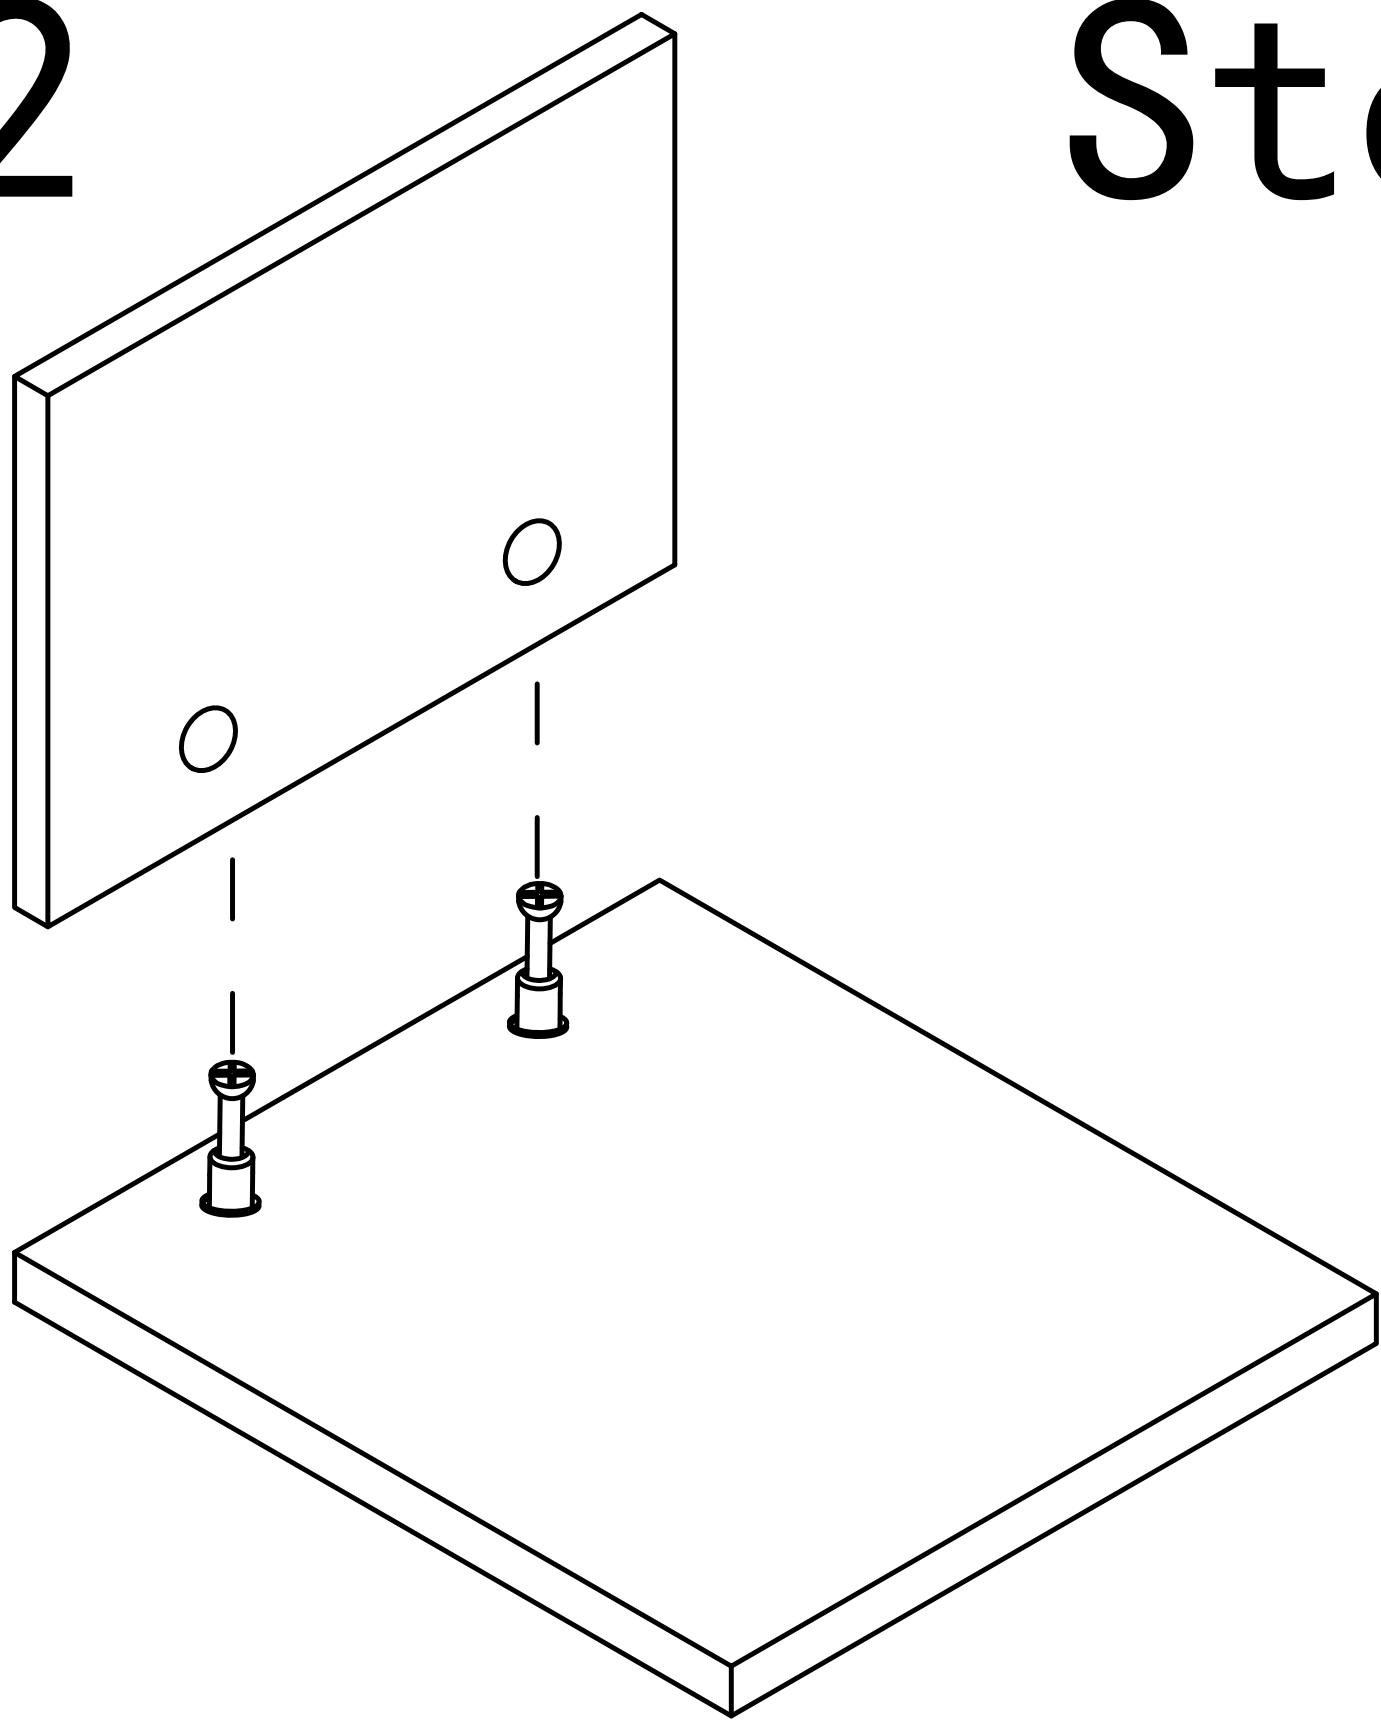



Step3

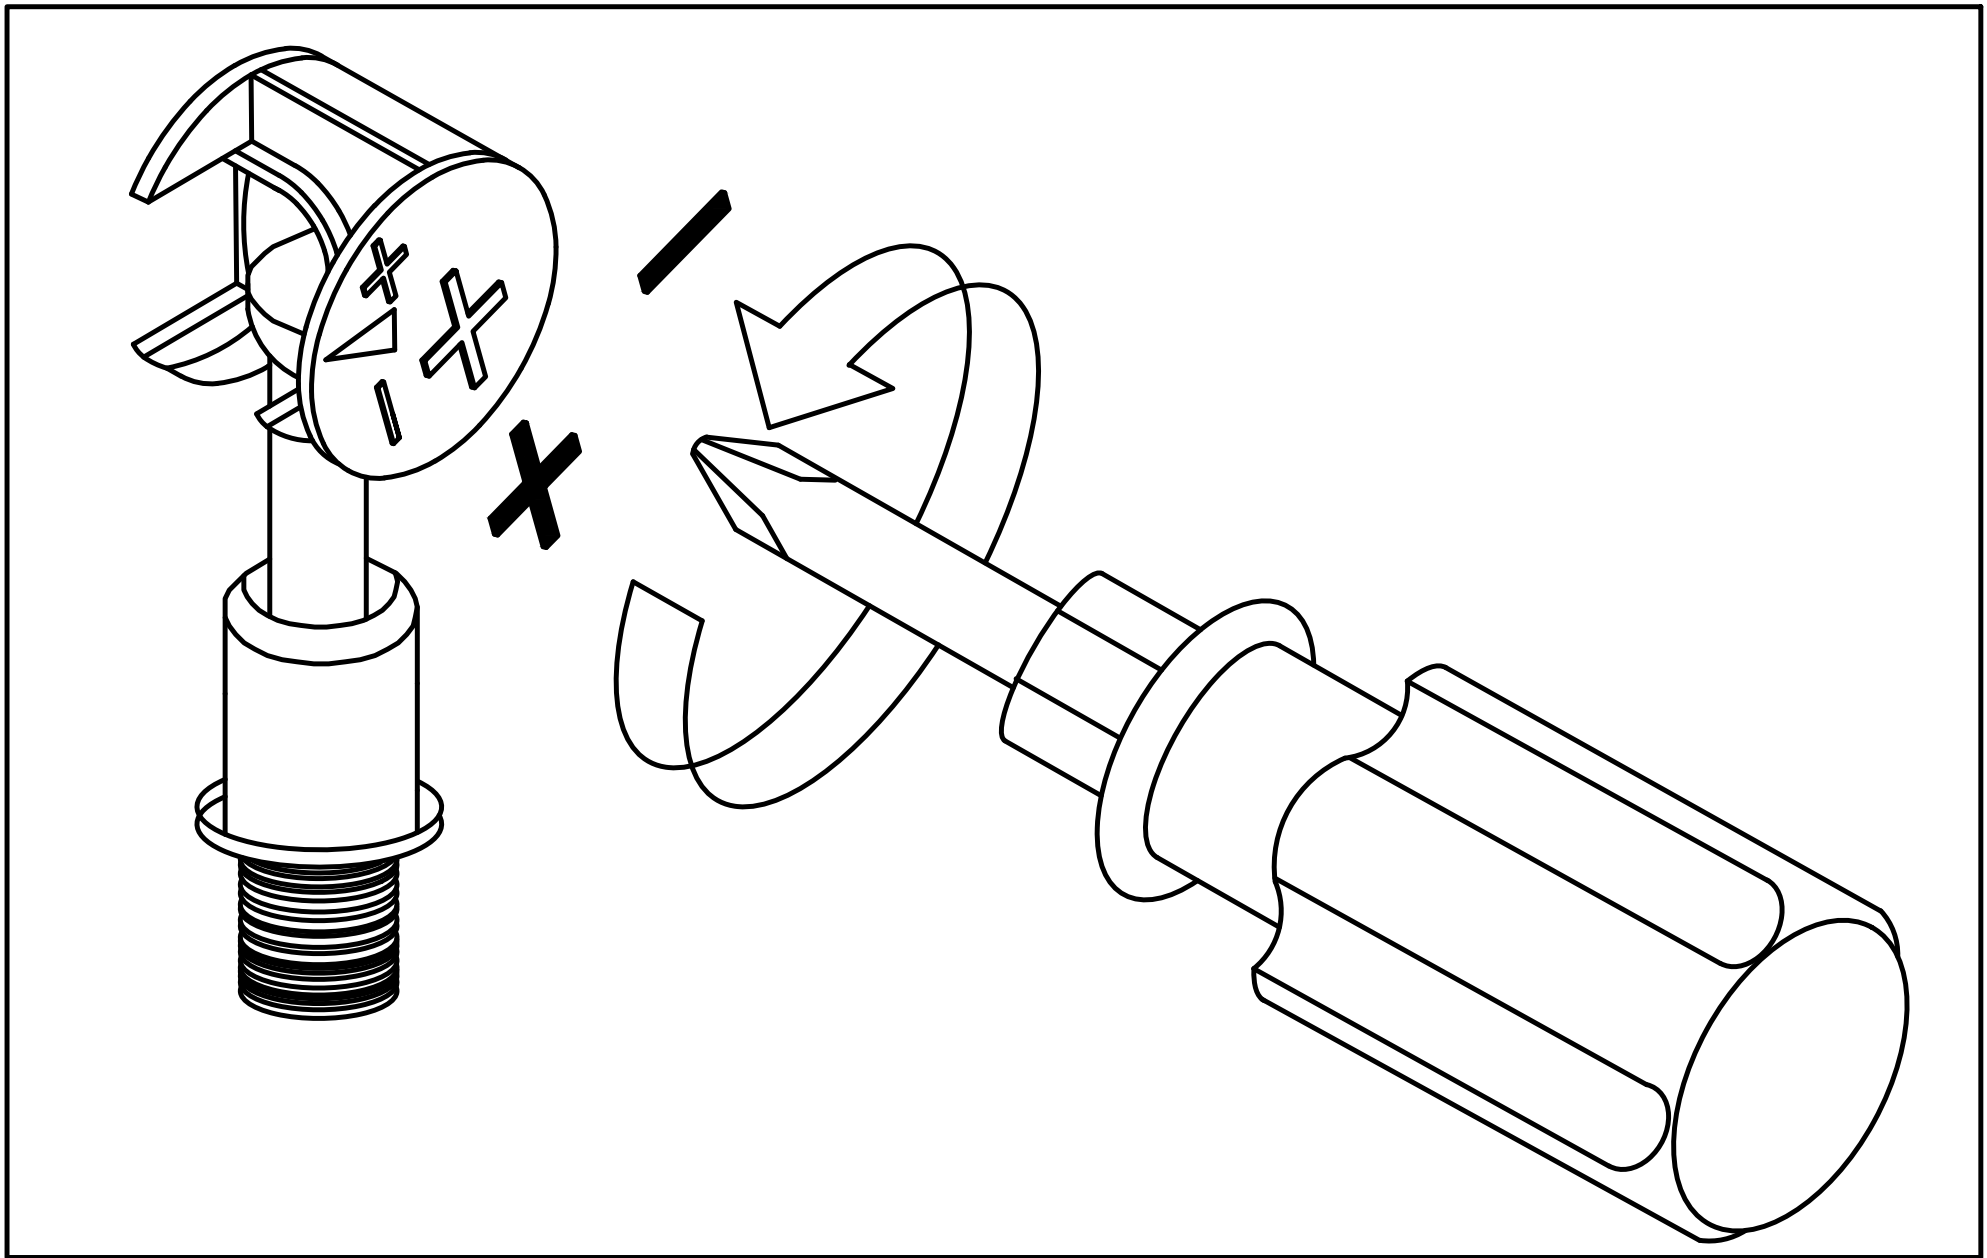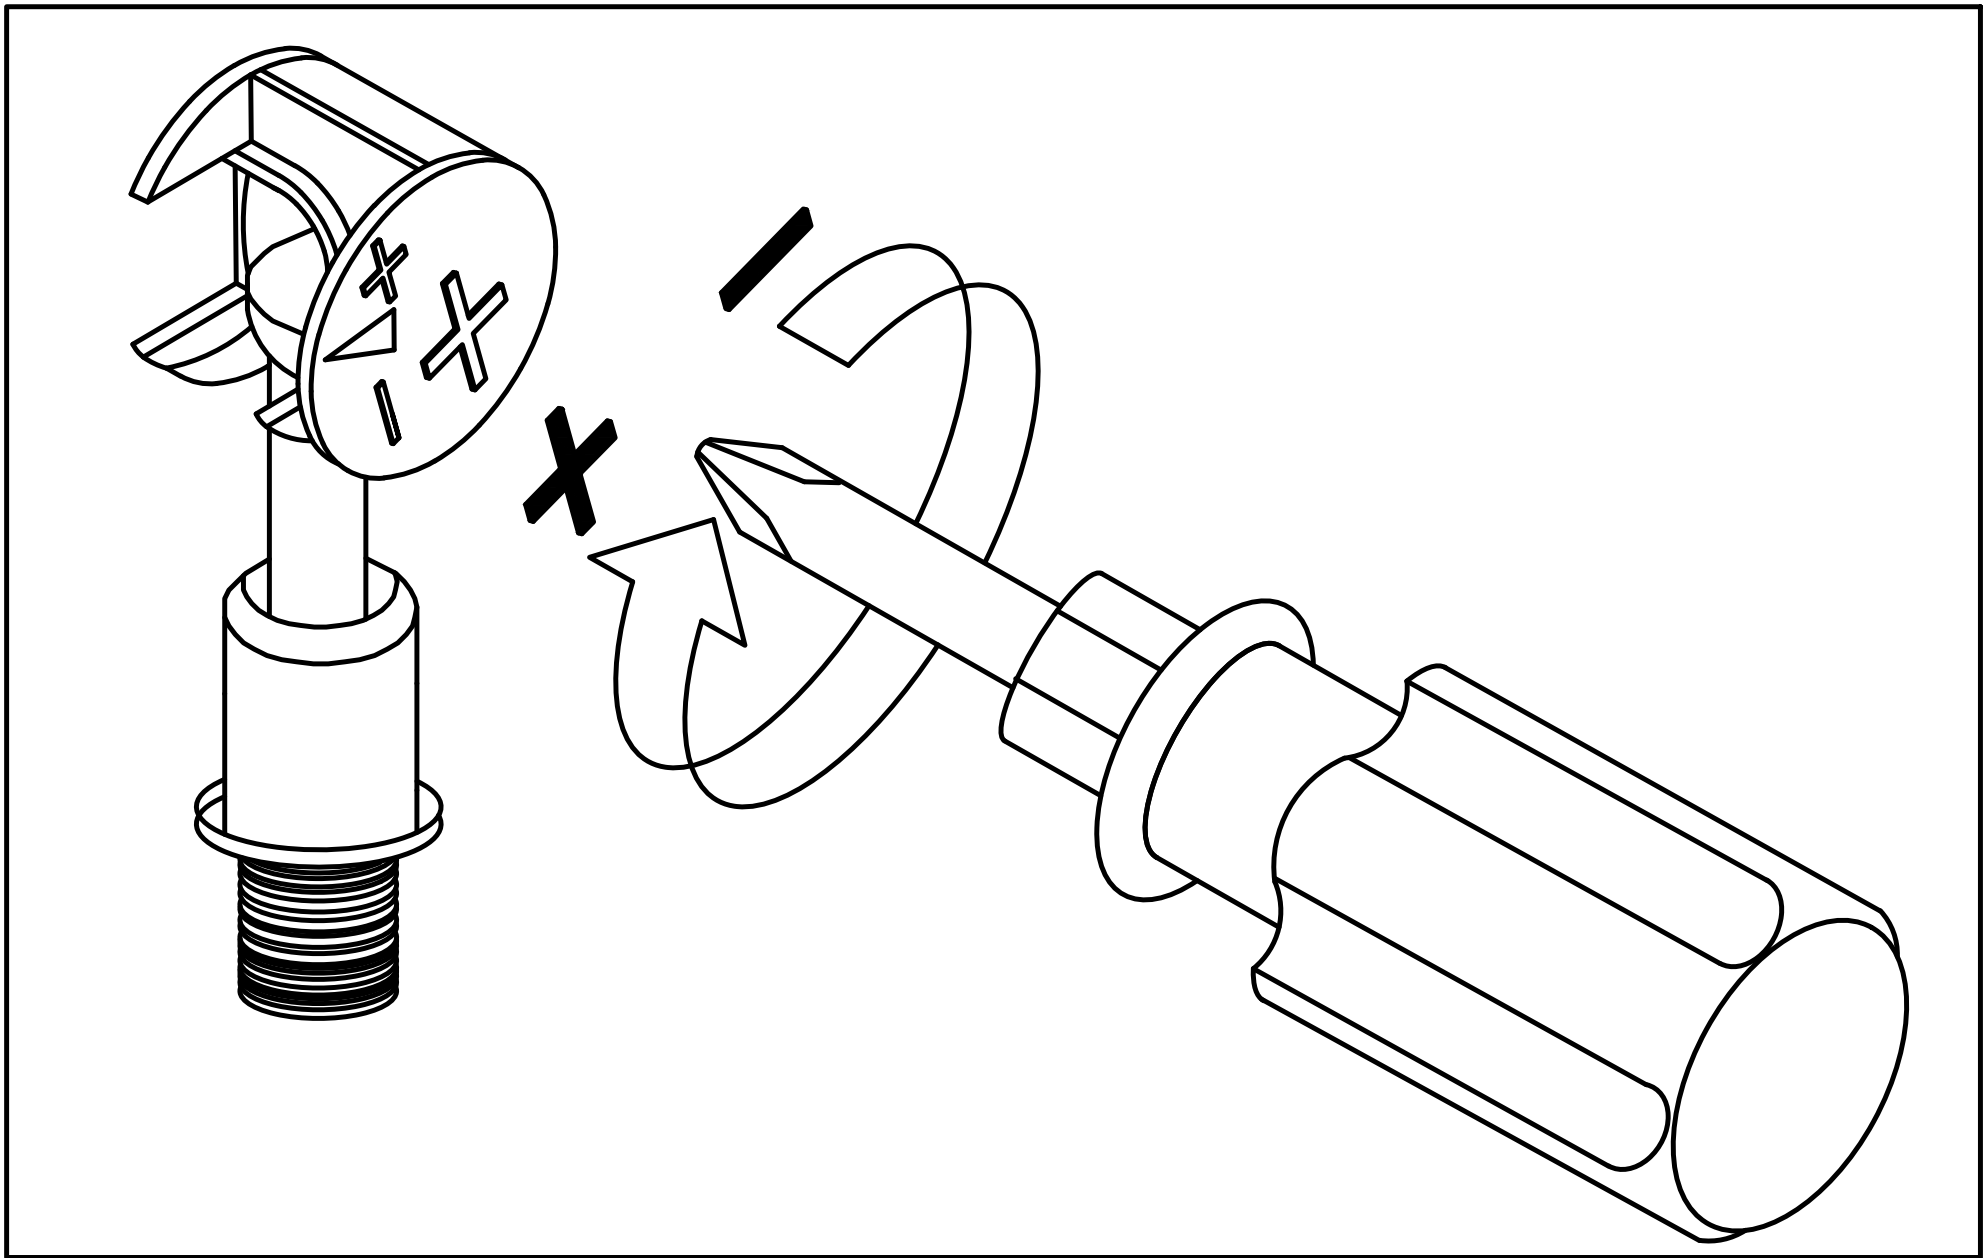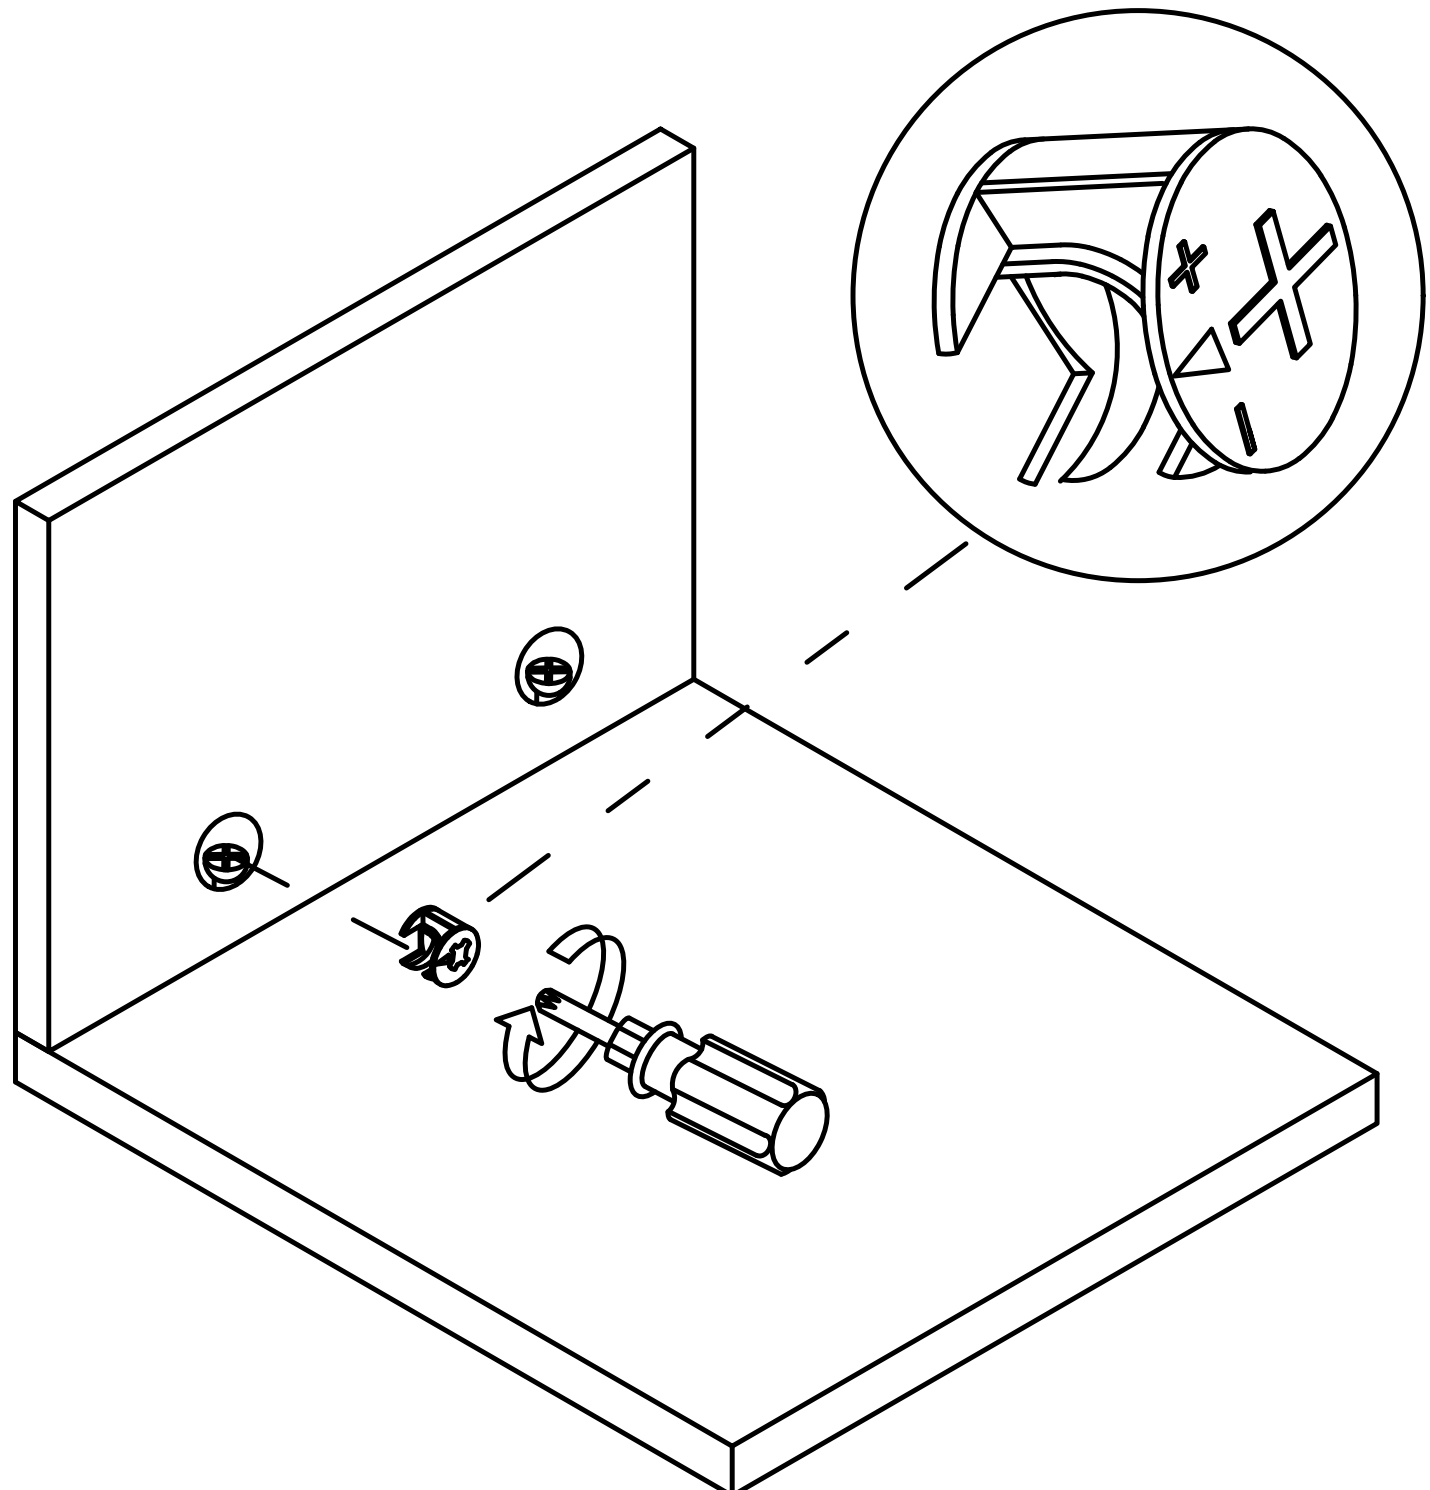

Use a screwdriver to lock in the direction of the "+" sign


Disassemble along the direction of "-" sign

Step 1

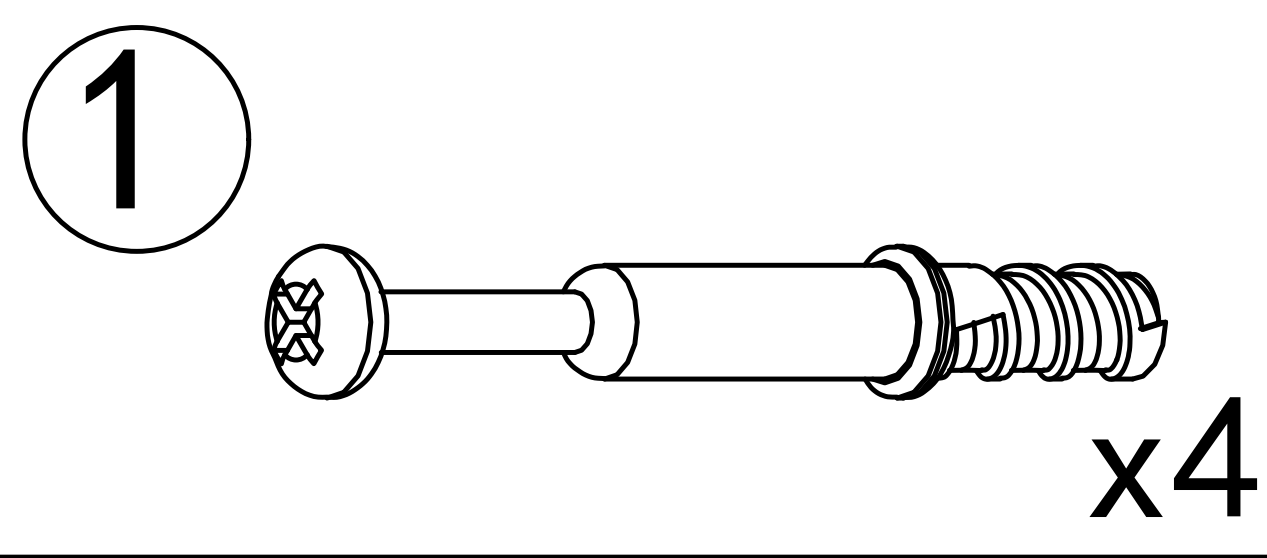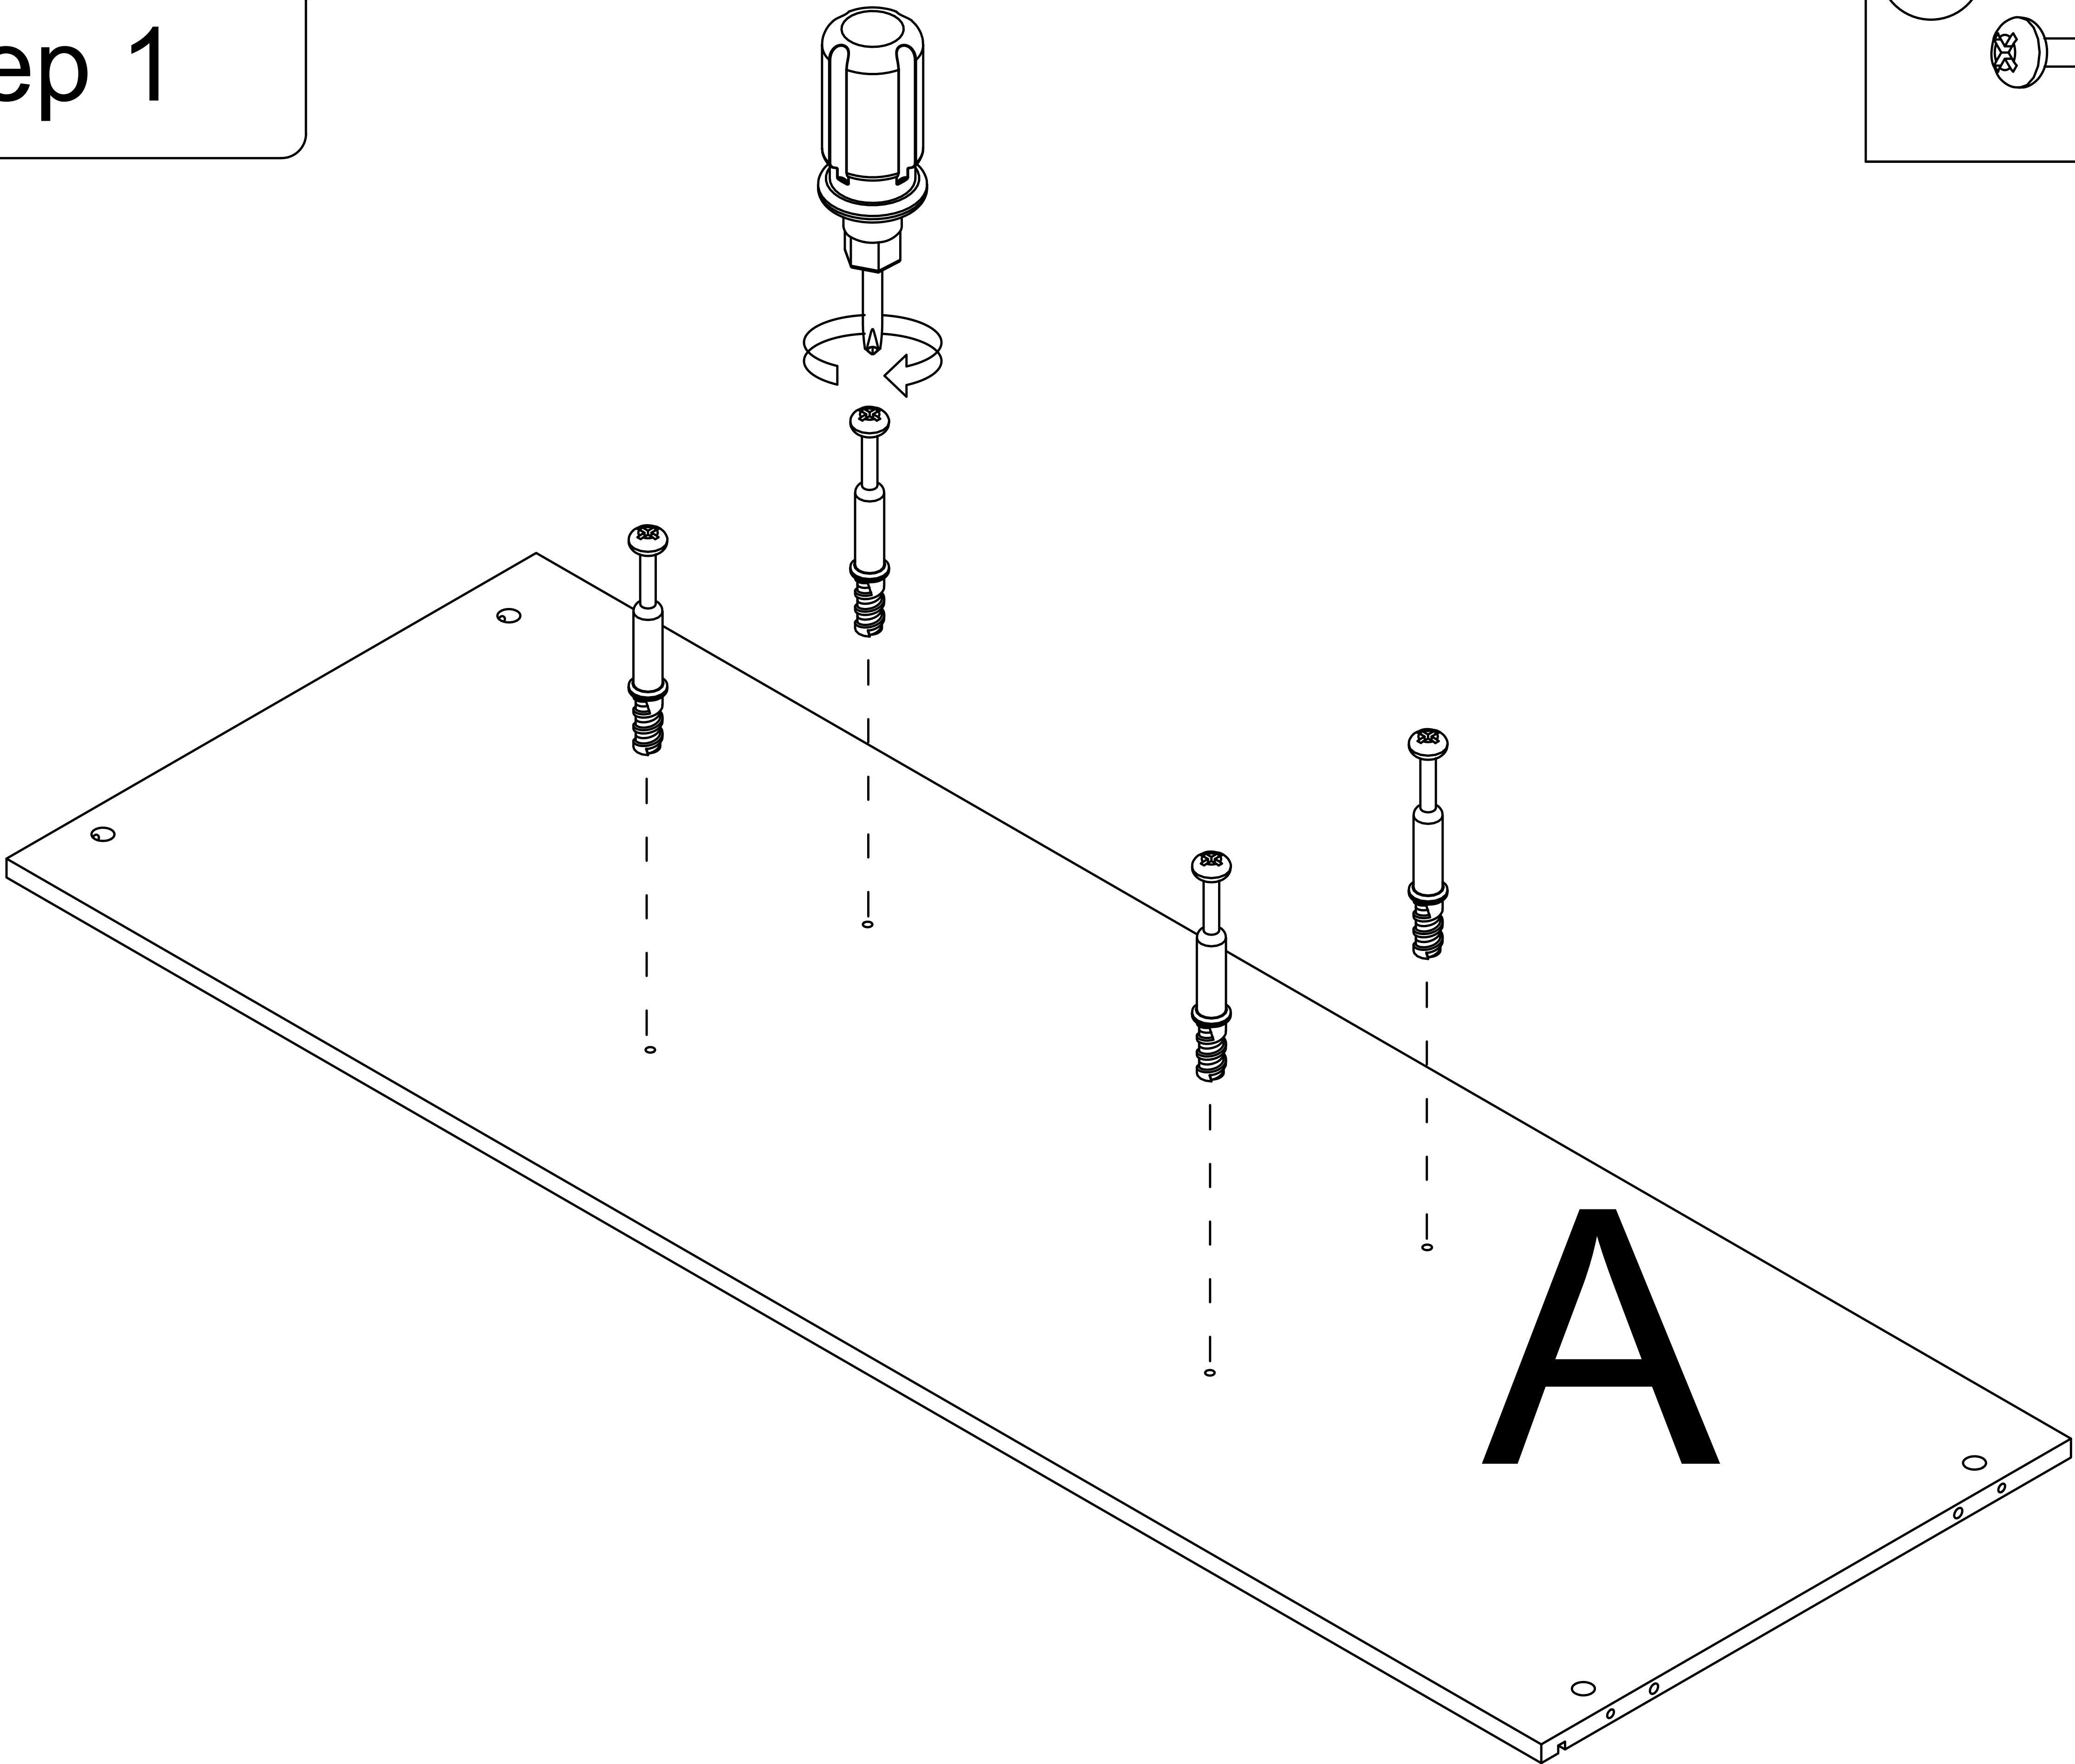


Step 2


2

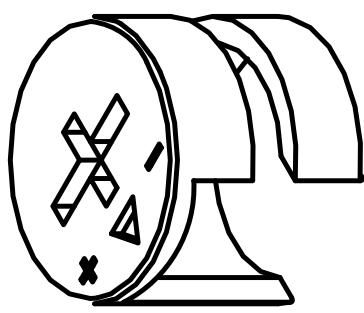



x 4

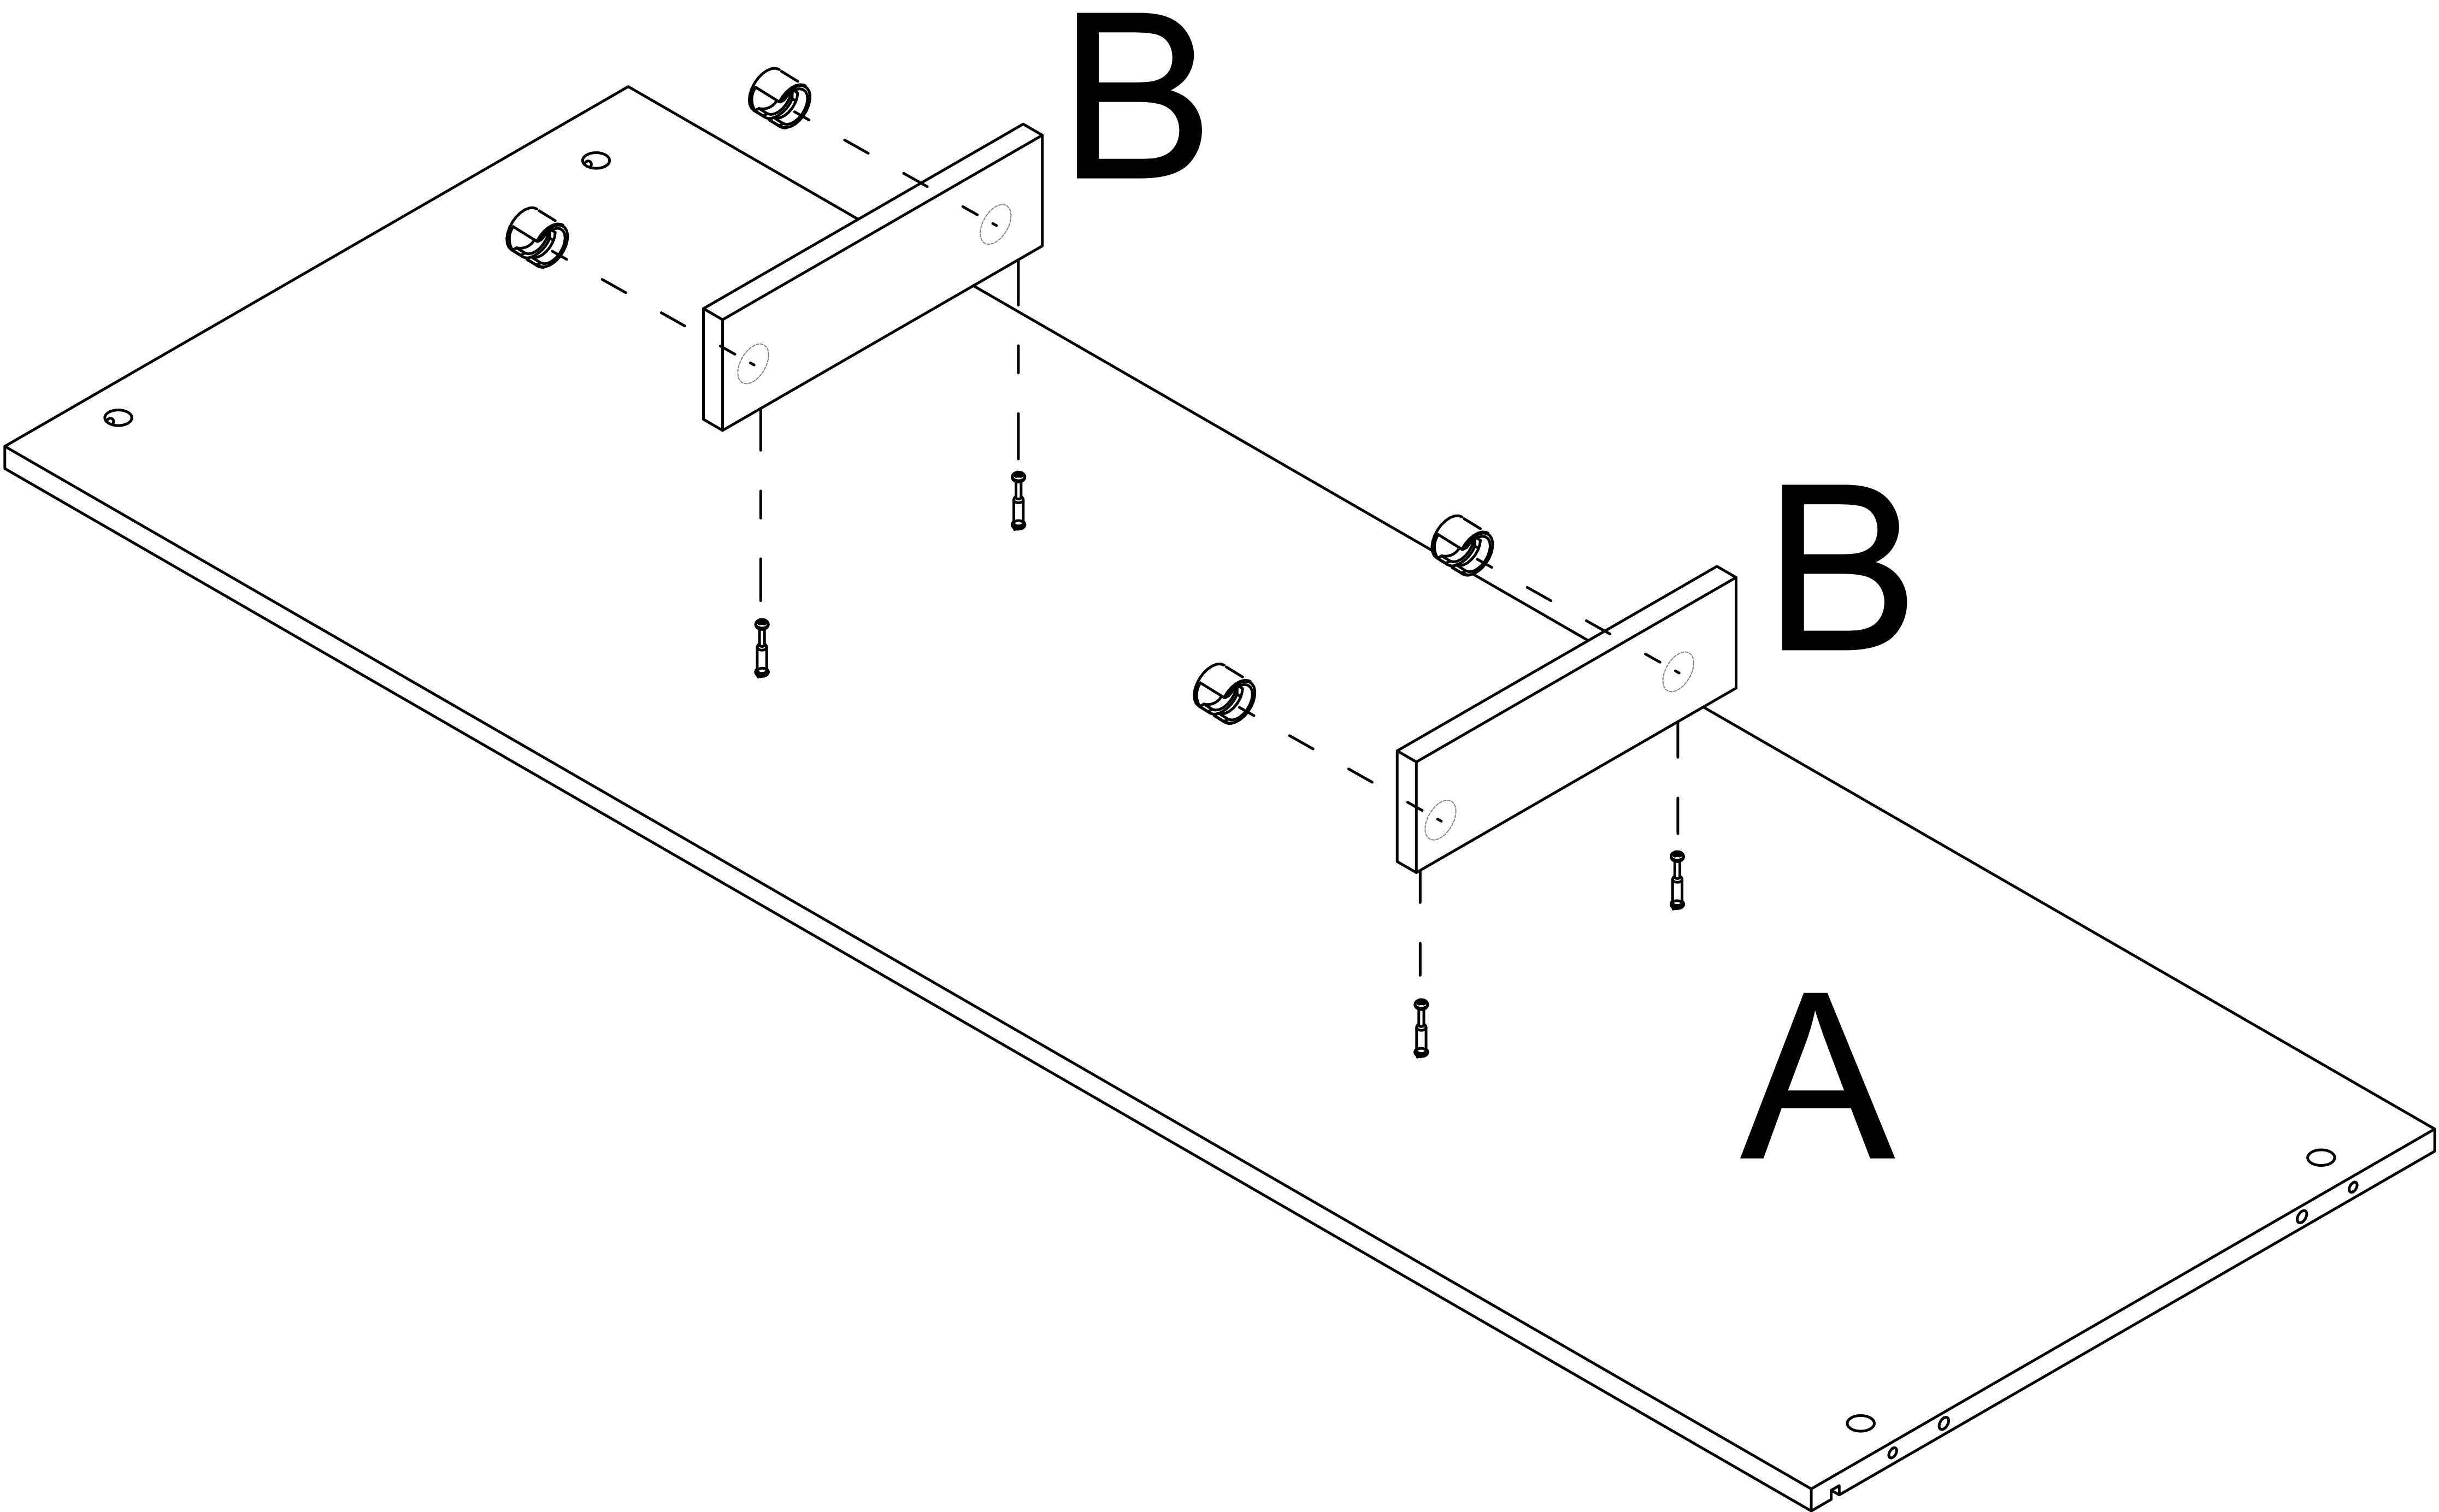



Step 3

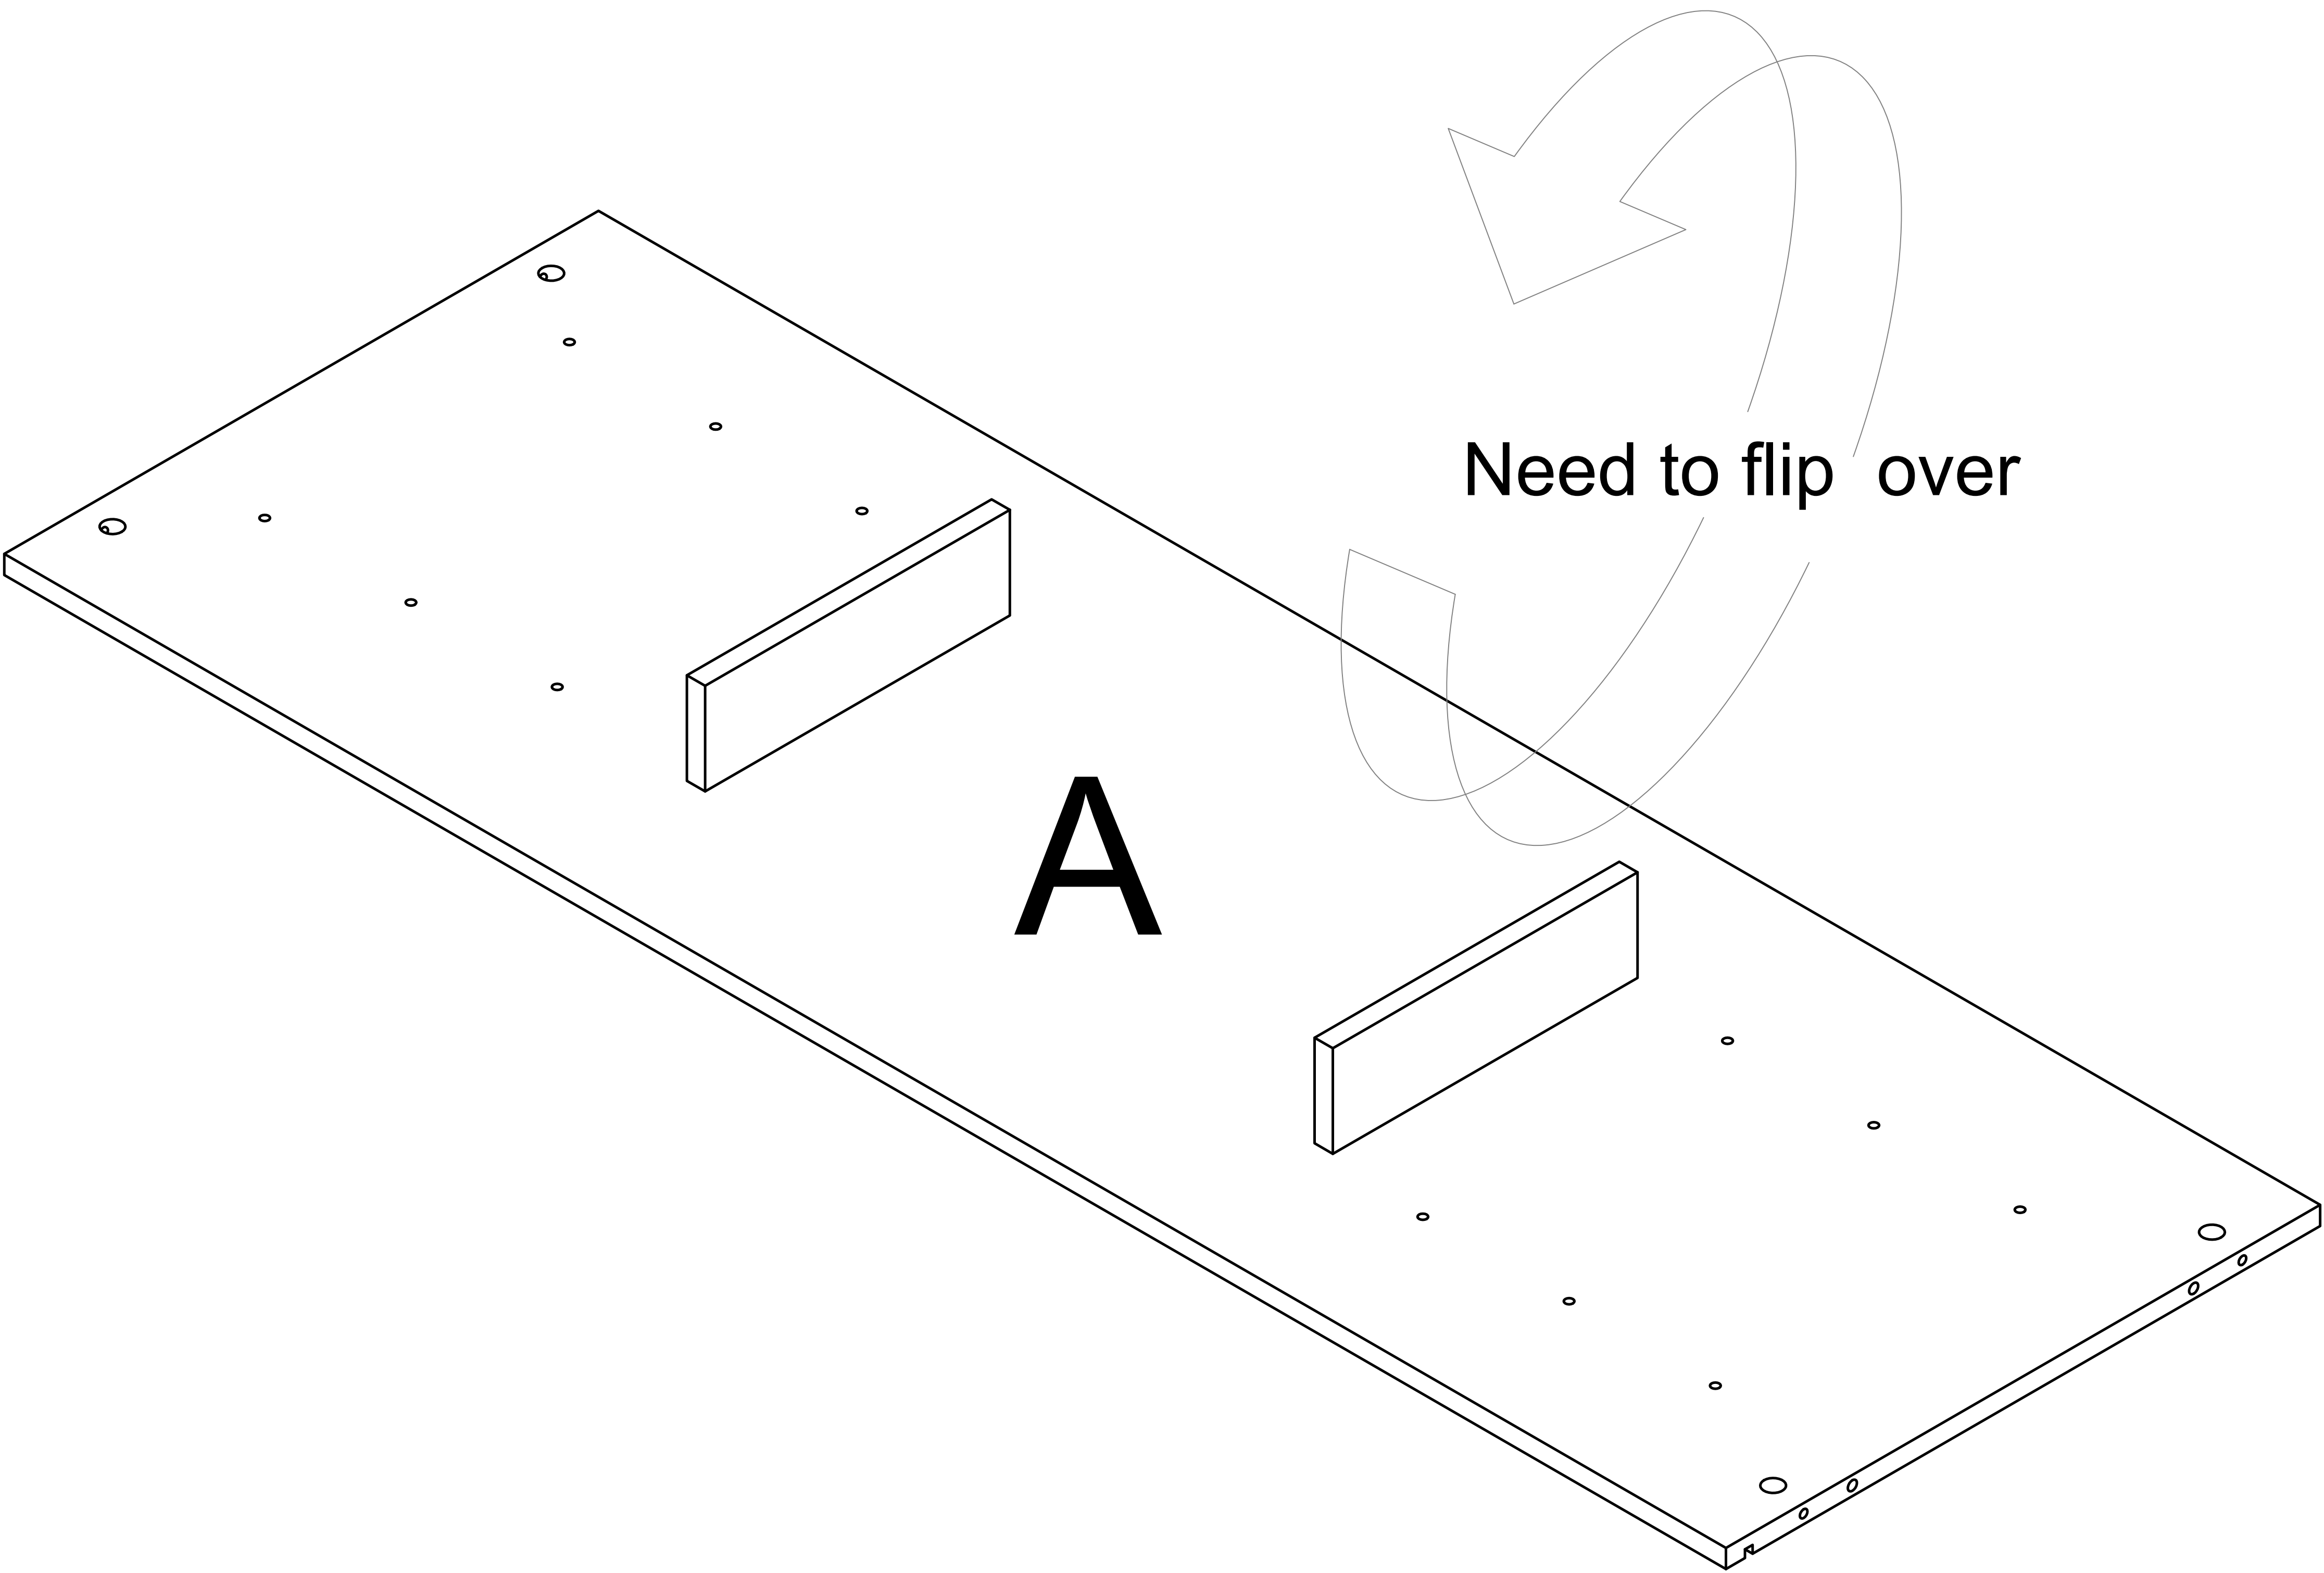

Step 4

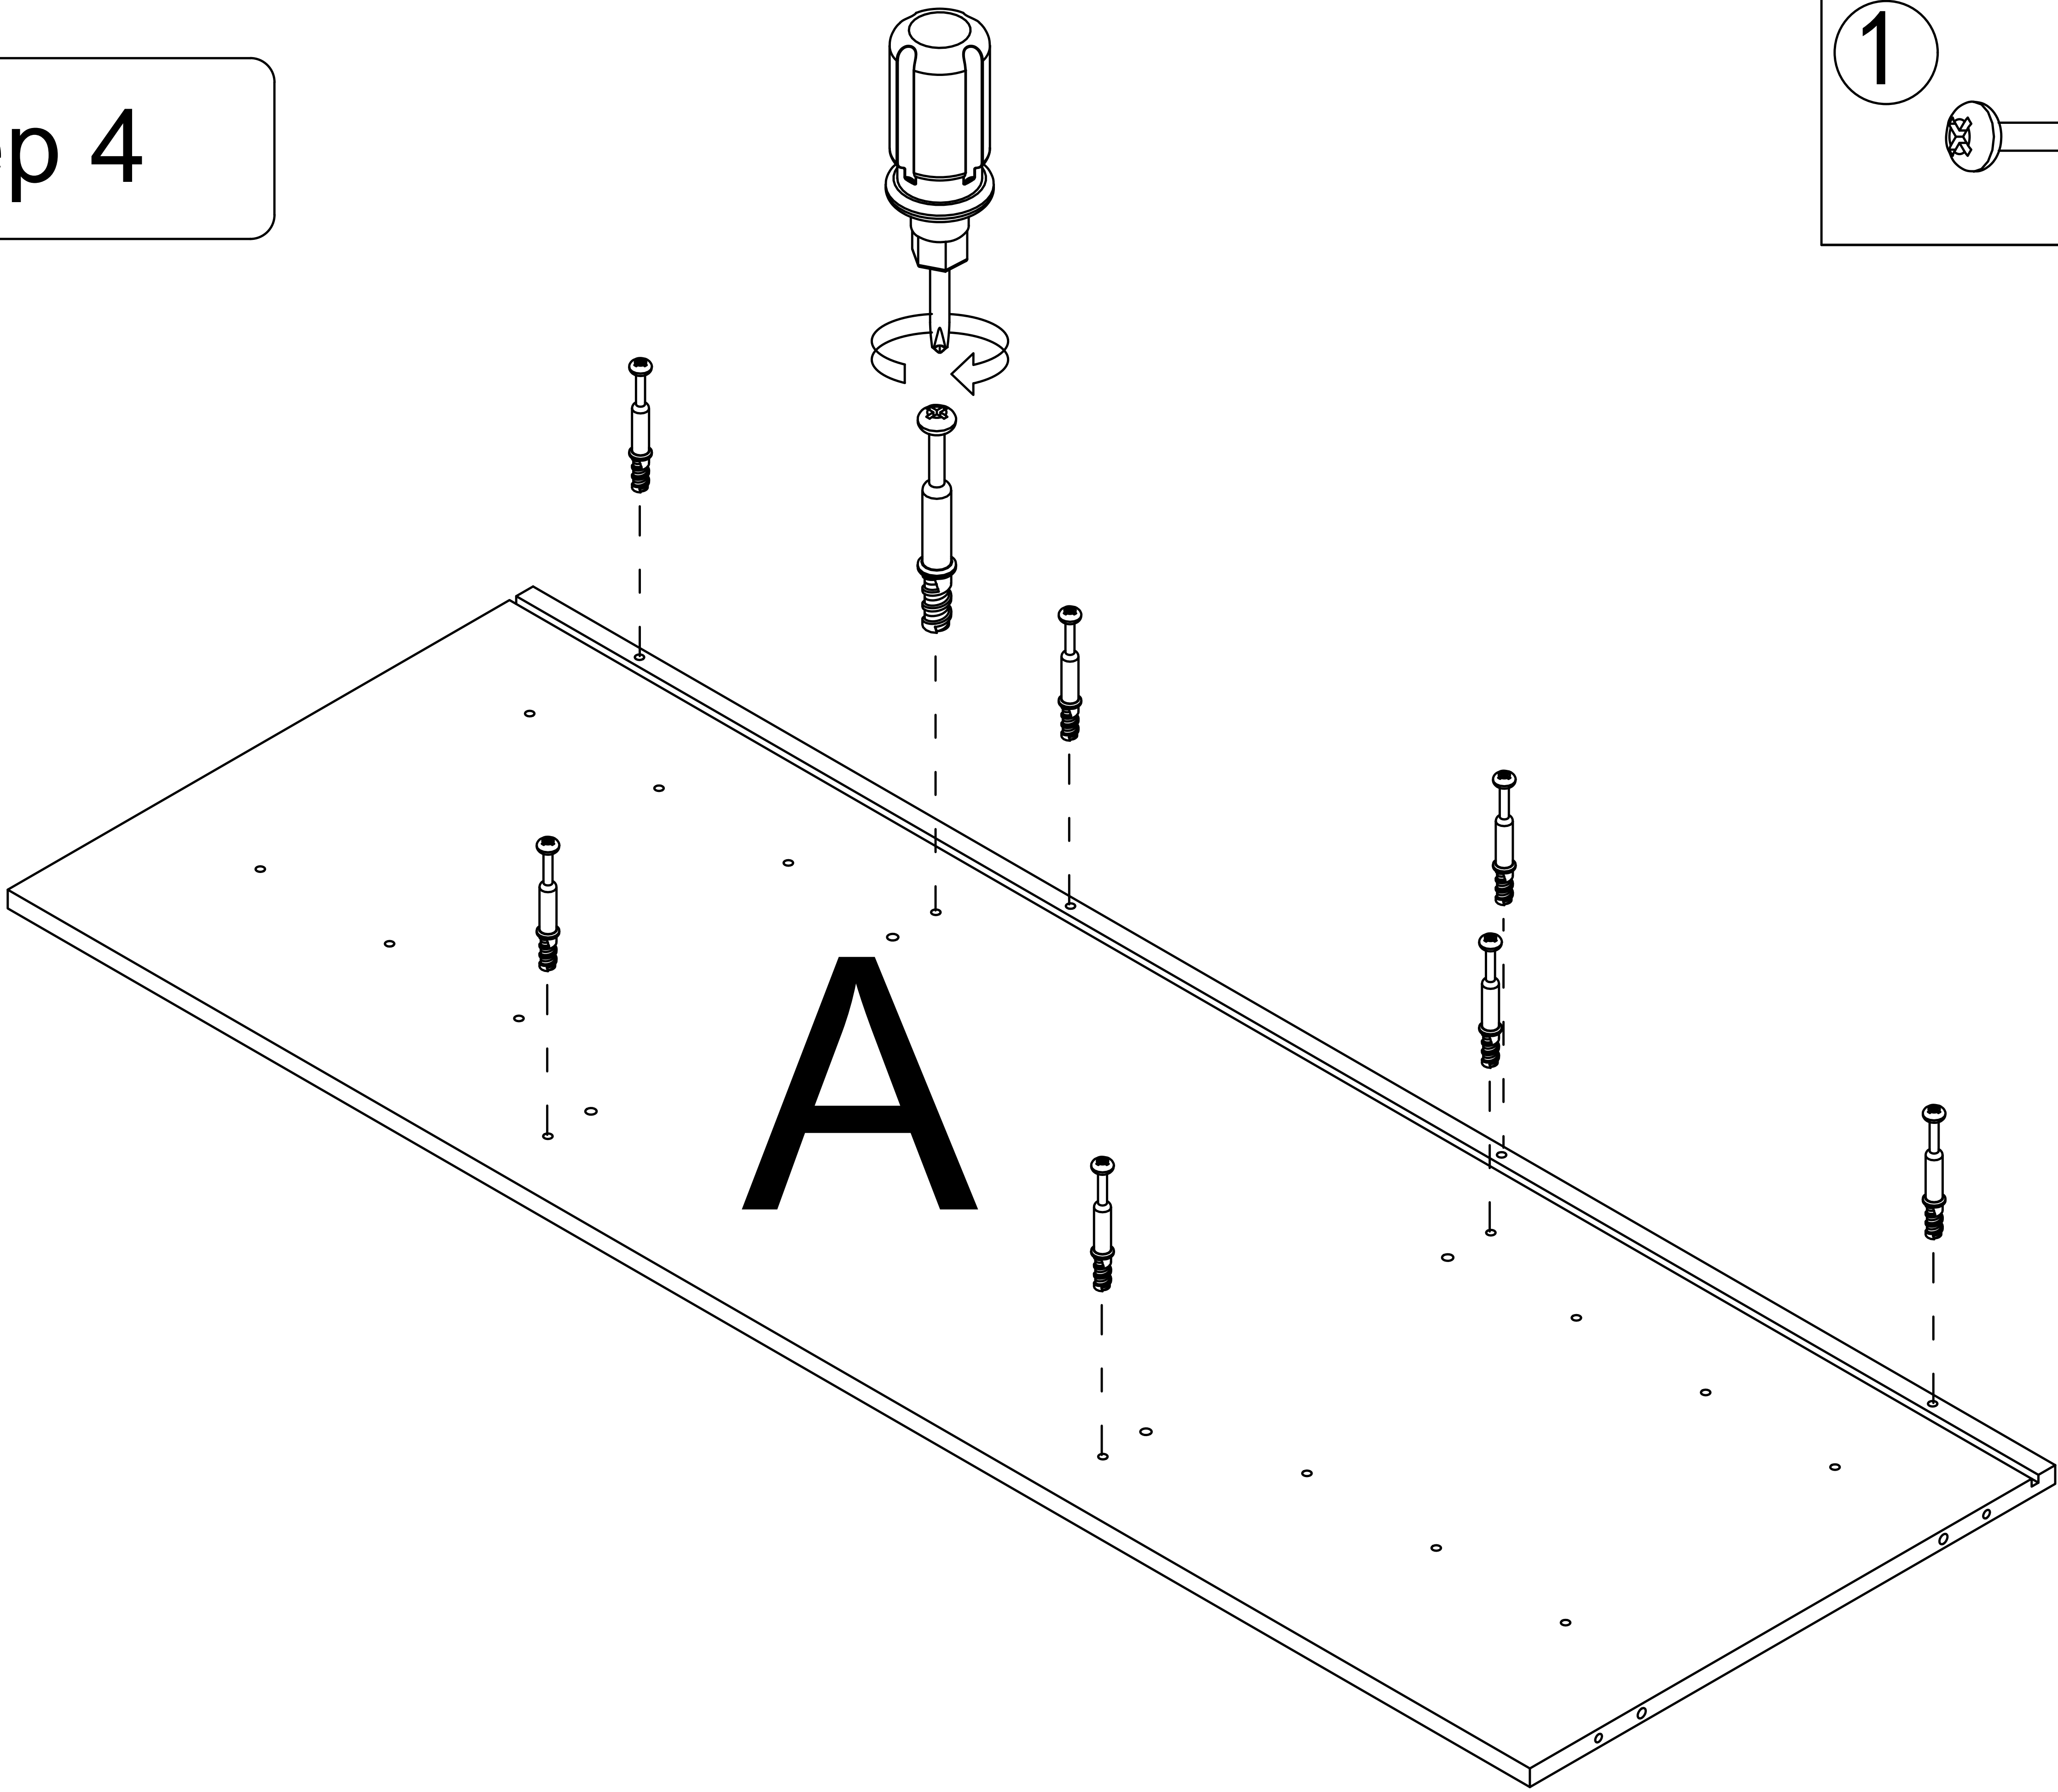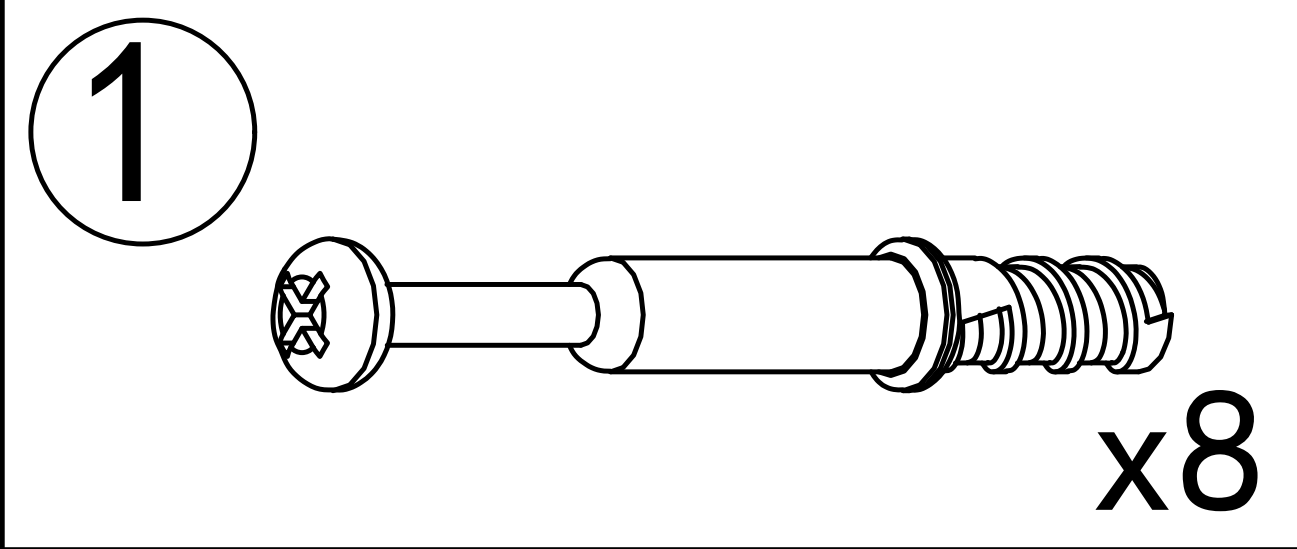

Step 5

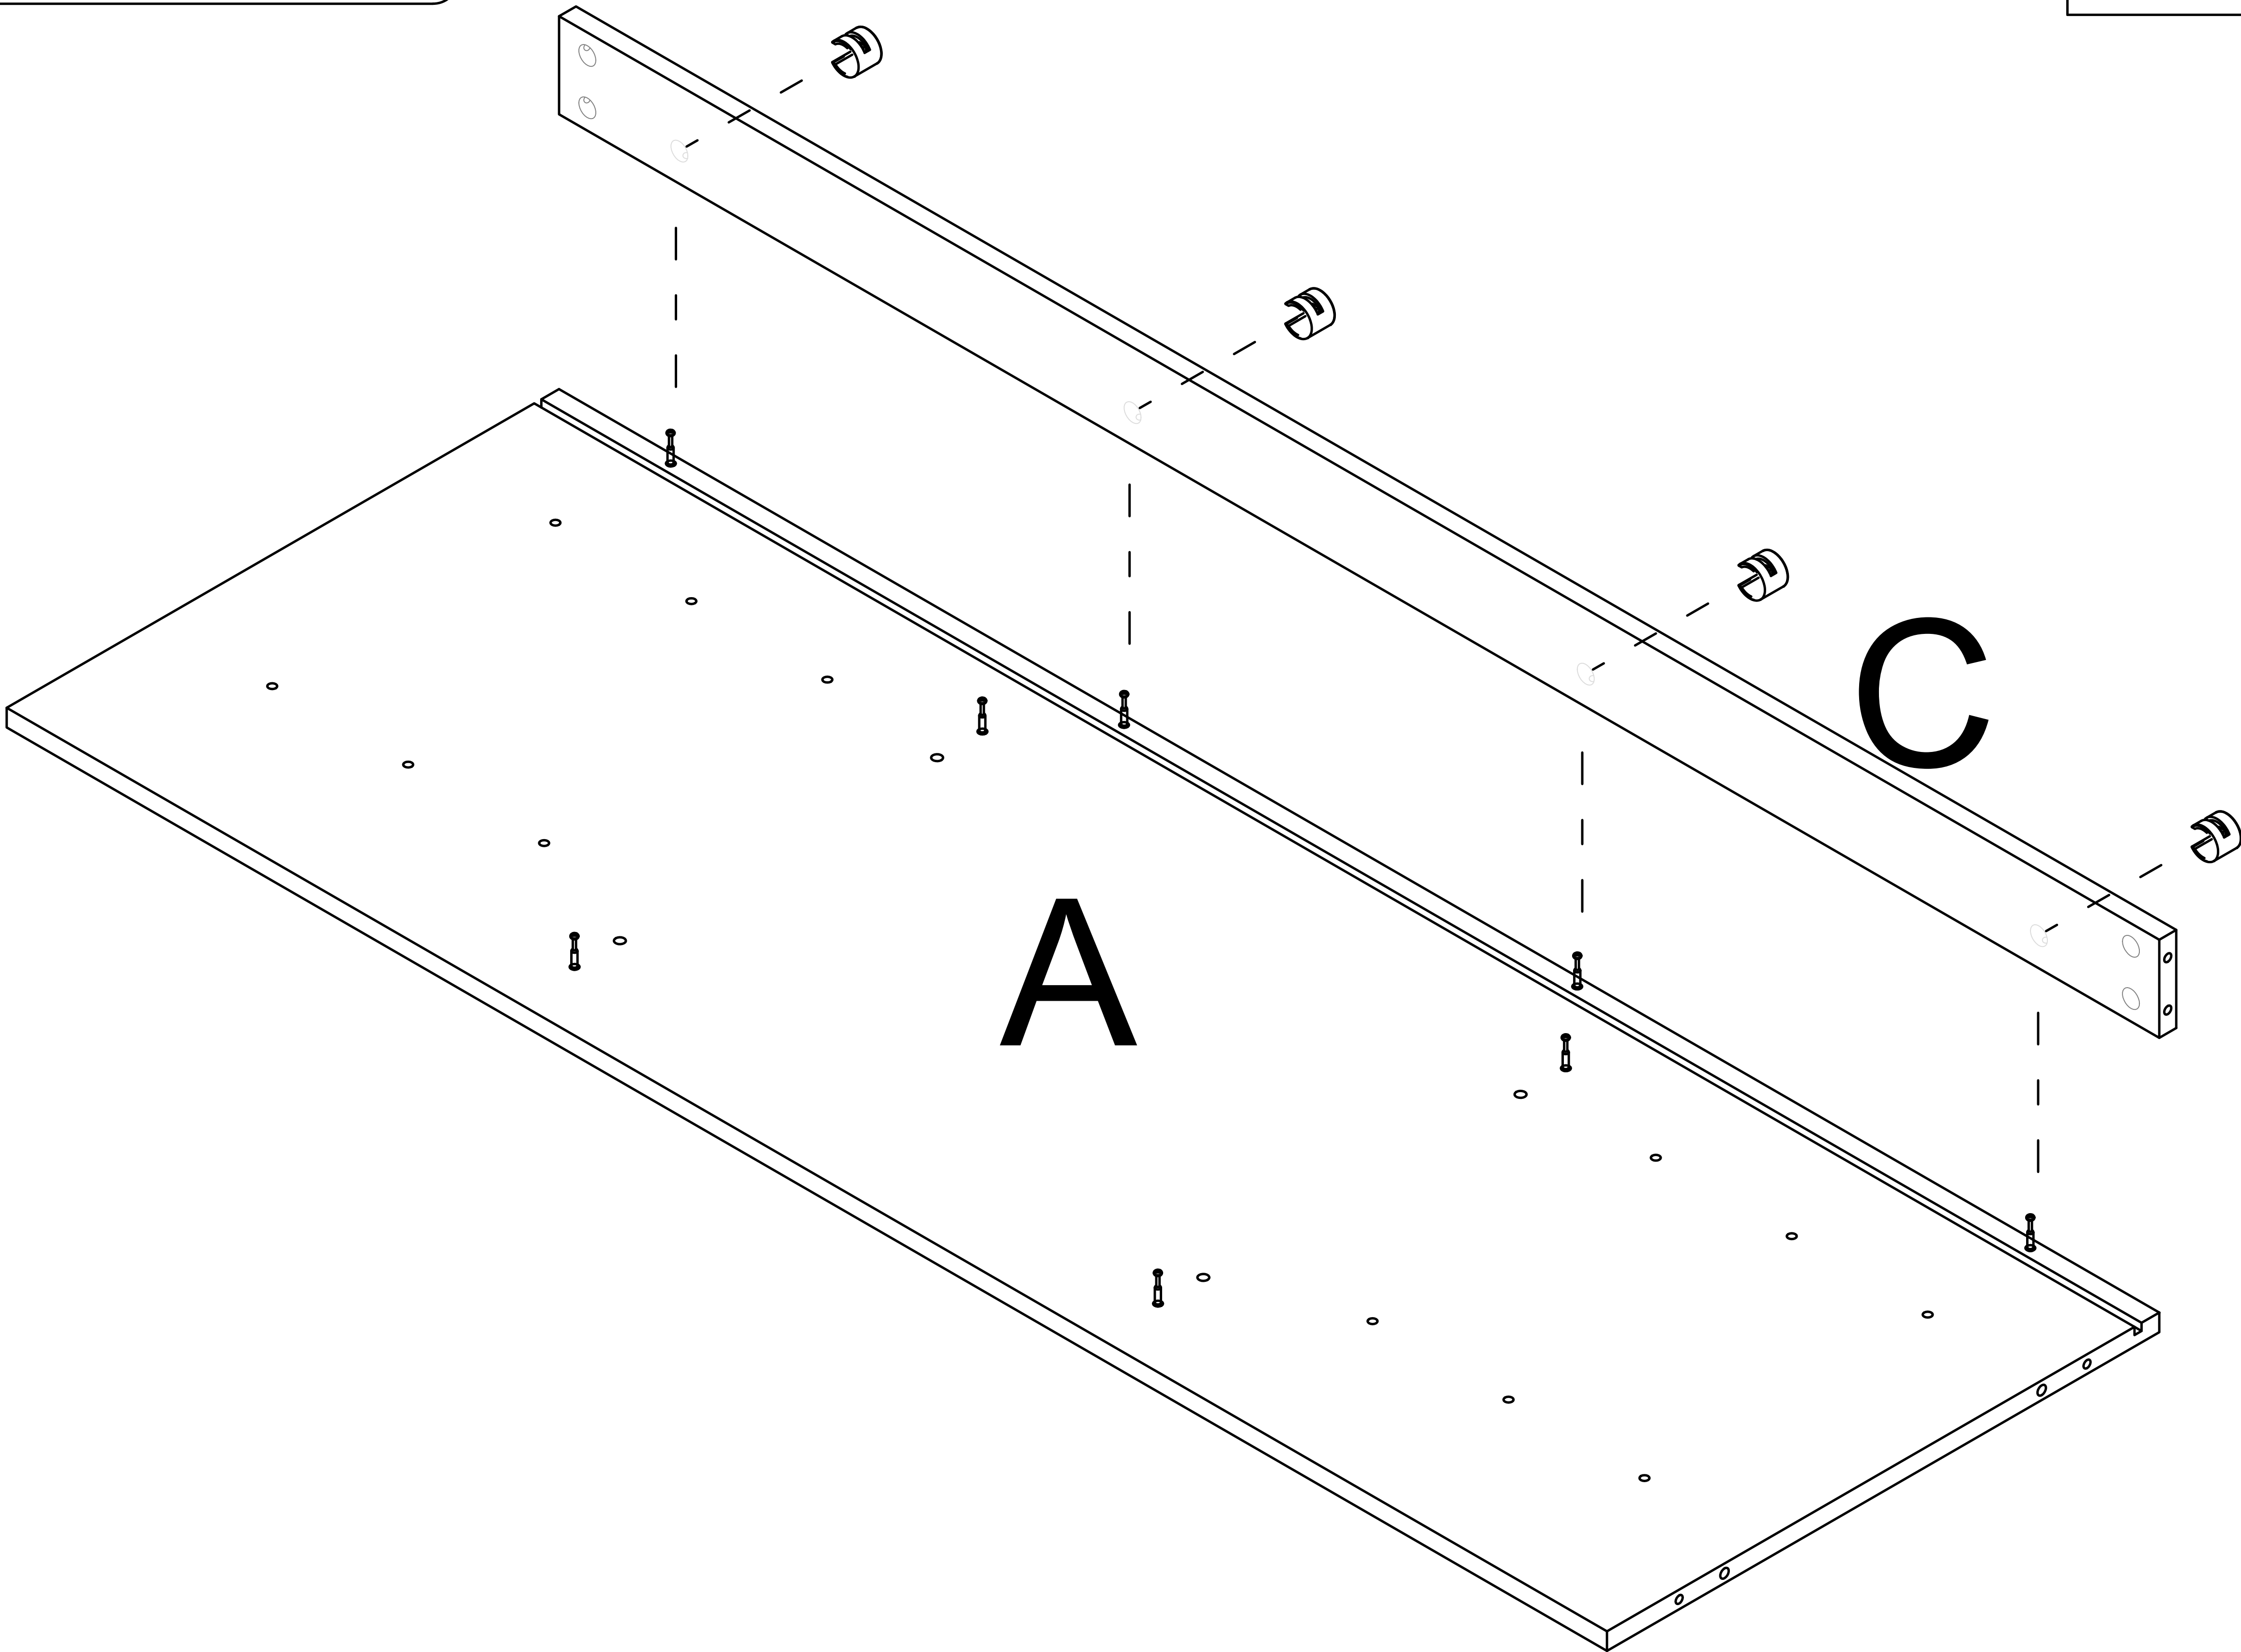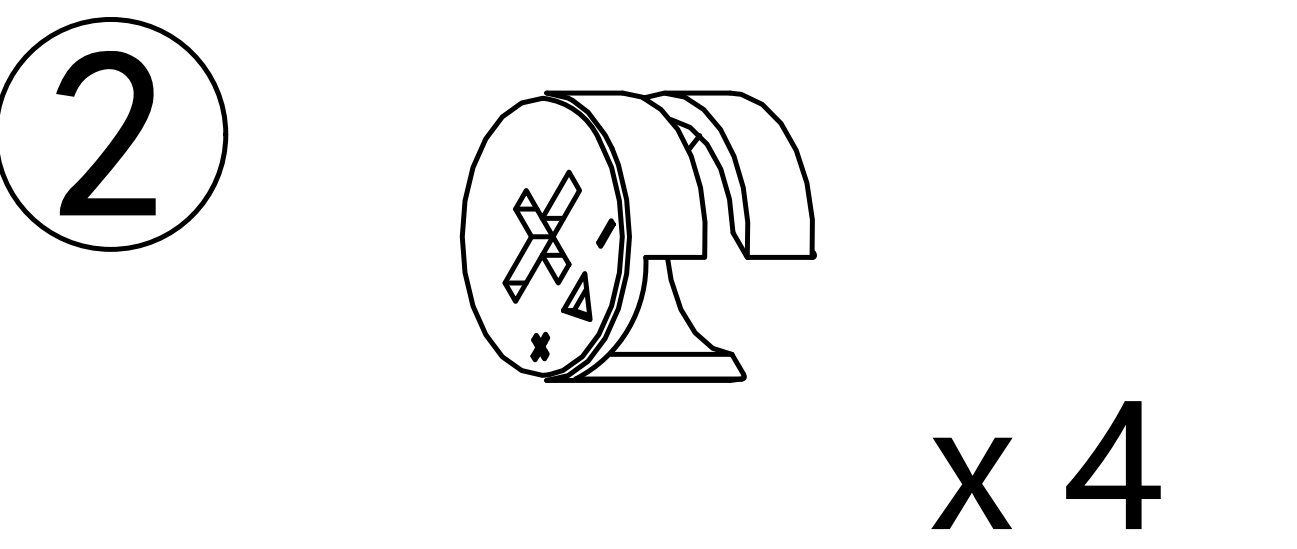


Step 6

3




x4

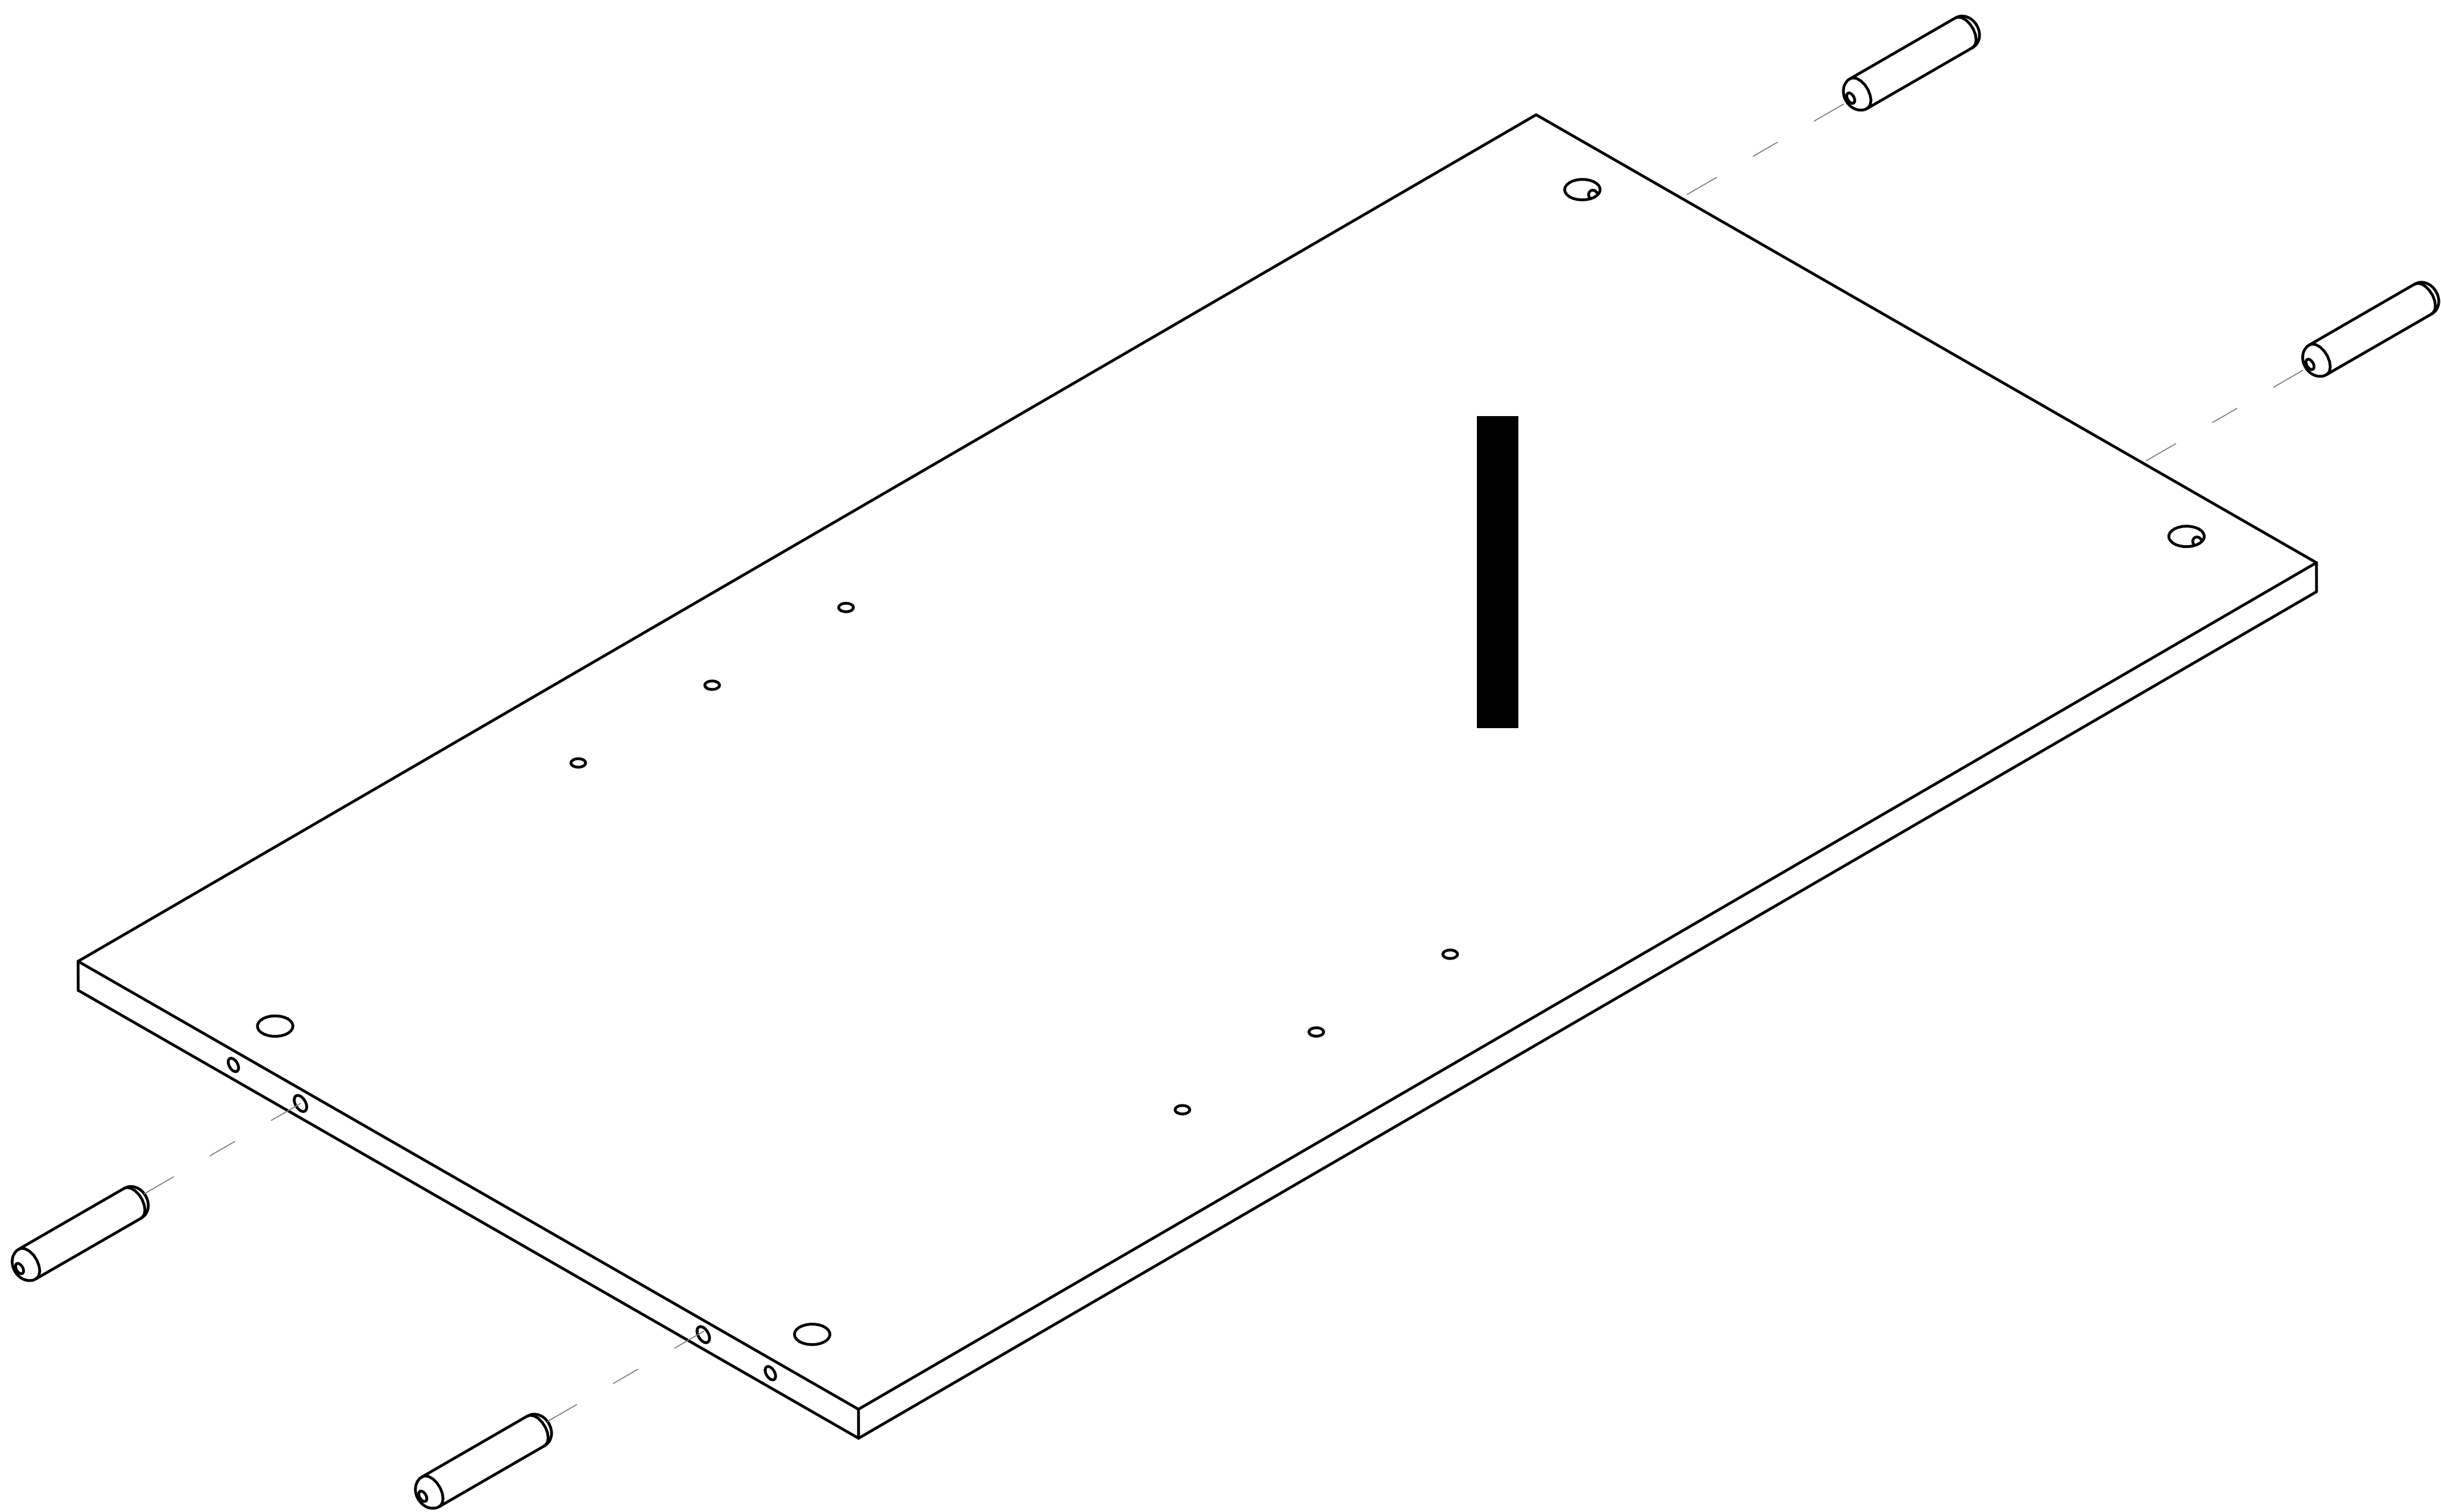


Step 7

1

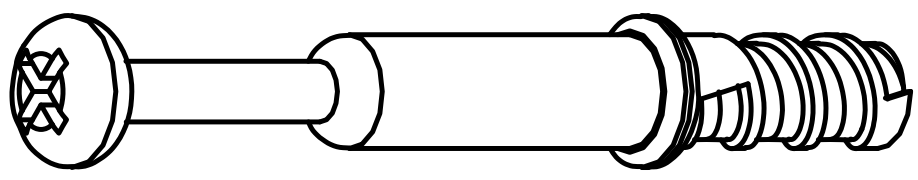


x2

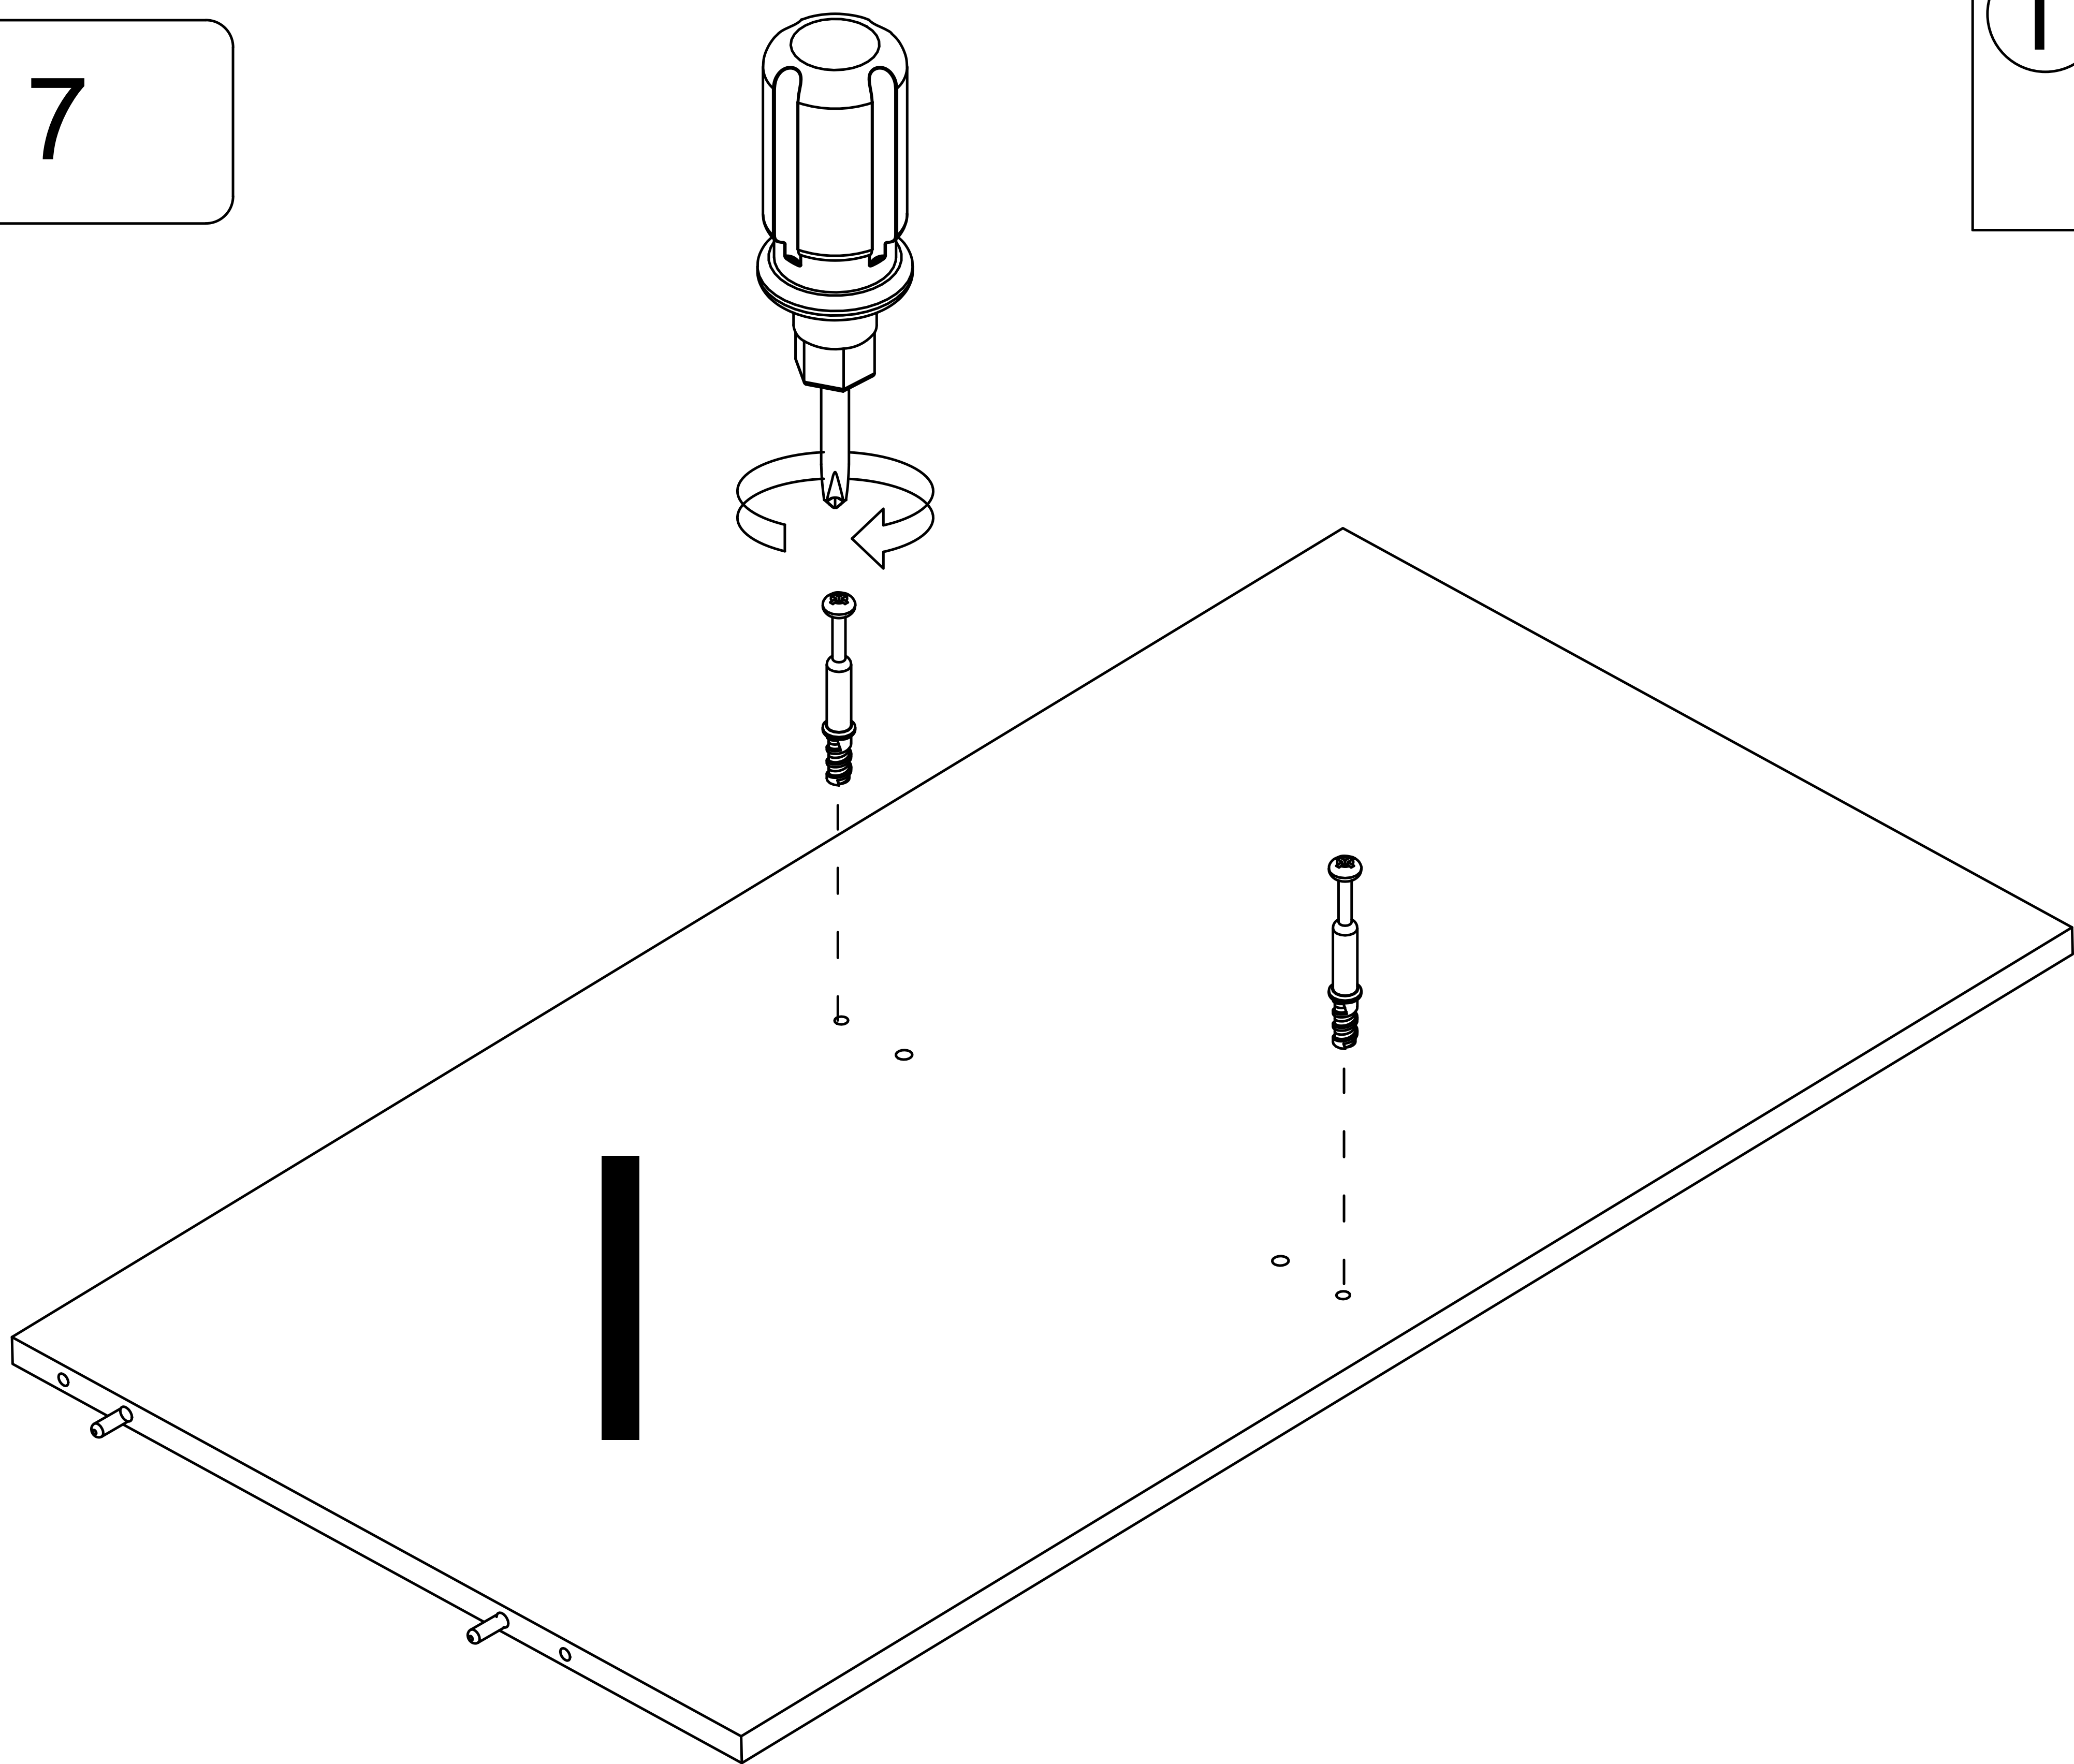


Step 8

2

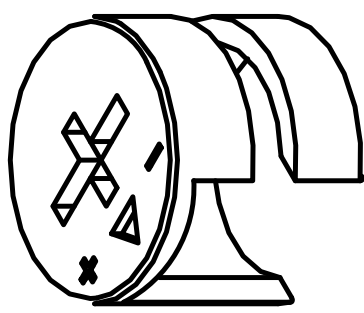

x 2

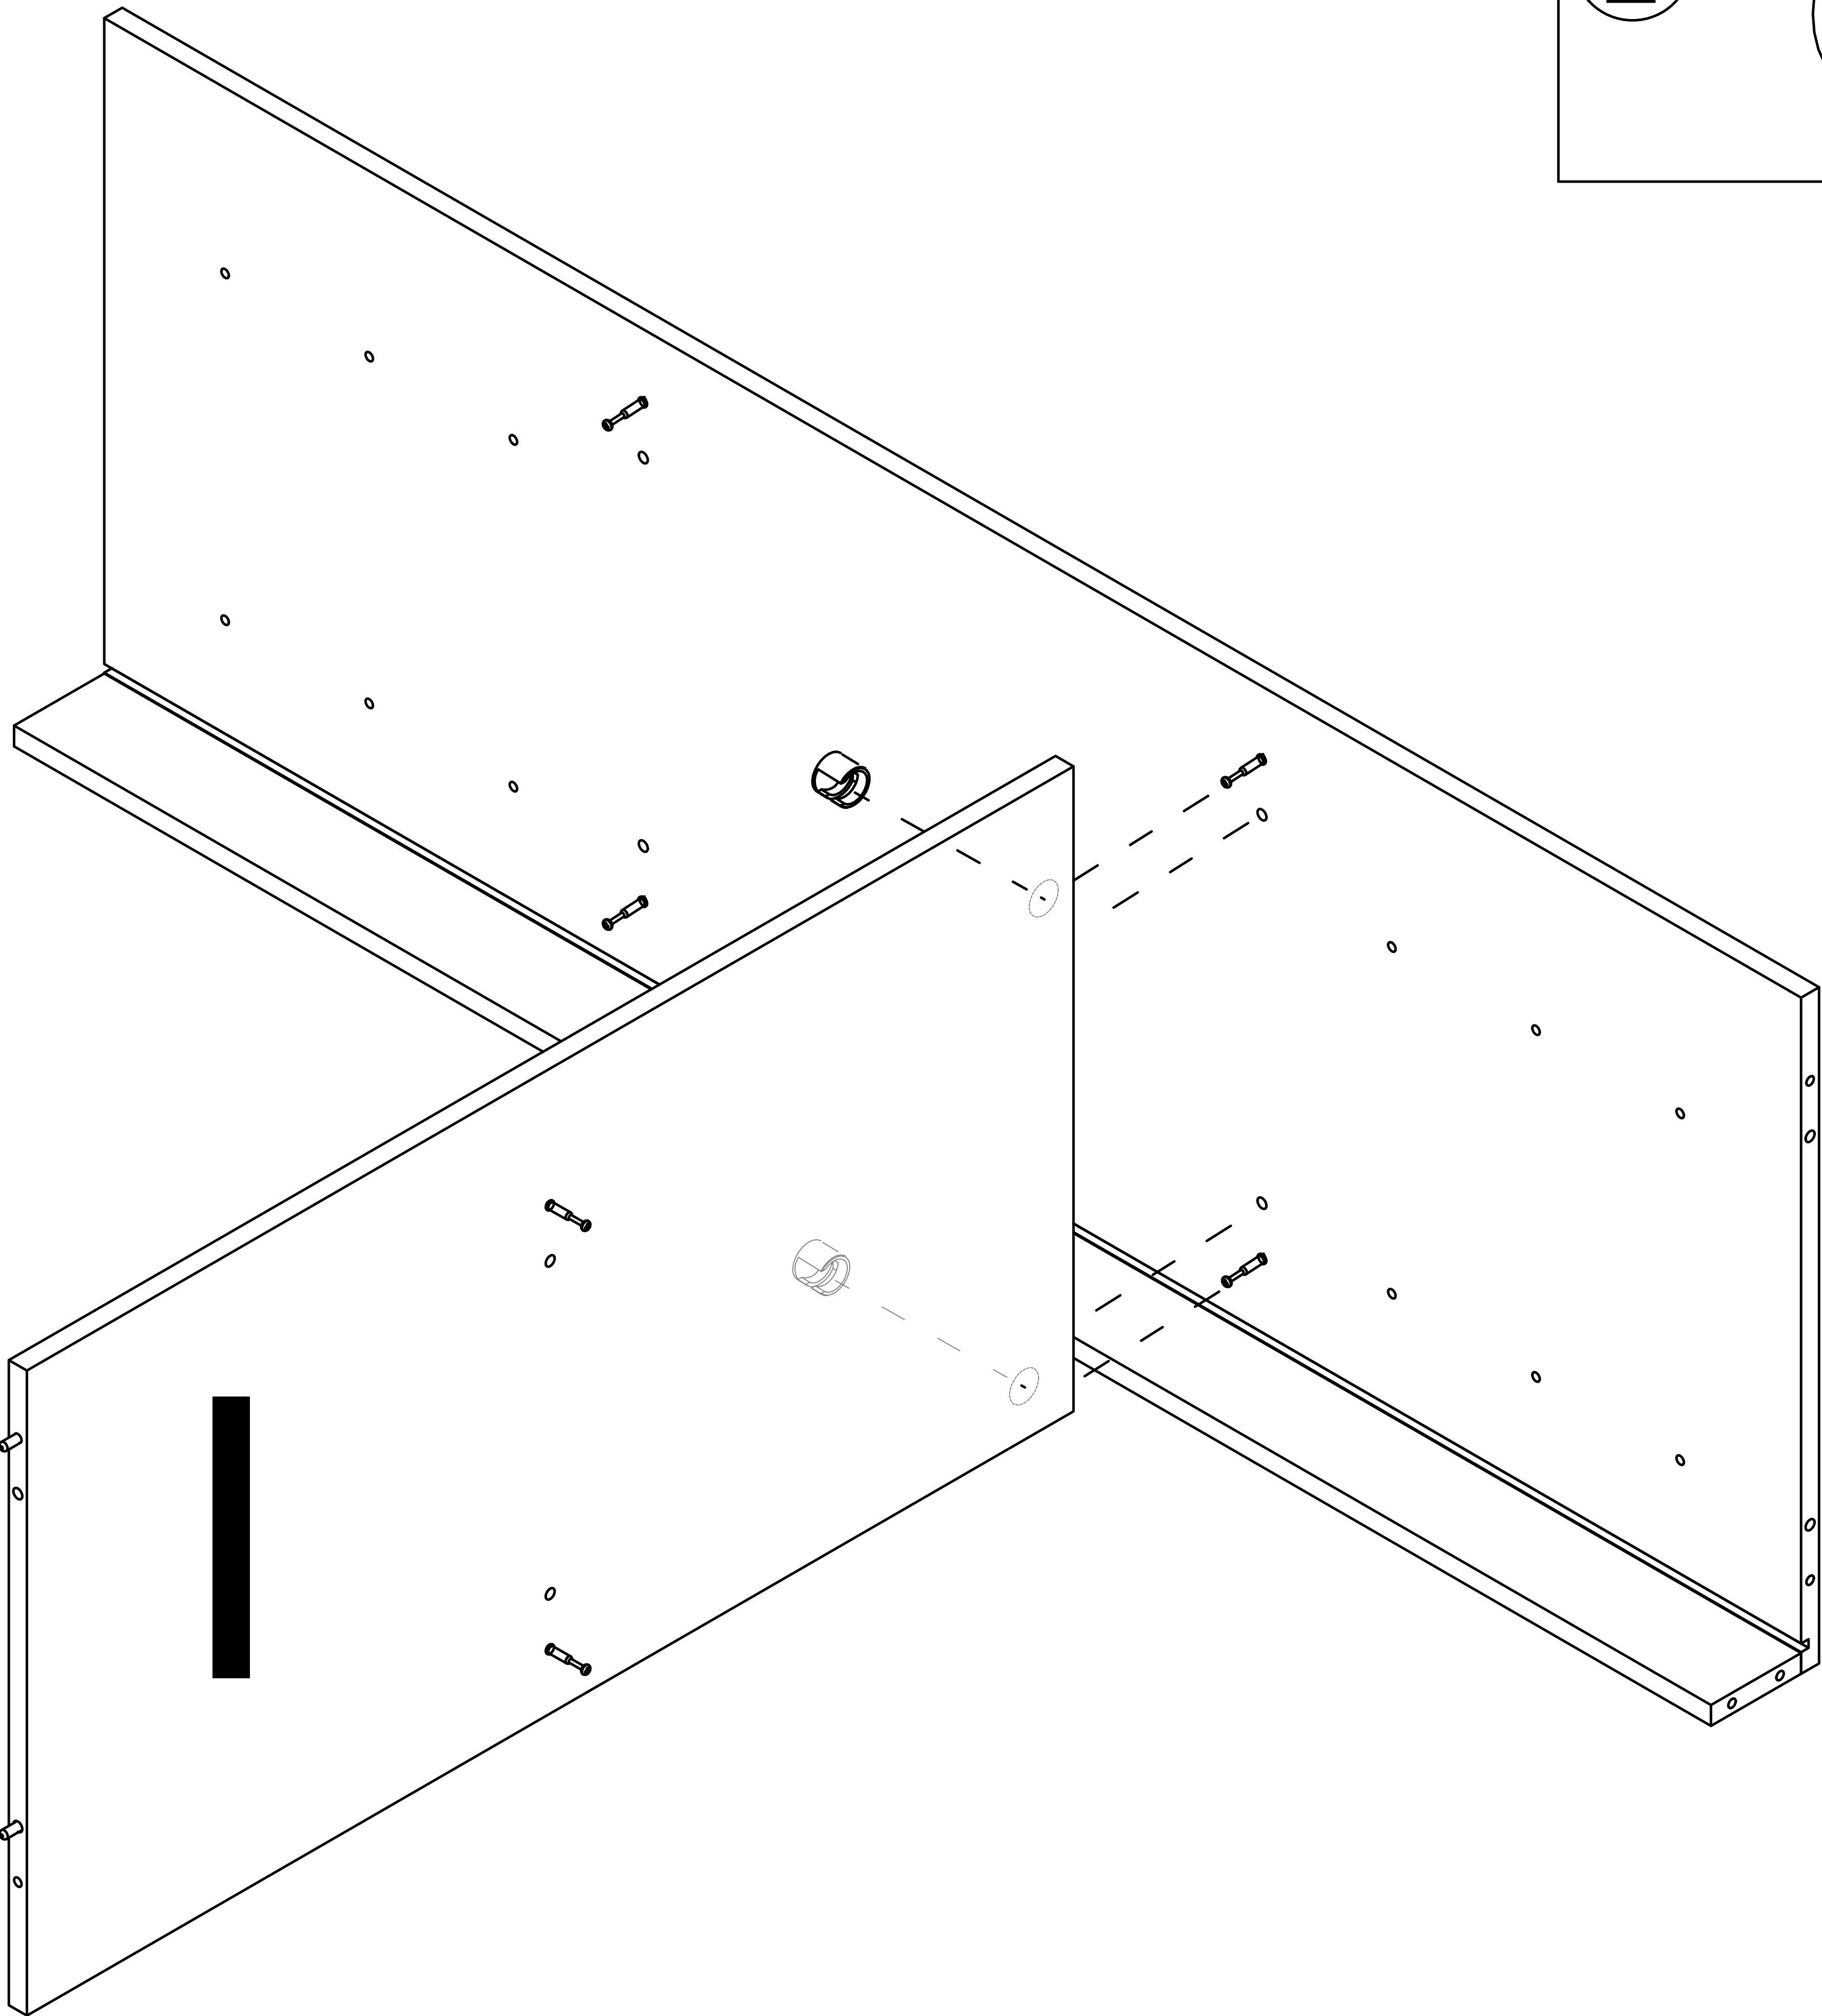


Step 9

3




x8

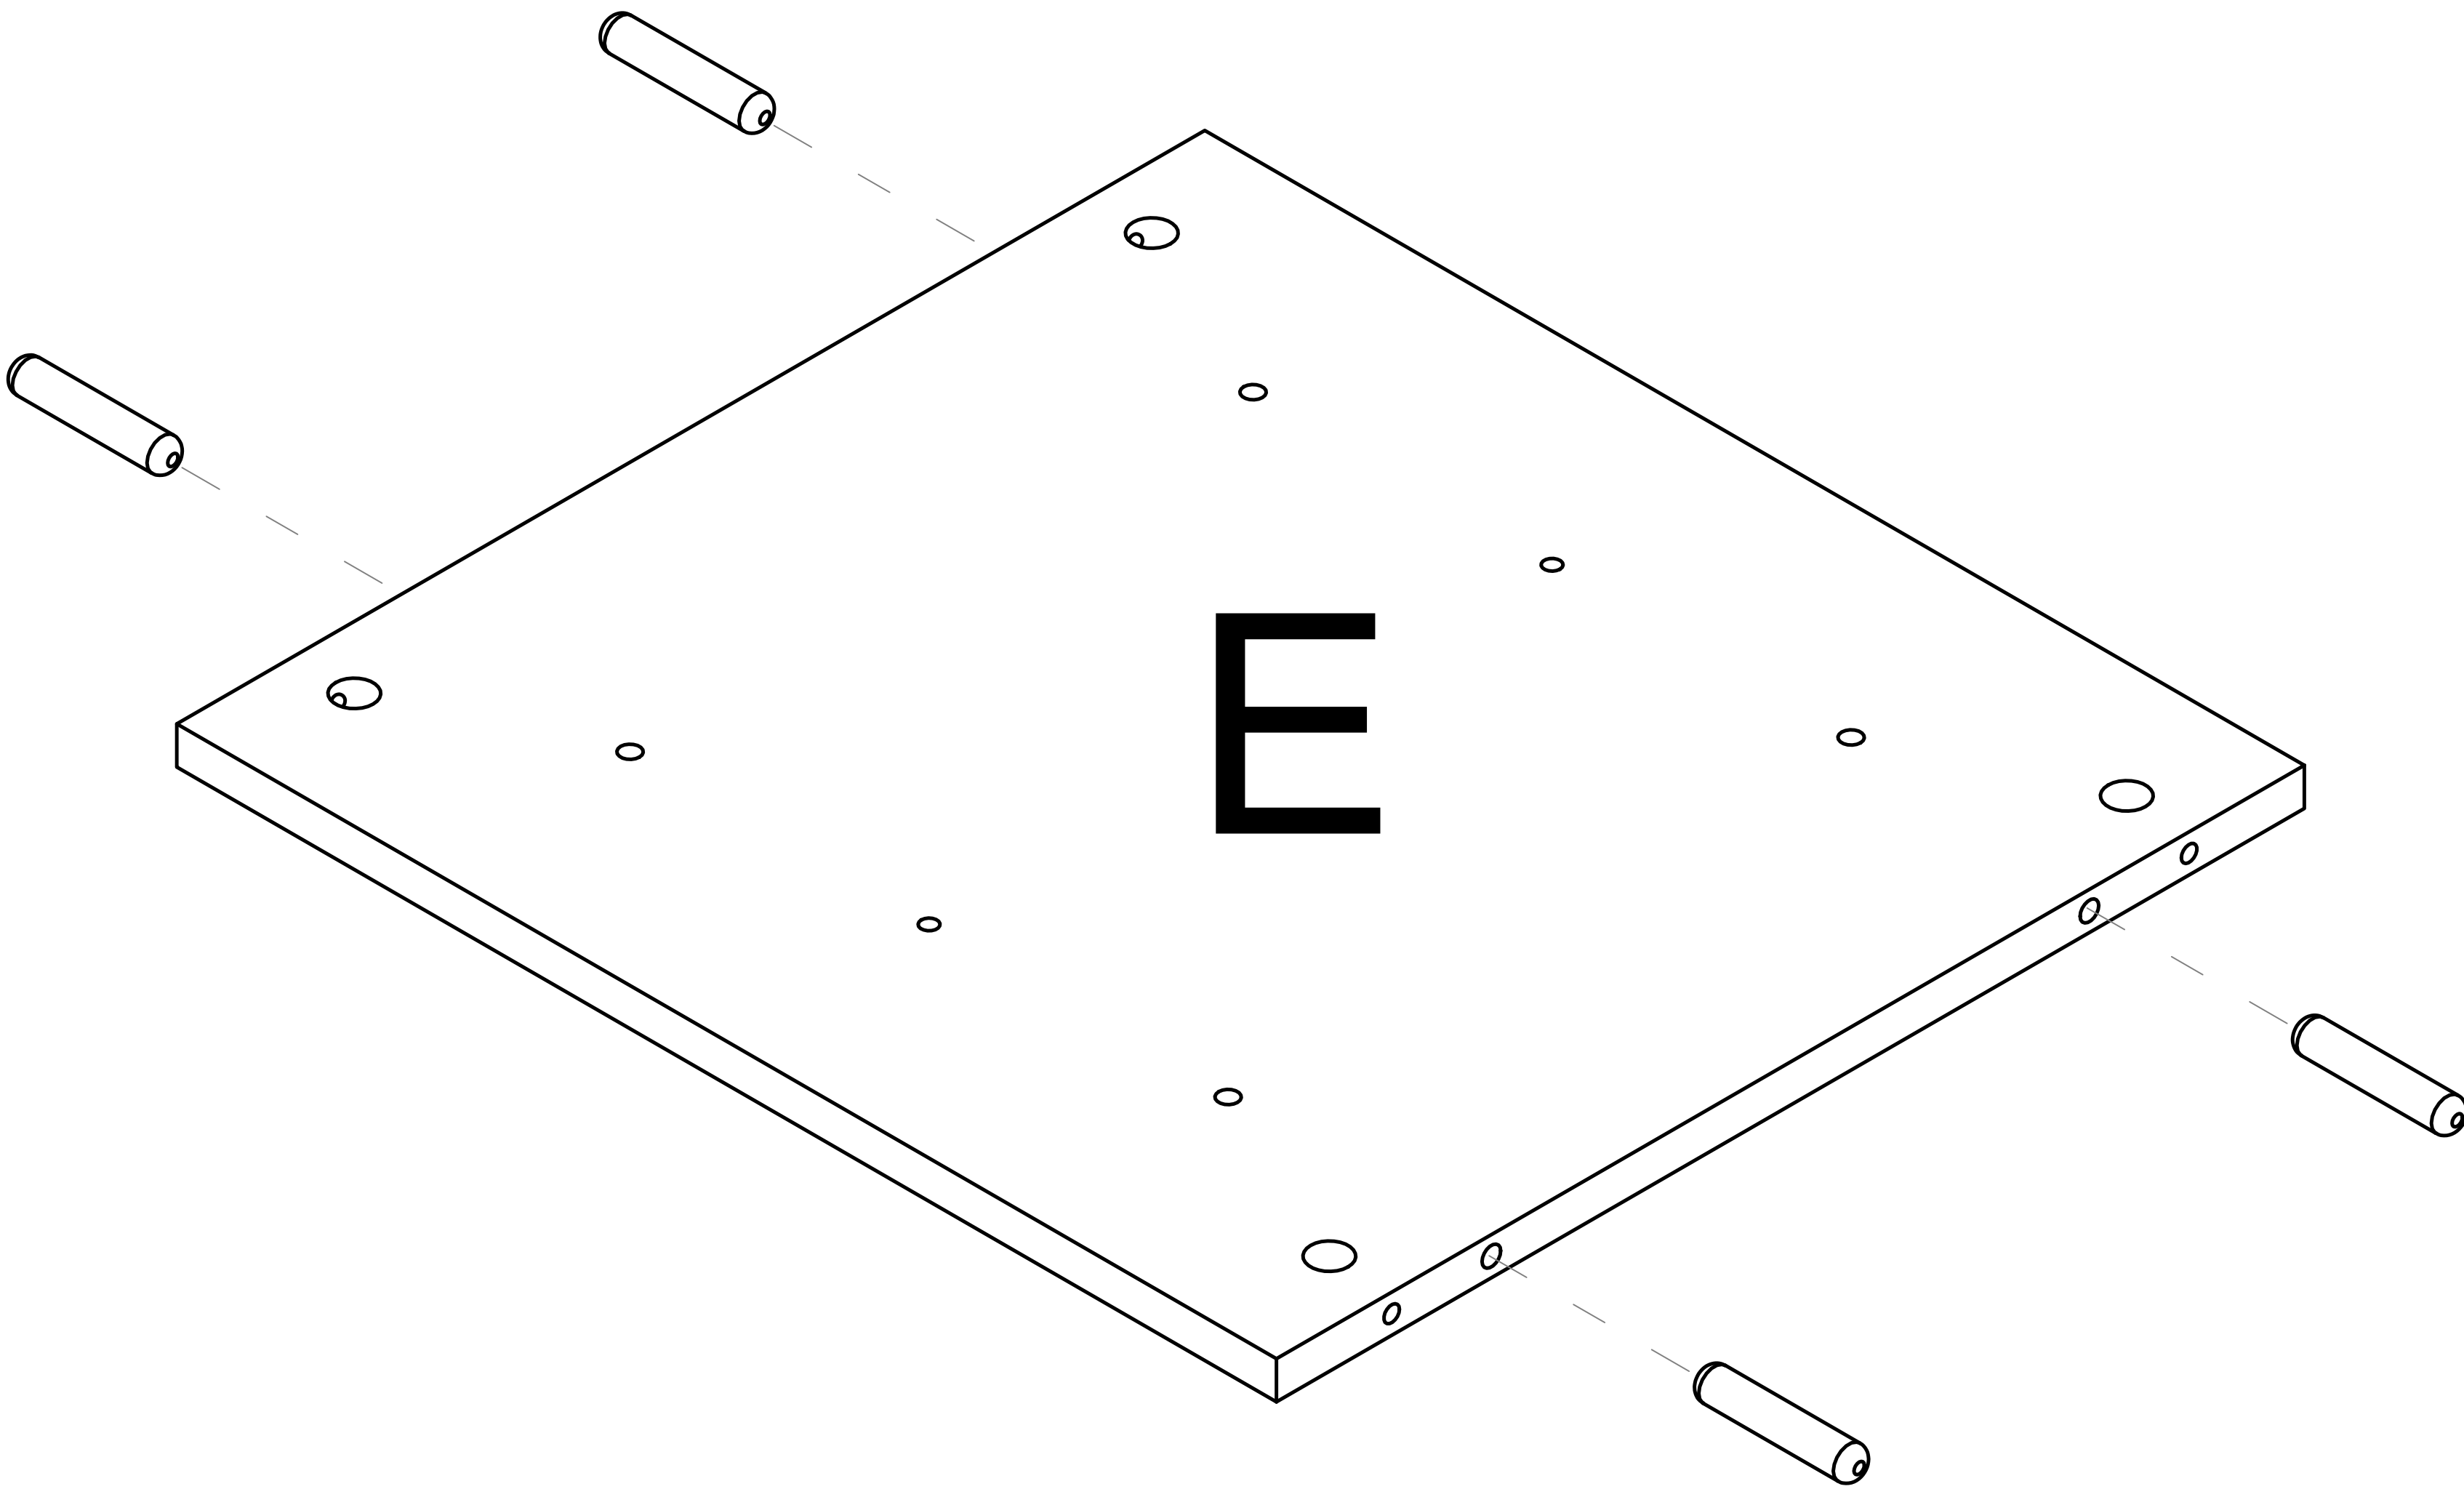

x2


8

Step 10

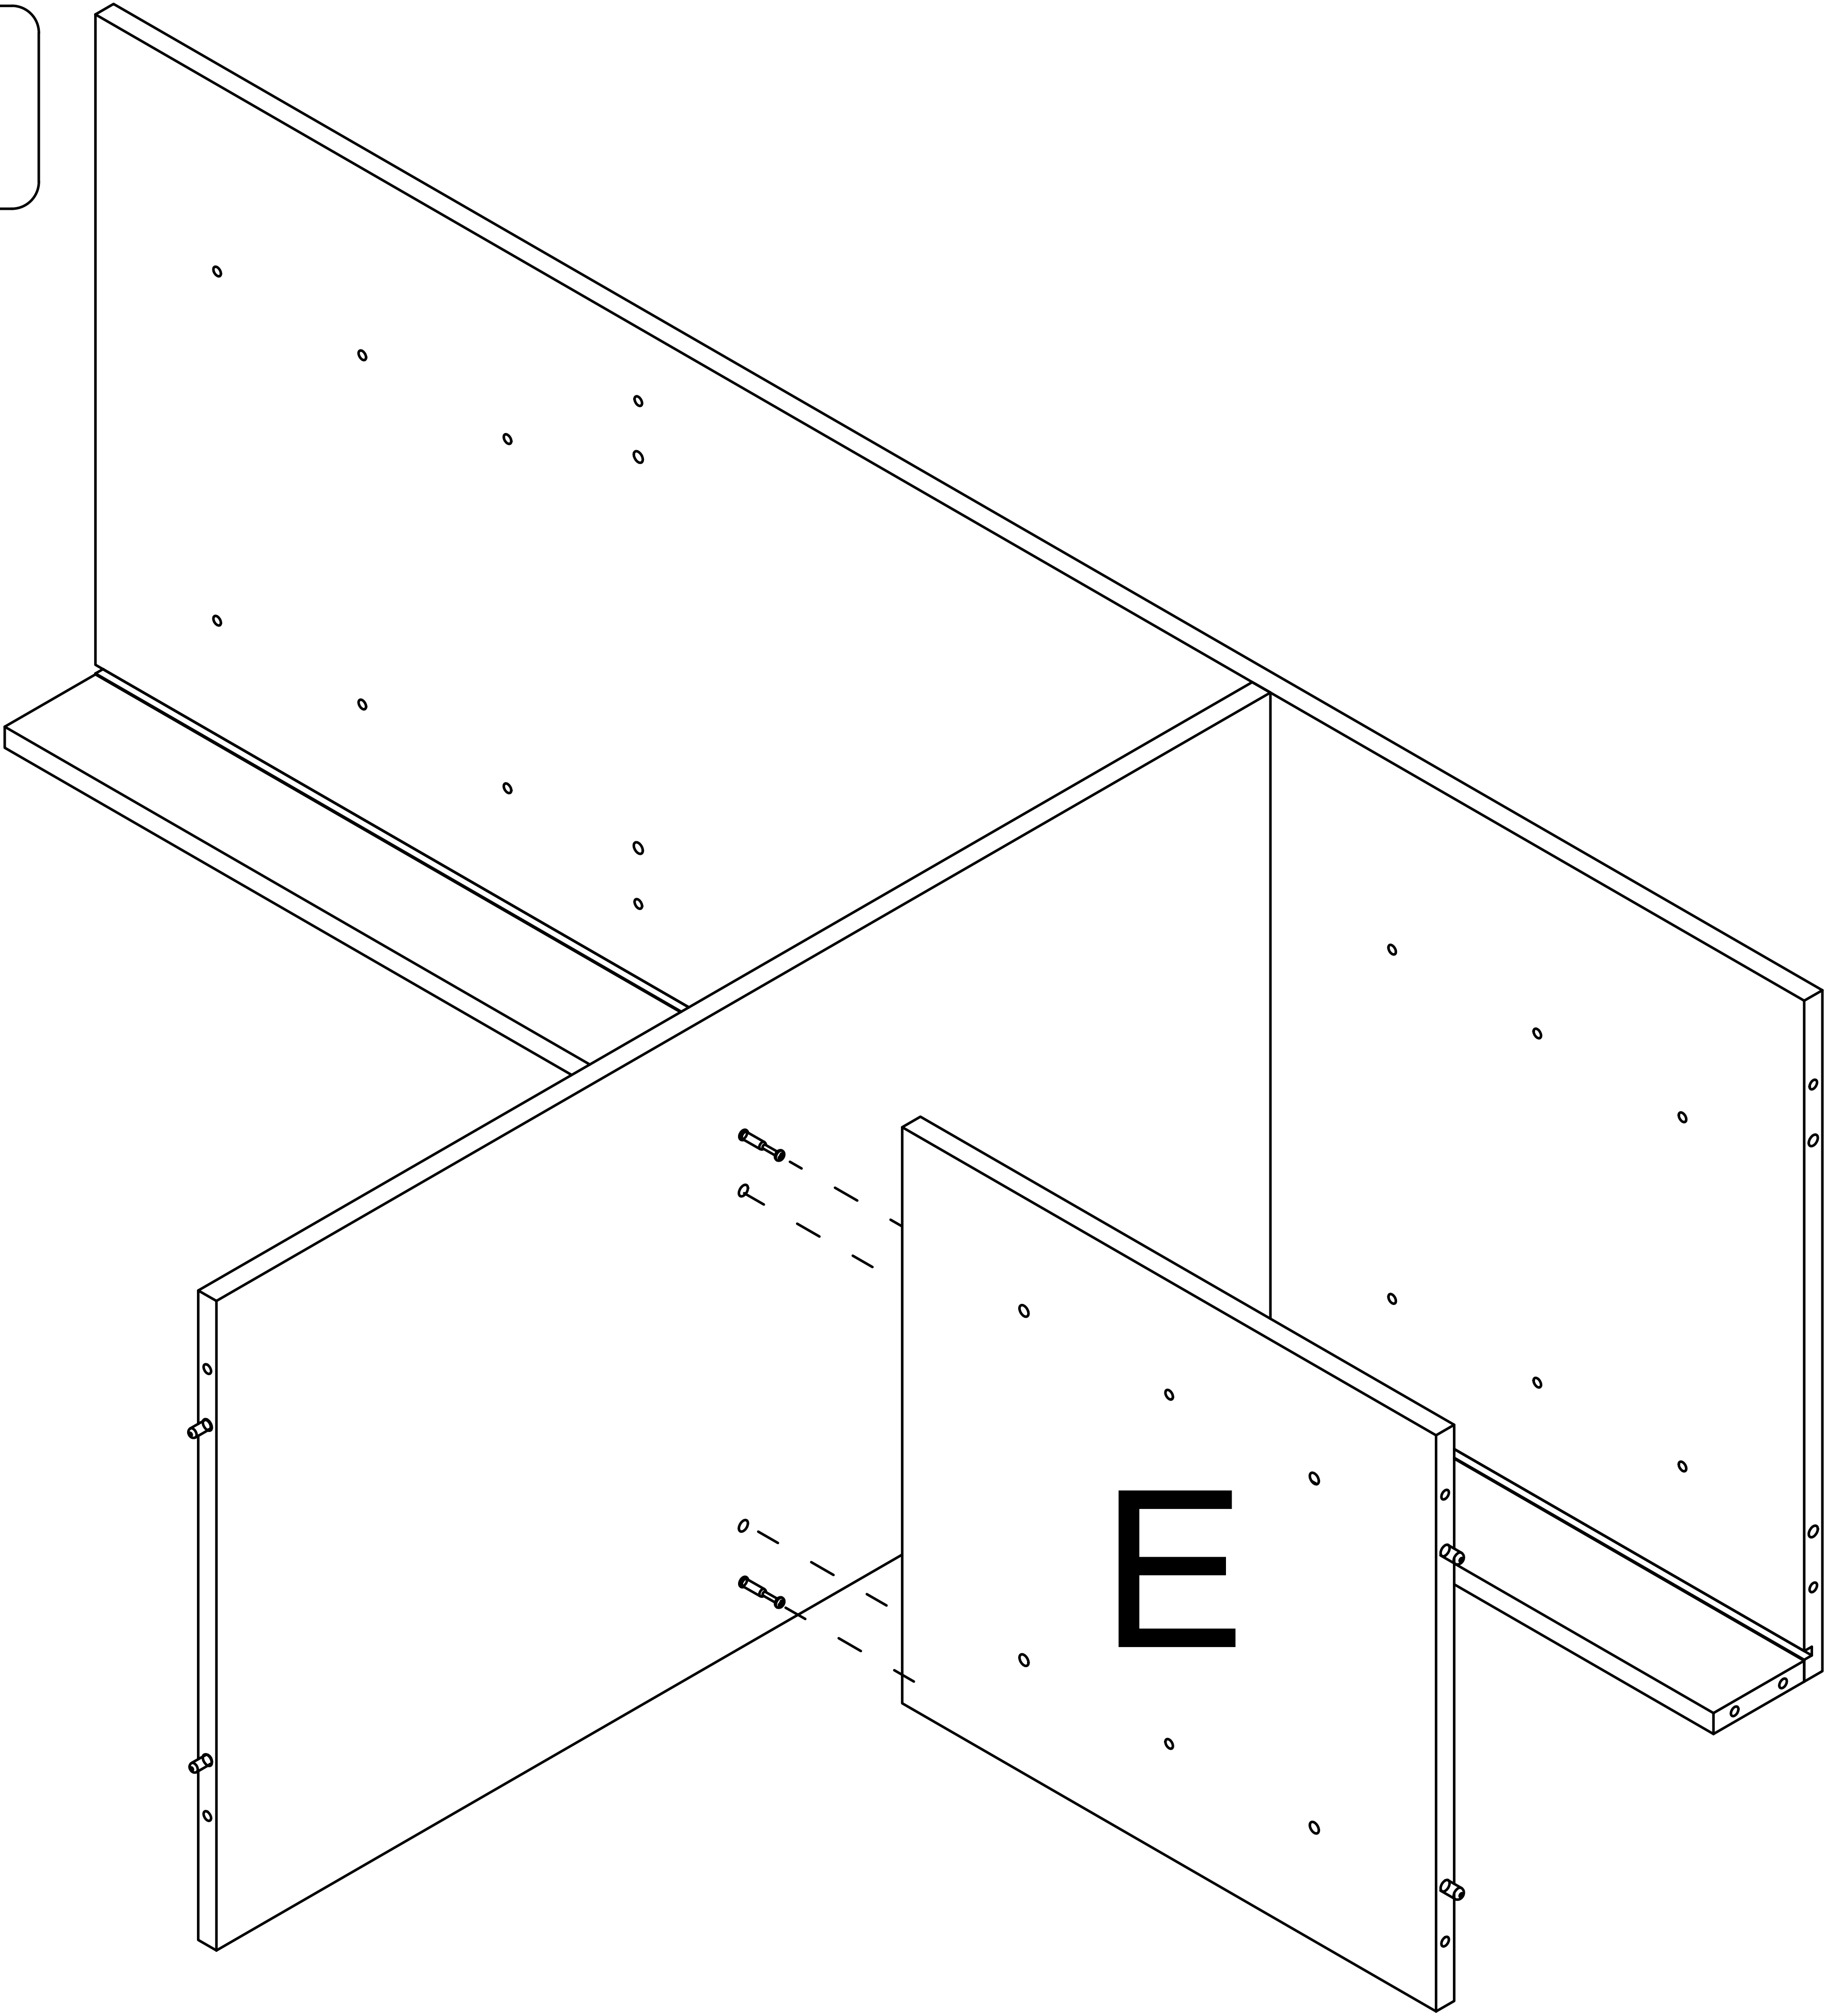


Step 11

2

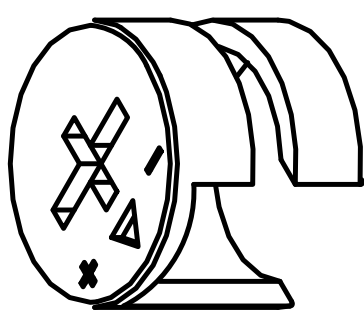

x 2


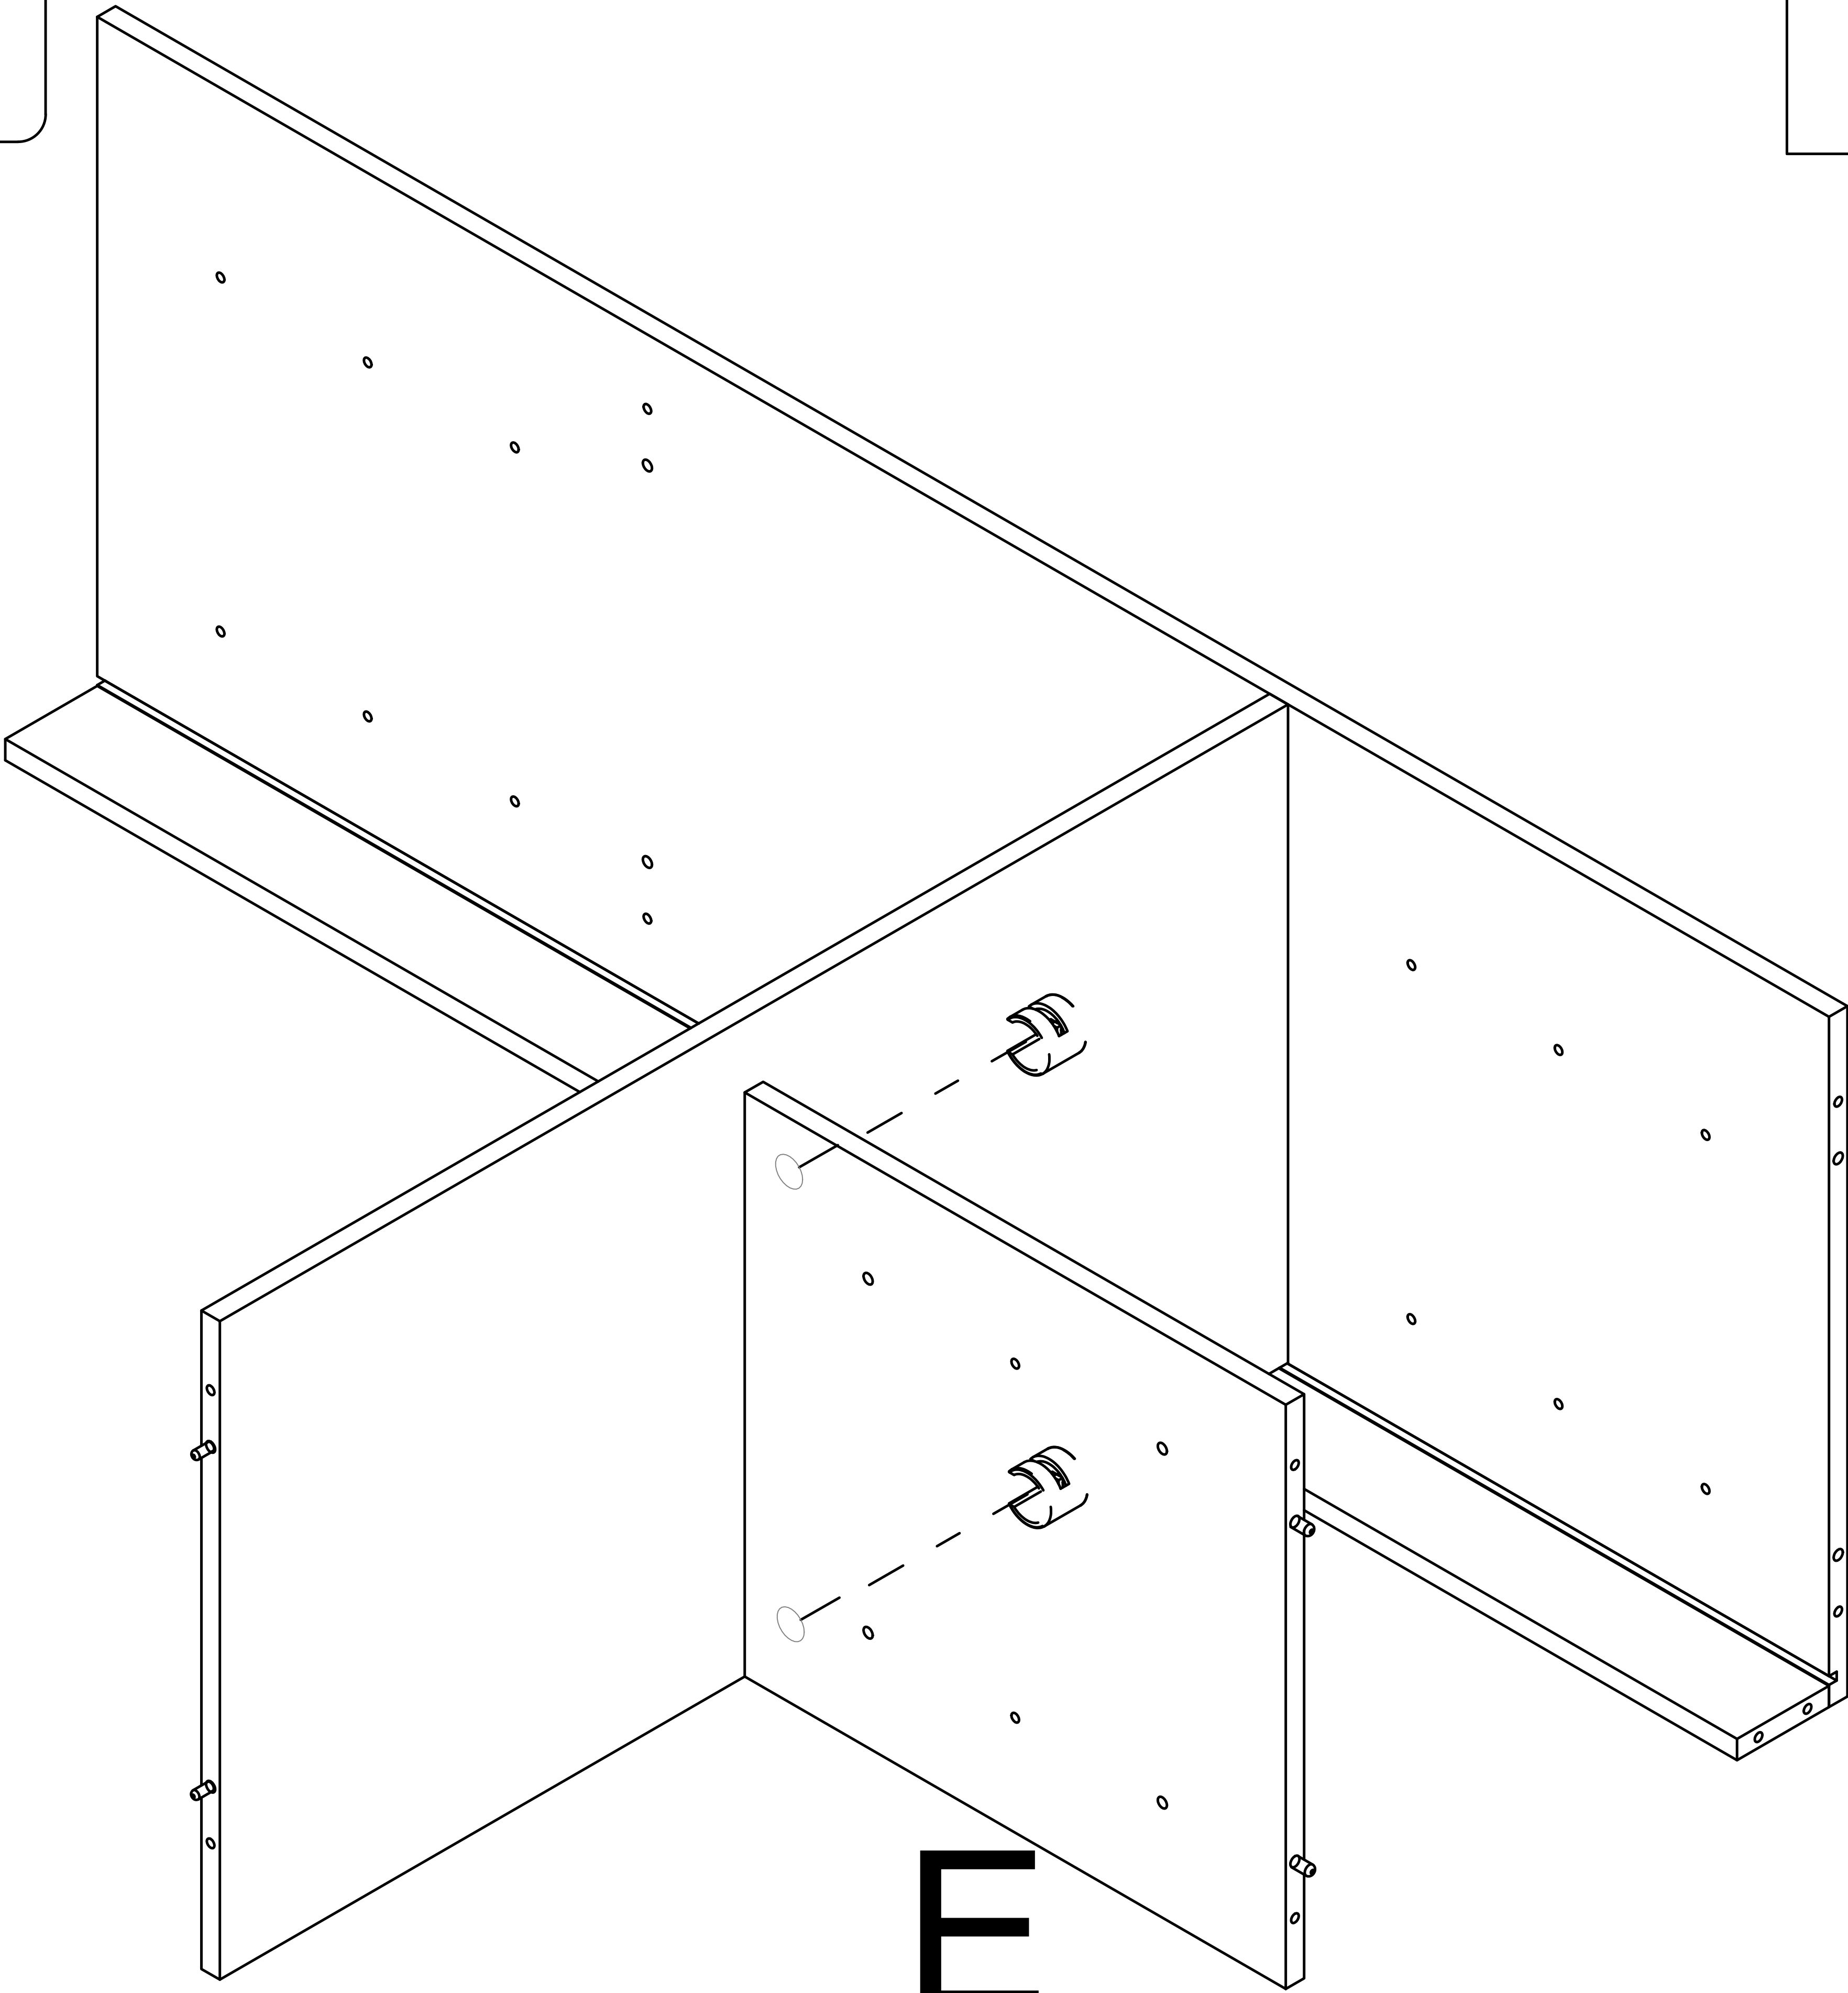


Step 12



3



x2

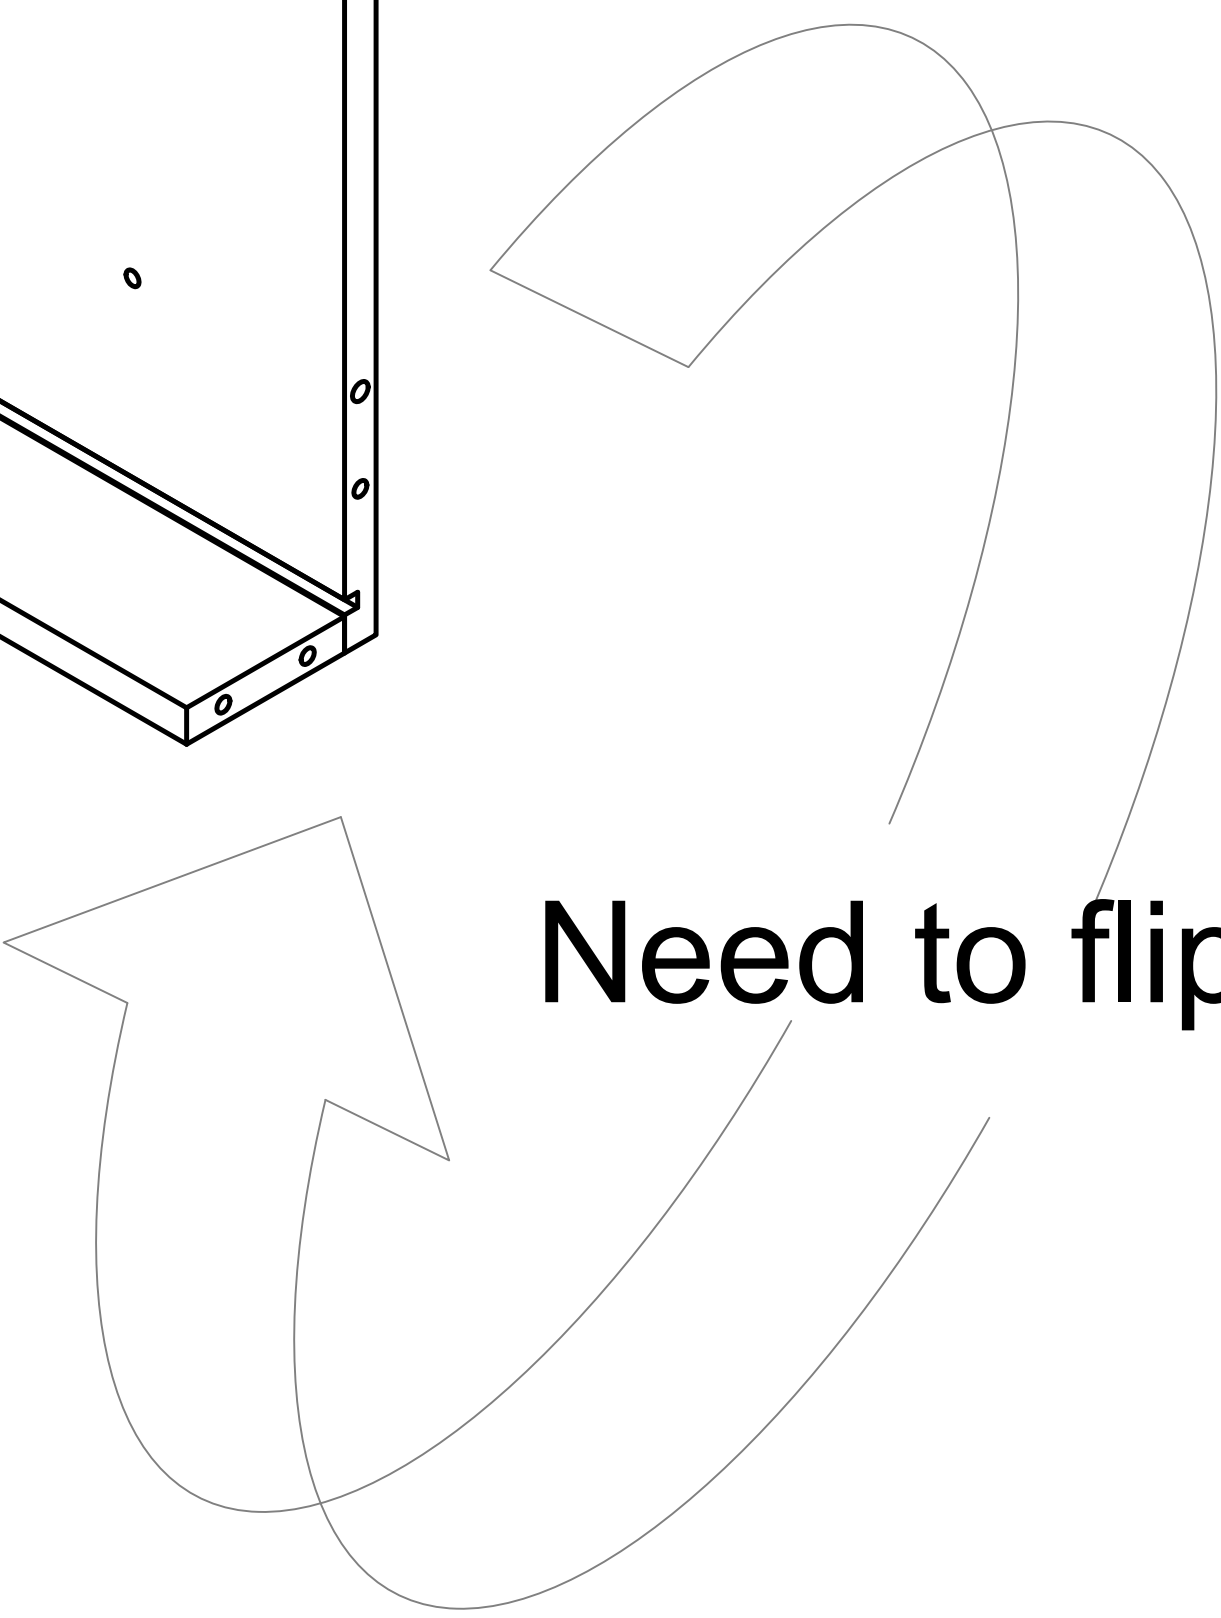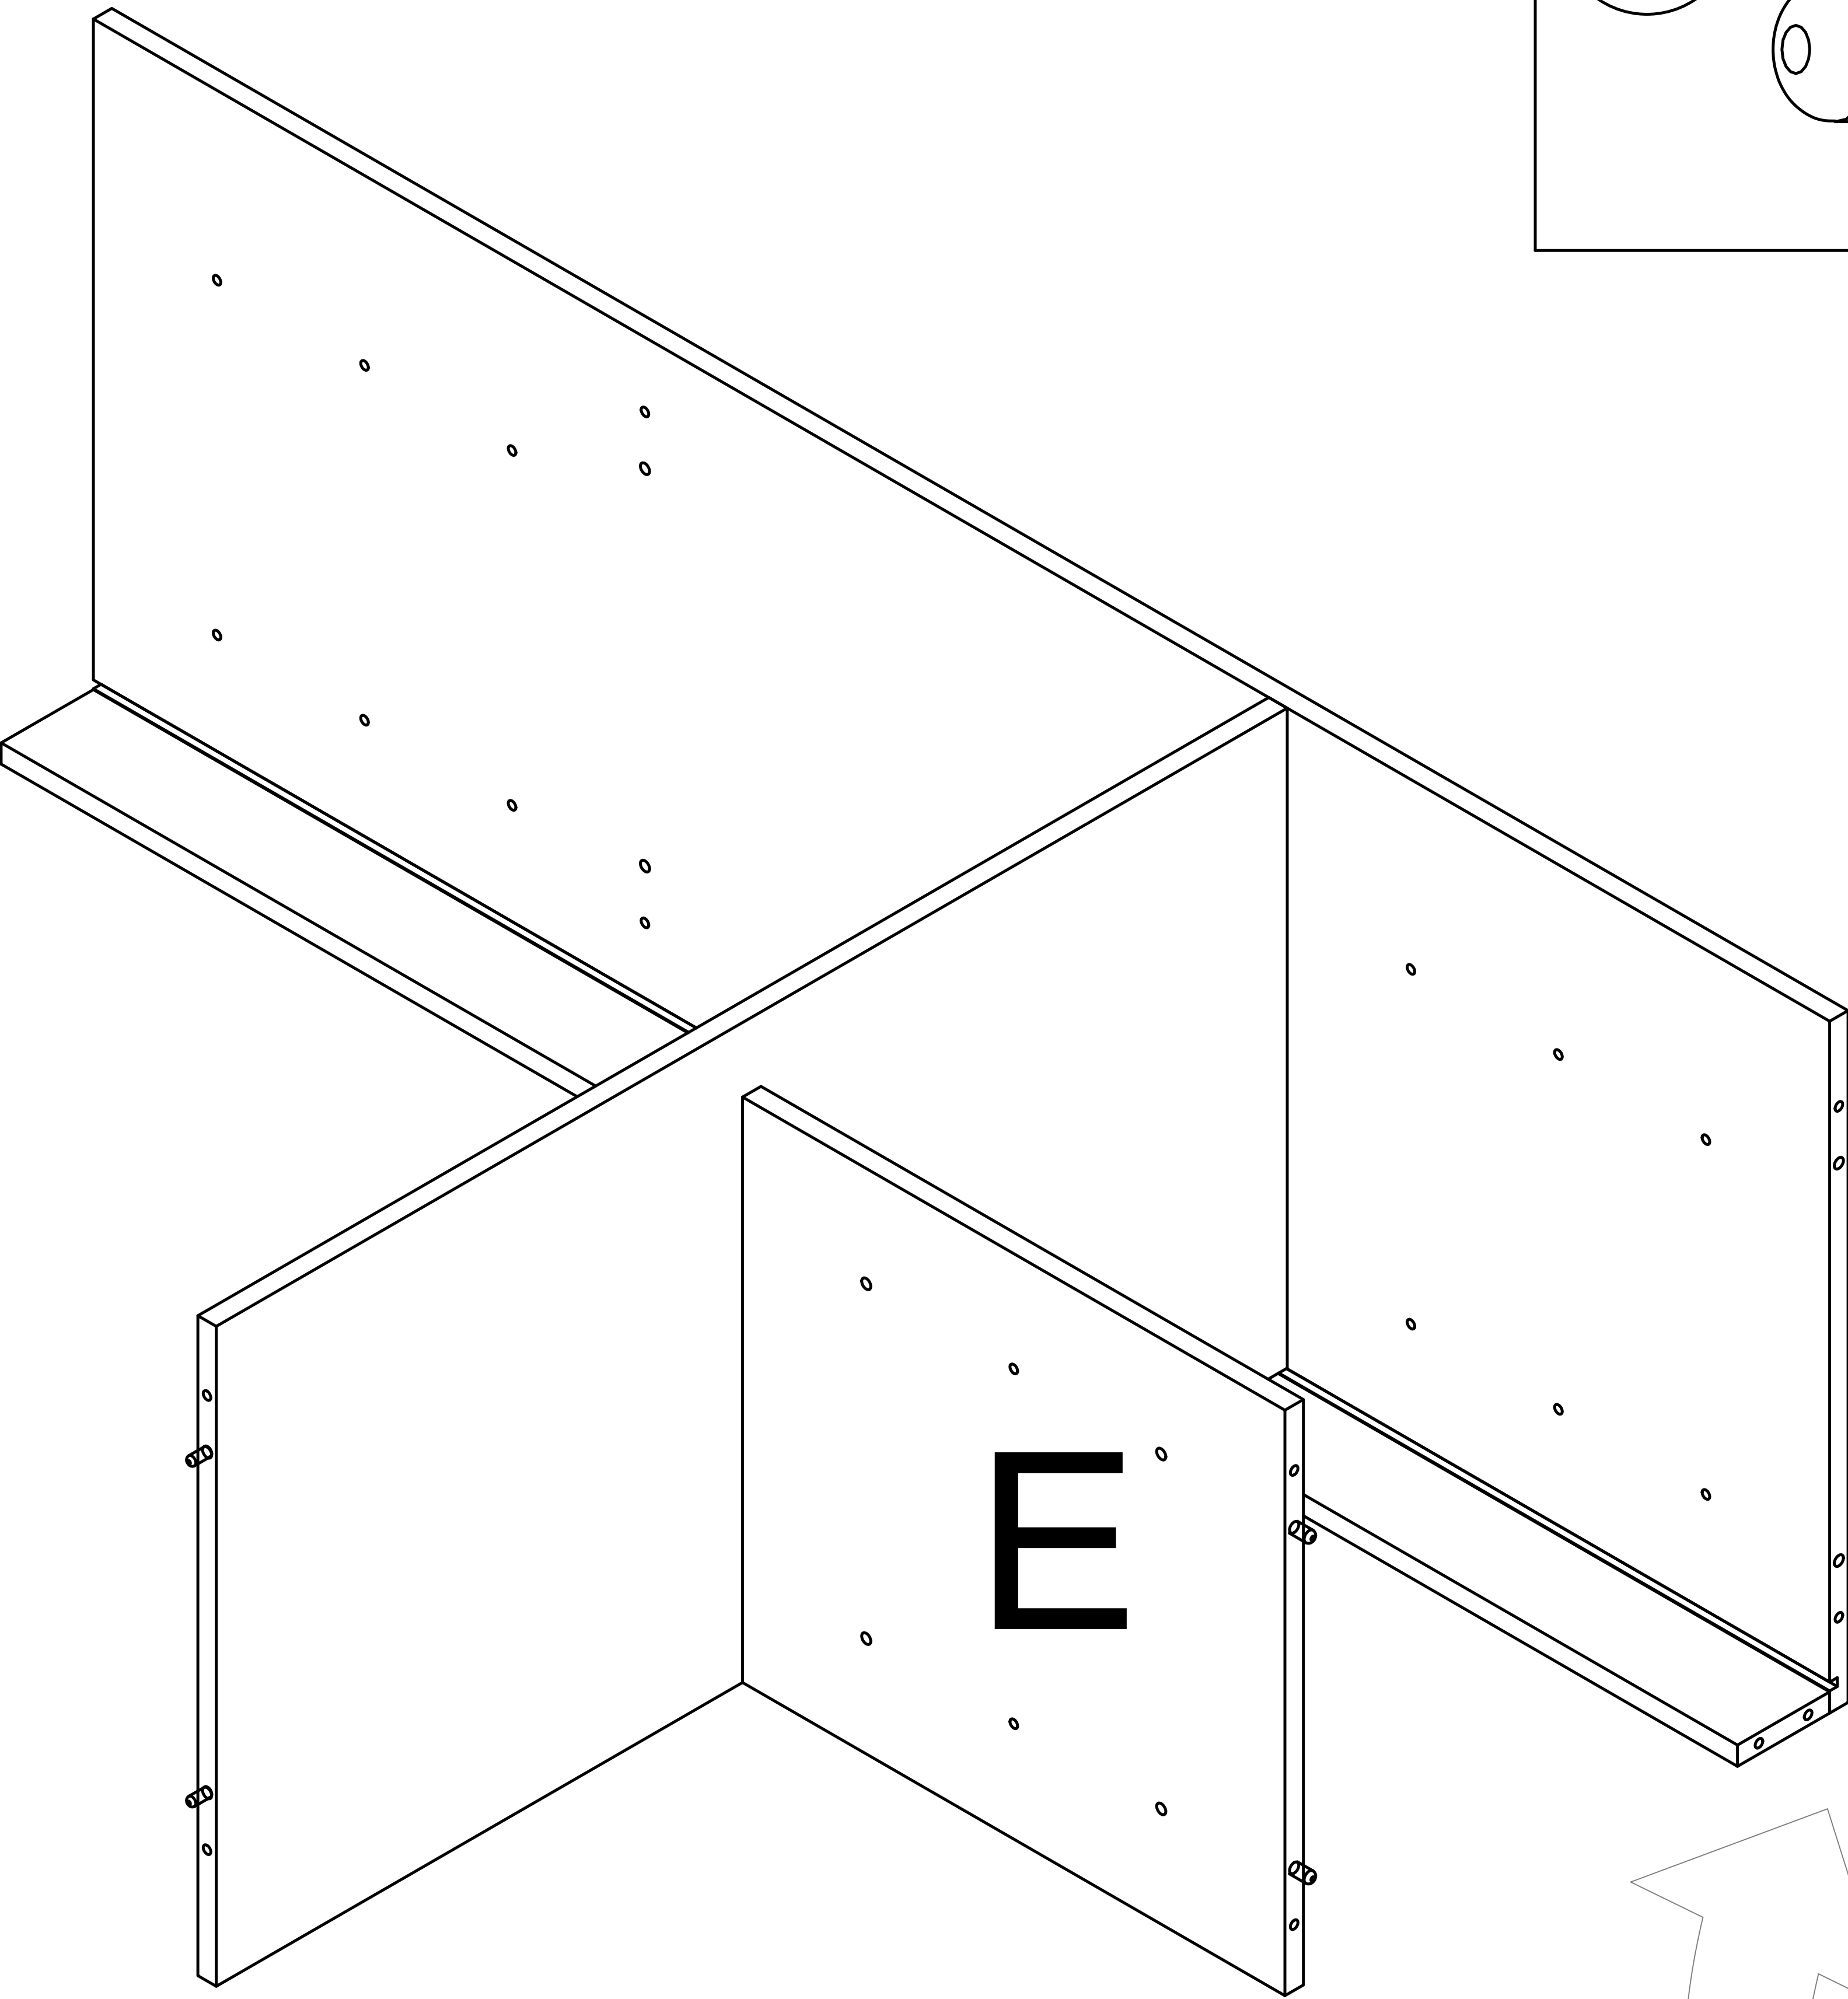

Need to flip over

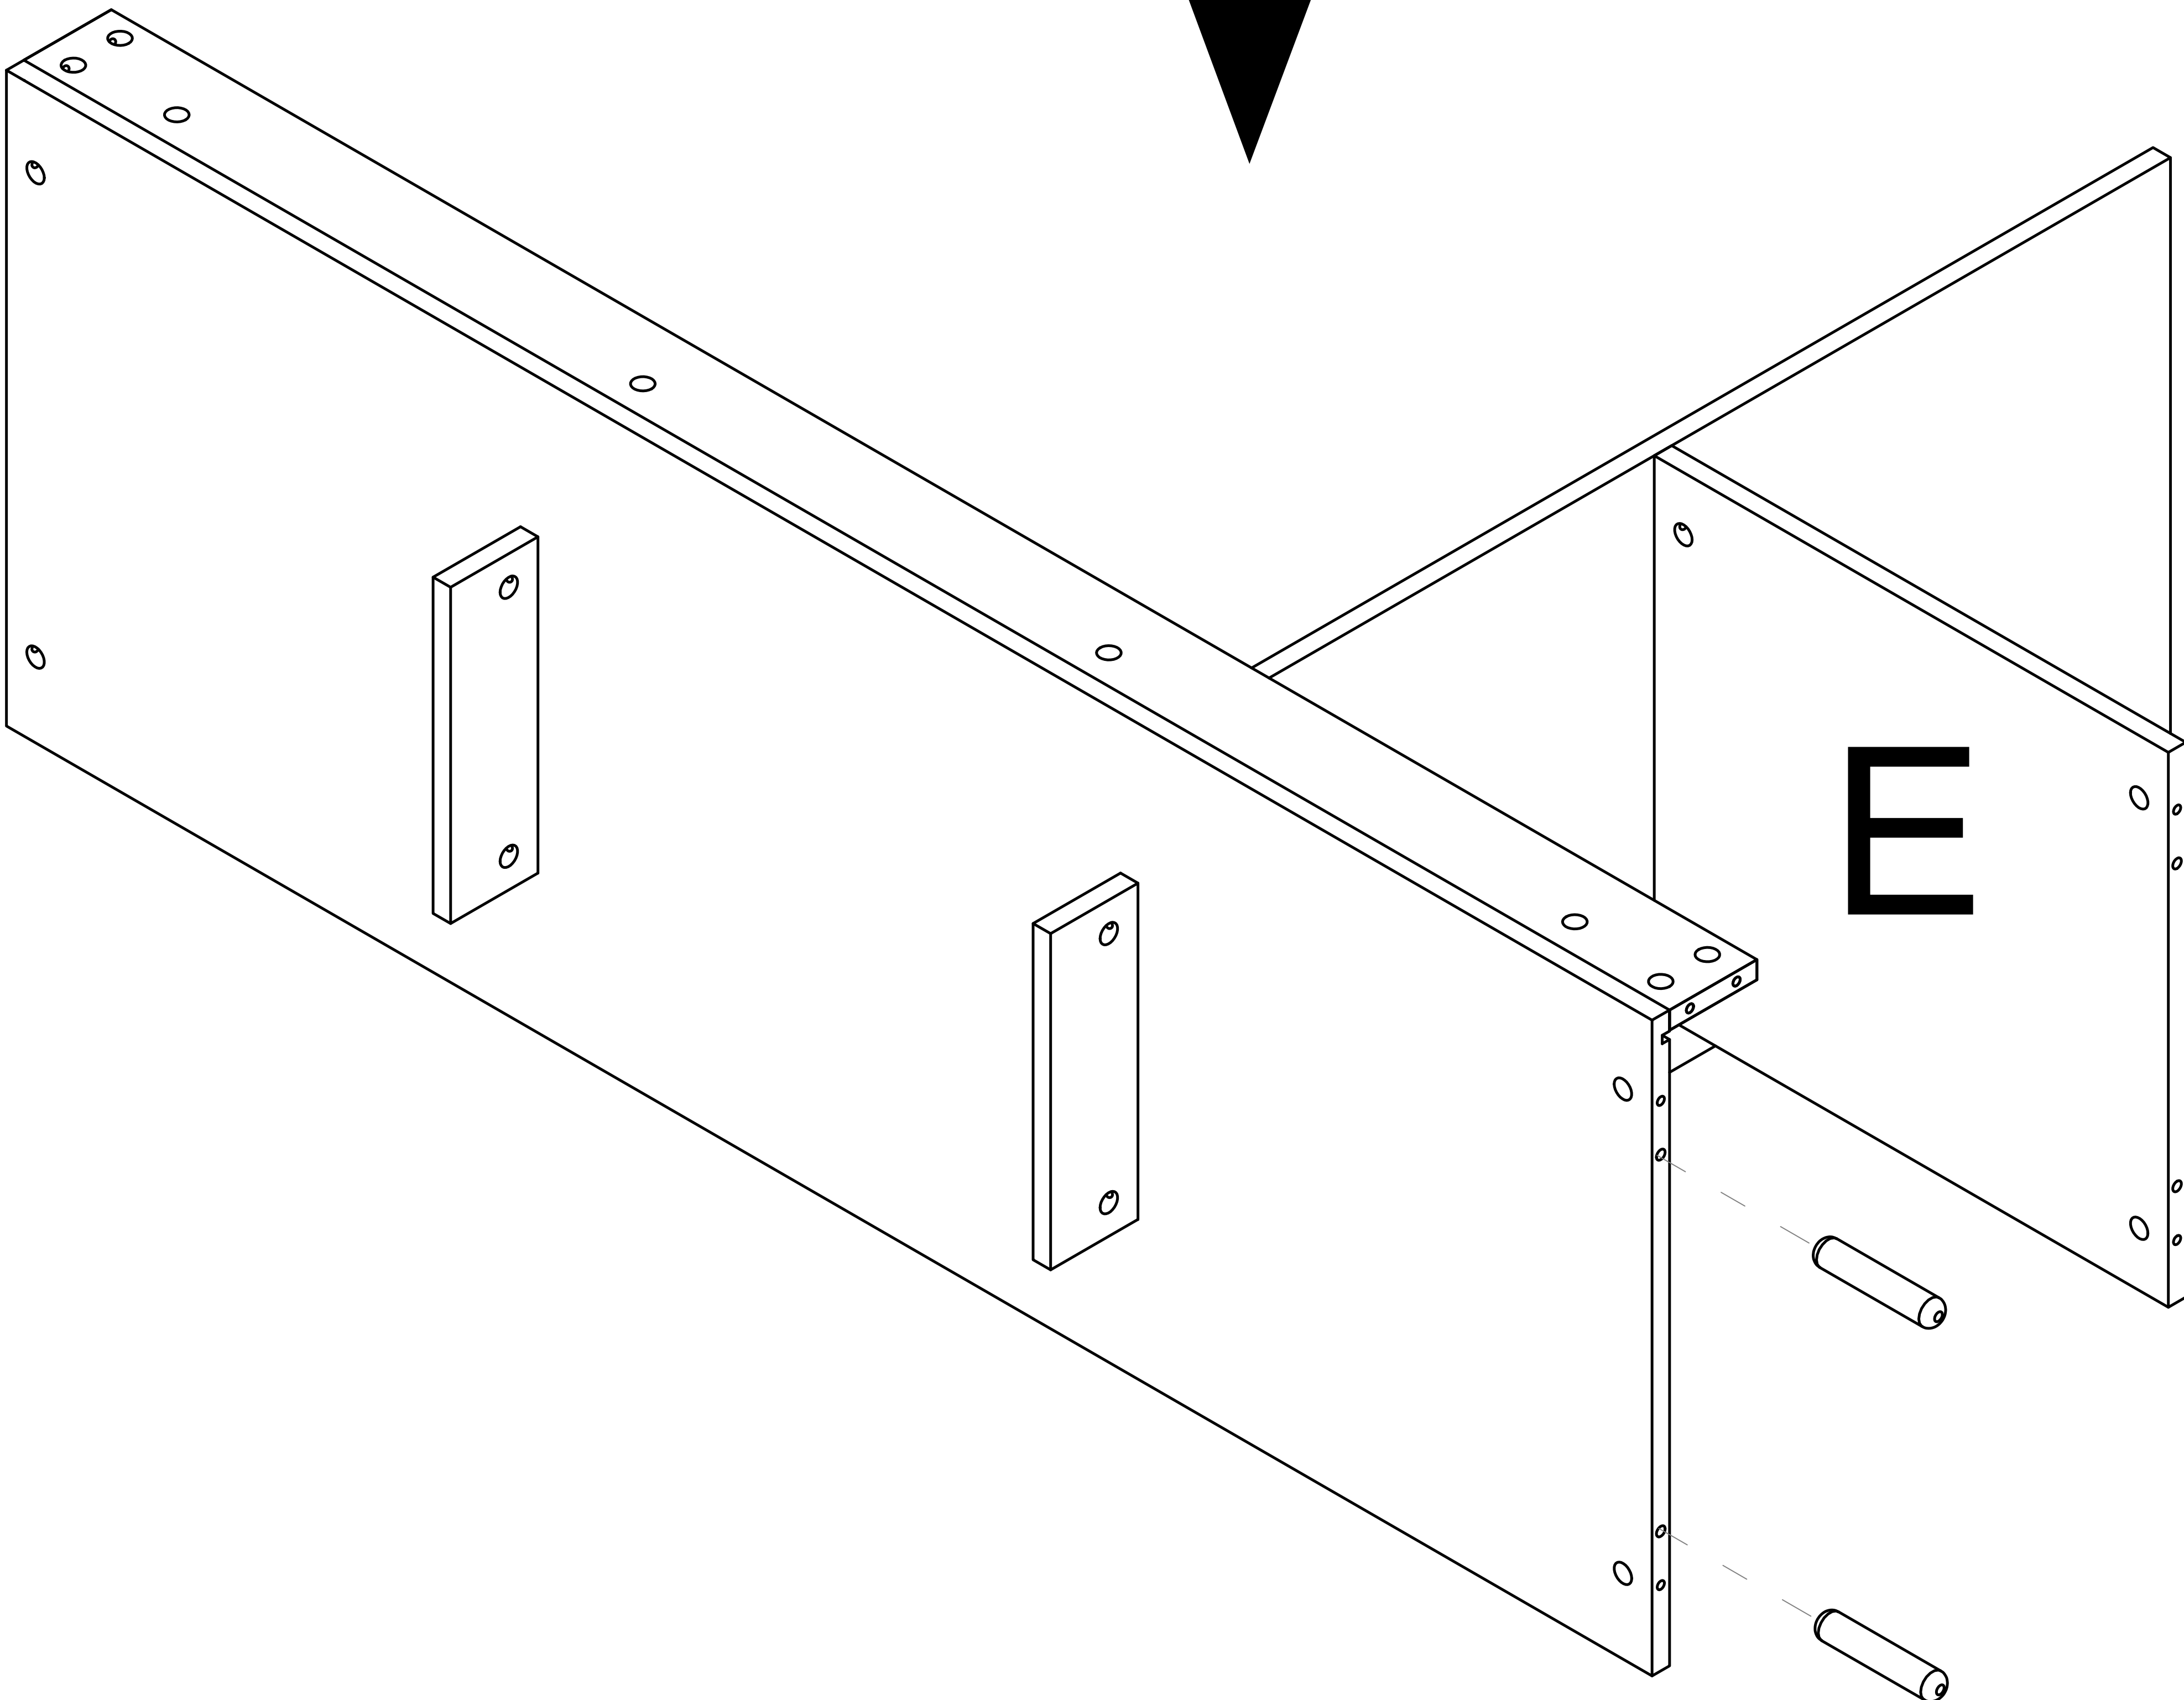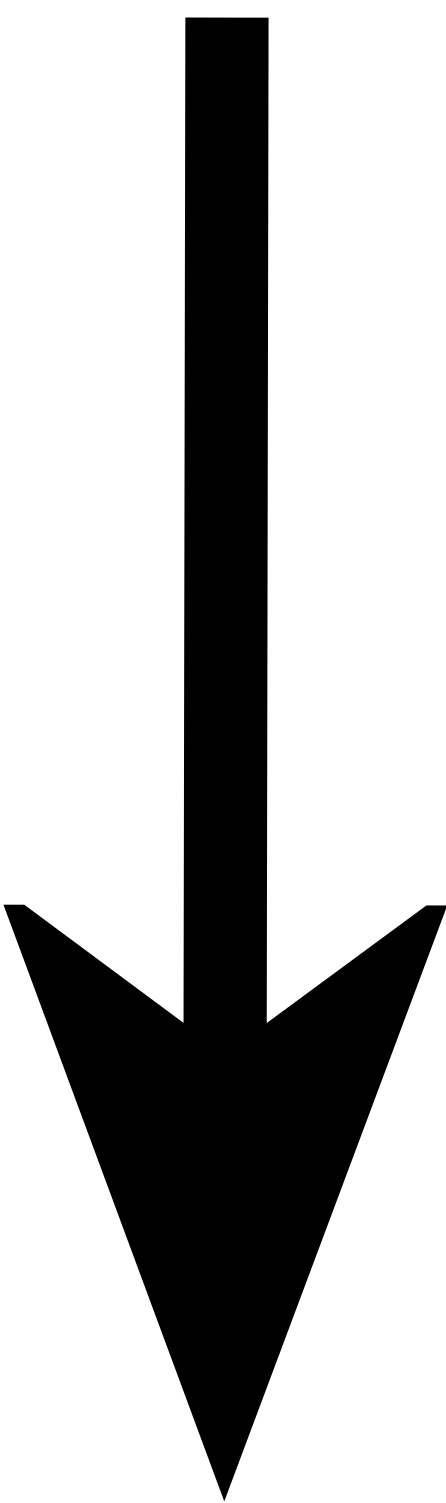


Step 13

3




x4

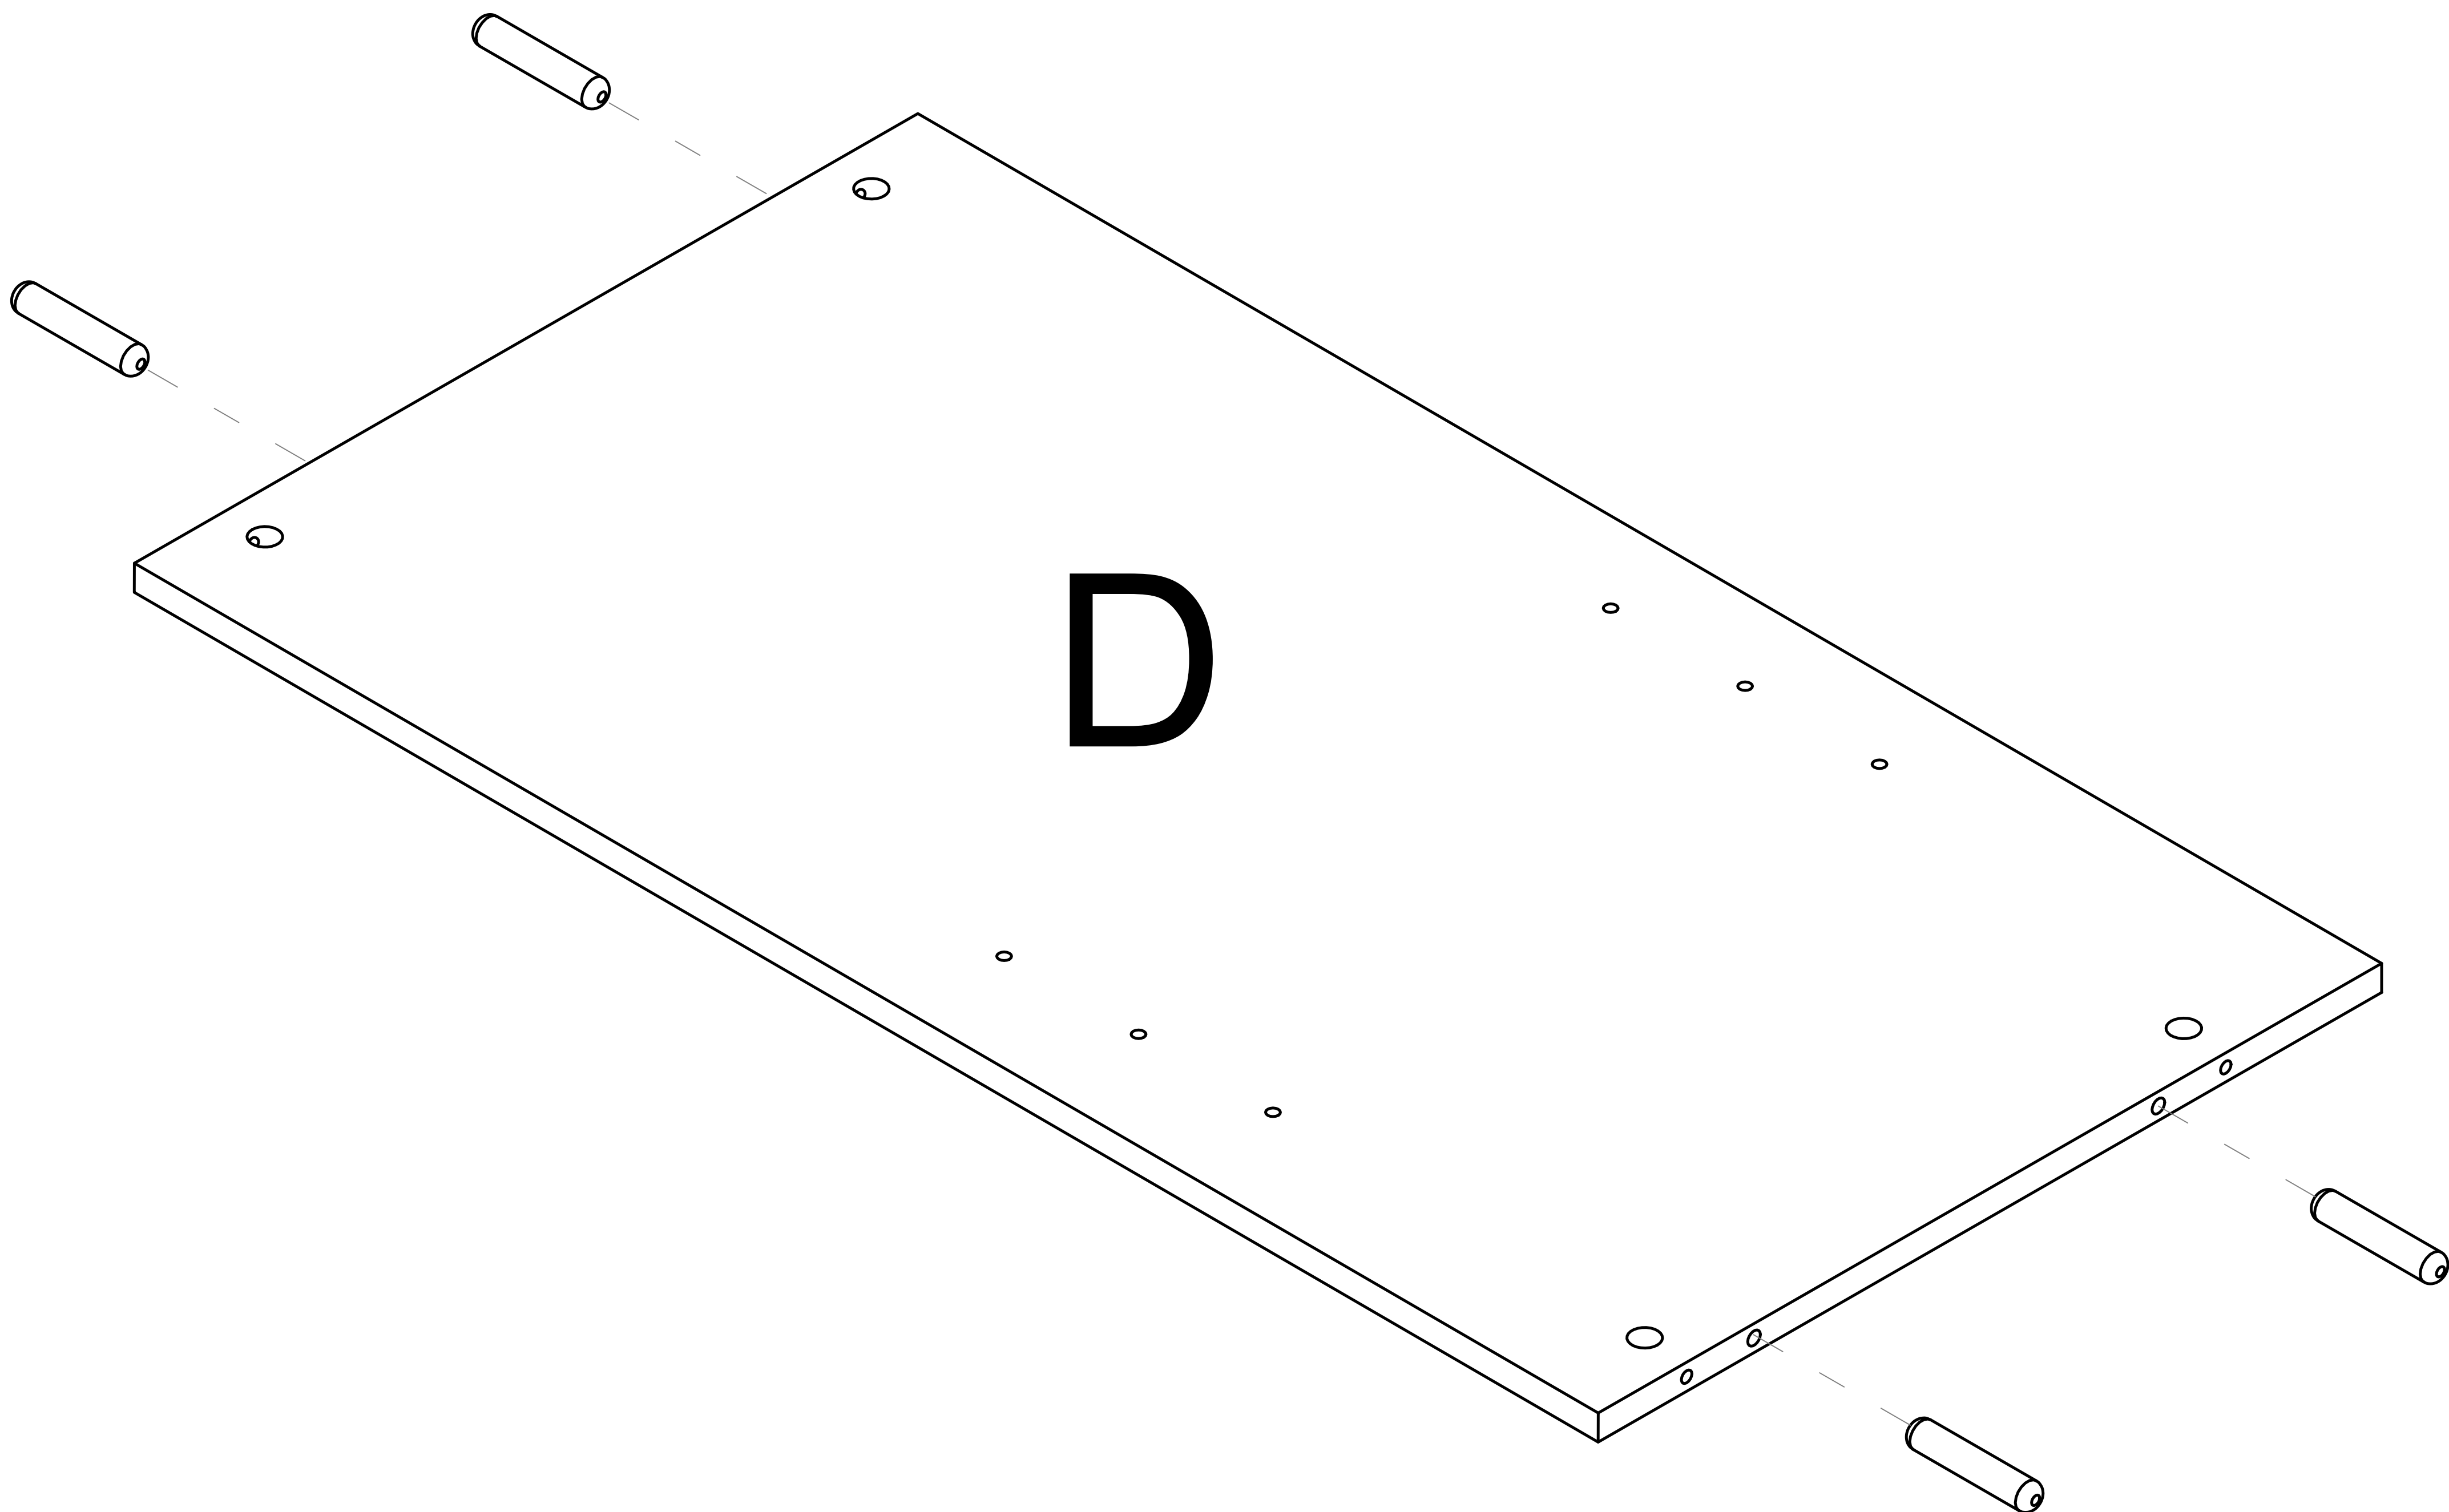


Step 14

1

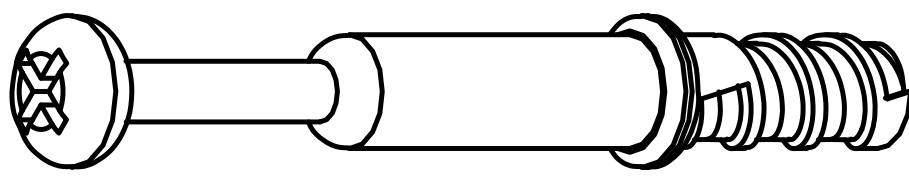


x2

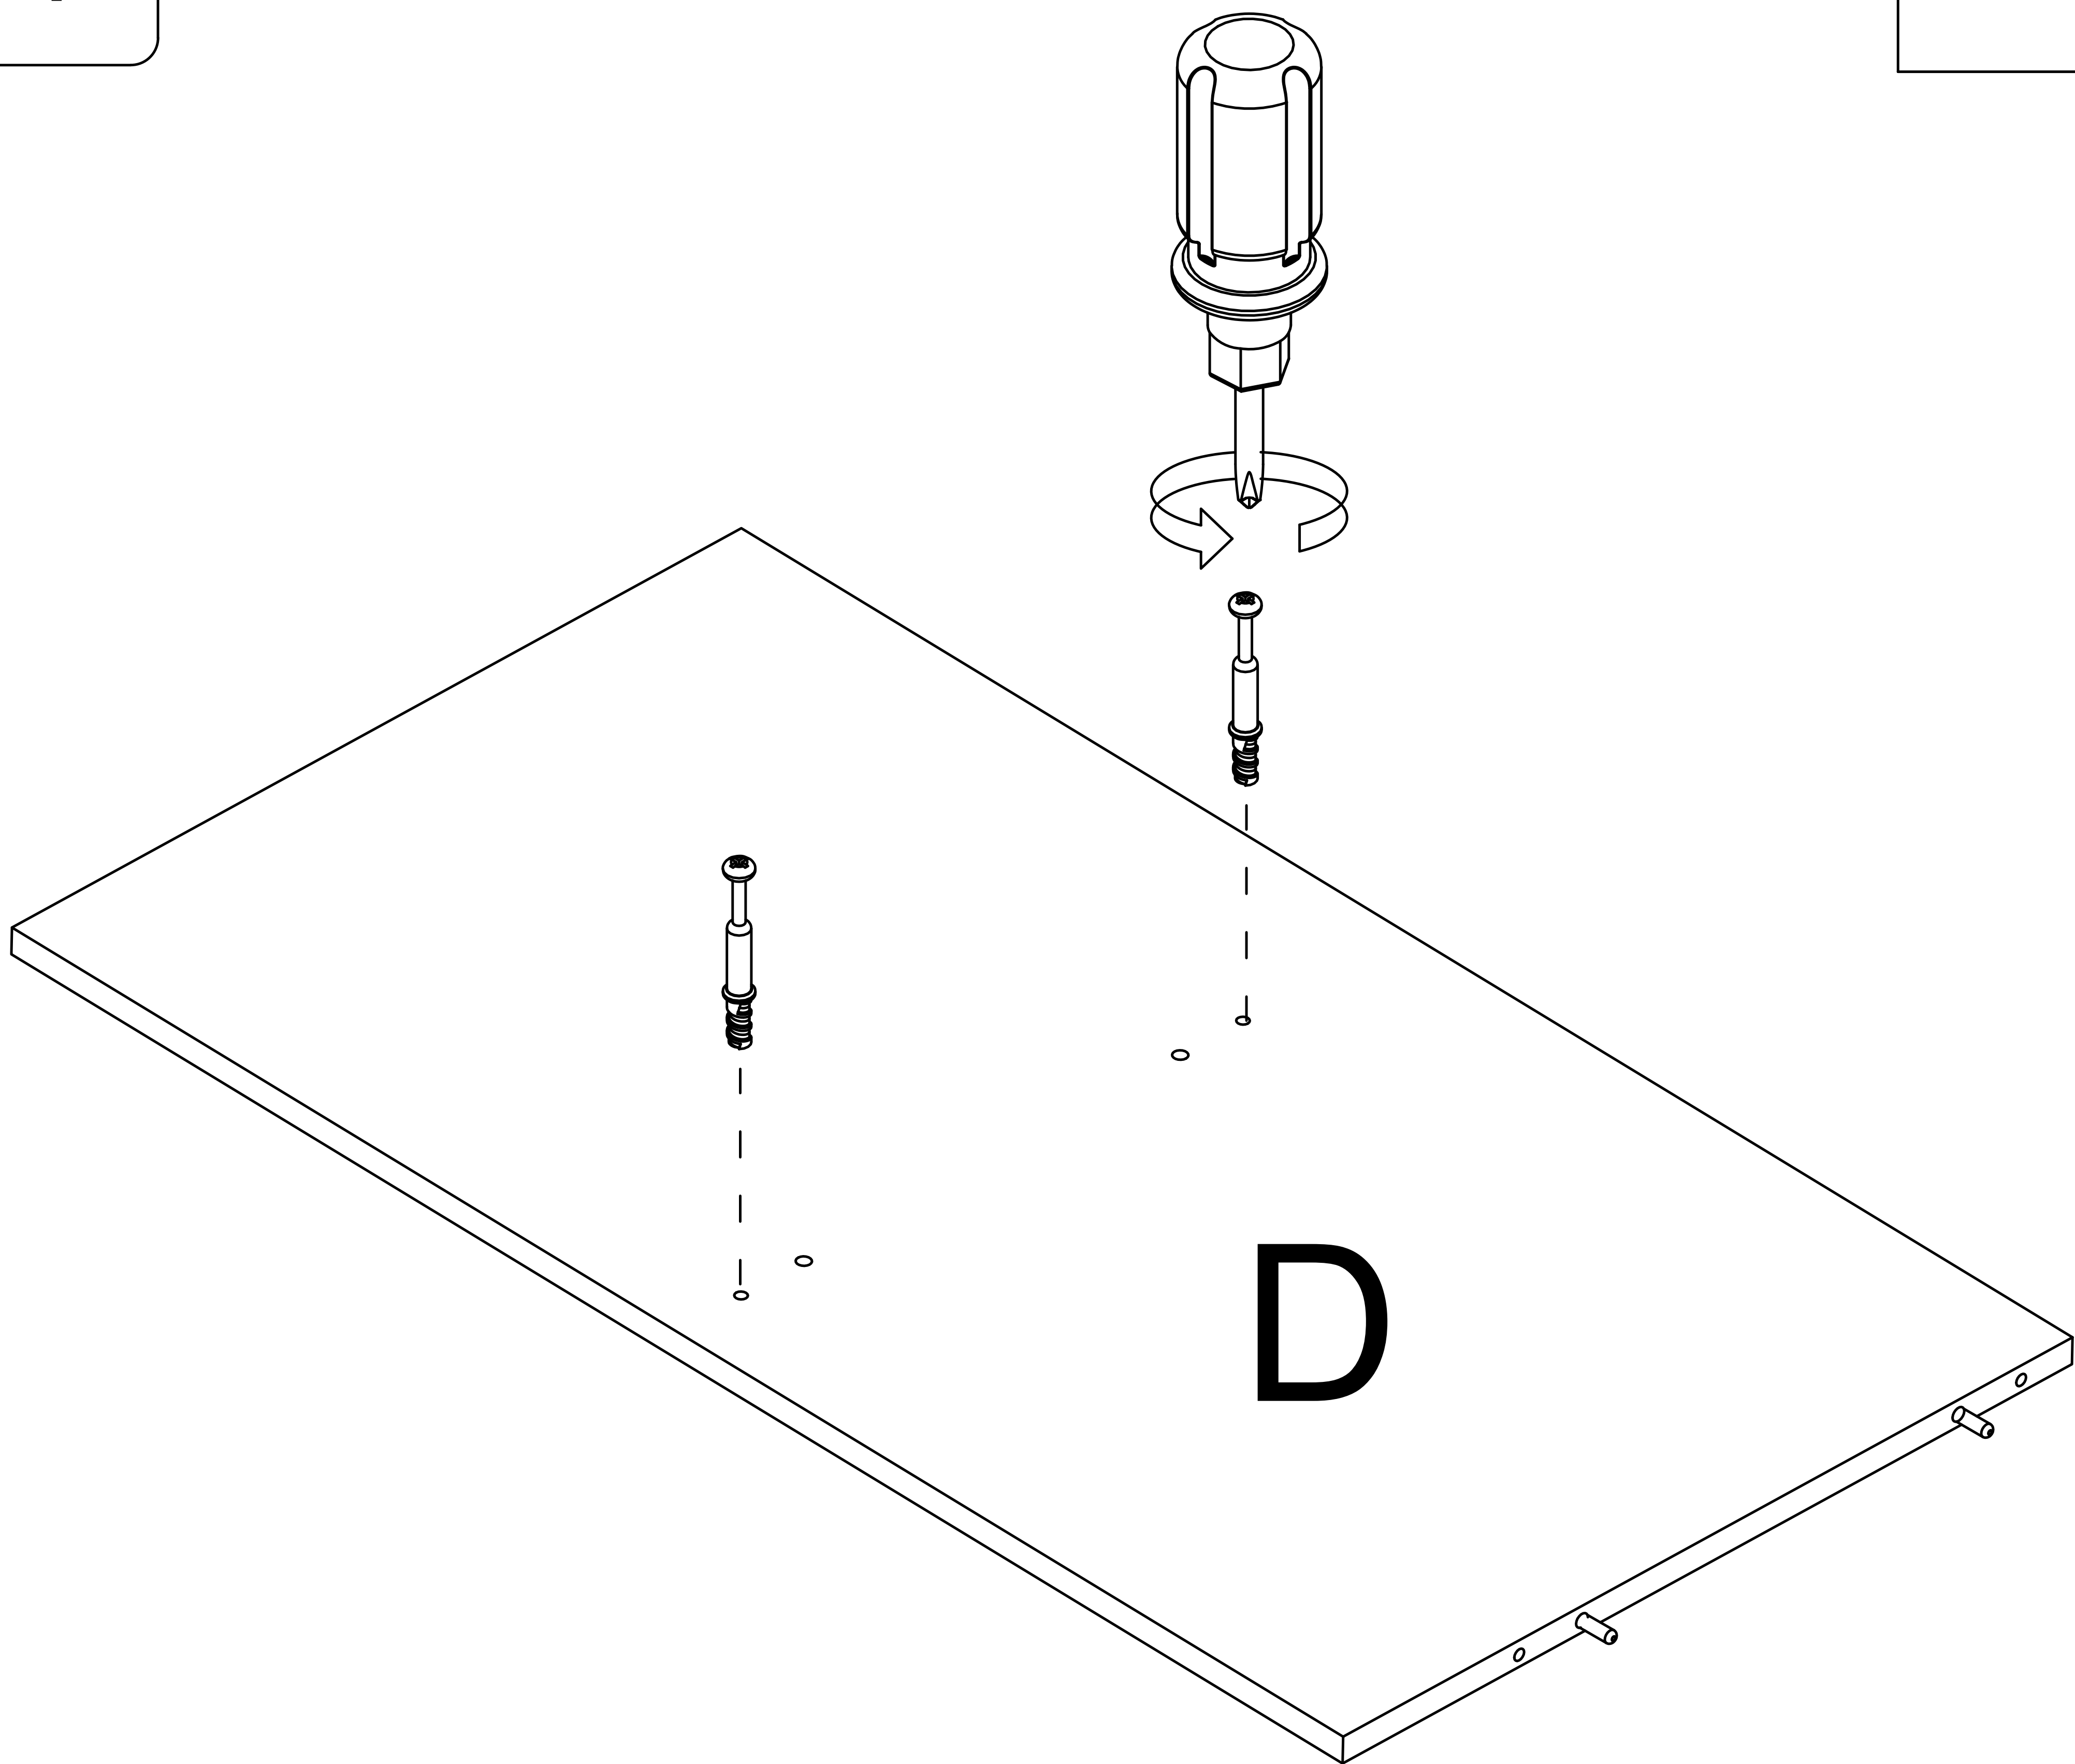


Step 15

2

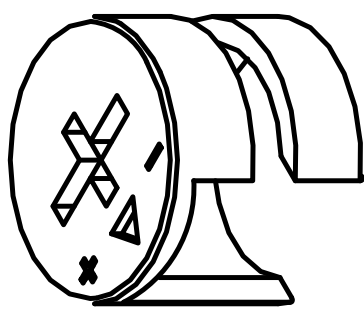


x 2

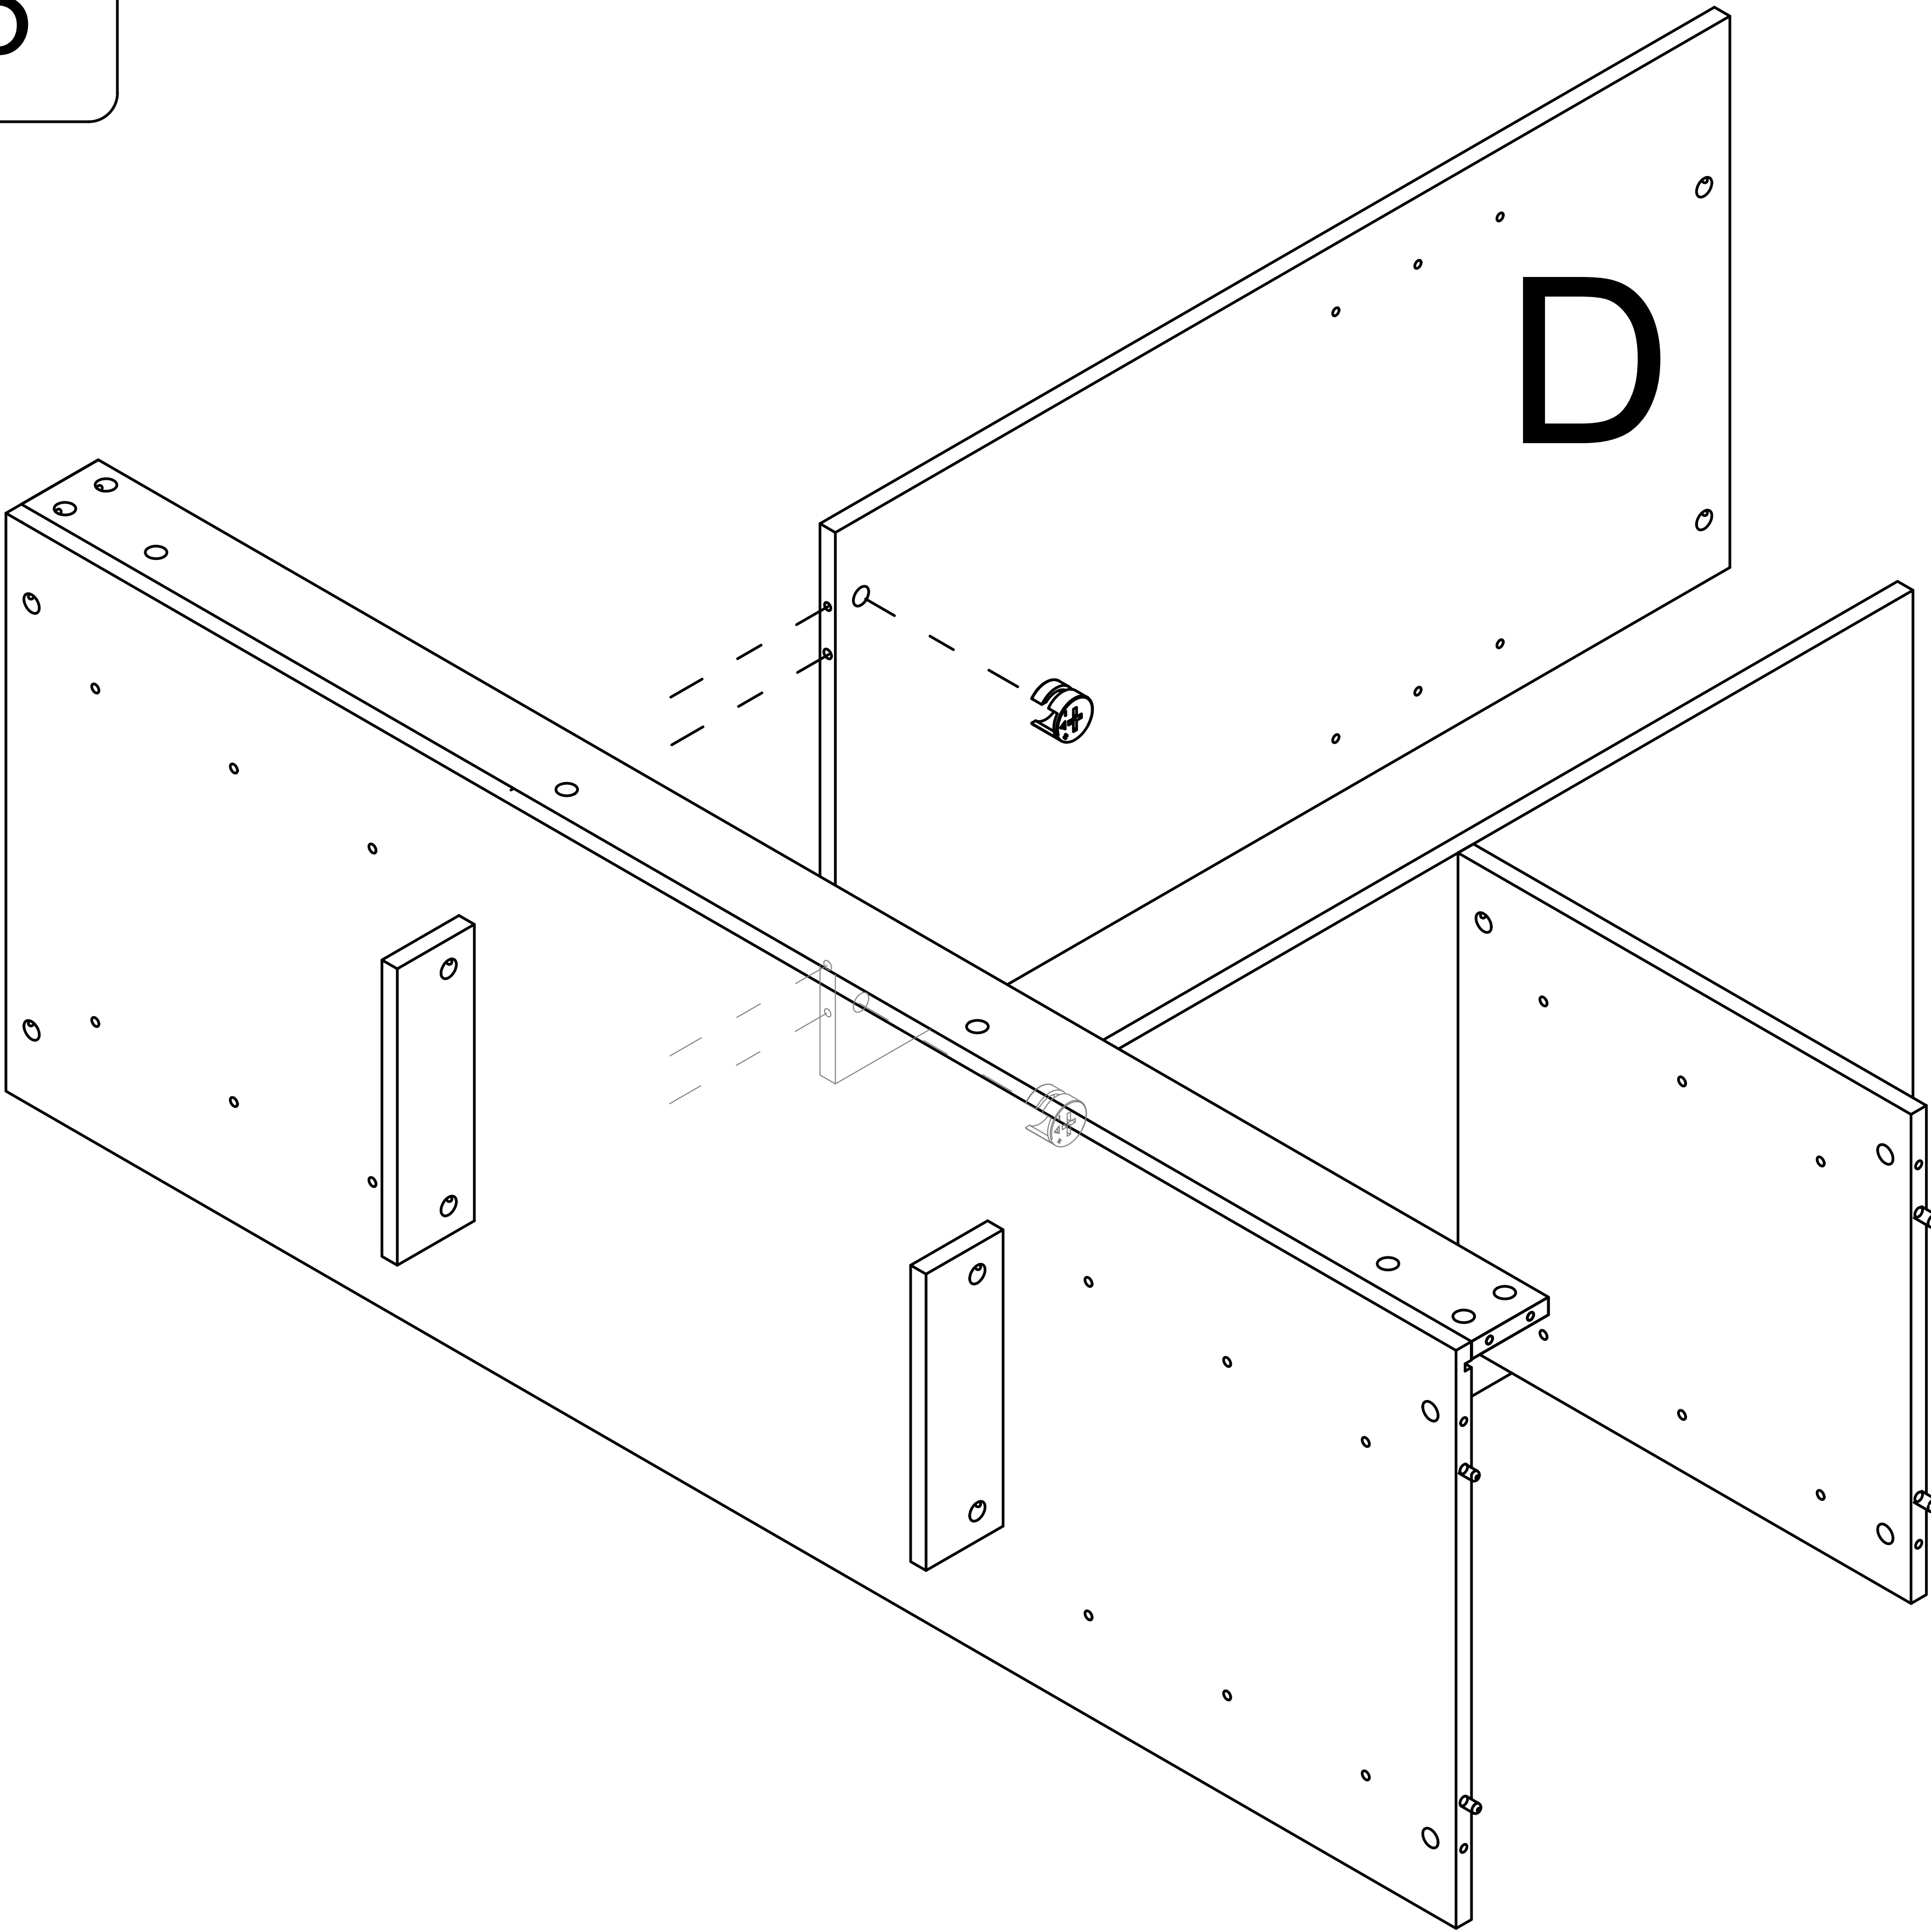


Step 16



2

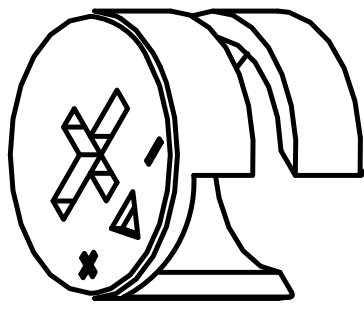



x 2

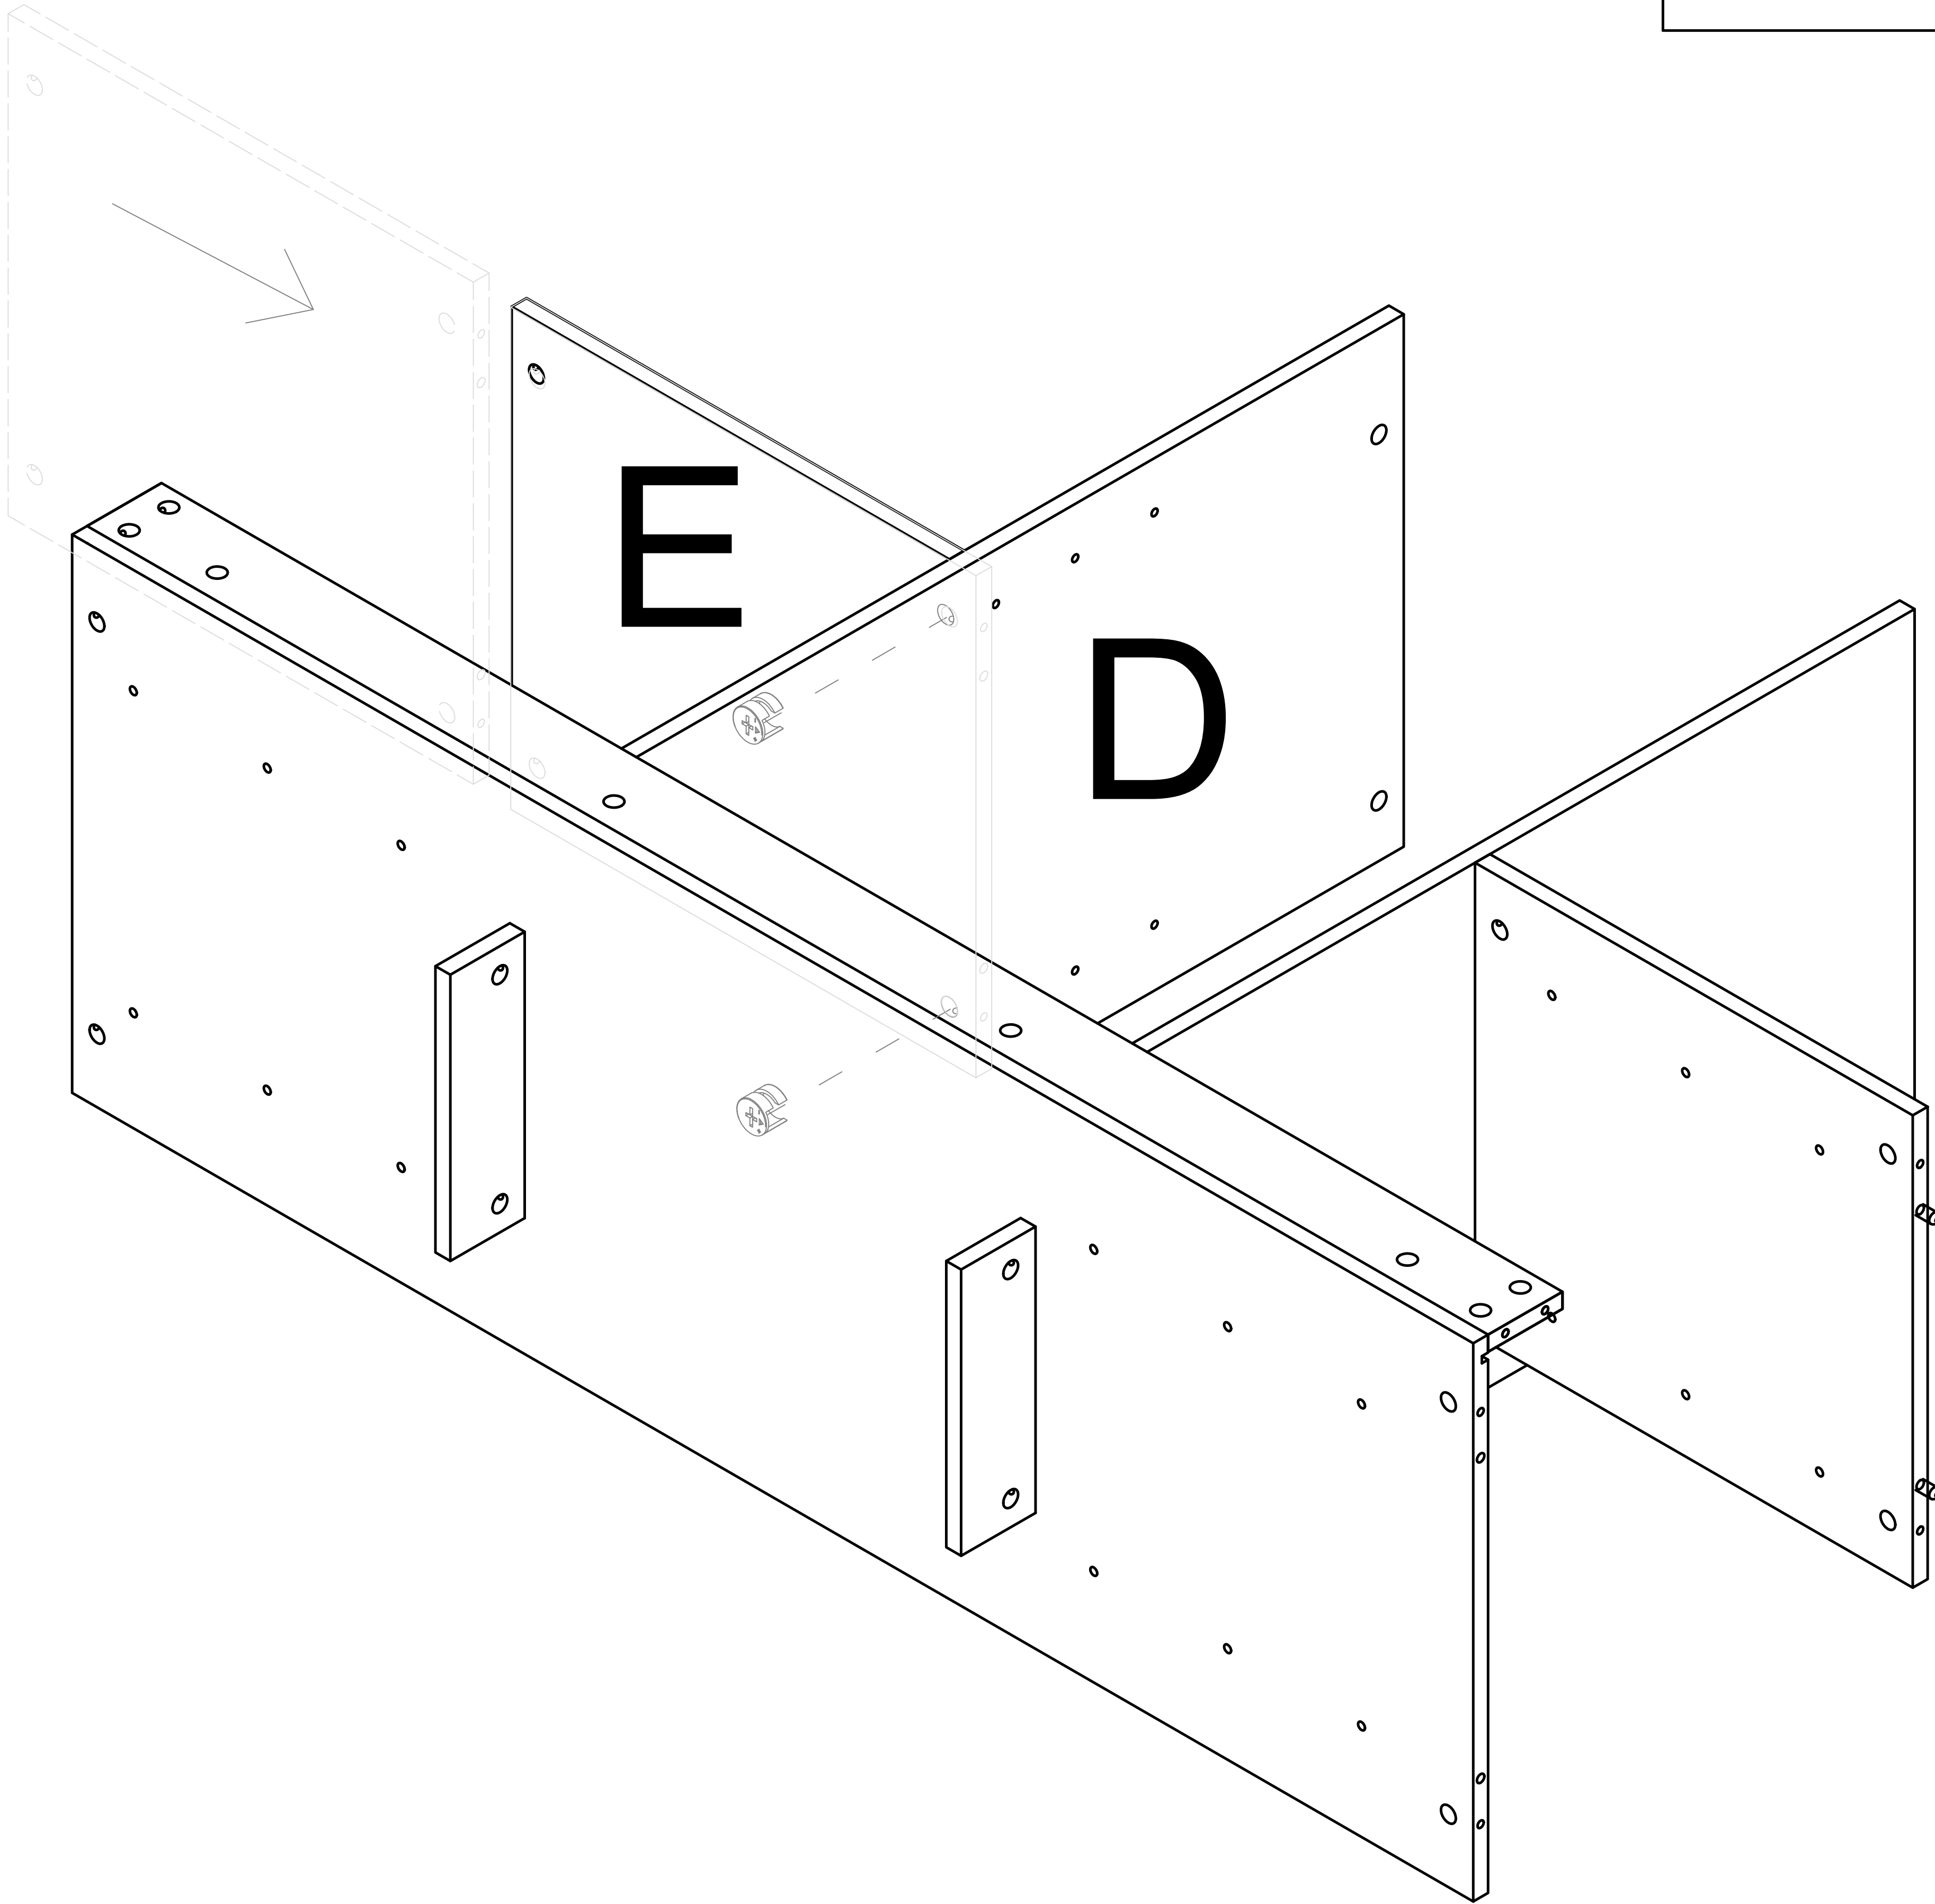

Step 17

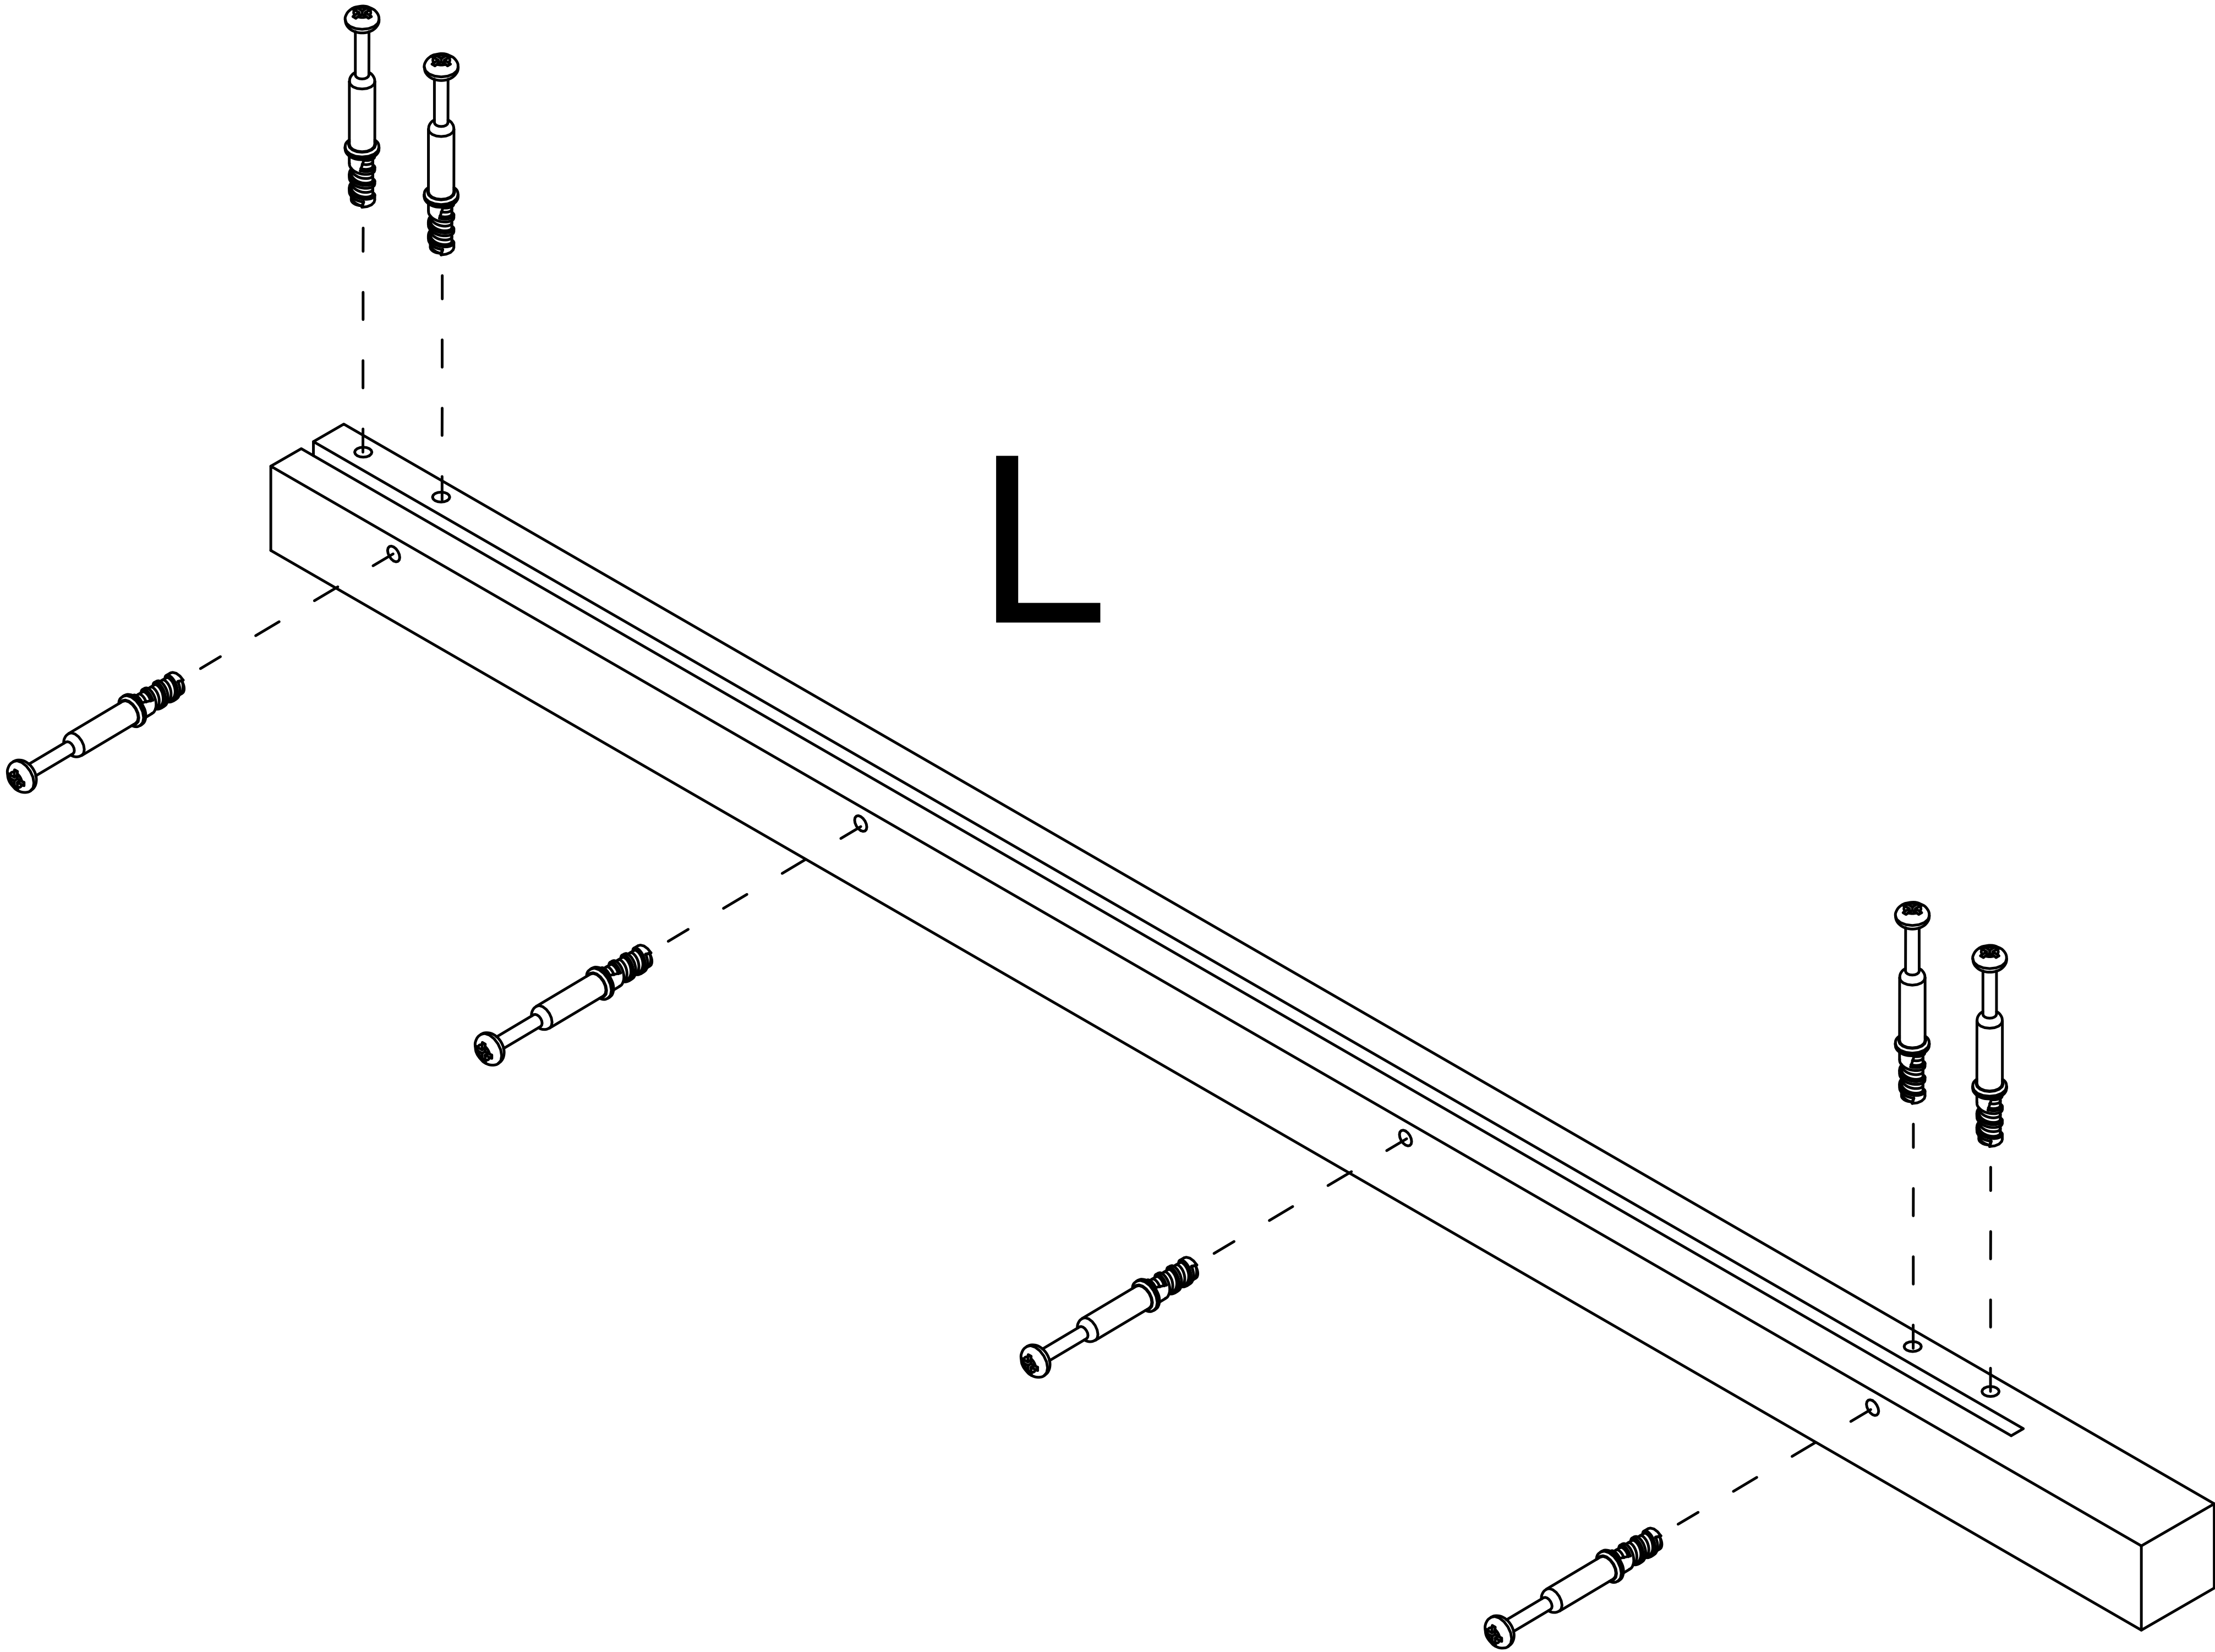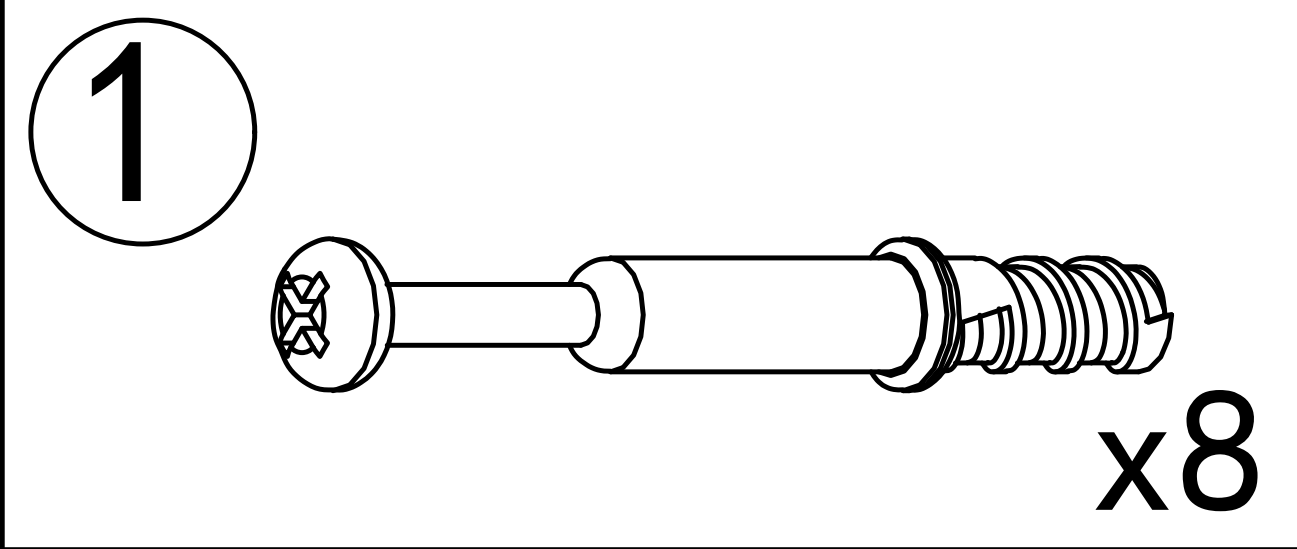


Step 18

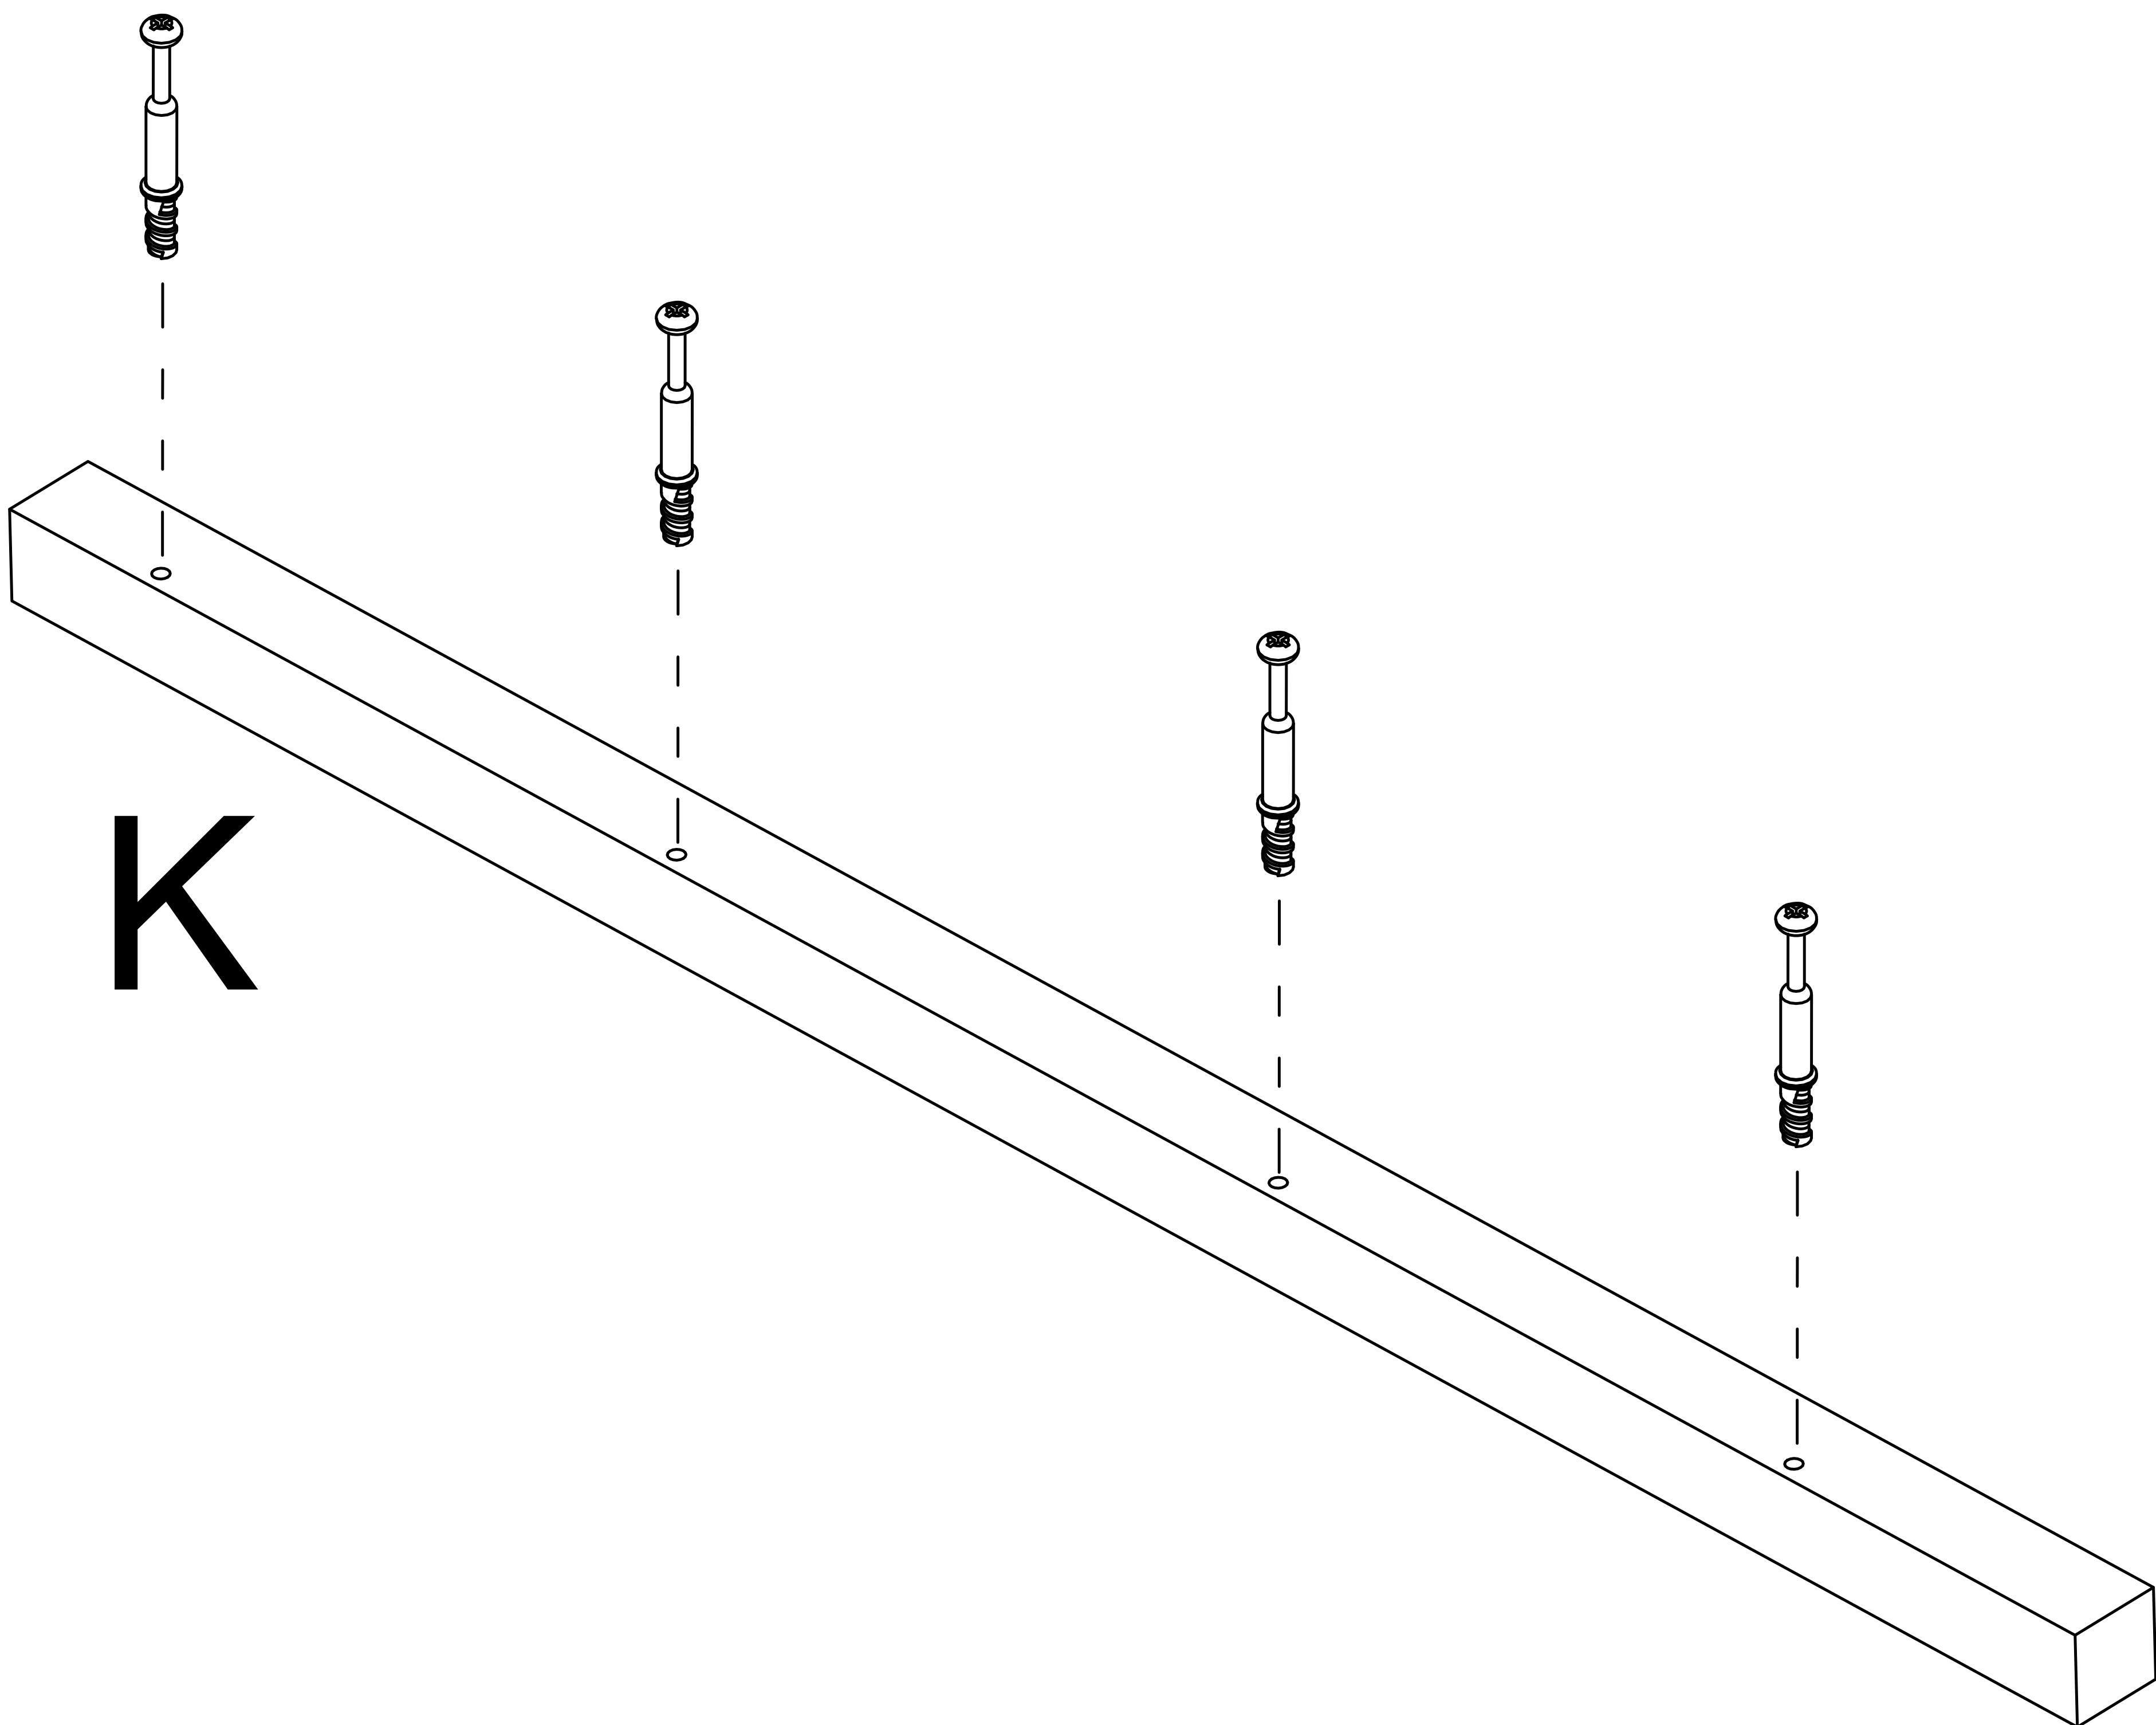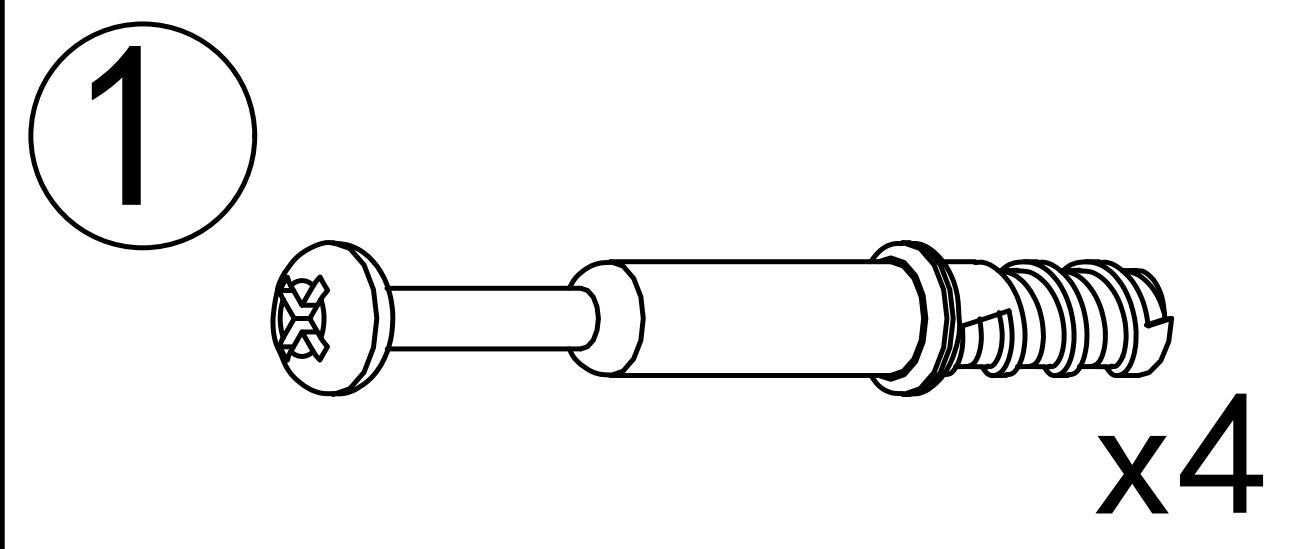


Step 19

2

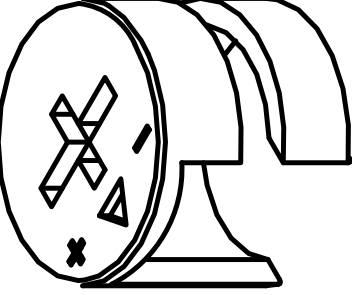


x 8

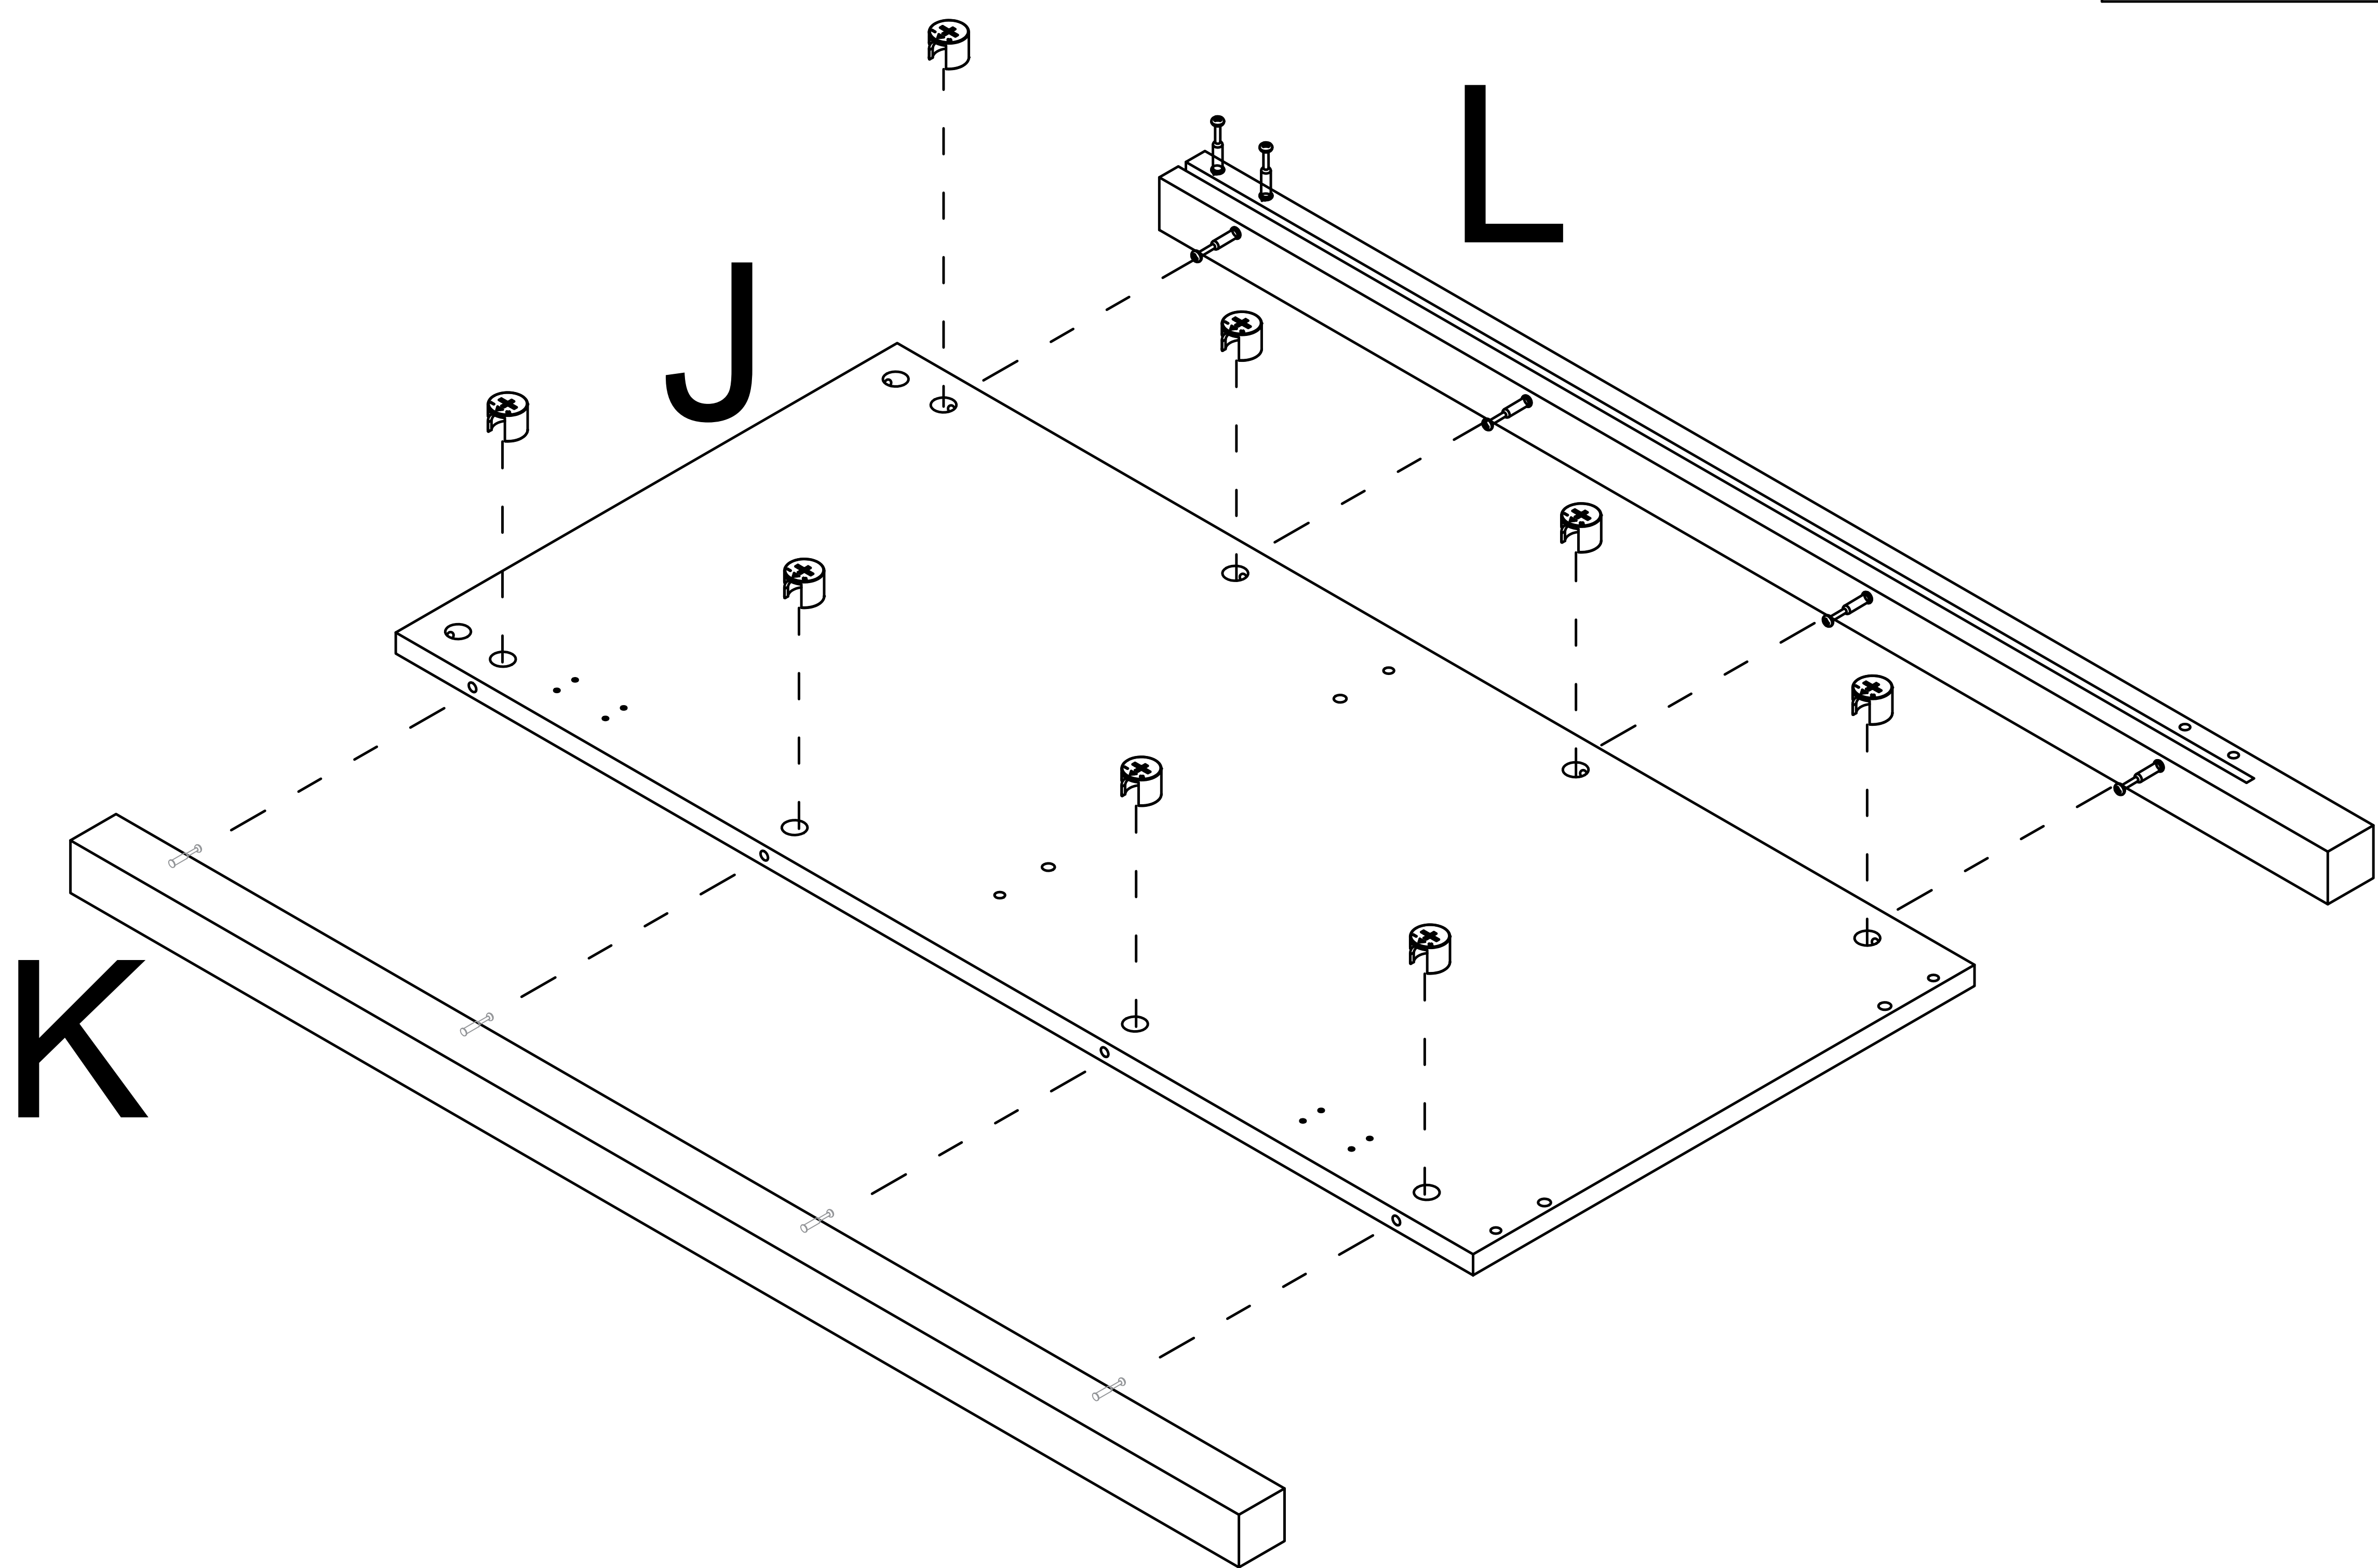


Step 20

1

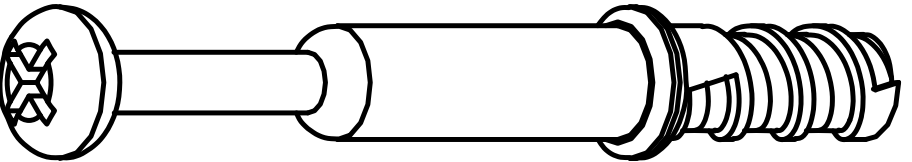


x4

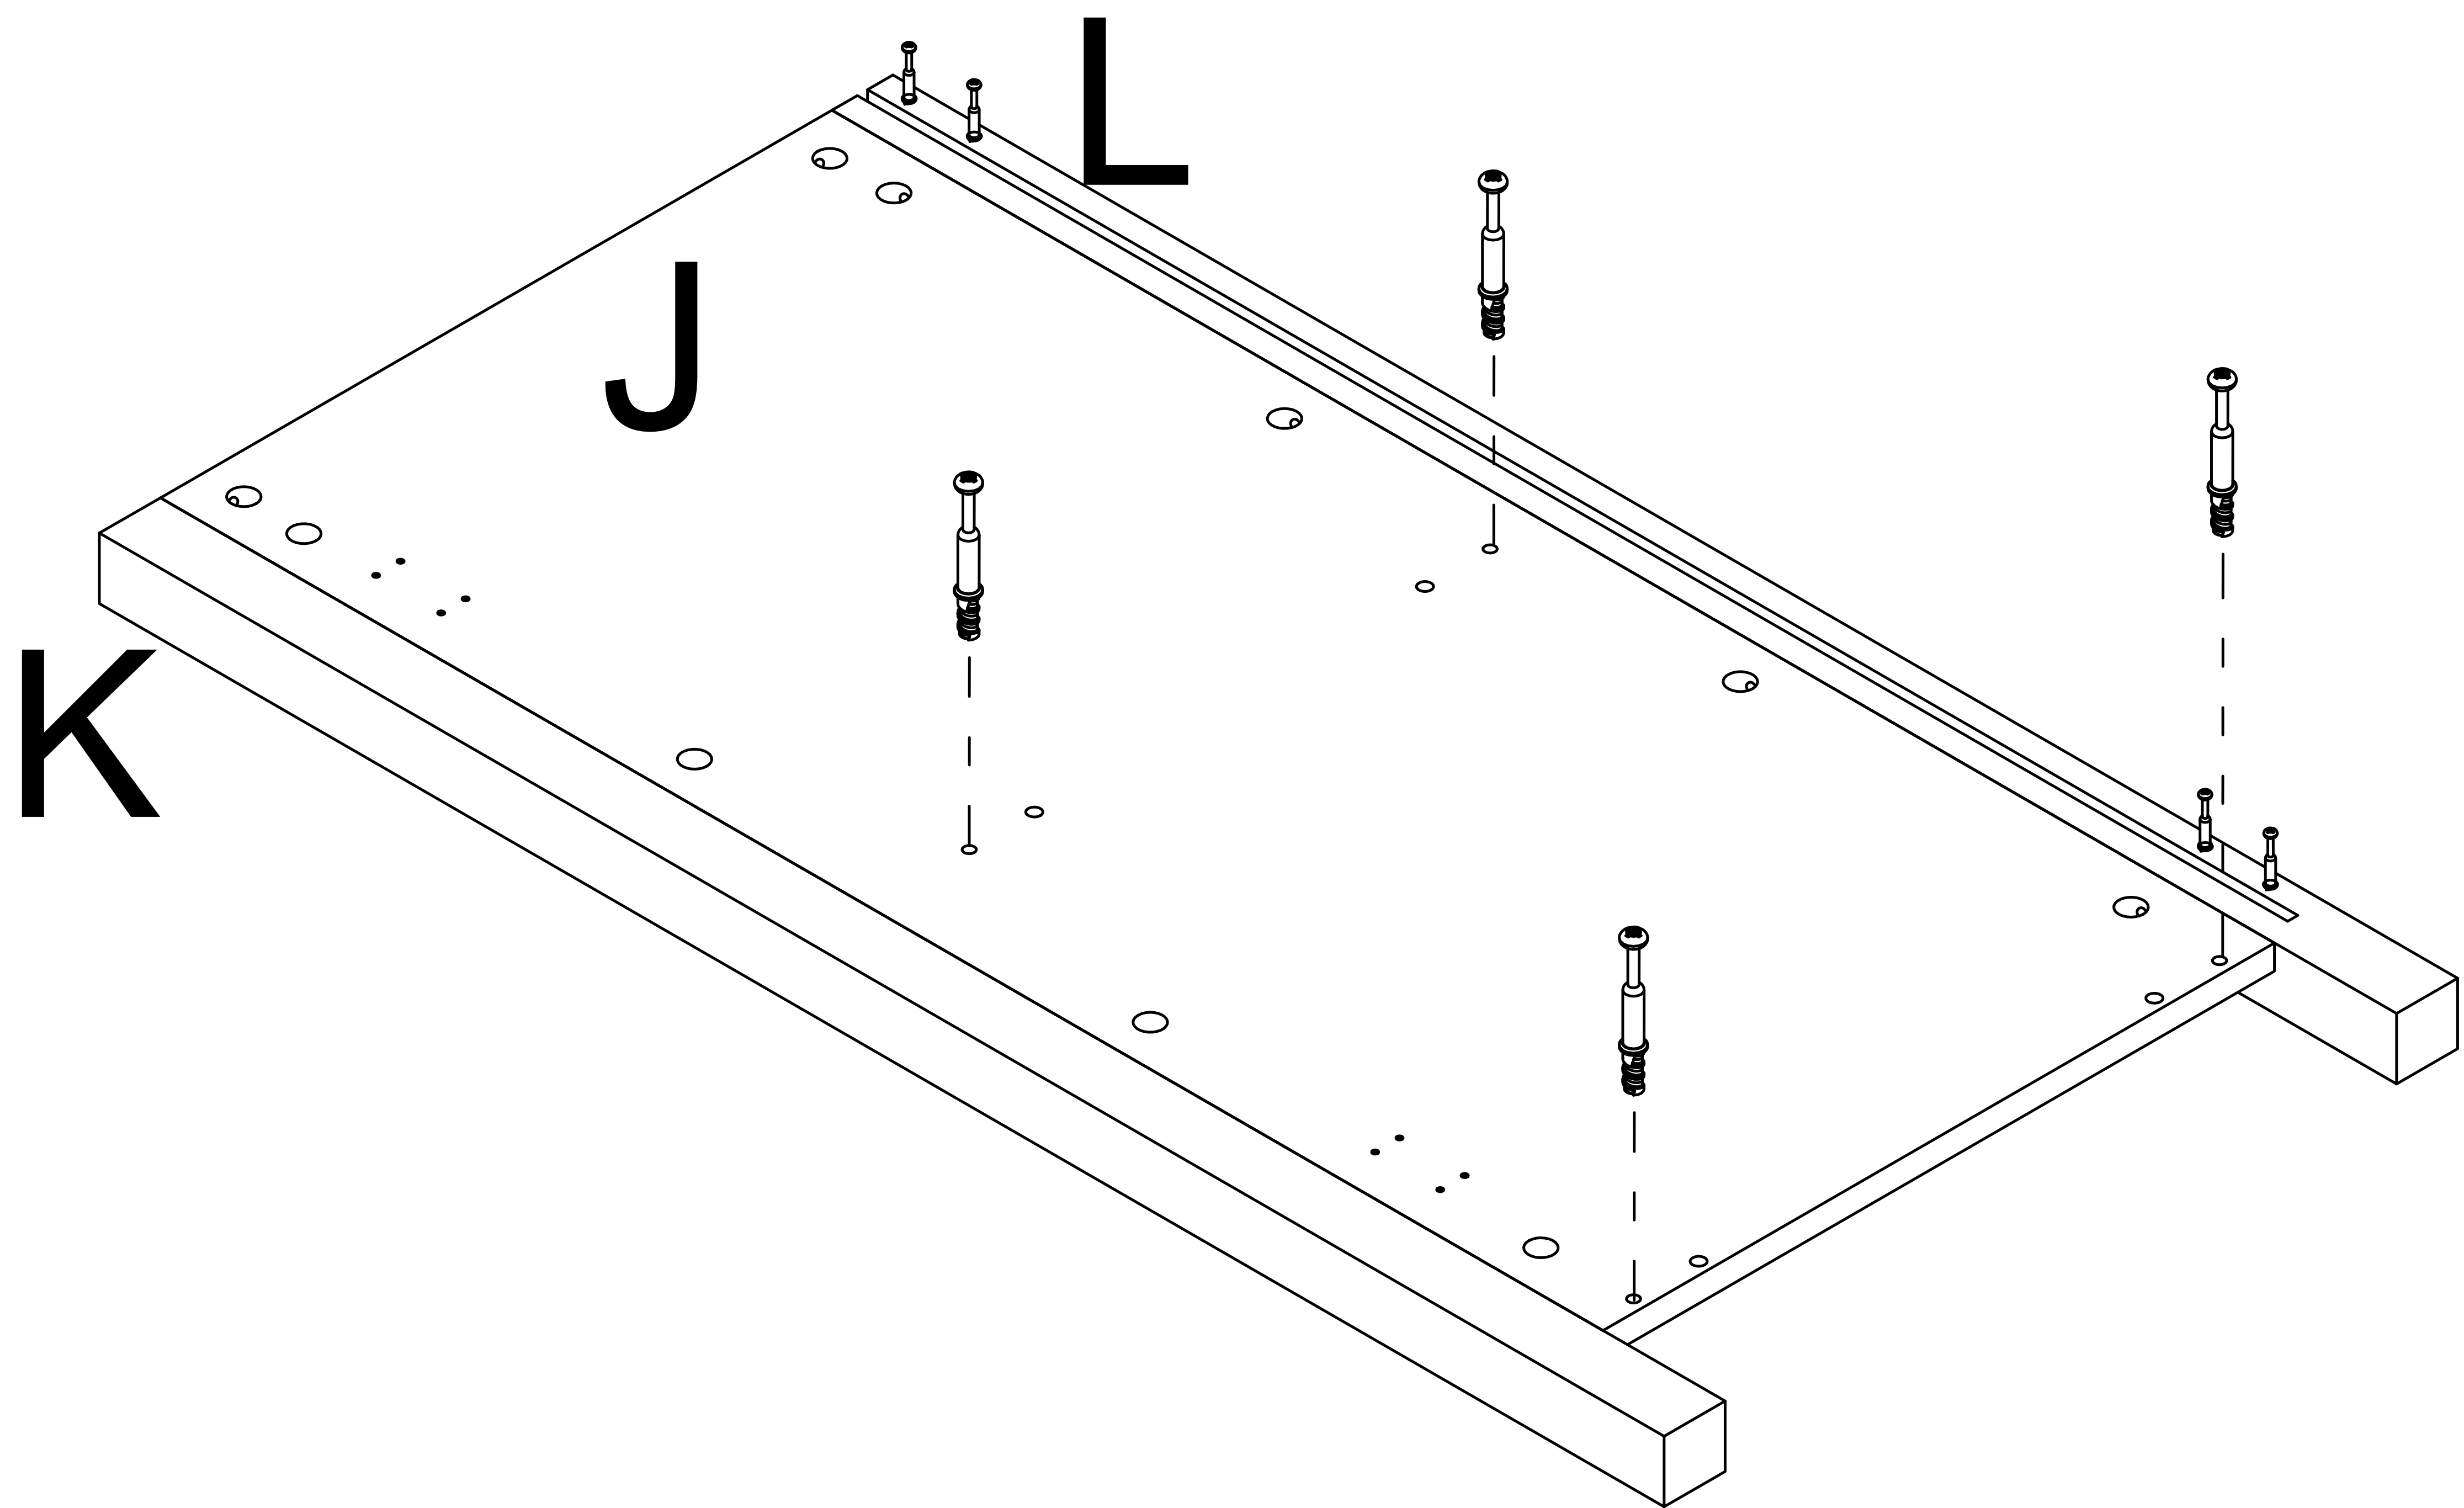


Step 21

2

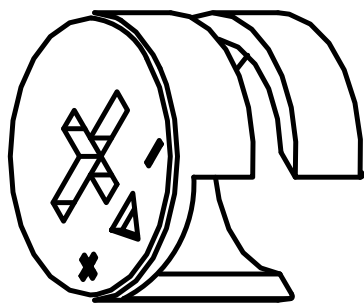


x 6

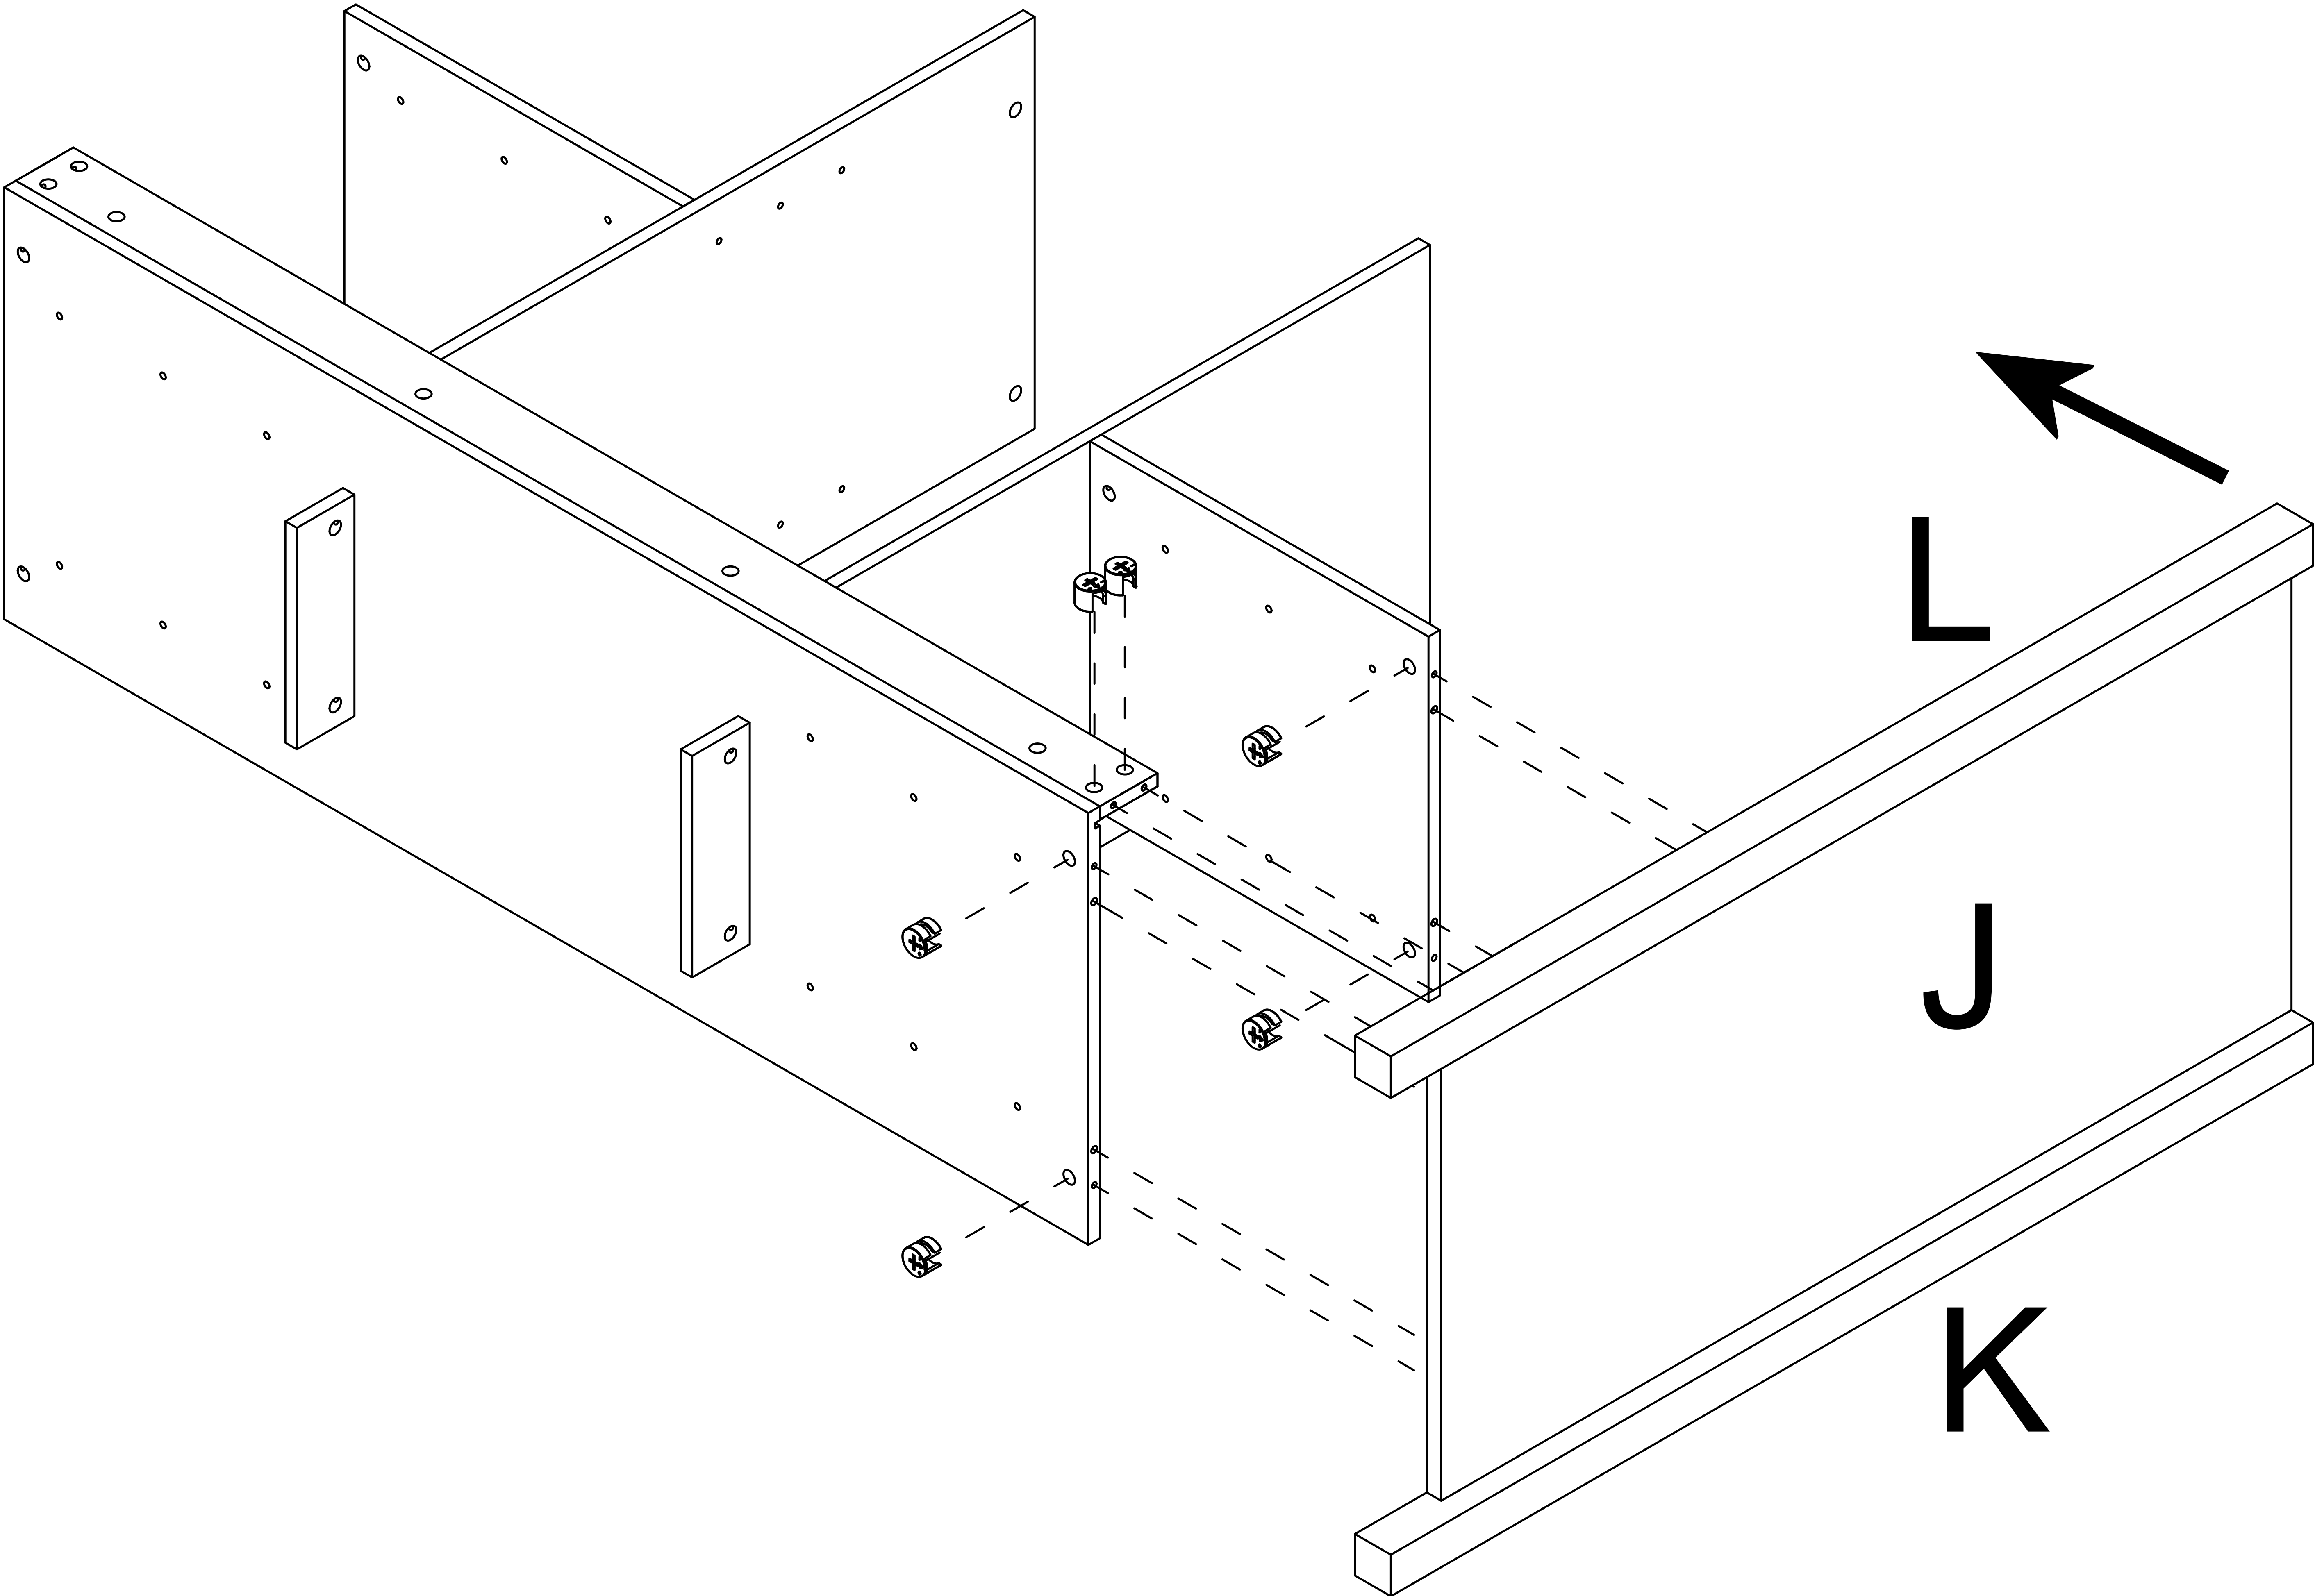

Step 22

- 2

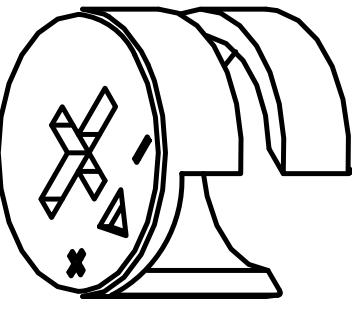


x 2
- 3





x2



Attention direction

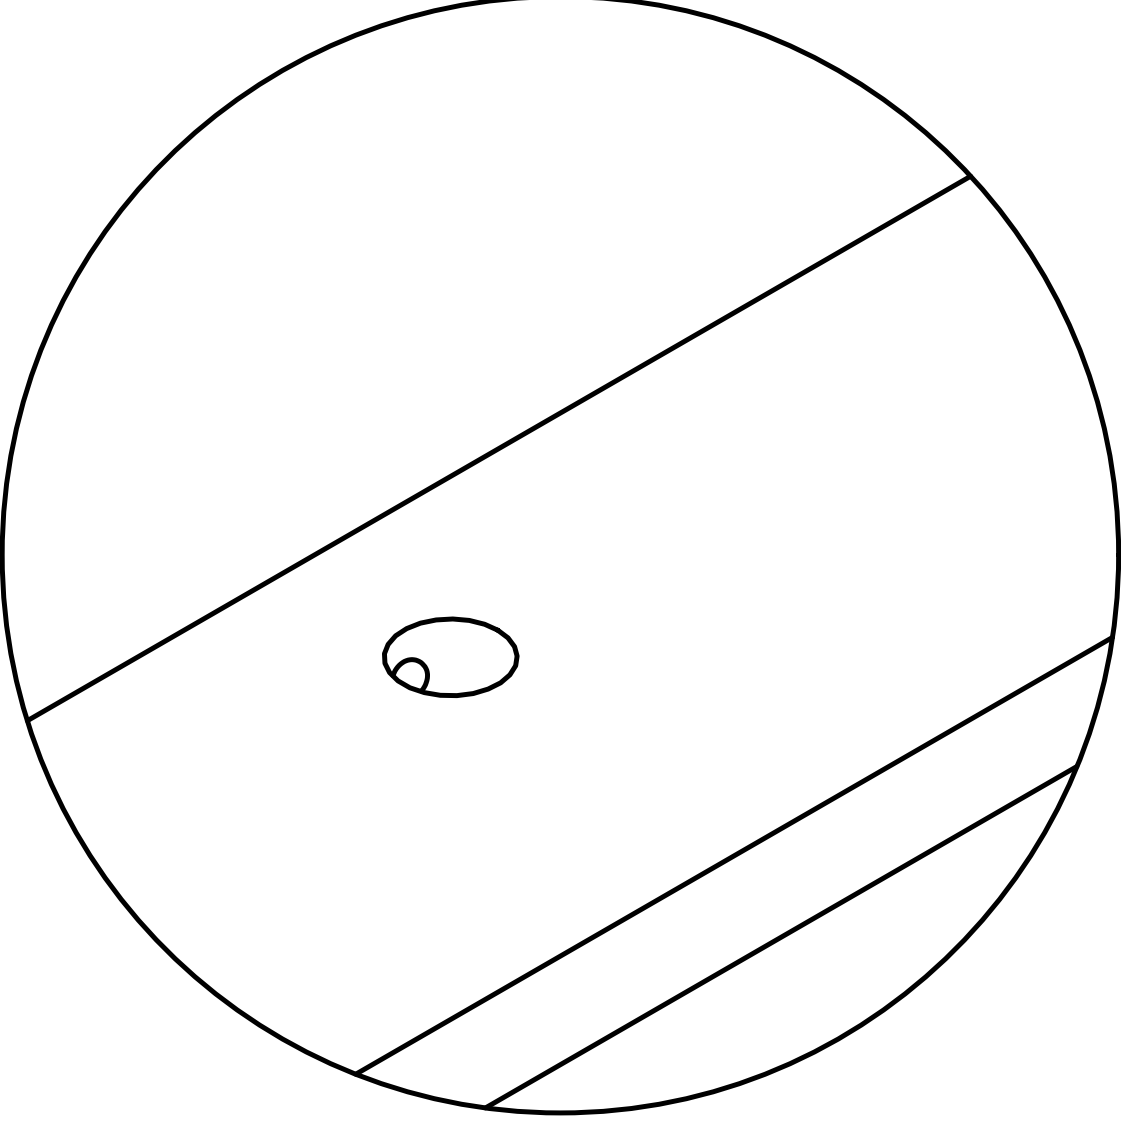



C

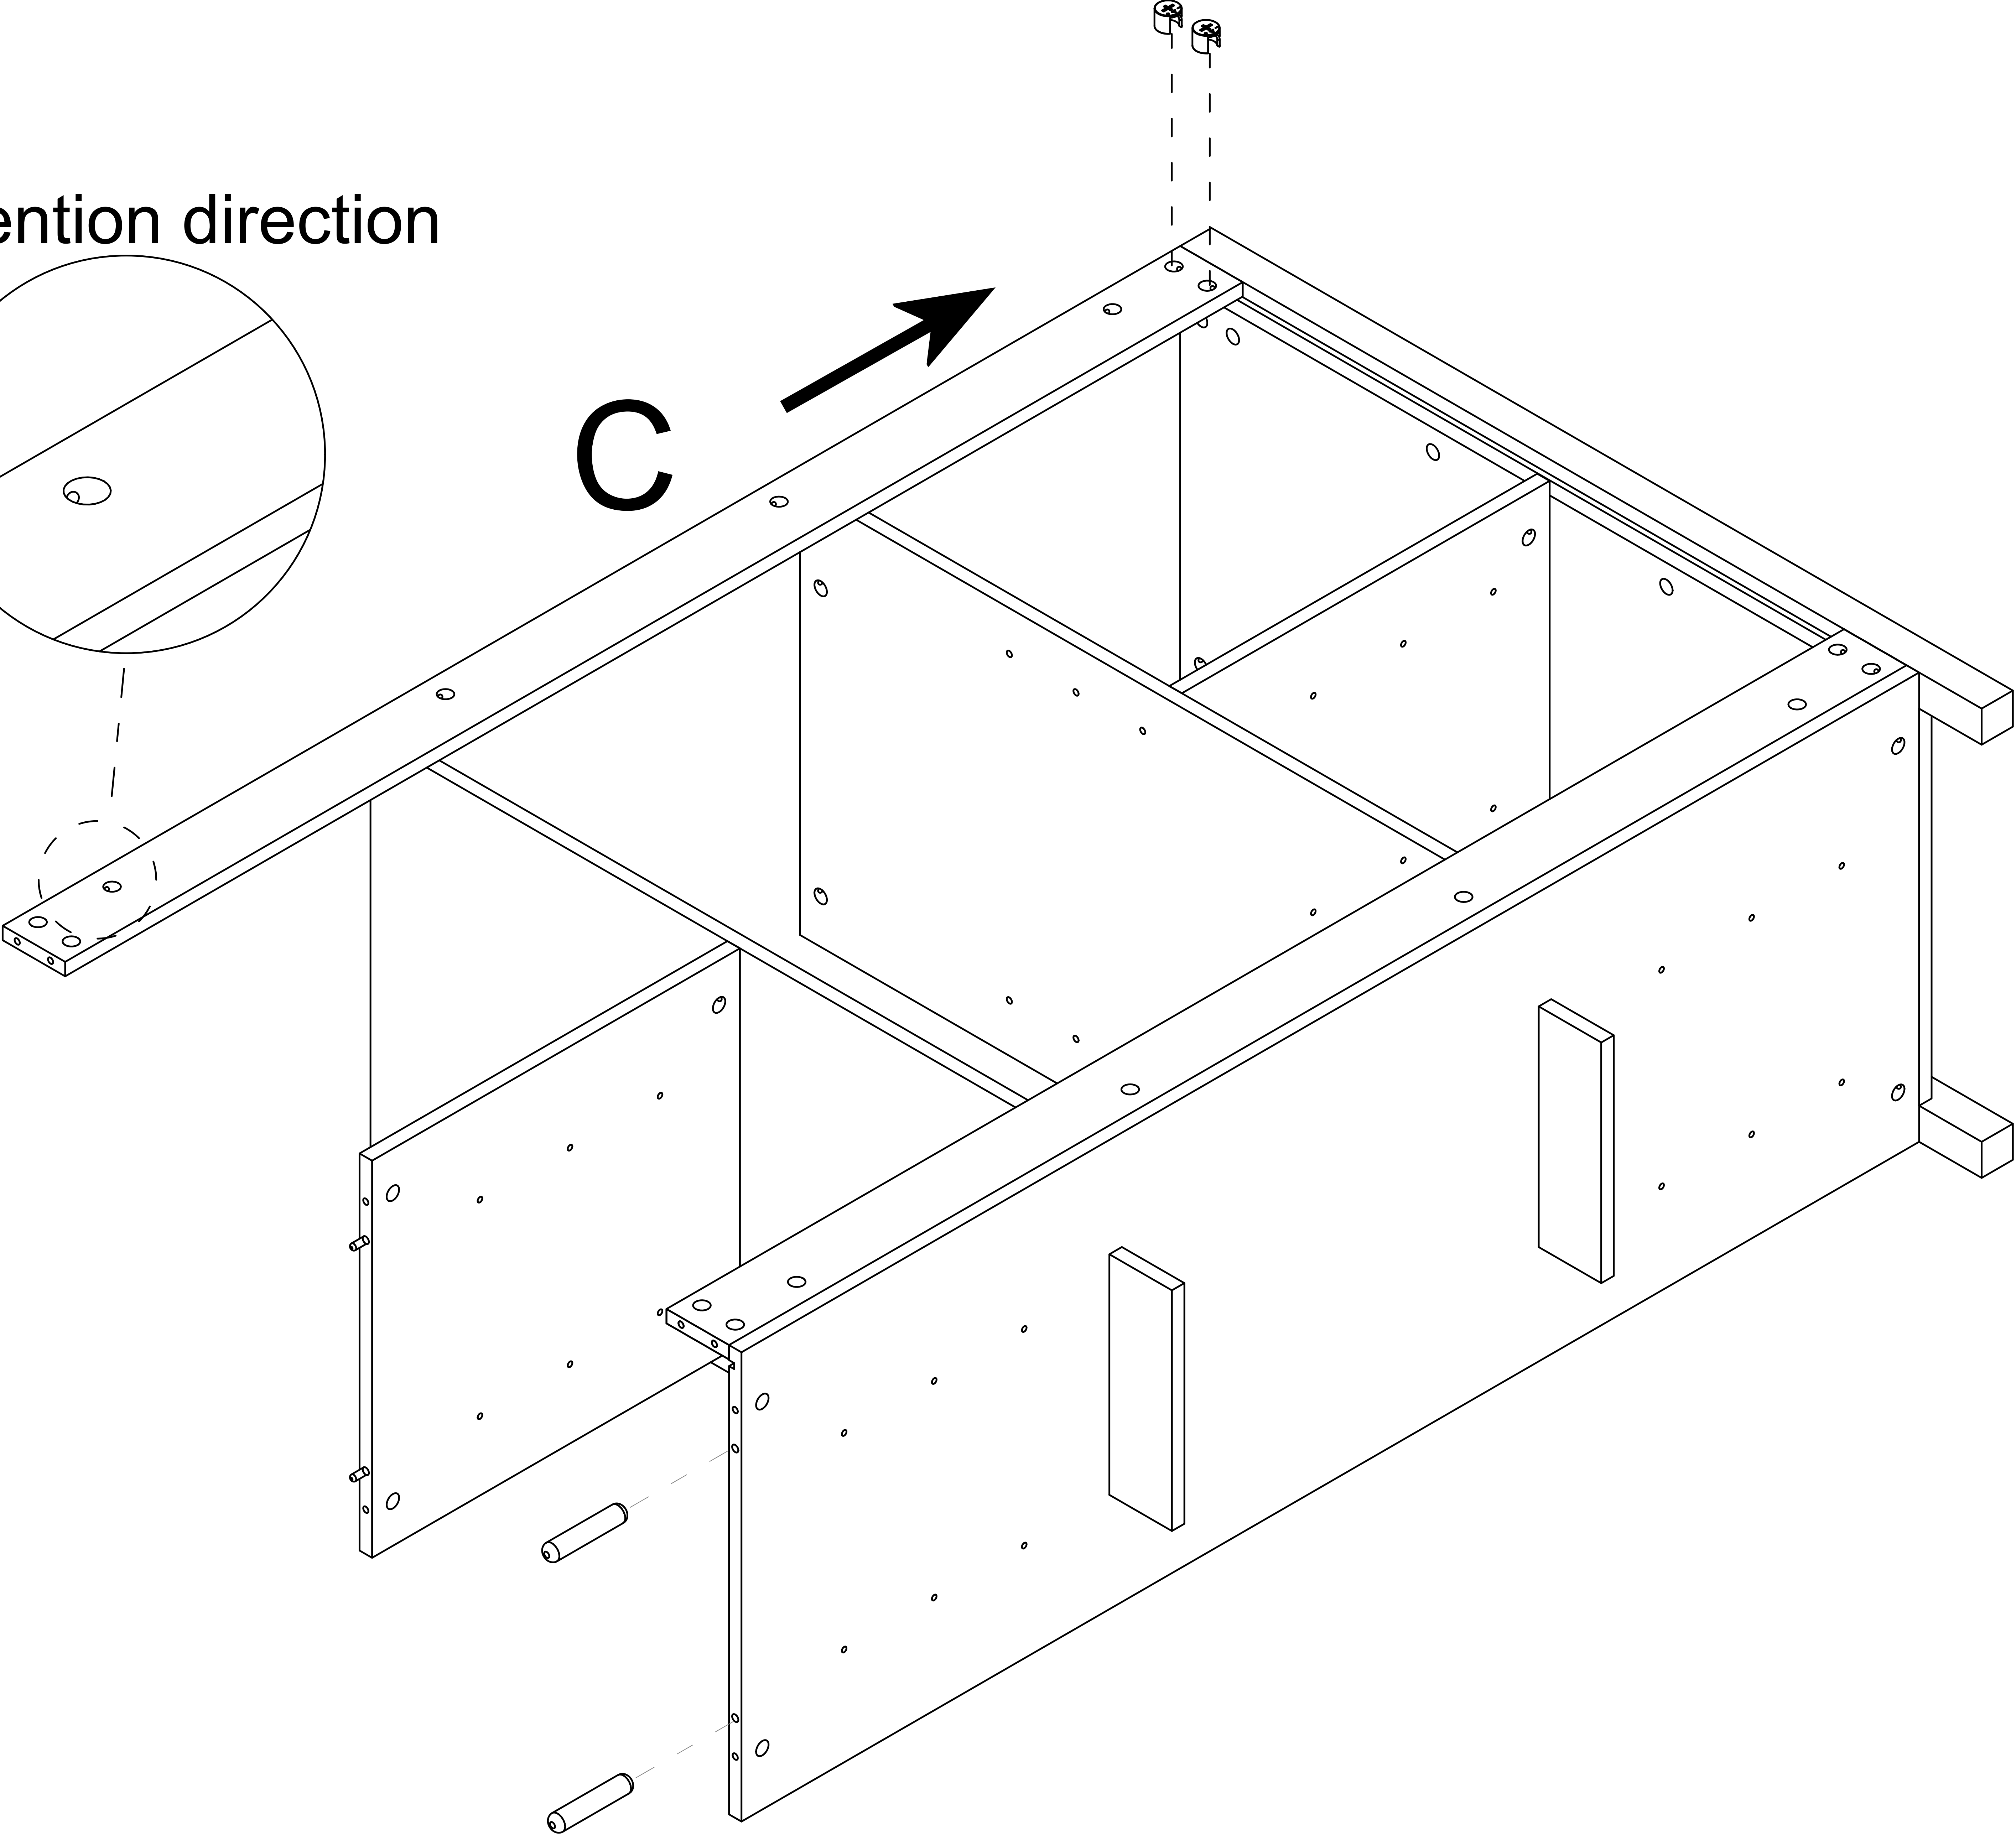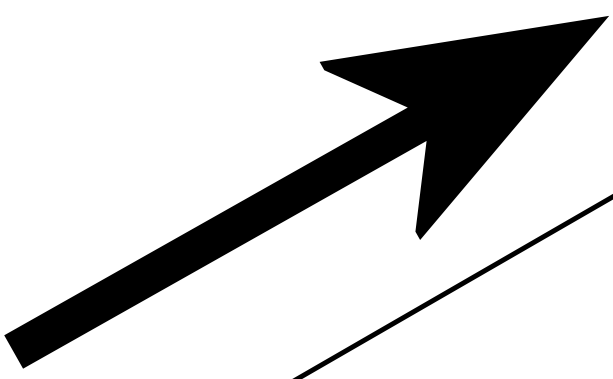

Step 23

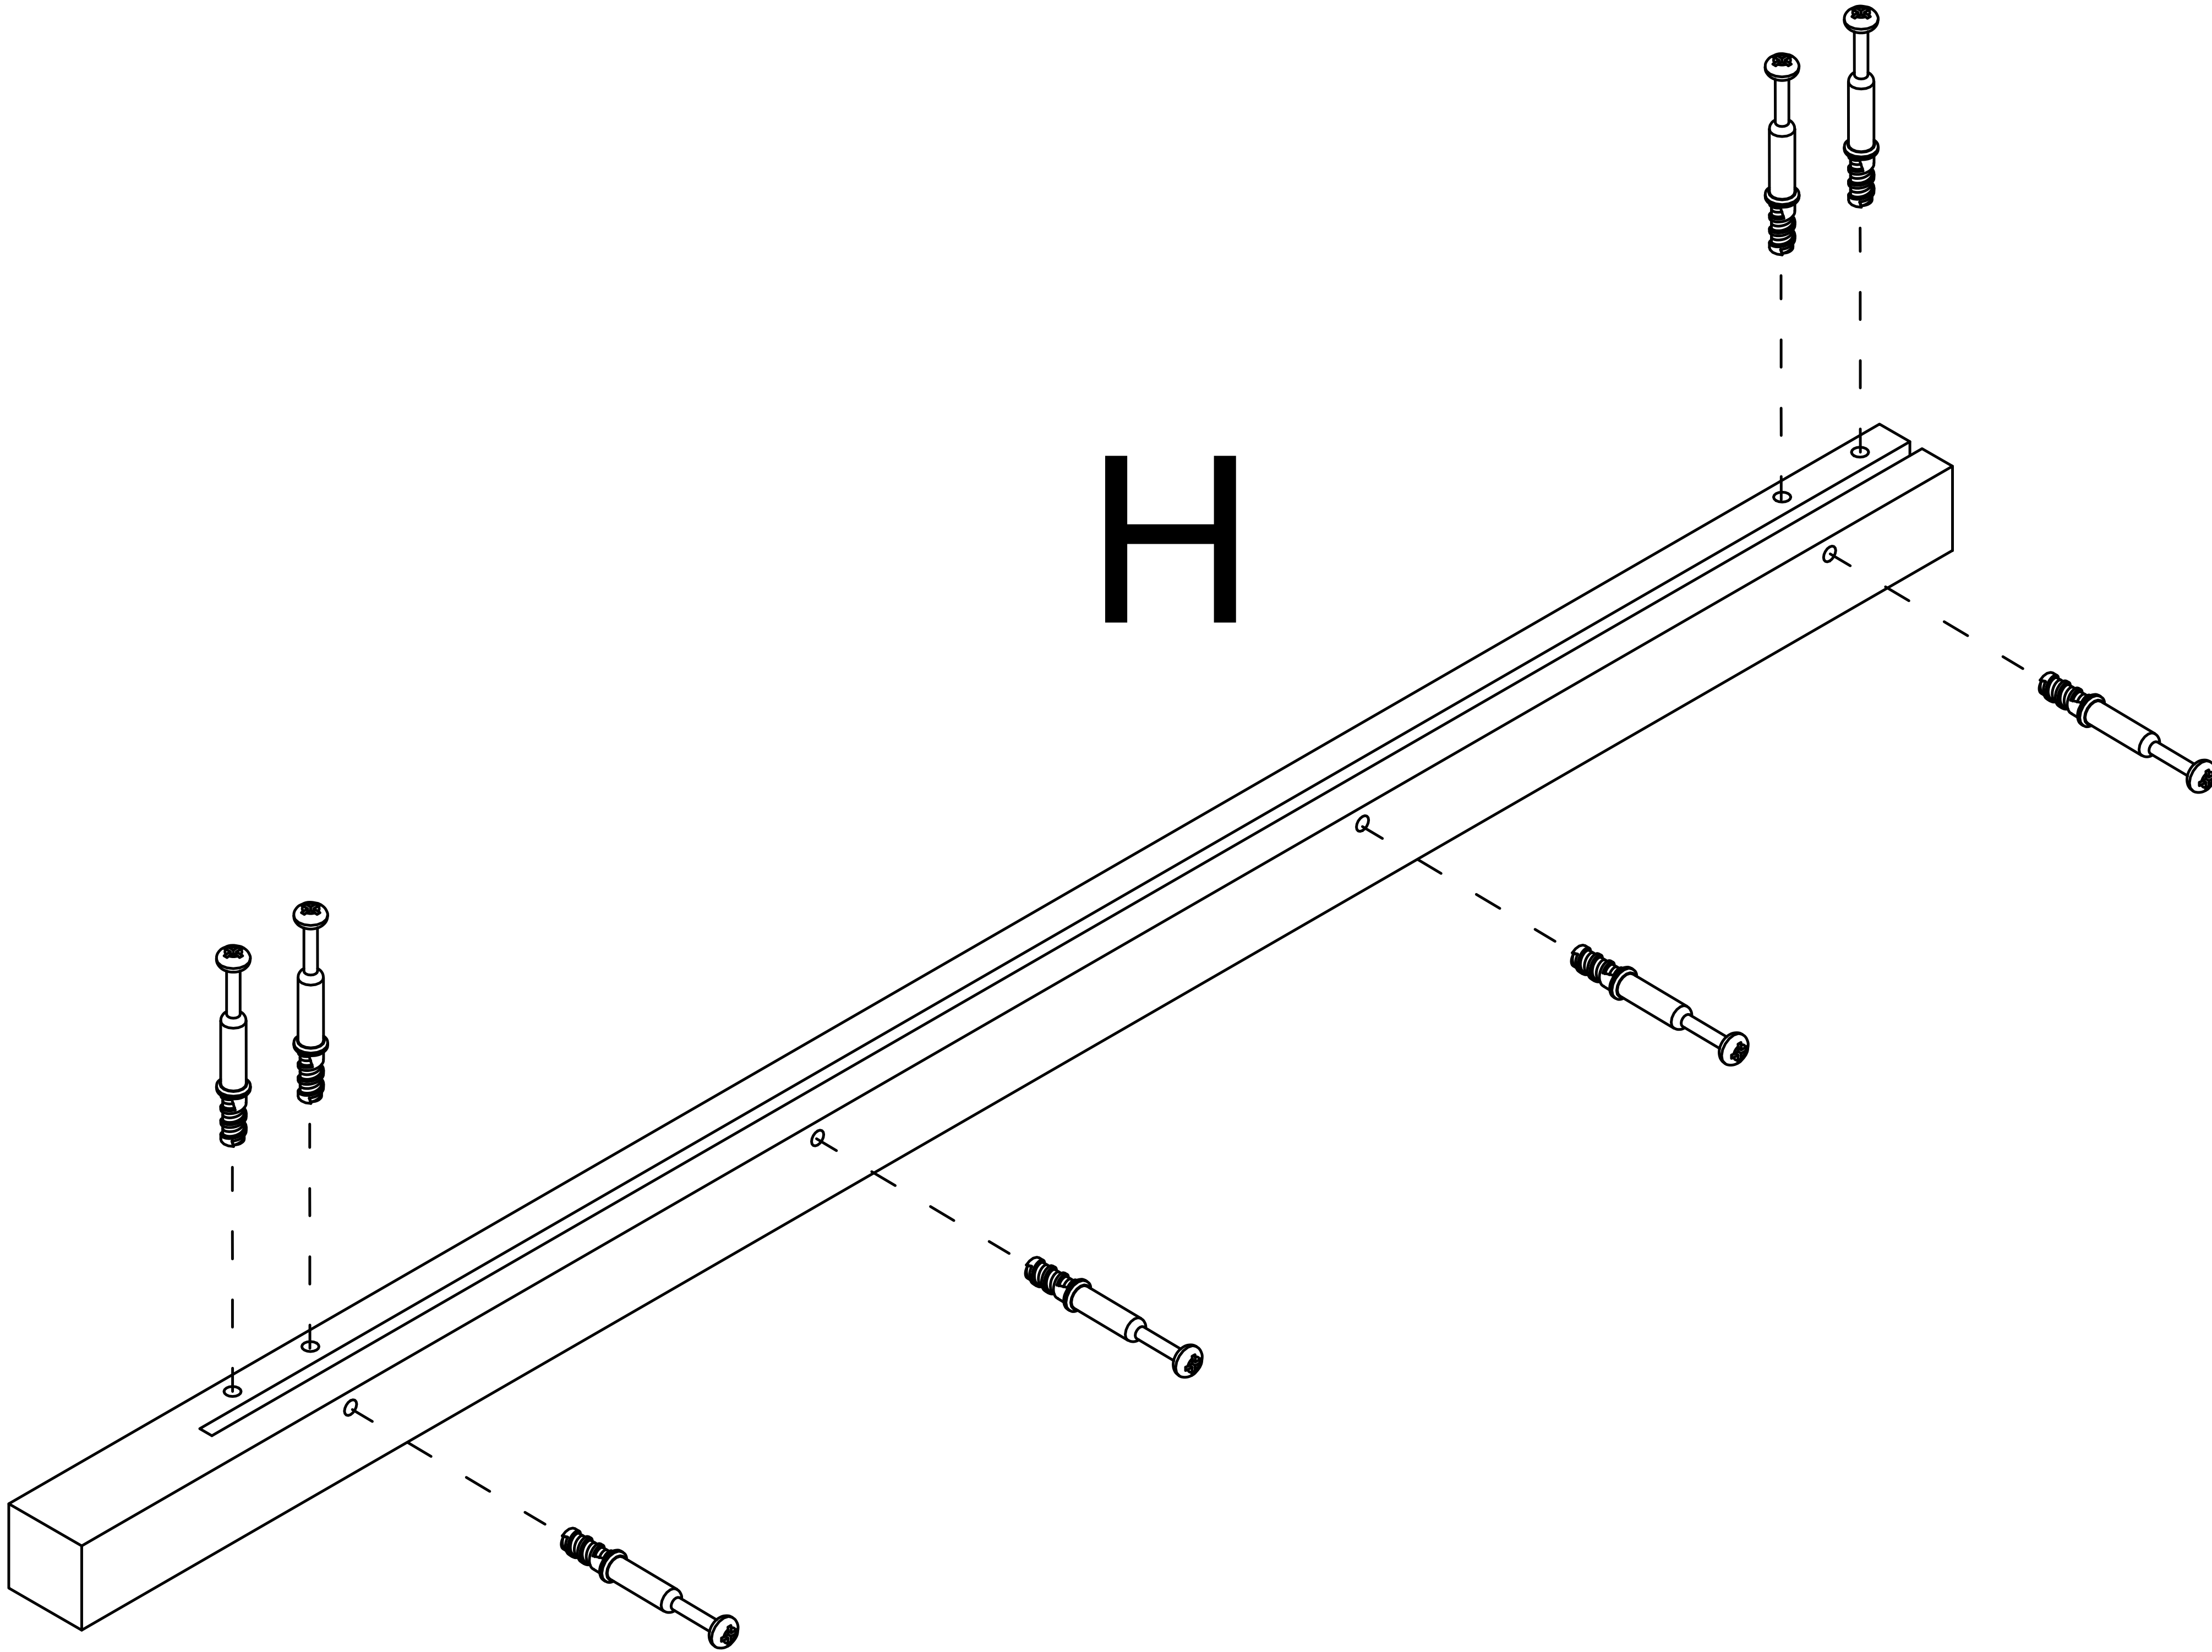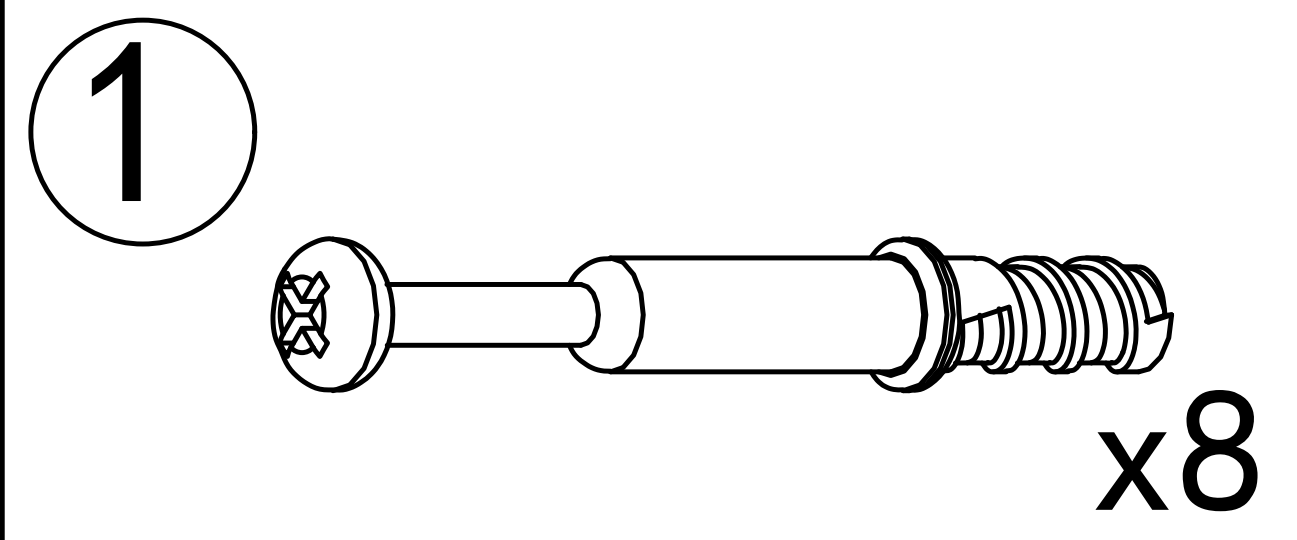


Step 24

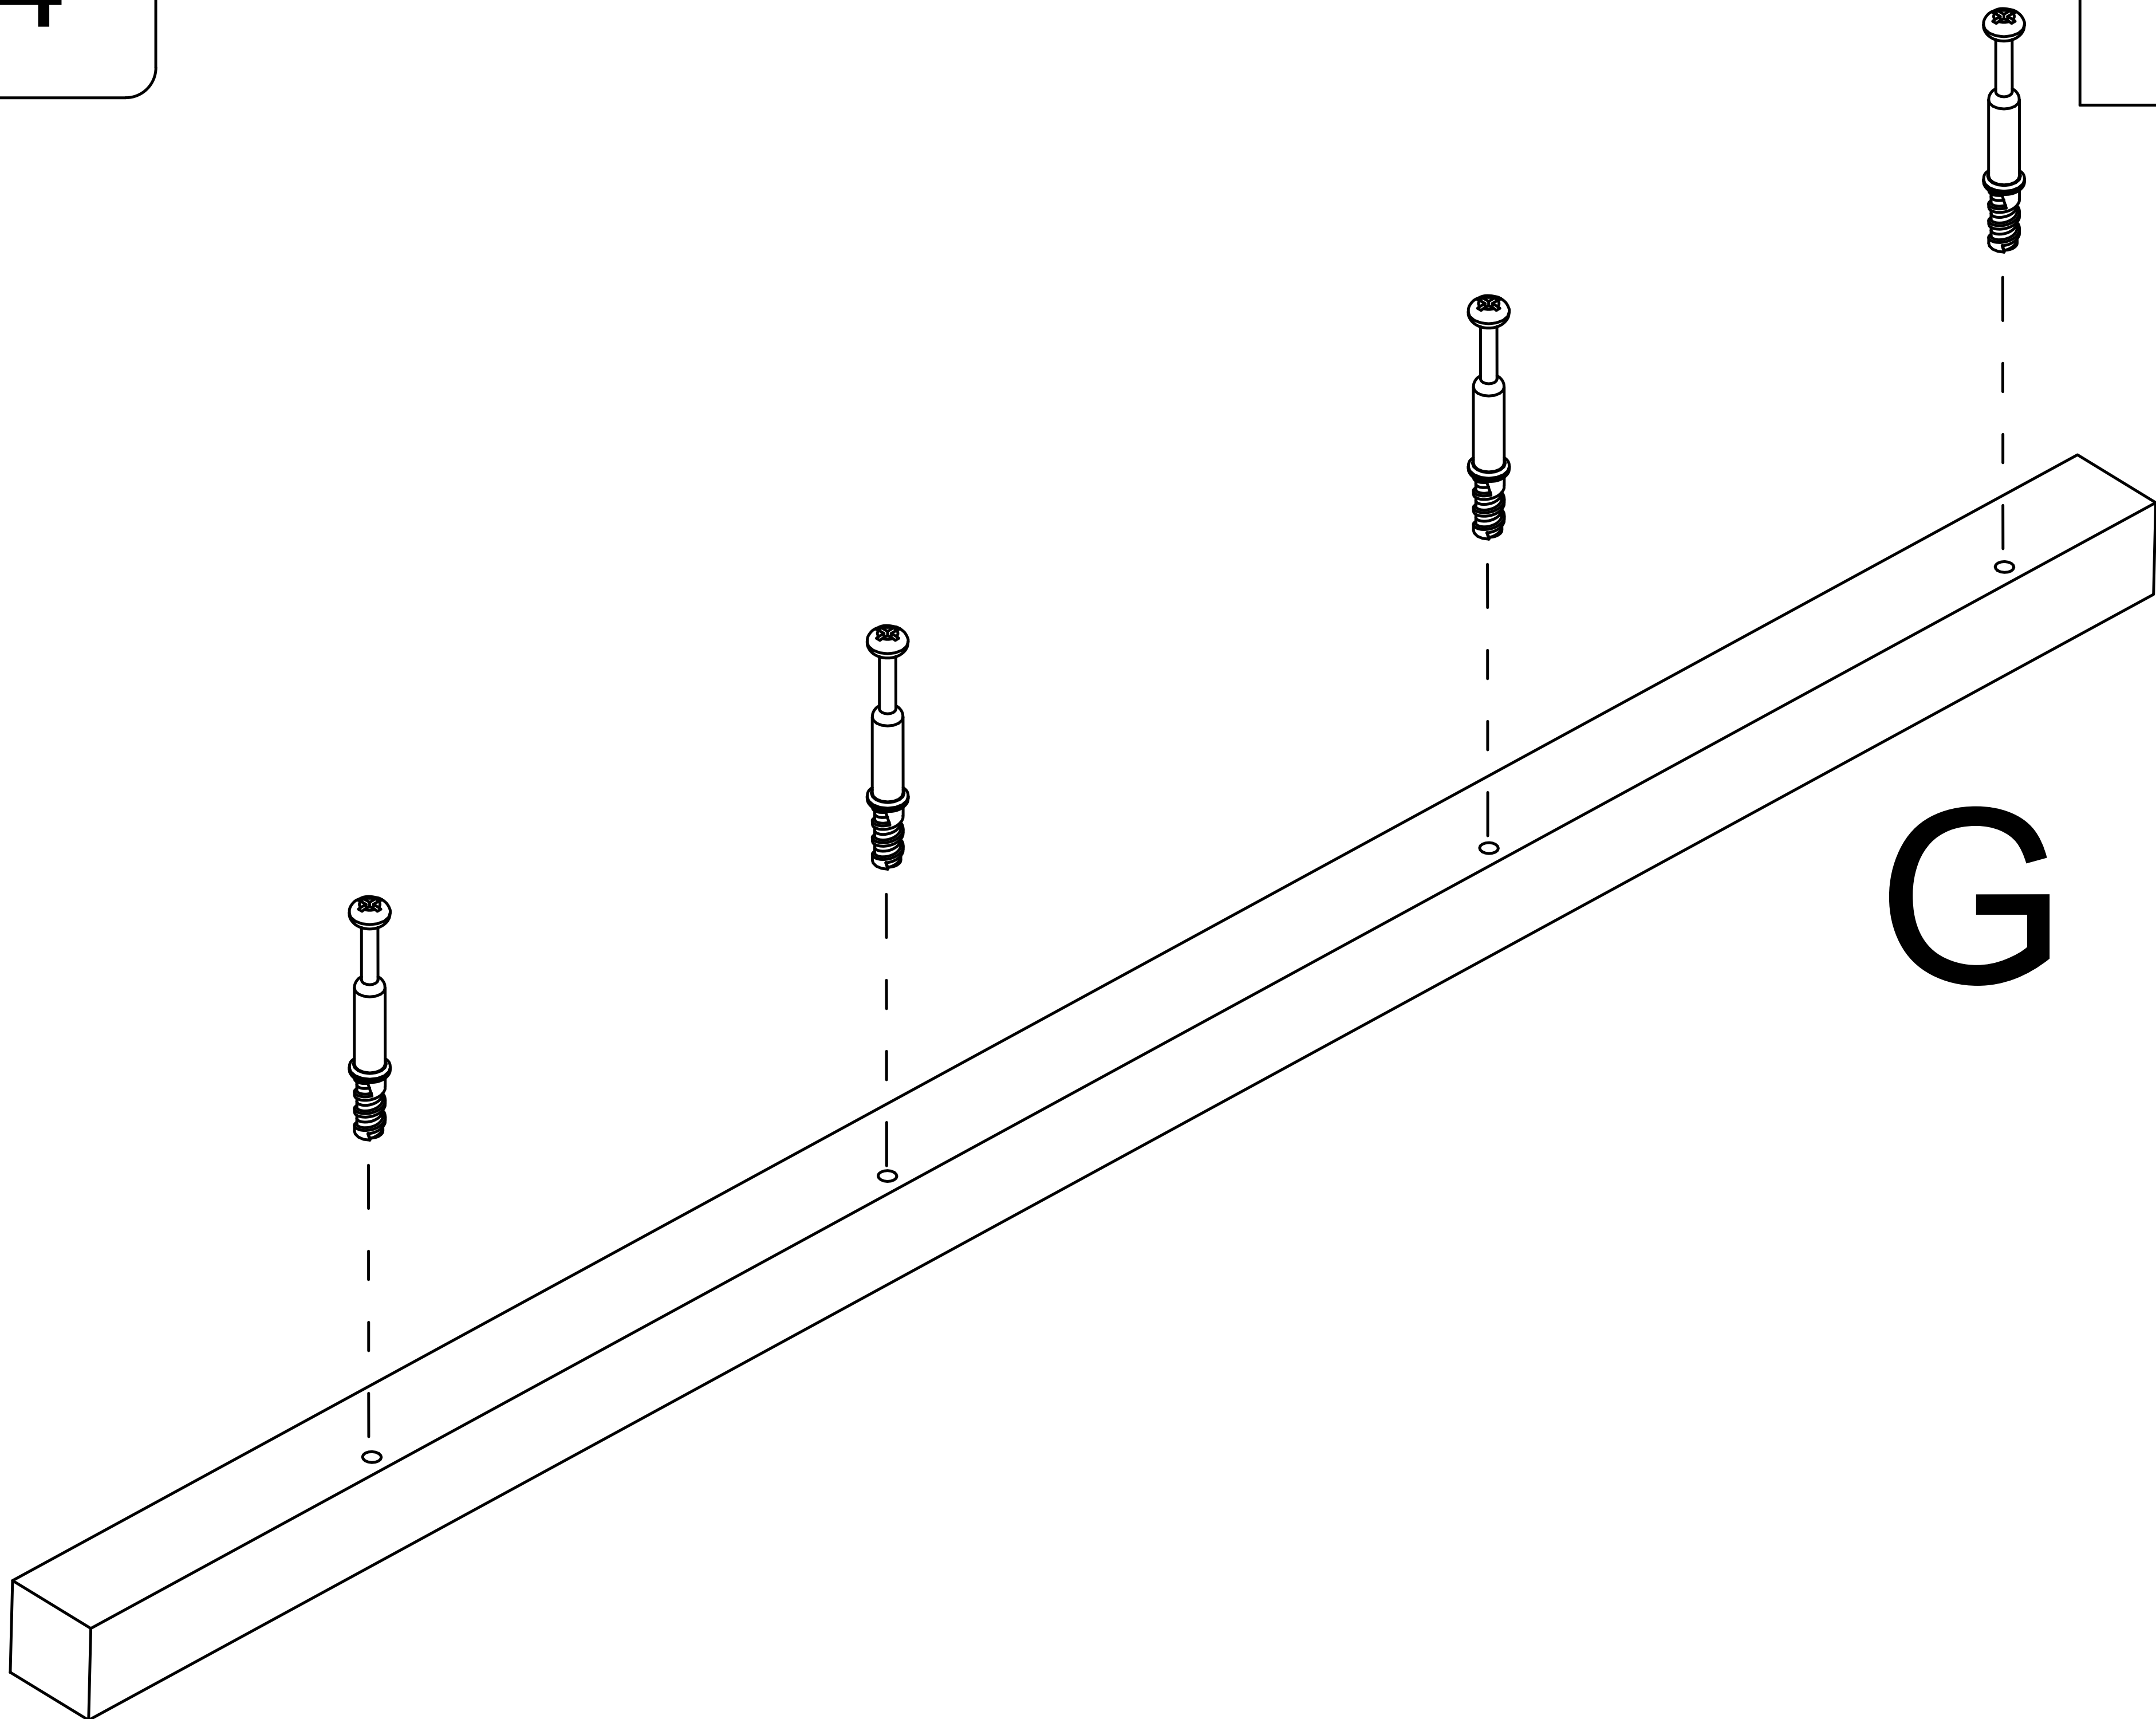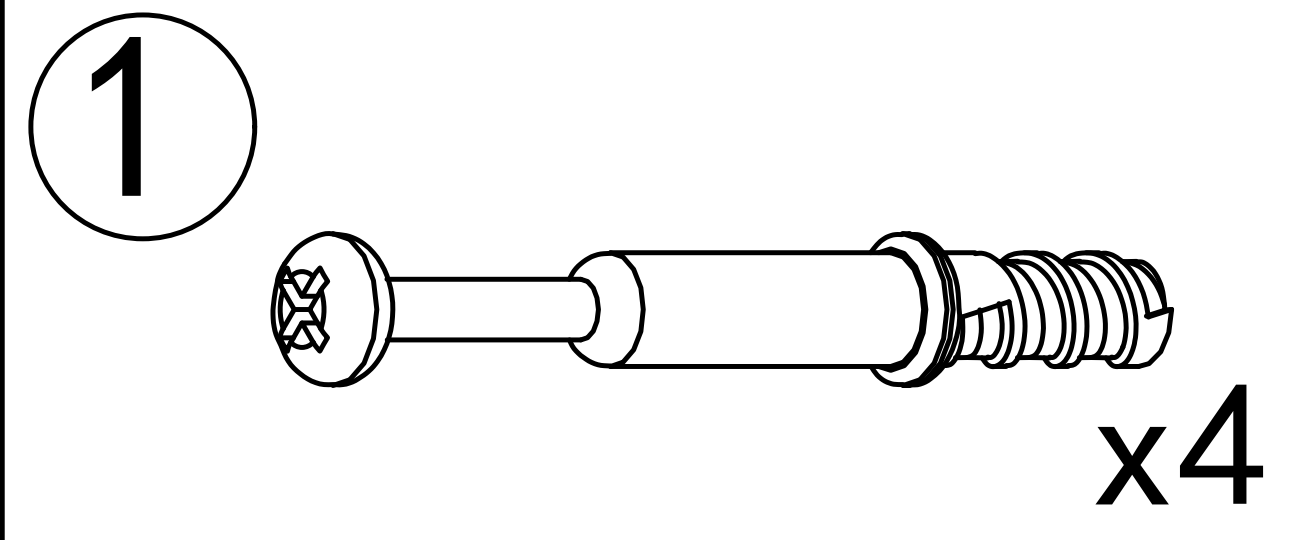


Step 25

2

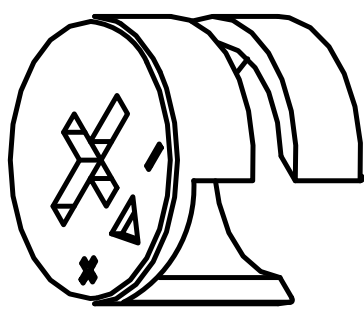


x 8

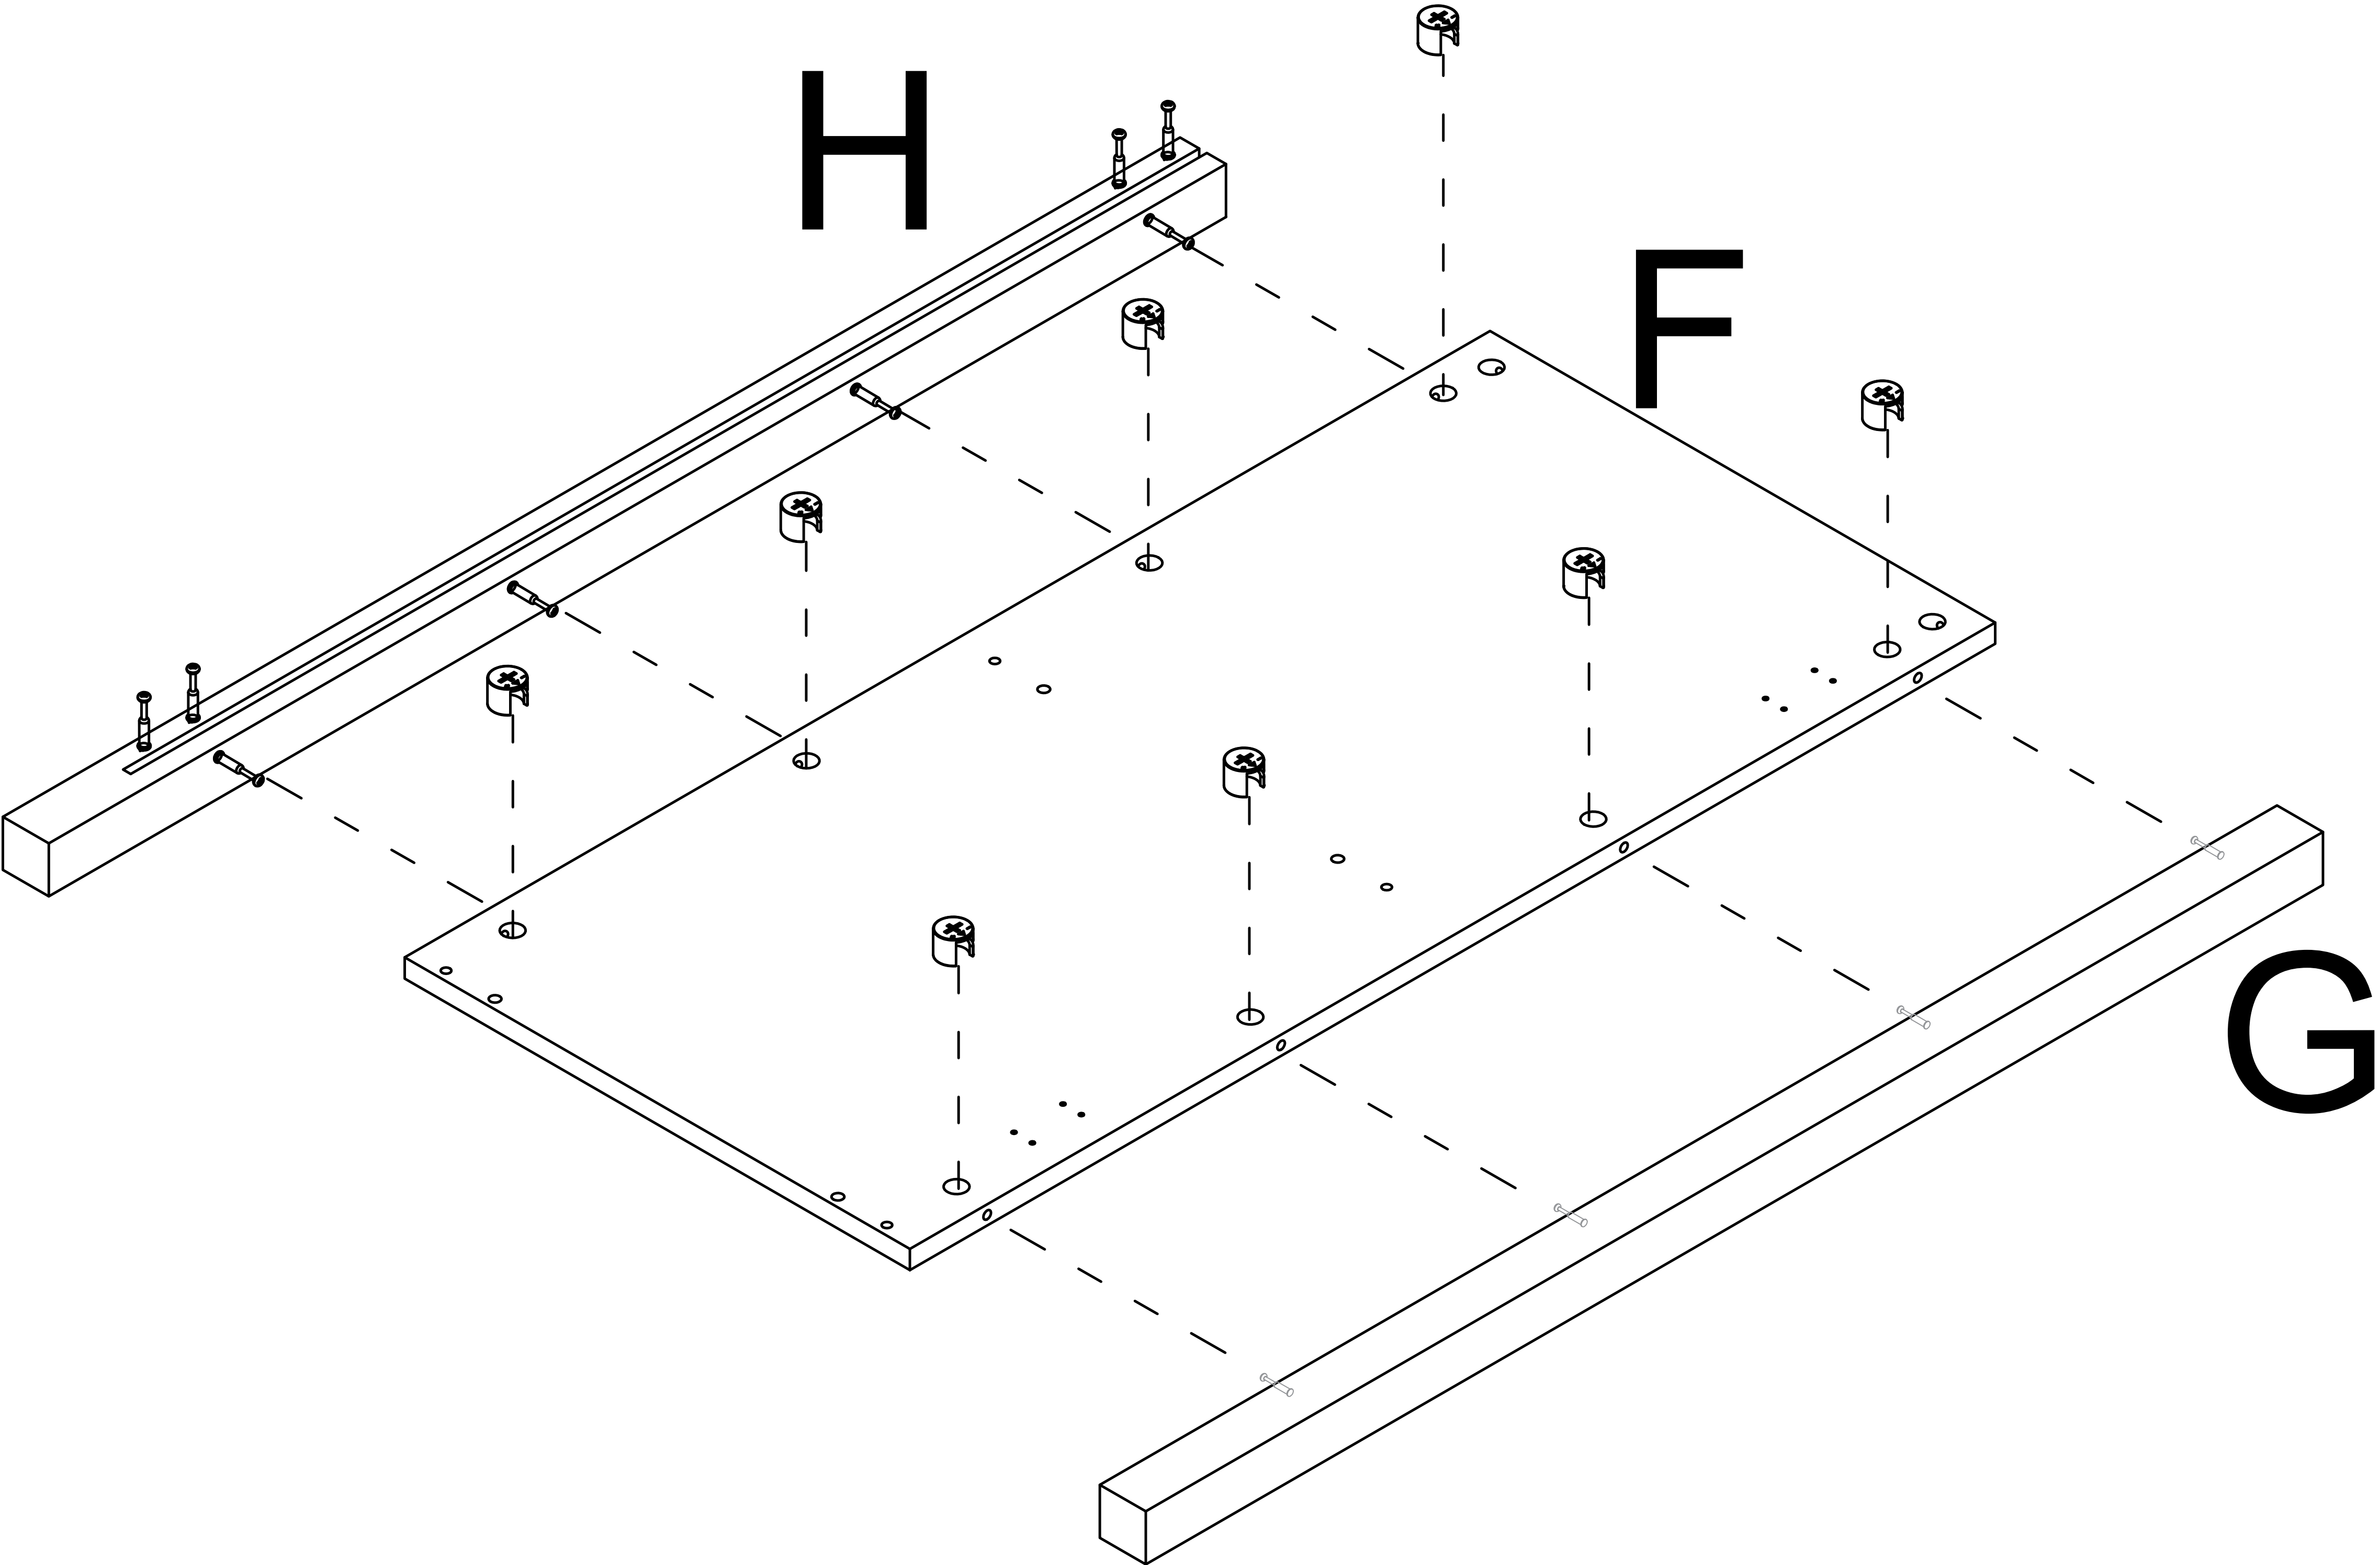


Step 26

1

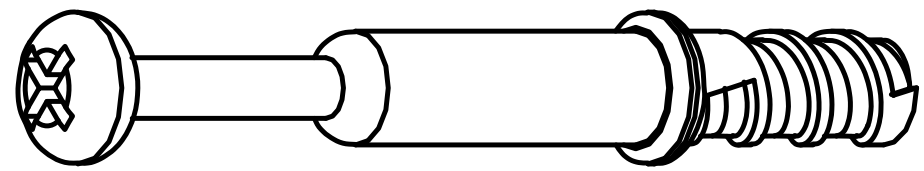


x4

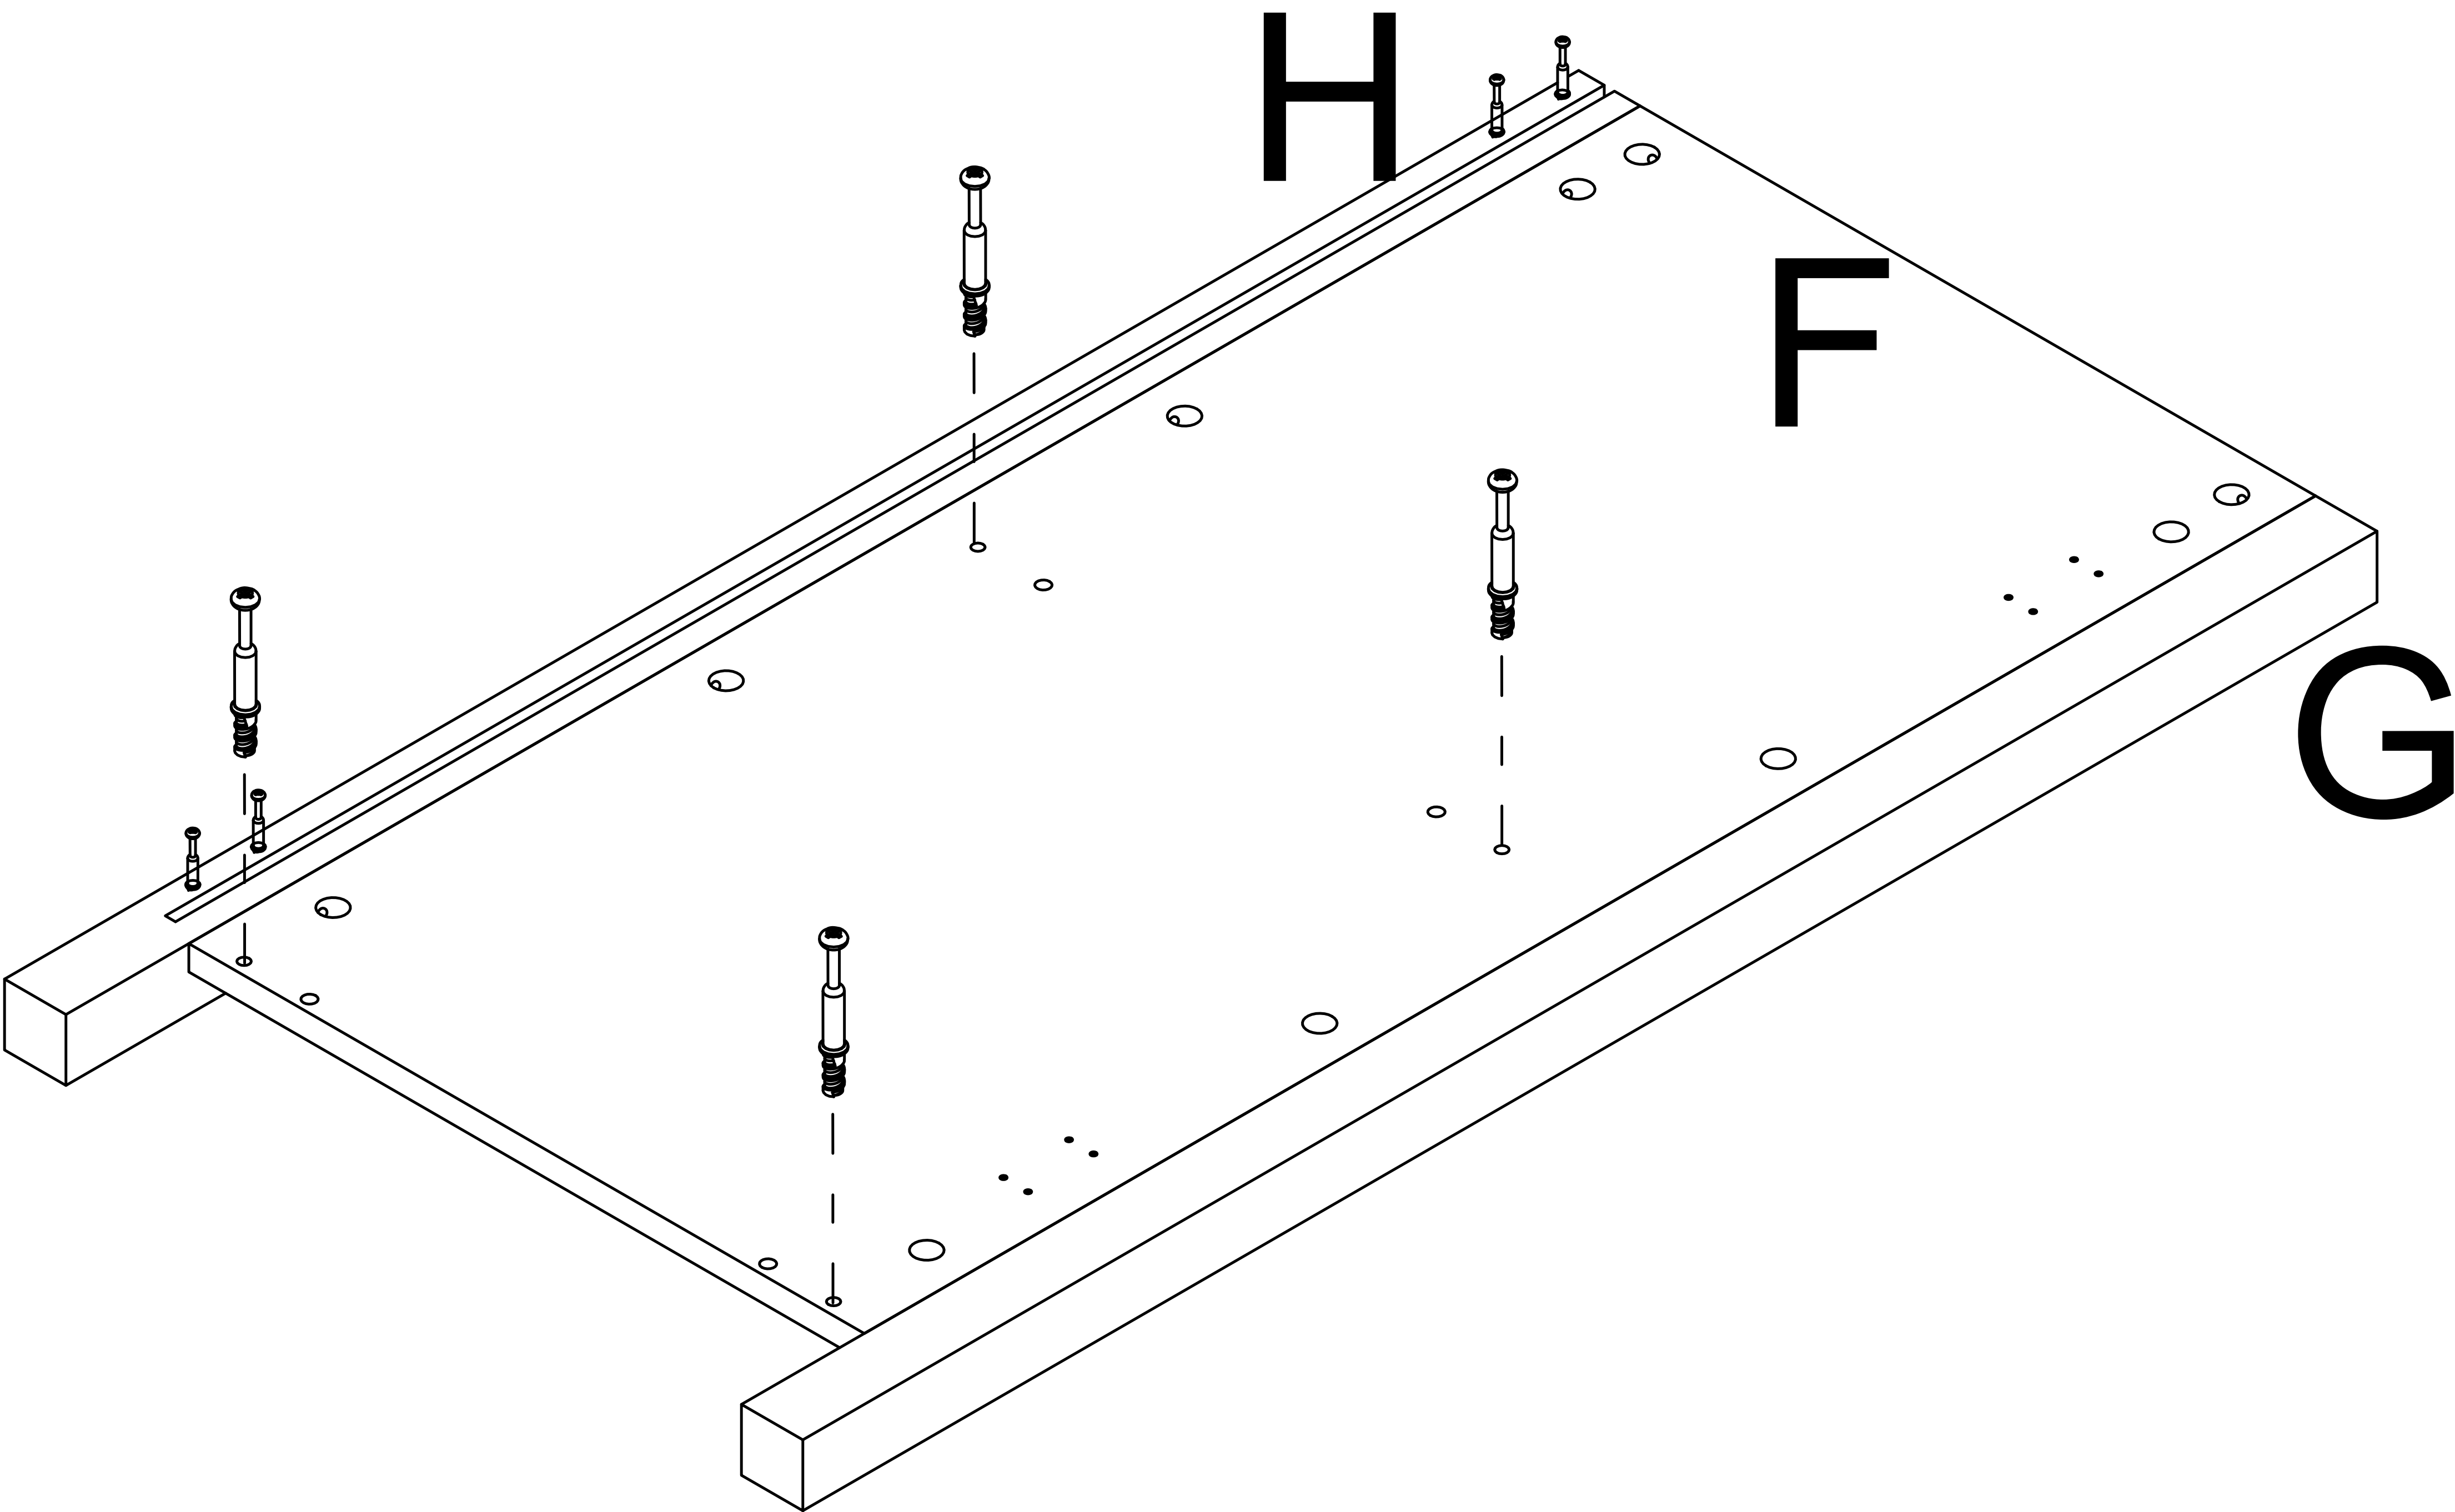


Step 27

2

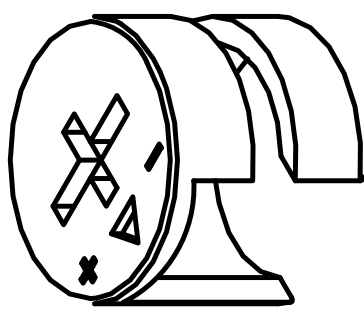


x 8

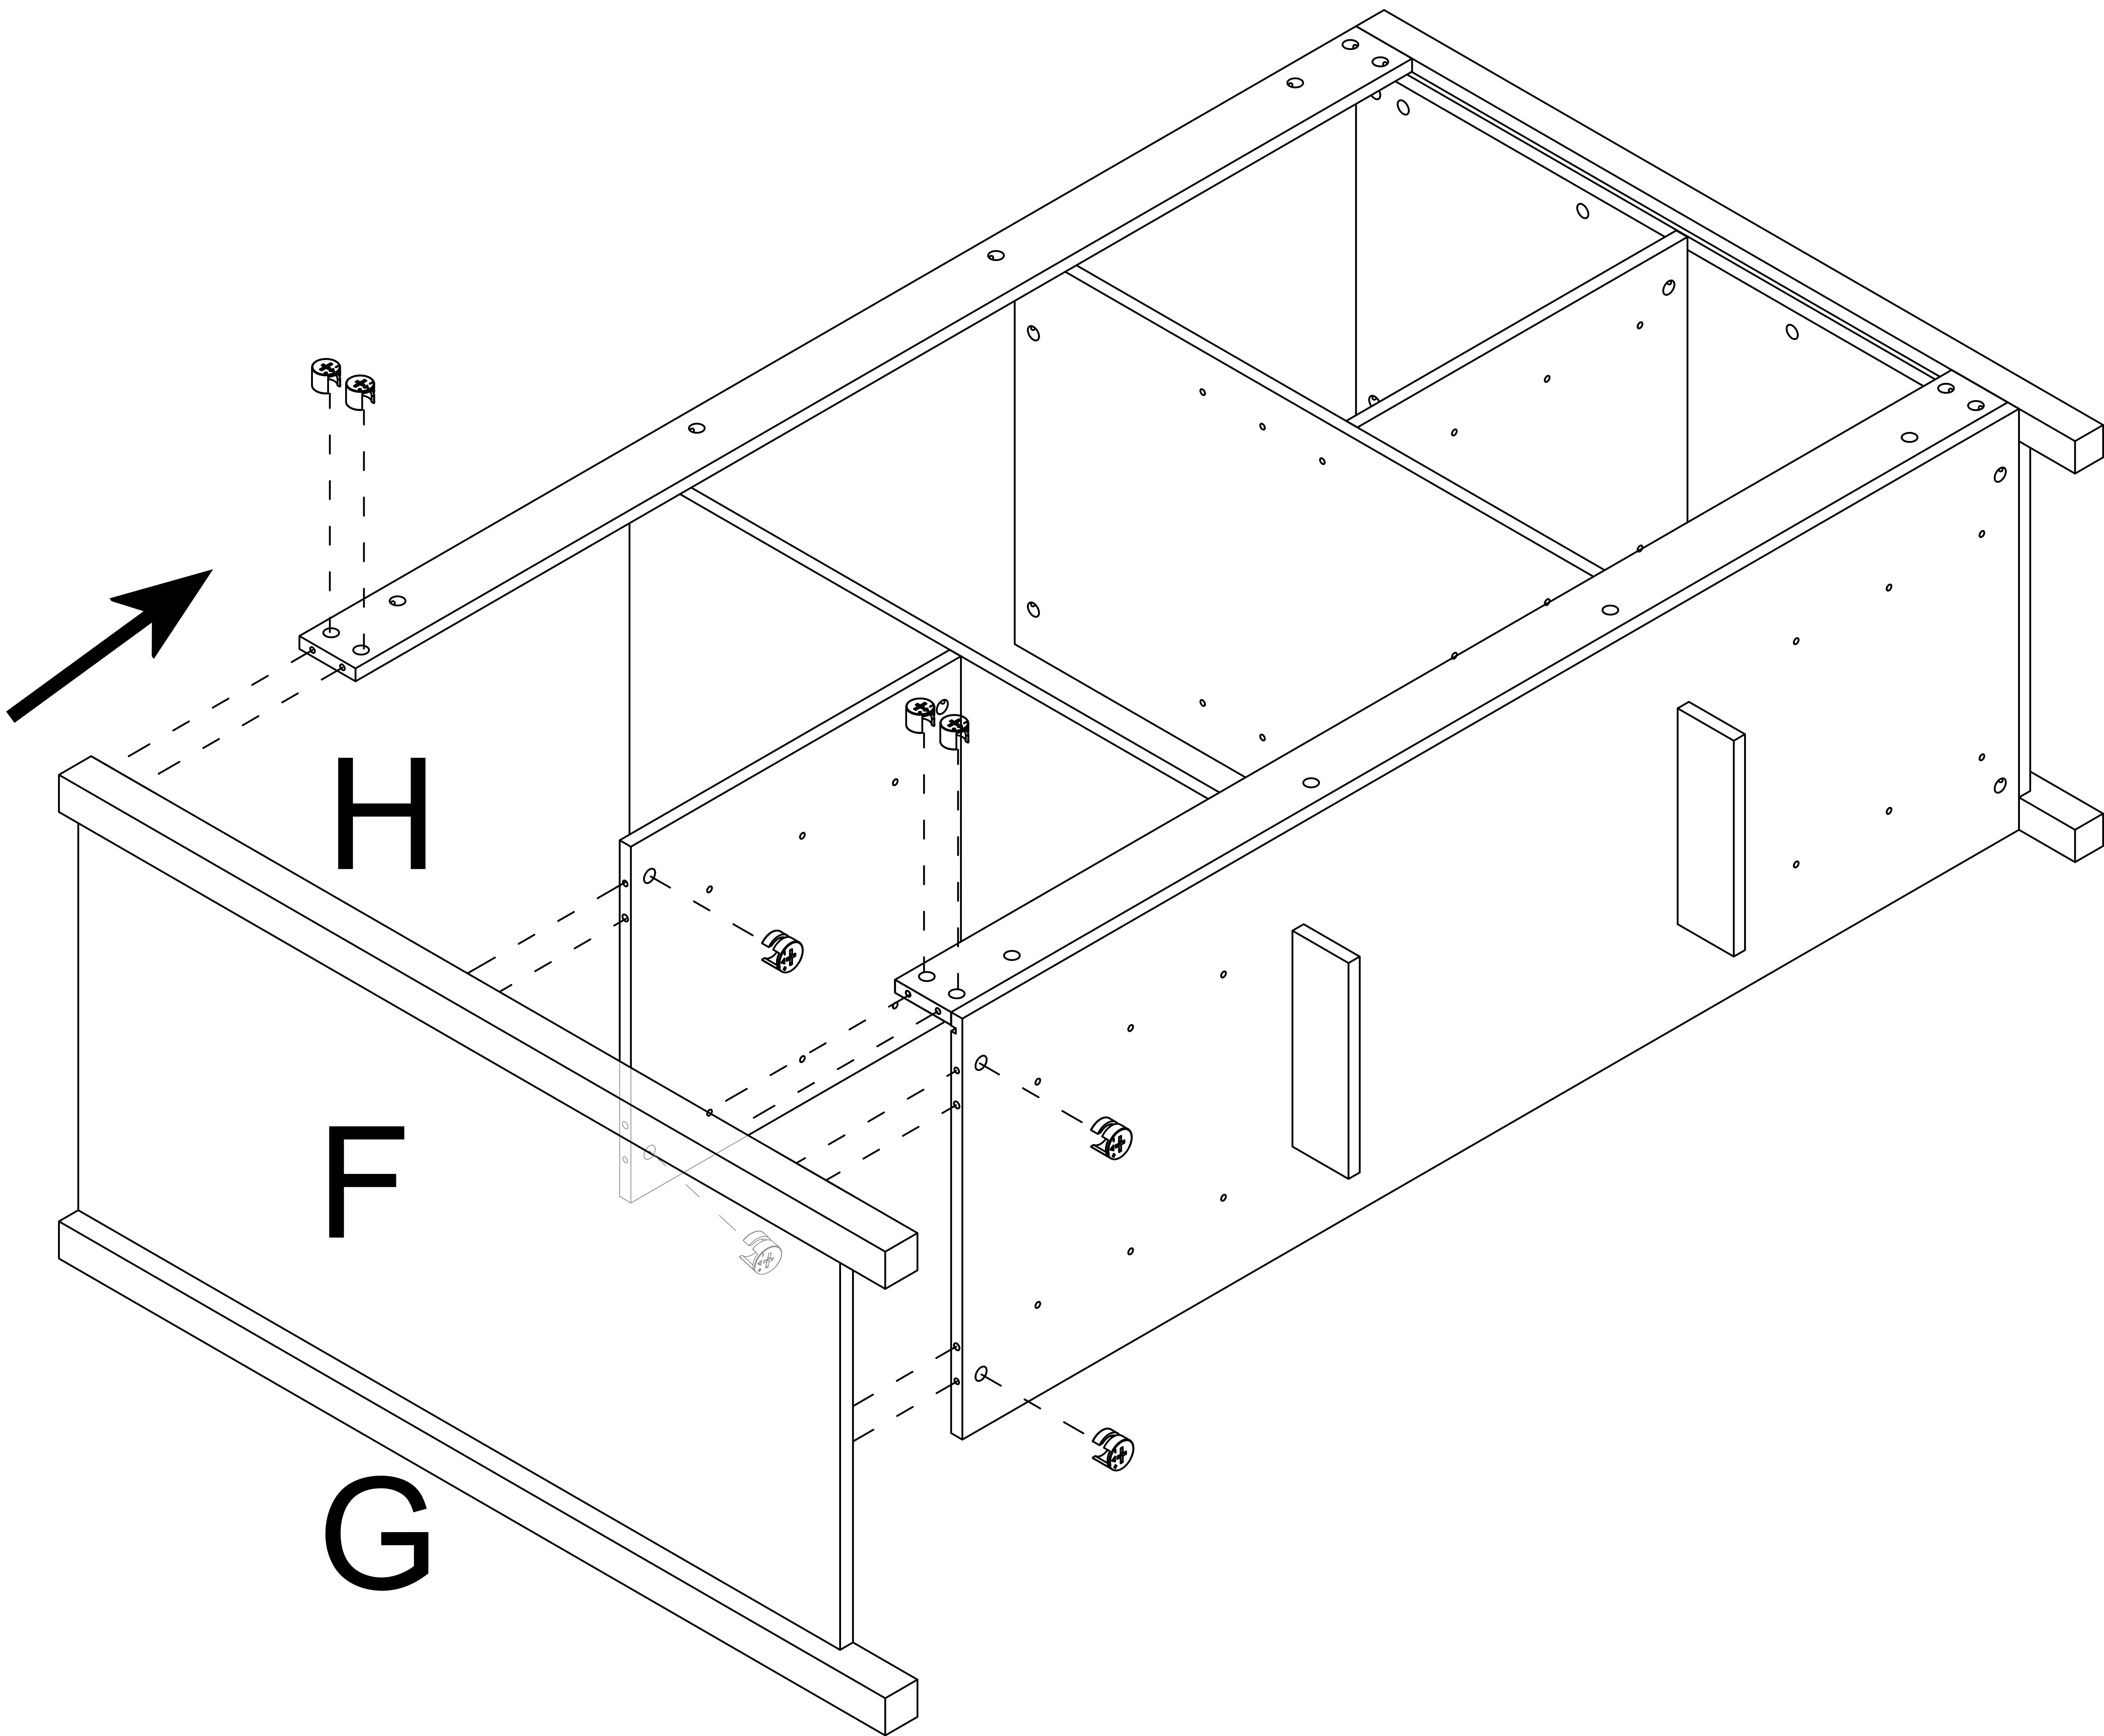


Step 28

- 4

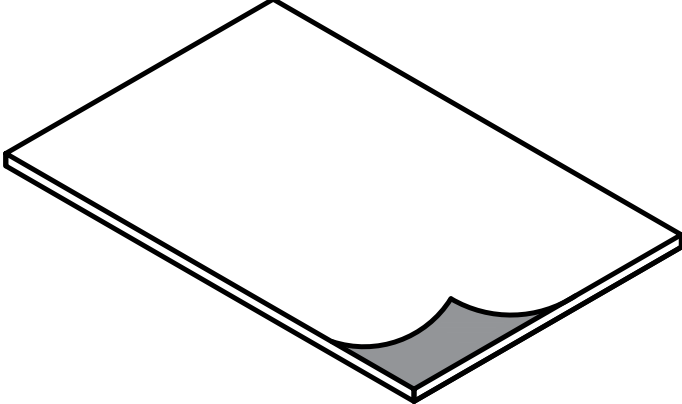


x4
- 5

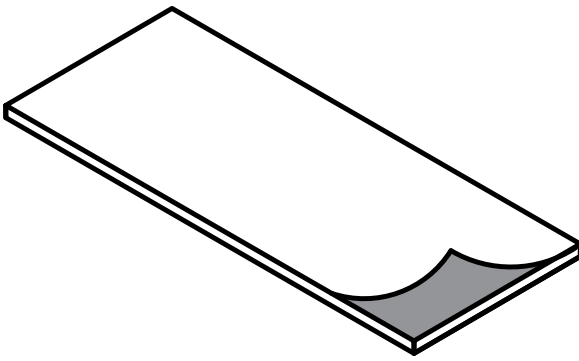


x2

Tear off release paper and stick the black foot pad on the board

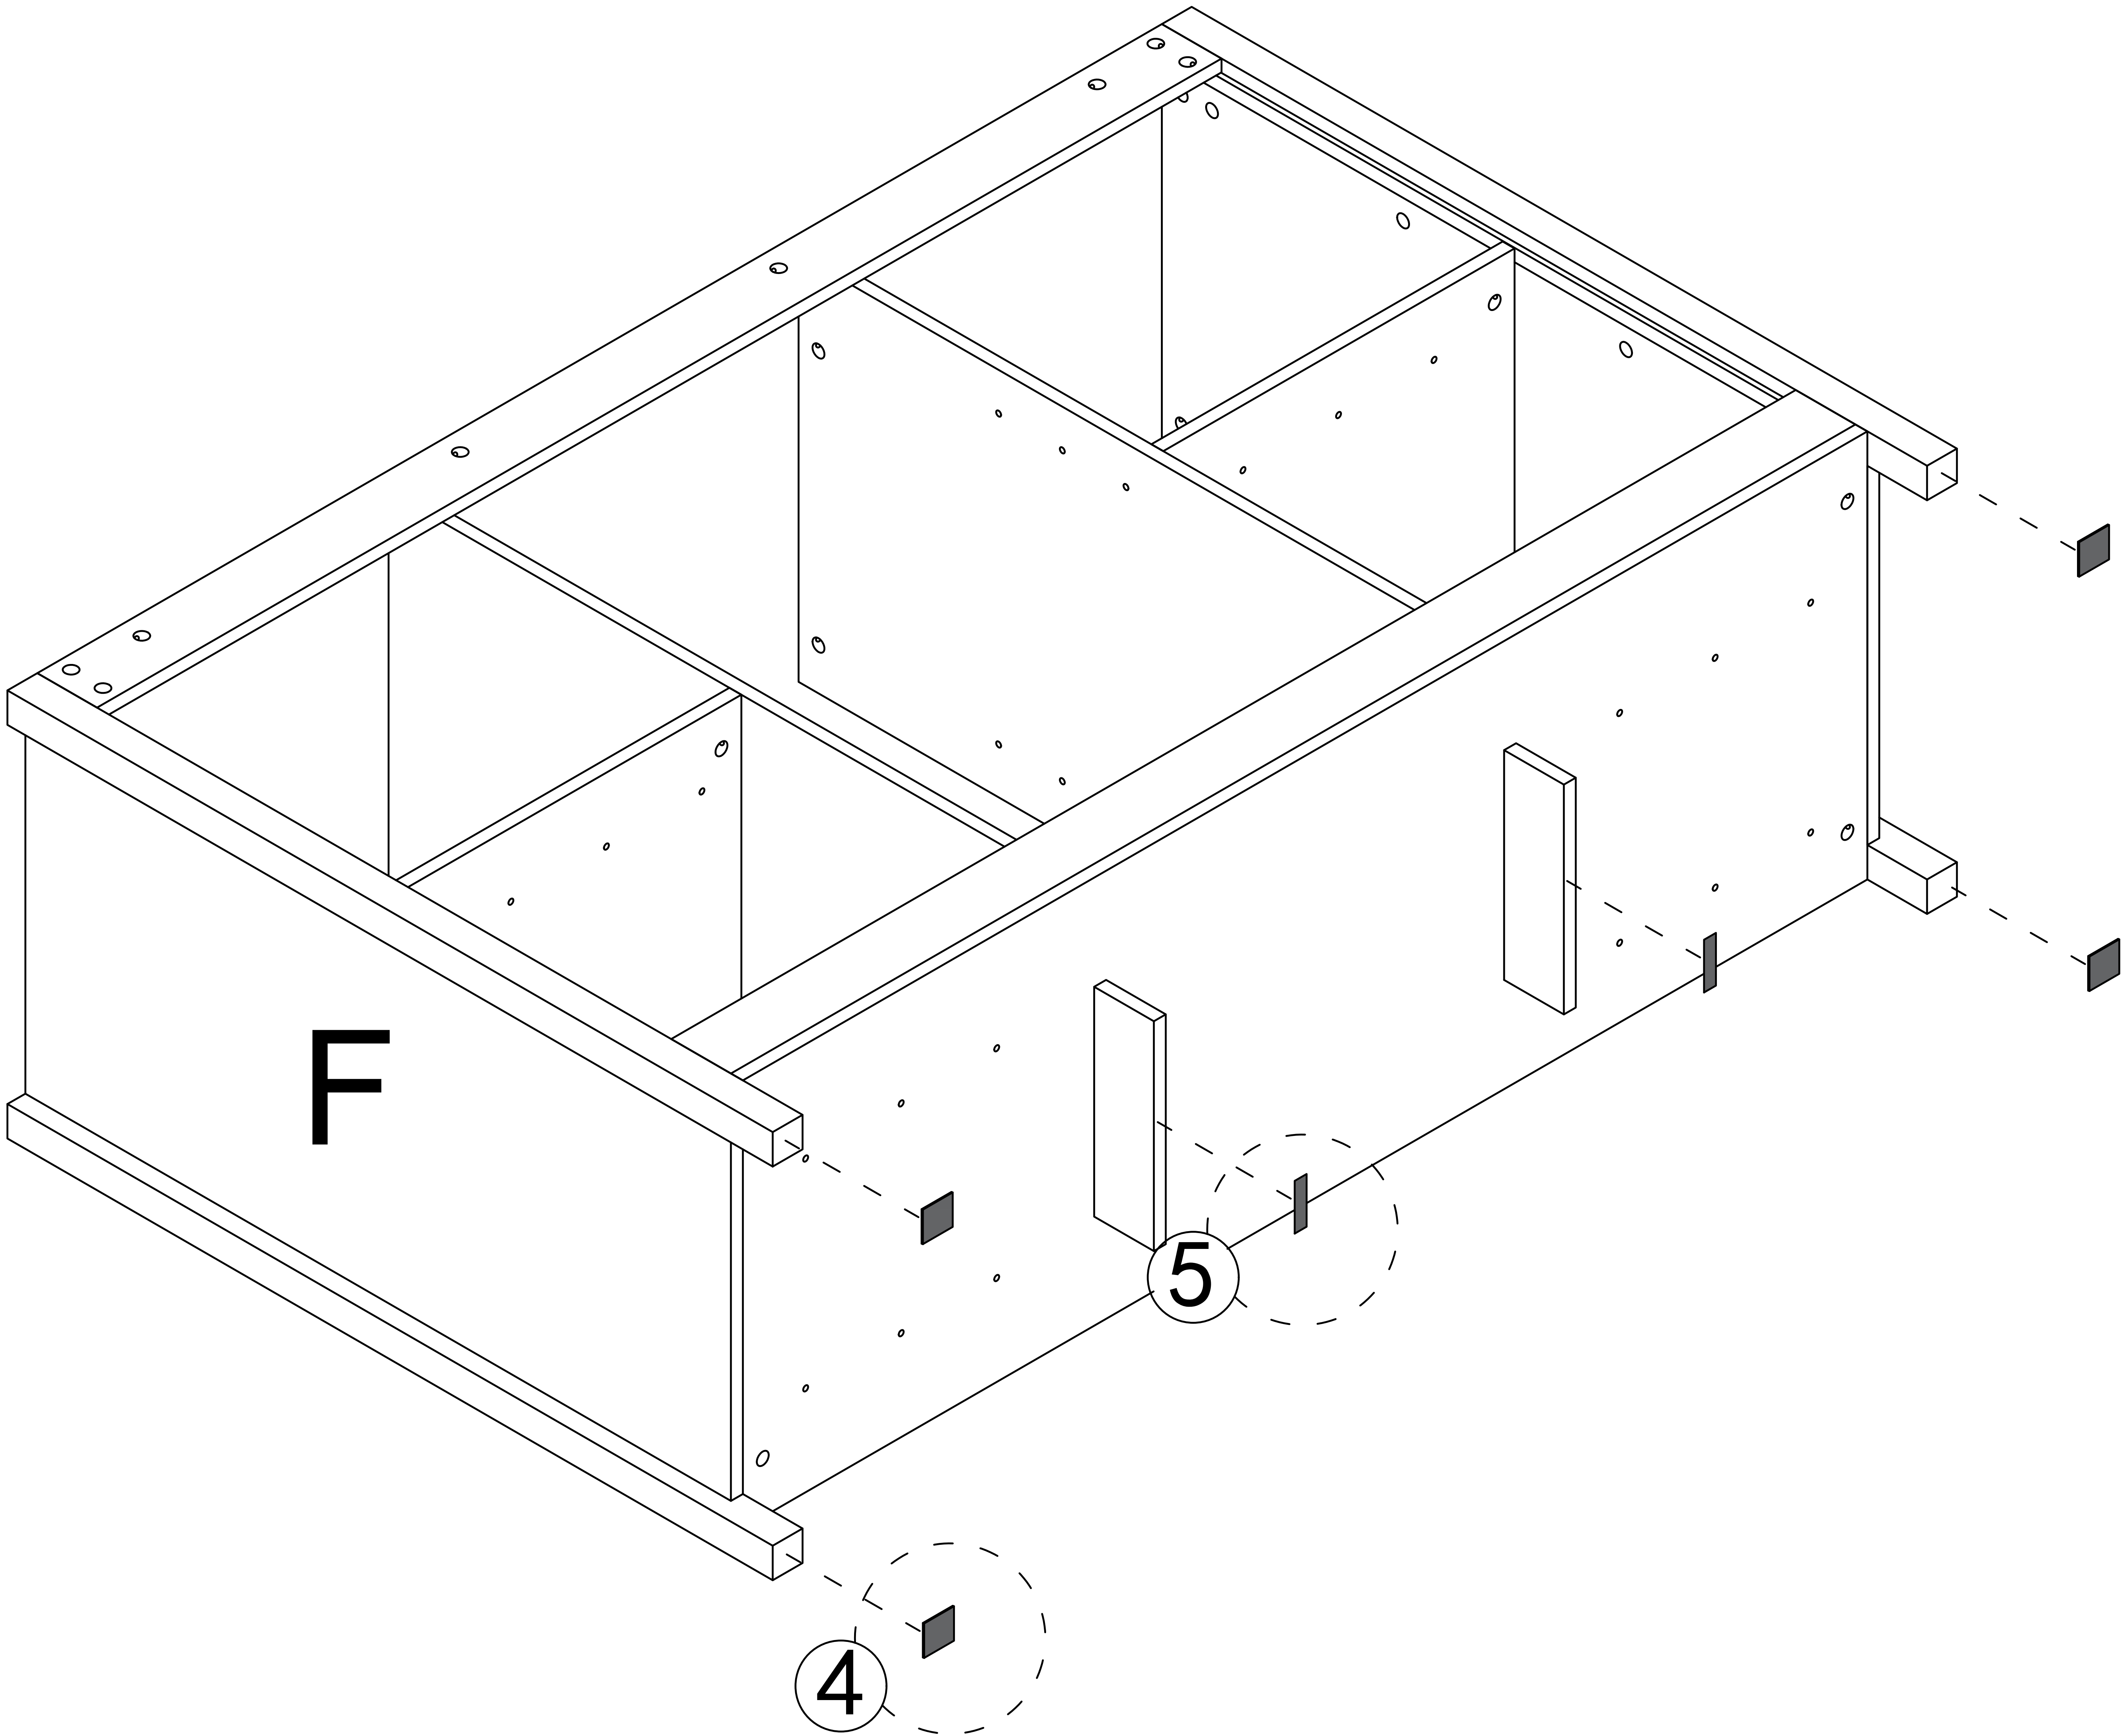


Step 29


6

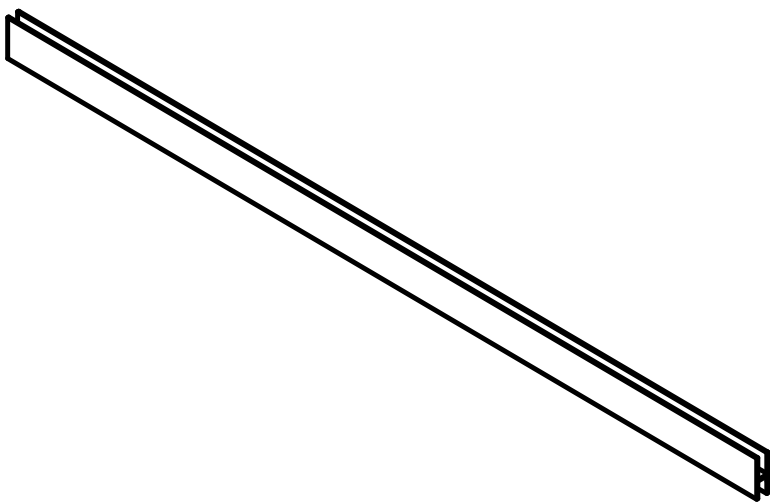

x1

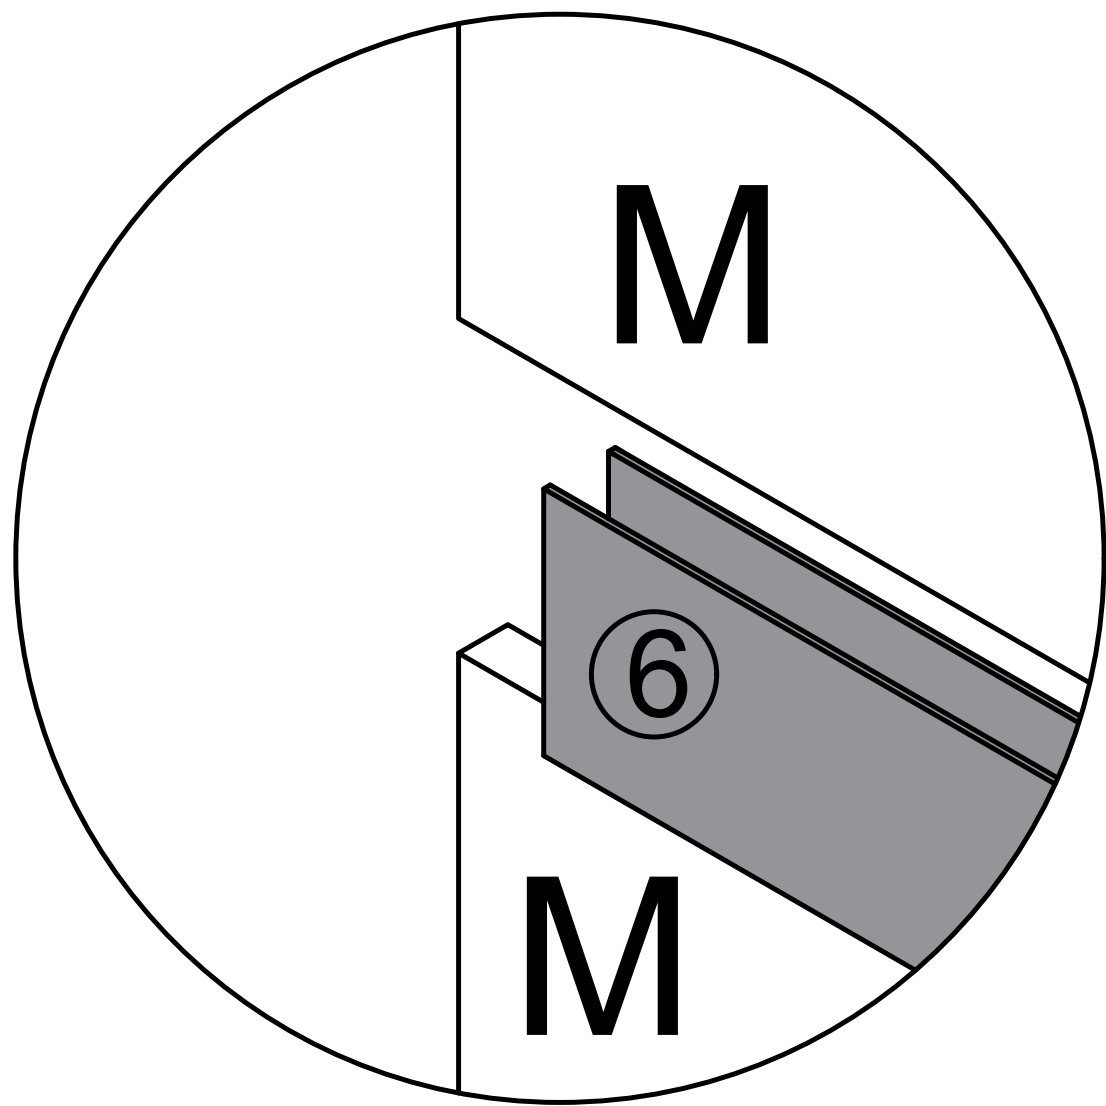

Place the "M" board, Backboard card strip, and "M" board in order

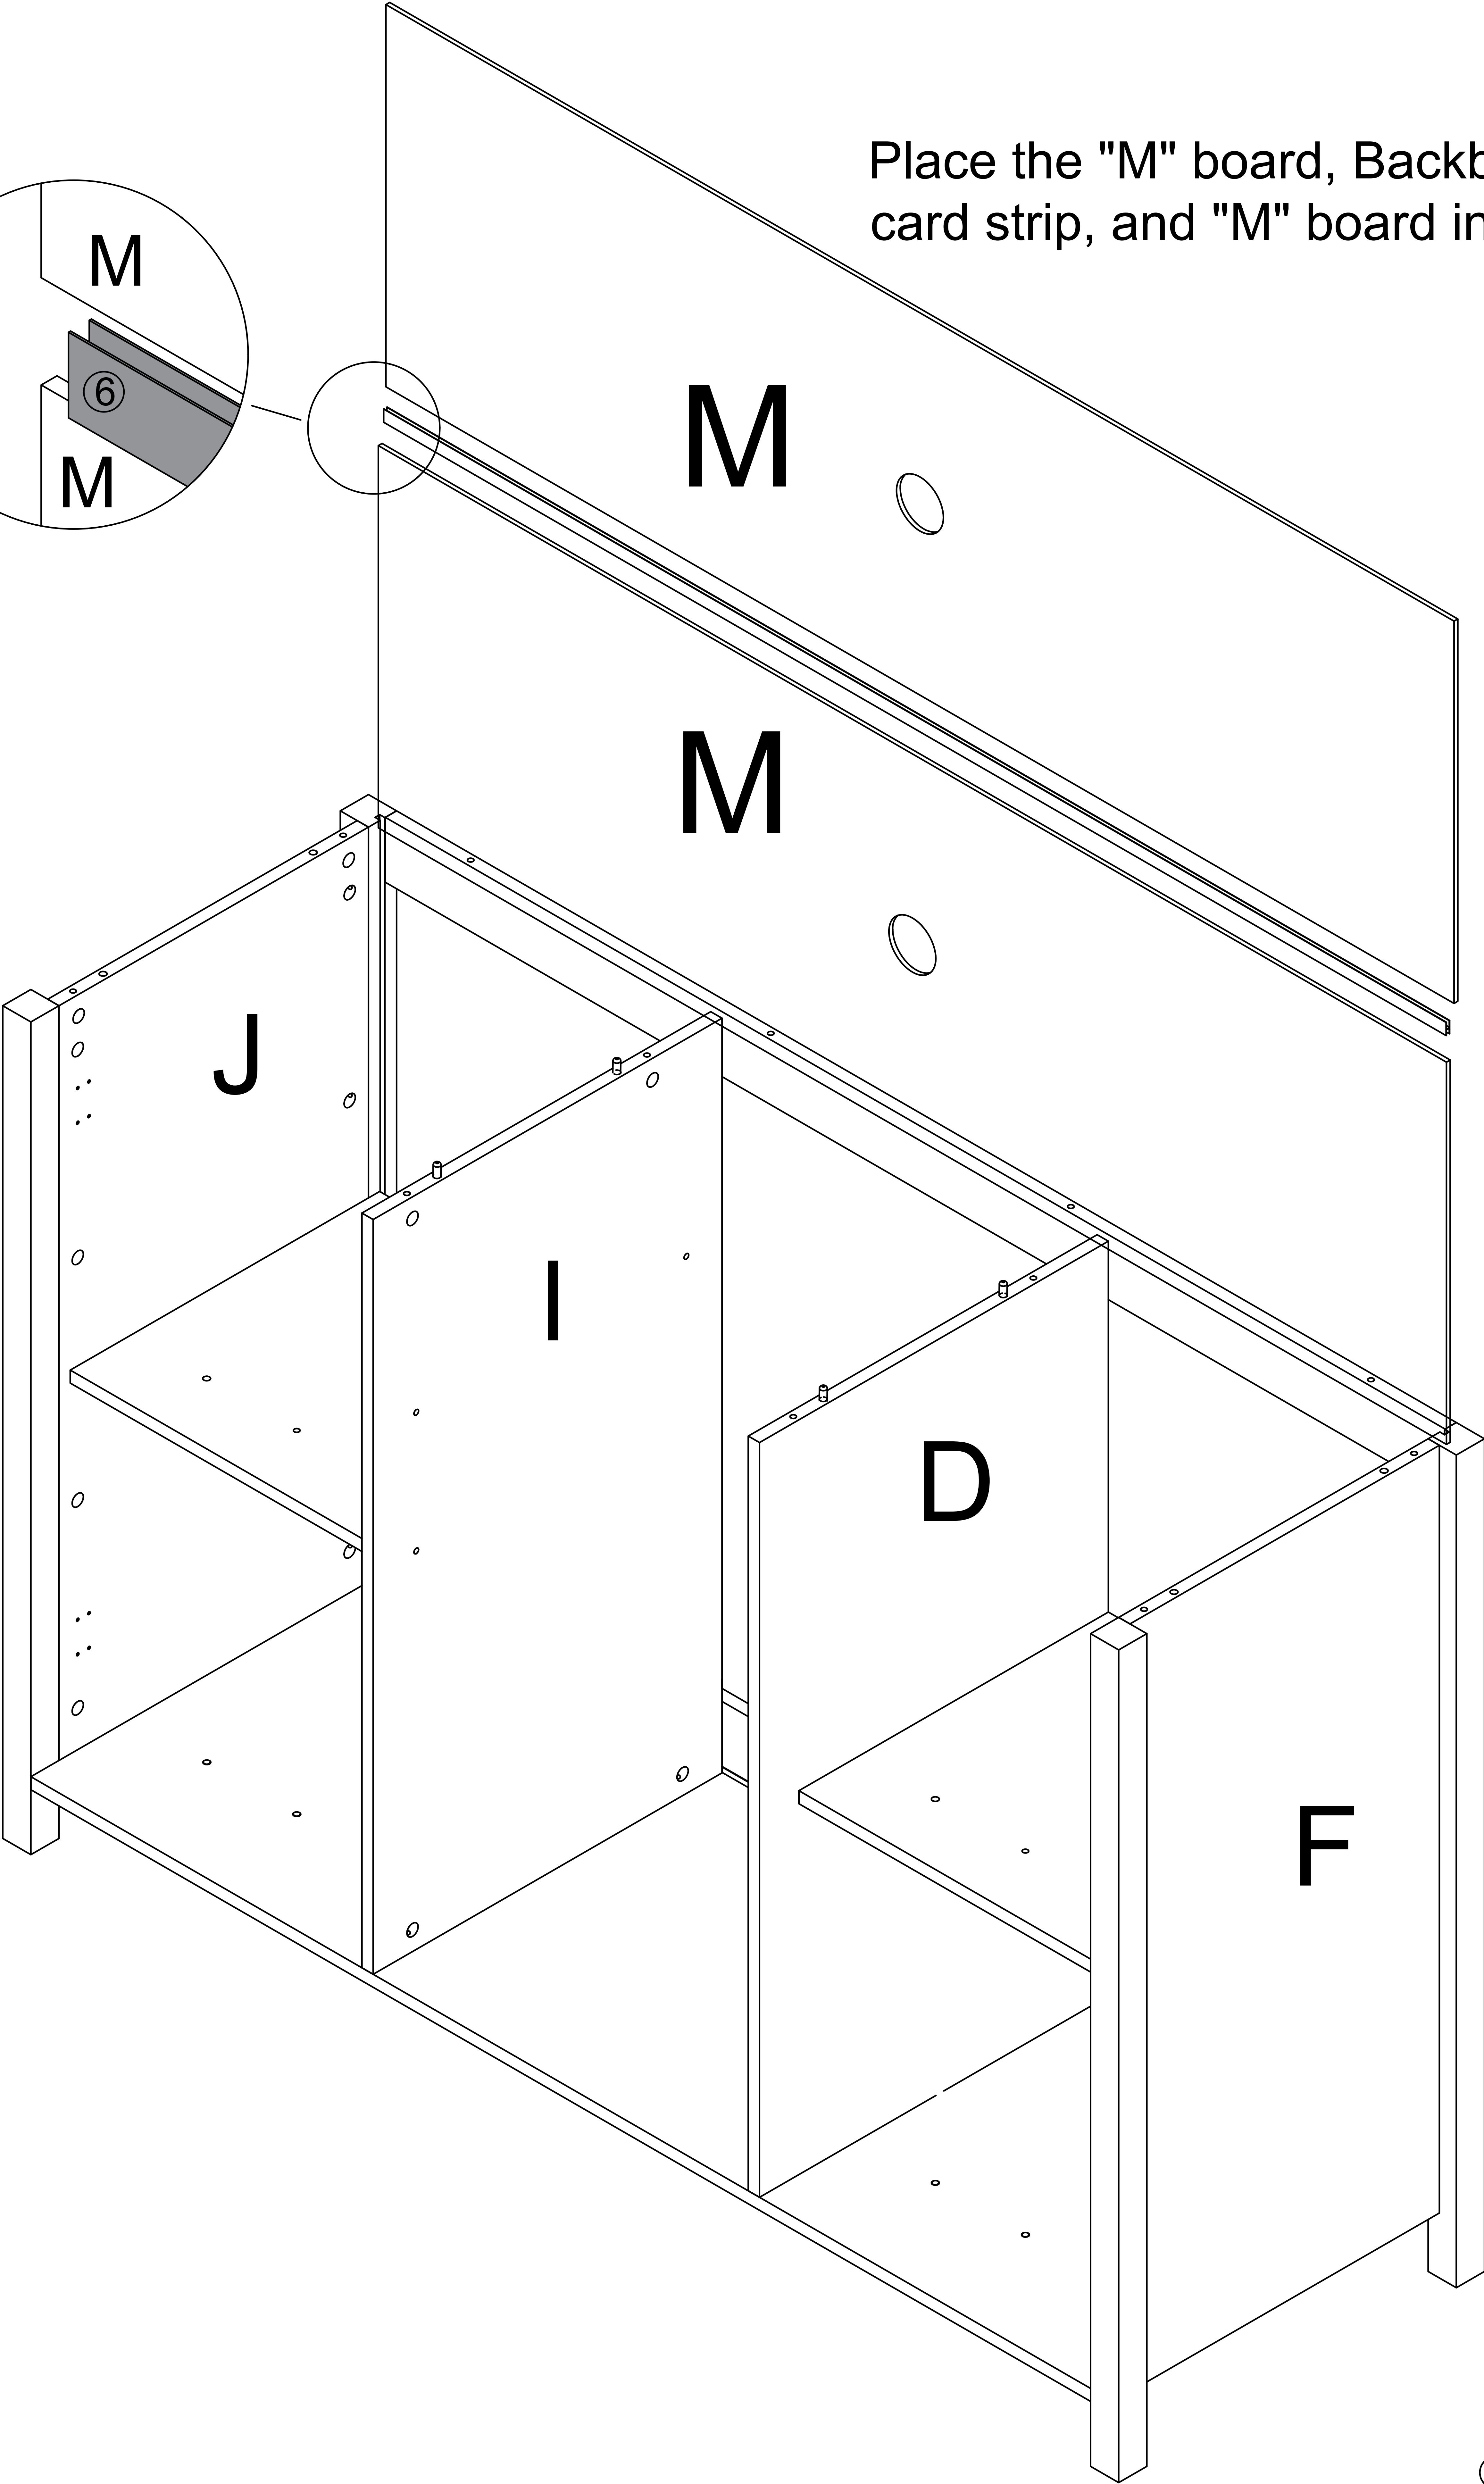


Step 30

3





x4

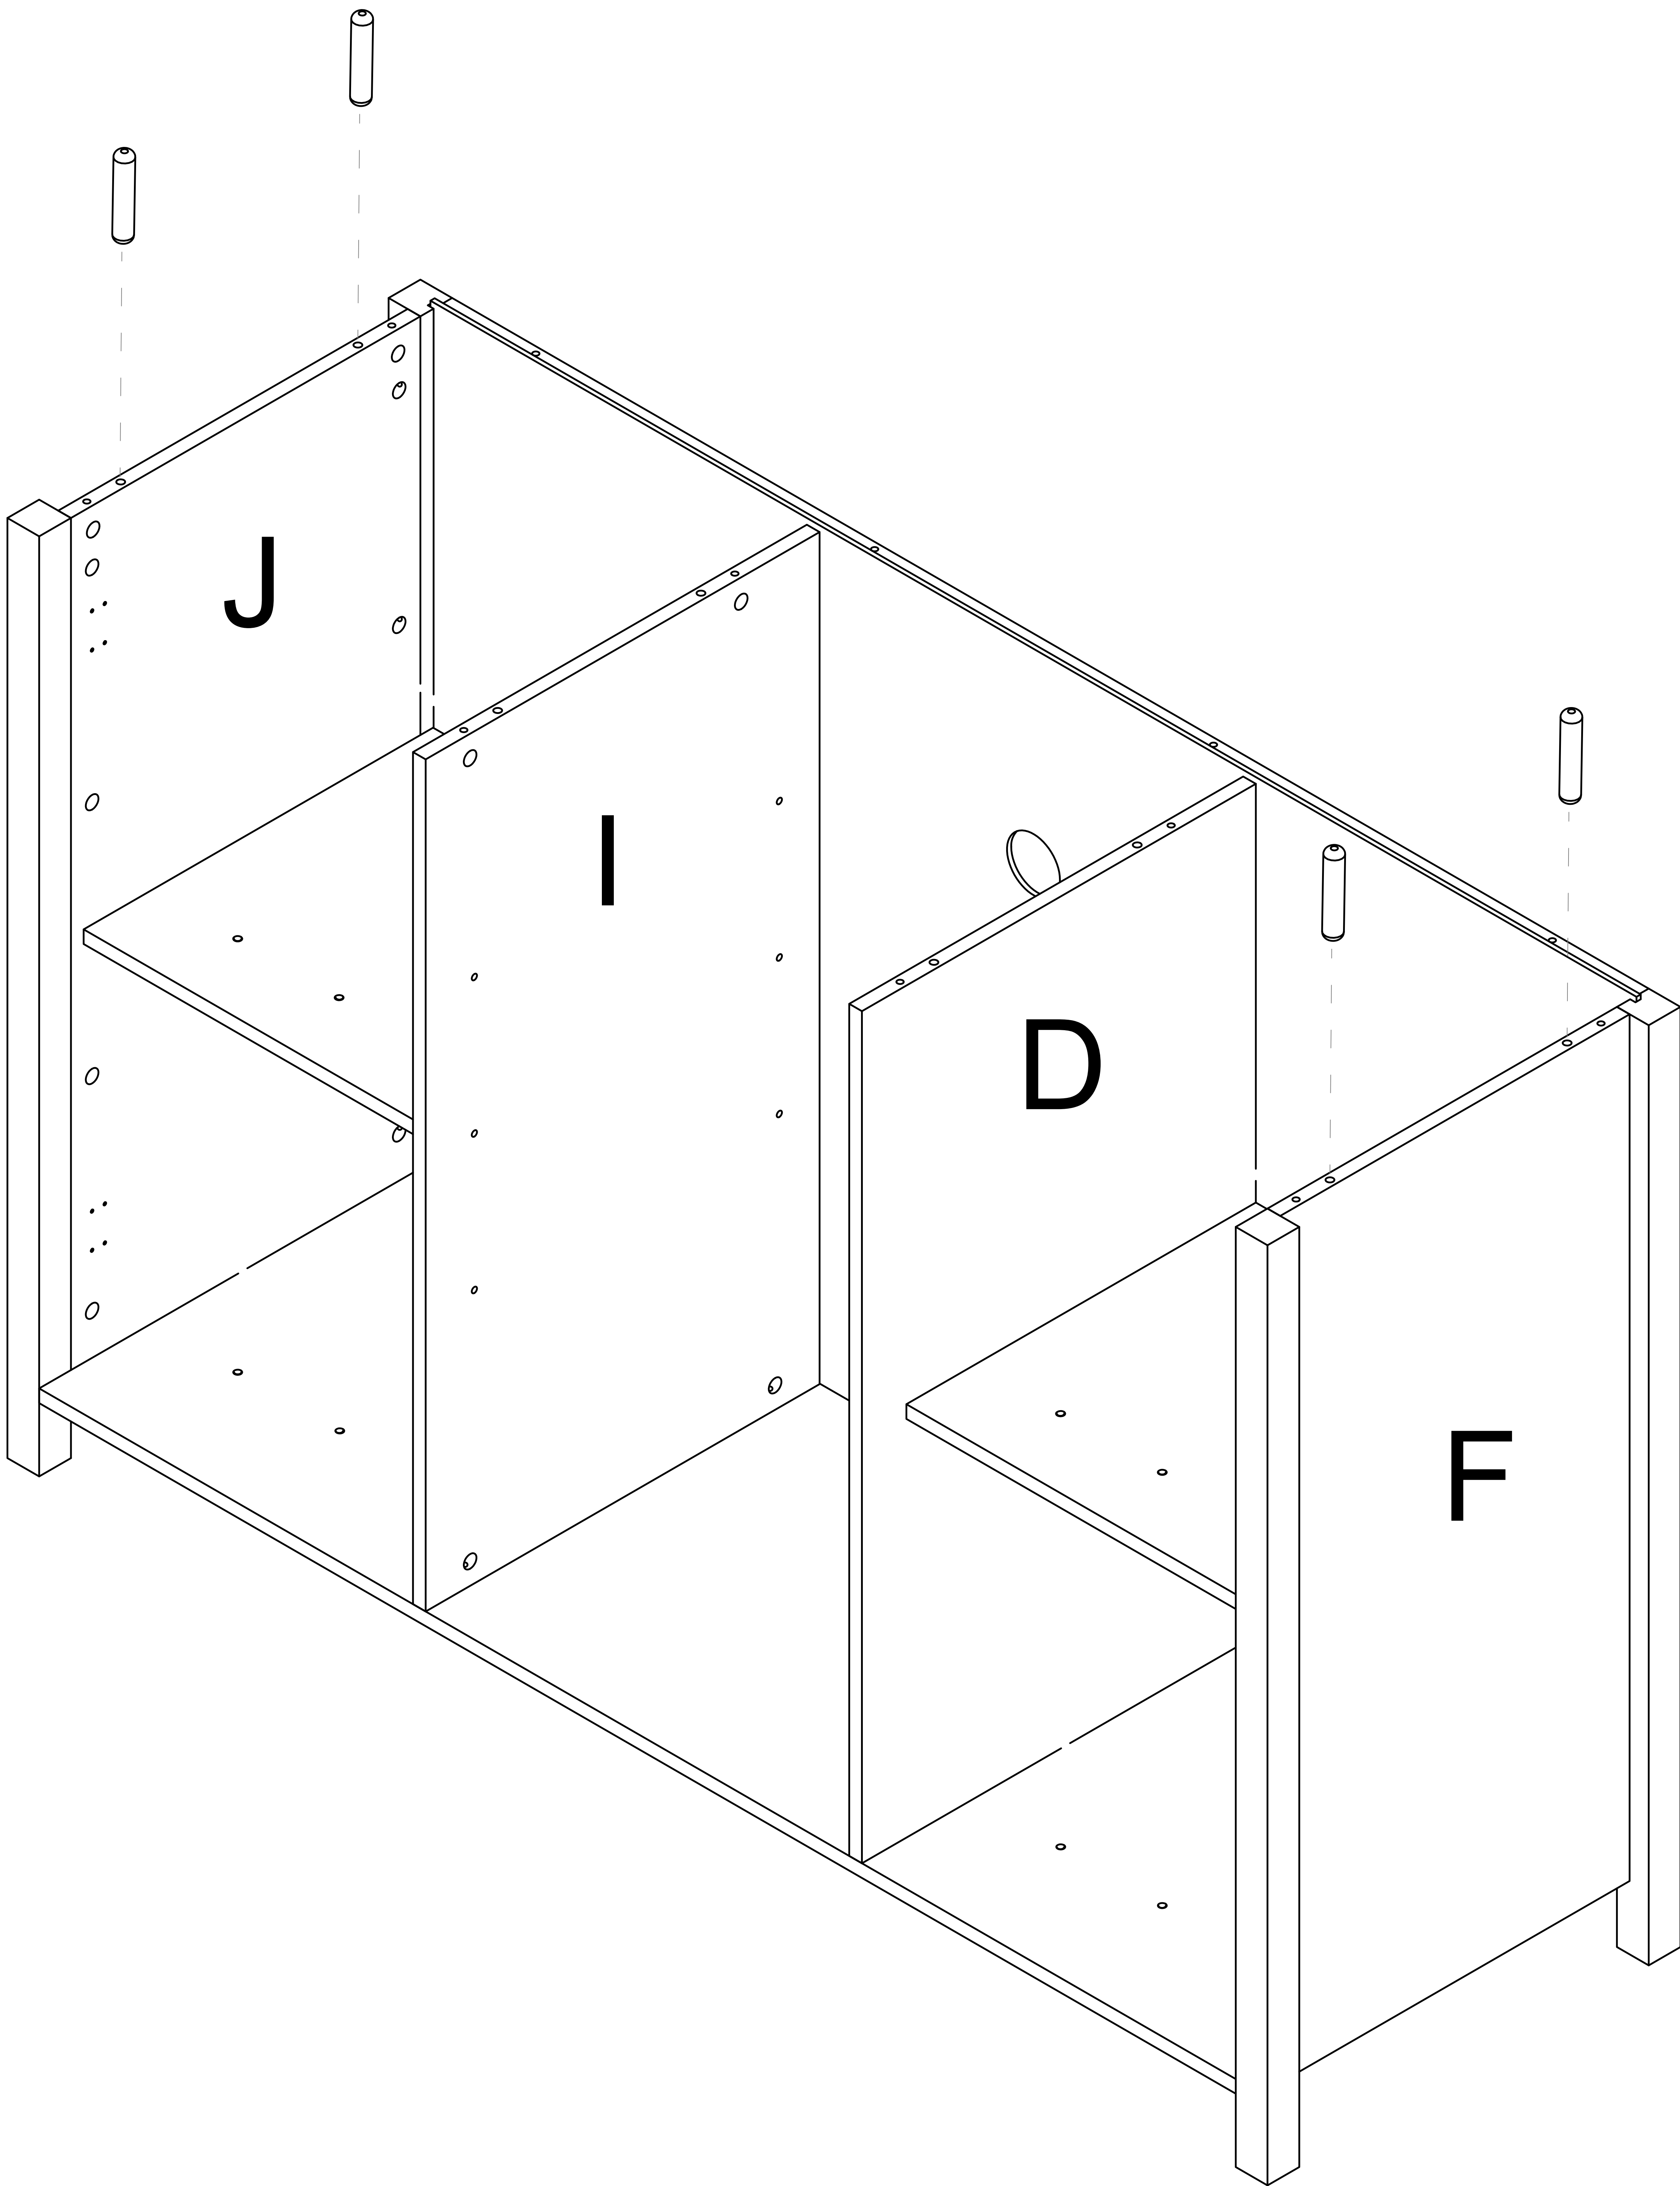

Step 31


1

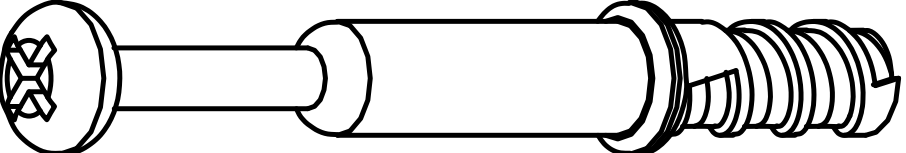

x12

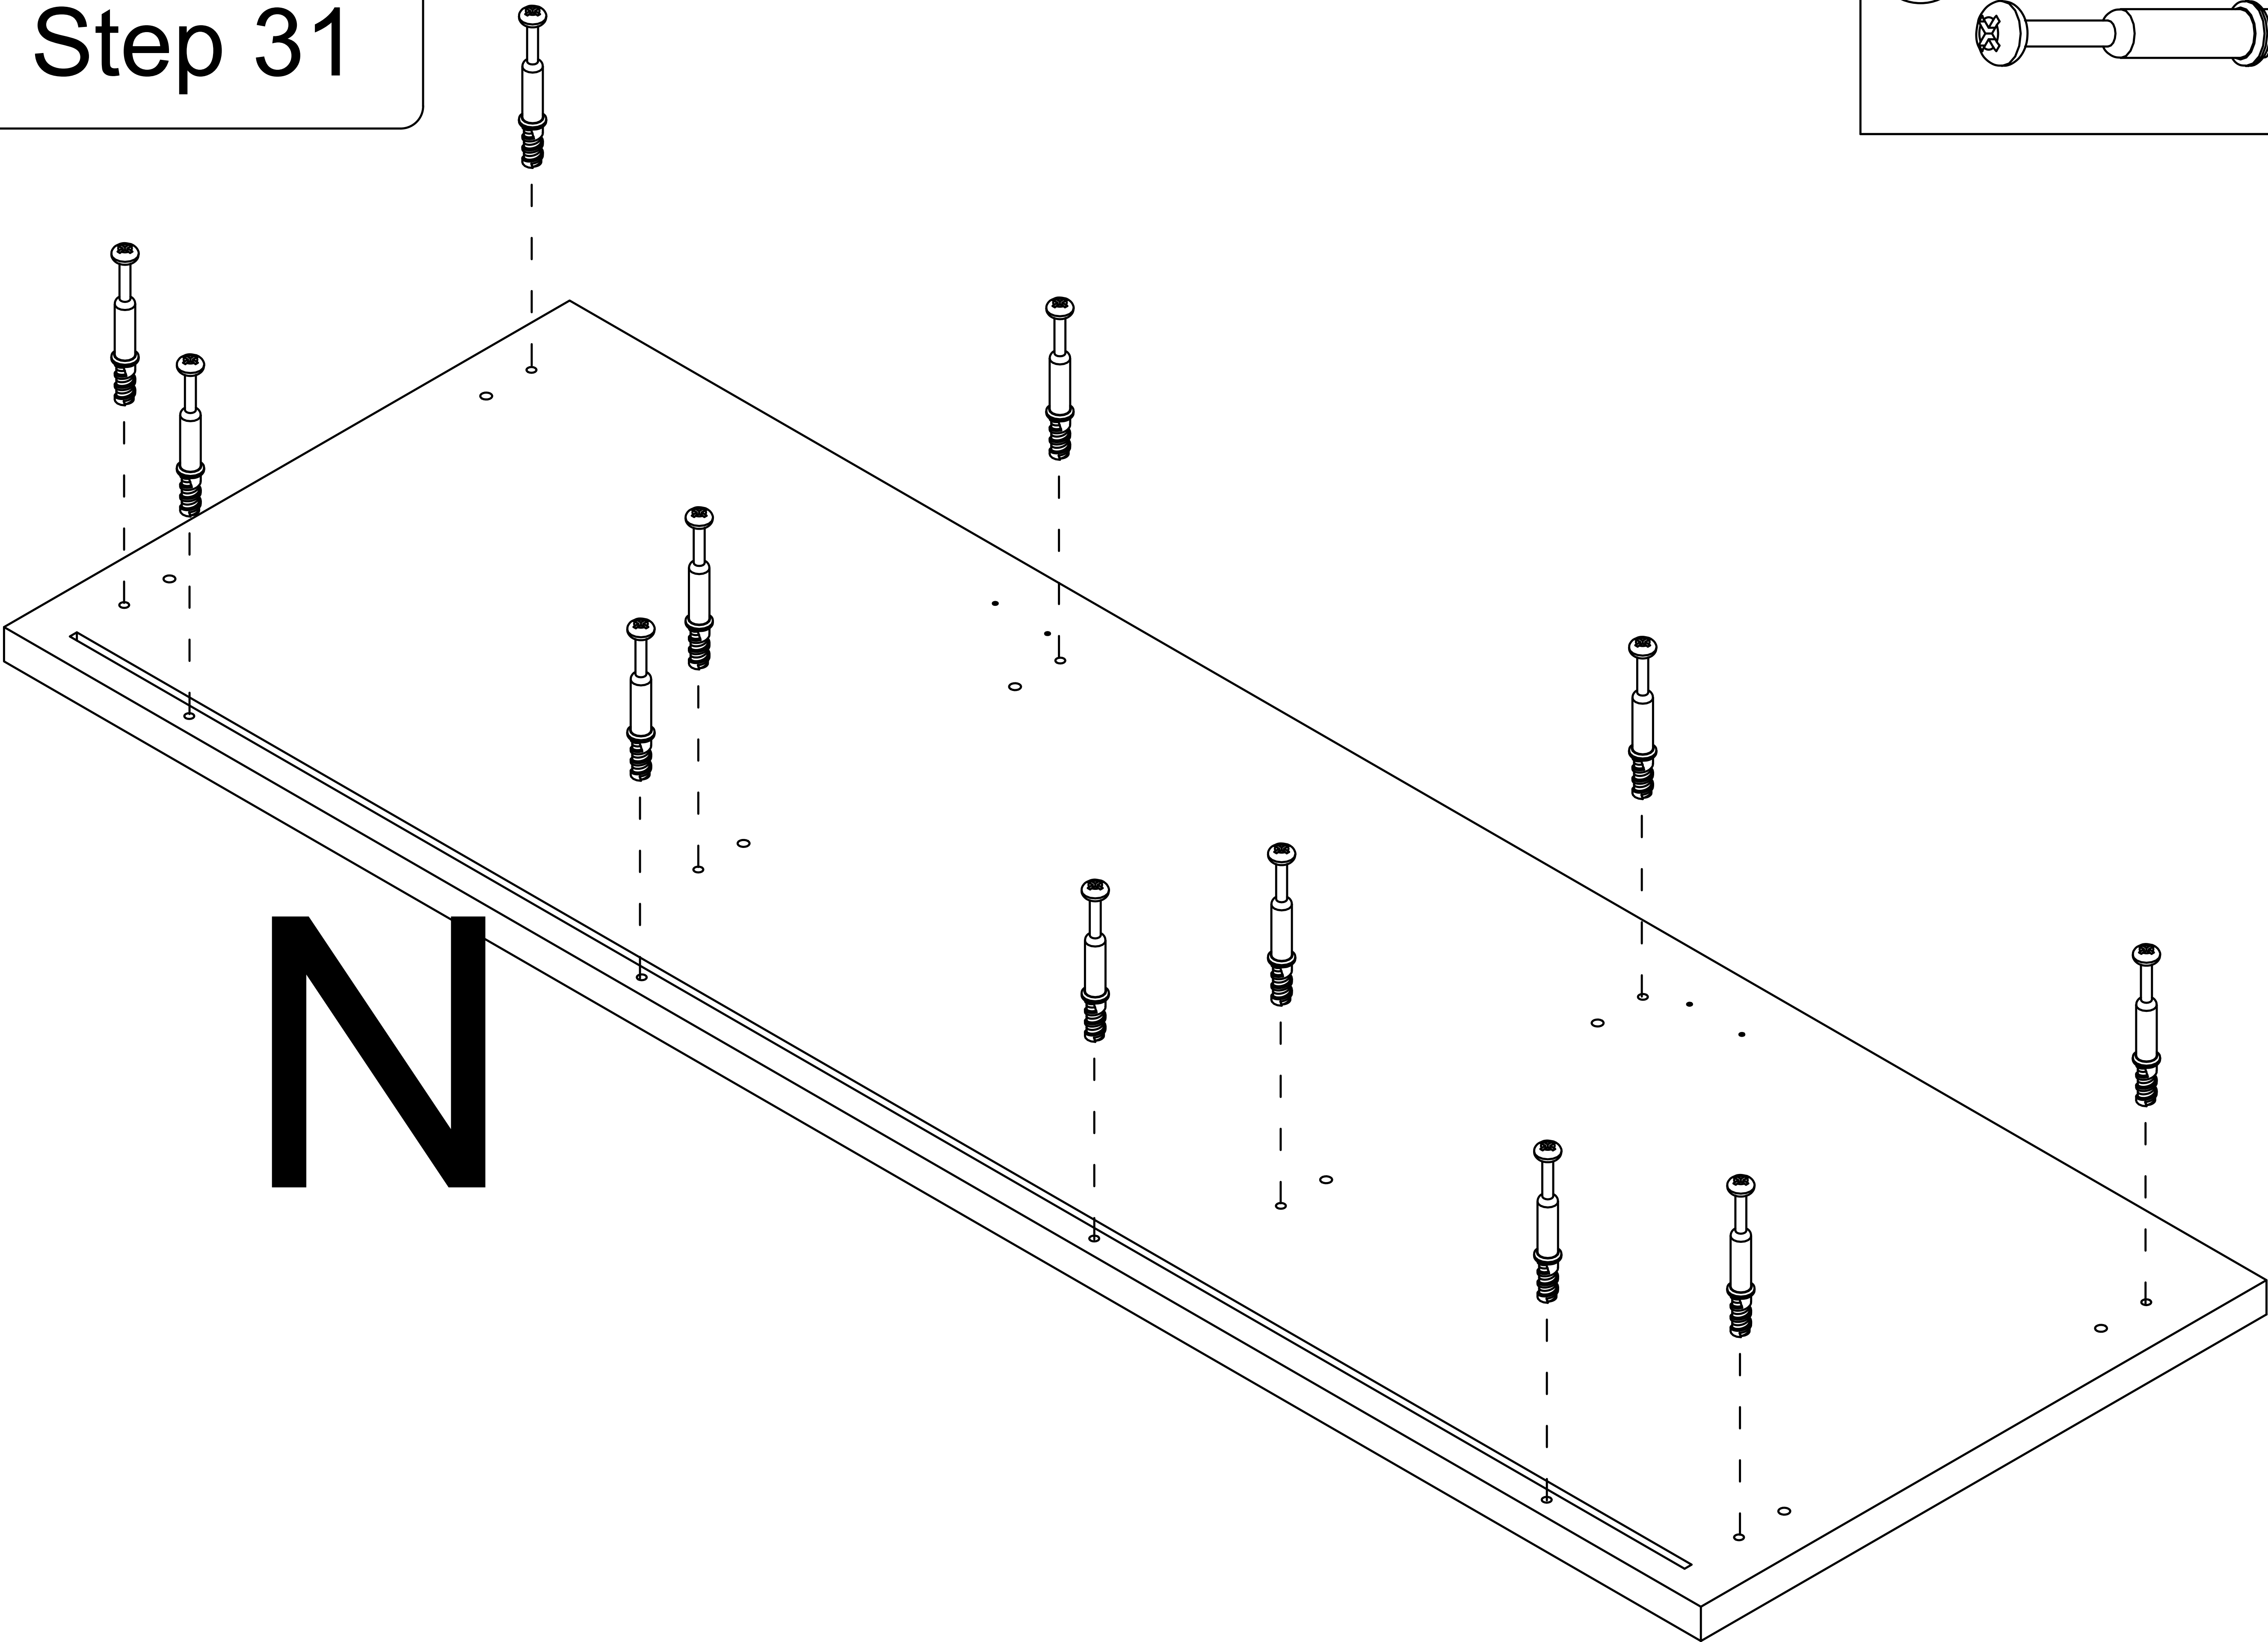


Step 32

7

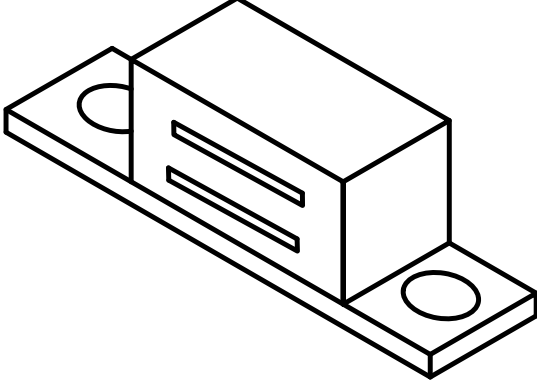

x2

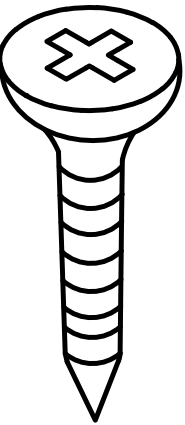
x4

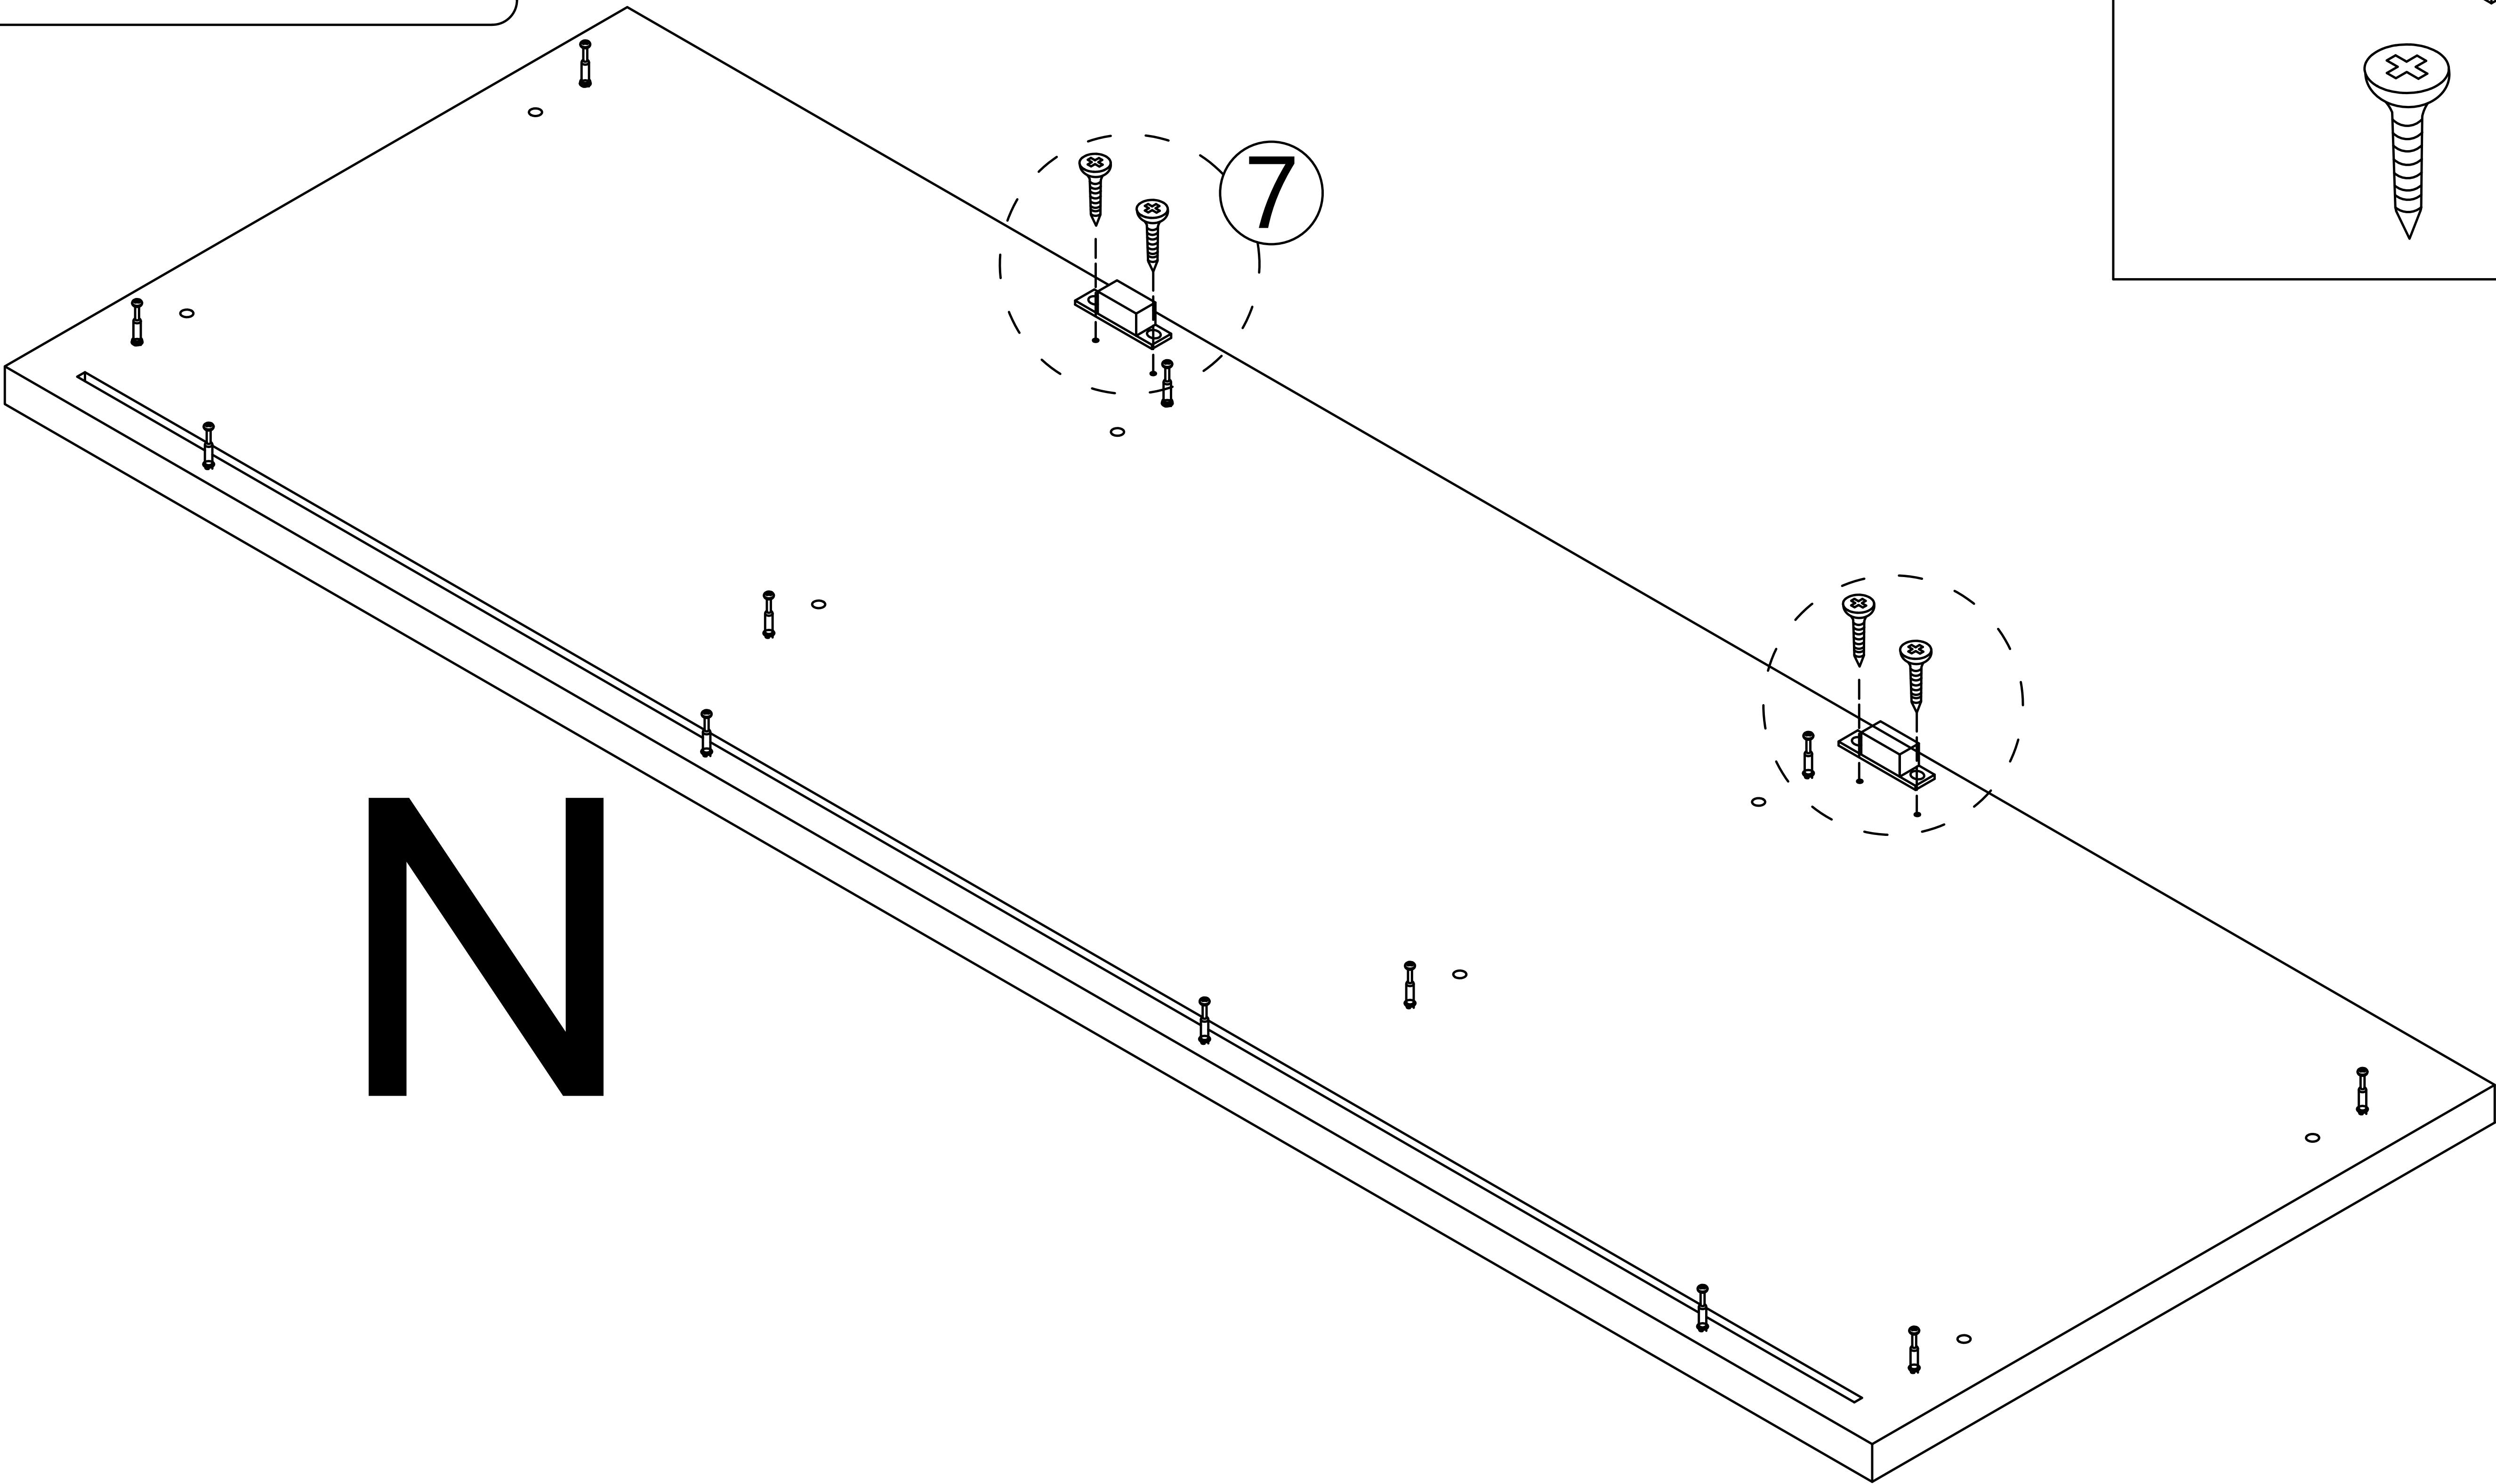


Step 33

2

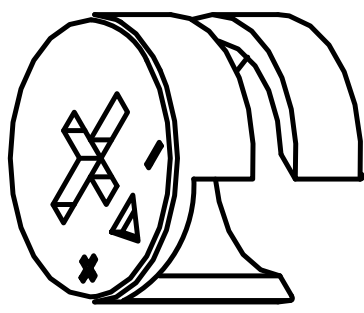


x 12


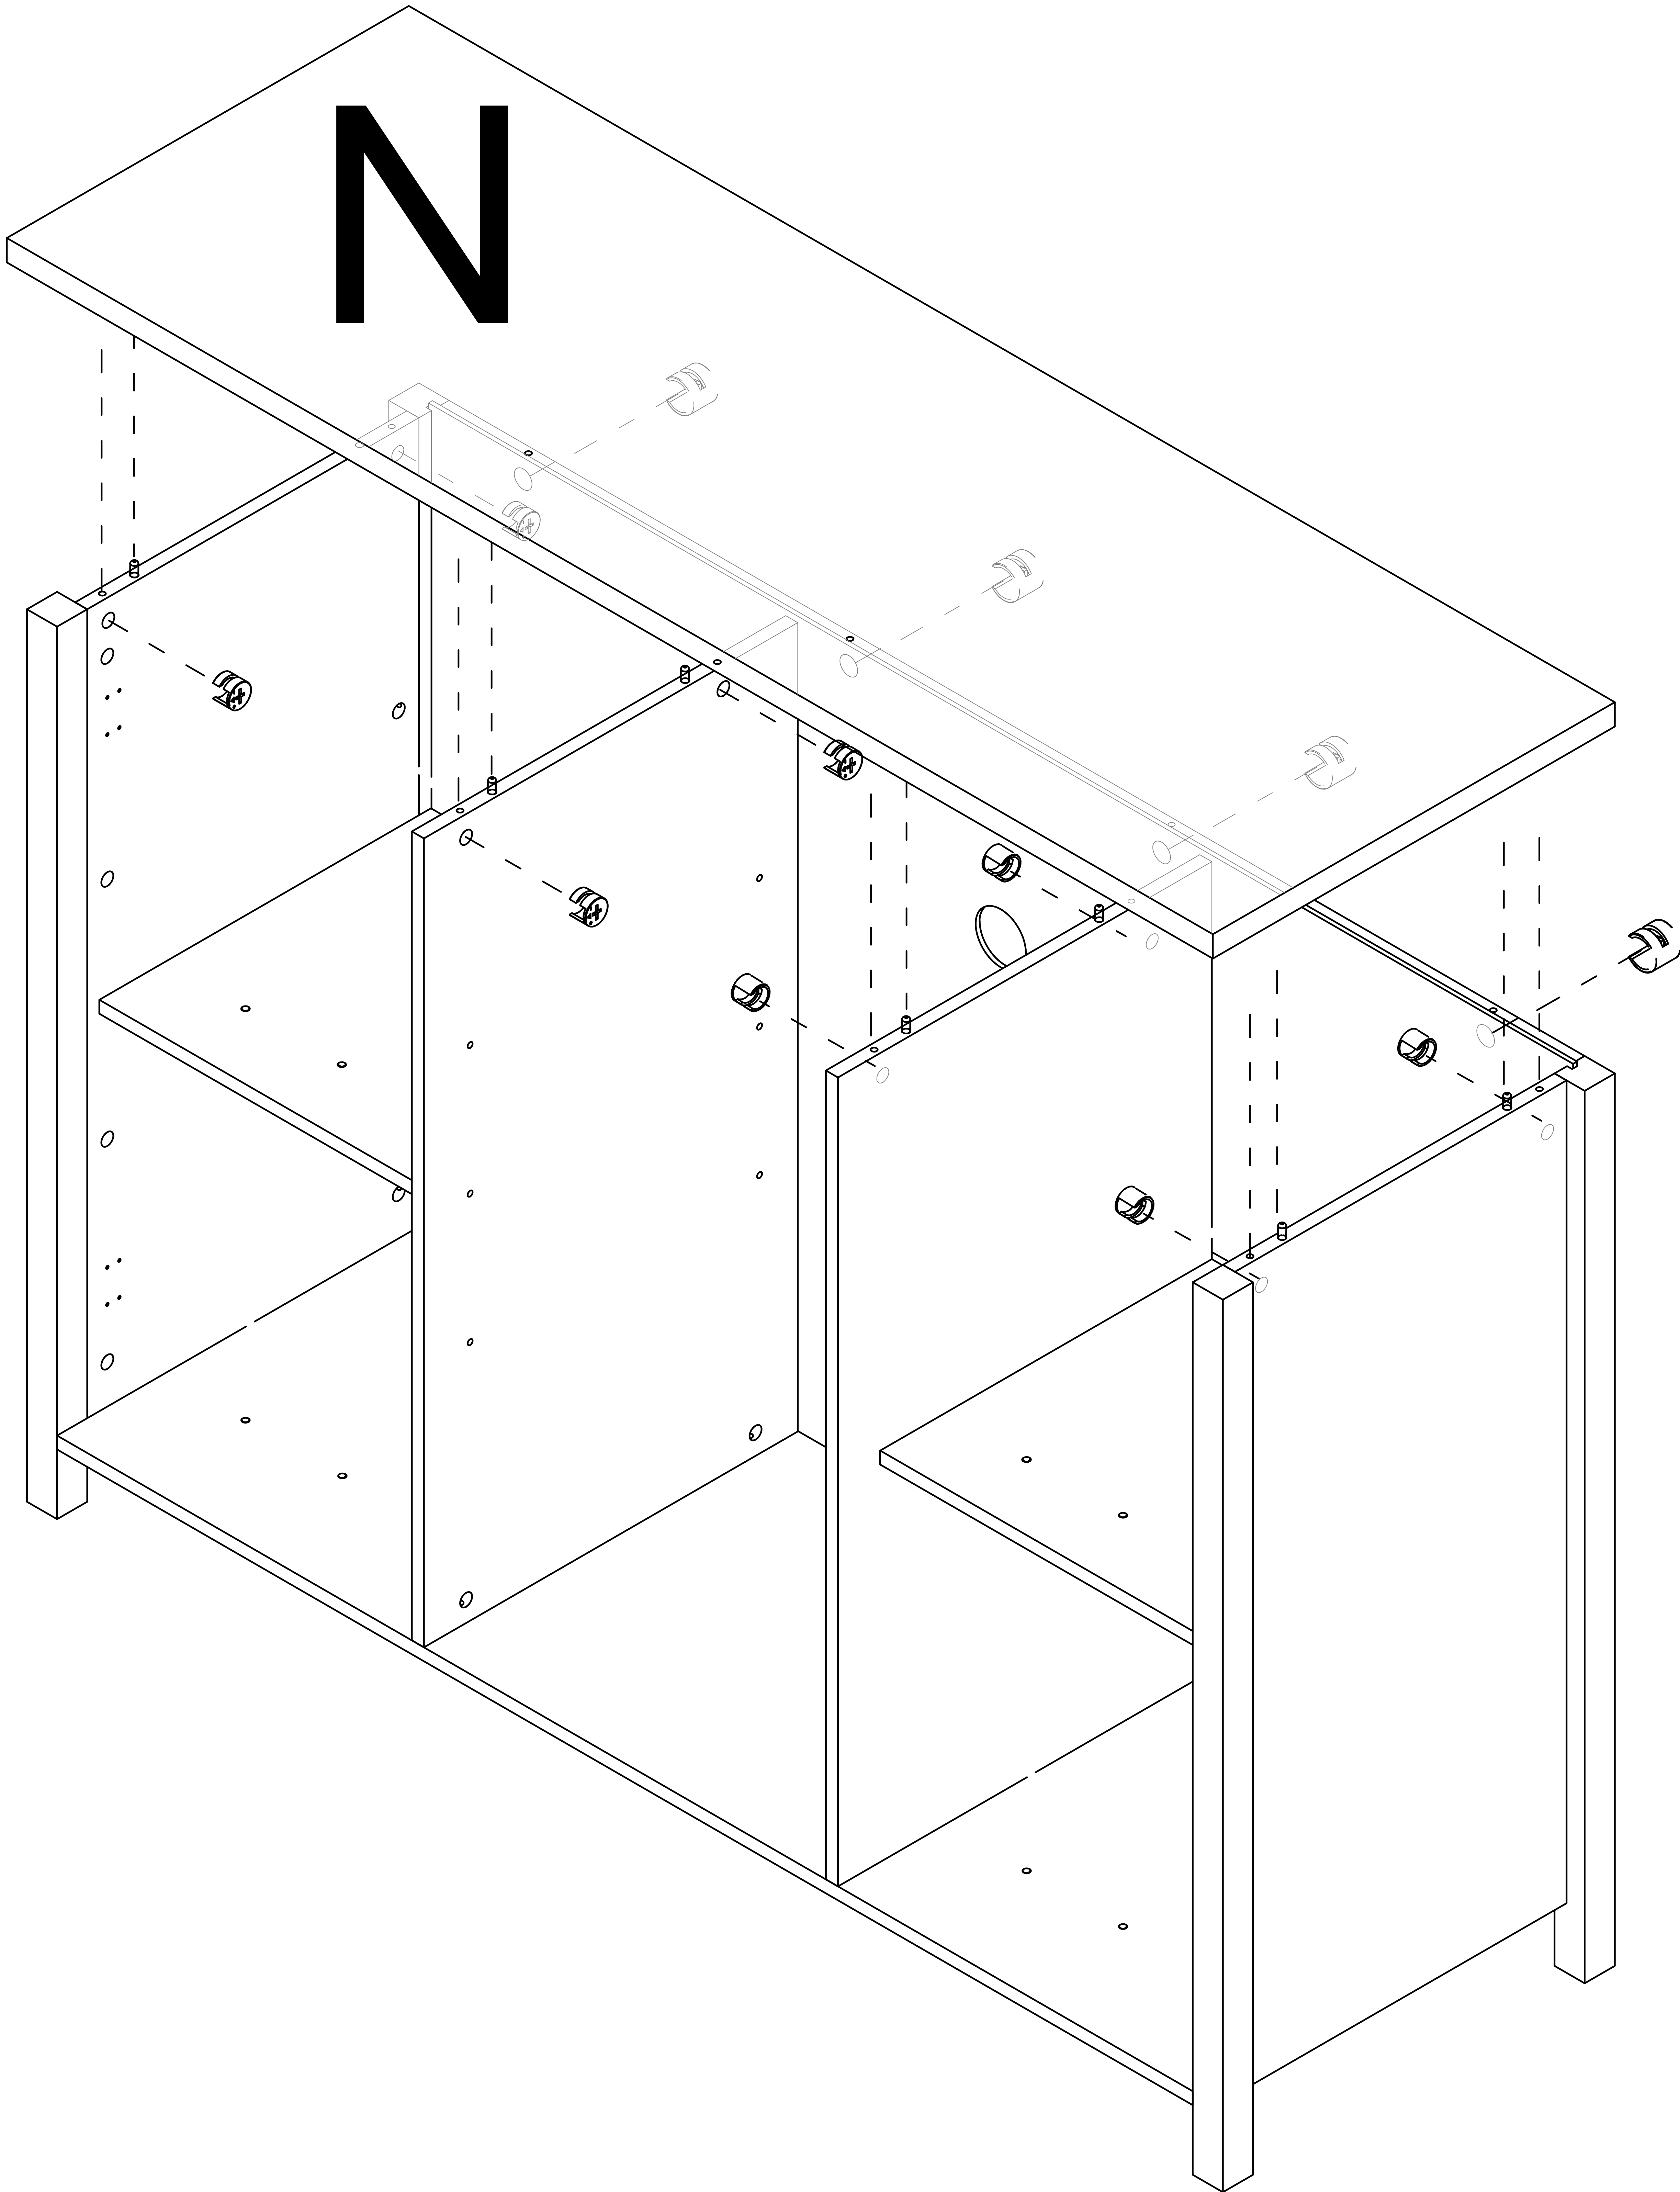


Step 34

8

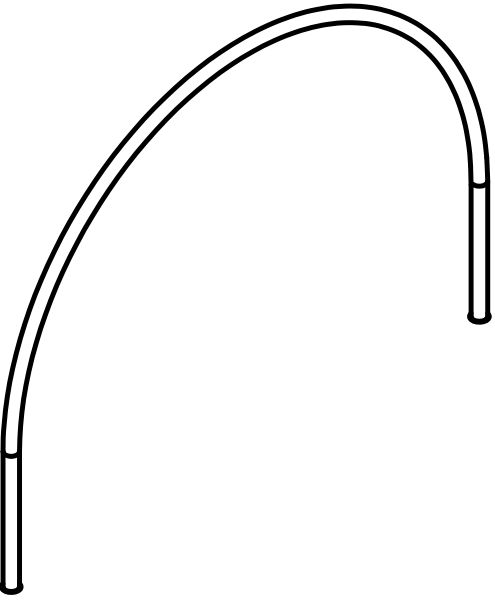


x12

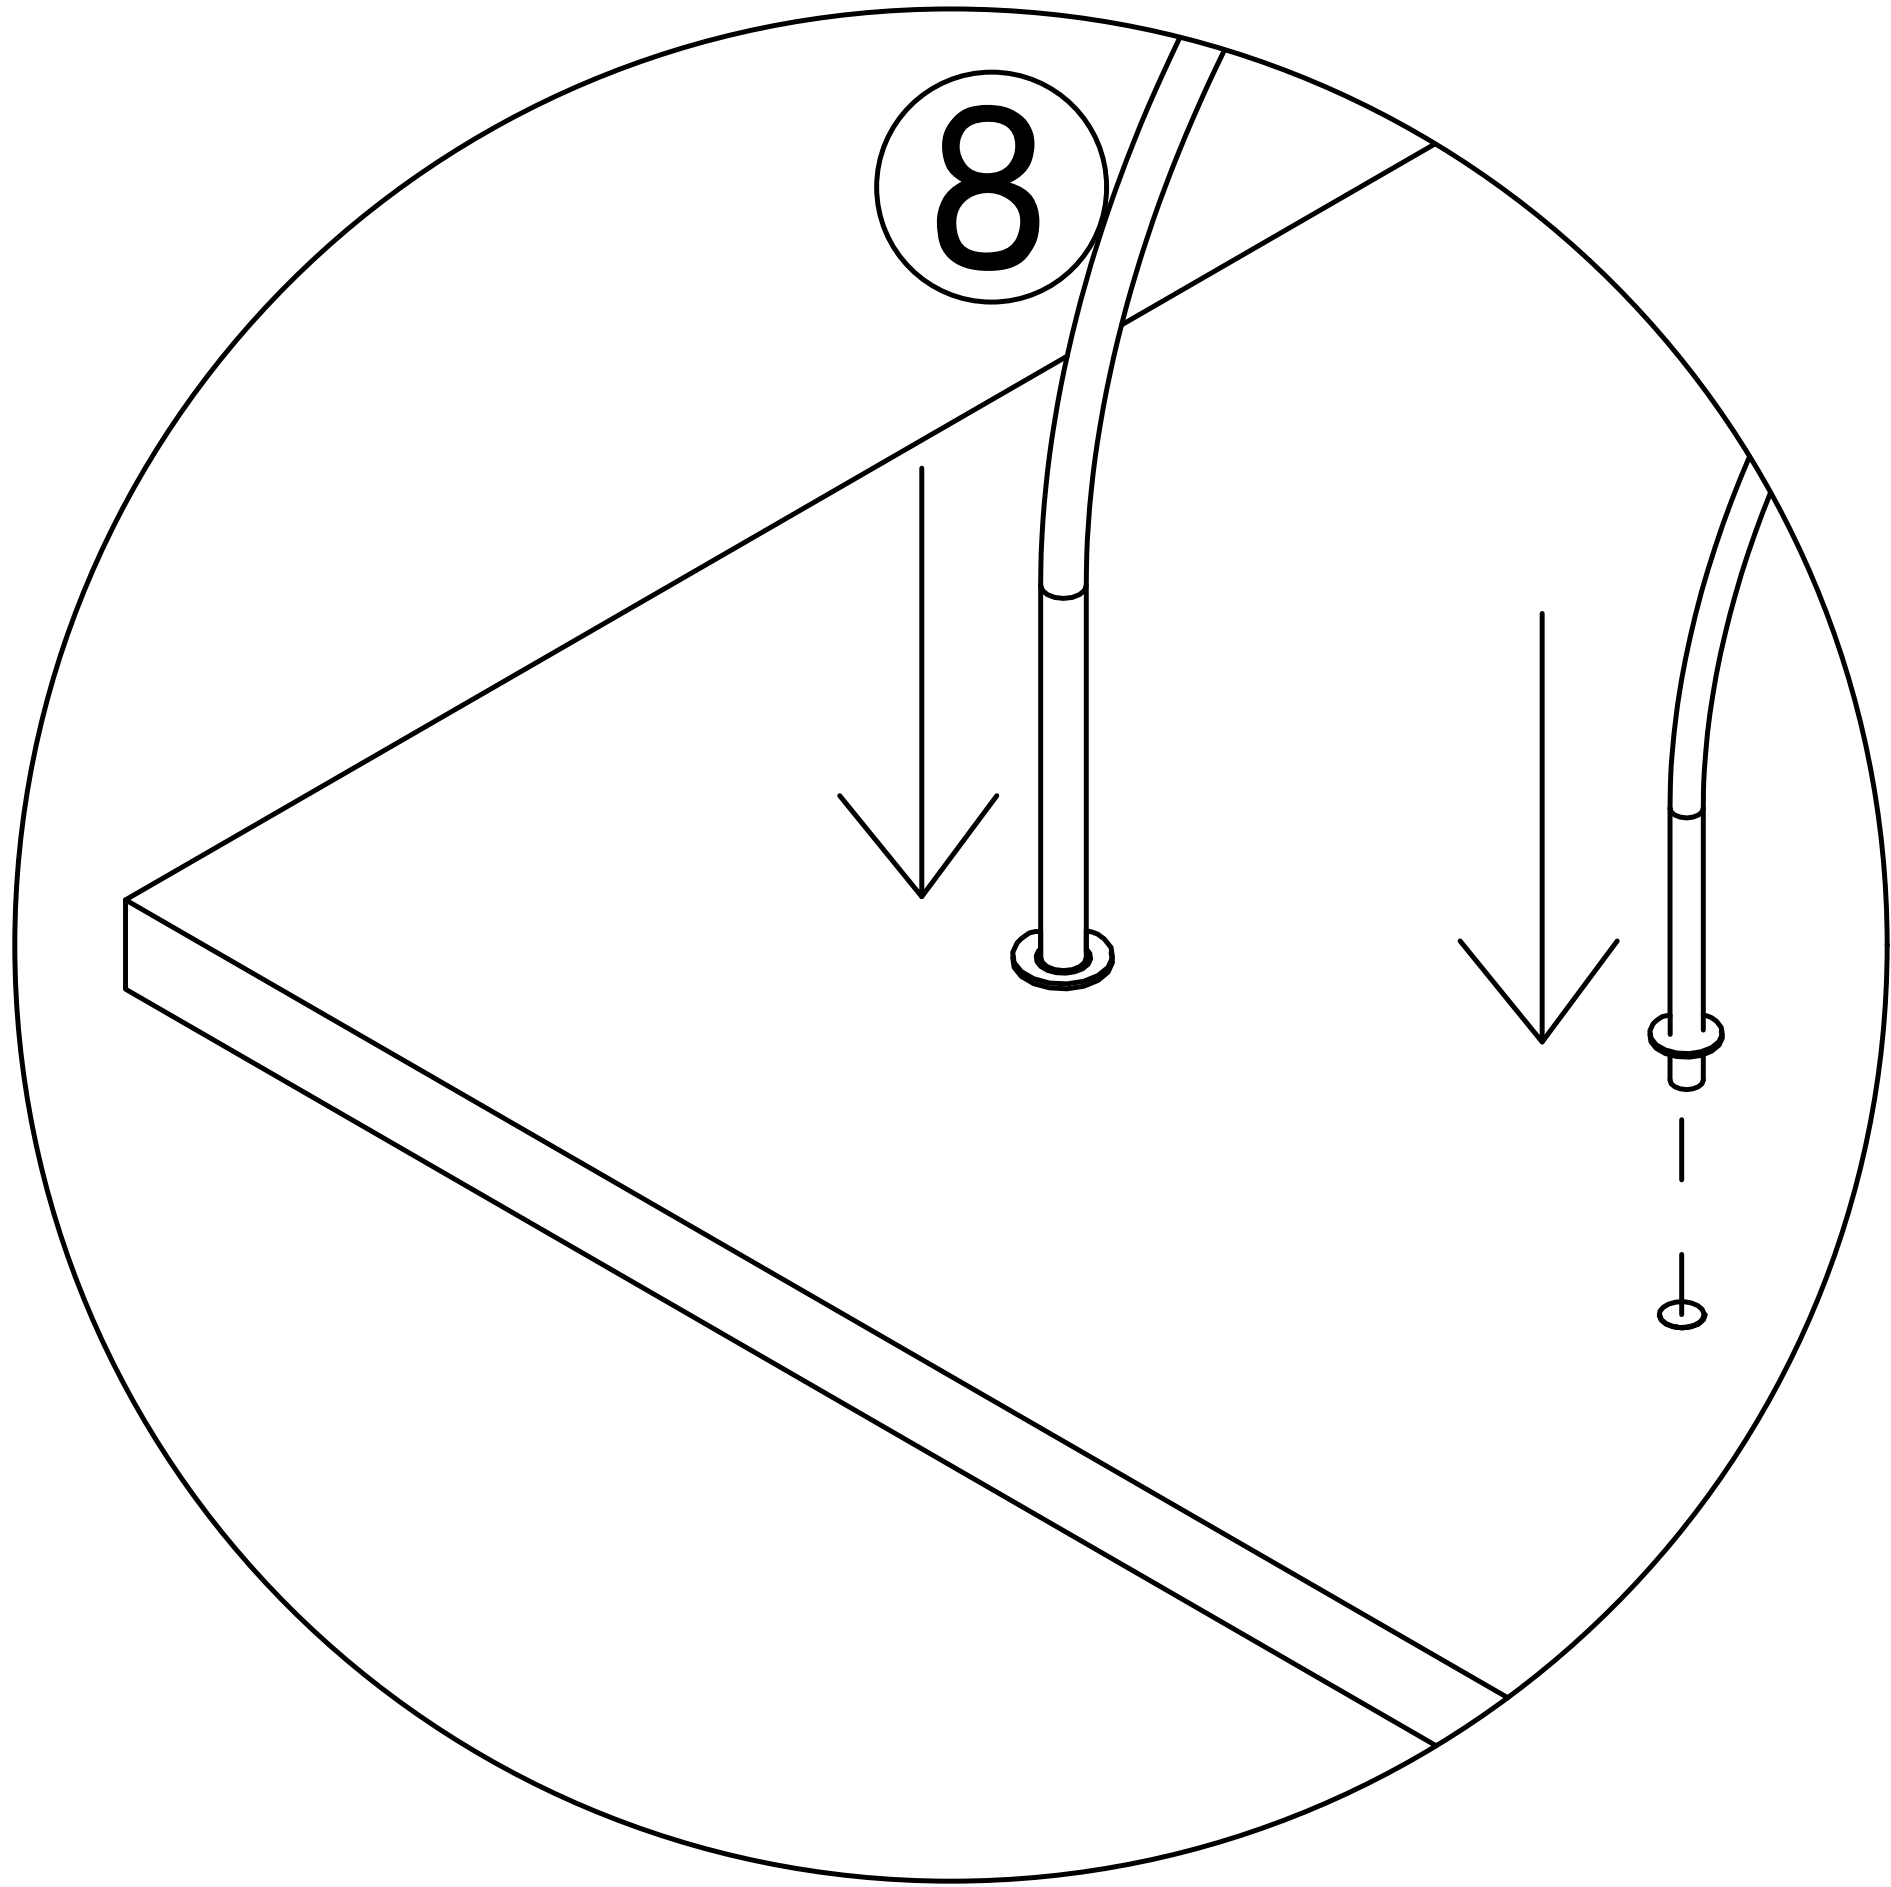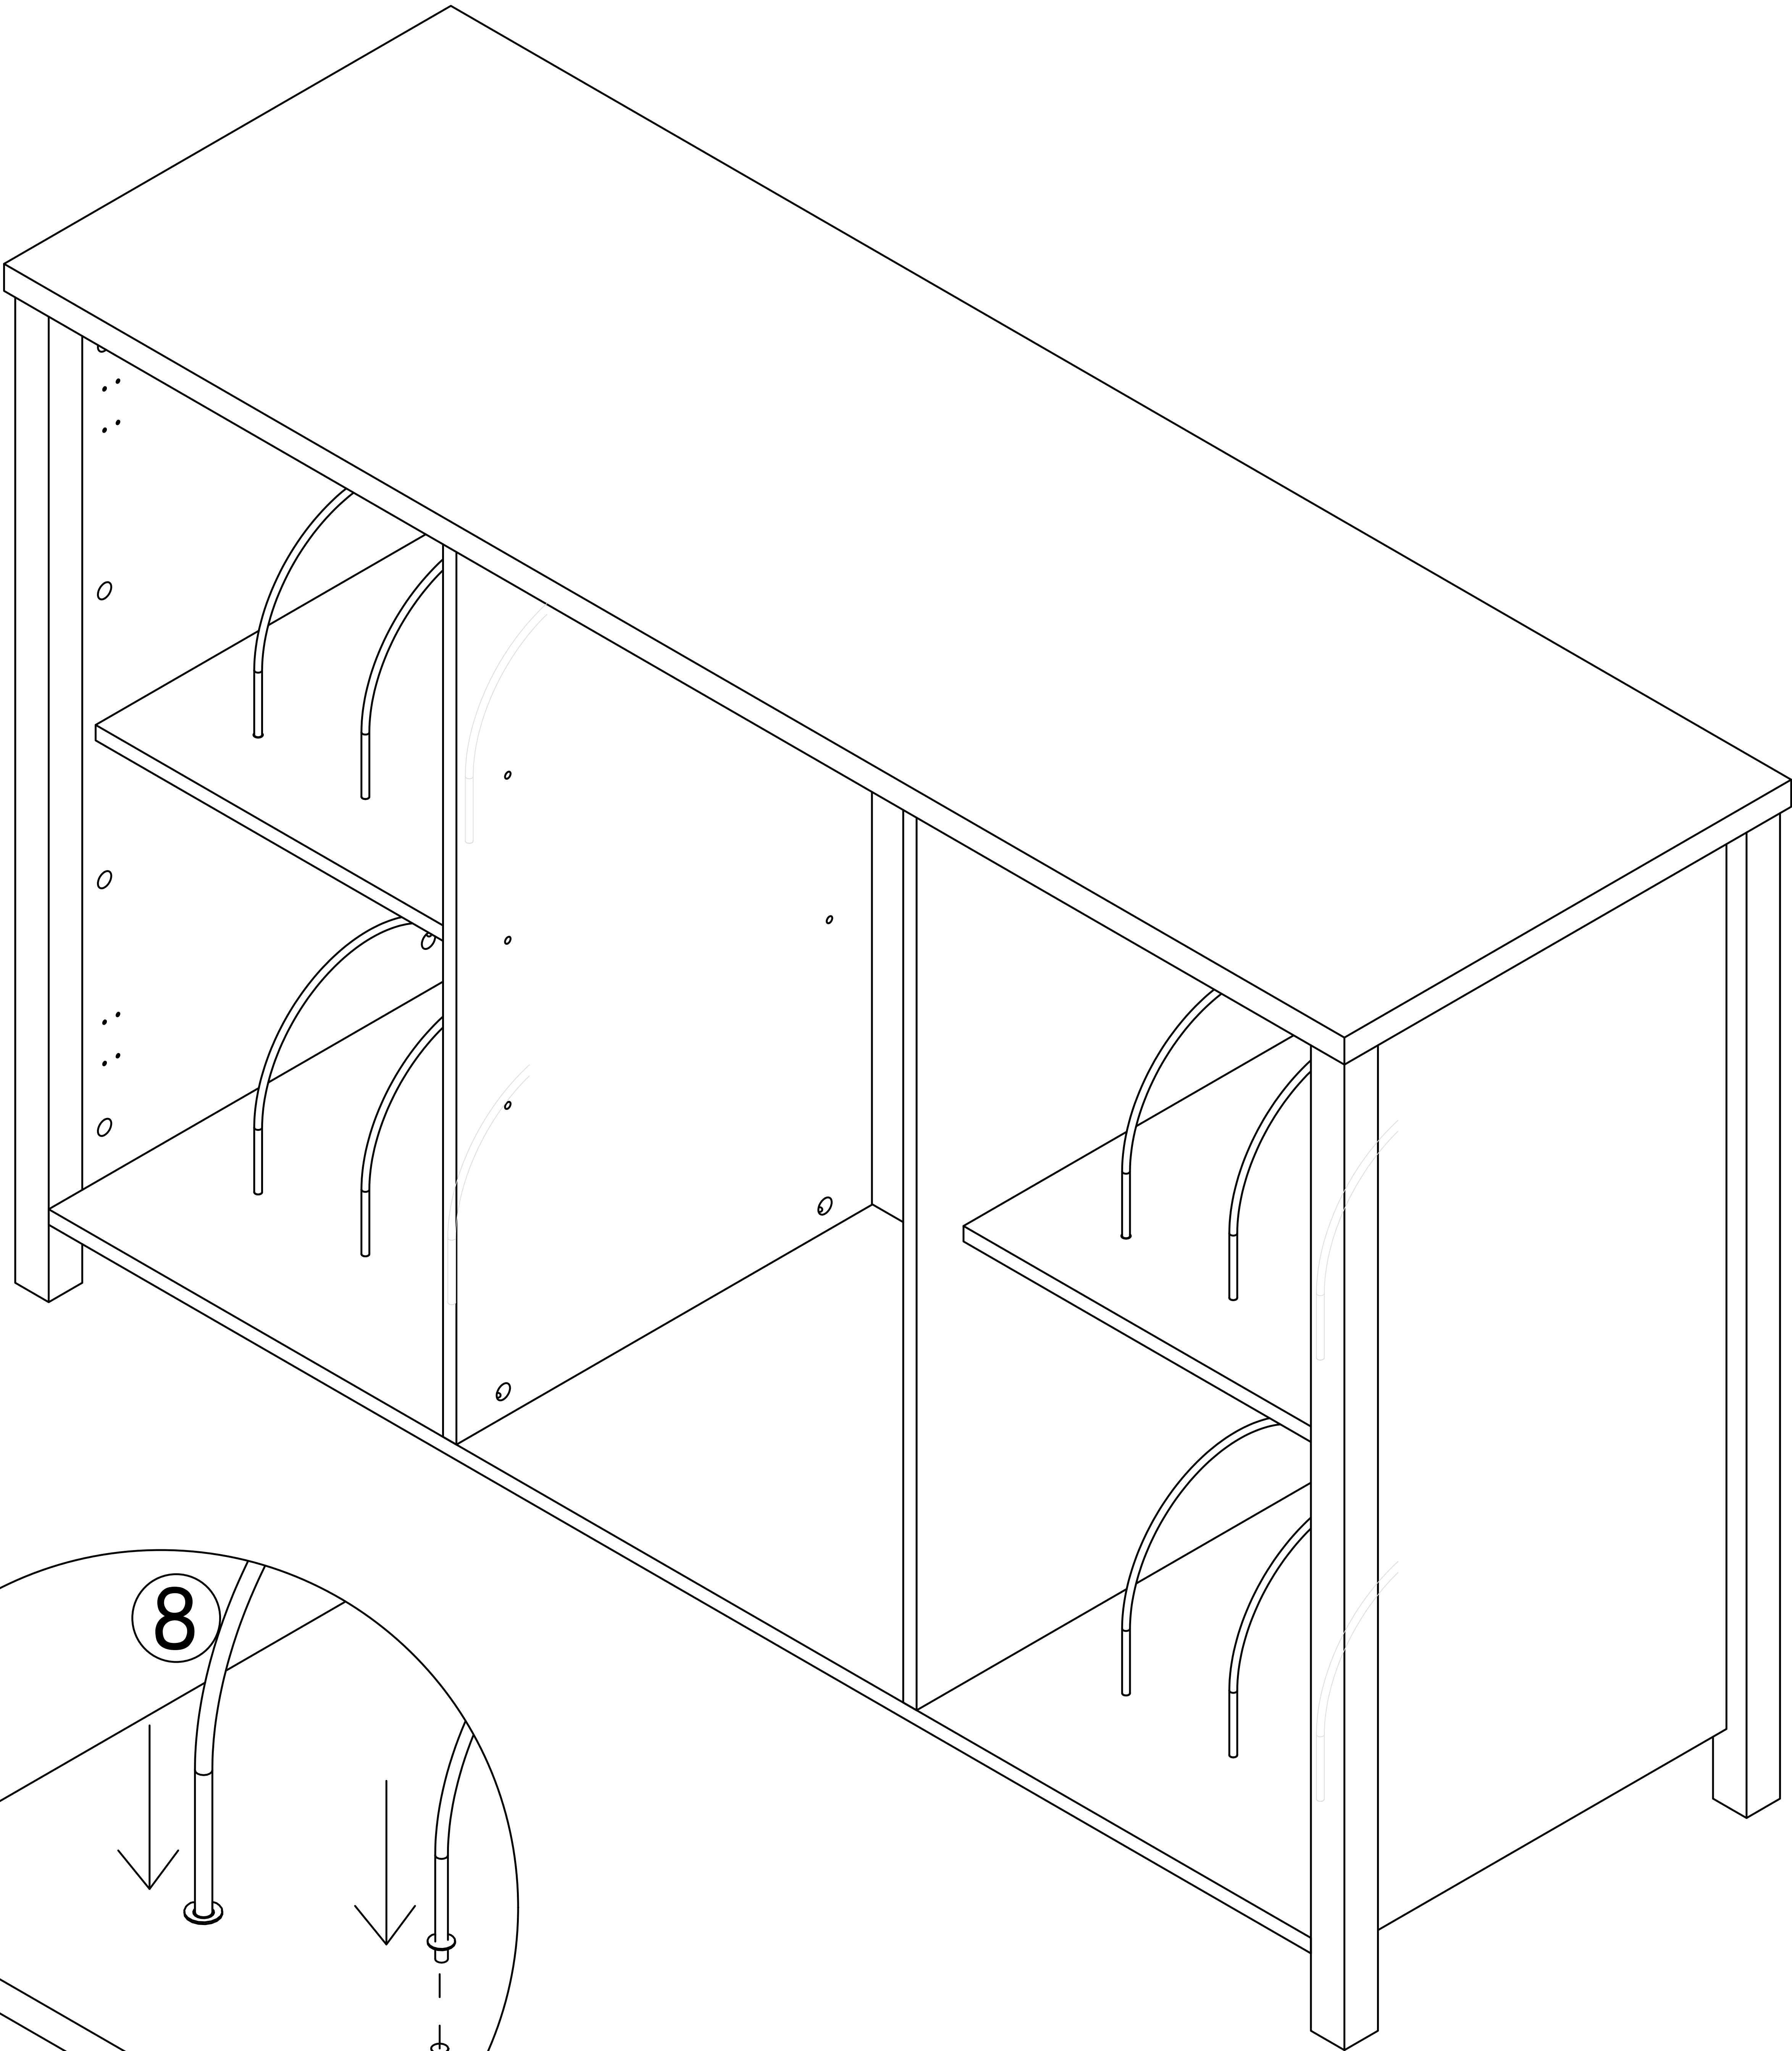


Step 35


9

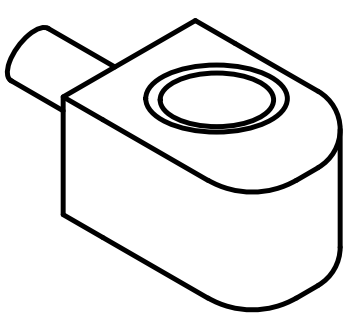


x4

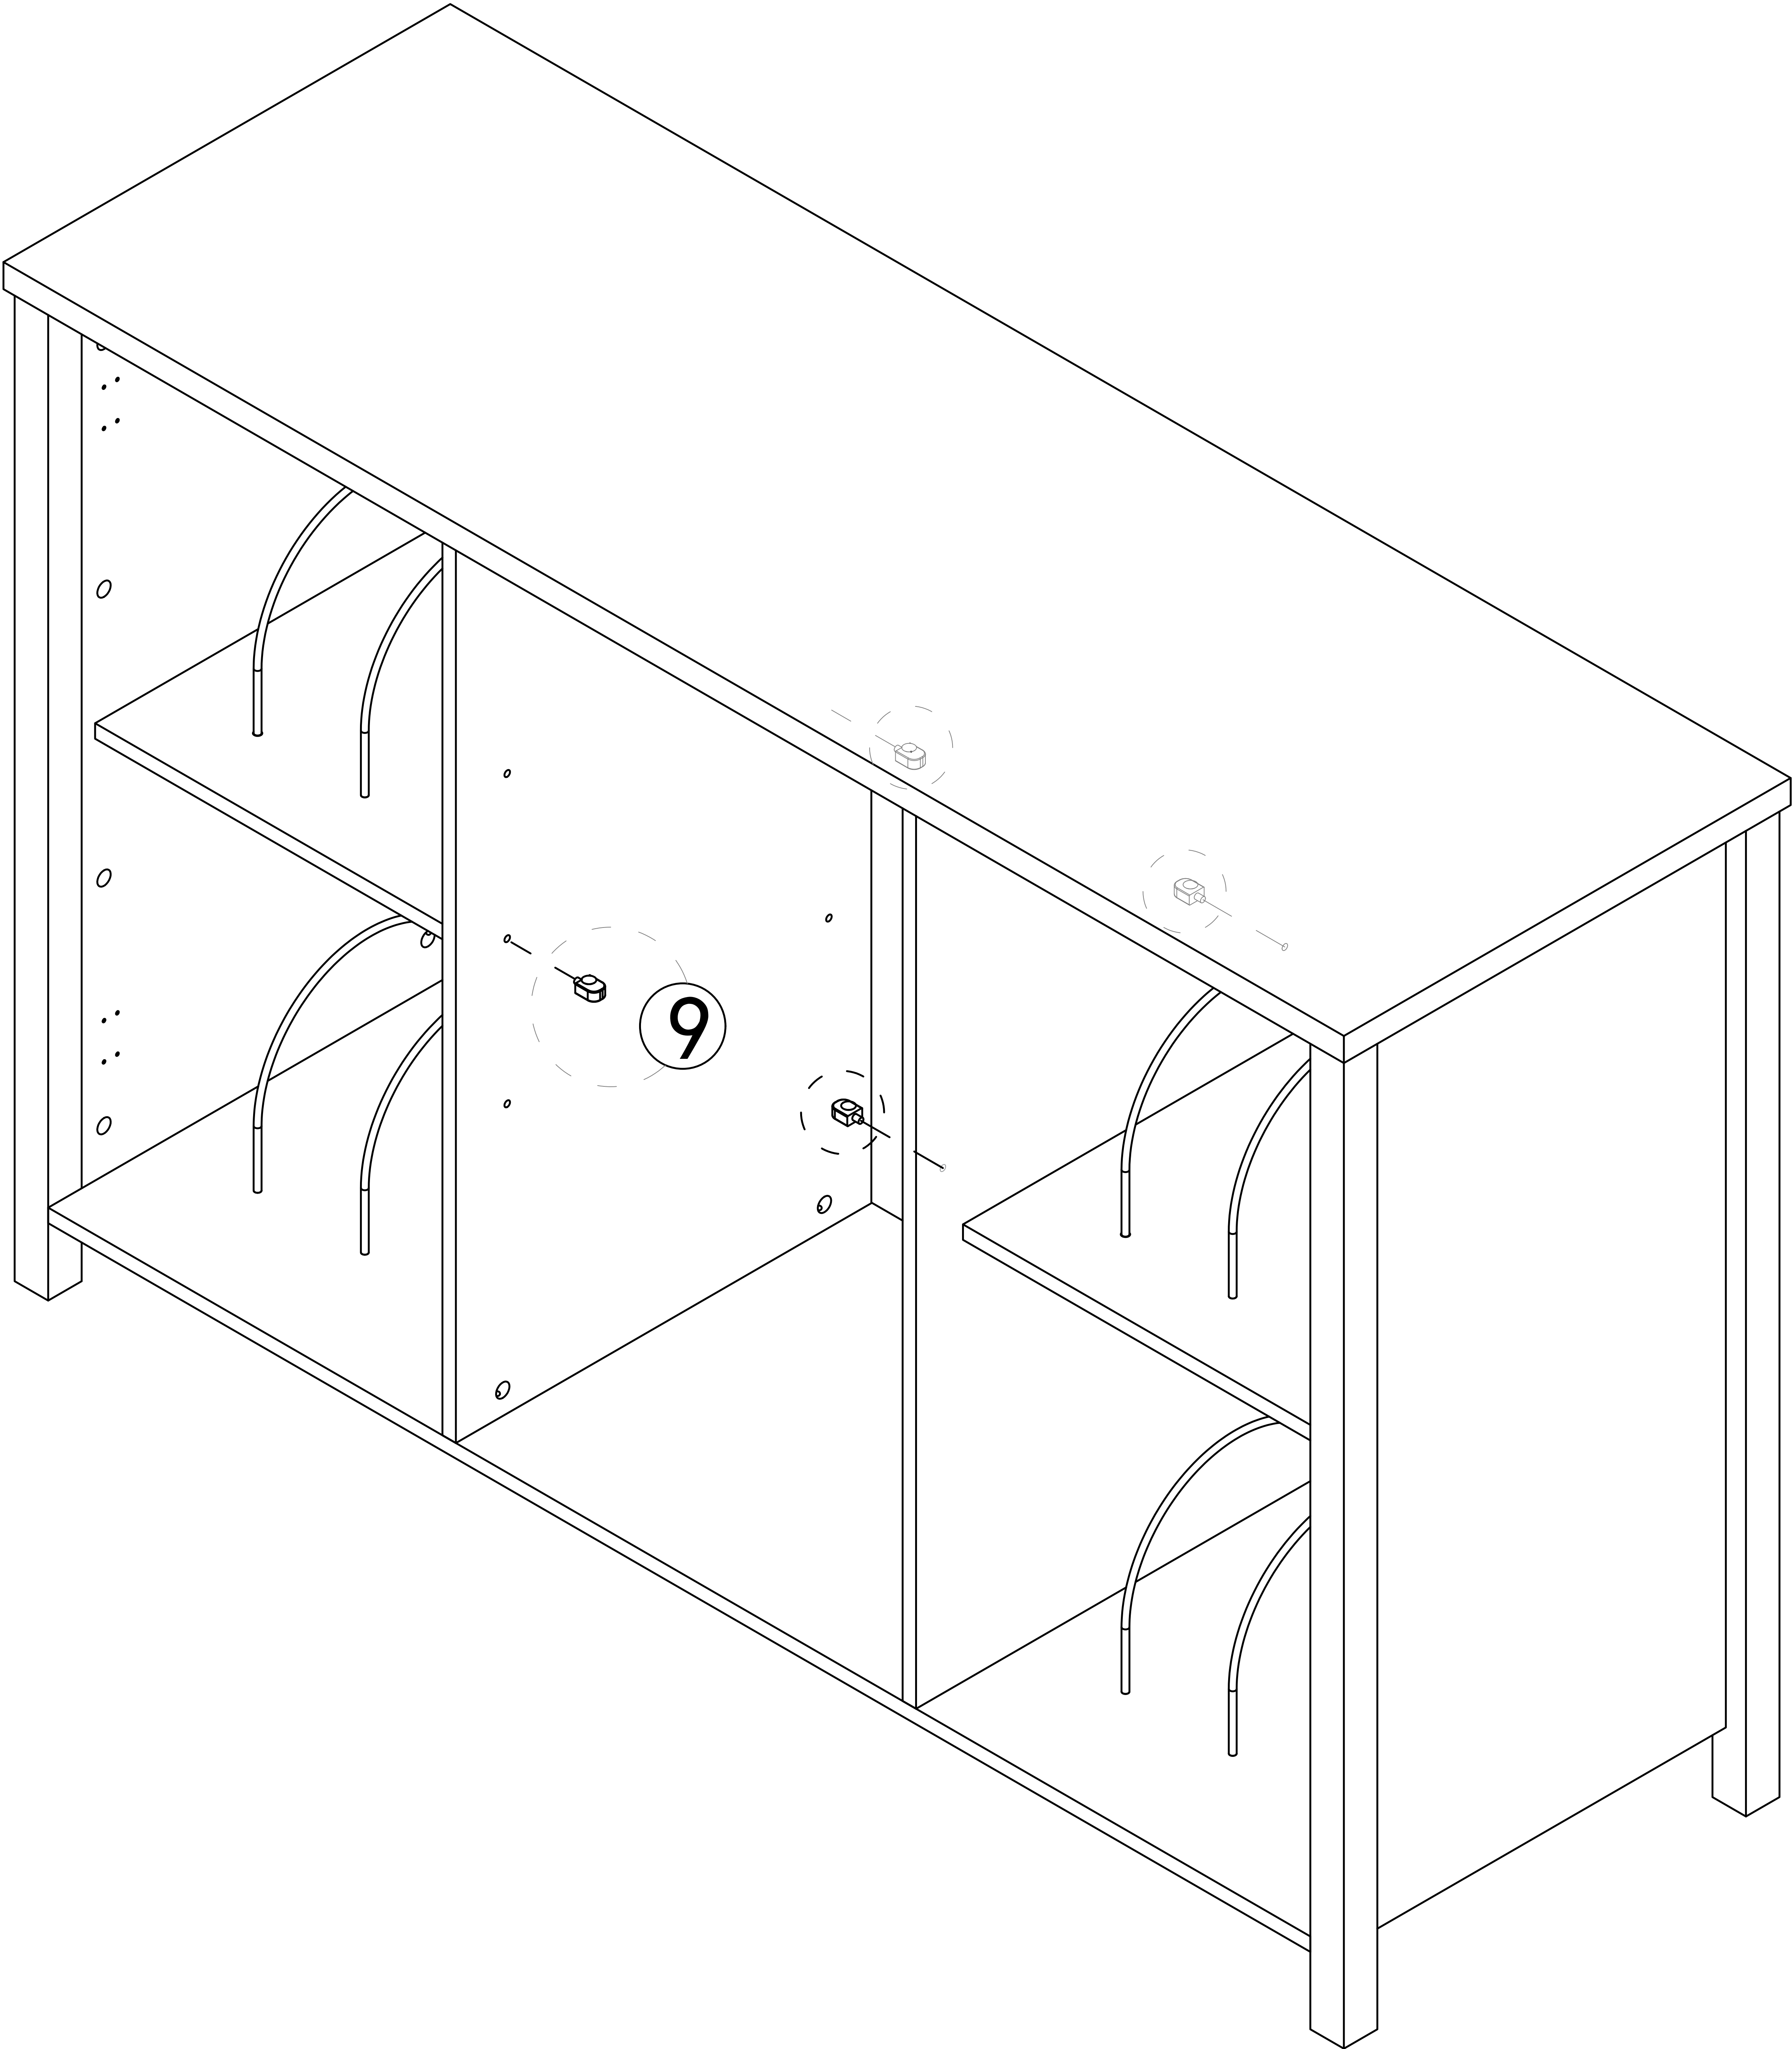

Step 36

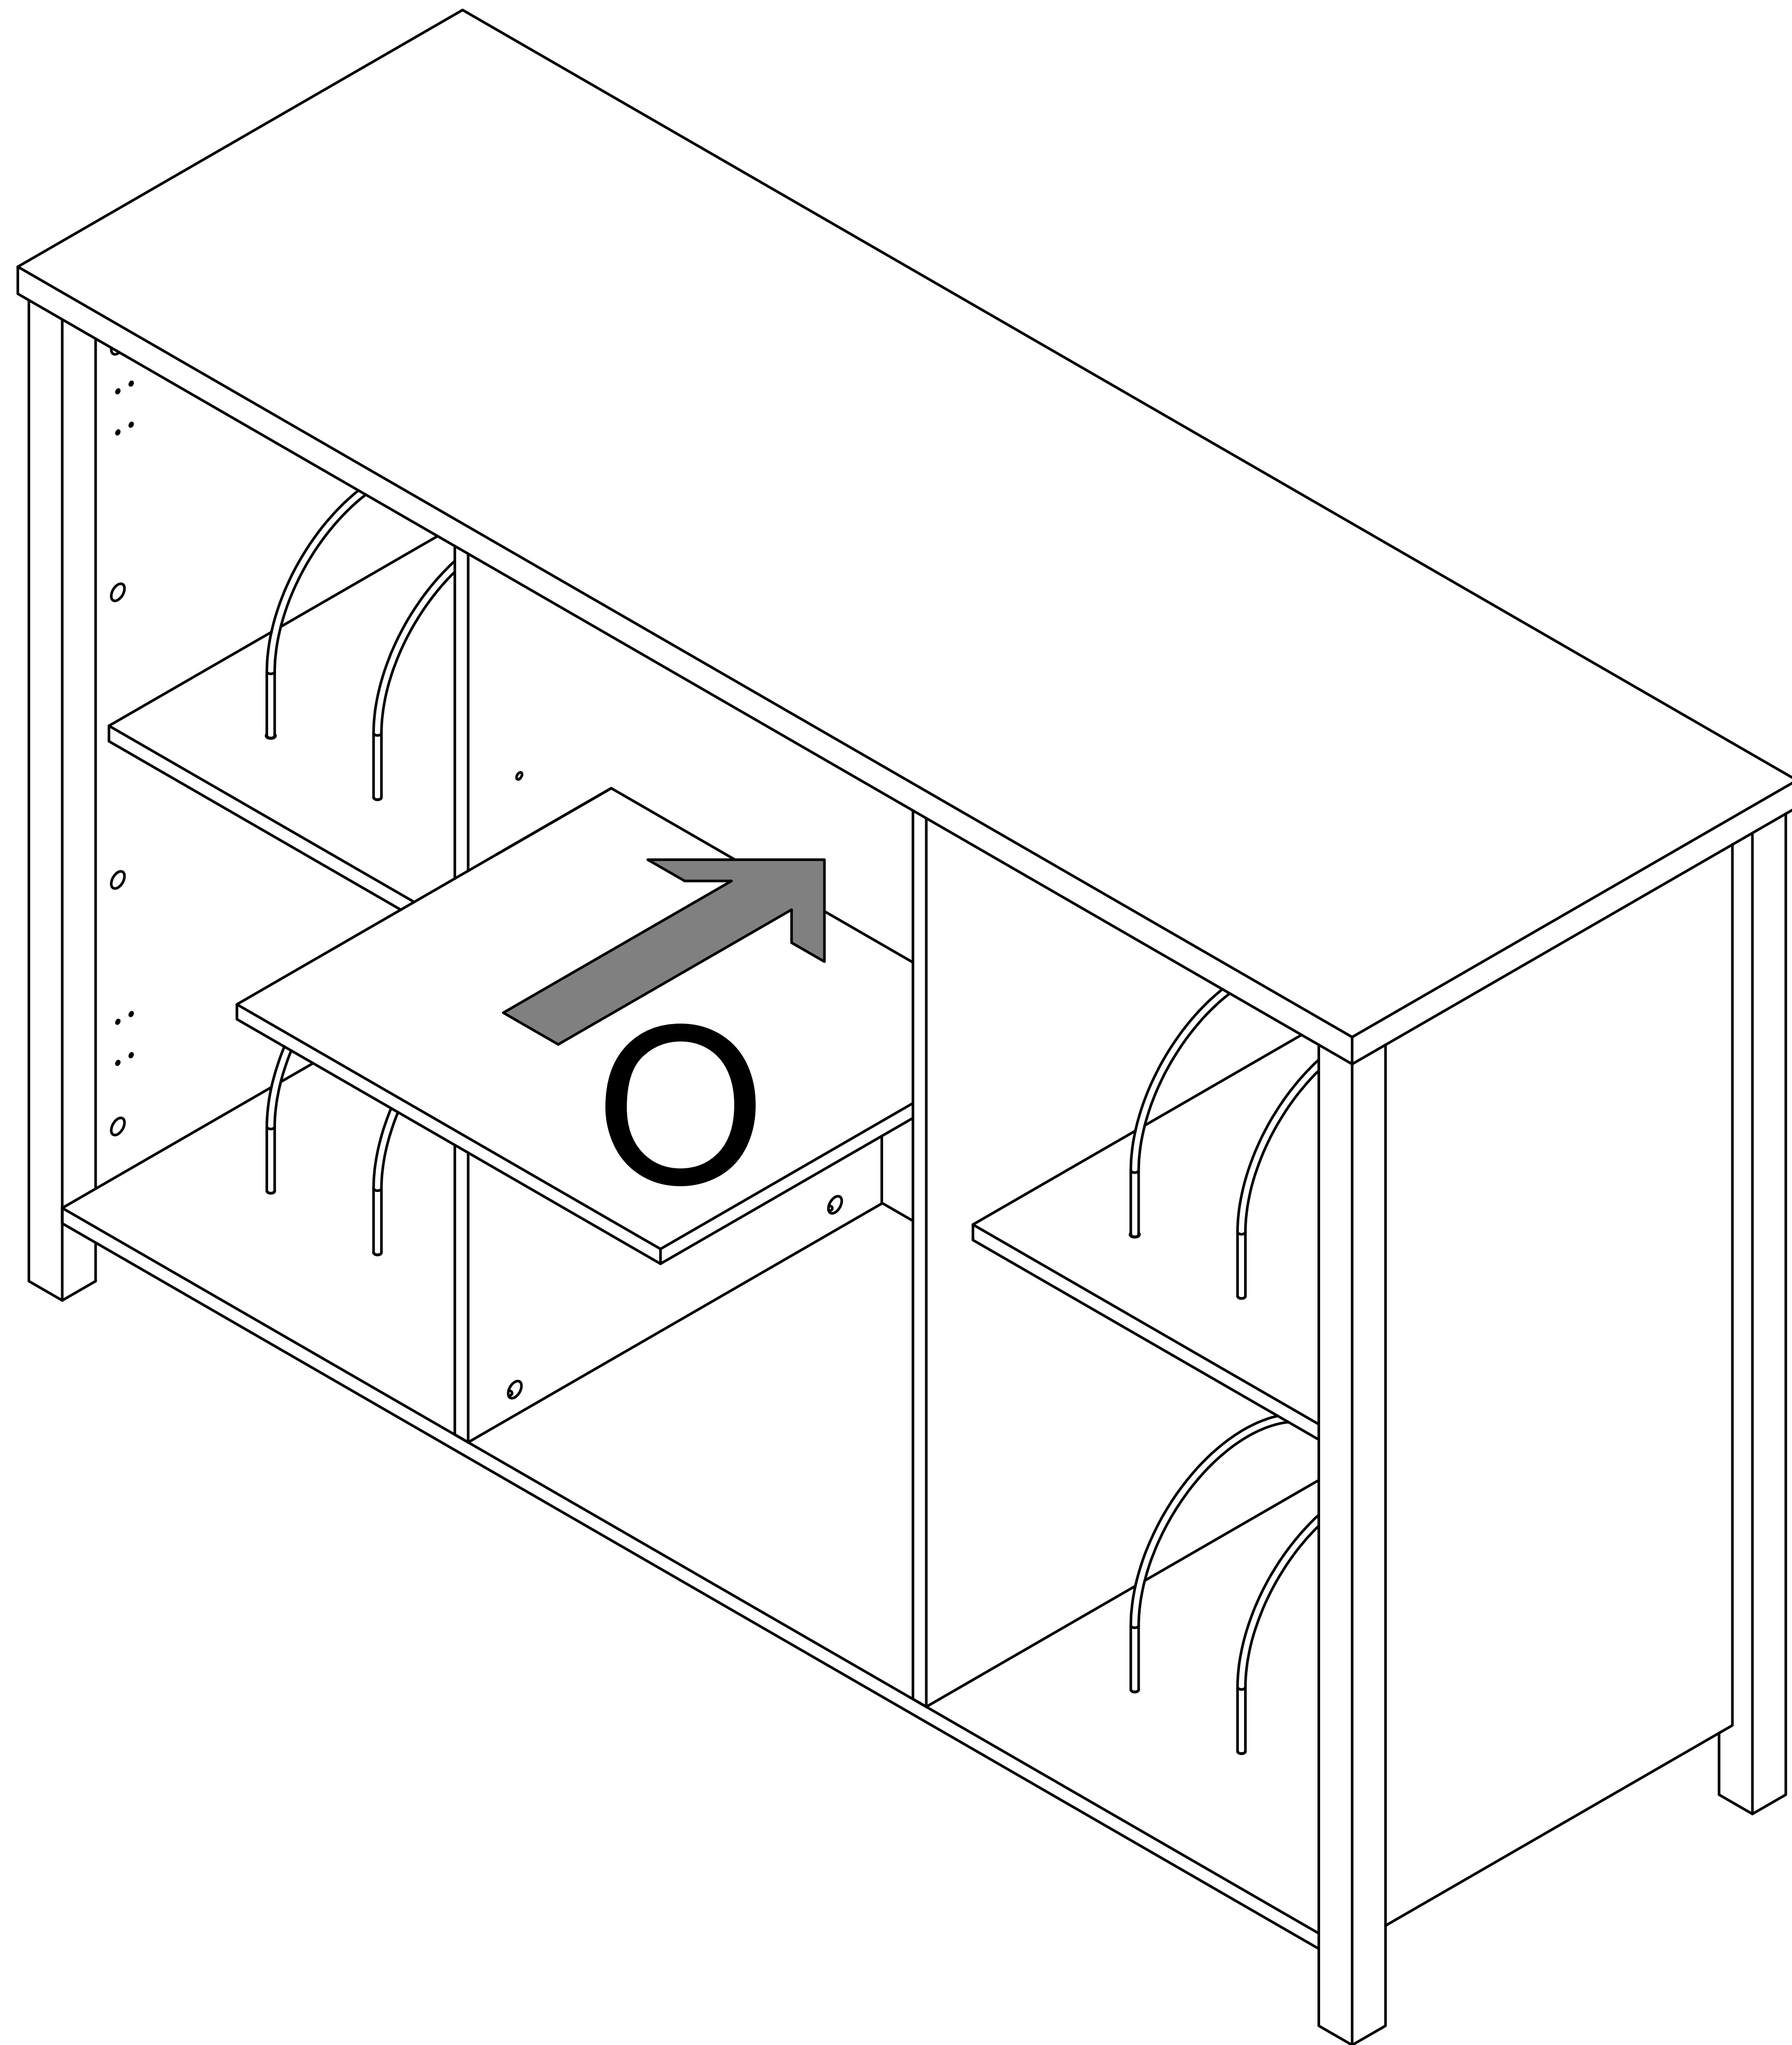

Turning this screw can effectively adjust the size of the door gap.

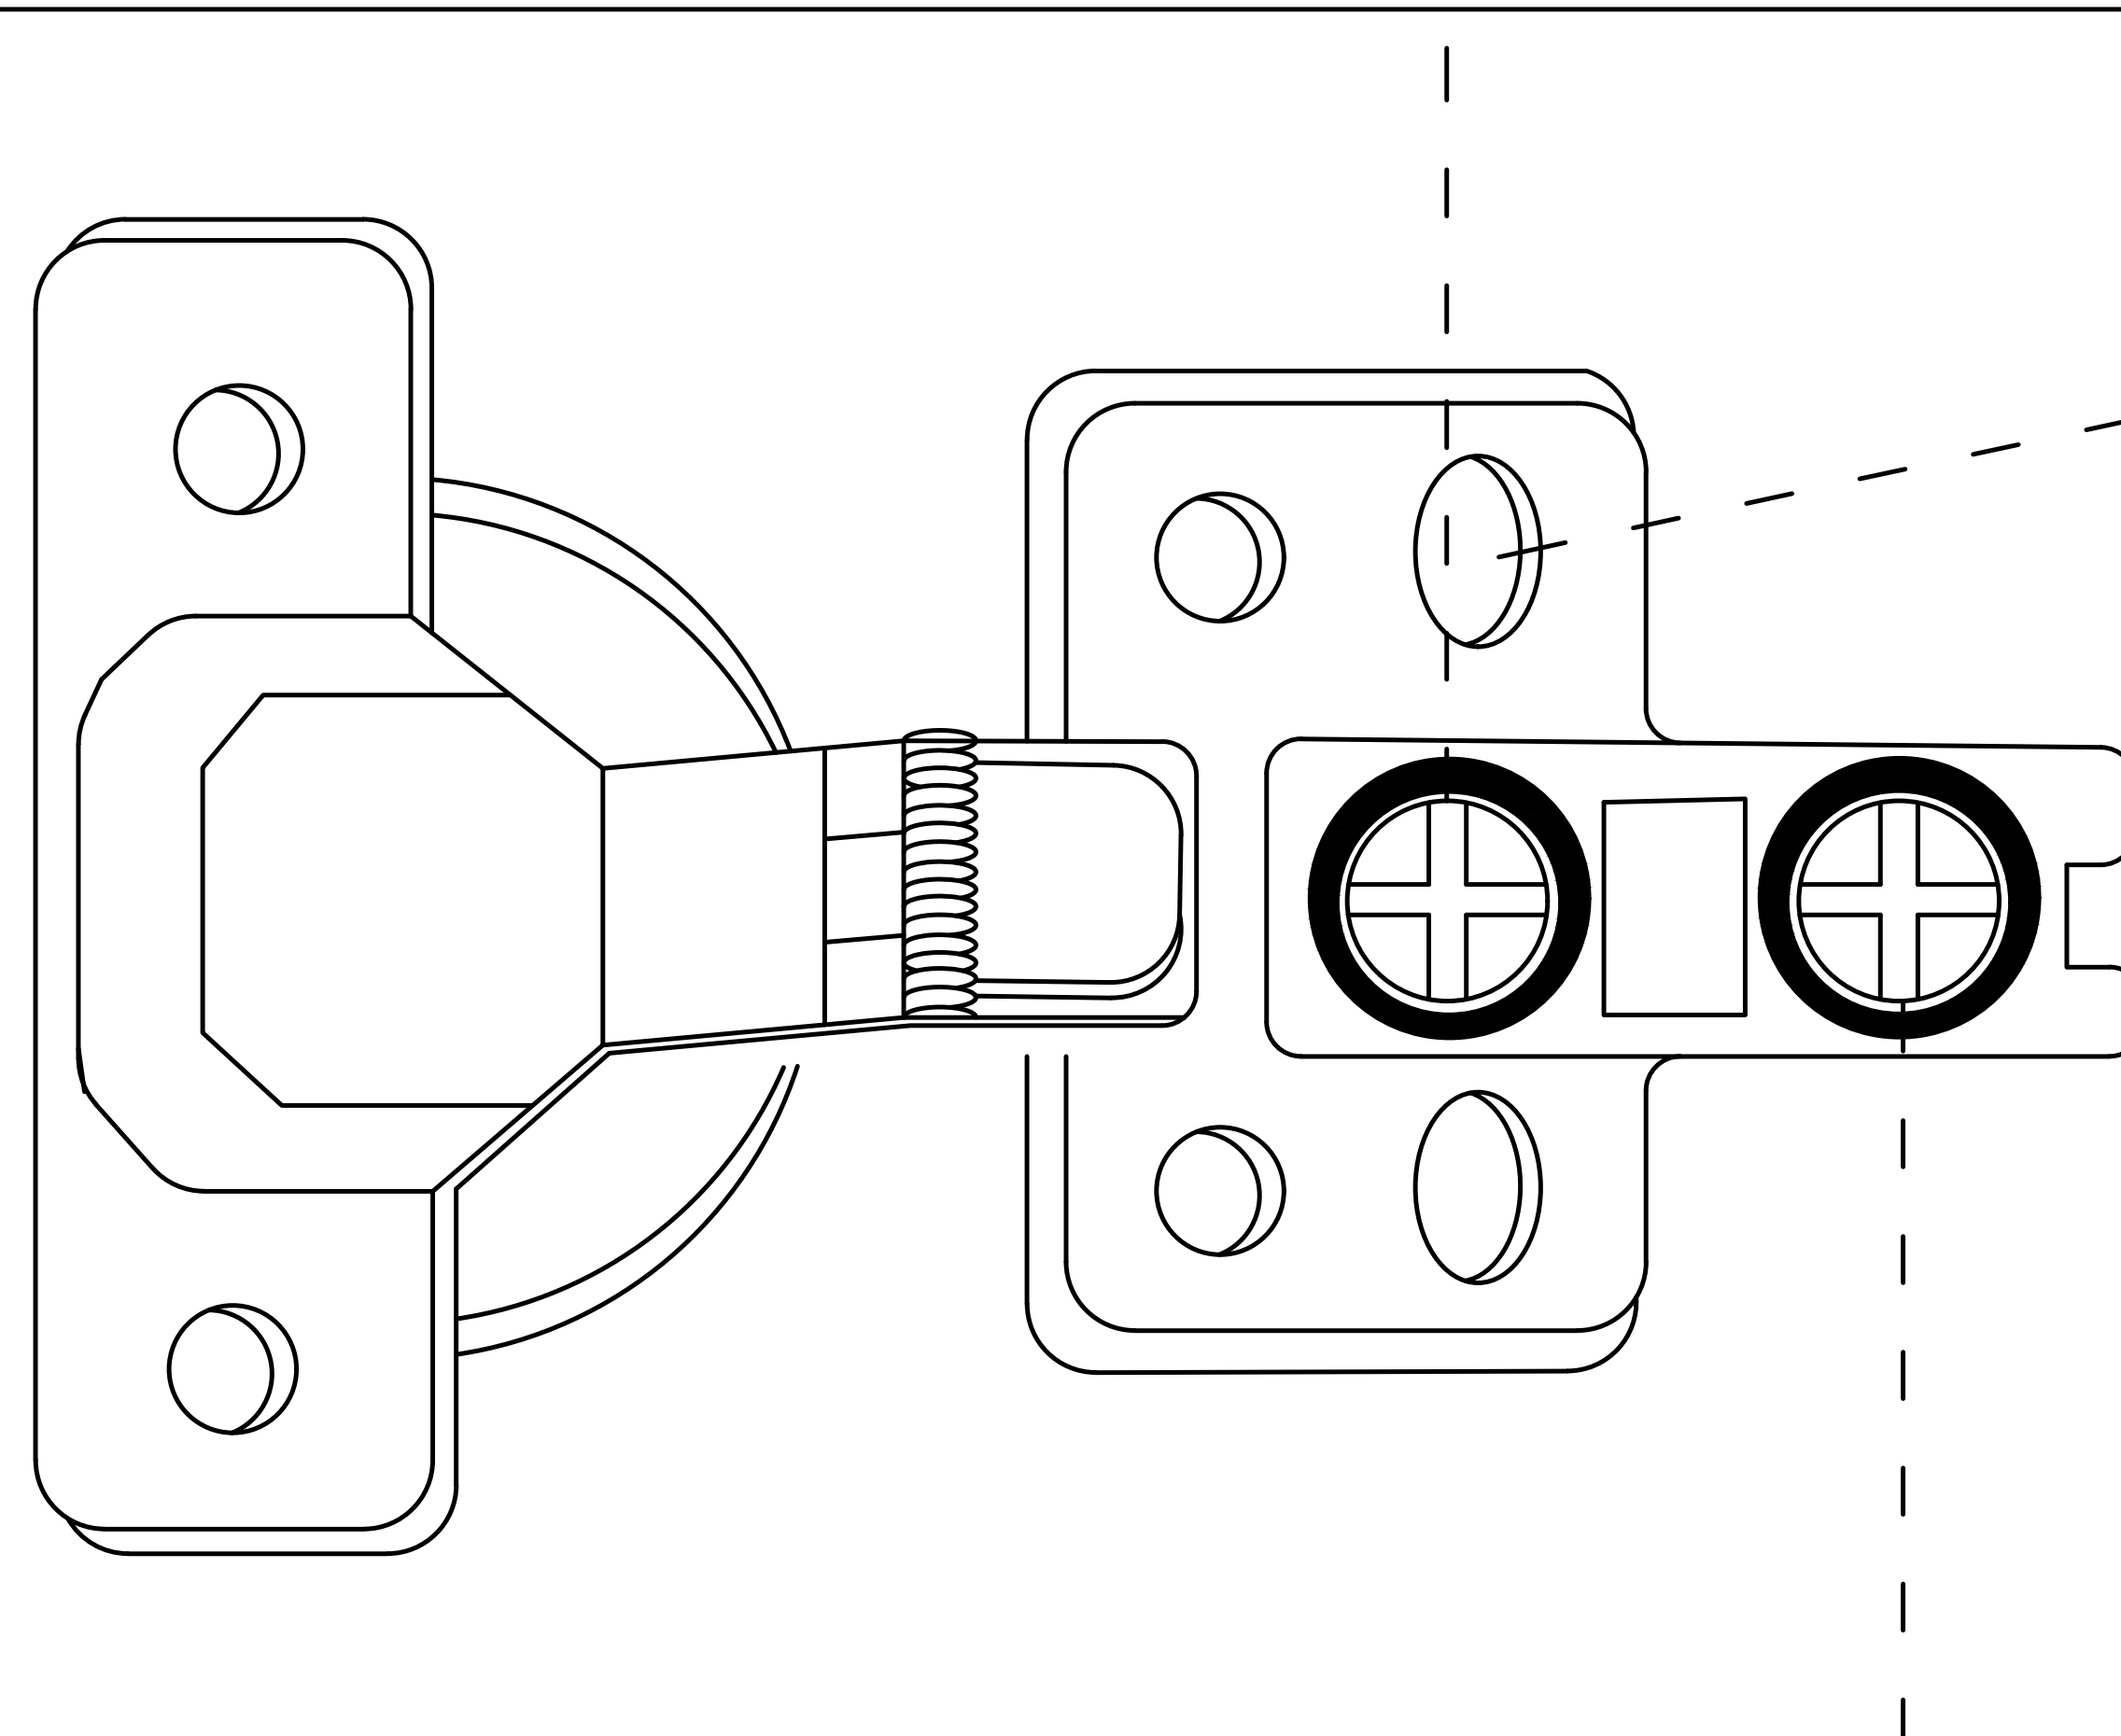



Adjust hole control the up and down height of the door


Turn this screw to adjust the door panel to be flat with the side panel.

Step 37

10

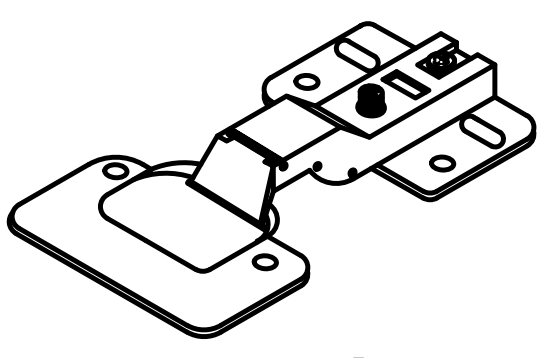

x4

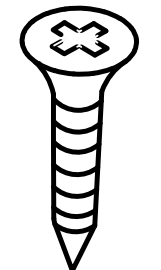

x8

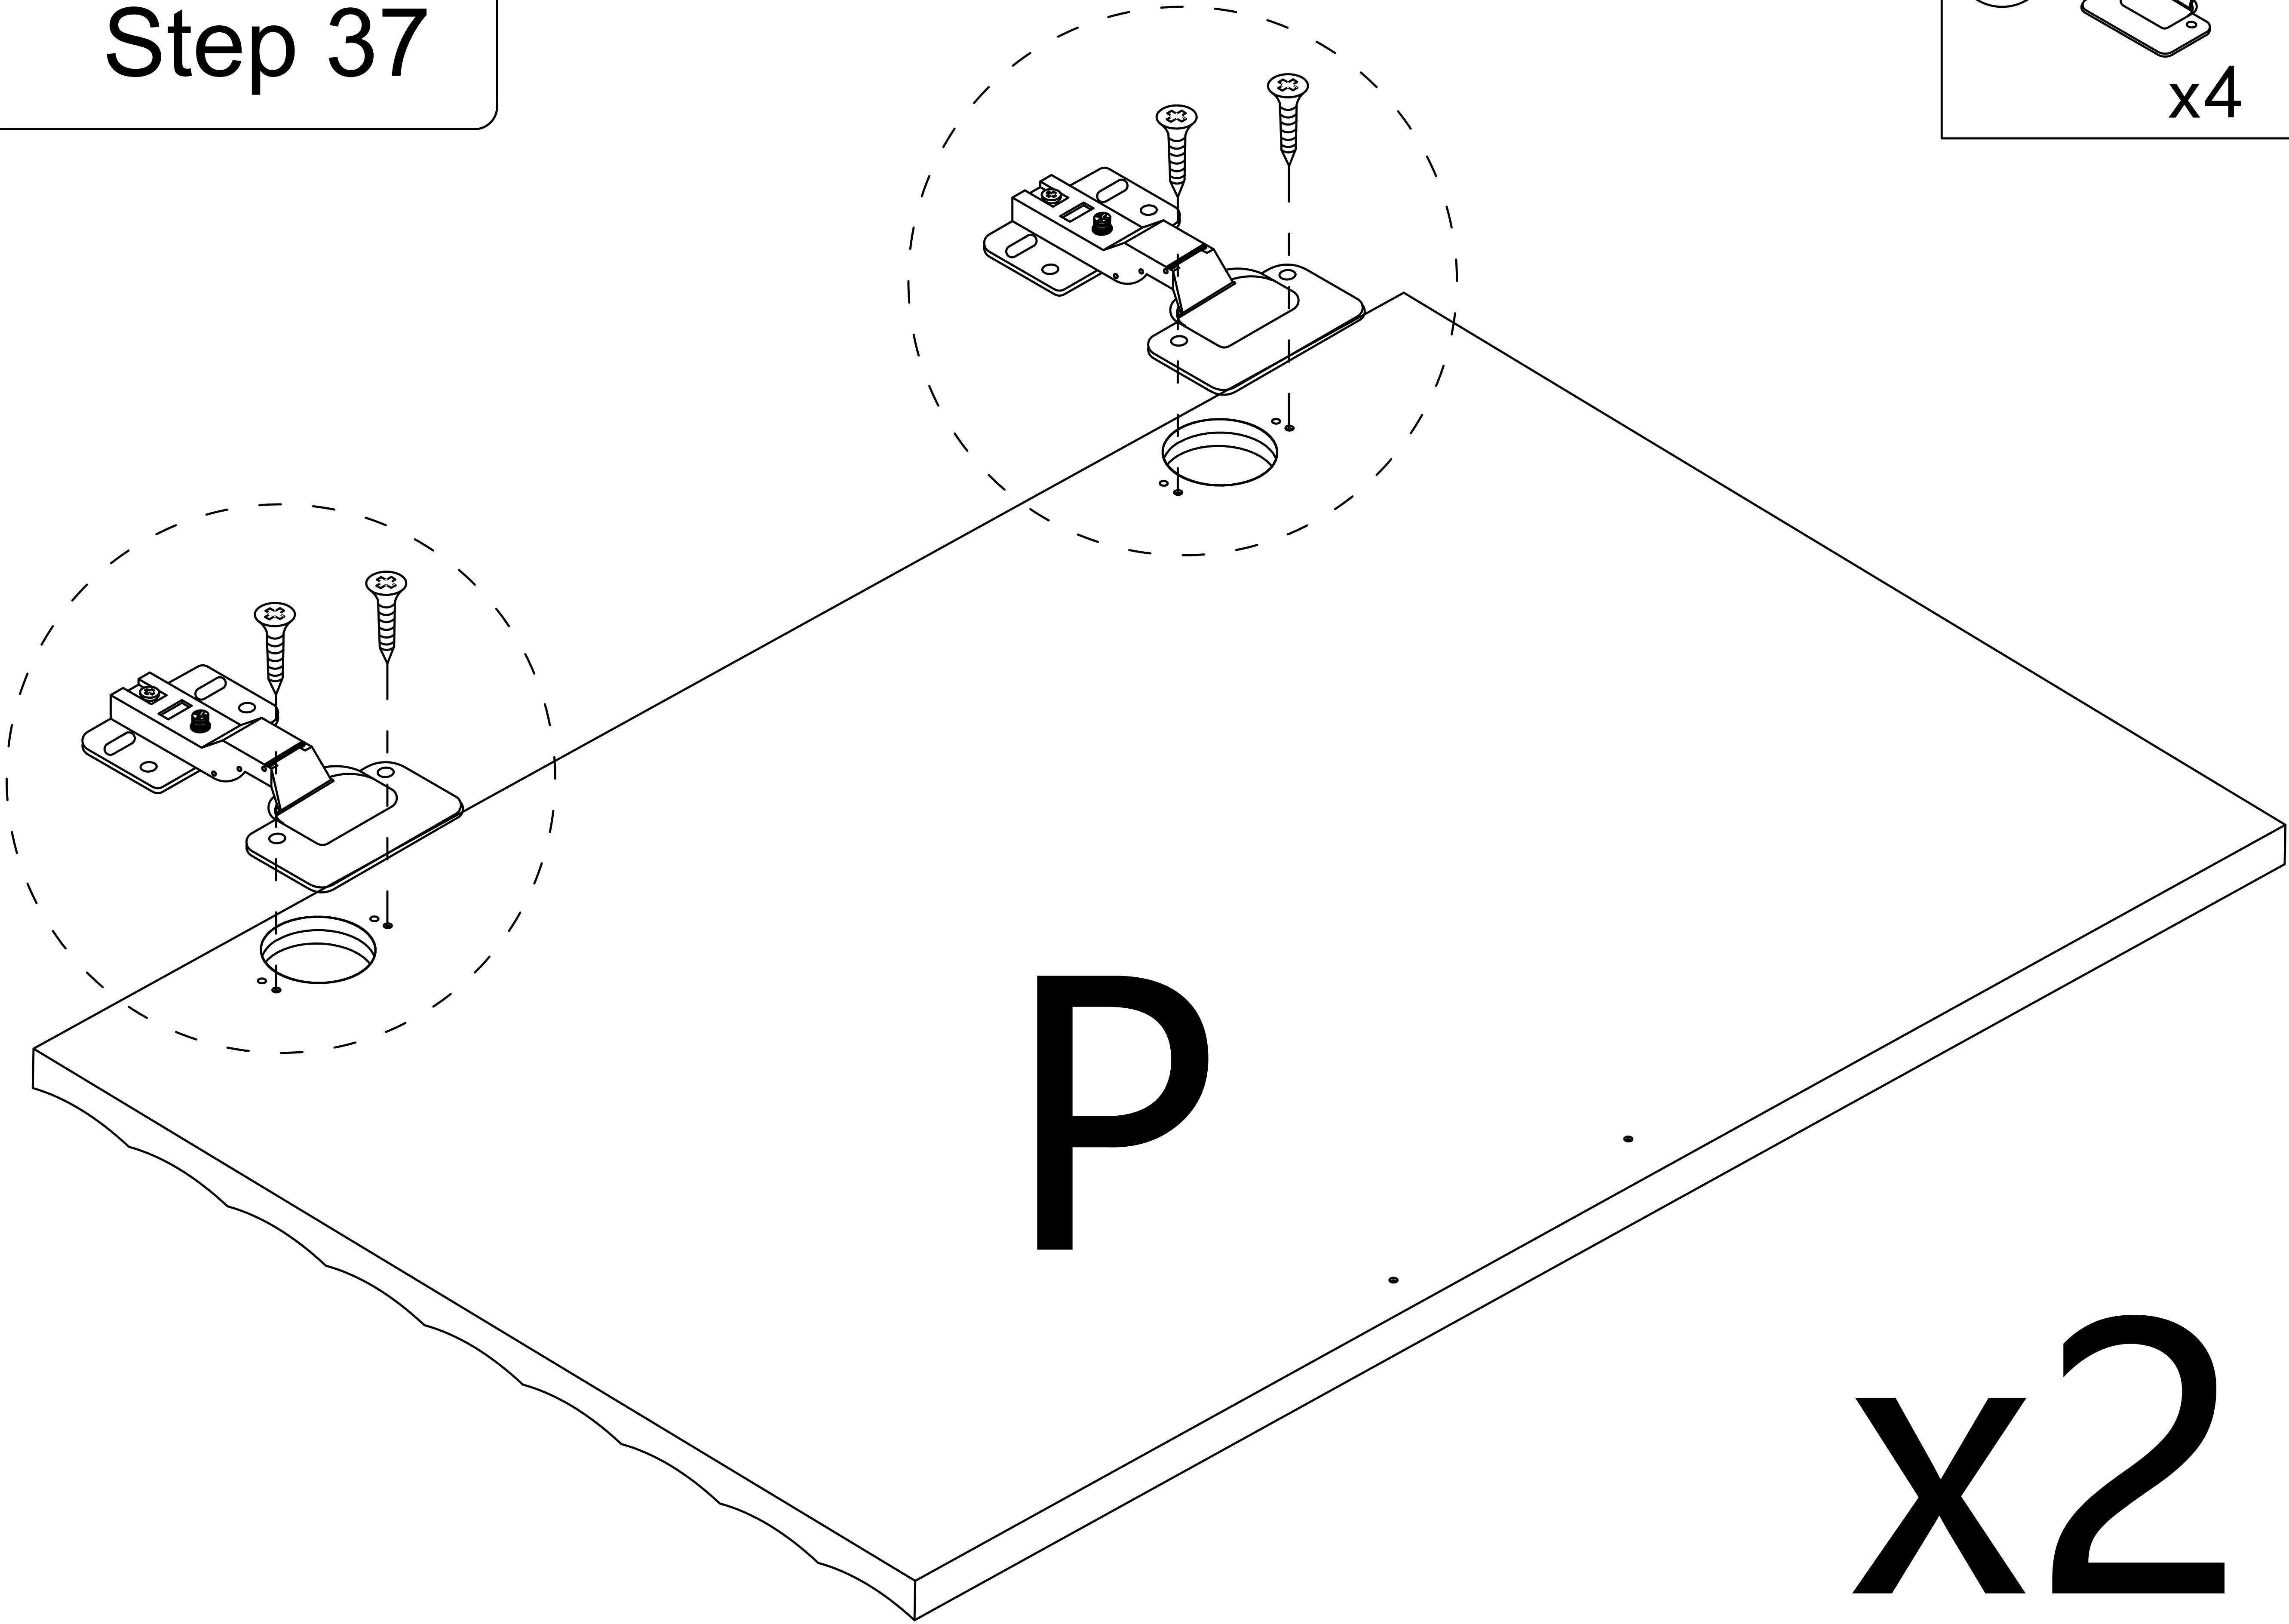


Step 38

11

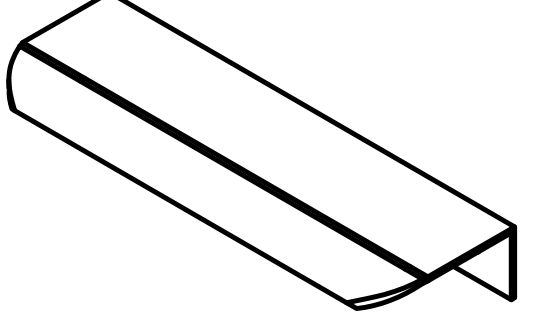
x2

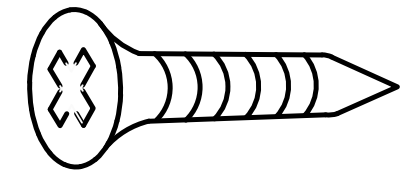

x4

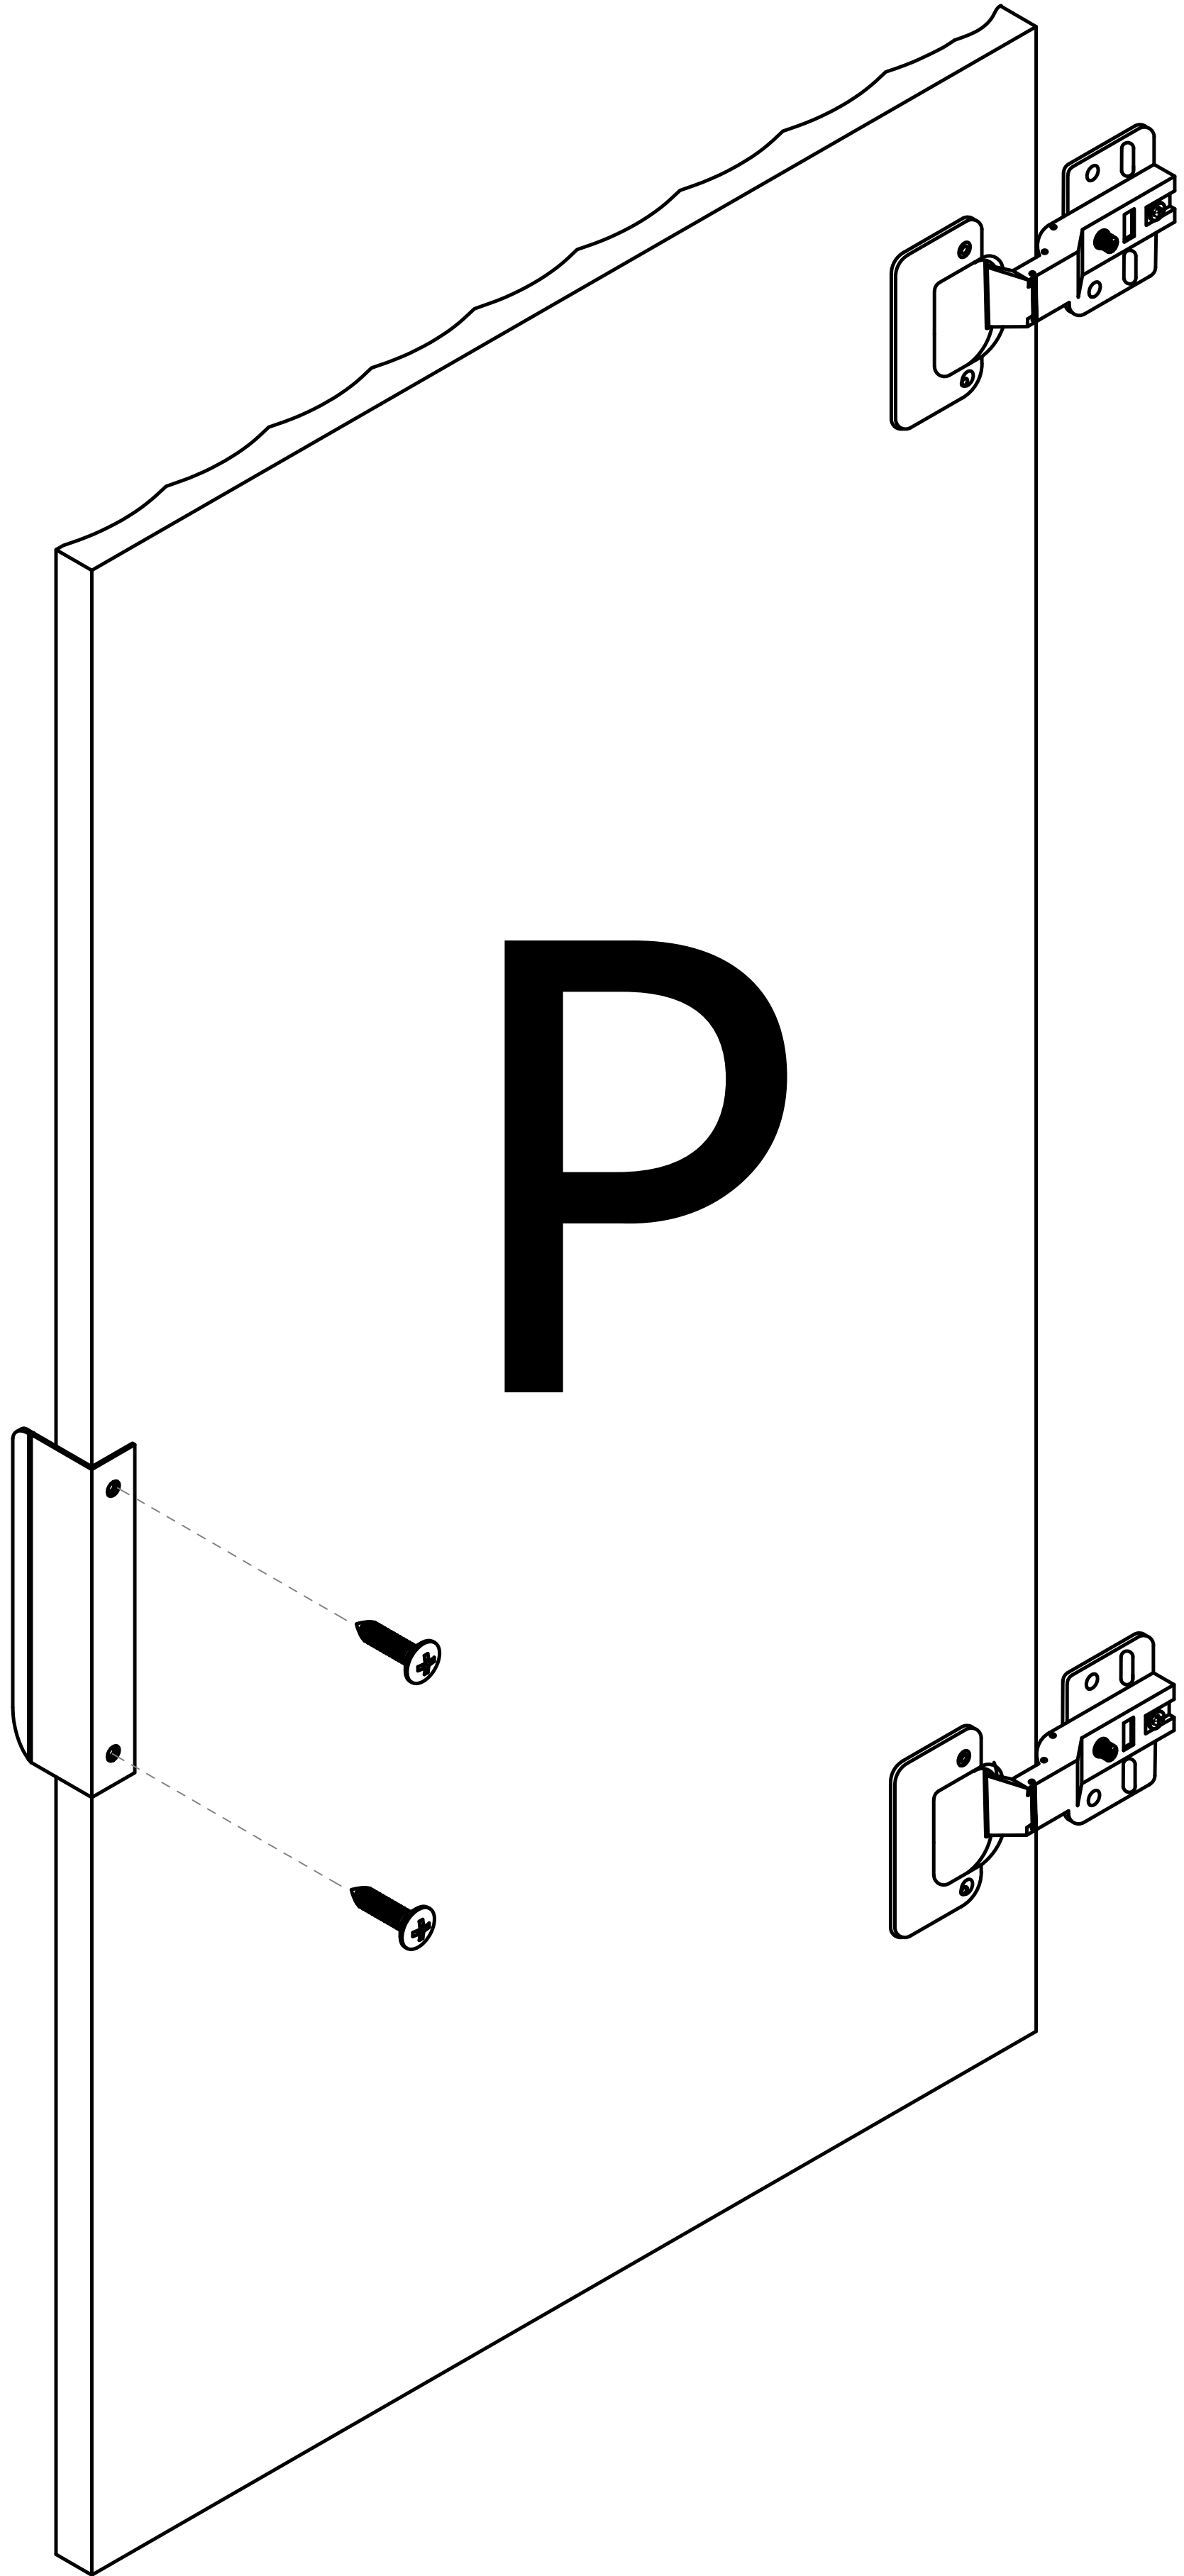


x2

Step 39

10

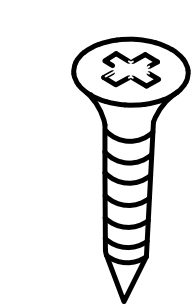


x8

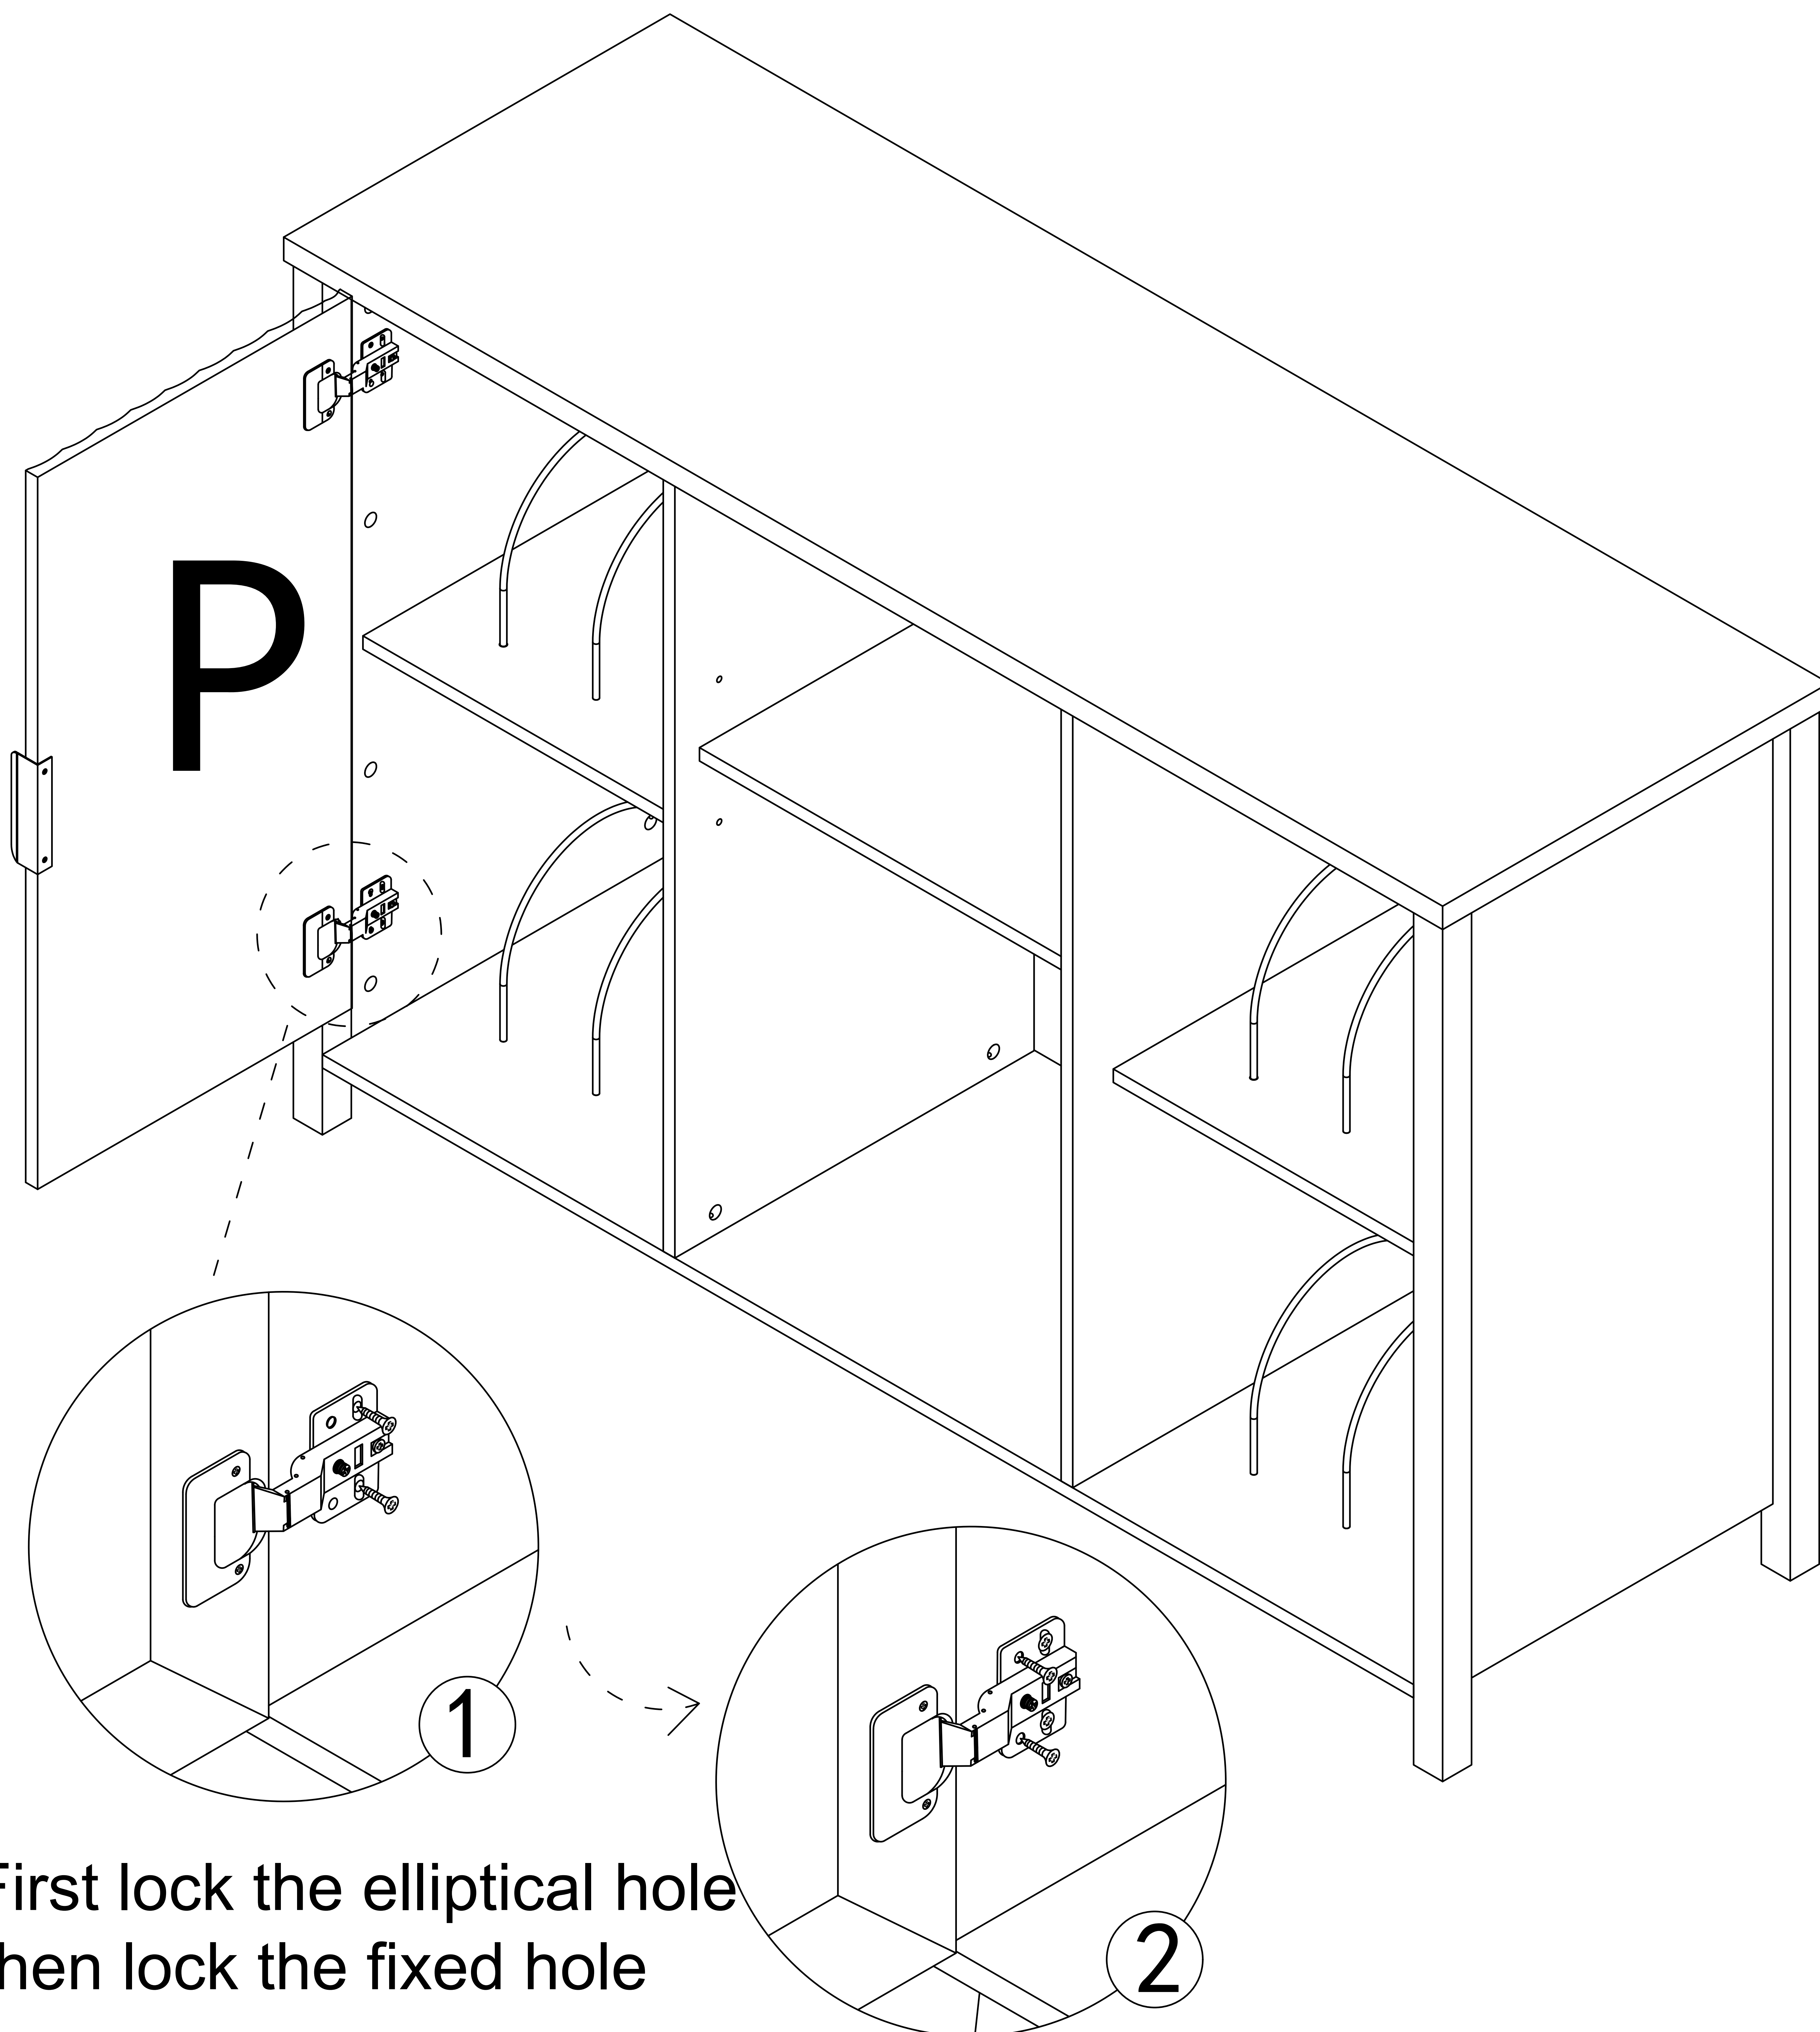


Step 40

10

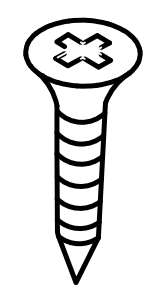

x8

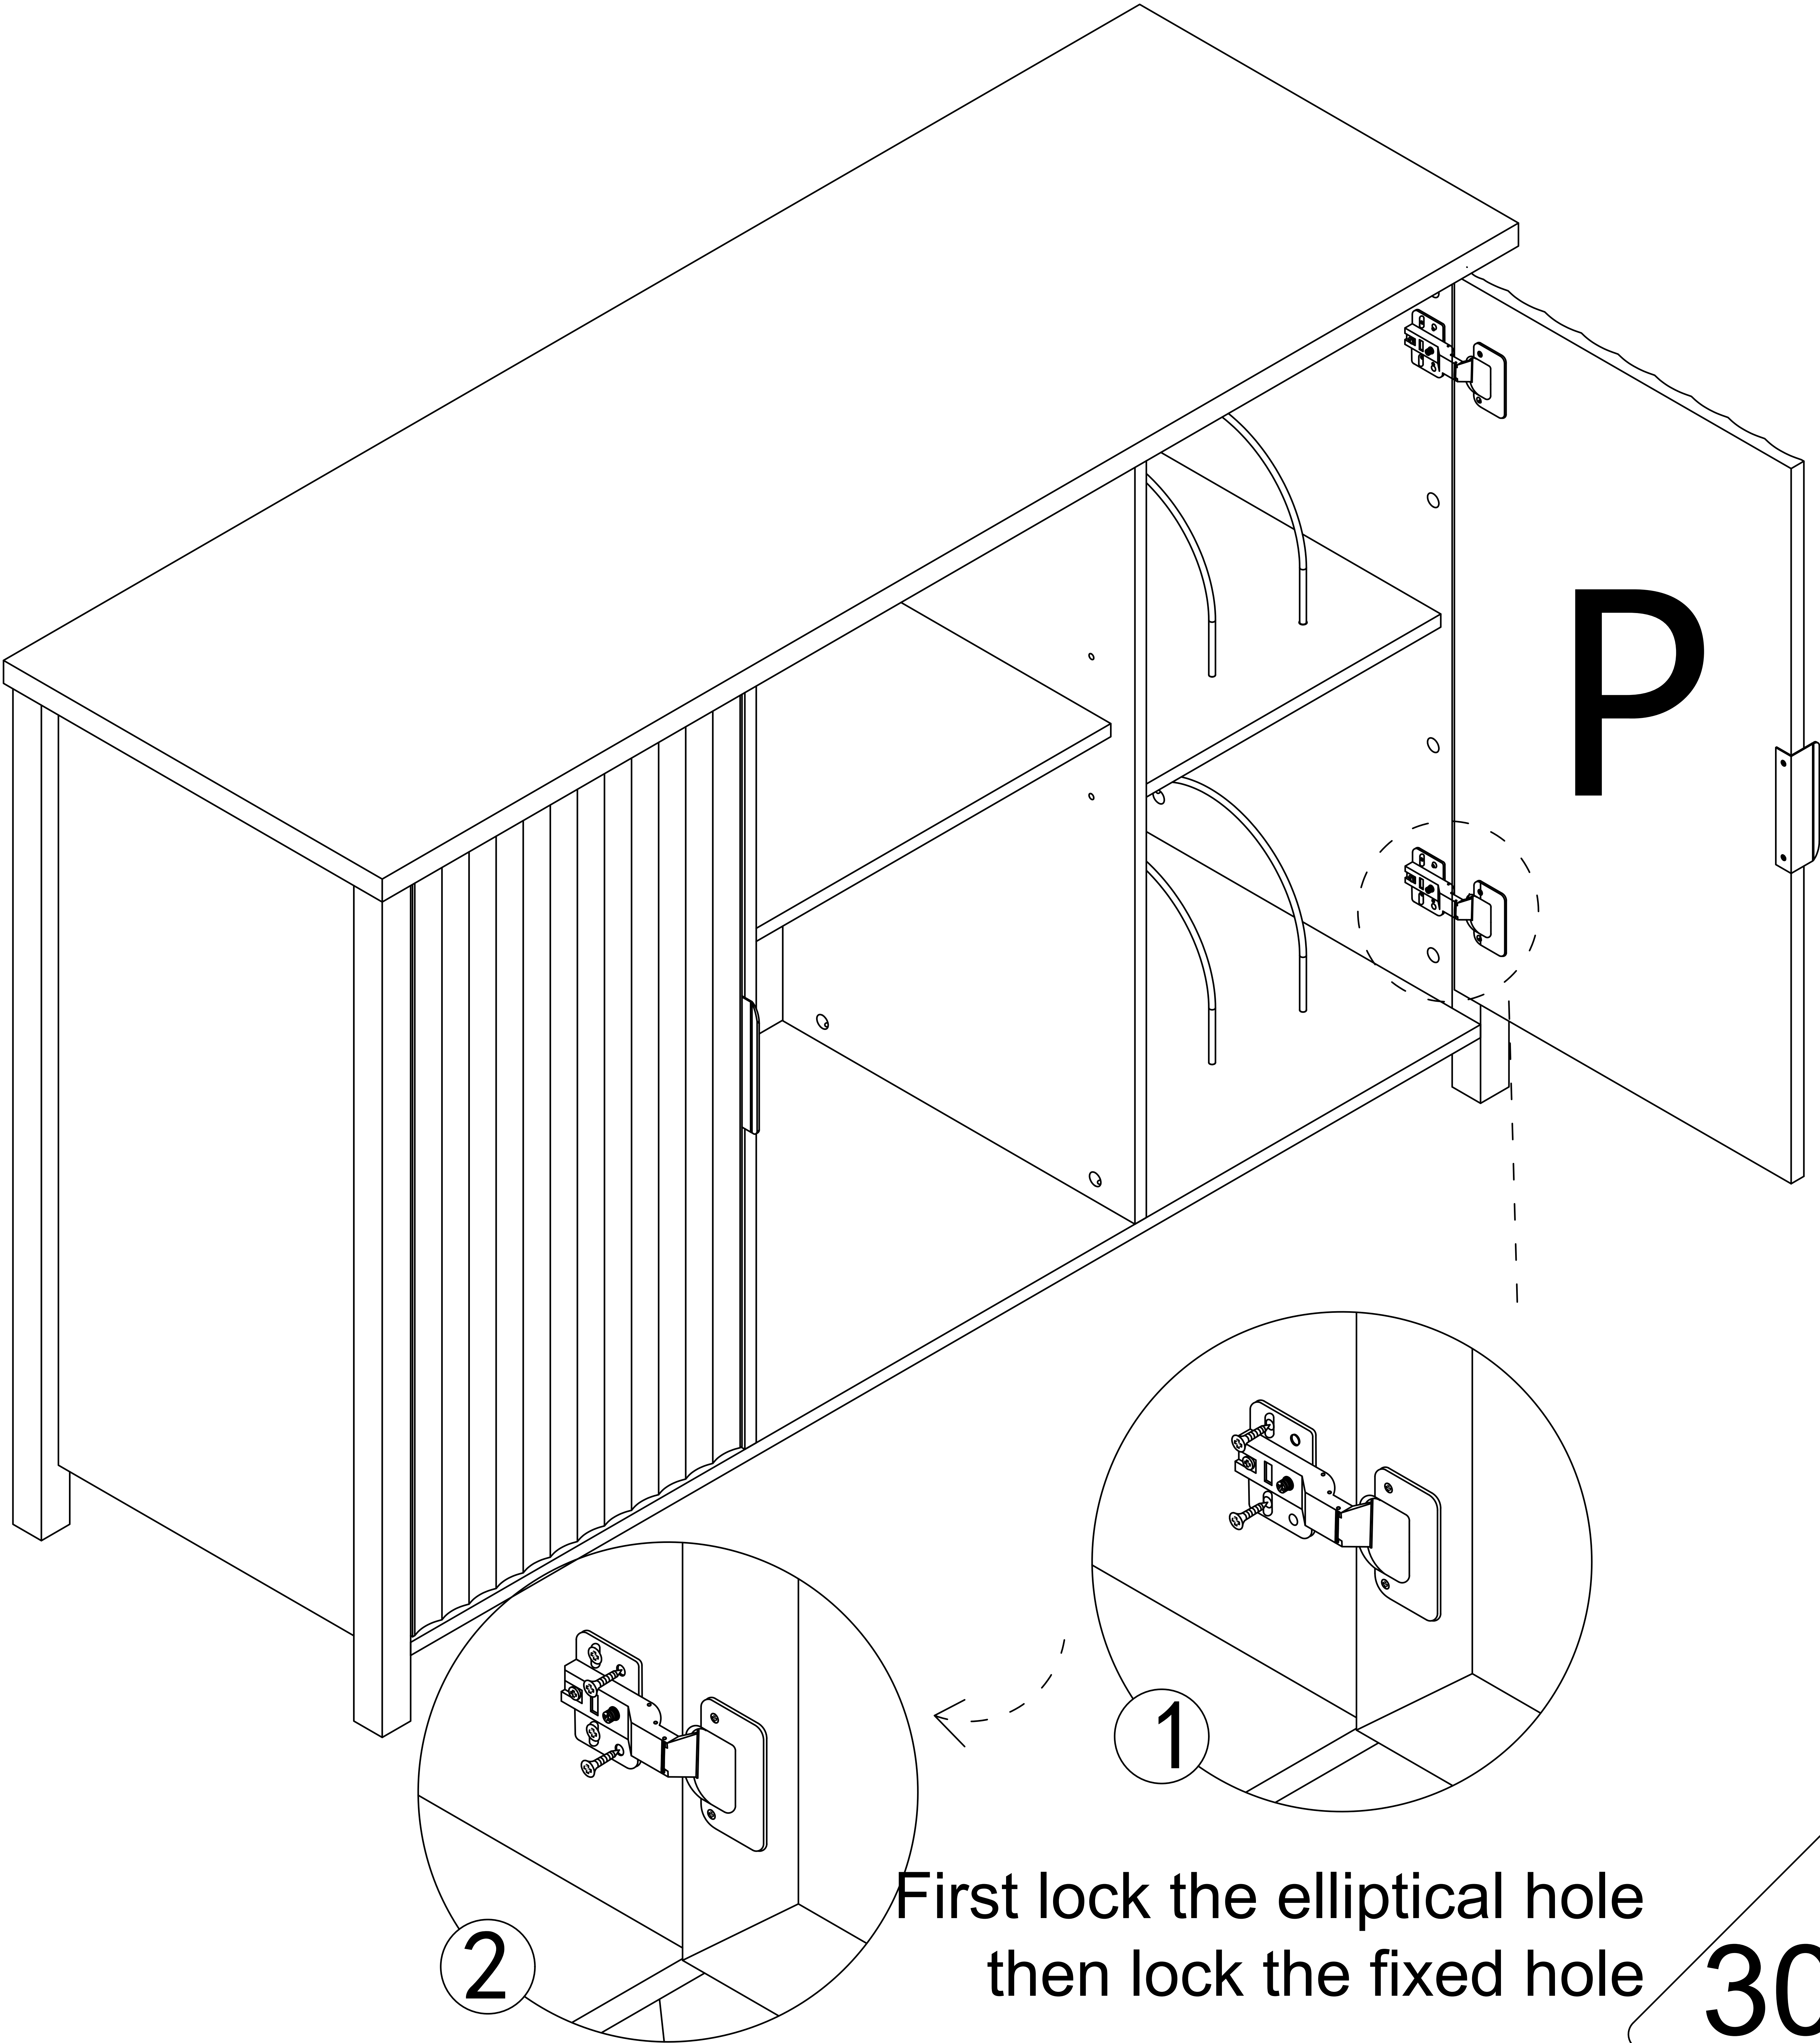


First lock the elliptical hole
then lock the fixed hole


30

Step 41

12

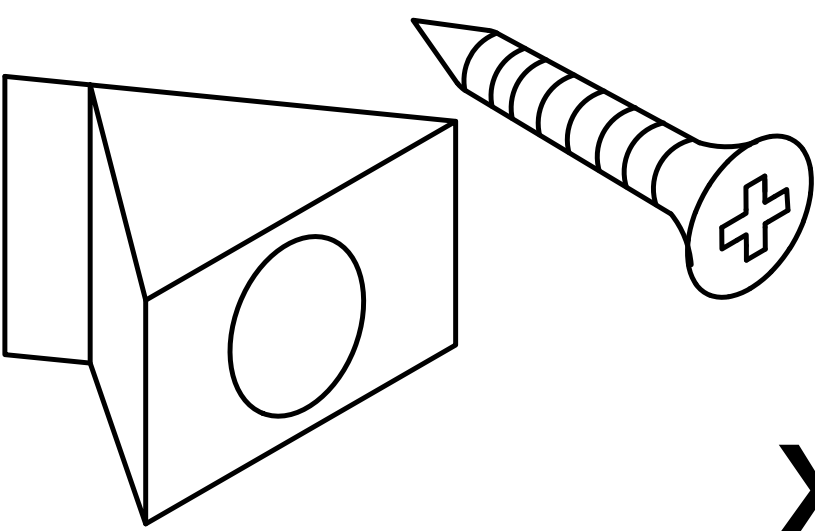


x10

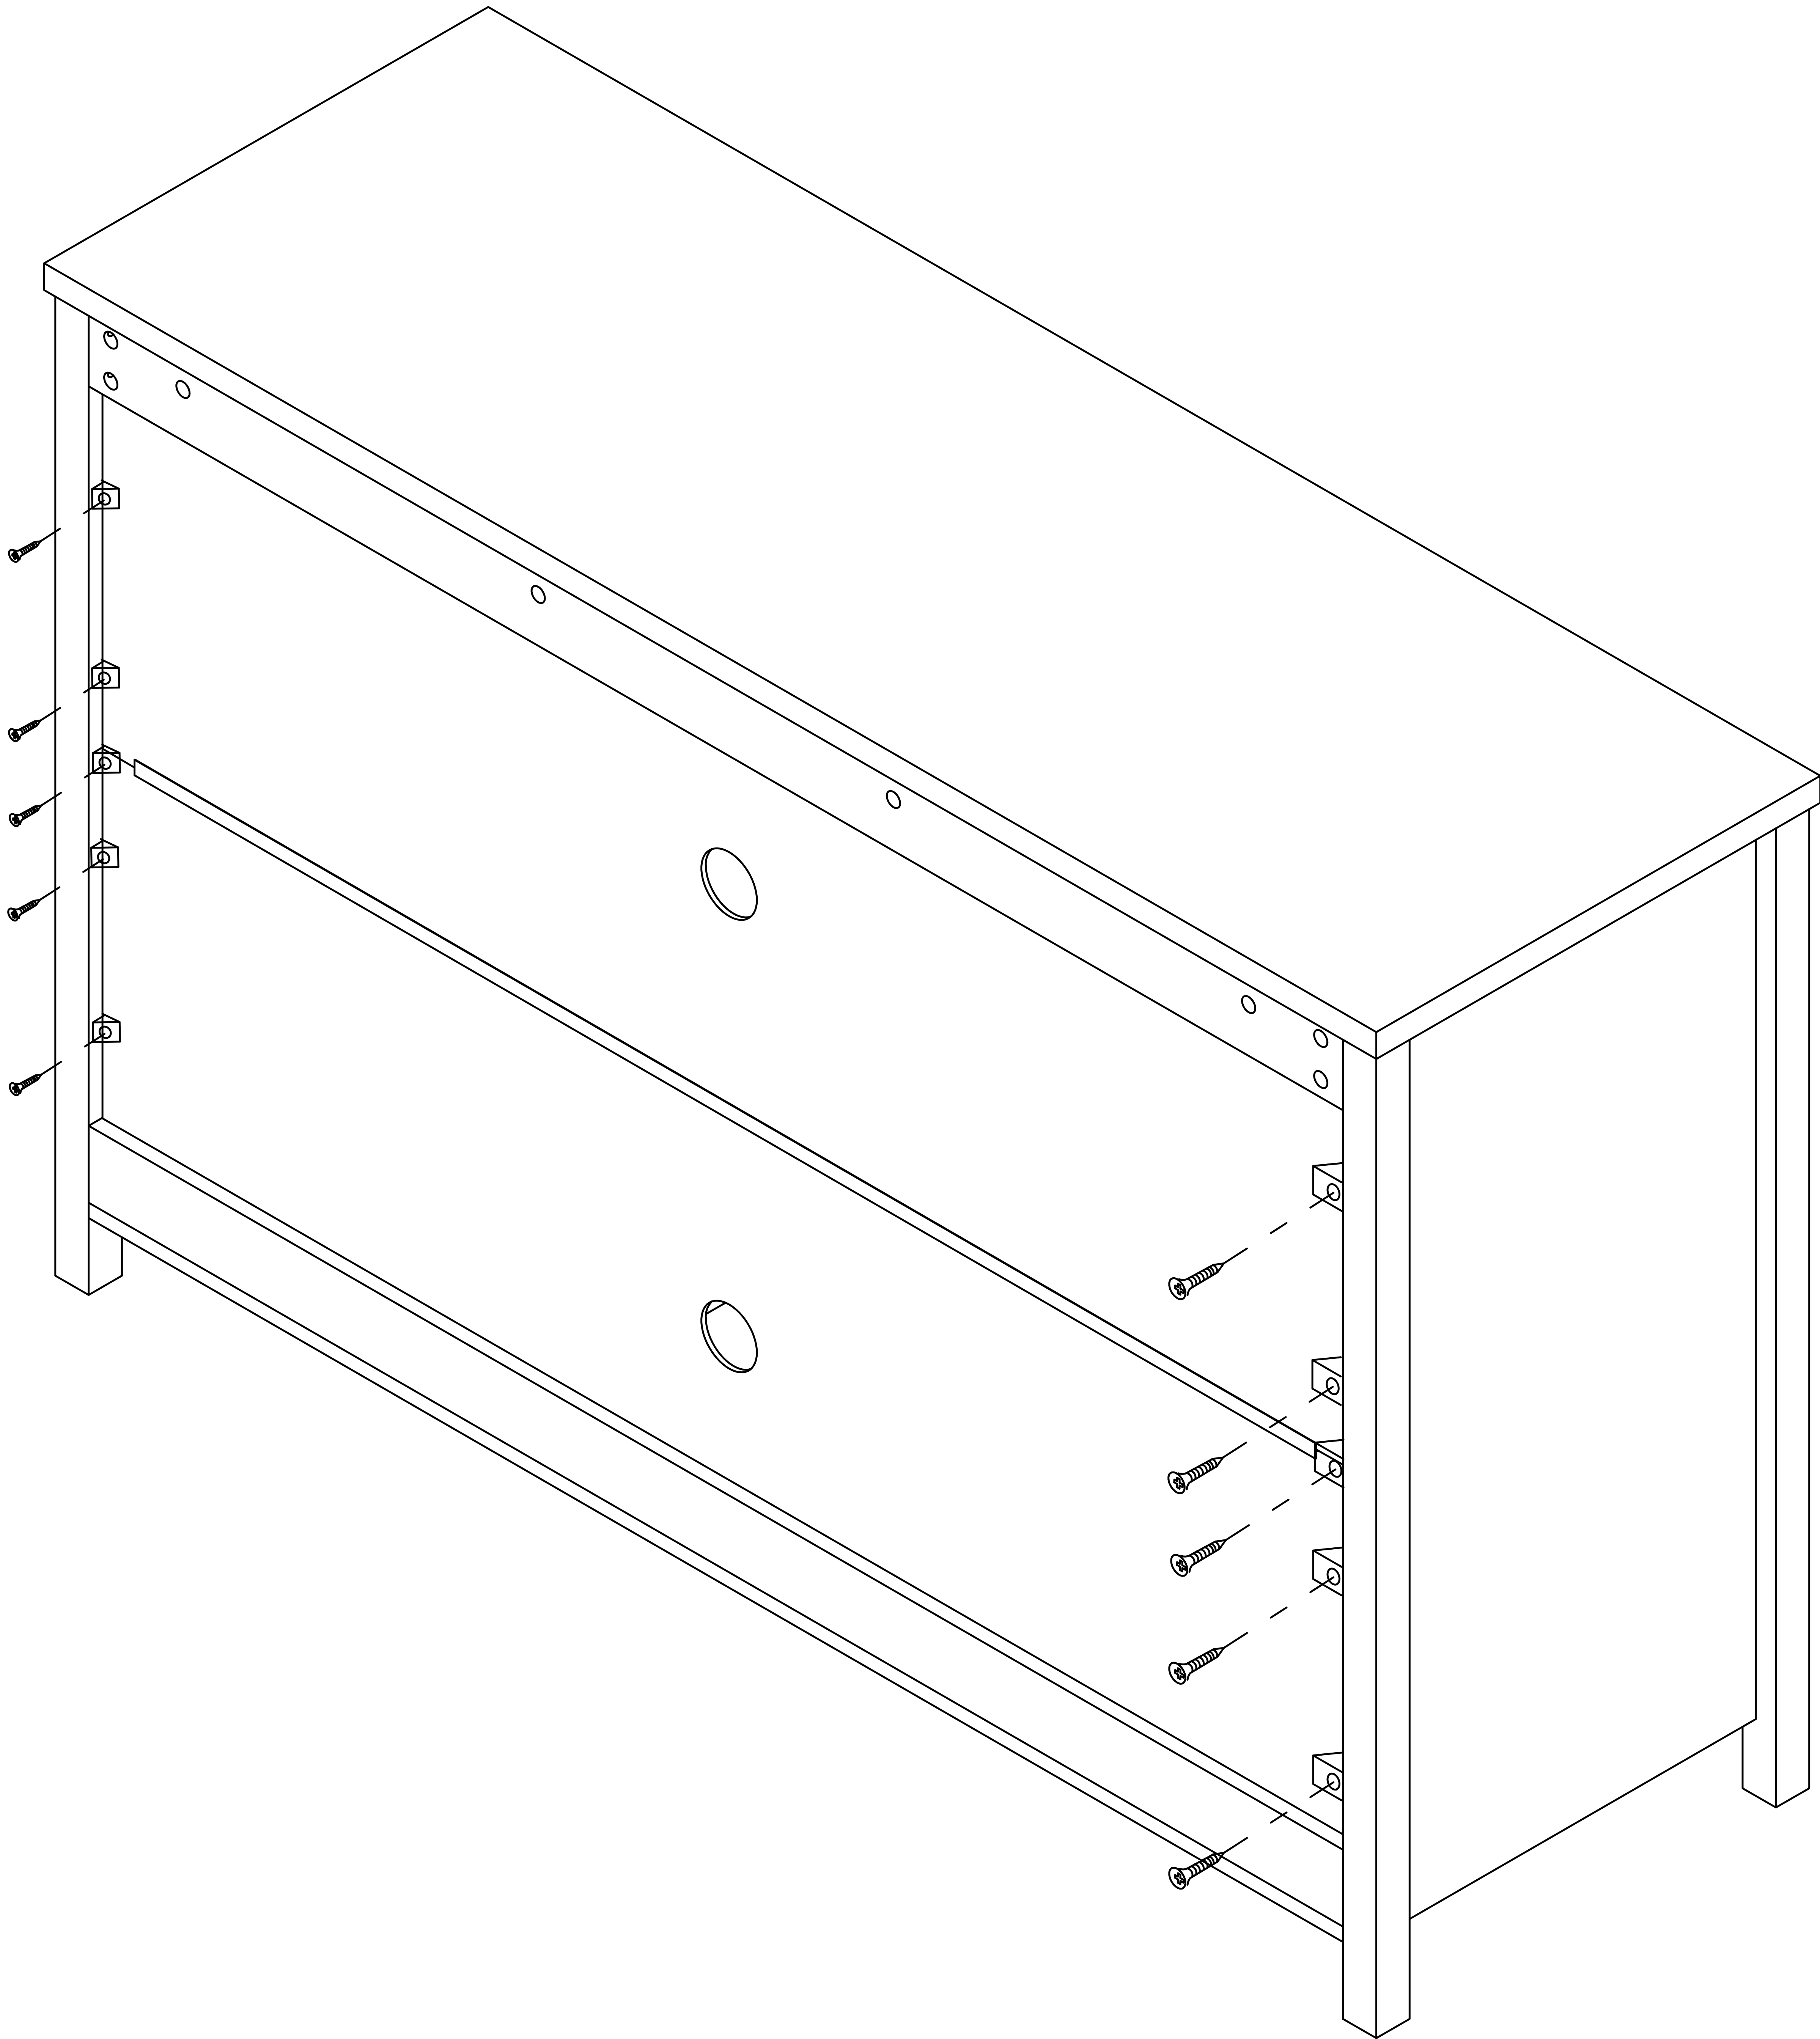


Step 42


13

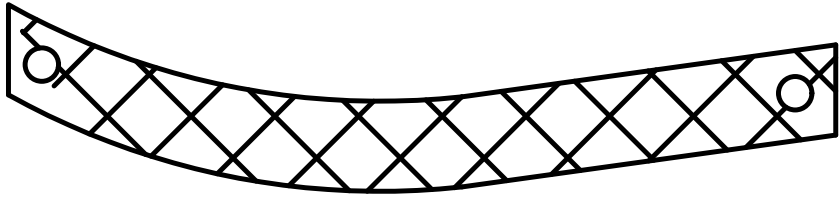


1pcs

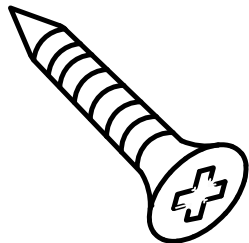

1pcs


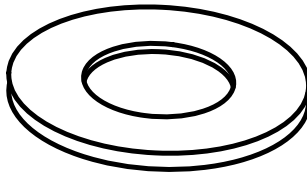


1pcs

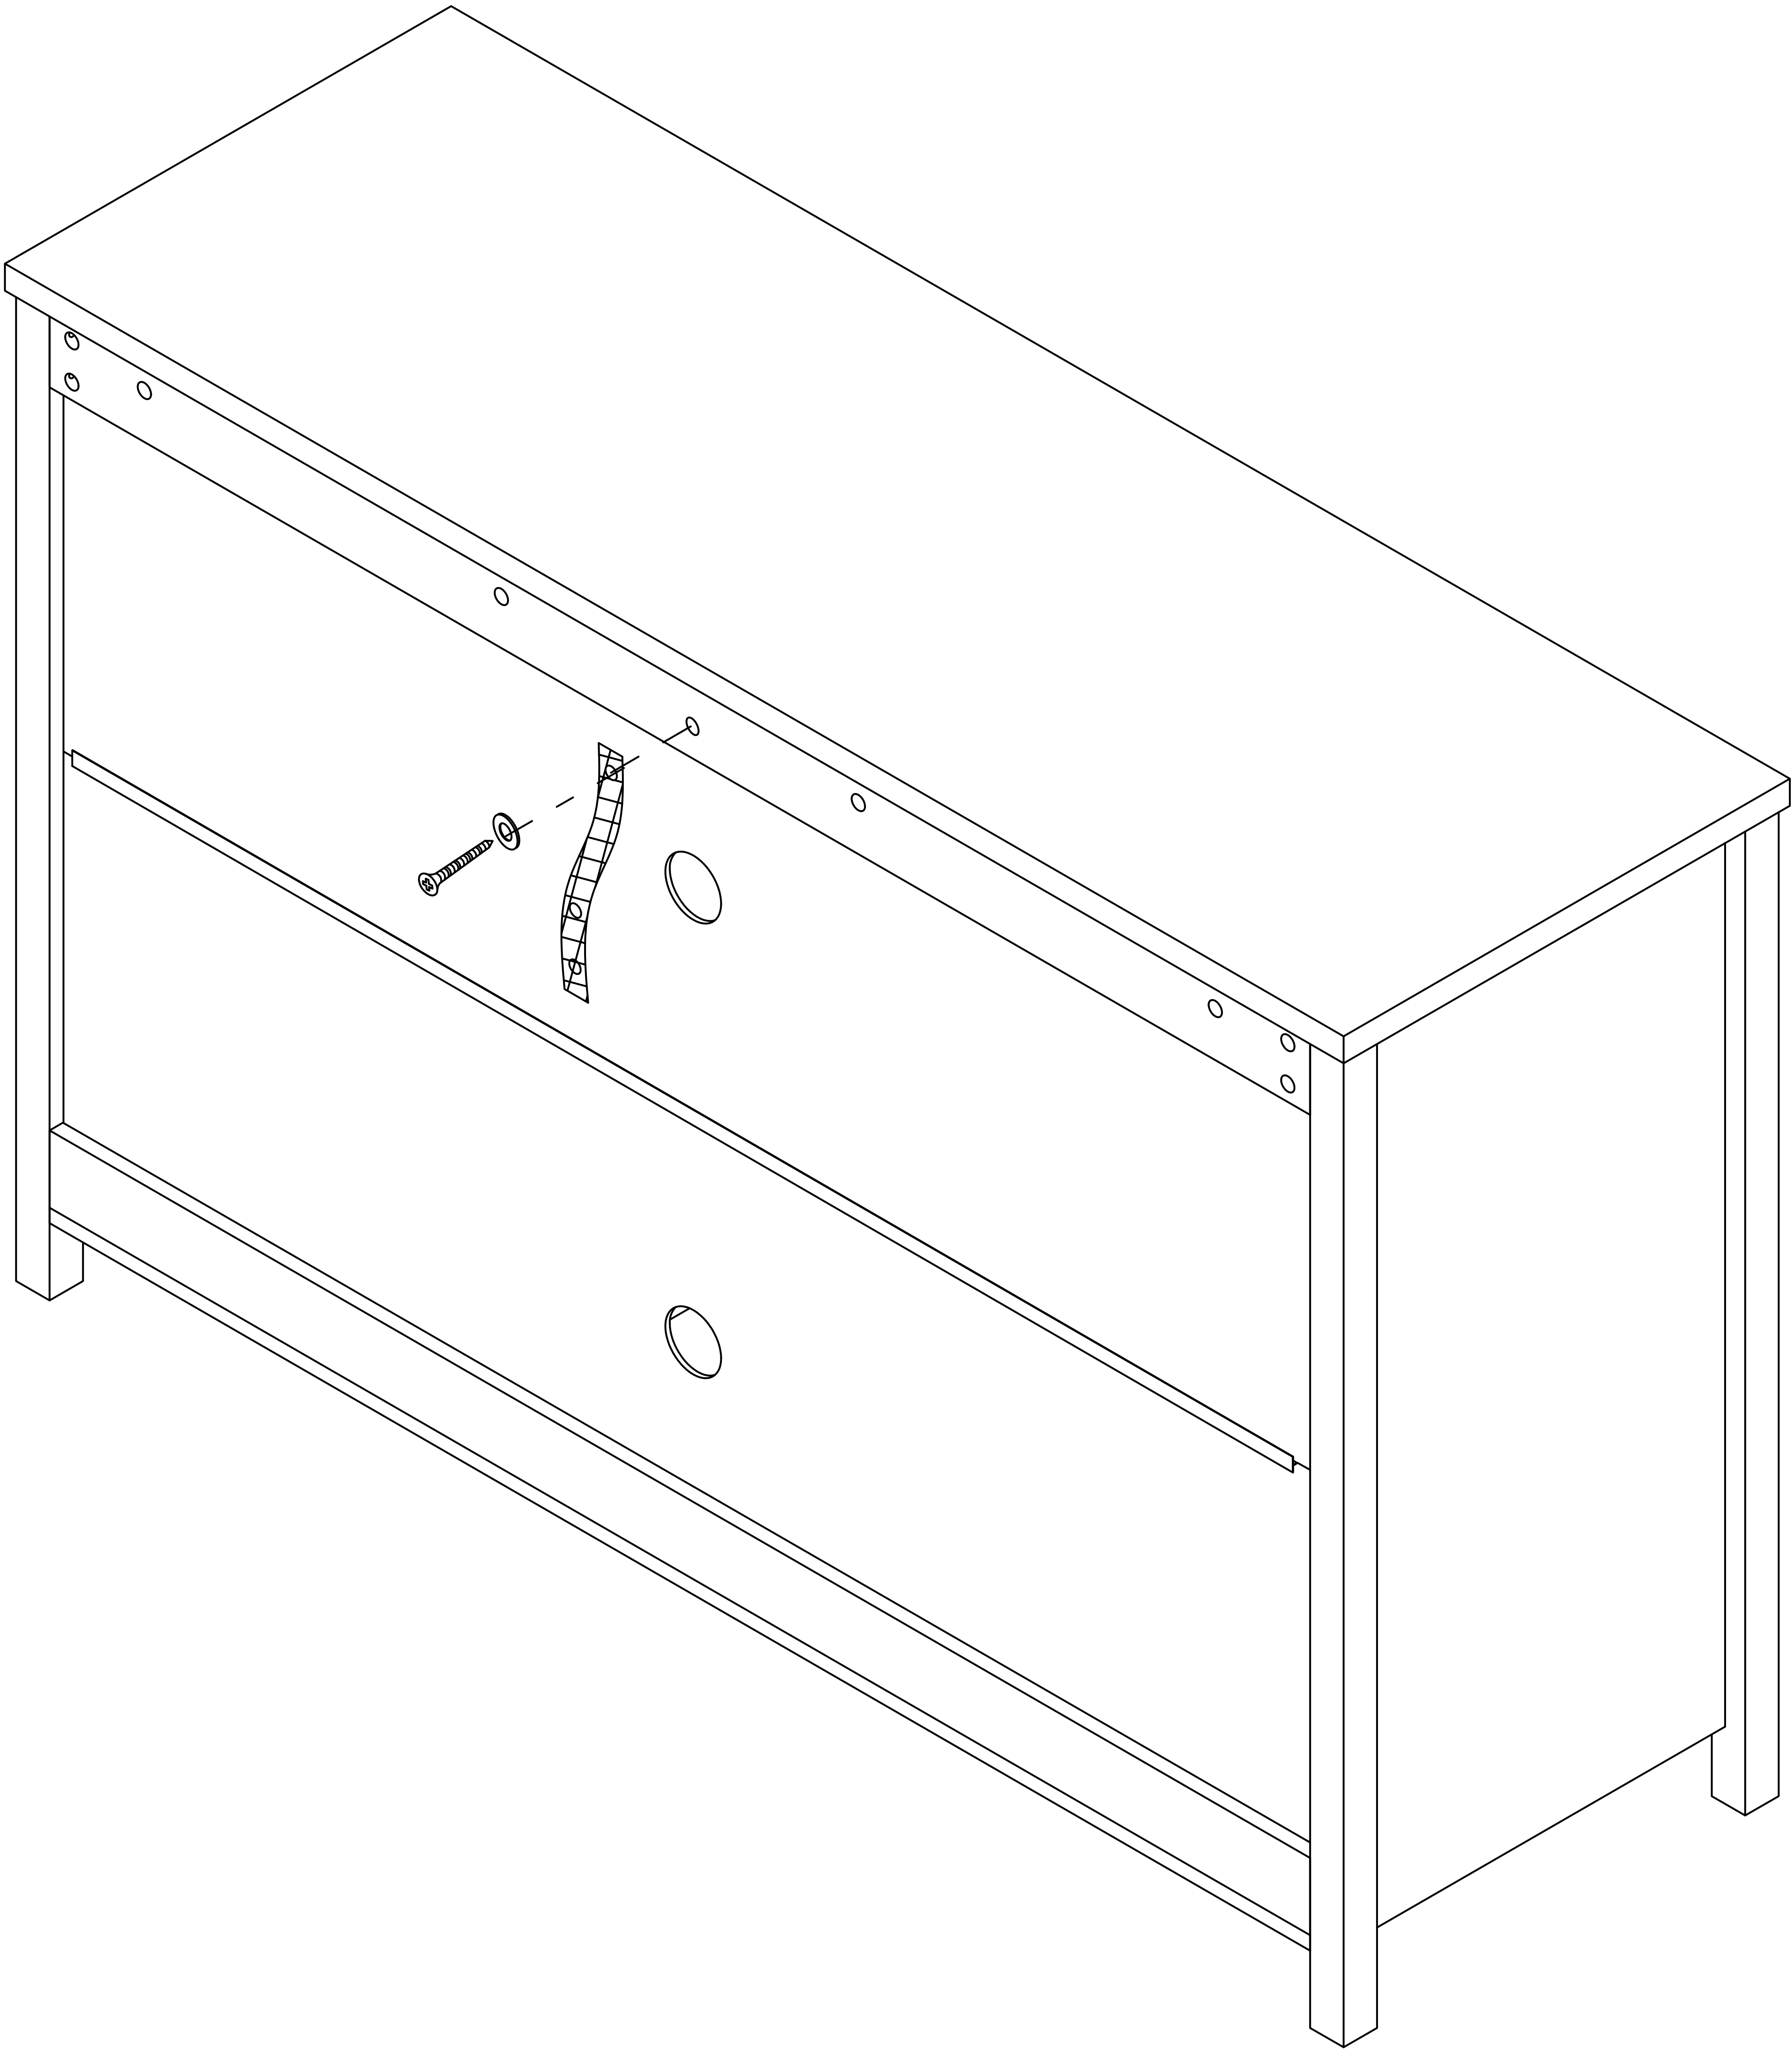

Step 43

use a ruler to measure the approximate height of the product on the wall, and then mark it with a pencil.

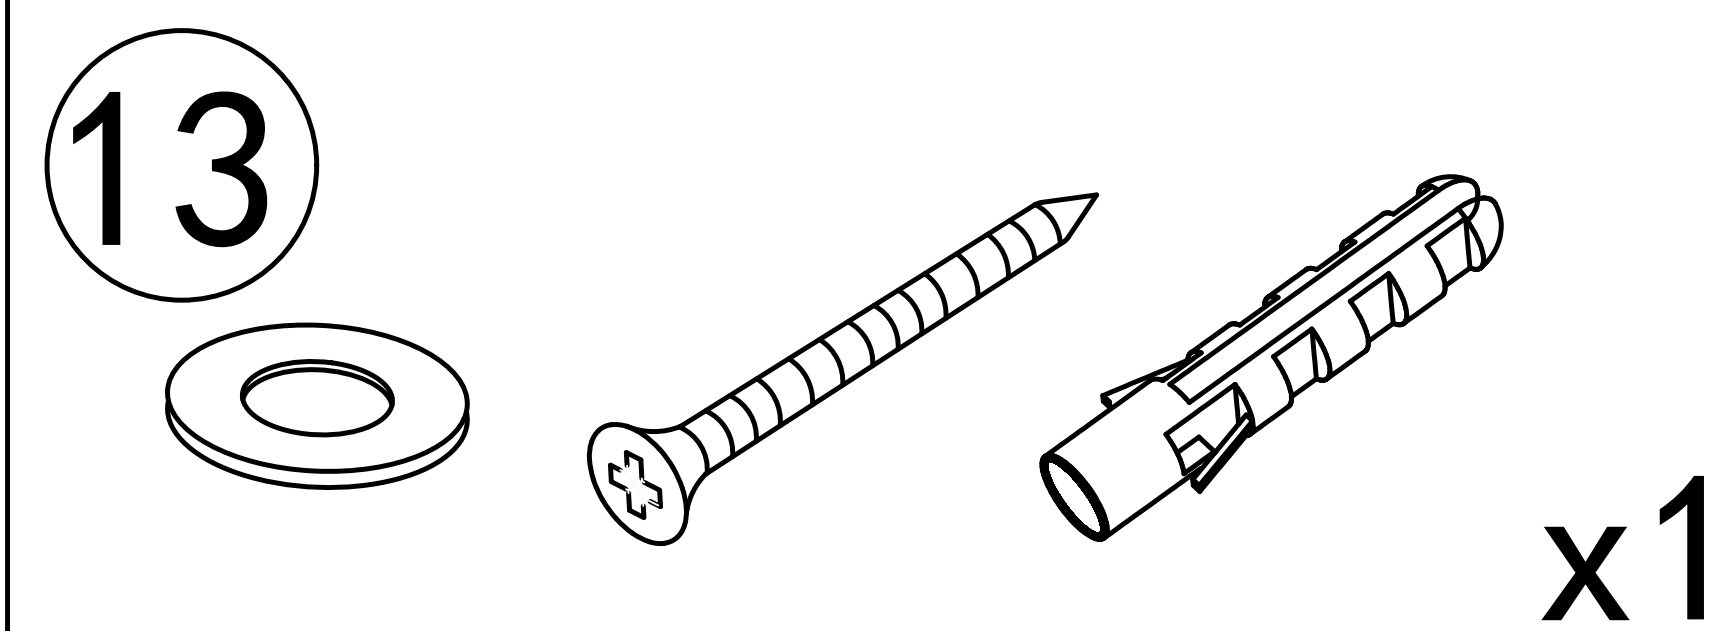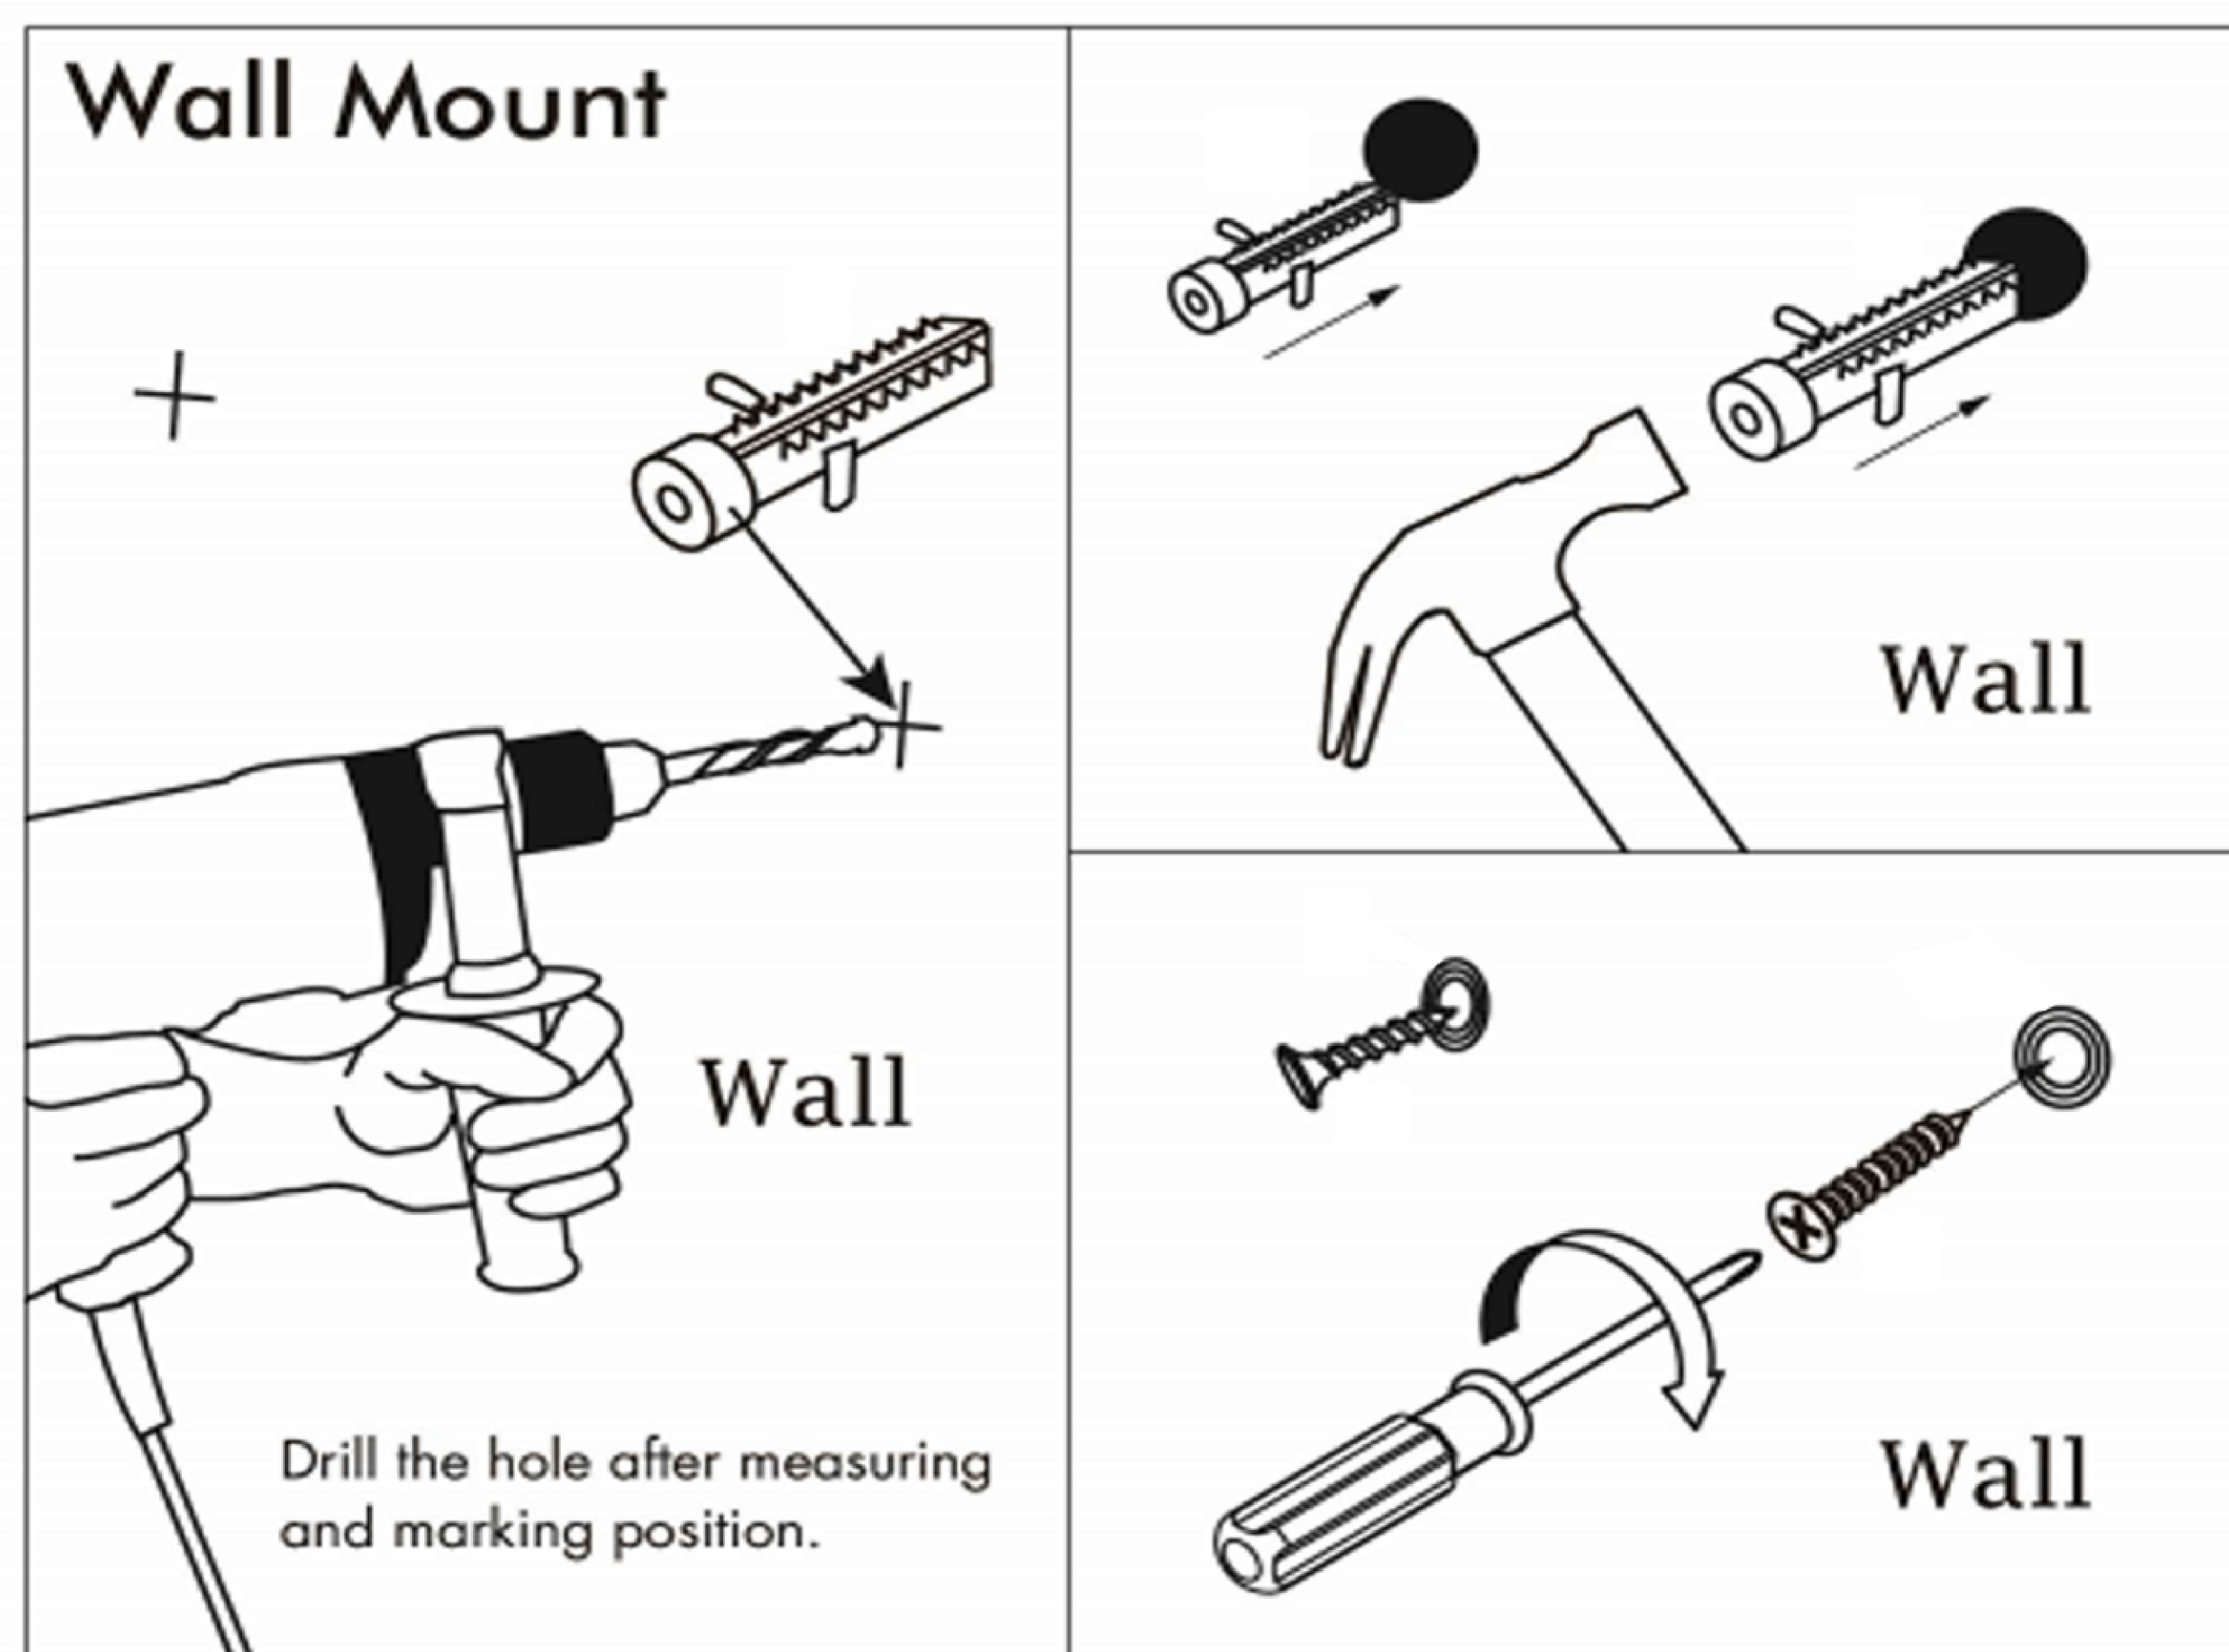

Put the expansion bolt into the hole.

Pass the matching screws through the "anti-rewind" and tighten them to fix them on the wall.

Use a tape drill to make holes in the wall that are suitable for the product screws.

