

Before you begin

Natural wood vanity with mirror, open shelving, side cabinet and gray upholstered stool.



i Prepare your workspace

Read all instructions before assembly. Work on a clean, level surface covered with a soft blanket. Keep small hardware away from children. Have a second adult support the mirror assembly while it is positioned.

Use the supplied Allen keys and a suitable Phillips screwdriver for the knobs. Start bolts by hand. Tighten evenly with hand tools; do not overtighten. Lift furniture when moving it instead of dragging it.

! Check the supplied components

The hardware lists on the following pages are grouped by assembly. Part letters restart in each group; keep the hardware bags separate. Check that all listed hardware is present before beginning assembly.

Assembly sequence: Assemble the desk and cabinet first, then attach the mirror and shelf unit. Keep the hardware for each assembly separate and follow the washer order shown in the diagrams.


01 / Assemble the desk

Desk hardware only. Use the letters shown in the desk diagram below.

Ref.	Component	Quantity
A	Allen key	1
B	M8 x 40 mm socket-head bolt	3
C	M8 spring washer	3
D	M8 flat washer	3

1 Attach the left leg frame

Place the desk upside down on a protected surface. Align the leg frame with the three mounting holes shown. At each position, fit spring washer C and then flat washer D onto bolt B. Insert all three bolts before tightening evenly with Allen key A.

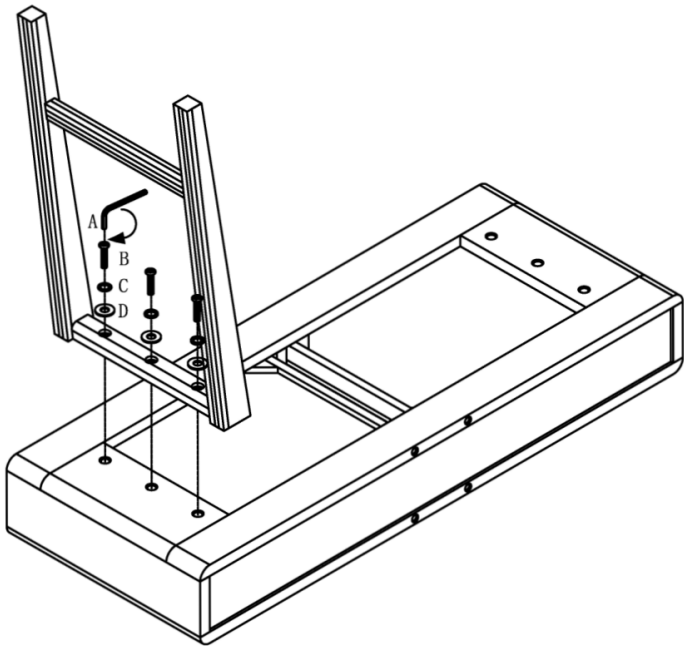

2 Install the drawer knobs

Position each knob on the outside of the drawer front. Secure it from inside using its matching screw. Hold the knob steady while tightening. Carefully return the desk upright with assistance.

Washer order: Bolt head > spring washer > flat washer > mounting surface. Keep the desk supported until the cabinet and mirror assembly are secure.


02 / Assemble the cabinet

Cabinet hardware only. The rear/underside diagram illustrates foot attachment.

Ref.	Component	Quantity
A	4 mm Allen key	1
B	M6 x 40 mm socket-head bolt	8
C	M6 spring washer	8
D	M6 flat washer	8

1 Attach the cabinet feet

Lay the cabinet on a protected surface with the underside accessible. Position each foot at its matching corner bracket. Fit spring washer C and flat washer D onto each bolt B in that order. Start all bolts by hand, then tighten evenly with Allen key A.

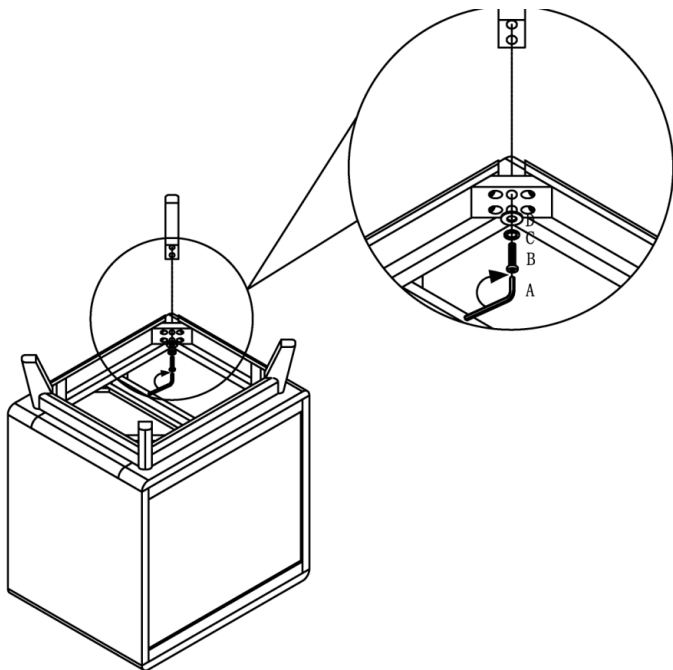

2 Fit the knobs and position the cabinet

Install the two drawer knobs with their matching screws from inside the drawers. Lift the cabinet upright and position it beneath the right side of the desk, matching the configuration on page 1.


Before positioning: Check that the feet are securely attached and the cabinet is stable. Lift the cabinet when moving it; do not drag it across the floor.

03 / Attach the mirror unit

For the mirror with the three-compartment side tower. Do not use the alternate mirror-only configuration.

Ref.	Component	Quantity
A	Allen key	1
B	M6 x 40 mm socket-head bolt	2
C	M6 x 20 mm socket-head bolt	10
D	Long rear support strip, 390 x 40 x 4 mm	2
E	Short connector plate, 80 x 20 x 3 mm	1
F	Spring washer, 6 x 12 mm	2
G	Flat washer, 6 x 14 mm	2

- 1. Align the mirror panel and side shelf tower using their matching holes. Fit spring washer F and flat washer G onto each long bolt B; secure the two sections with Allen key A.
- 2. With a second adult supporting the unit, position it on the desk. Attach the two long rear strips D and short connector E at the existing mounting holes, using bolts C as shown. Do not drill new holes.

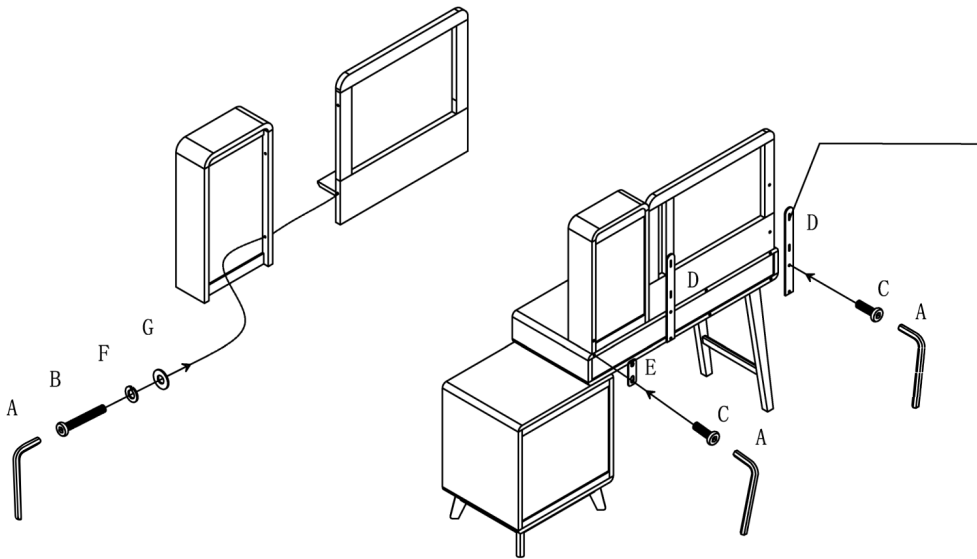

- 3. Check all connections, then tighten securely. Protect wall-facing screw heads with suitable felt pads, as shown in the diagram. Felt pads are not a substitute for tip-over restraint.

Final check: Confirm that all feet contact the floor and drawers operate freely. Do not stand on the desk or stool.