

ASSEMBLY INSTRUCTIONS: WI7853BL-N WHITE NIGHTSTAND




1. PRE-ASSEMBLY CHECKLIST


- **Space:** Clear a flat, carpeted area to avoid scratching the white finish.



- **Tools Needed:** A Phillips head screwdriver (a flathead may also be helpful).




- **Inventory:** You should have a top panel, two side panels, a bottom shelf, a back panel, and the drawer components (front, sides, back, and bottom).

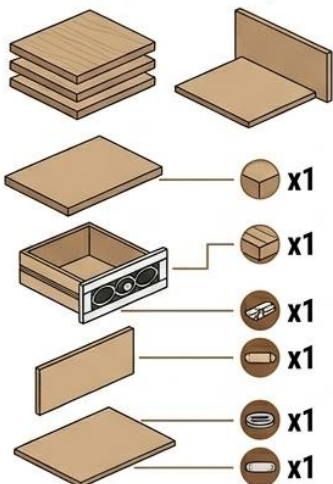


2. INSTALLATION STEPS

Step 1: Hardware Preparation

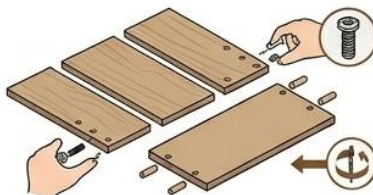


TIP: Don't over-tighten the cam bolts; stop once the shoulder of the bolt is flush with the wood.

Step 2: Building the Main Frame

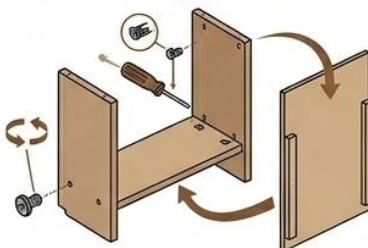


Step 3: Attaching the Top

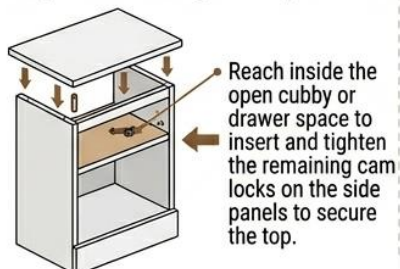

Step 4: Drawer Assembly

1 Sides to Front

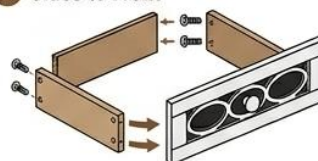

1



Bottom Panel

2



Bottom Panel

3



Back Panel

4



Hardware

Step 5: Final Touches



Check all cam locks one last time to ensure unit is sturdy.

Check all an any identification stickers and wipe down with a damp.

Peel off any identification with a damp cloth.