



# ASSEMBLY INSTRUCTIONS

Ax2

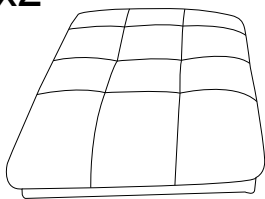


Bx2

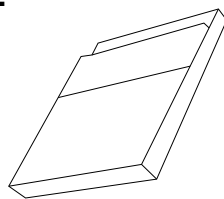


Cx2

(STRAIGHT)




Dx4

(OBLIQUE)



Ex12




M6\*35

Fx1




1

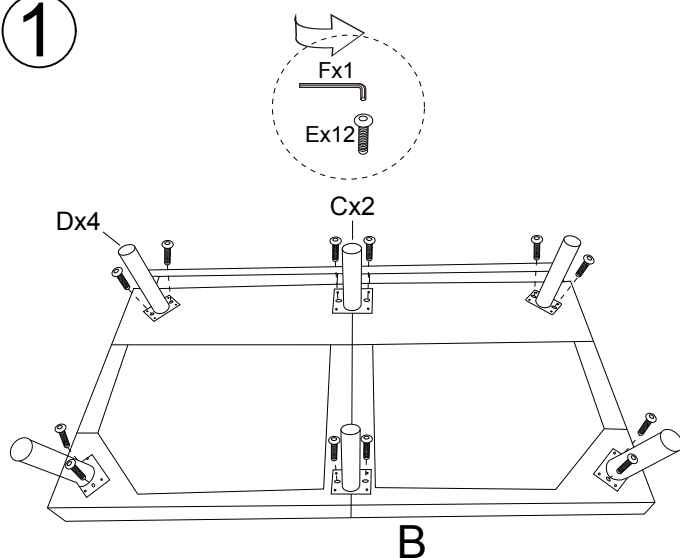


2

The left side cushion: Button up the T-button and the rubber band.

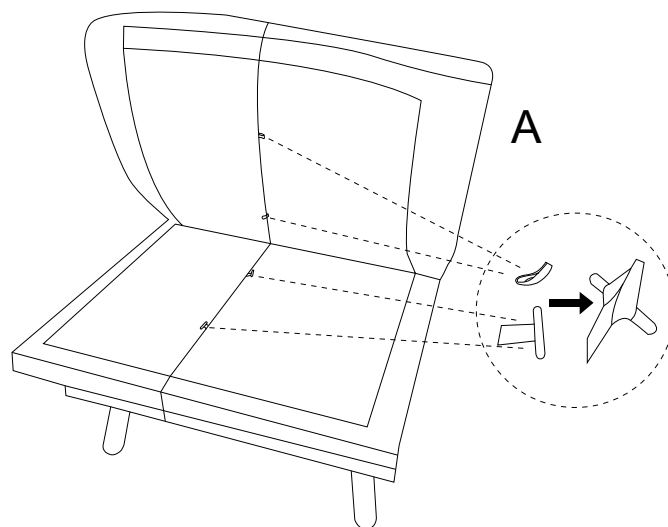

3

Lay the soft cushion flat and adjust the position. Repeat Step 2&3 for the right cushion.

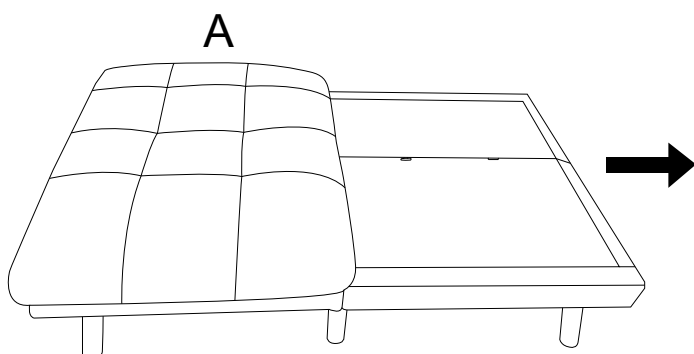

4

Lift up the backrest, the backrest degree can be adjusted.

