


MF-7001-1/2/3


INSTRUCTION MANUAL

FITTINGS

A.  * 1
Spare nut

B.  * 11

C.  * 1


D.  * 1

E.  * 1

F.  * 1


G.  * 1

ASSEMBLY ICON

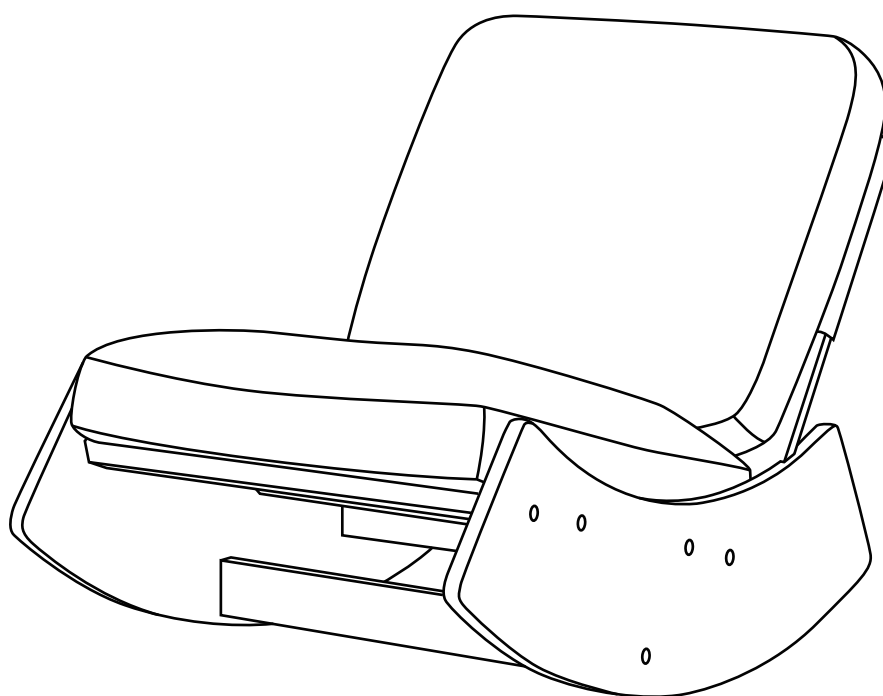


Tighten the product as shown in the figure above.


D

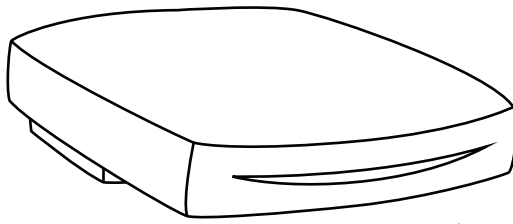


F

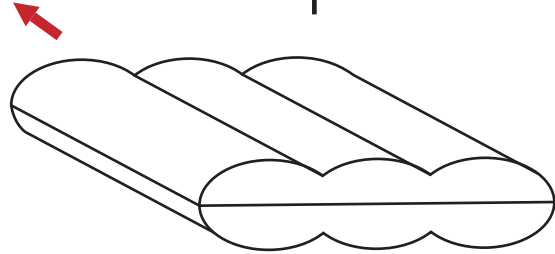


- 1、 Open D zipper and insert F into D
You can fold the F first,
tuck it in and then unfold it,
it's much easier

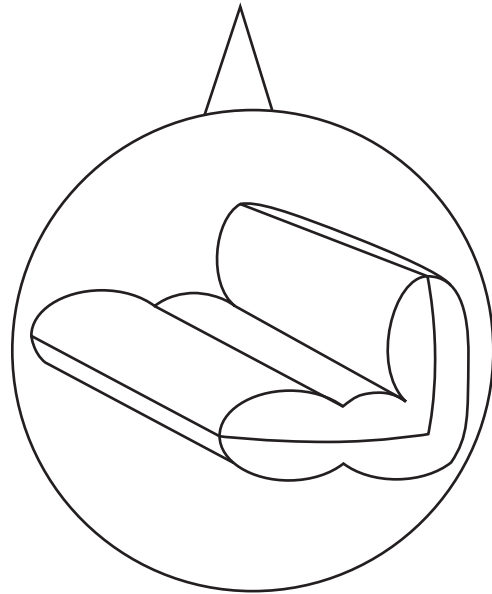

E

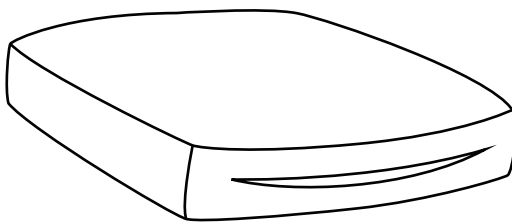


G

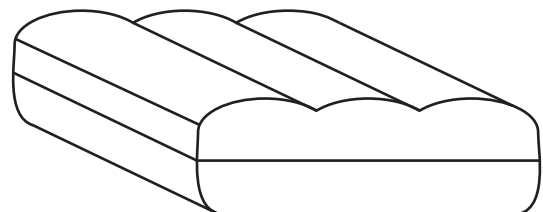


- 2、 Same as the previous step,
open the zipper of E and insert G into E


Note: D has a bag behind it, E has a grey non-slip cloth behind it,
F stuffed with doll cotton, G stuffed with doll cotton + sponge

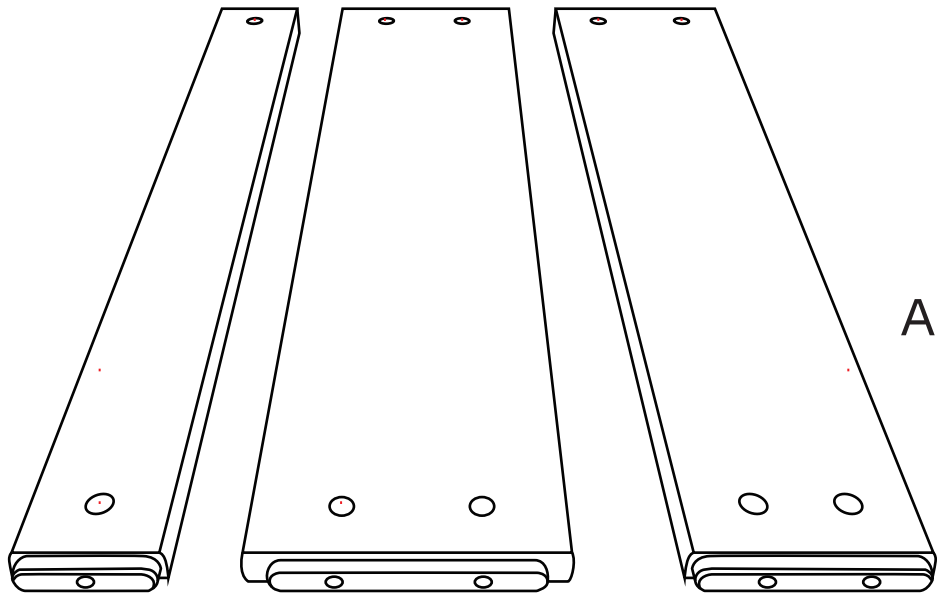


3、 Take out 3 wooden boards,the nut has already been installed

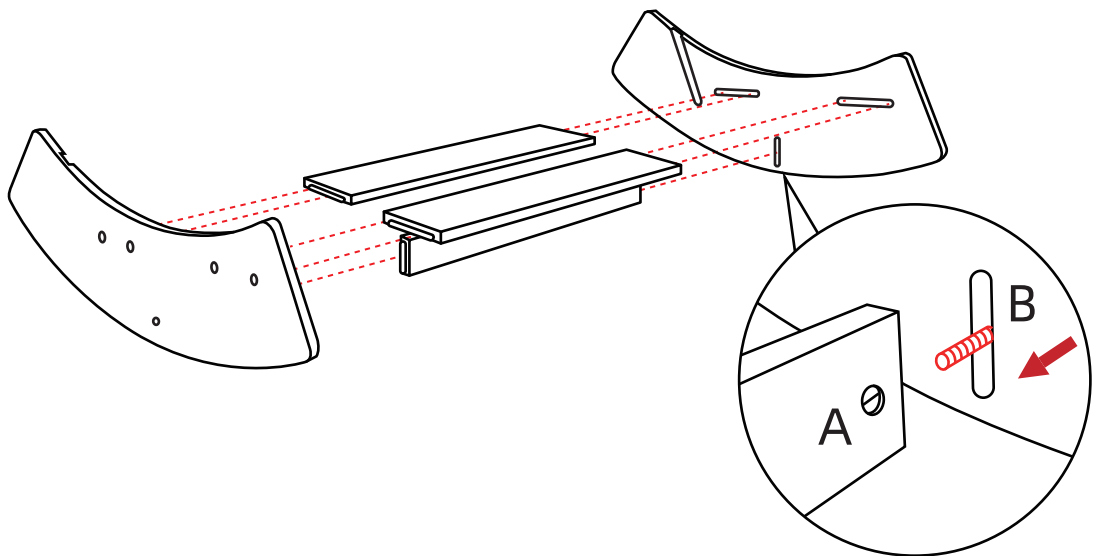

4、 Connect 2 wooden legs and 3 wooden batten together as shown in the diagram, with screws passing through the legs from the outside and screwing into the holes in the battens

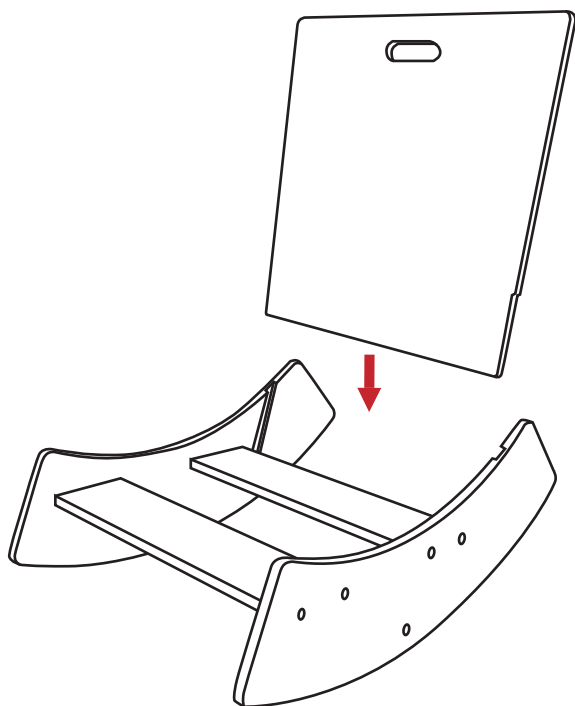

- 5、 Gently insert the backrest into the slot of the wooden block, aligning it accurately.

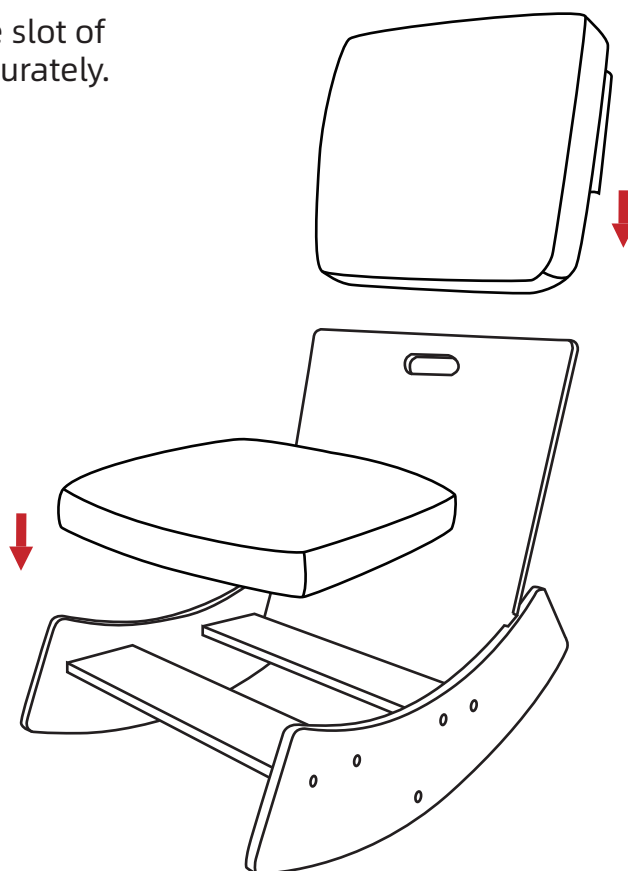

- 6、 Place take the seat cushion gently on the seat, and insert the backrest cover into the backrest wood panel.