


# ASSEMBLY INSTRUCTIONS

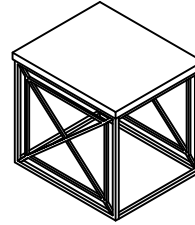

072-915

## TOOLS REQUIRED:

Allen Wrench (Provided, Part C)

## BEFORE YOU START:

1. Check the hardwares against the hardware list to make sure all items are present.
2. Assemble your furniture on a soft, flat surface to avoid scratching the finish.
3. **CAUTION:** Do not over tighten screws, nuts or bolts during assembly.
4. Your furniture may require occasional tightening.

## INSTRUCTIONS:

1. Turn the top panel upside down on to a clean soft surface.
2. Attach both leg frames to top panel and put bottom stretchers to the leg frames. Tighten Bolt (A) with Flat Washer (B) by Allen Wrench (C) as shown in Figure 1 & 2.
3. Tighten Bolt (A) with Flat Washer (B) by Allen Wrench (C) to secure the top panel as shown in Figure 3.

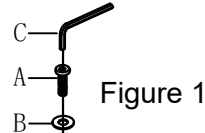


Figure 1

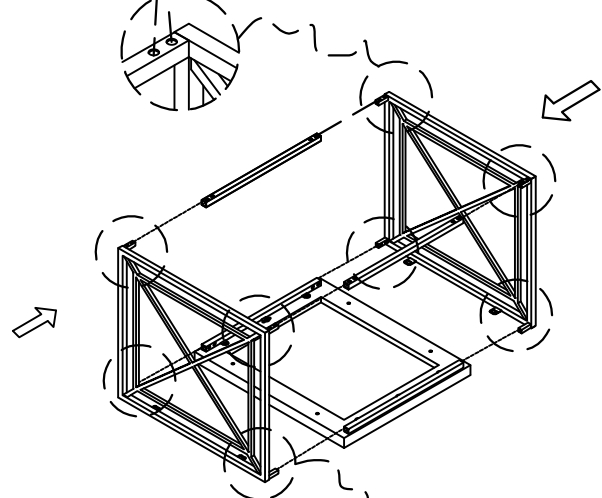


Figure 2


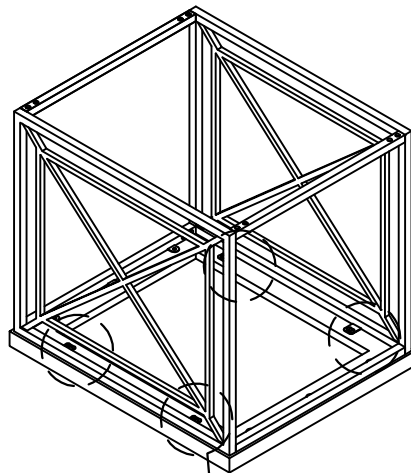





Figure 3

HARDWARE LIST			
A		Bolt (Ø1/4"*5/8")	20pcs
B		Flat Washer (Ø1/4"*16*1.5mm )	20pcs
C		Allen Wrench (100*50*4mm)	1pcs