

Assembly instructions - Mobile sun canopy

Product information

Dear customer, you have decided on a mobile sun canopy as sun protection for your terrace.

terrace. The sun canopy is water-repellent against light rain showers. To avoid to avoid damage, you must retract or dismantle the sun canopy before heavy before heavy rain and storms.

Only set up the mobile sun canopy on even ground.

Parts list (see fig. page 2)!

Assembly

1. Remove the pre-assembled screws from the screen feet A.

Form two cross-shaped uprights from one short and one long screen foot element A each.

Now place the two feet B on the previously mounted cross-shaped uprights. The drill holes must be aligned. Screw the feet to the uprights from above. Tighten the screws.

2. Insert the support legs part C1 and C2 into the previously mounted support feet.

3. Lift the guide elements of the fabric cover and push the short horizontal rail D1 through the guide elements in the direction of the end piece with the pulley. Please ensure that the two adjacent holes point downwards during this step! Insert the end piece with the pulley facing upwards into the short rail and screw it in place. The screw heads are visible from below. from below. Insert the long horizontal rail D2 into the short rail and screw it together. Lock the guide elements on both sides in the hole provided in the horizontal rail by means of the pins attached to the chain.

4. Unscrew the hand nuts on the end pieces and insert the bolts into the sockets of the support legs. The two rollers now face each other and point upwards! Screw on the hand nuts. Adjust the angle of inclination as you wish via the teeth and tighten the hand nuts to fix the roof. fix the roof.

5. Finally, guide the pull rope over the pulleys. When you pull the rope, the roof should extend and retract smoothly. For details see fig. page 3.

Disassembly

Disassembly is carried out in reverse order

Packing and storage

Pack and store the sun canopy in a clean and dry condition so that no mould can form. If any parts are damp, allow them to dry thoroughly first.

Care

Clean the fabric with a commercially available polyester cleaner. The other elements can be with a damp cloth.


Technical data

Set-up dimensions: 375x225x220cm. Frame made of powder-coated tubular steel, rail 45x72cm, cover made of 100% polyester.

Safety advice


Always weigh down the feet of the sun canopy with min. 40x40cm washed concrete/walkway slabs (not included in delivery) to ensure a safe stand. The slabs must be inserted into the foot profile. In case of rising wind, the retraction of the roof is absolutely necessary. This article must not be erected on balconies. Any warranty claim is excluded in the event of non-observance.

Parts List

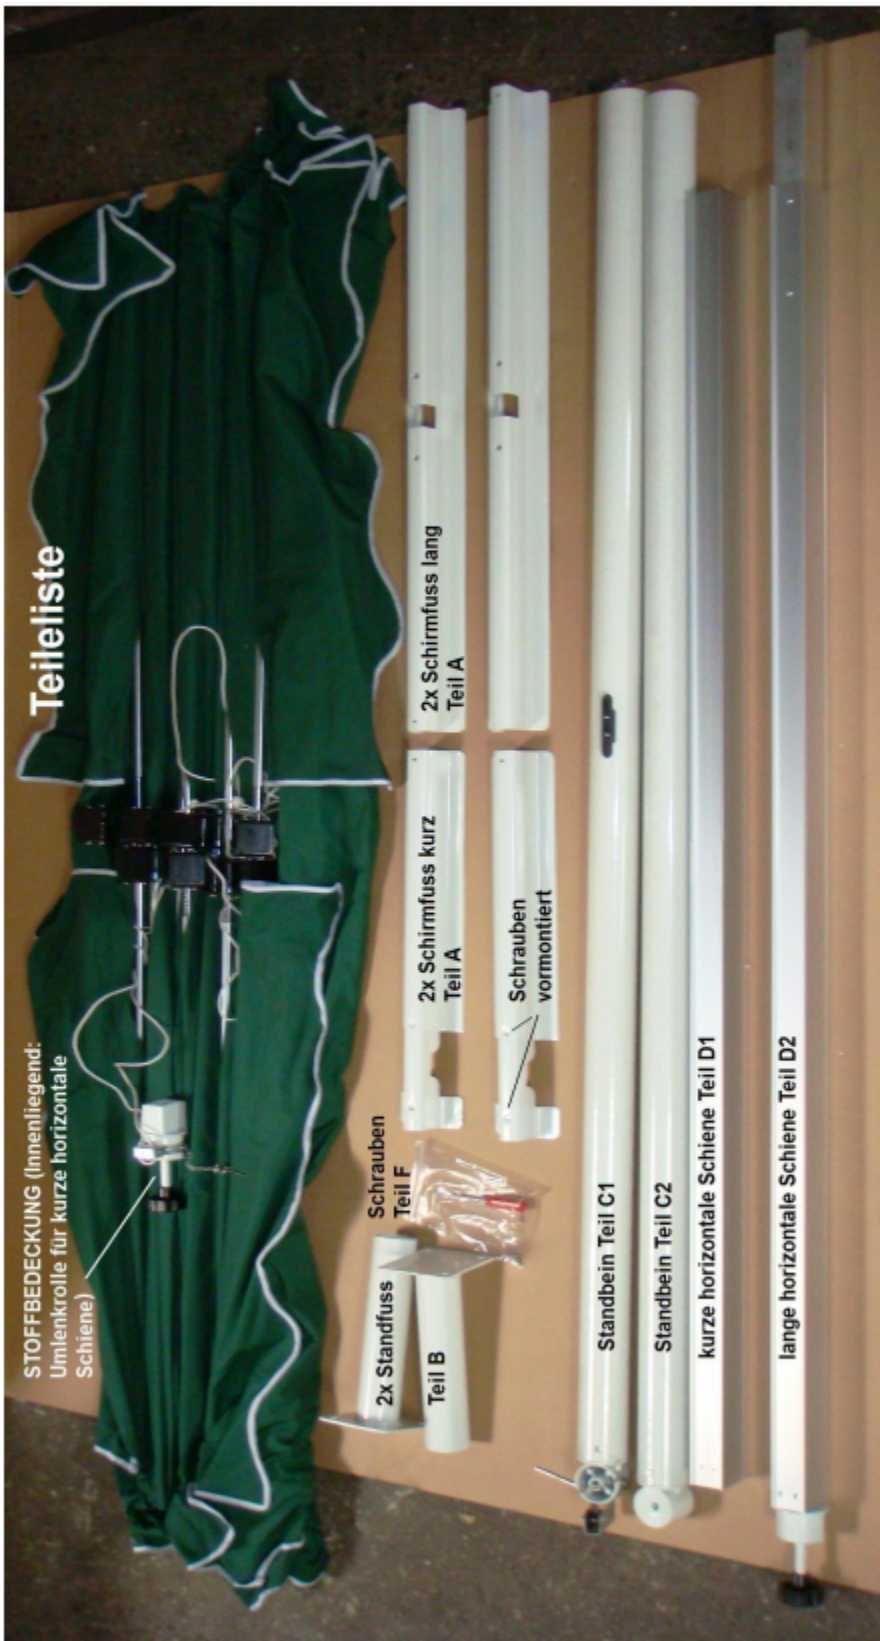



View Cloth covering attached and screwed to the support leg. The guide pulley of the cable pull is horizontal to the support leg! In this position insert the locking pin into the hole provided for it!

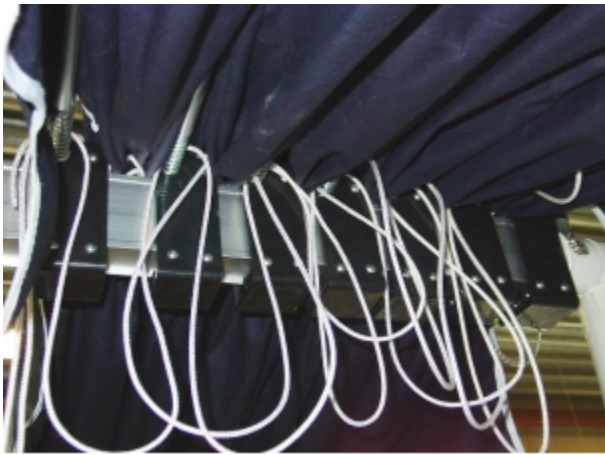

View of fabric covering from below, the cable is arranged like this ex works, please do not change! Now pull the fabric cover forwards.



View of fabric cover extended over horizontal rail. Shortly before the end position, the rope pull must be through the vertical pulley as shown. Now pull the rope until the end position is reached.



In this position the roof is completely open. Now you can secure this position with the locking pin.
To push the roof together - remove the pin - pull one side of the rope- the elements slide together. Done!