

## **DAYBED WITH TRUNDLE**

---

### **ASSEMBLY INSTRUCTIONS**




## ASSEMBLY TIPS:

- 1.Remove hardware from box and sort by size.
- 2.Please check to see that all hardware and parts are present prior to start of assembly.
- 3.Please follow attached instructions in the same sequence as numbered to assure fast and easy assembly.



### Warning !




- 1.Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
- 2.This product is for home use only and not intended for commercial establishments.

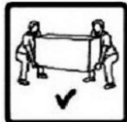



**ASSEMBLY TIME 30 MINUTES**

## PARTS IDENTIFICATION

### B1 (BOX 1)

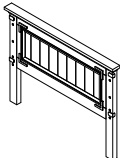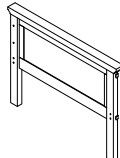

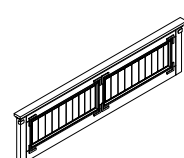



<b>A</b>		LEFT SIDE FRAME	1PC
<b>B</b>		RIGHT SIDE FRAME	1PC
<b>C</b>		ROLL SLAT (13PCS/SET)	1SET

### B2 (BOX 2)

<b>D</b>		BED RAIL	2PCS
<b>E</b>		BACKREST FRAME	1PC


## HARDWARE IDENTIFICATION

### Z - B2 (BOX 2) - HARDWARE PACK IS LOCATED IN (B2)


<b>1</b>	LONG BOLT		8PCS
<b>2</b>	HALF ROUND NUT		8PCS
<b>3</b>	SHORT BOLT		4PCS
<b>4</b>	WOOD SCREW		8PCS
<b>5</b>	WOOD DOWEL		8PCS
<b>6</b>	ALLEN WRENCH		1PC

**NOTE: PHILLIPS HEAD SCREW DRIVER IS REQUIRED IN THE ASSEMBLY PROCESS; HOWEVER, MANUFACTURER DOES NOT PROVIDE THIS ITEM.**

**STEP 1:**

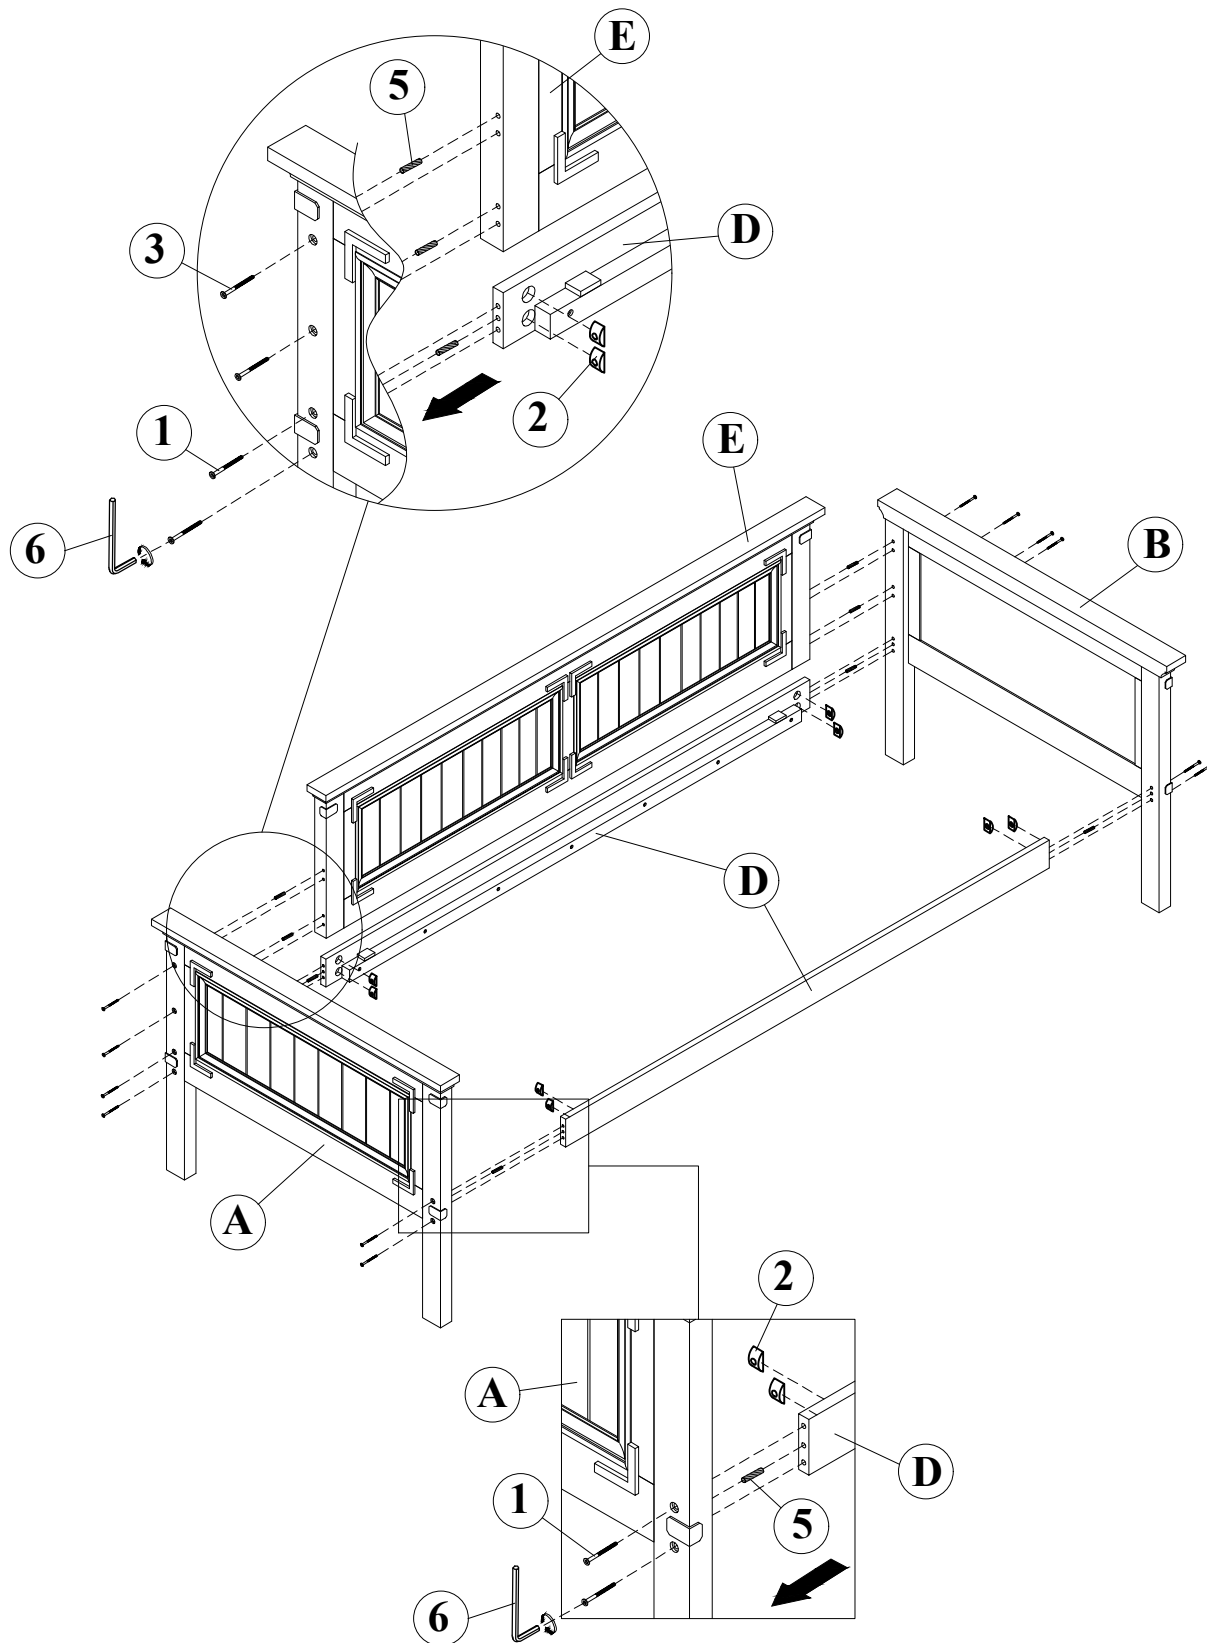

**STEP 2:**

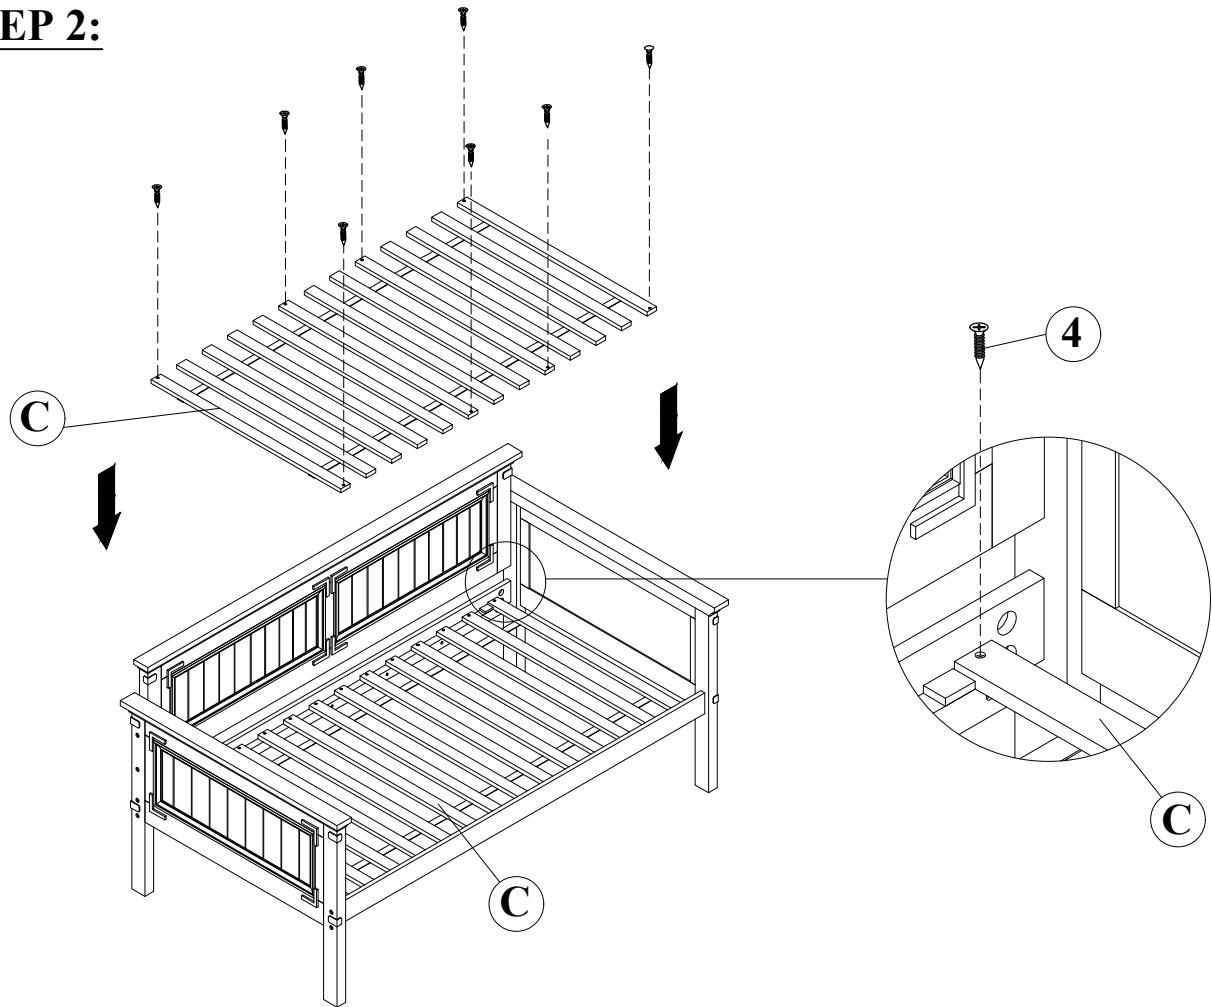

**STEP 3:**  
**Complete**

