


Hall Tree

Assmby Instructions - Please keep for future reference

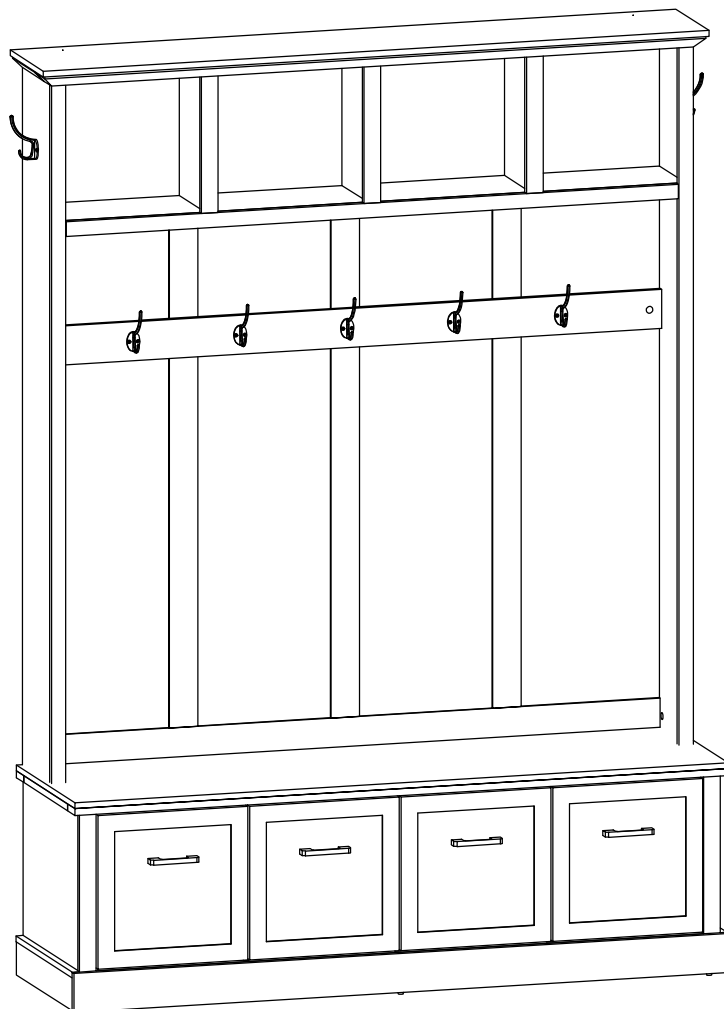

Dimensions

Width-55.12inch
Depth-15.75inch
Height-75inch

! WARNING	
	This product is NOT a Clothing Storage Unit (CSU). DO NOT use it for clothing storage. Improper use may cause furniture tipover.

Important - Please read these instructions fully before starting assembly




Safety and Care Advice

Important – Please read these instructions fully before starting assembly

- Check you have all the components and tools listed on the following pages.
- Remove all fittings from the plastic bags and separate them into their groups.
- Keep children and animals away from the work area, small parts could choke if swallowed.
- Make sure you have enough space to layout the parts before starting.

- During assembly do not stand or put weight on the product, this could cause damage.
- Assemble the item as close to its final position (in the same room) as possible.
- Assemble on a soft level surface to avoid damaging the unit or your floor.
- Parts of the assembly will be easier with 2 people.

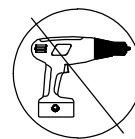

- To reduce the likelihood of damaging your product please ensure that your power drill is set on a low torque setting.

Care and maintenance

- Only clean using a damp cloth and mild detergent, do not use bleach or abrasive cleaners.
- From time to time check that there are no loose screws on this unit.
- This product should not be discarded with household waste. Take to your local authority waste disposal centre.

Handy Hints

- Assemble all parts and bolts loosely during assembly, only once the product is complete should you fully tighten the bolts
- Regularly check and ensure That all bolts and fittings are tightend properly.

WARNING

In order to help prevent overturning – please follow these instructions

To help prevent product toppling over please follow the below steps:-

Use the anti tip stap or wall fixing method provided (if applicable)
Do not allow children to climb or hang on the furniture
Do not open more than one drawer at a time
Do not place heavy items in the top drawers
Do not place heavy items on top of the furniture, unless the furniture has been designed for this purpose


Using Camlocks

Step 1

Connect the male camlock as directed in the assembly instructions using a screwdriver.

1


DO NOT OVER TIGHTEN.
NE PAS SERRER EXCESSIVEMENT.

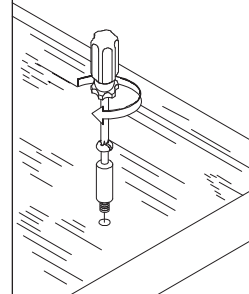

Step 2

Push the male camlock into the entry hole.

2

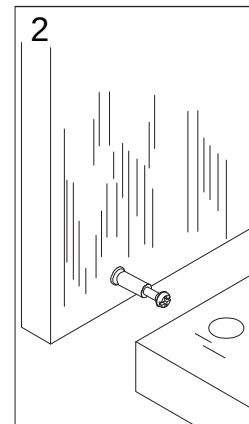


Step 3

Insert the female camlock as shown in the instruction.

Note: ensure that the arrow on the top of the camlock points towards the entry hole for the male camlock.

3

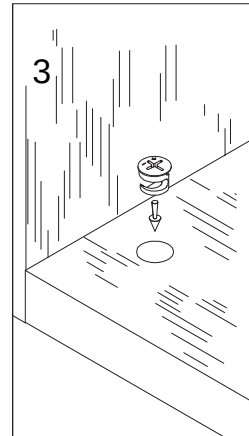


Step 4

Turn the female camlock clockwise with a screwdriver.


You should feel a click when the camlock is locked in place.

The joint is now secure.

4

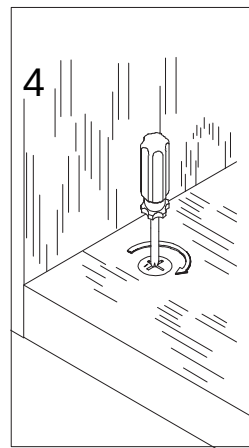












Assembly Instructions

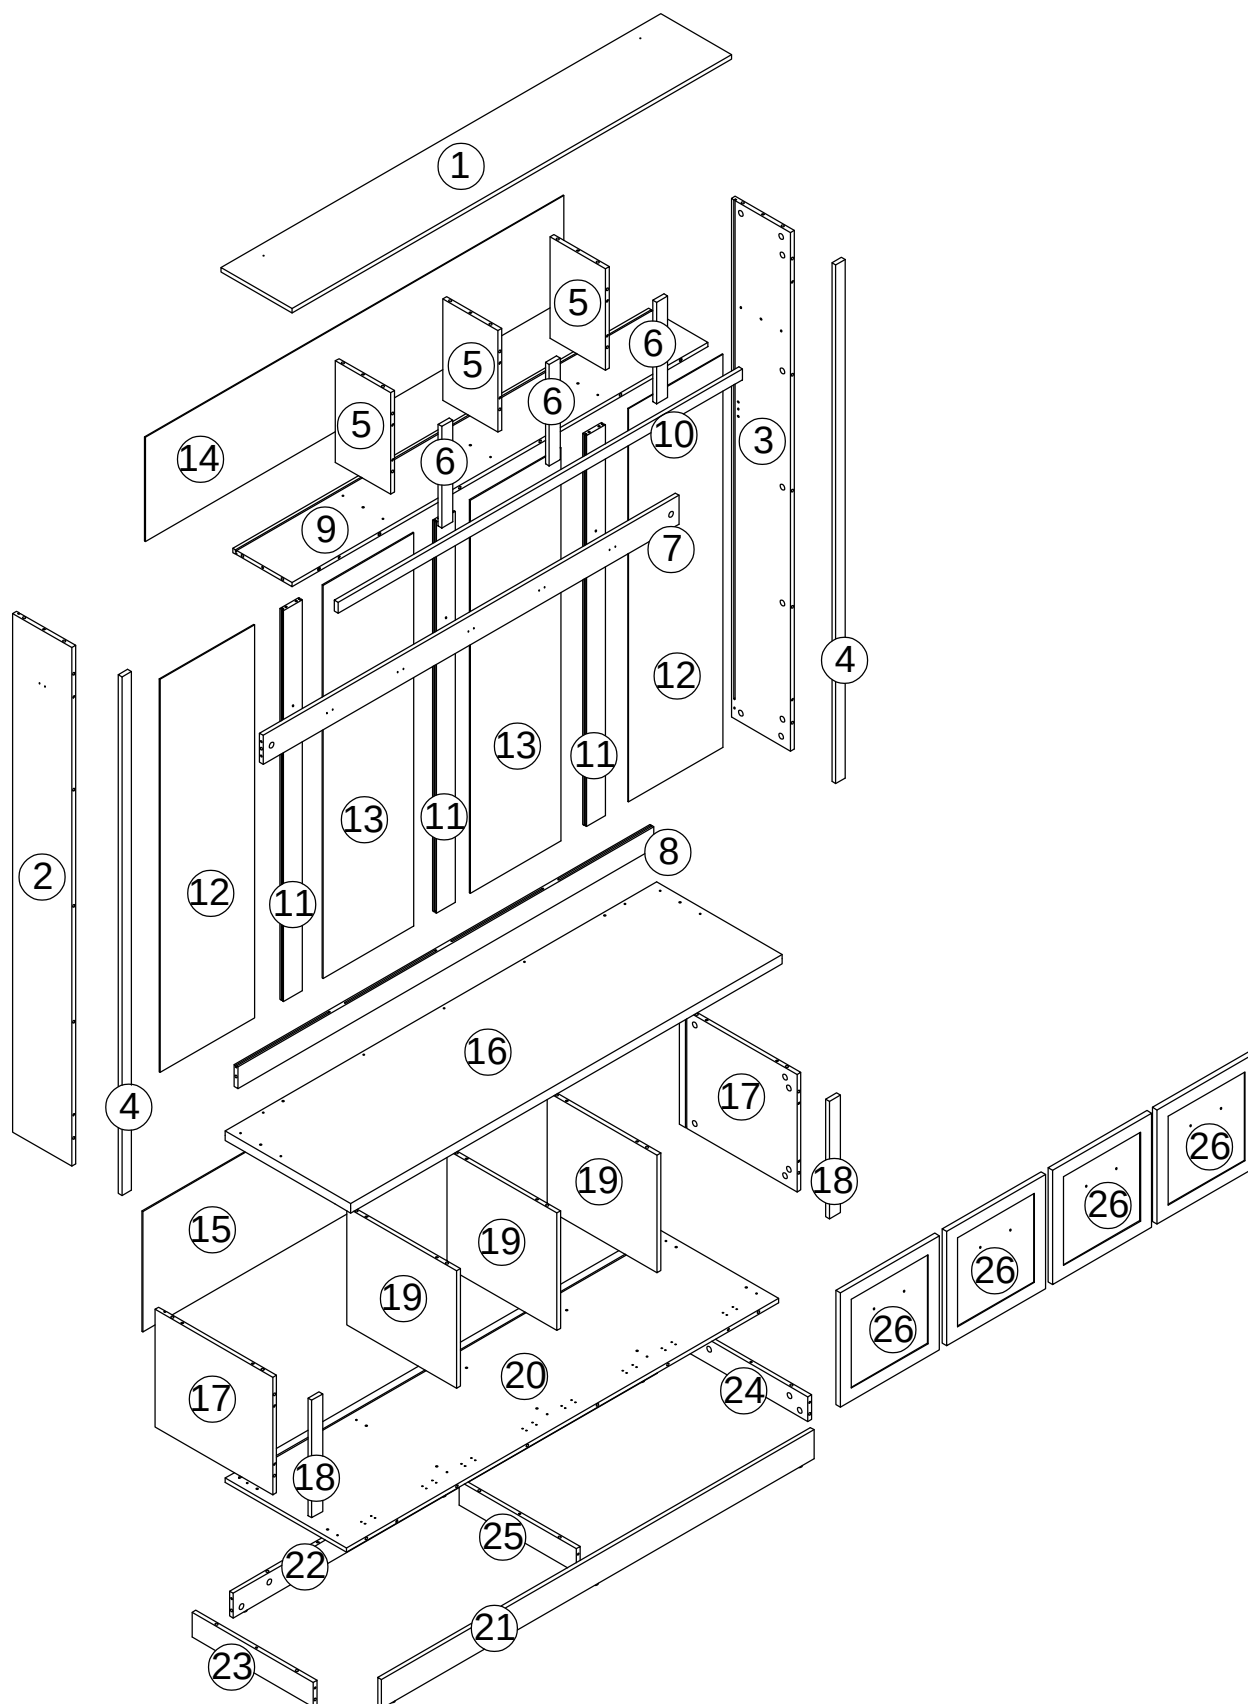

Assembly Instructions

There are 2 boxes of this product
















BOX-1: N721P504688

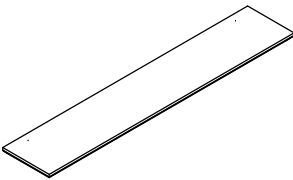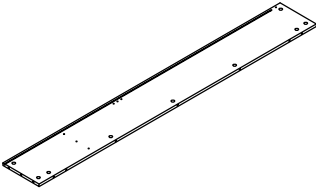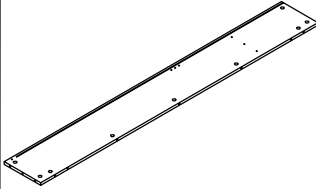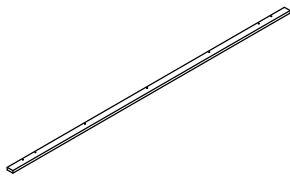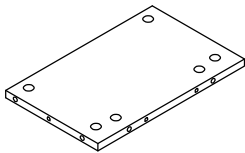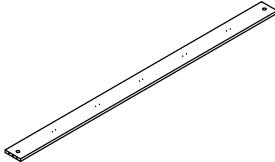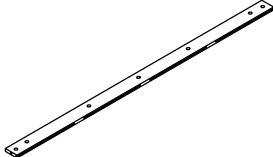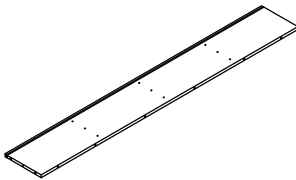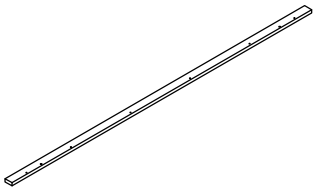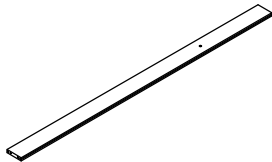			
1400*226*37mm	1430*188*12mm	1430*188*12mm	1430*30*12mm
① x 1	② x 1	③ x 1	④ x 2
			
280*176*12mm	280*35*12mm	1324*80*12mm	1324*60*12mm
⑤ x 3	⑥ x 3	⑦ x 1	⑧ x 1
			
1324*188*12mm	1288*30*12mm	1078*60*12mm	
⑨ x 1	⑩ x 1	⑪ x 3	

Assembly Instructions

There are 2 boxes of this product

















BOX-2: N721P504689

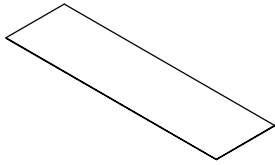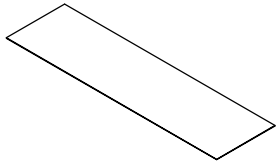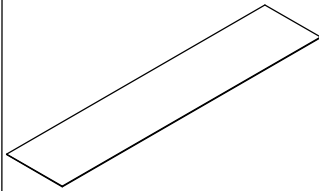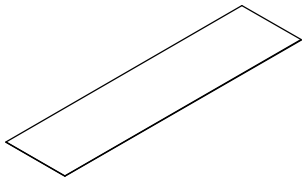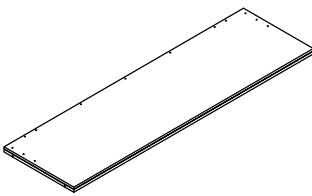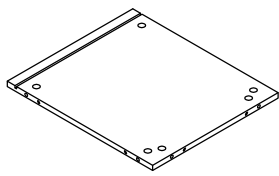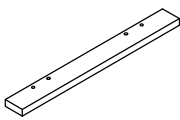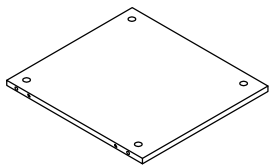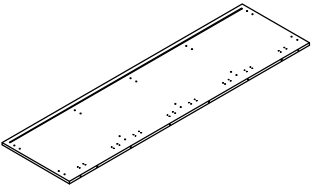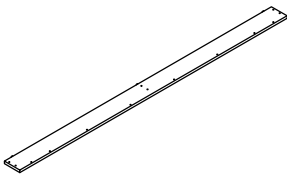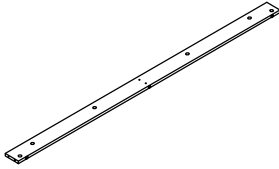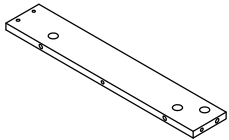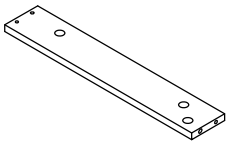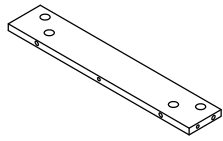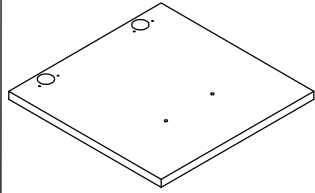 1086*300*2.5mm ⑫ x 2	 1086*288*2.5mm ⑬ x 2	 1332*288*2.5mm ⑭ x 1	 1330*332*2.5mm ⑮ x 1
 1374*400*26mm ⑯ x 1	 375*324*12mm ⑰ x 2	 375*35*12mm ⑱ x 2	 350*324*14mm ⑲ x 3
 1376*386*12mm ⑳ x 1	 1378*80*12mm ㉑ x 1	 1350*68*12mm ㉒ x 1	 386*68*12mm ㉓ x 1
 386*68*12mm ㉔ x 1	 373*68*12mm ㉕ x 1	 315*315*15mm ㉖ x 4	Hardware Pack X1

Components-Fittings







Please check you have all the panels listed below

Note: The quantities below are the correct amount to complete the assembly. In some cases more fittings may be supplied than are required.

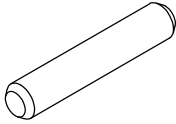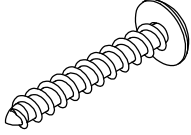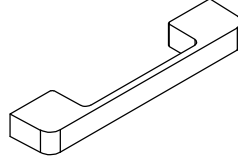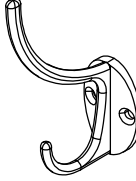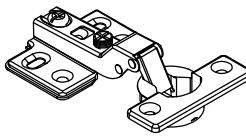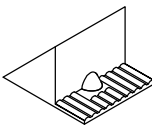
A  Cam Bolt x 101	B  Cam Lock x 101	C  6*30mm Dowel x 81	D  4*18mm Screw x 3
E  Handle x 4	F  Handle Bolt x 8	G  Clothes-hook x 7	H  3.5*12mm Screw x 14
I  Hinge x 8	J  3.5*12mm Screw x 48	K  Back panel buckle x 48	L  3*16mm Screw x 48
M  Paper sticker x 72	N  Anchor x 2	O  Anti-tip L Bracket x 2	P  4*38mm Screw x 2
Q  4*14mm Screw x 2			

Components-Fittings


“Please note that the shapes of screws D and H and J and L and R and Q are similar. please install according to the instructions and distinguish them.”

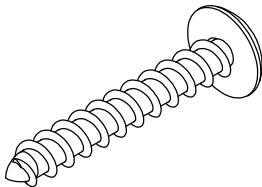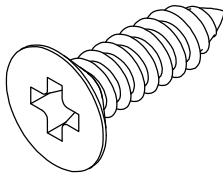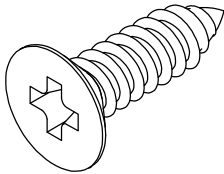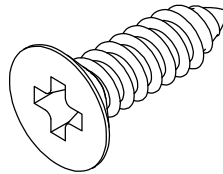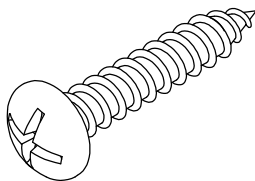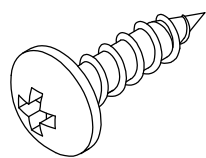D  4*18mm Screw x 3	H  3.5*12mm Screw x 14
J  3.5*12mm Screw x 48	L  3*16mm Screw x 48
R  4*38mm Screw x 2	Q  4*14mm Screw x 2


Step 1

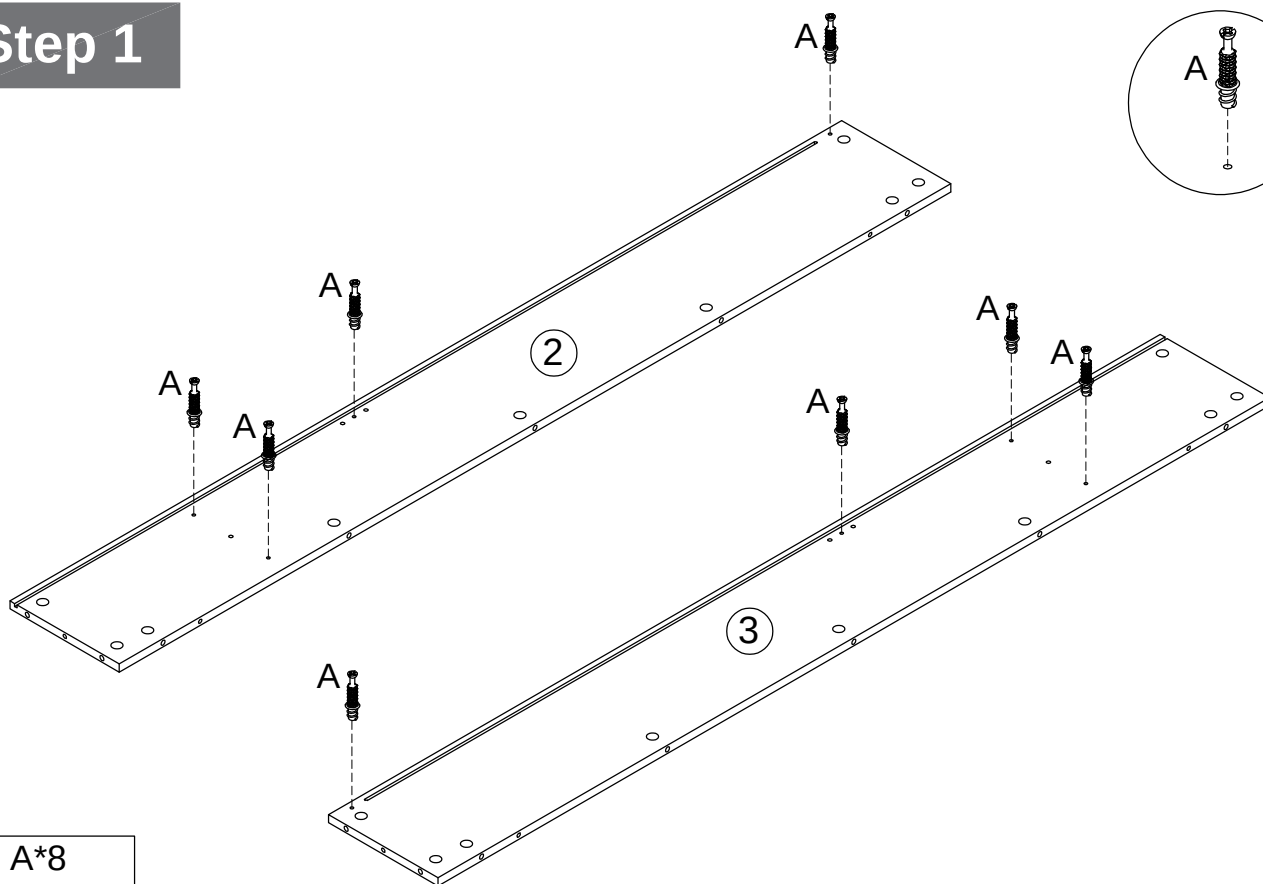


A*8





Step 2

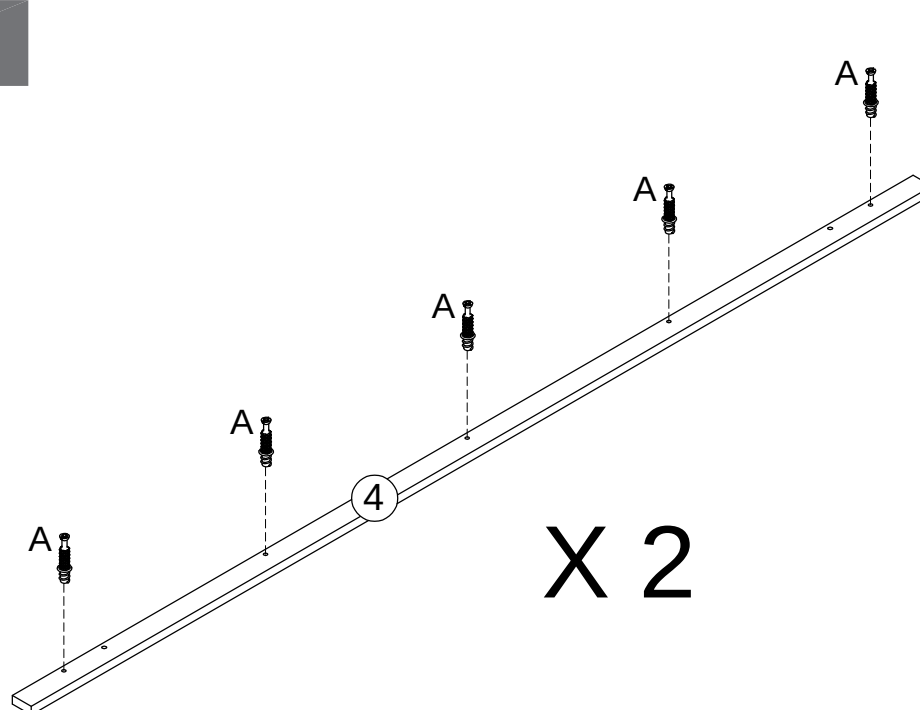

A*10




Step 3

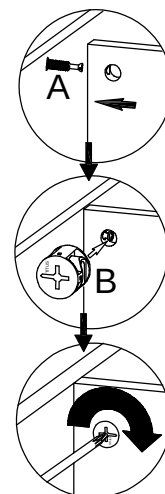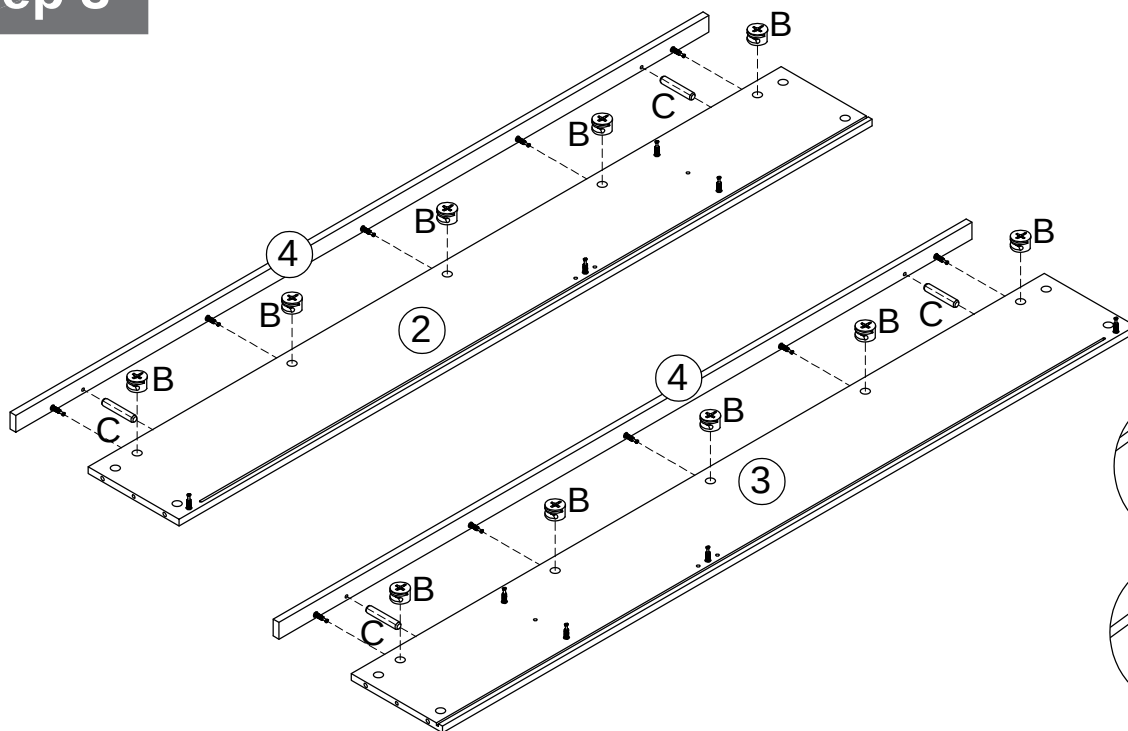



B*10




C*4





Step 4

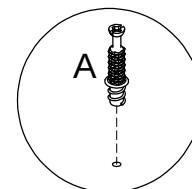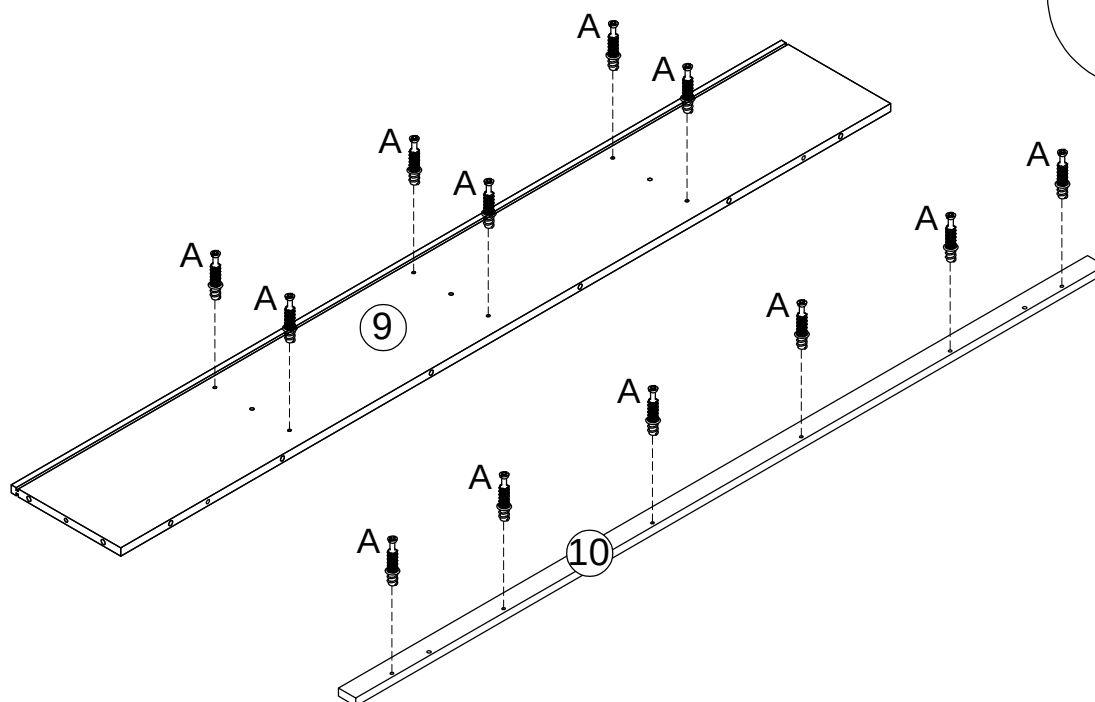

A*12




Step 5

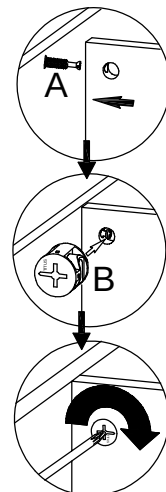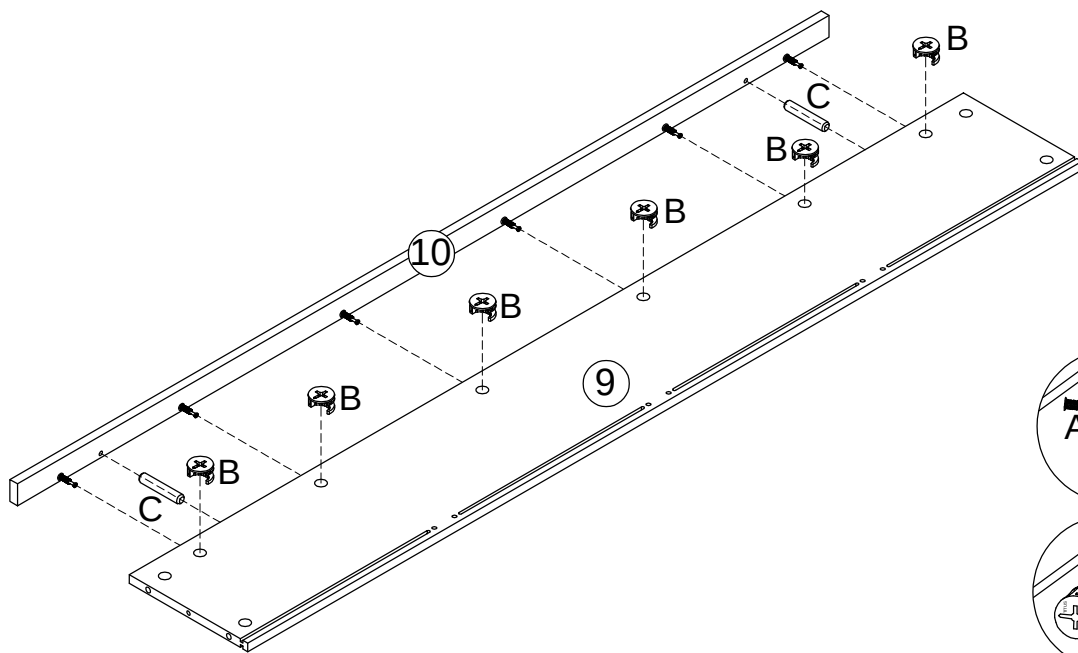


B*6






C*2




Step 6

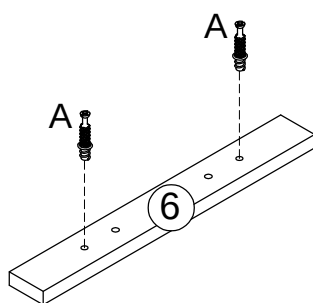

X 3

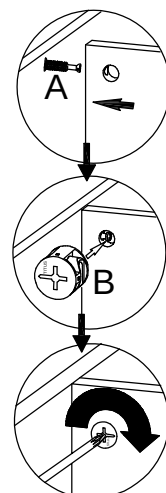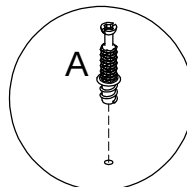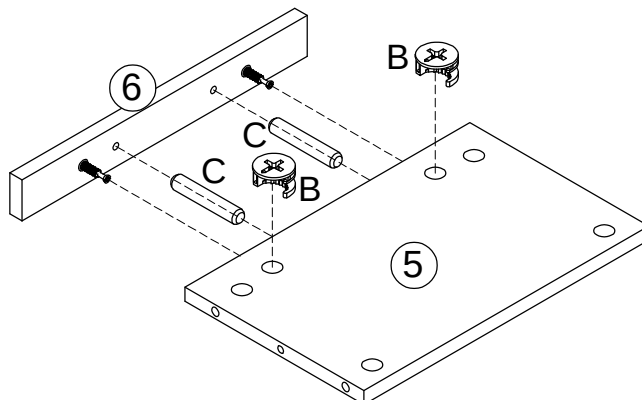


A*6




B*6




C*6



Step 7

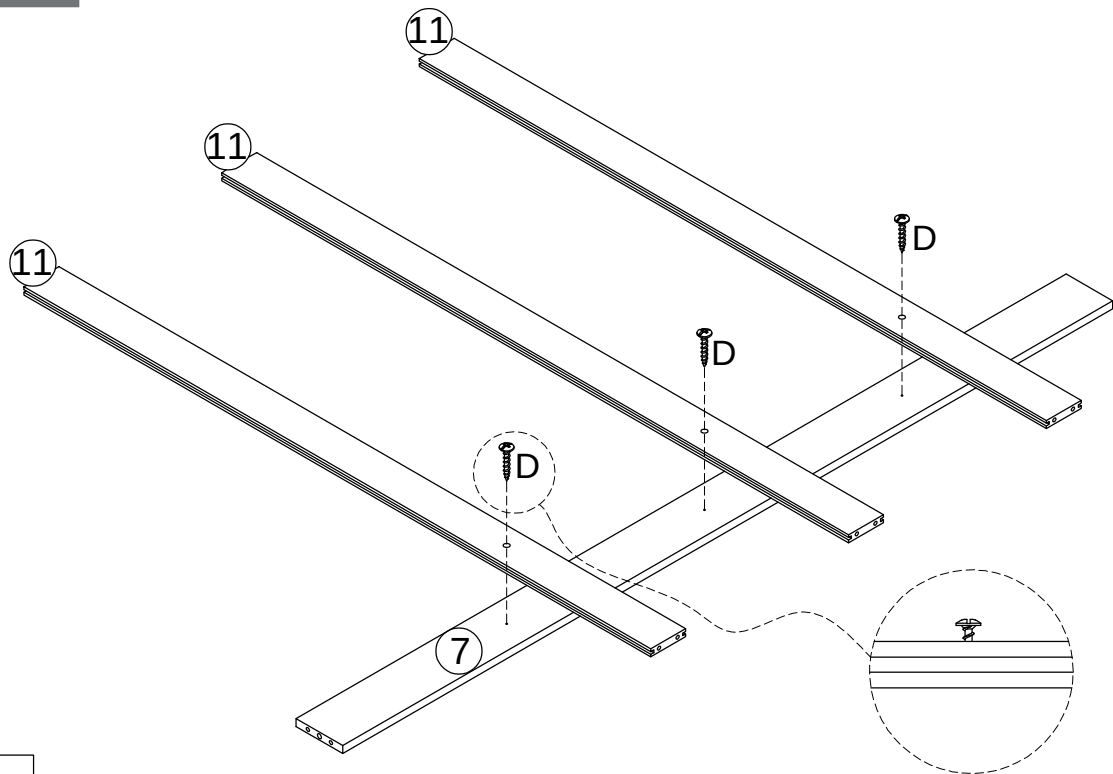


D*3




"Do not fully tighten the screws at this step."

Step 8

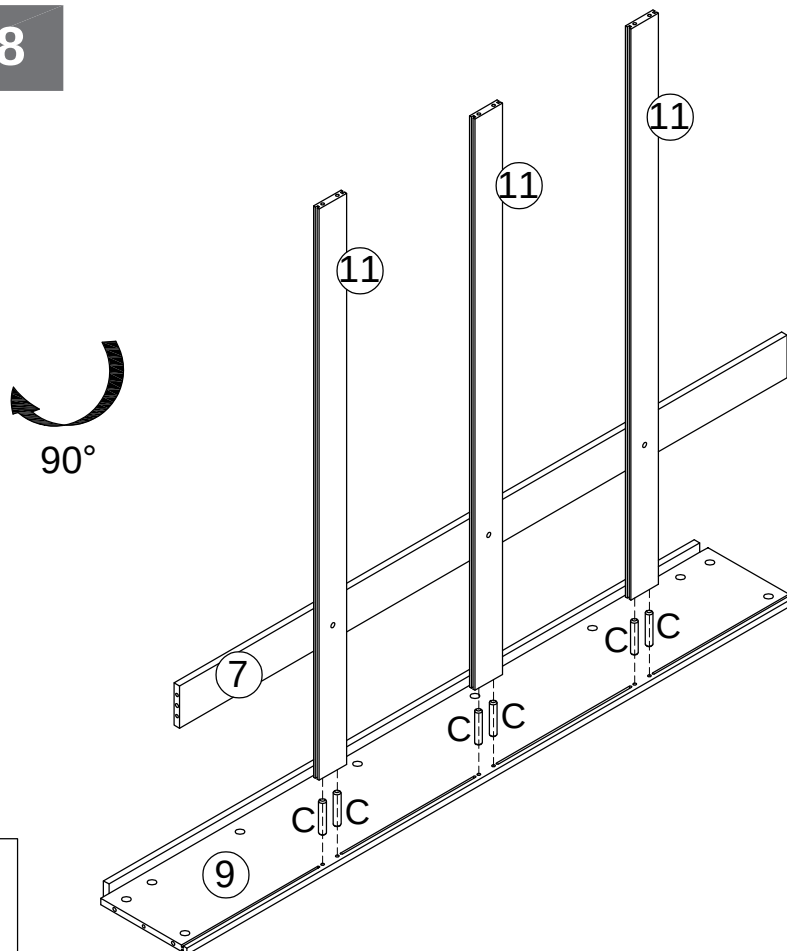


90°

C*6




Step 9

Be careful! At least two people are required here

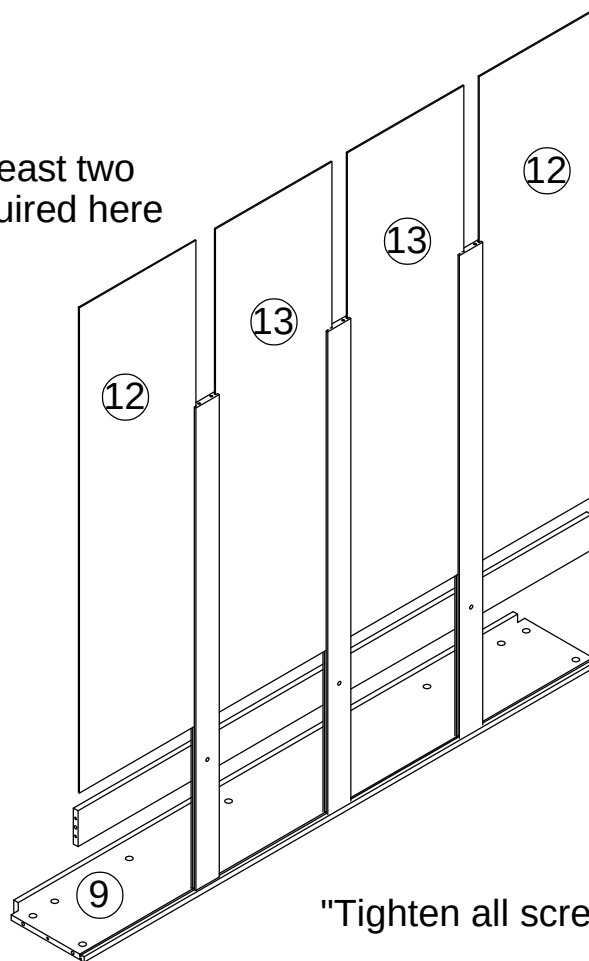


"Tighten all screws securely at this step."


Step 10

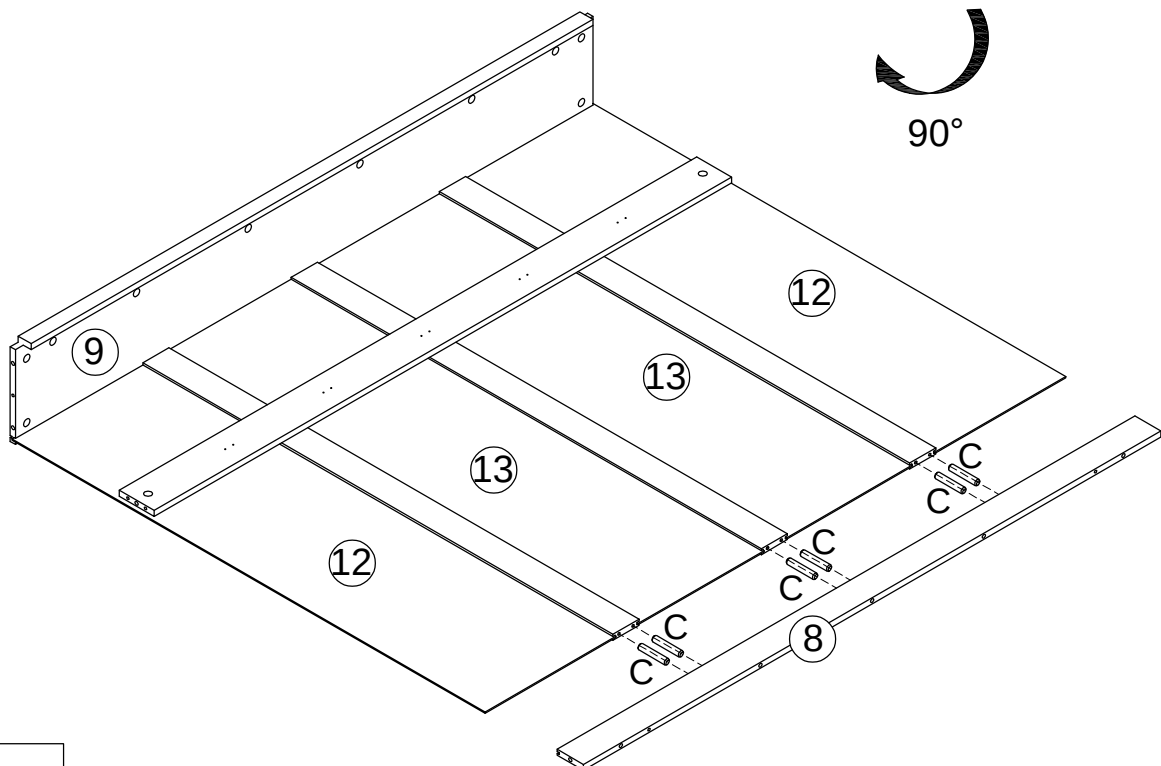


C*6



Step 11

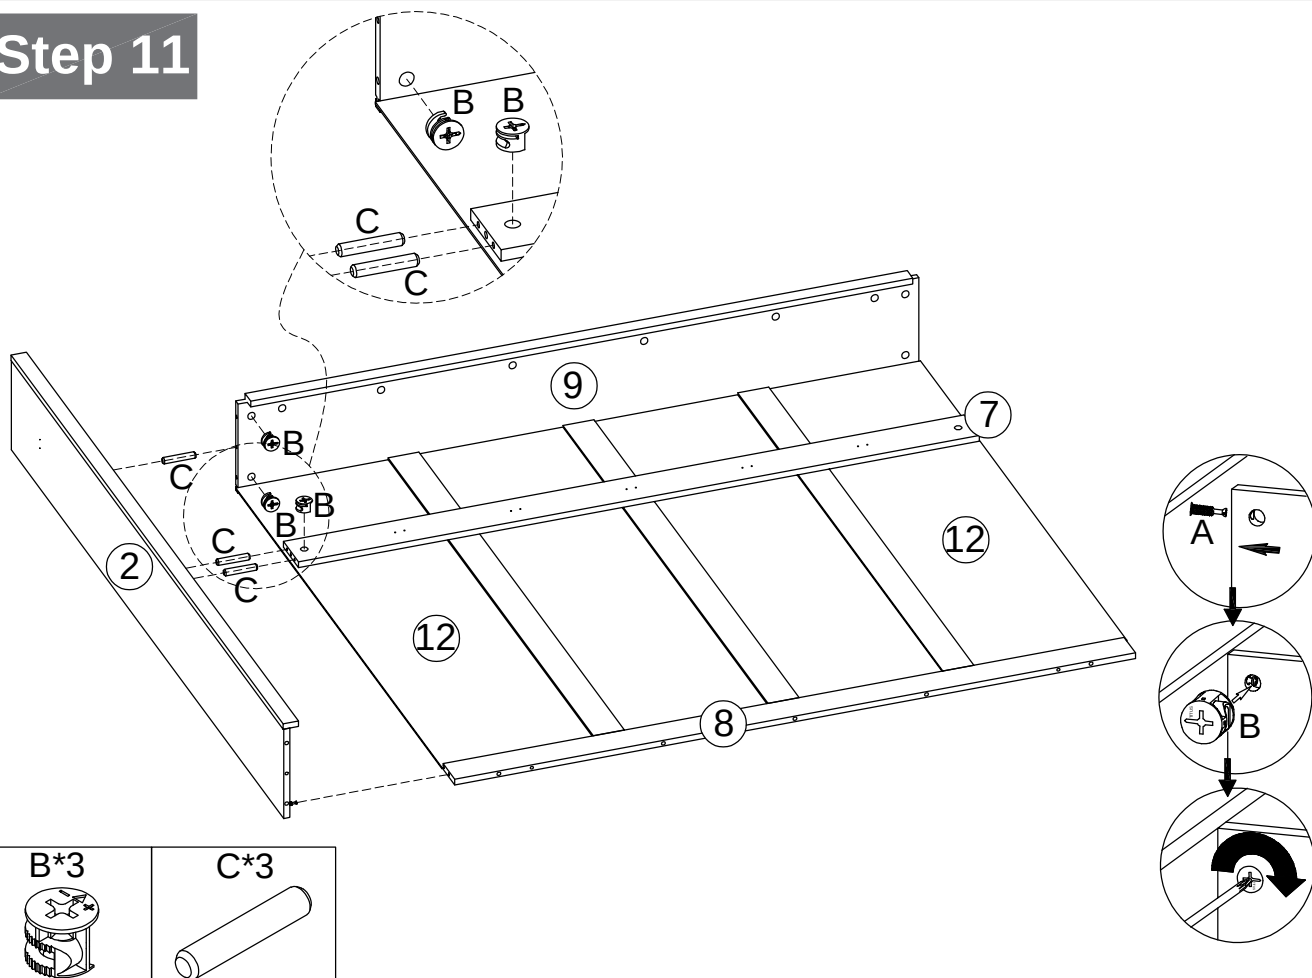

Step 12

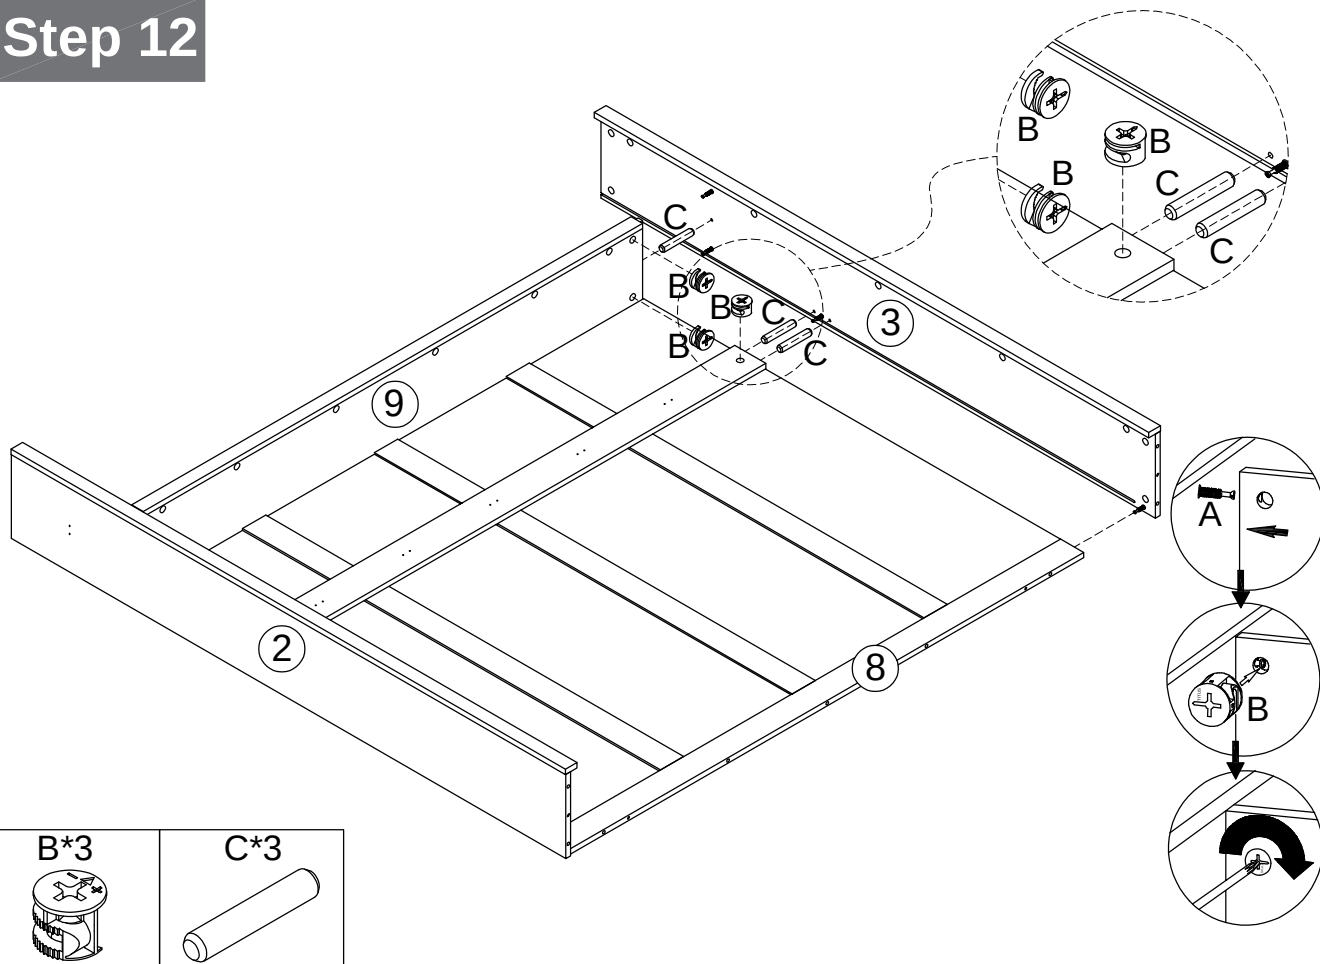


Step 13




90°


Be careful! At least two people are required here

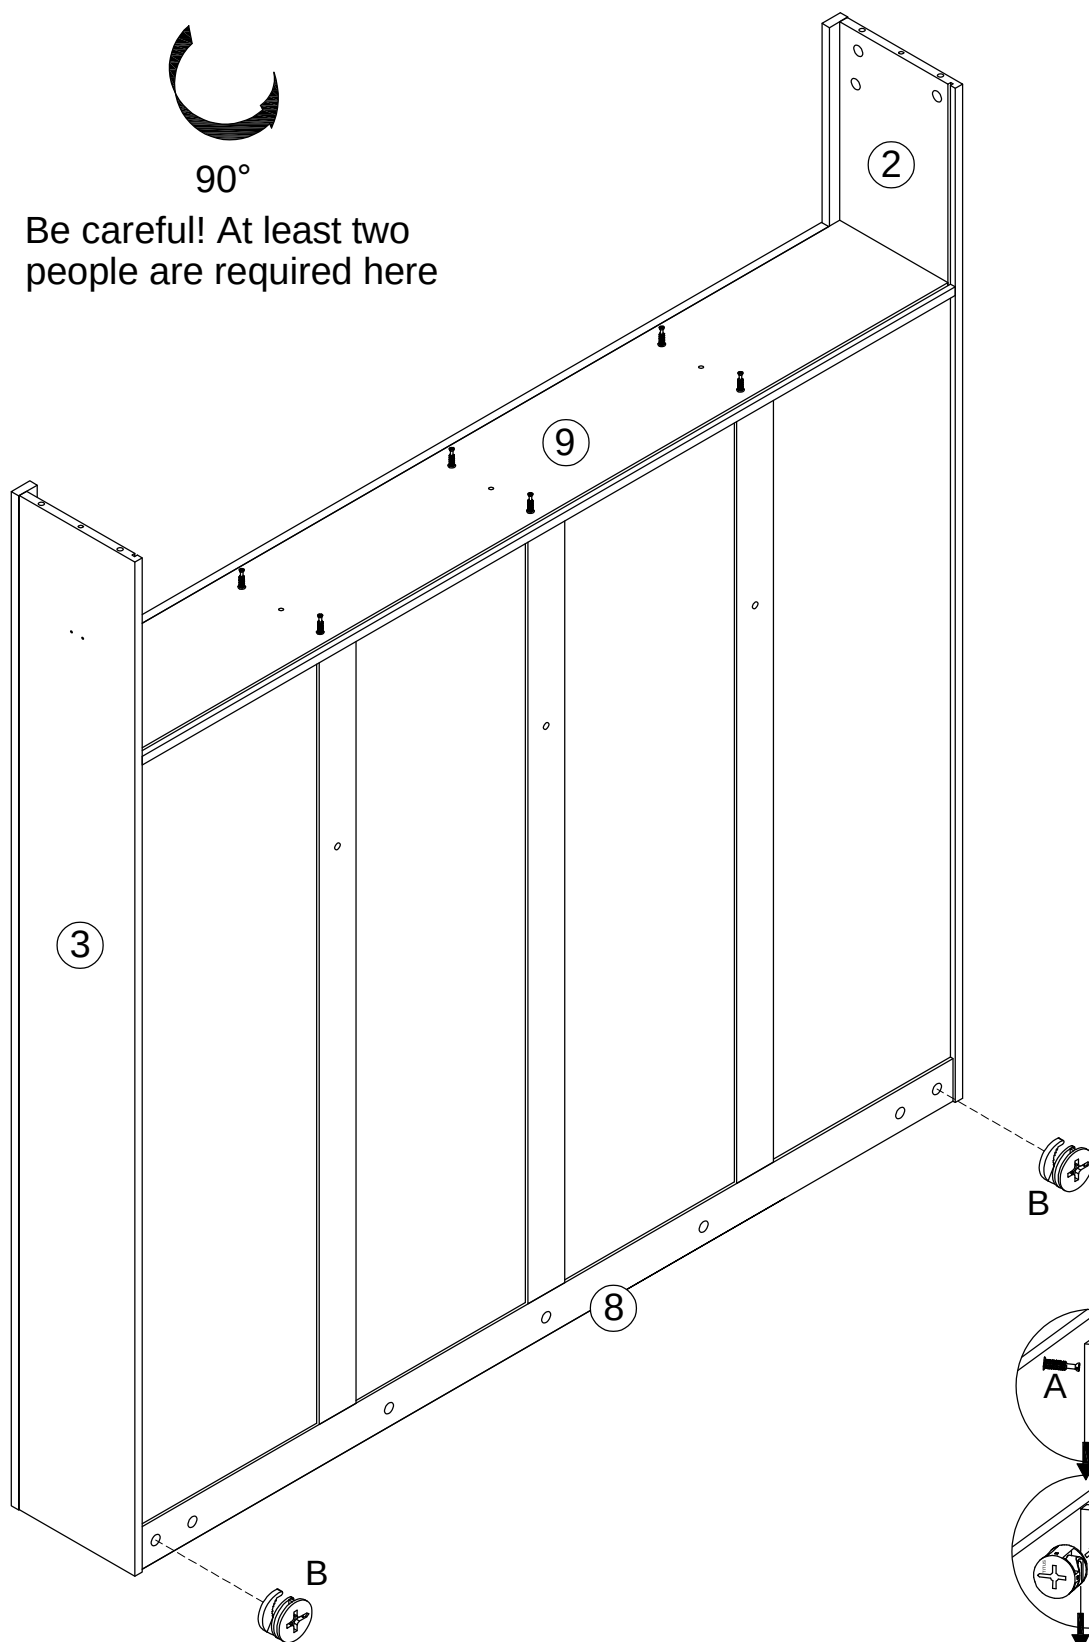

B*2

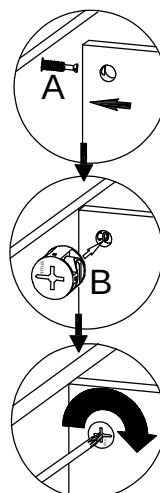



Step 14

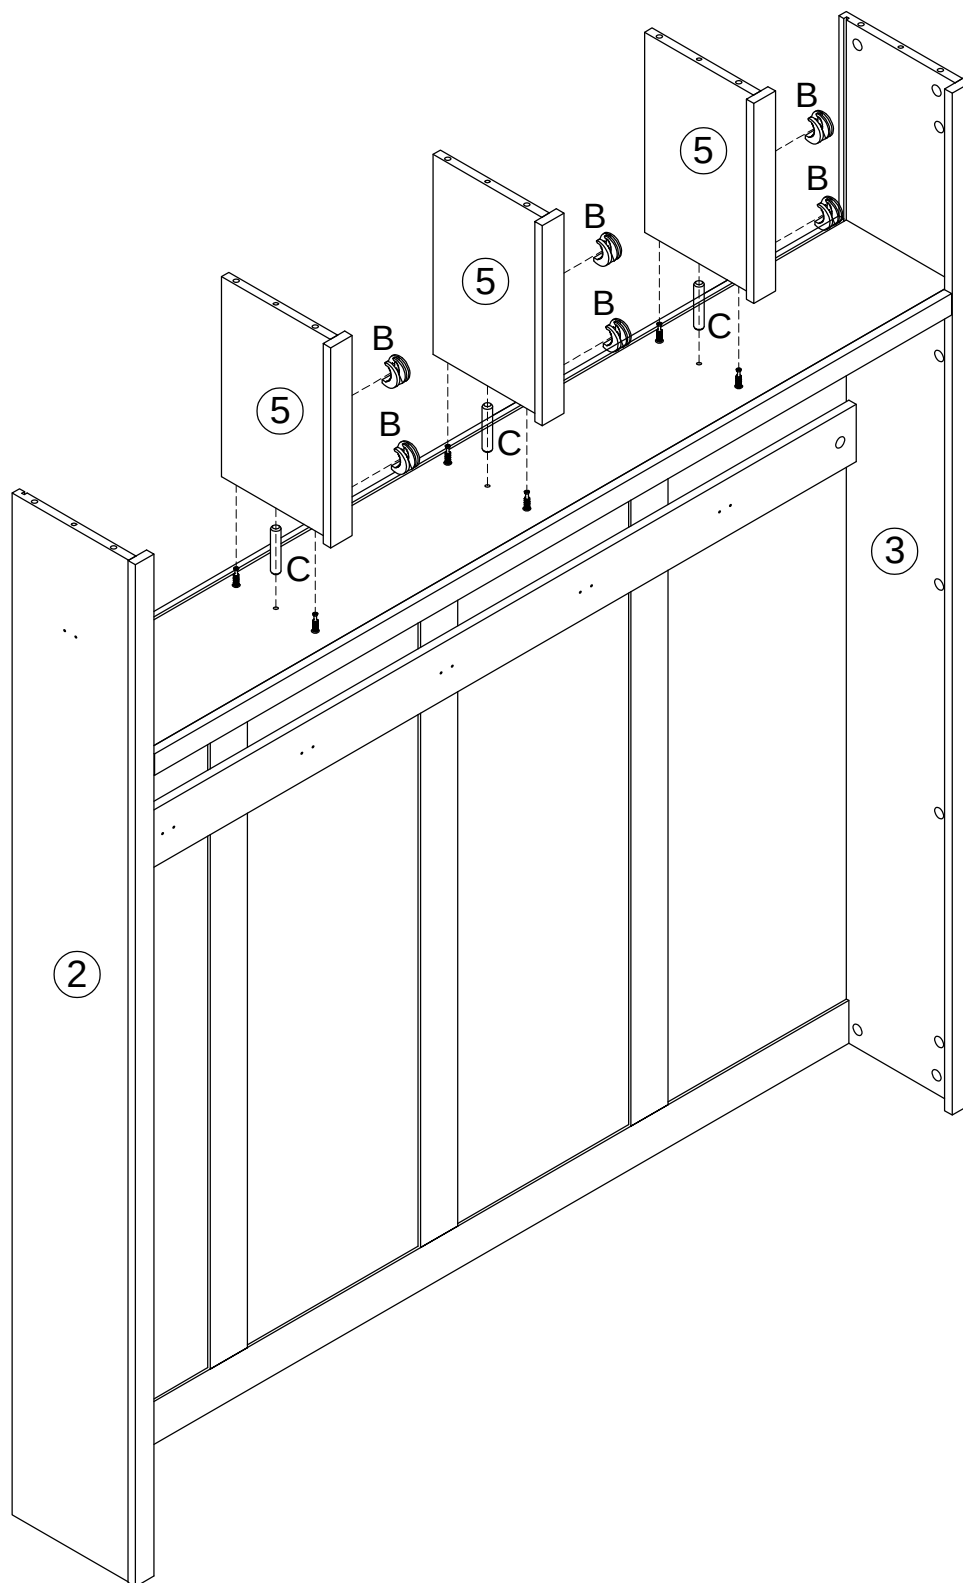


B*6




C*3

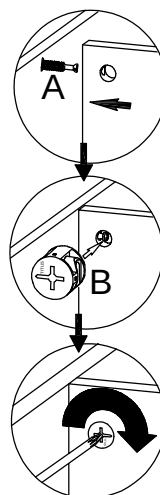


Step 15

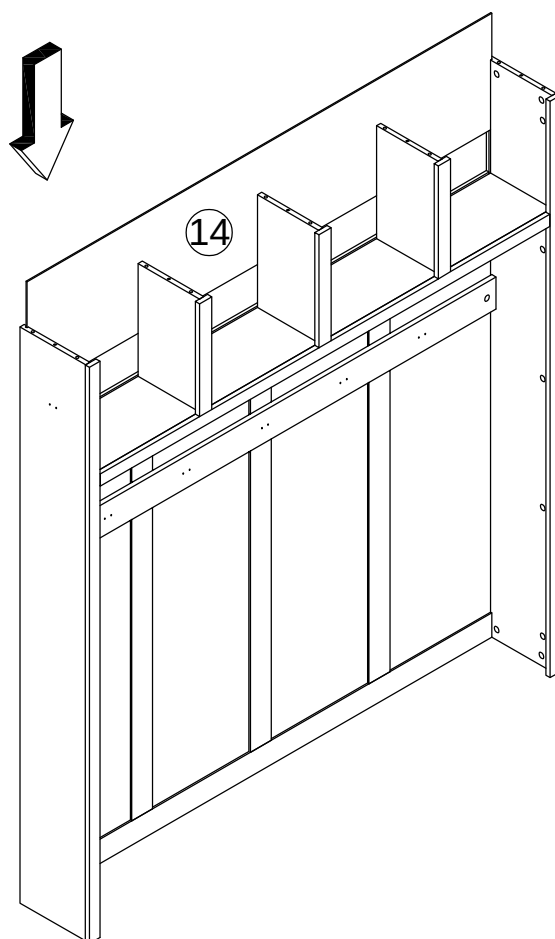

Step 16

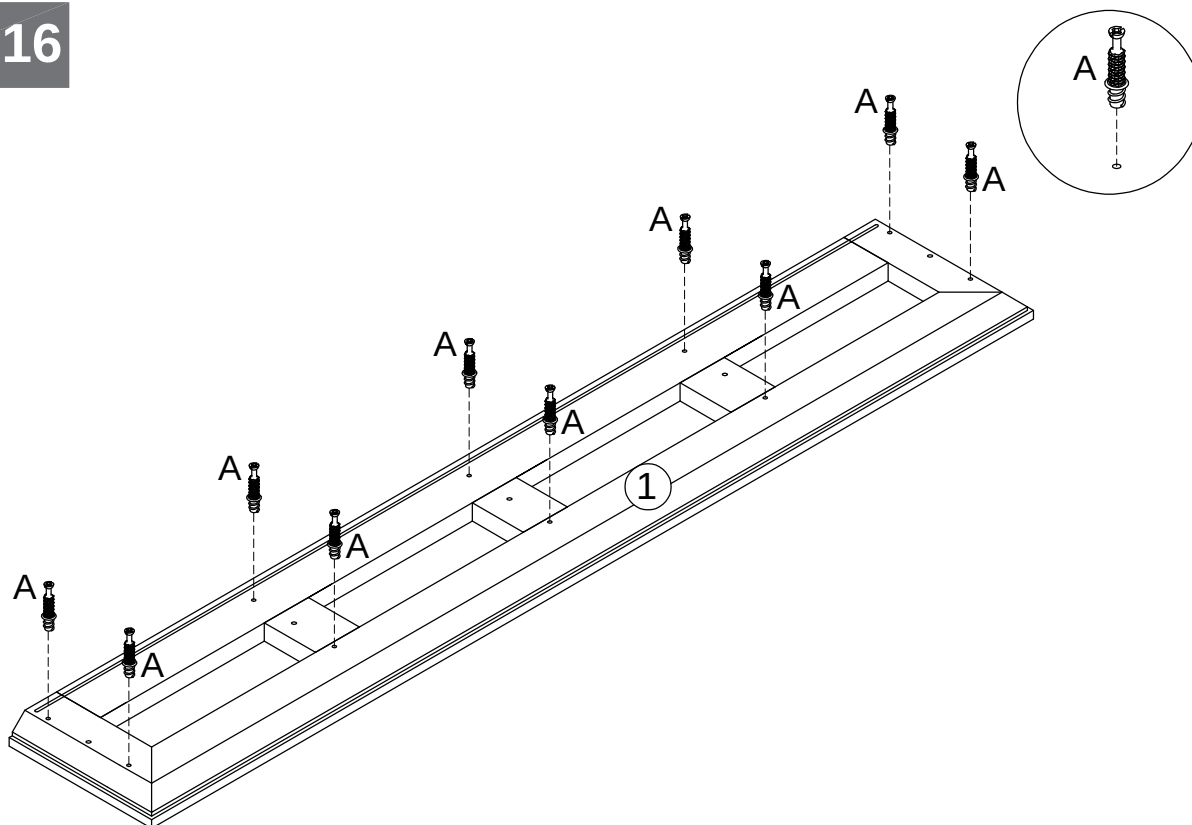


A*10



Step 17



Be careful! At least two people are required here

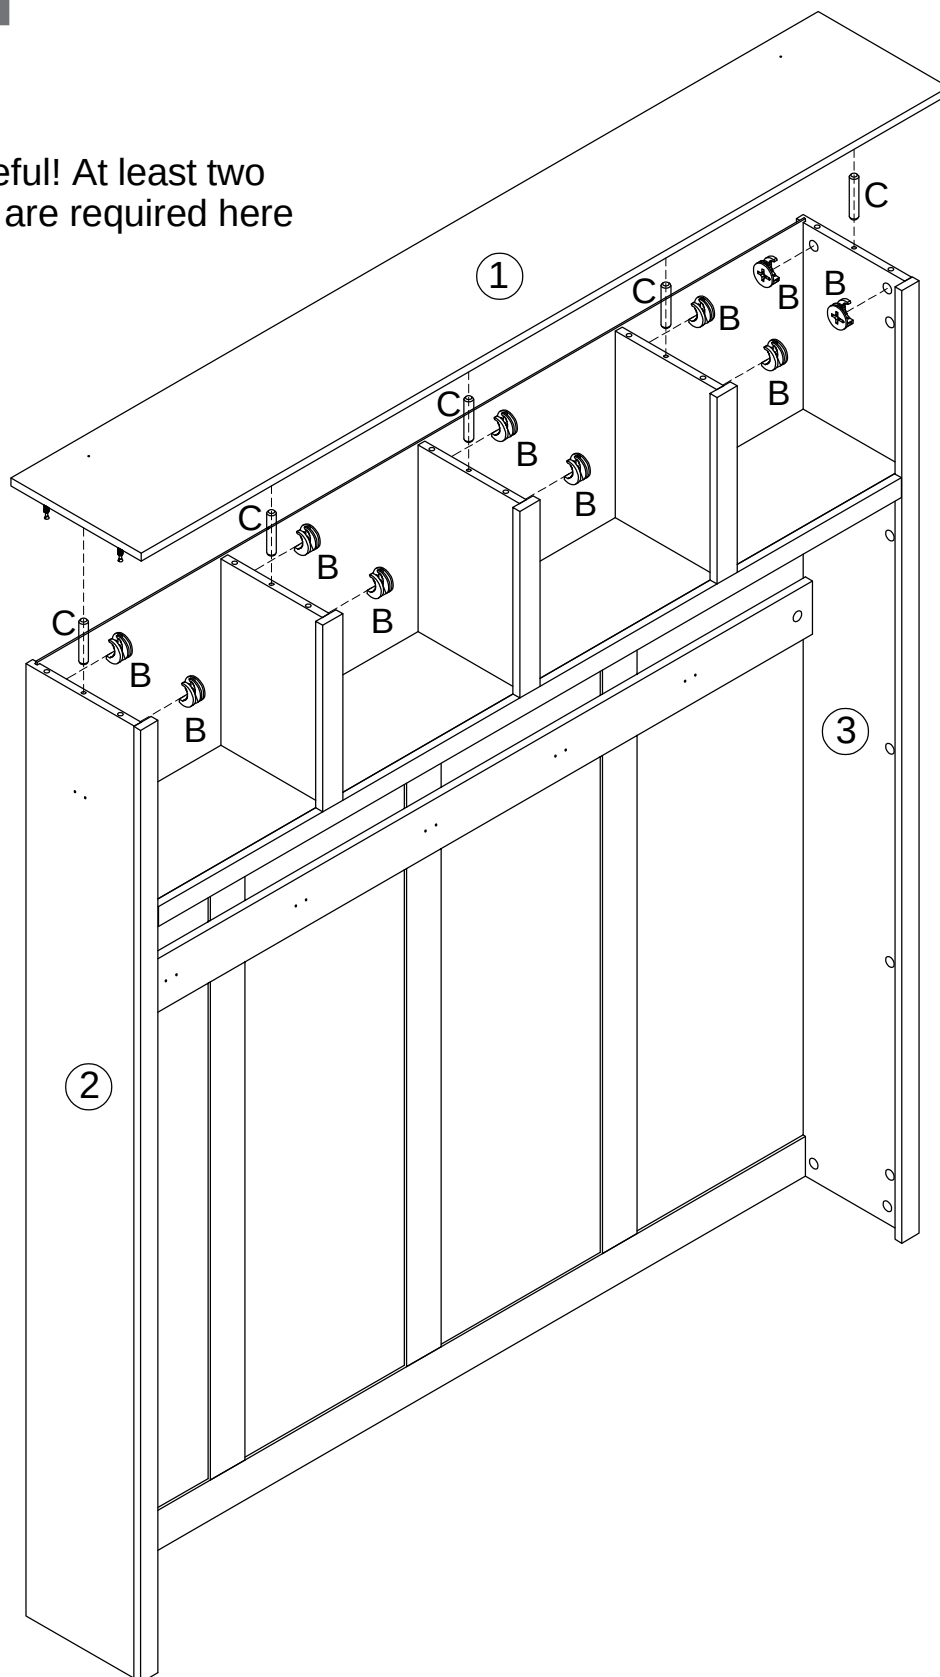


B*10




C*5

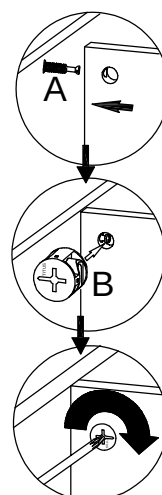


Step 18

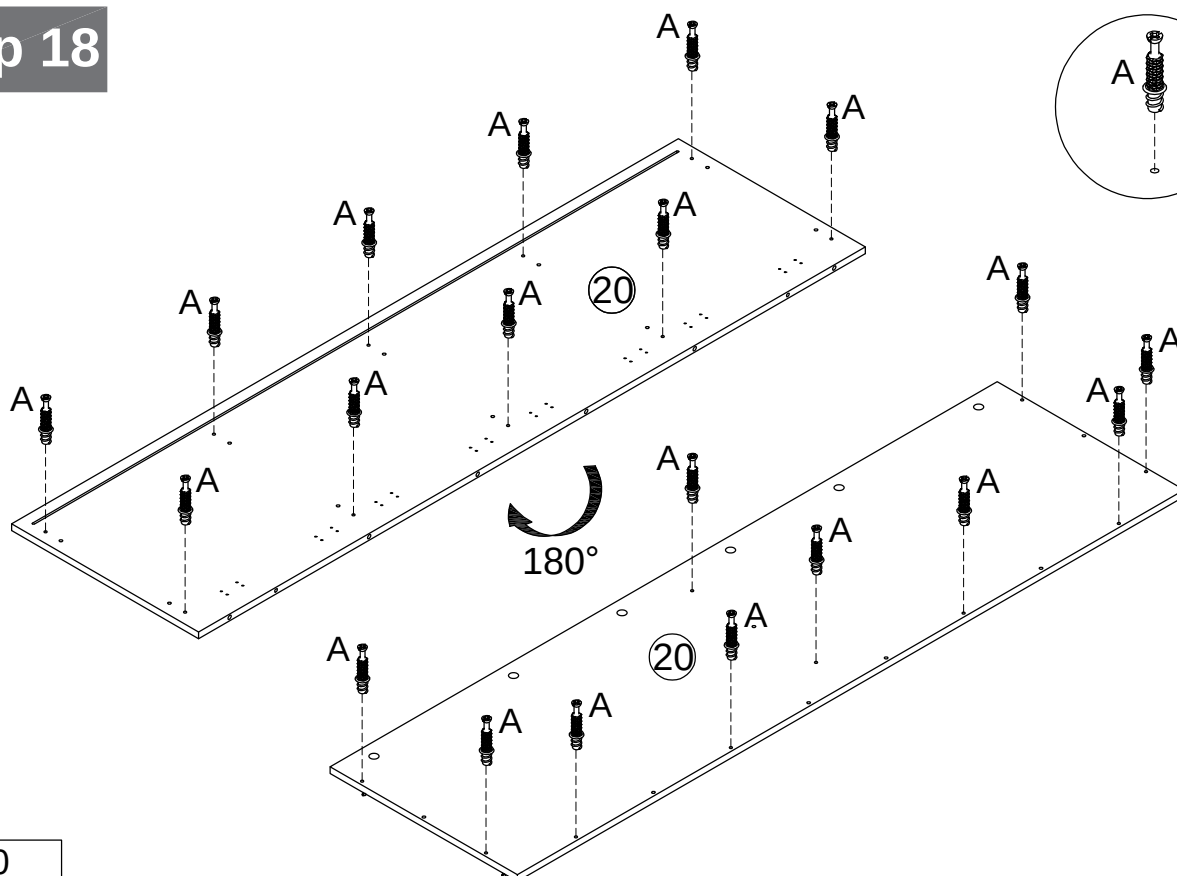


A*20





Step 19

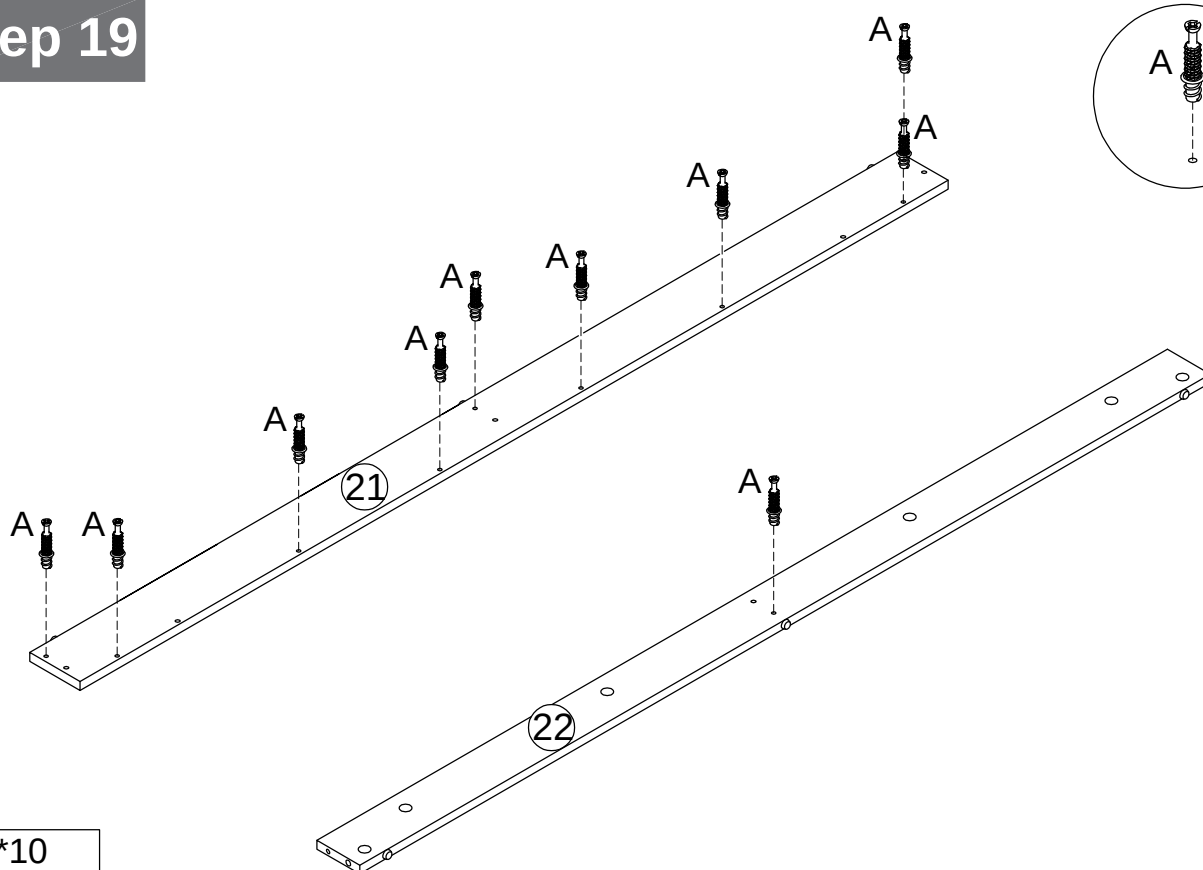


A*10




Step 20

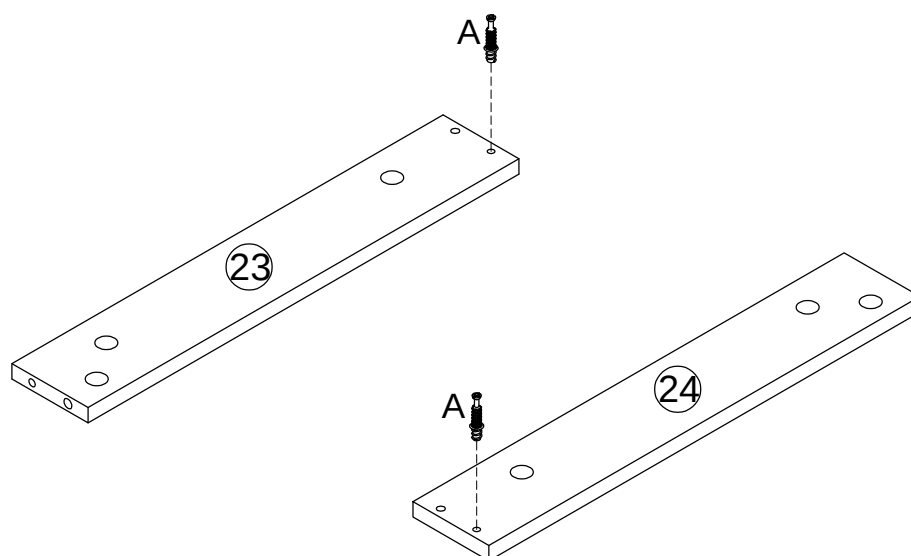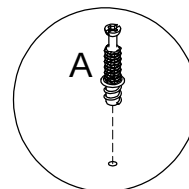

A*2





Step 21

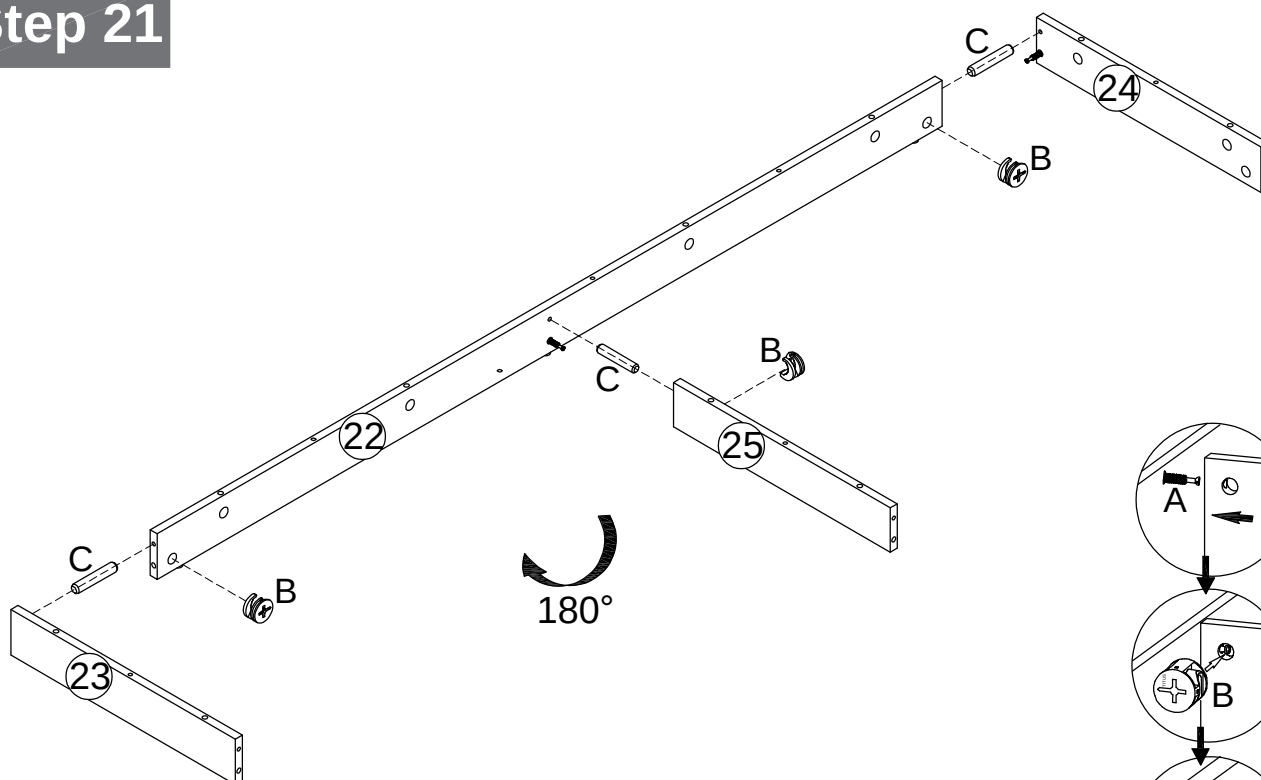



B*3



C*3

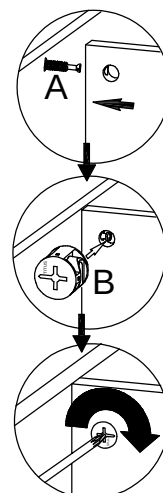


Step 22

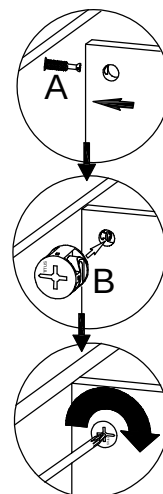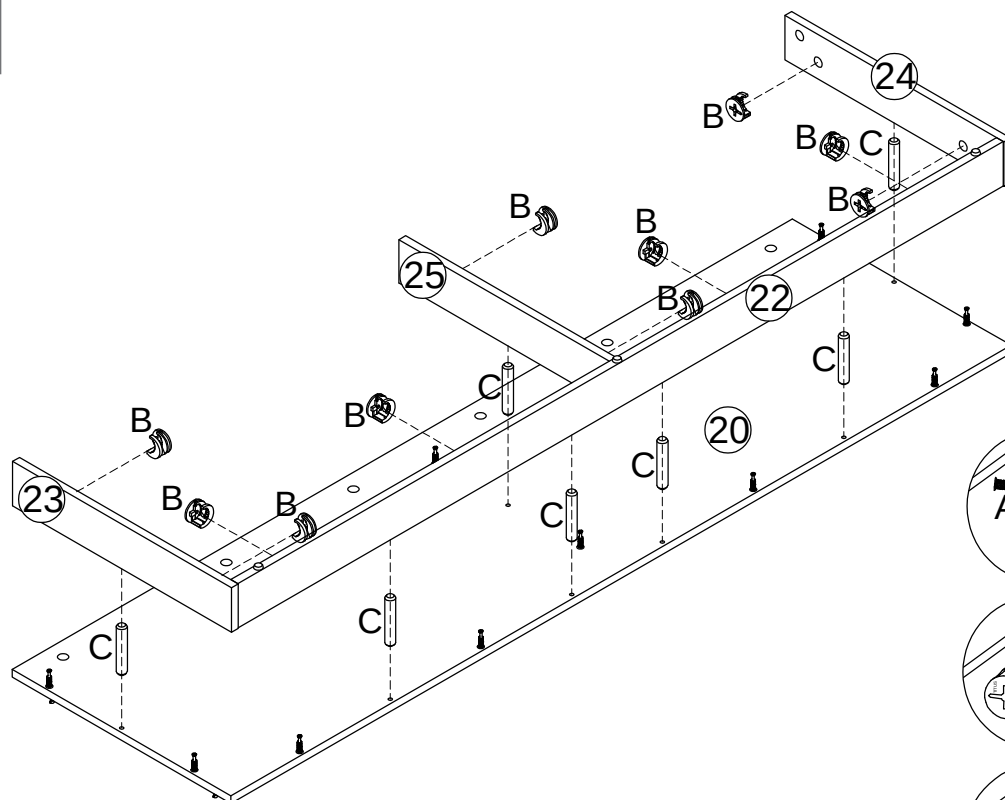


B*10



C*7



Step 23

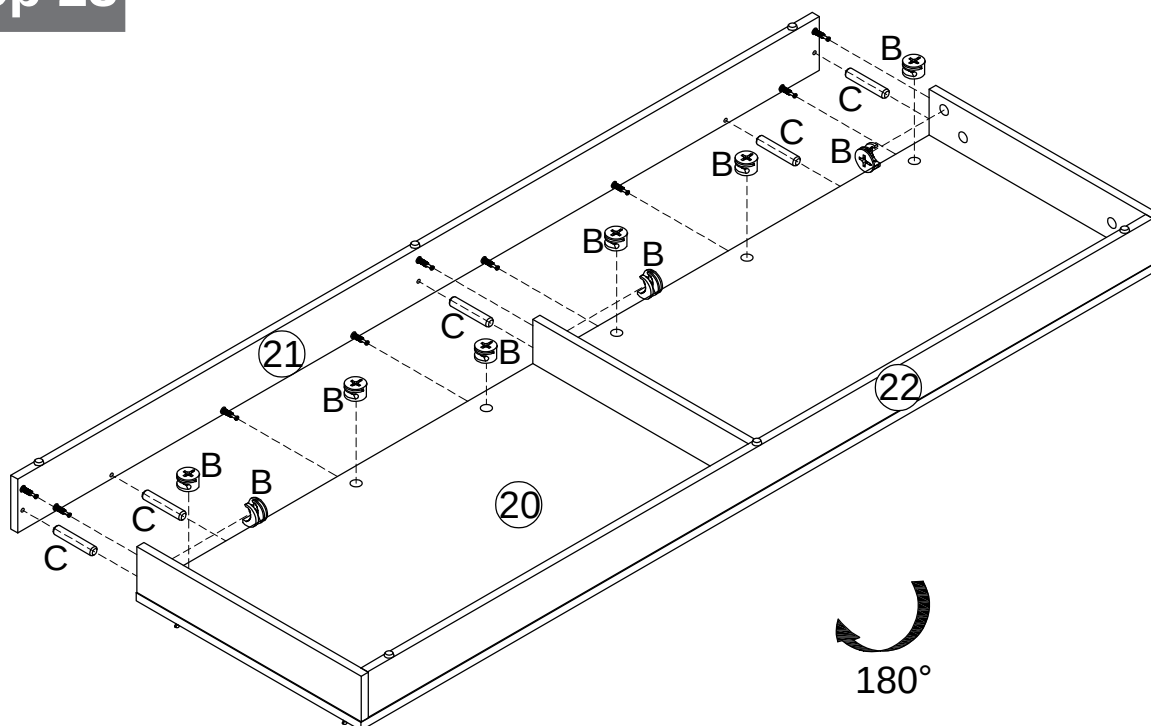


180°






B*9




C*5



Step 24

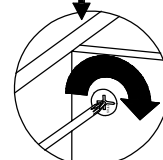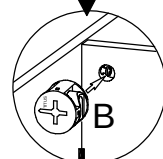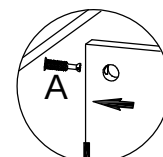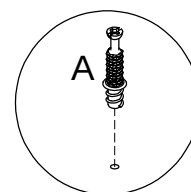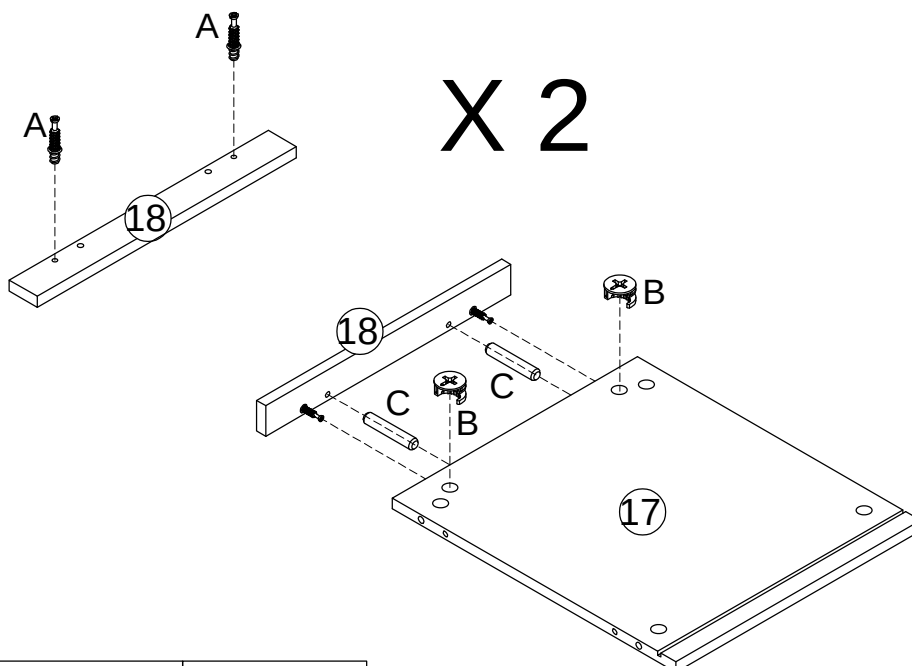

A*4







B*4



C*4




Step 25

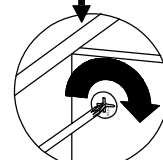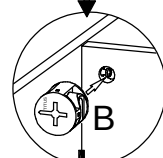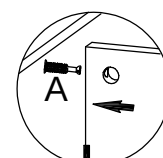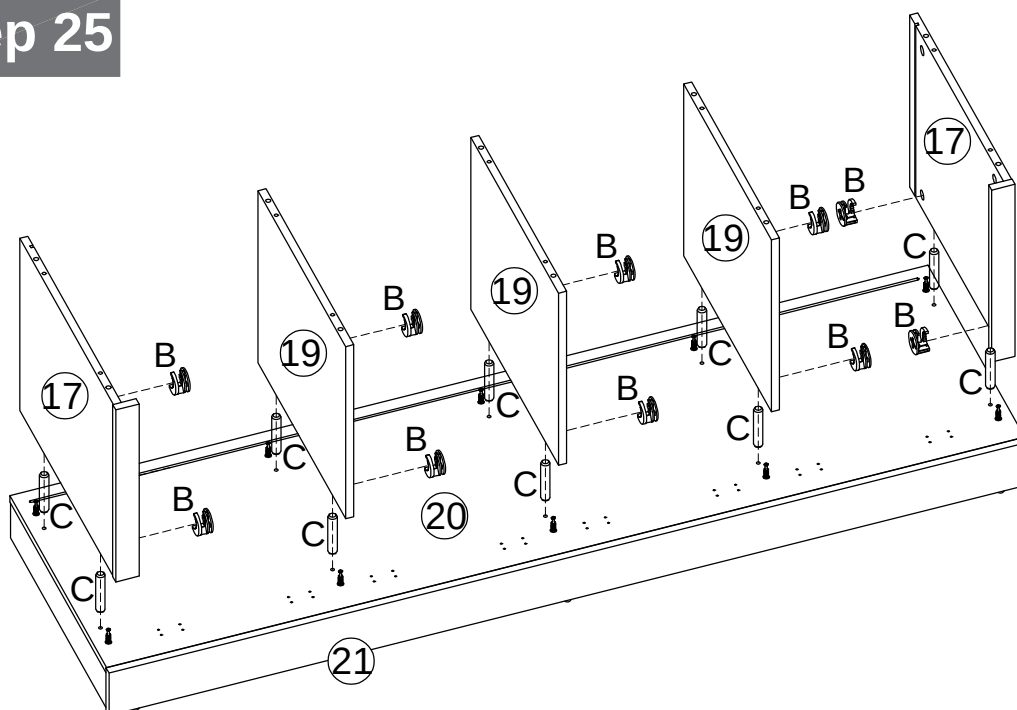


B*10




C*10




Step 26

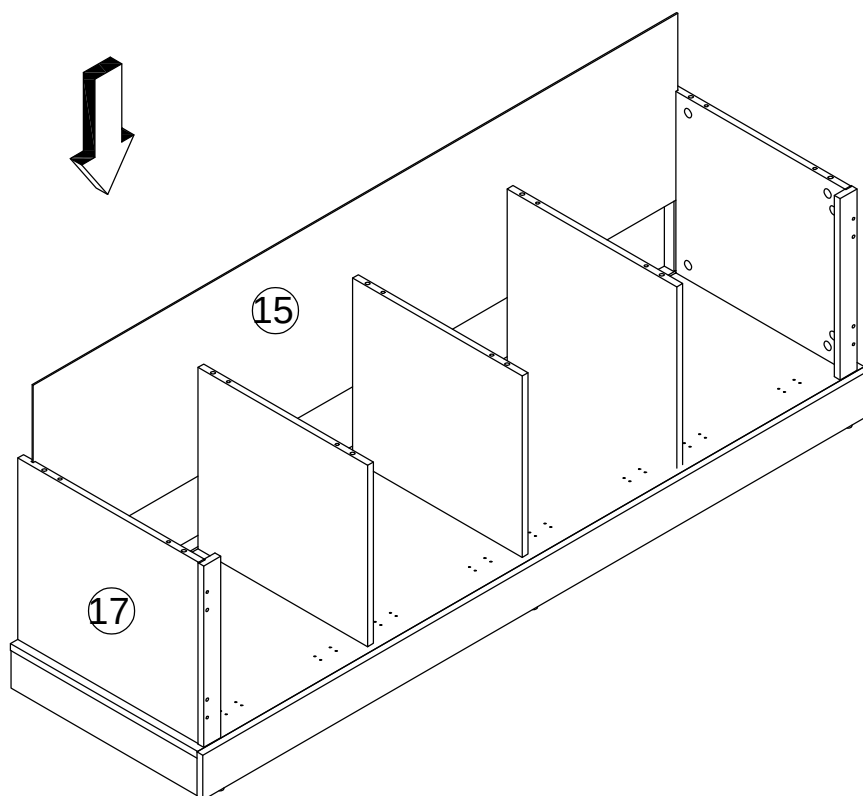



Step 27

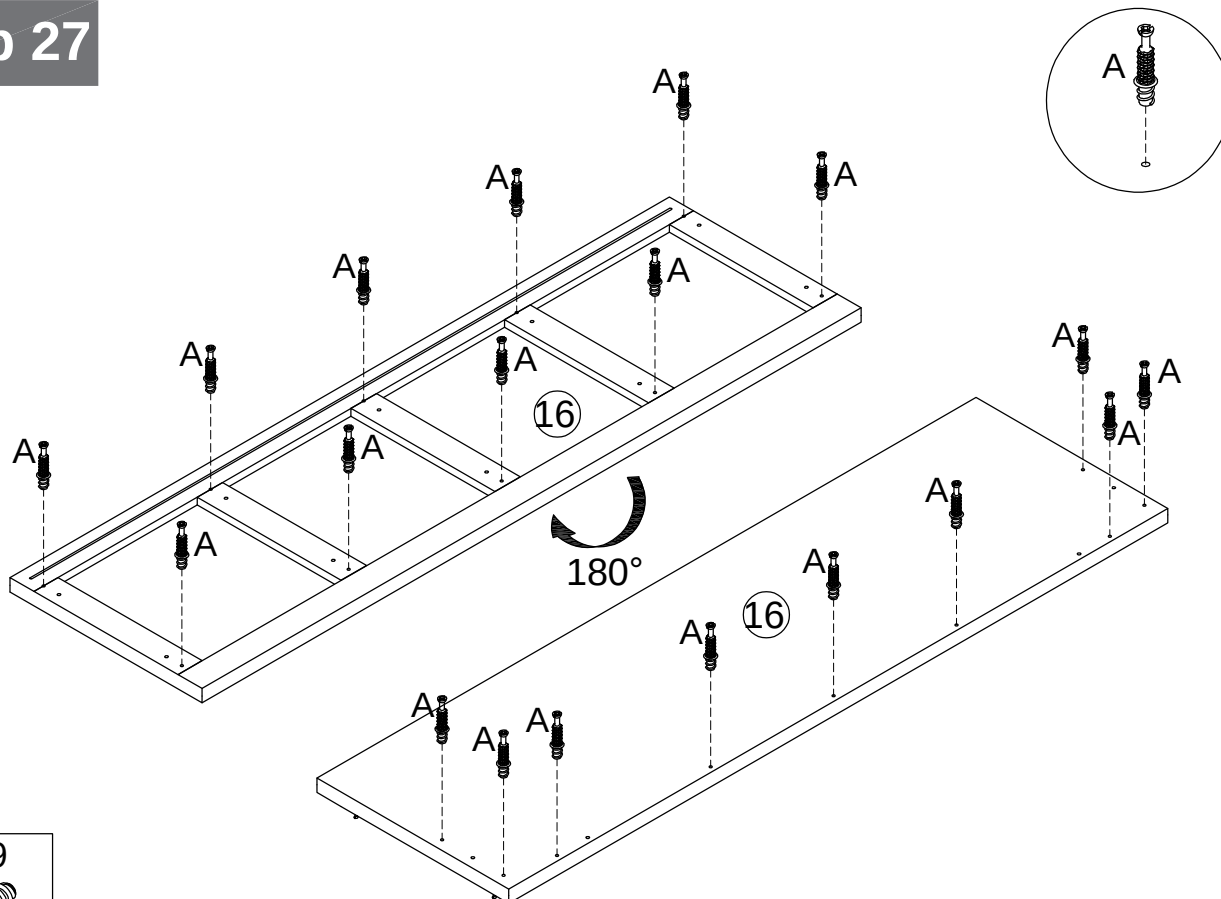

A*19




Step 28

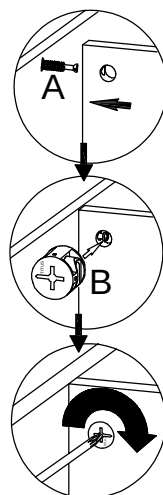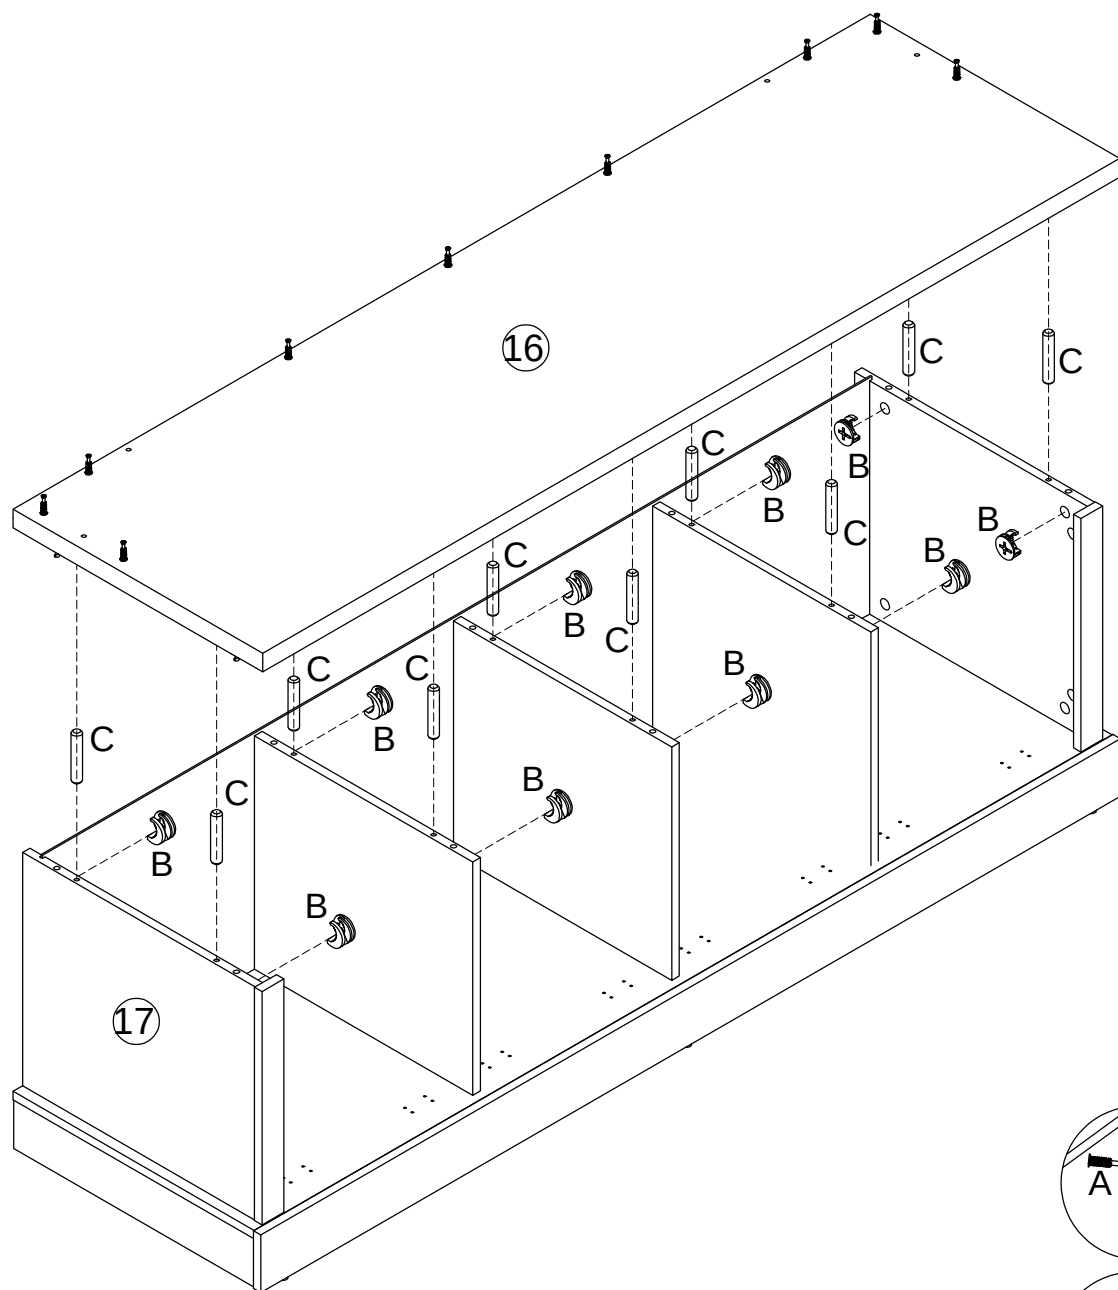

B*10





C*10



Step 29


Be careful! At least two people are required here

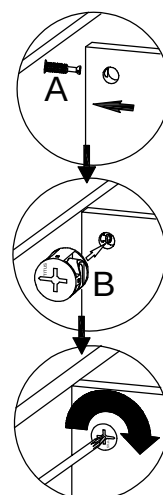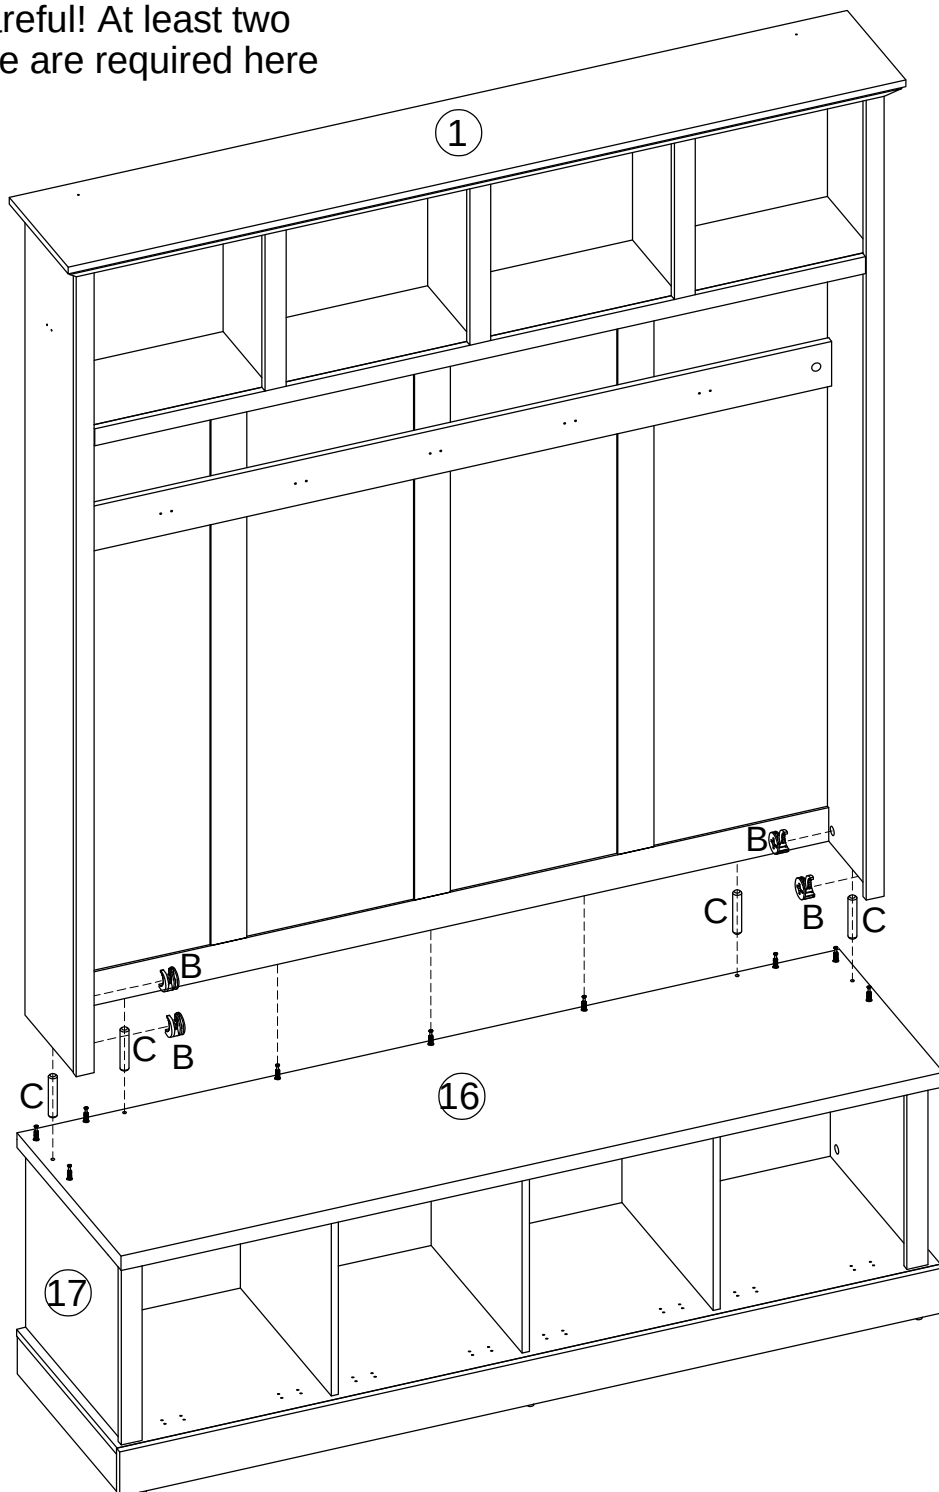



B*4



C*4




Step 30

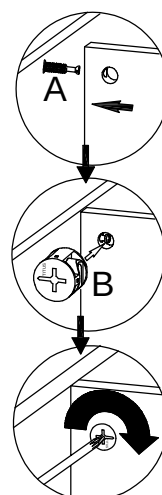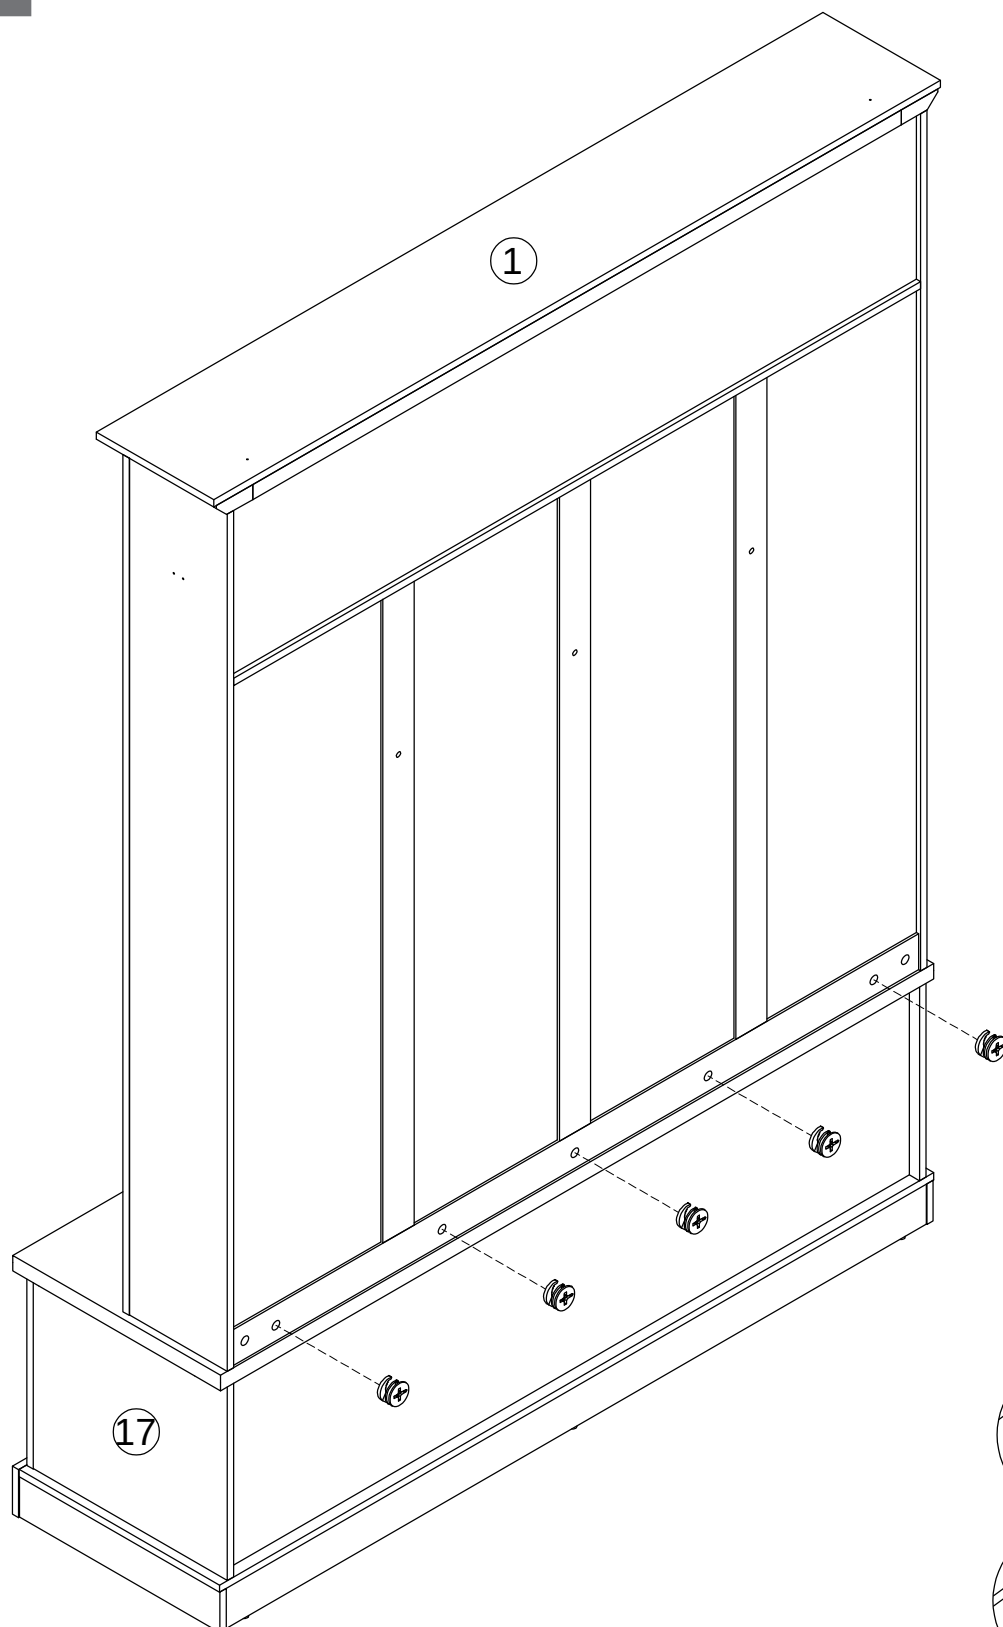

B*5




Step 31

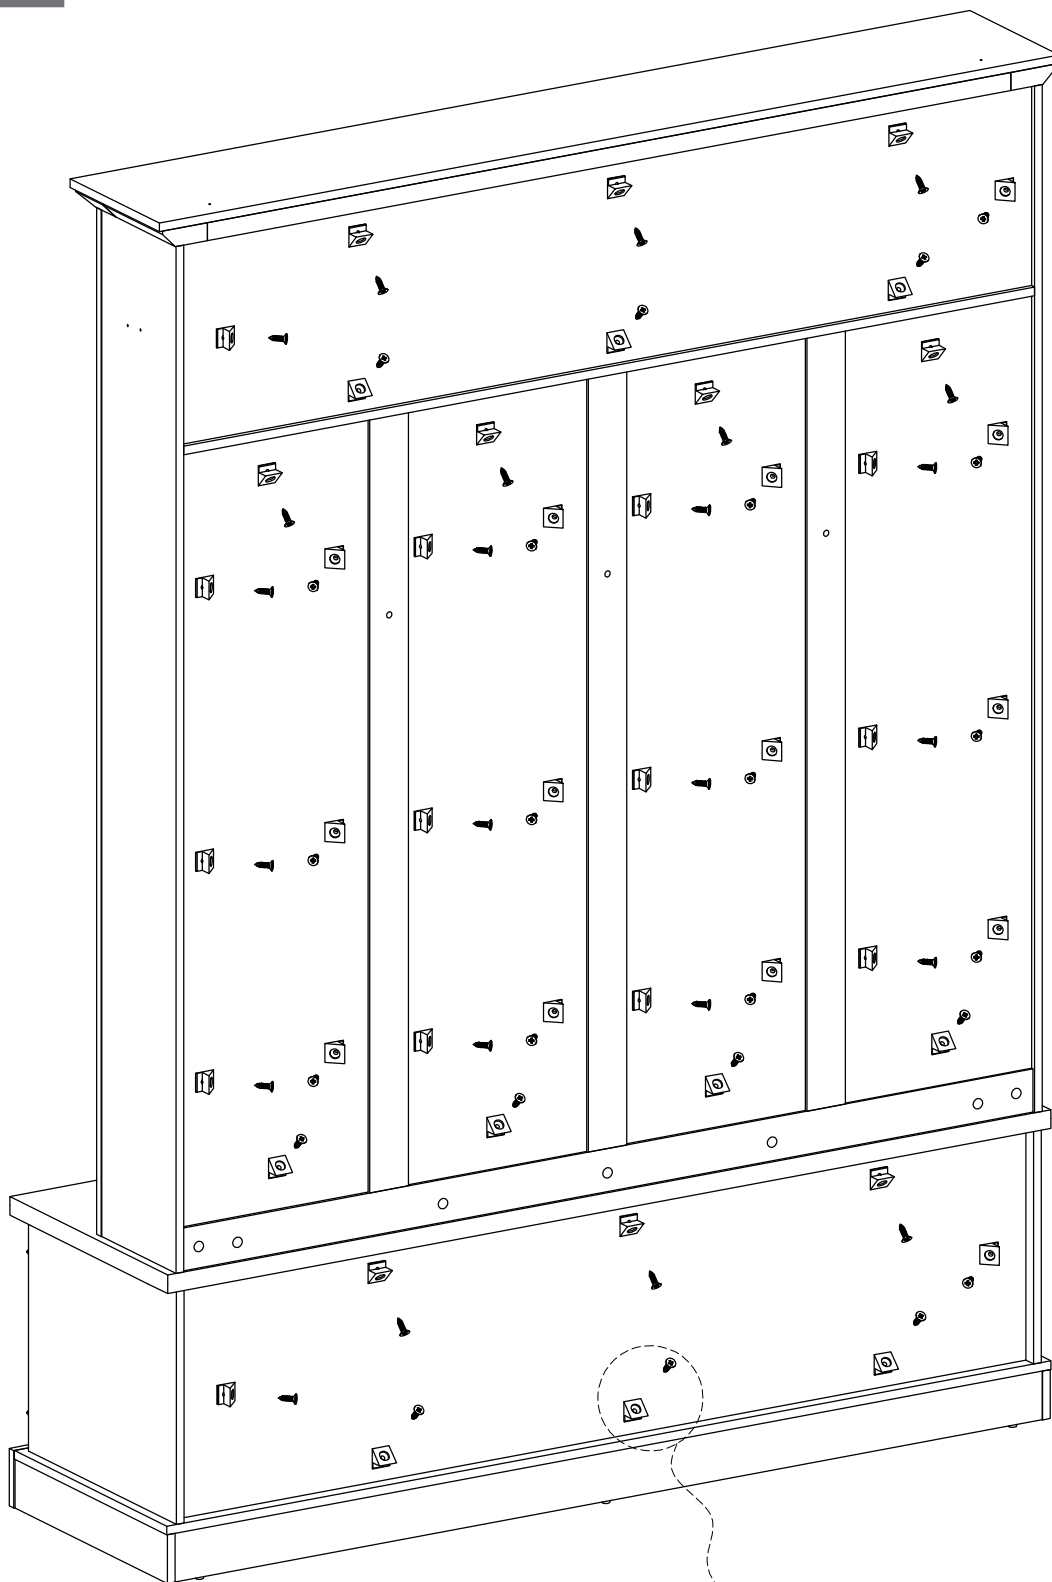


Fix hardware "K" into the gap with screws
to make the back panel more stable


K*48



L*48

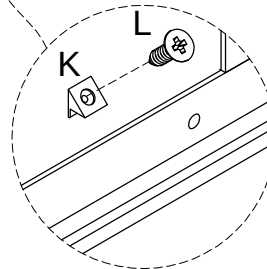

Step 32

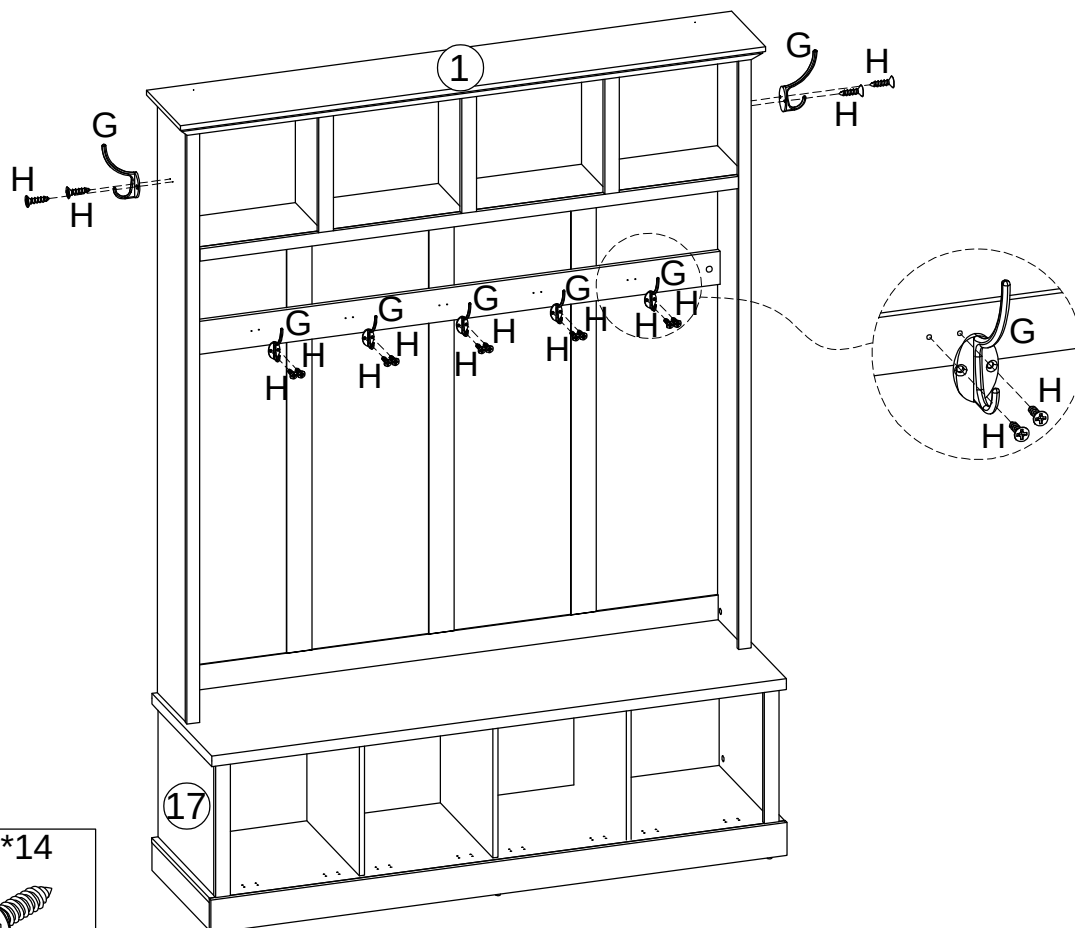


G*7




H*14



Step 33

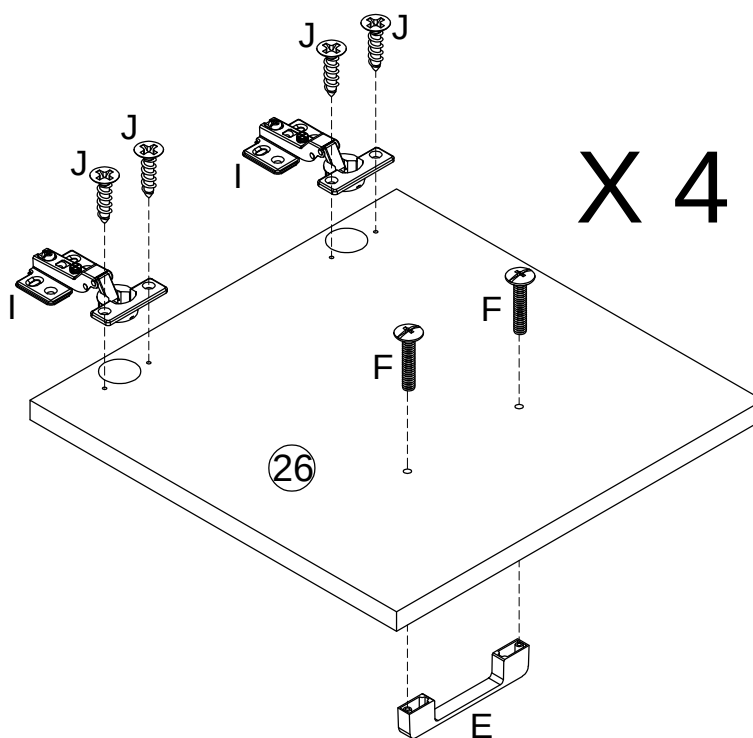

E*4



F*8




I*8



J*16




Step 34

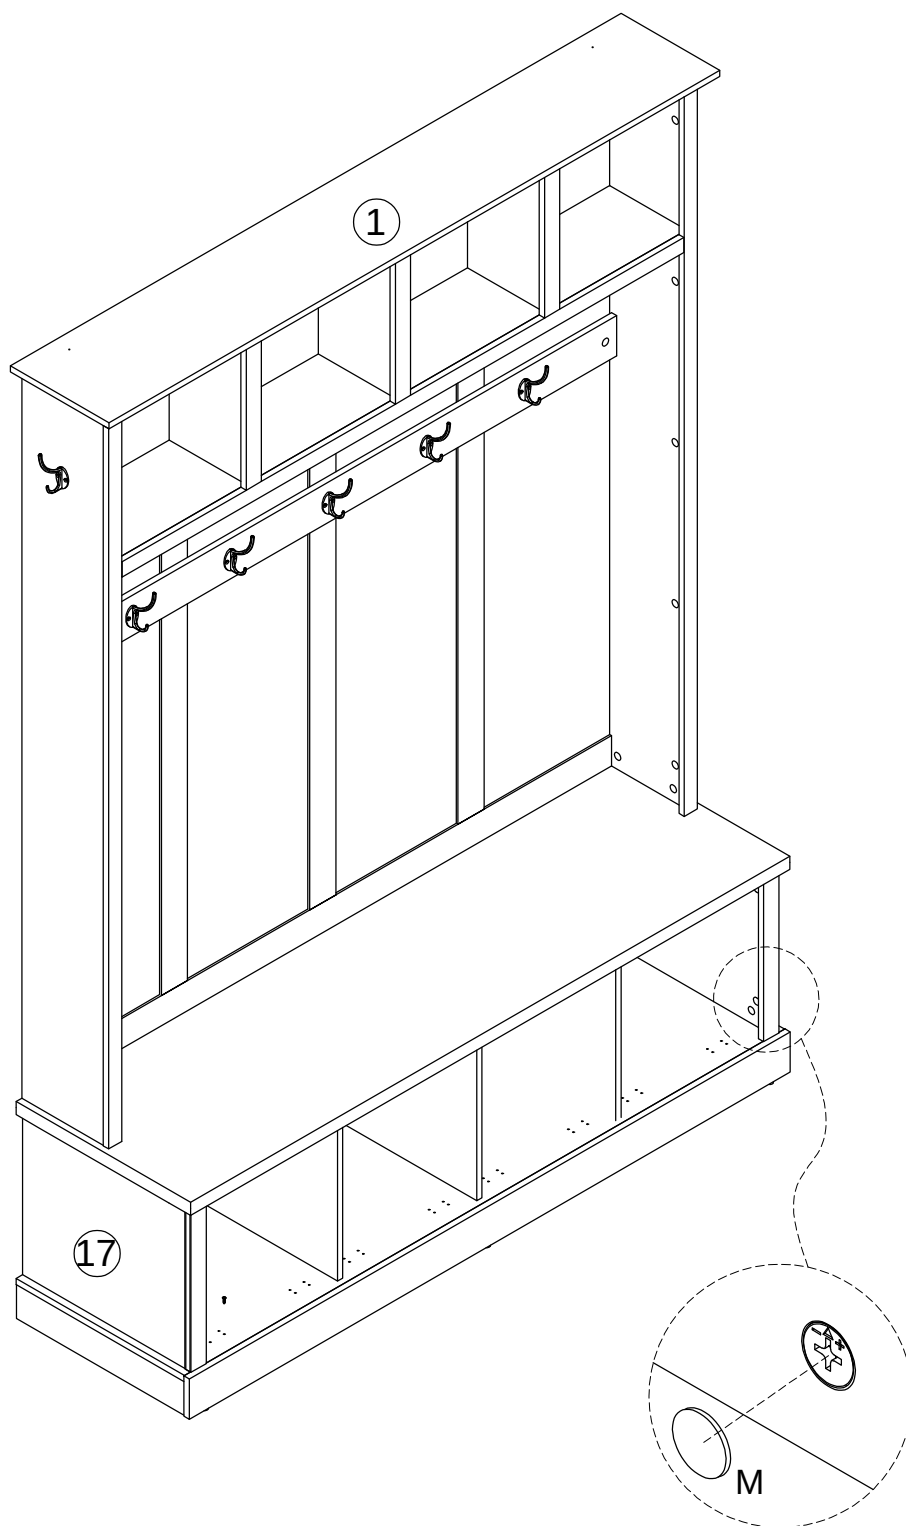


Please stick the hardware "M" on the exposed hole that makes your product more beautiful

M*72




Step 35

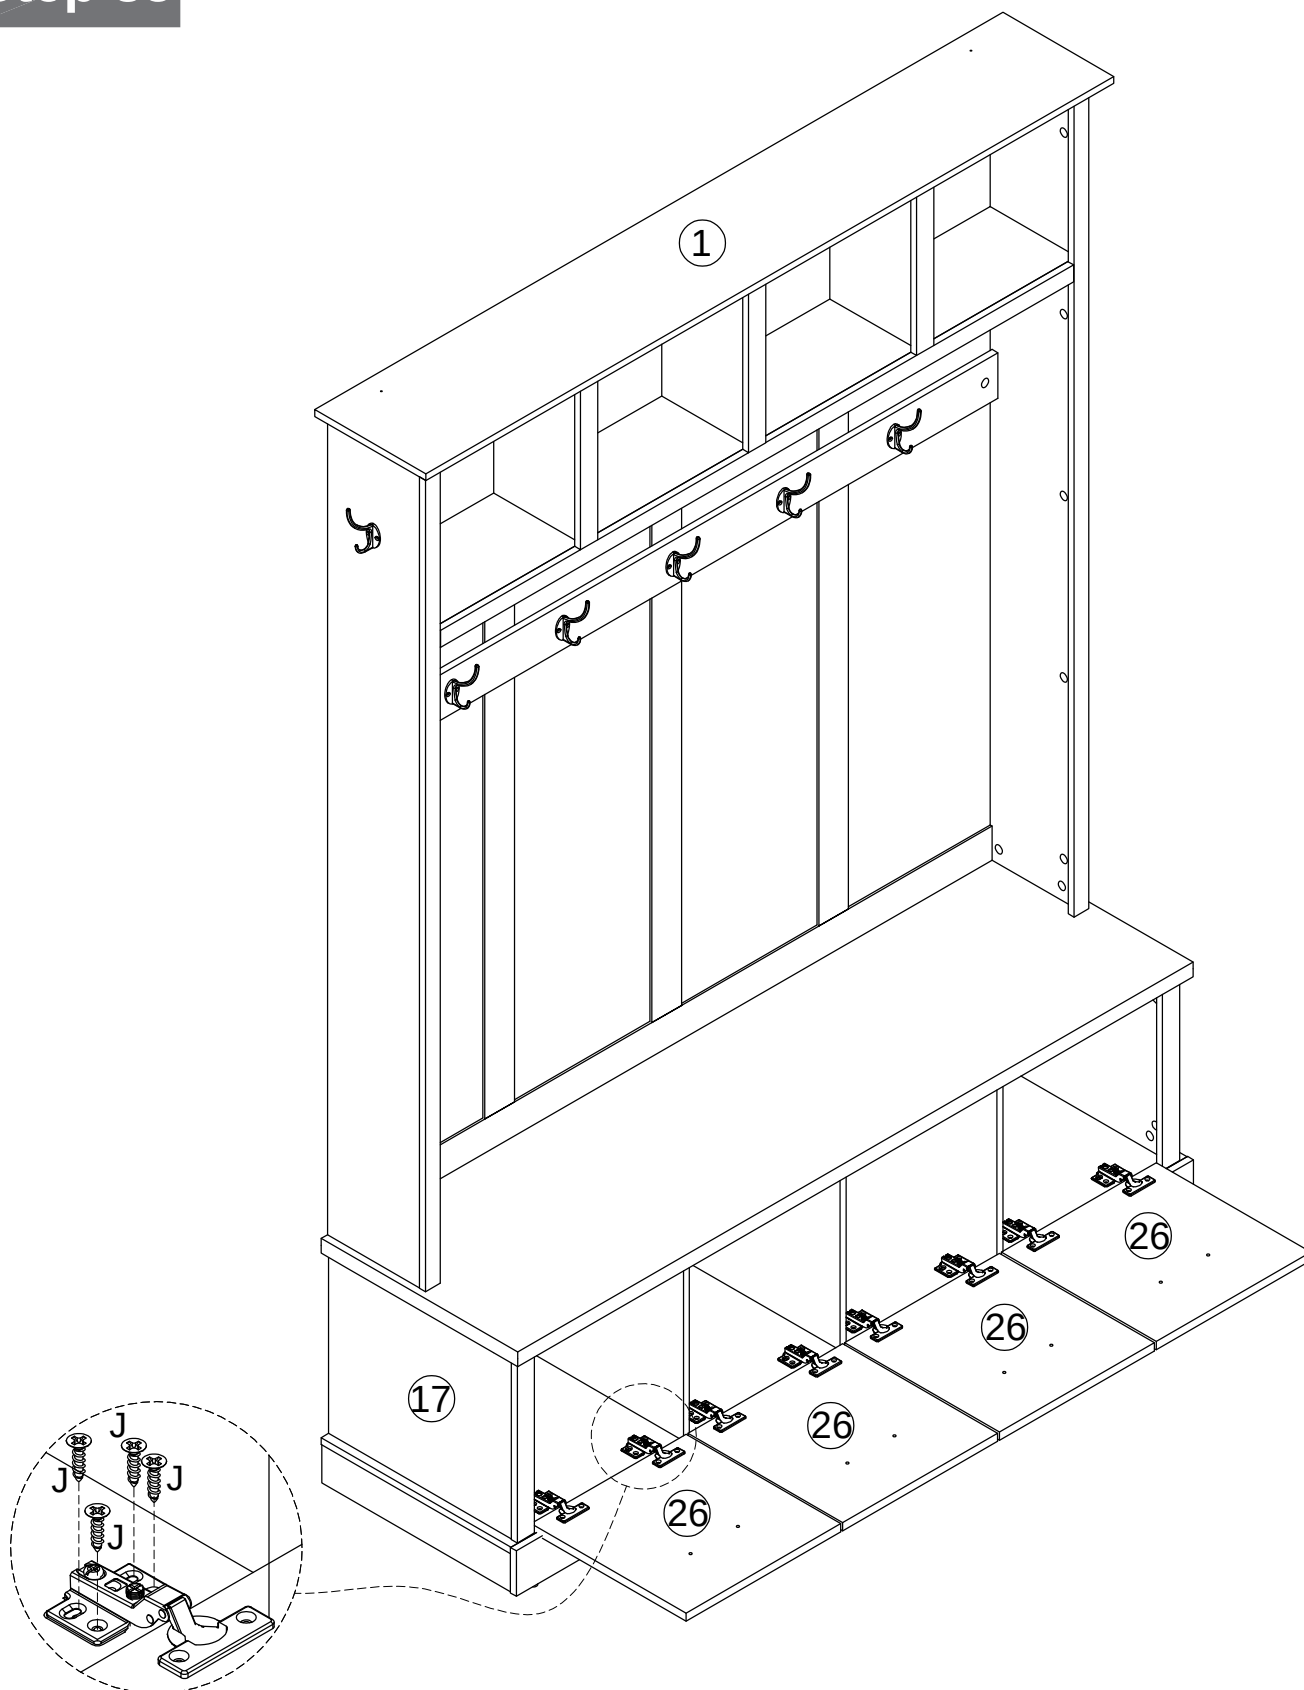

J*32




Step 36

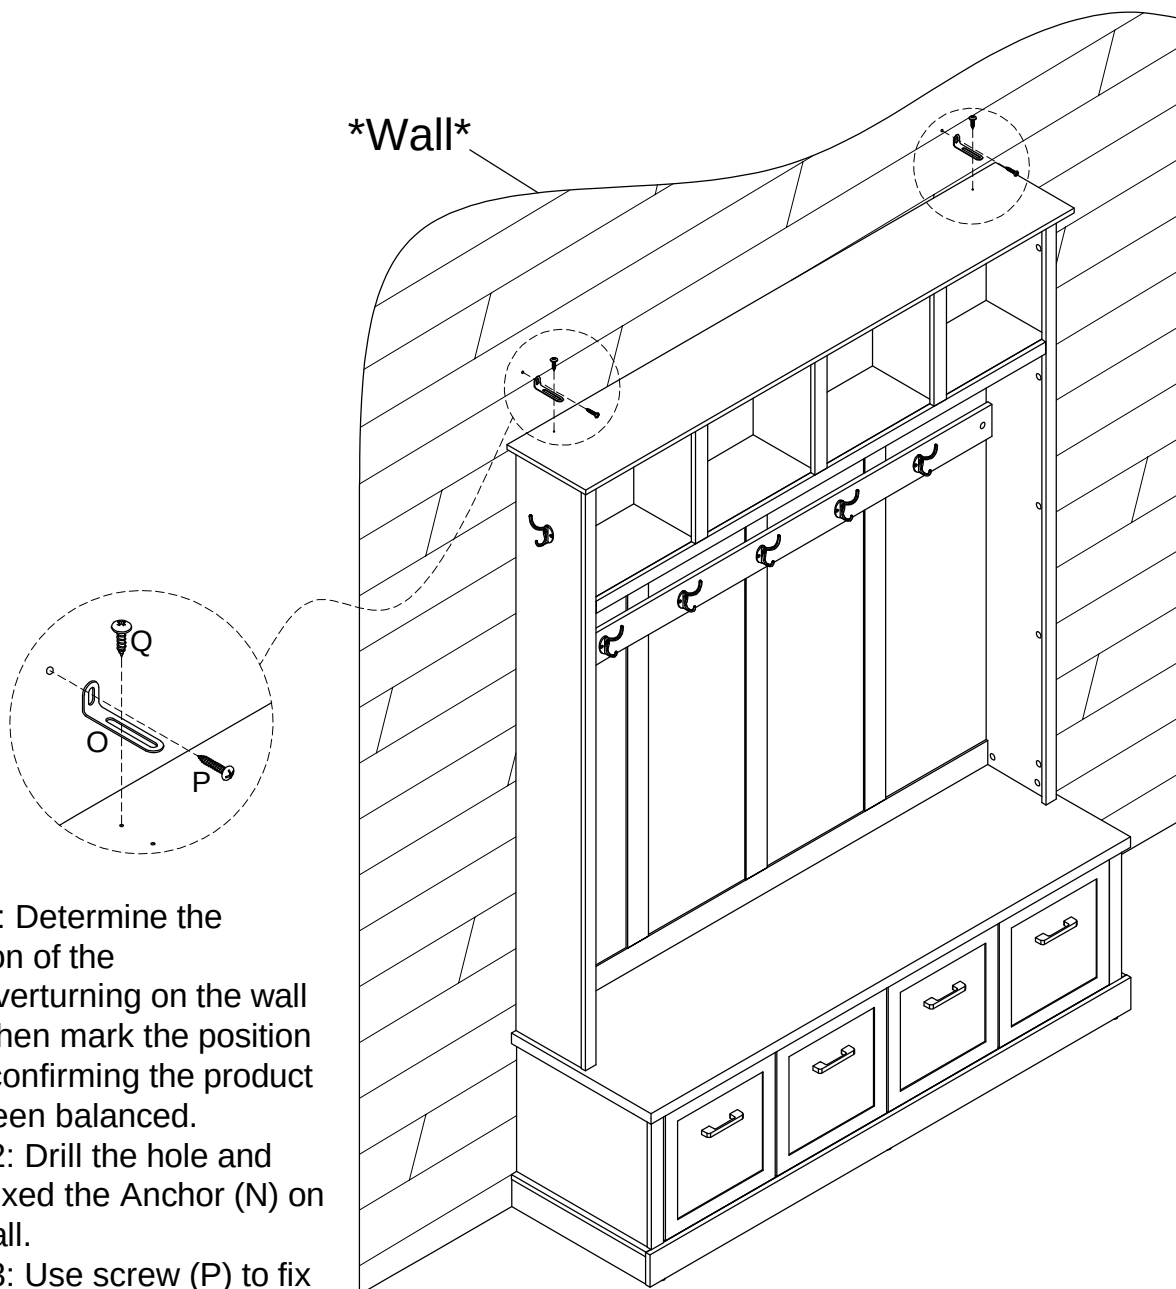


Step1: Determine the location of the anti-overturning on the wall and Then mark the position after confirming the product has been balanced.

Step 2: Drill the hole and then fixed the Anchor (N) on the wall.


Step 3: Use screw (P) to fix the L bracket (O) on the wall.

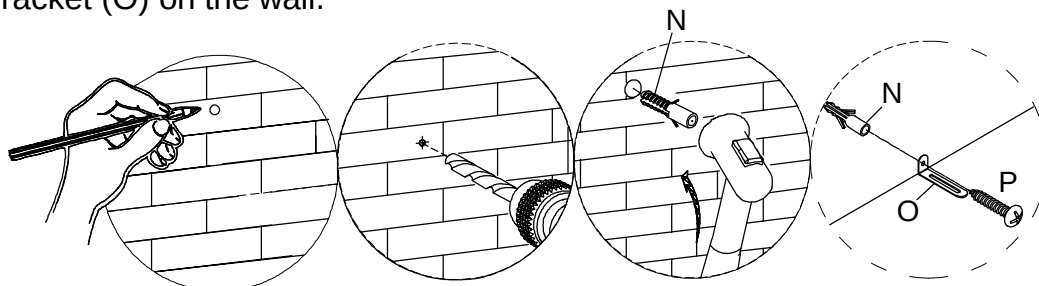


N*2




O*2



P*2




Q*2





HINGE ADJUSTMENTS



When the hinges are installed, you can refer to the pictures to adjust the screws of the doors till it's perfect.

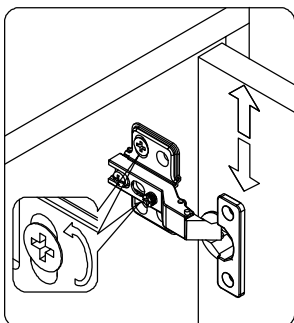



1. Adjust the screws shown in Figure 1 to adjust the door up and down.

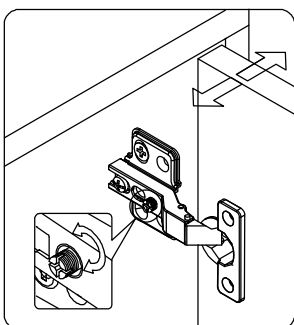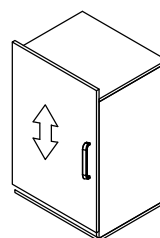

2. Adjust the screws shown in Figure 2 to adjust the door left and right to the right position.

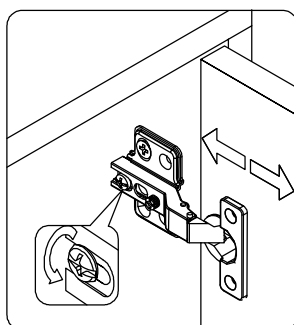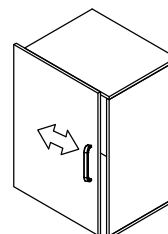

3. Adjust the screws shown in Figure 3 and pull the door back and forth so that it can be opened smoothly.

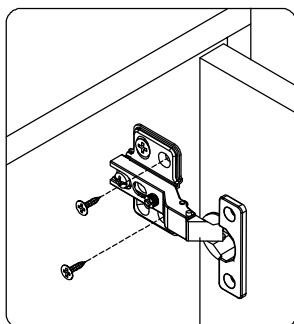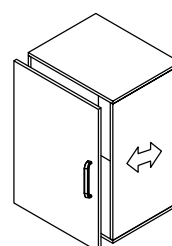

4. After the adjustment is complete, secure the remaining two screws to secure the door in place.

FINISH

