



Installation & Assembly

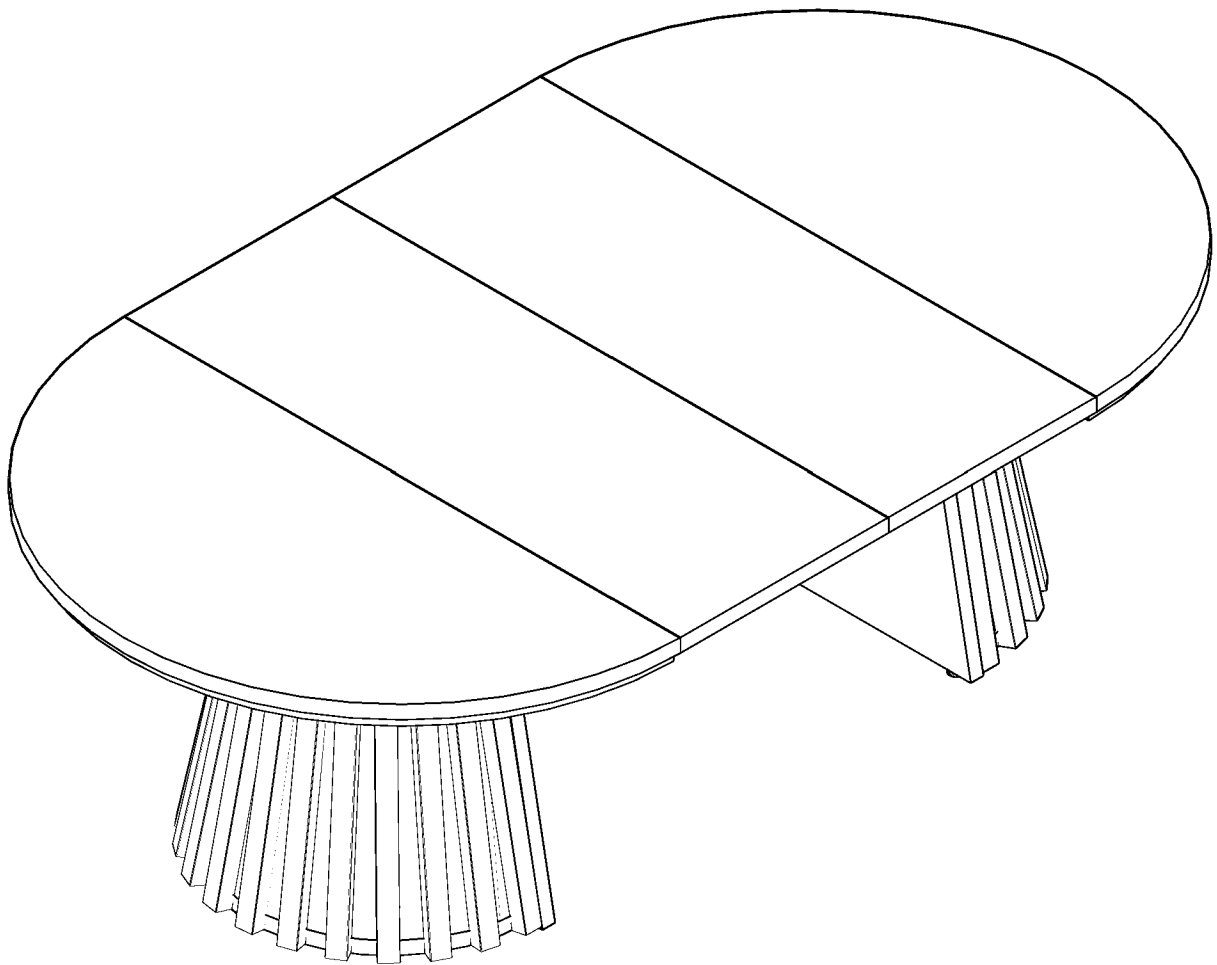


Note: Parts I and L of this product must be used together with Part E.


1.X1

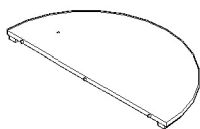


2.X1

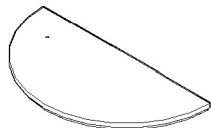


3.X2

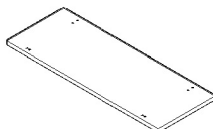


4.X4



5.X2

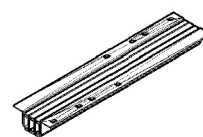


6.X2




7.X2




8.X2




9.X2



10.X2



A.X6

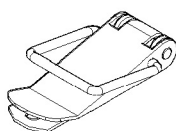

B.X32




C.X16




M7X38

D.X6



E.X34




M6X16

F.X1



G.X1

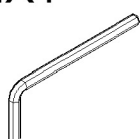

M4

H.X8




I.X18




M6X25


J.X10



K.X4



L.X16



M6X12

M.X8



M8X18


N.X4



M8X30




1.X1

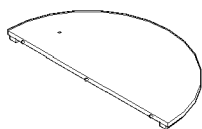


2.X1




3.X2

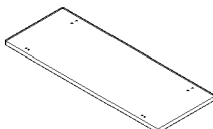


4.X2



5.X2

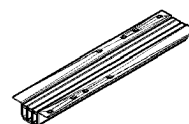


6.X2




7.X2




8.X2



9.X2




10.X2



11.X2



A.X6

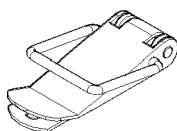

B.X32



C.X16




M7X38

D.X6



E.X34




M6X16

F.X1



G.X1

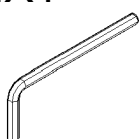

M4

H.X8




I.X18




M6X25


J.X10



K.X4



L.X16



M6X12

M.X8



M8X18

N.X8



M8X30



H.X8




F.X1




M.X8



1

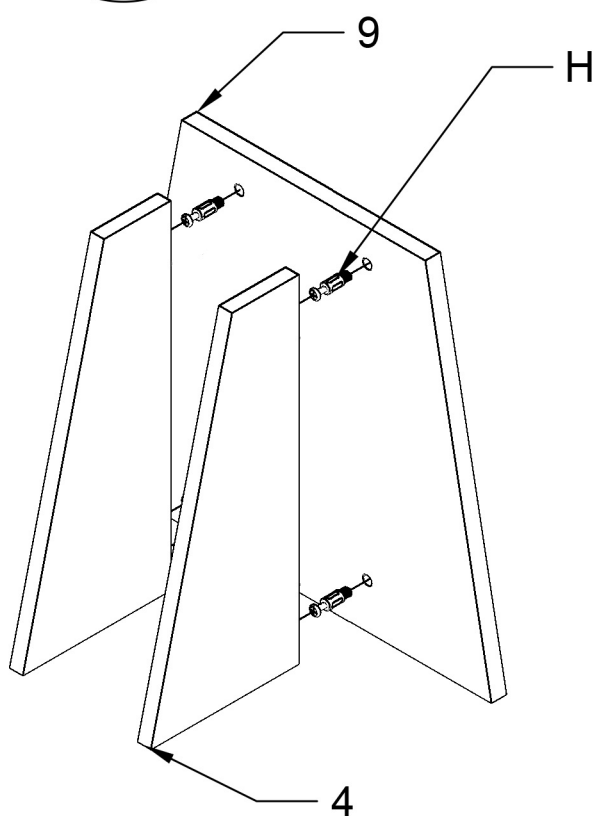


2

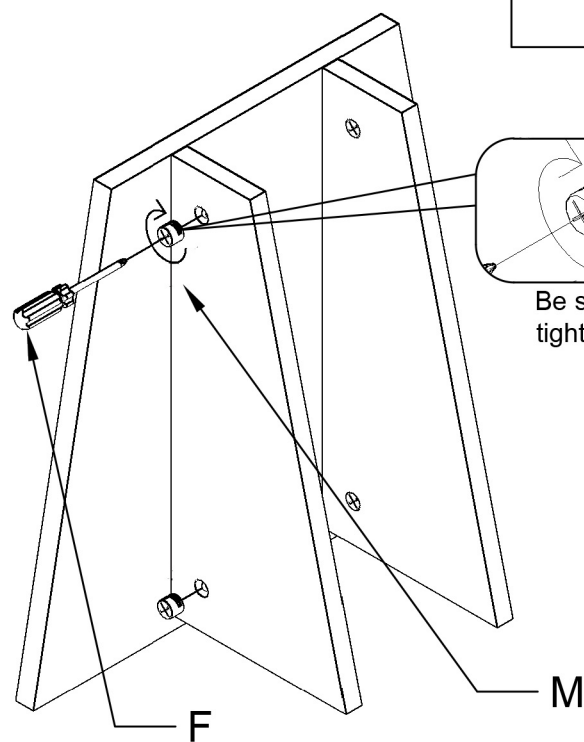

Be sure to
tighten firmly

G.X1



M4

C.X8




M7X38


J.X10




3

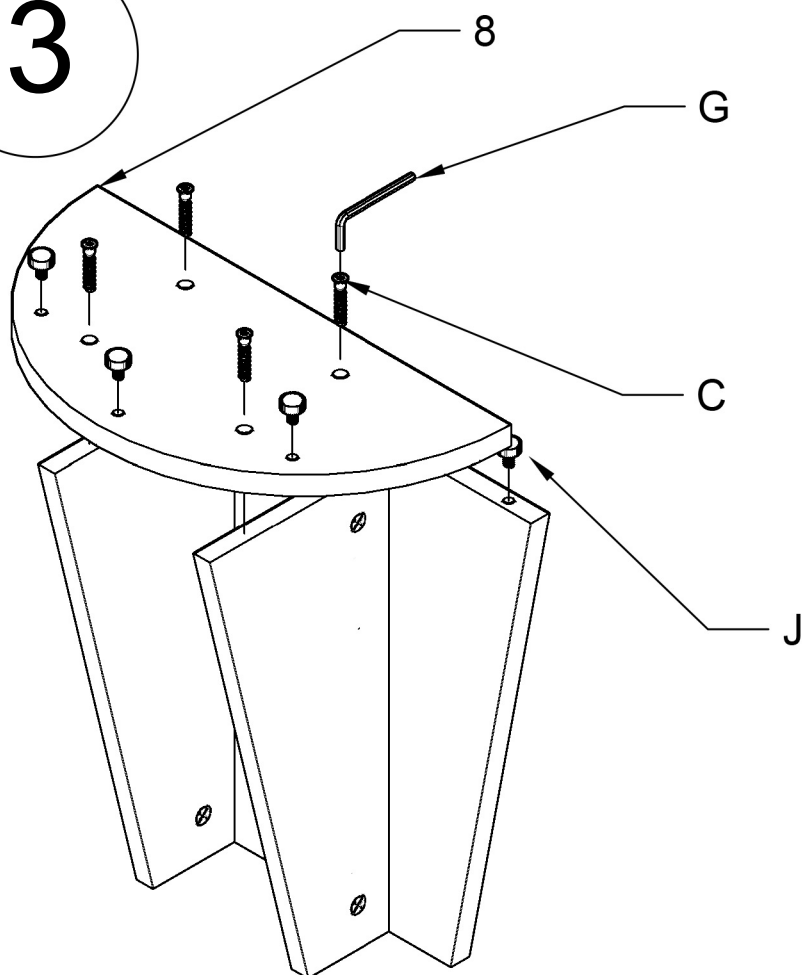

4

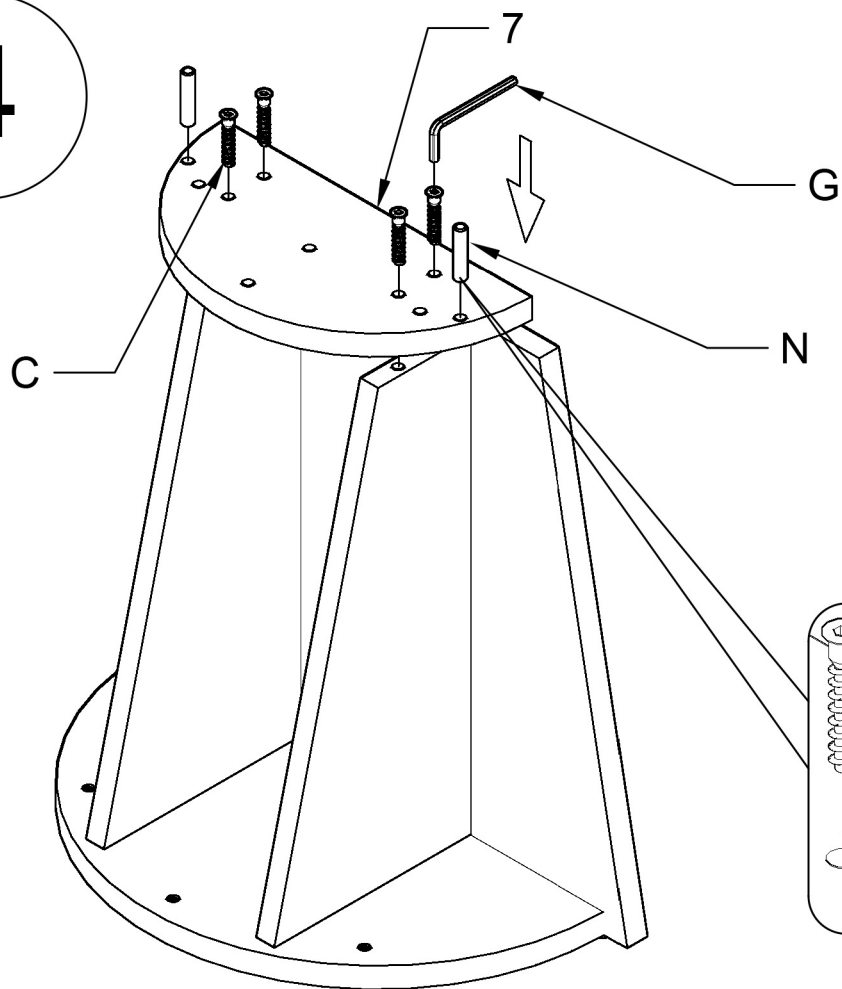

G.X1



M4

C.X8



M7X38


N.X4




M8X30

The wooden pin must be pushed all the way in.

5

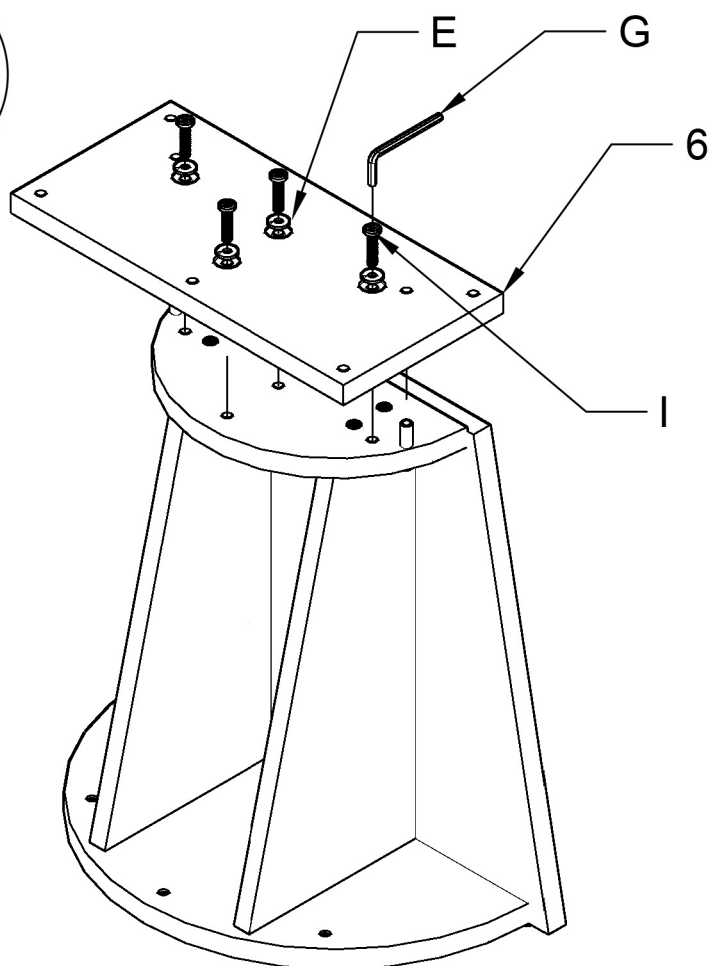

G.X1




M4

I.X8




M6X25

E.X8



M6X16

6

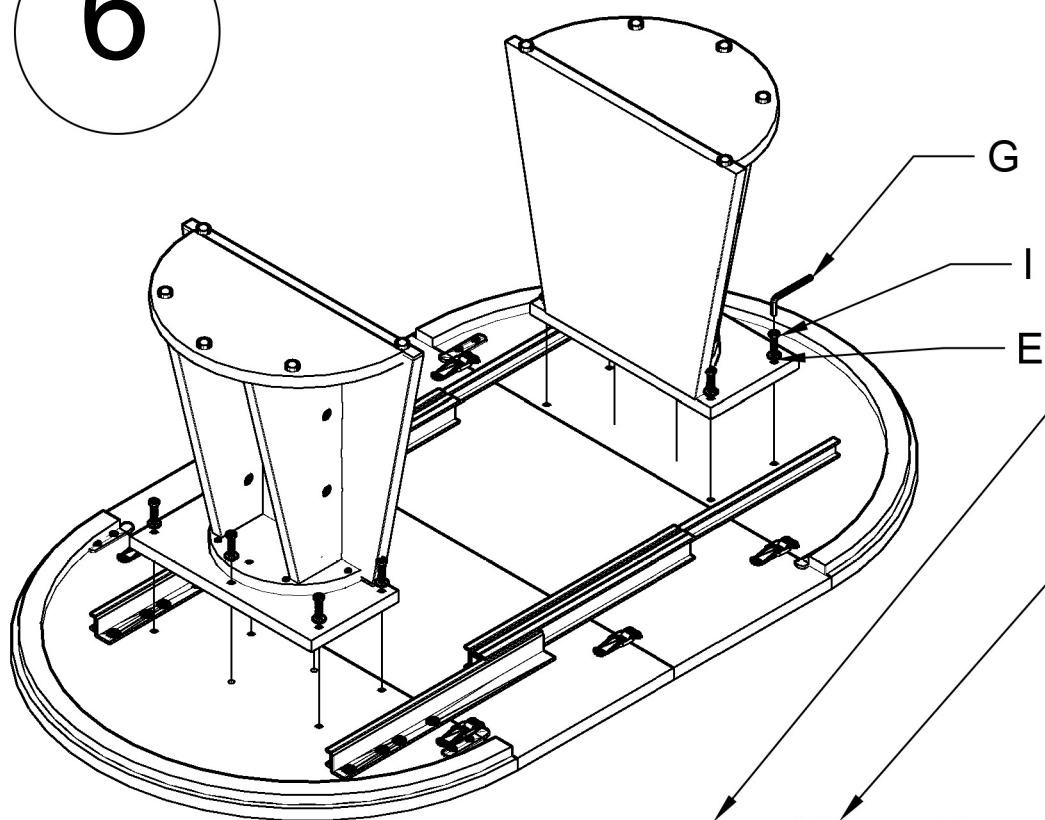

G.X1




M4

I.X10



M6X25


E.X10




M6X16

I and E must be used together;
otherwise, they will damage the desktop.

7

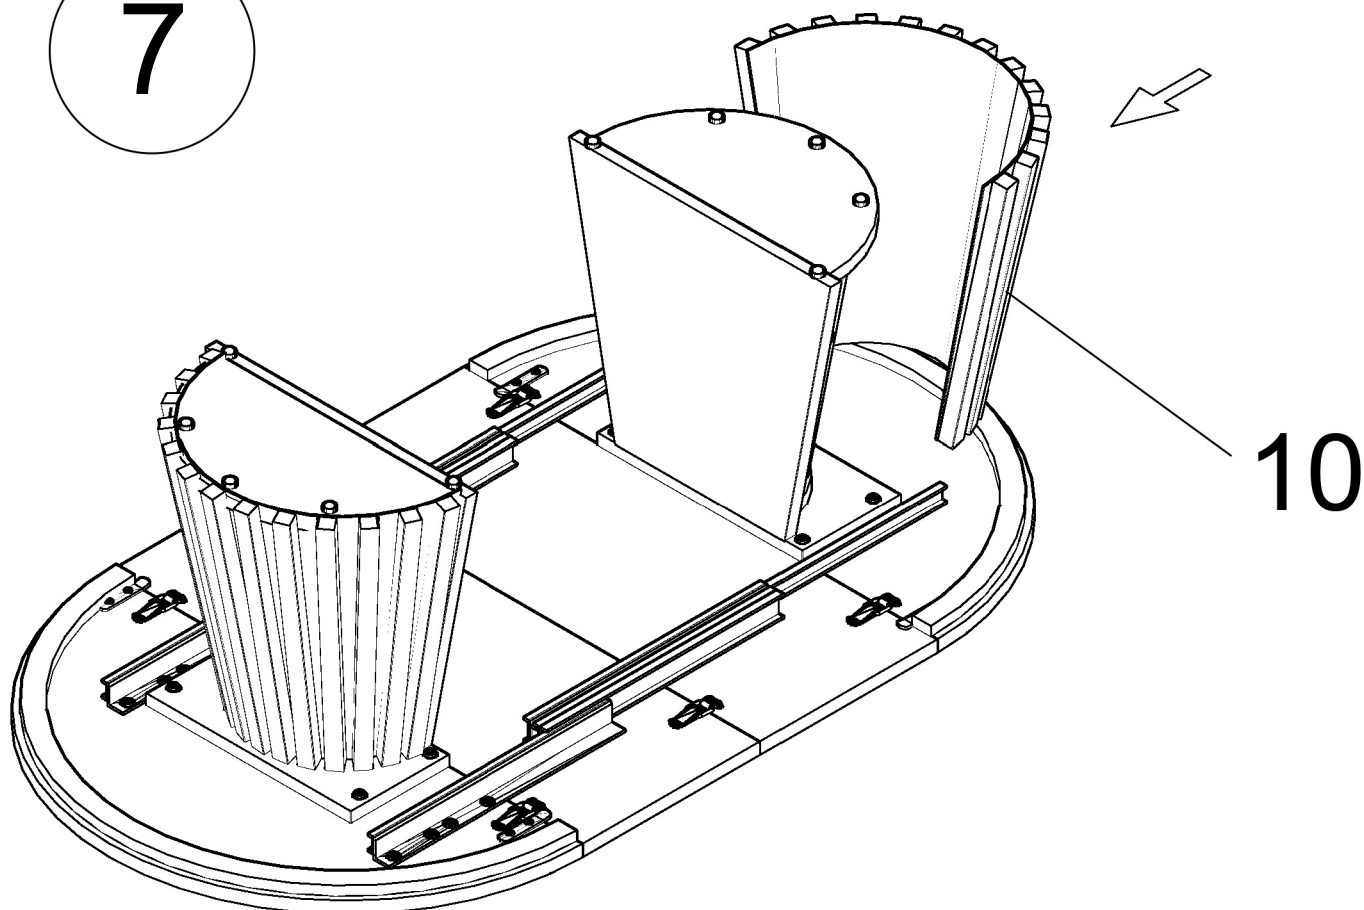

8

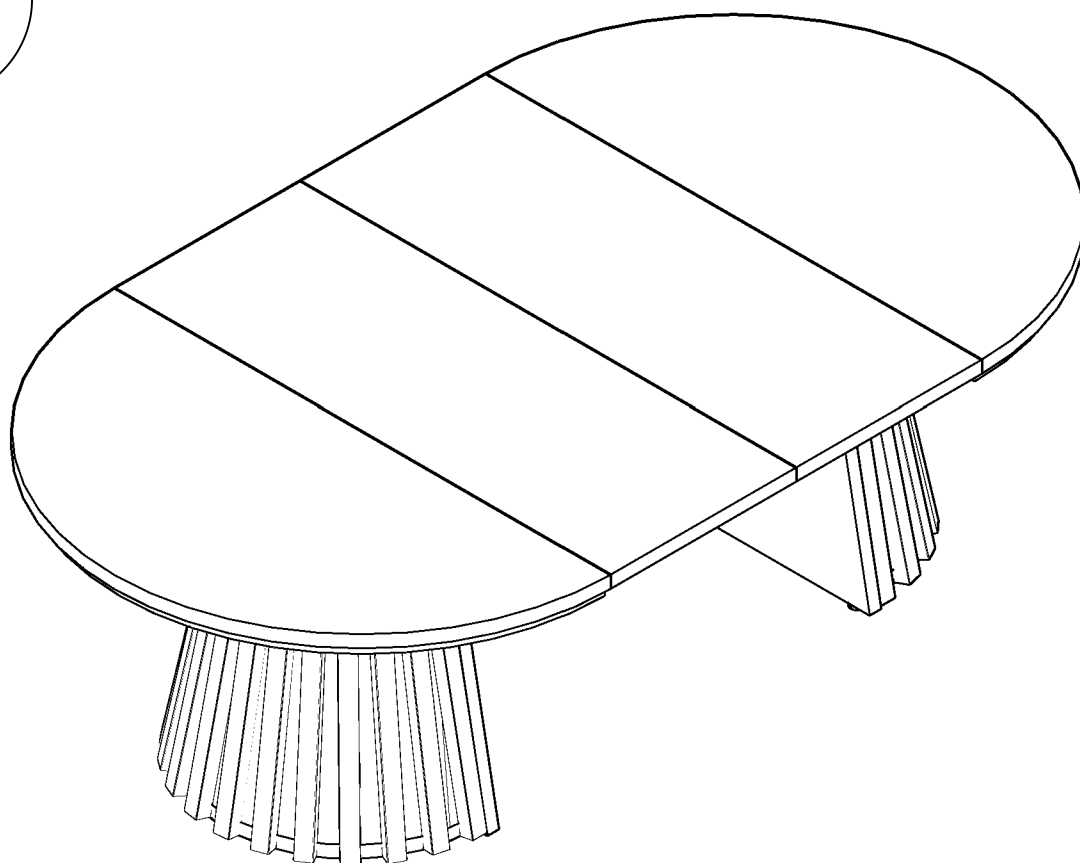

9

