



Installation Instructions

Attention: Do not tighten the screws until all of them are in right positions.

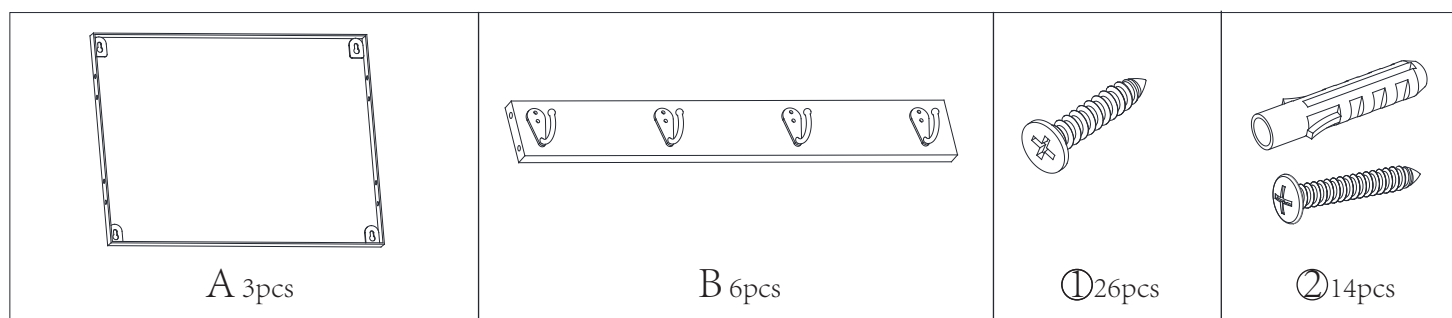

- 1 Align B with the hole of A

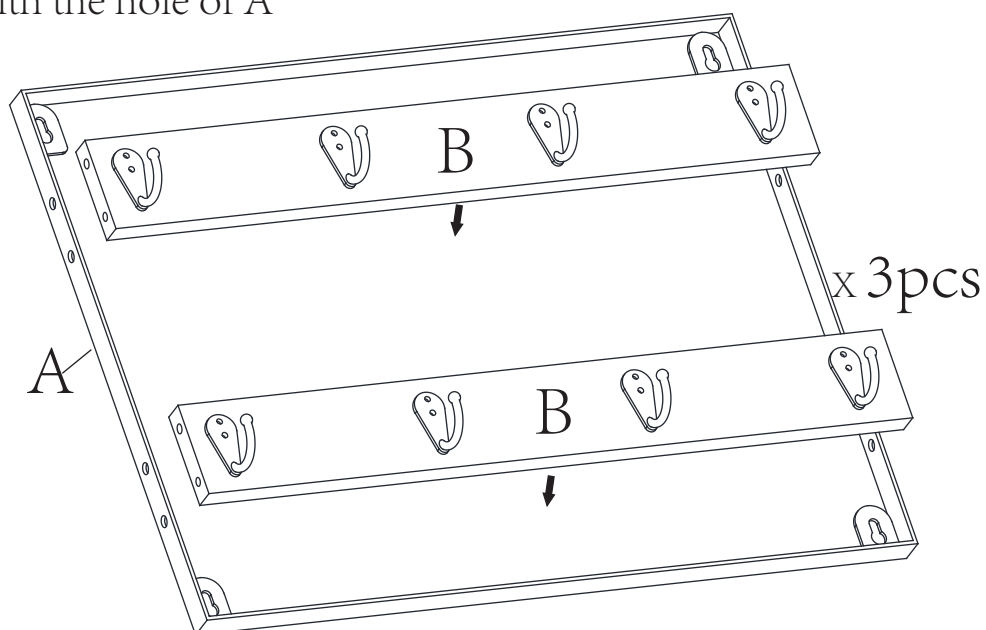

- 2 Use ① screws link B and A. Check and tighten all screws after installation.

