

PND-2274 BK

Assembly Instructions

CAUTION



• Inspect the wire insulation for any cuts, abrasions, or exposed copper that may have resulted during shipping. If there is a defect in the wire, do not attempt installation.

• Before starting installation of this fixture or removal of a previous fixture, disconnect the power by turning off the circuit breaker or by removing the fuse at the fuse box.

TOOLS REQUIRED



Ladder



Safety glasses



Electrical tape




Phillips screwdriver




Flat blade screwdriver



Pliers



Wire strippers

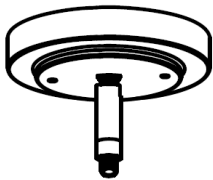


Canopy*1



Long rod*2



Short rod*2

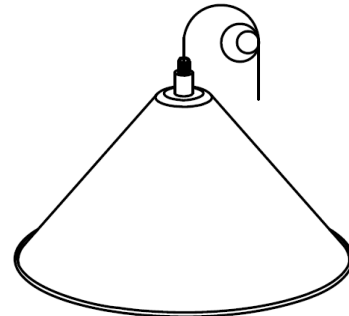


Fixture*1



Cap Nut*2




Mounting Unit*1



Mounting Screw*2



Wire Nut*3

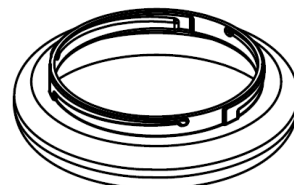

Glass shade*1


***PARTS SHOWN MAY DIFFER SLIGHTLY PER LIGHT FIXTURE**

PND-2274 BK

Assembly Instructions


STEP 1

Before assembling the rods with the branch wires, choose the number of rods to adjust the height. Screw the rods to the fixture. Make sure to feed the branch wires of the fixture through the rods during assembly.

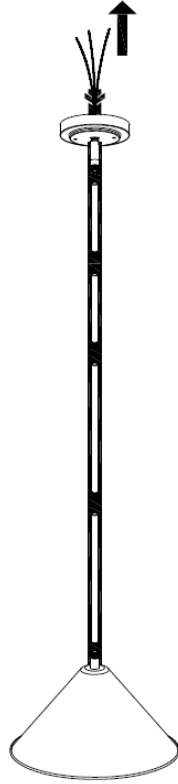

STEP 2

Use the mounting screws to attach the mounting Unit to the junction box.

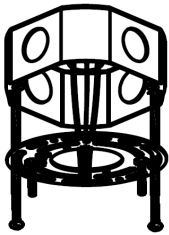

STEP 3


Make the electrical connection from the junction box to the fixture. Connect the ground wire to the mounting unit using the preinstalled green ground screw. Then, connect the positive, negative and ground wires with the supplied wire nuts. Secure with electrical tape.

Connect Clear, Brown, Gold or Black Parallel Wire without tracer (round & smooth) or Black Fixture Wire to:

Black or Red Supply Wire or Insulated Wire (other than green) with copper conductor.


Connect Clear, Brown, Gold or Black *Parallel Wire with tracer (square & ridged) or White Fixture Wire to:

White Supply Wire or Insulated Wire (other than green) with silver conductor.

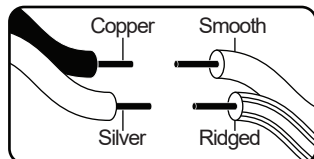

STEP 4

Place the canopy over the mounting unit and secure the fixture with the cap nuts.

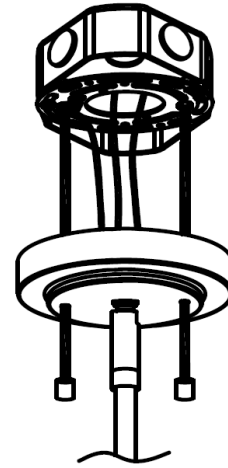

STEP 5

Secure the glass shade onto the fixture by aligning the open end of the recessed groove with the protrusion, sliding the glass shade inside the fixture, and turning it clockwise until secure.

Turn the light switch on to activate the fixture.

