




IMPORTANT, RETAIN FOR FUTURE REFERENCE: READ CAREFULLY.

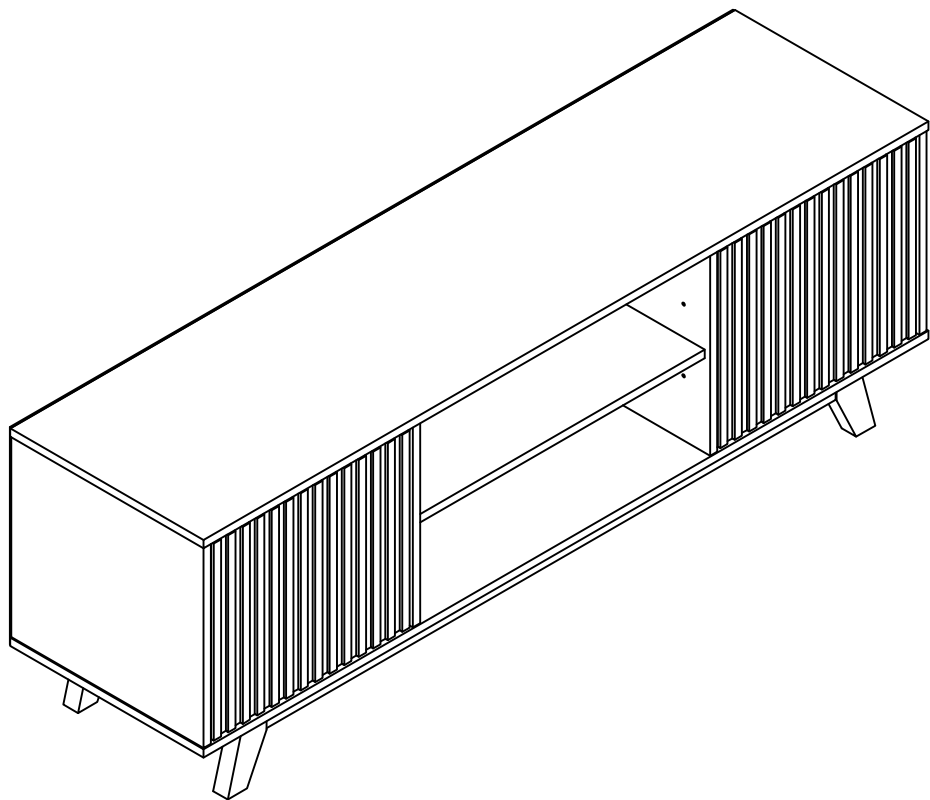

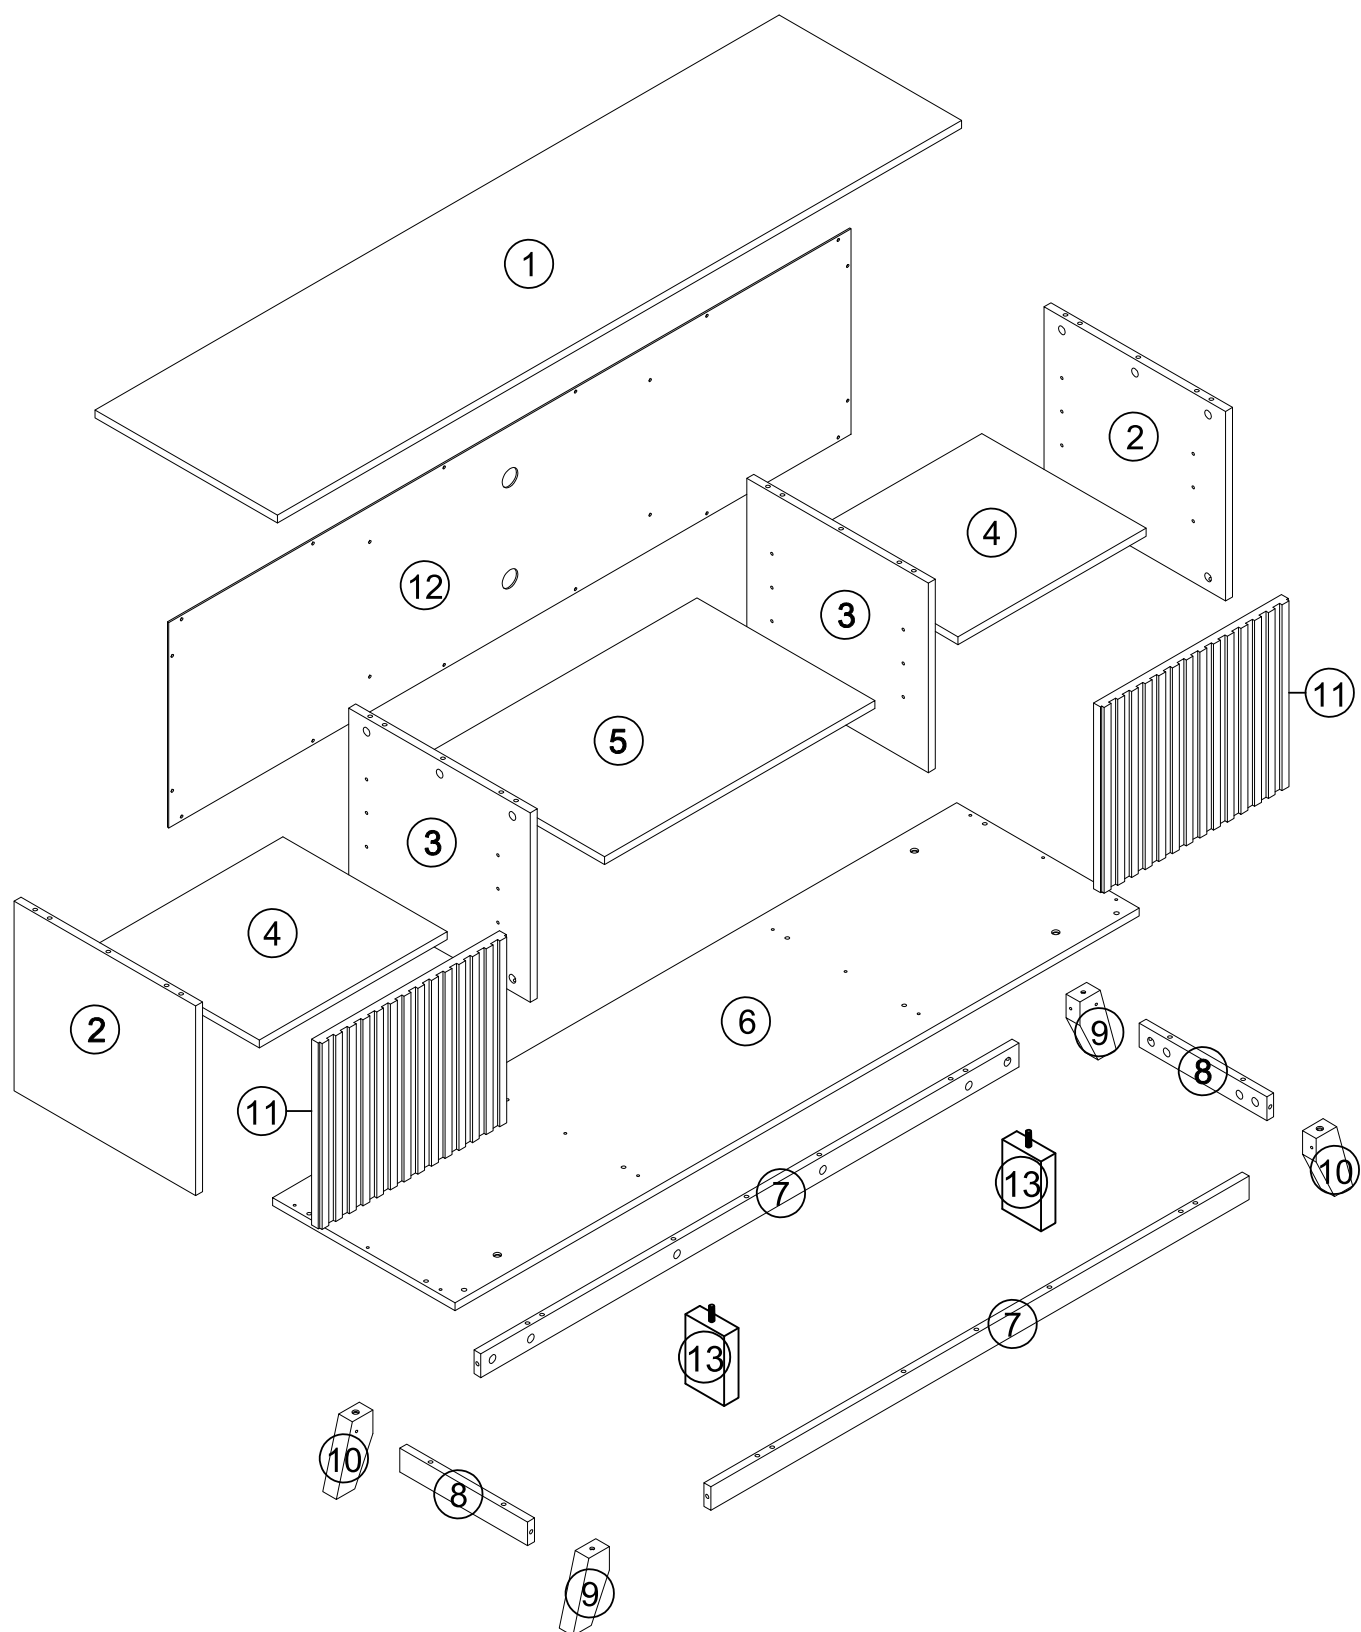


①

x1

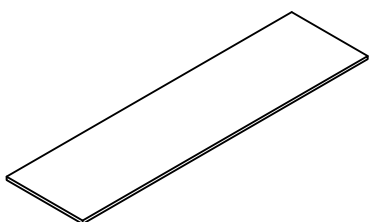


②

x2

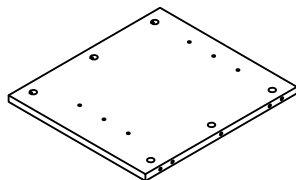


③

x2

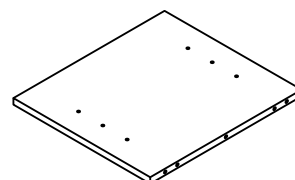


④

x2

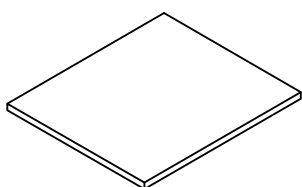


⑤

x1

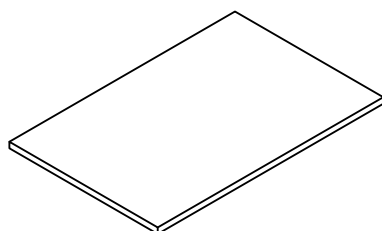


⑥

x1

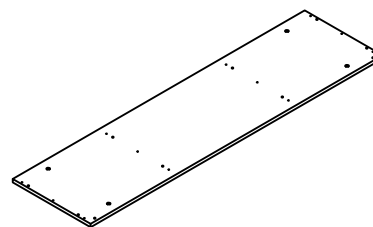


⑦

x2

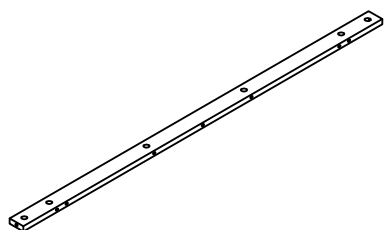


⑧

x2

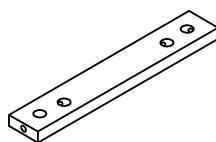


⑨

x2




⑩

x2

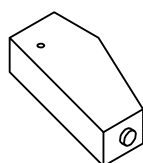


⑪

x2

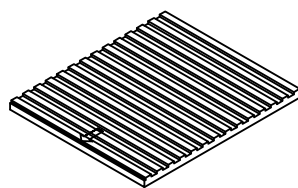


⑫



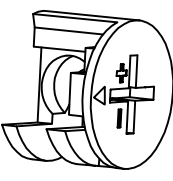

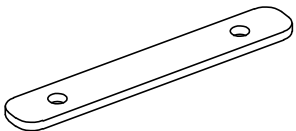
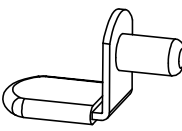


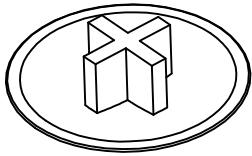
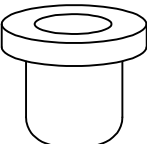
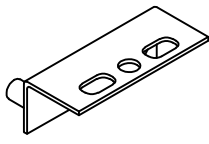
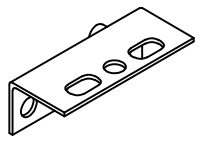

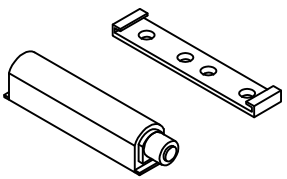

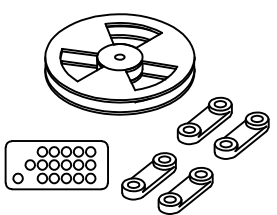
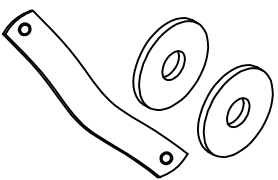
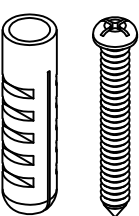


x1

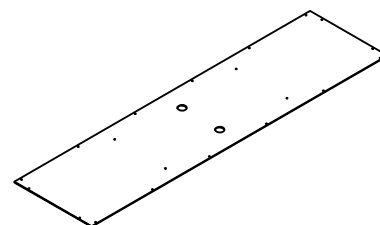


⑬



x2



<p>(A)</p>  <p>44X+4X</p>	<p>(B)</p> <p>Ø8x30mm</p>  <p>22X+2X</p>	<p>(C)</p> <p>Ø15</p>  <p>44X+4X</p>	<p>(D)</p> <p>ø3.9×15mm</p>  <p>4X</p>
<p>(E)</p>  <p>2X</p>	<p>(F)</p>  <p>12X</p>	<p>(G)</p> <p>Ø3.5x16mm</p>  <p>22X+2X</p>	<p>(H)</p> <p>Ø1/4"×25mm</p>  <p>4X</p>
<p>(I)</p>  <p>25X</p>	<p>(J)</p>  <p>4X</p>	<p>(K)</p>  <p>2X</p>	<p>(L)</p>  <p>2X</p>
<p>(M)</p> <p>ø2.9×14mm</p>  <p>8X</p>	<p>(N)</p>  <p>2X</p>	<p>(O)</p> <p>ø3.5×15mm</p>  <p>4X</p>	<p>(P)</p>  <p>1X</p>
<p>(Q)</p>  <p>2X+4X</p>	<p>(R)</p>  <p>2X+2X</p>	<p>(S)</p> <p>ø2.9×15mm</p>  <p>8X</p>	<p>(T)</p>  <p>4X</p>


Step 1

A		8
---	---	---

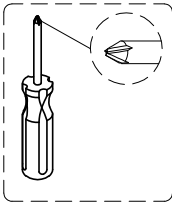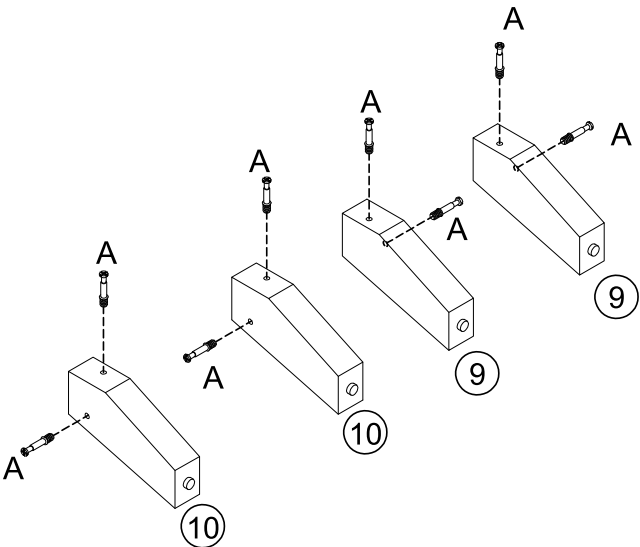


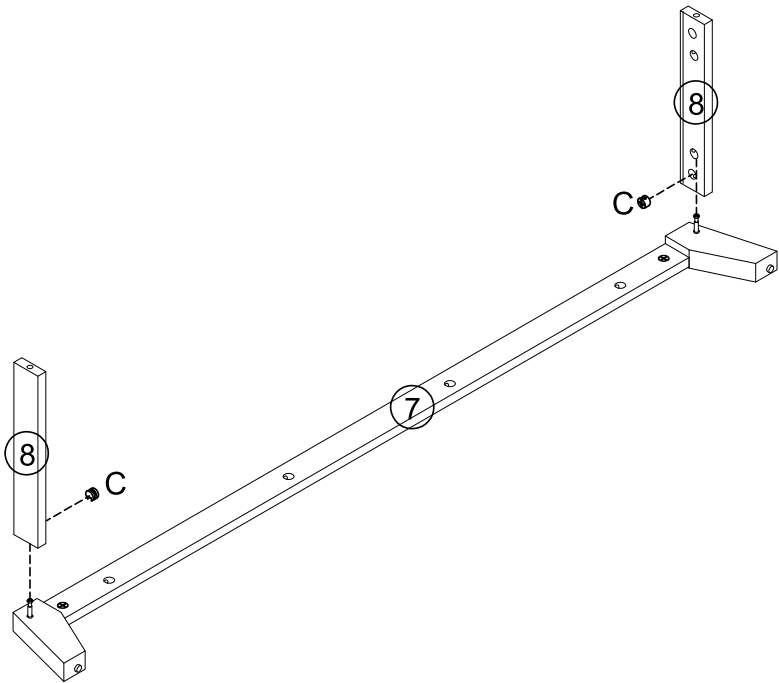
Step 2

C		4
---	---	---

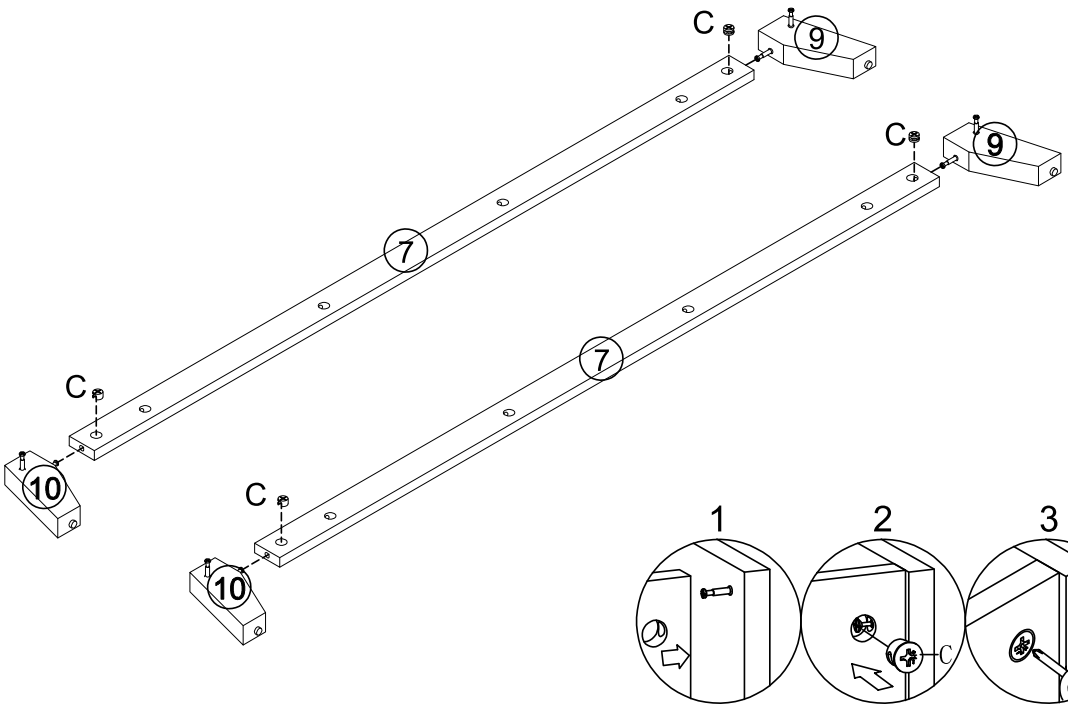


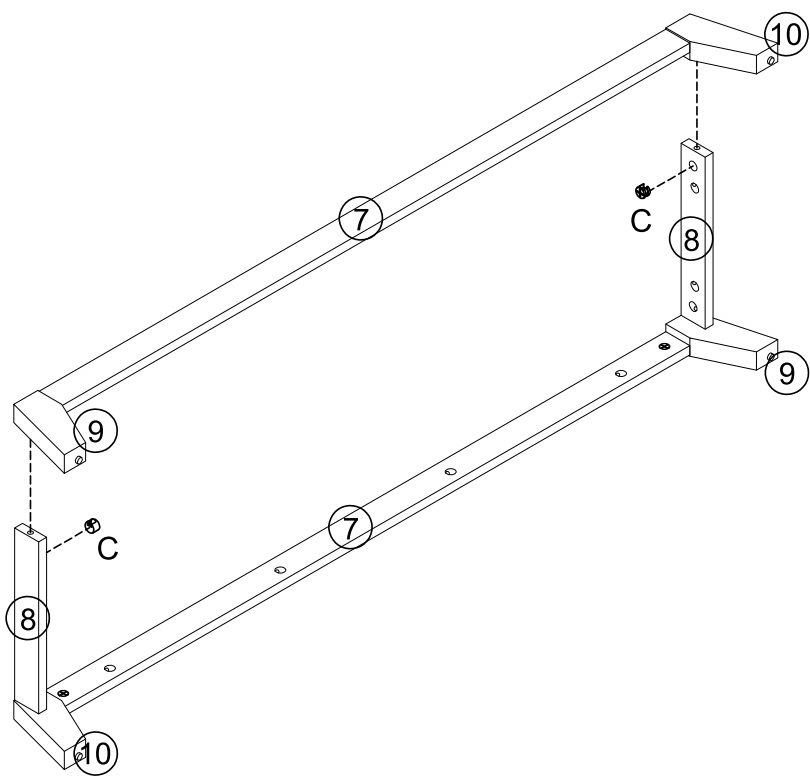
Step 3

C		2
---	---	---






Step 4

C		2
---	---	---




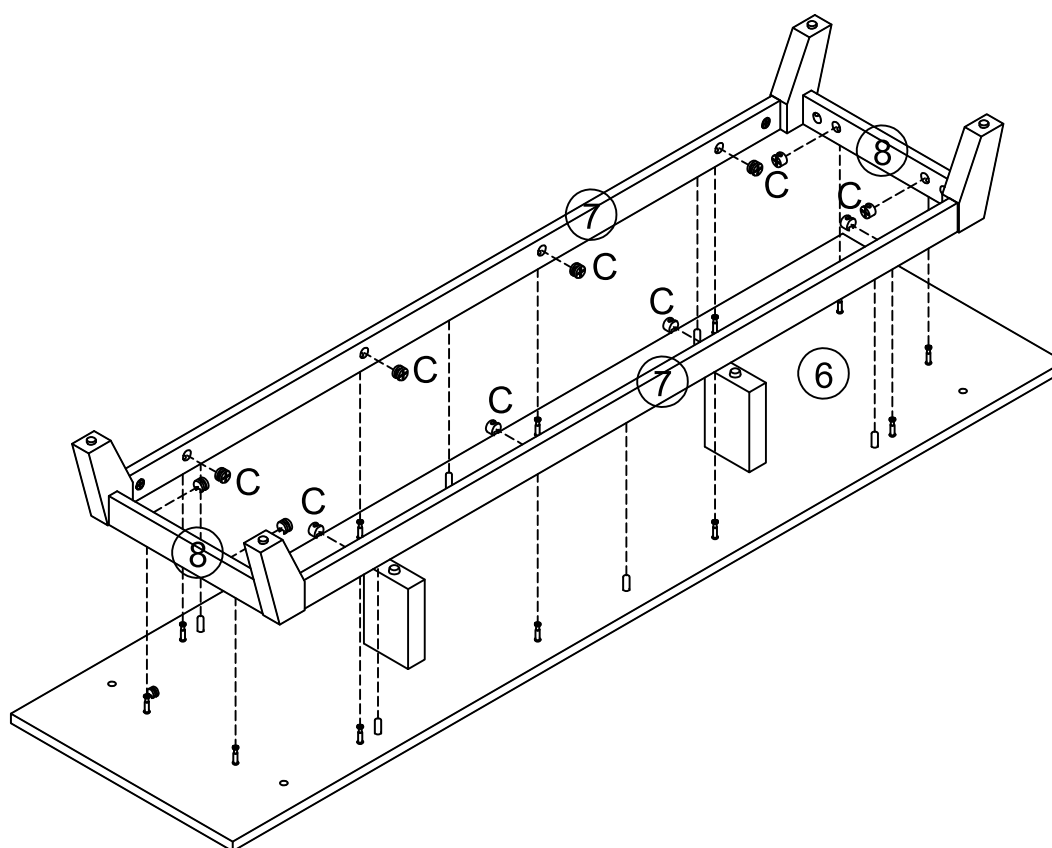
# Step 5

A		12
B		6

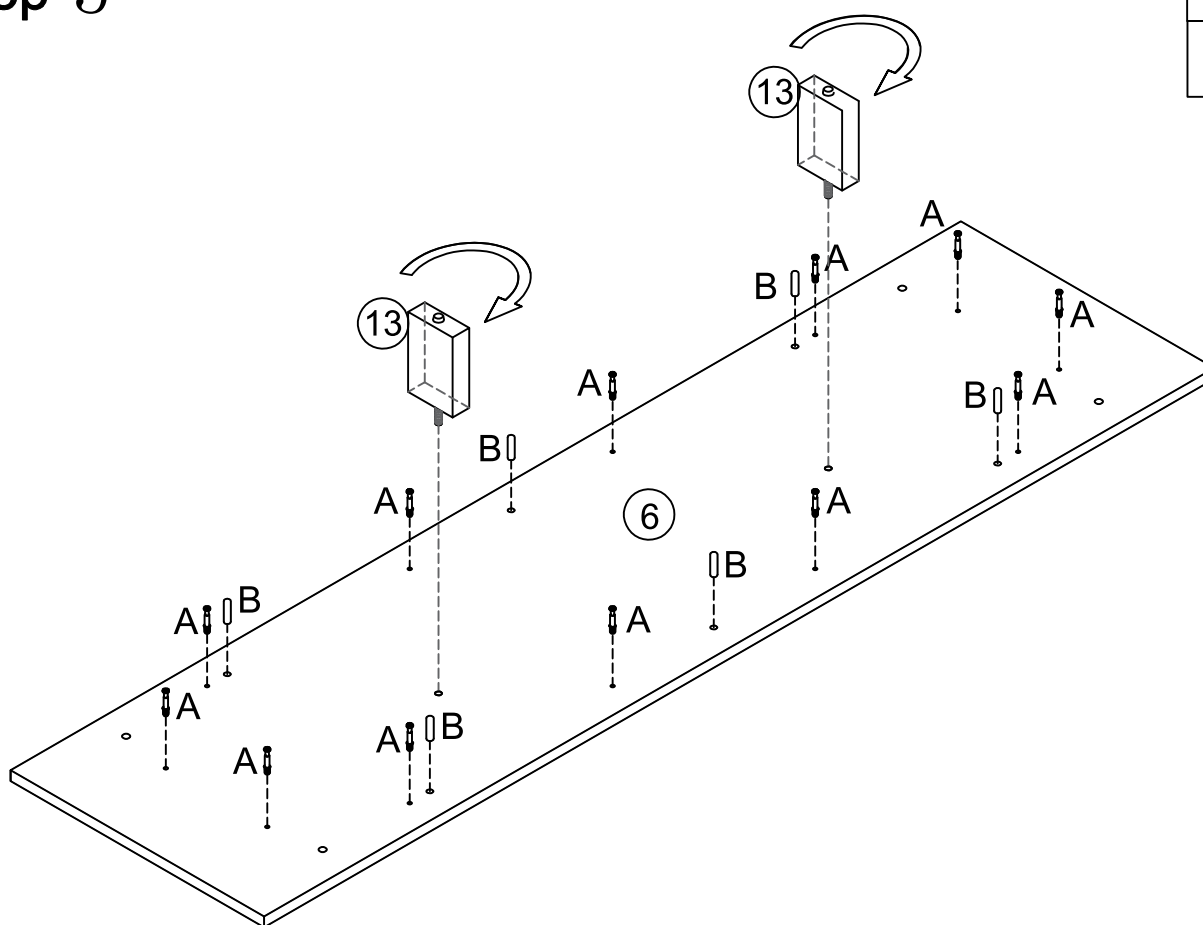


# Step 6


C		12
---	---	----



## Step 7

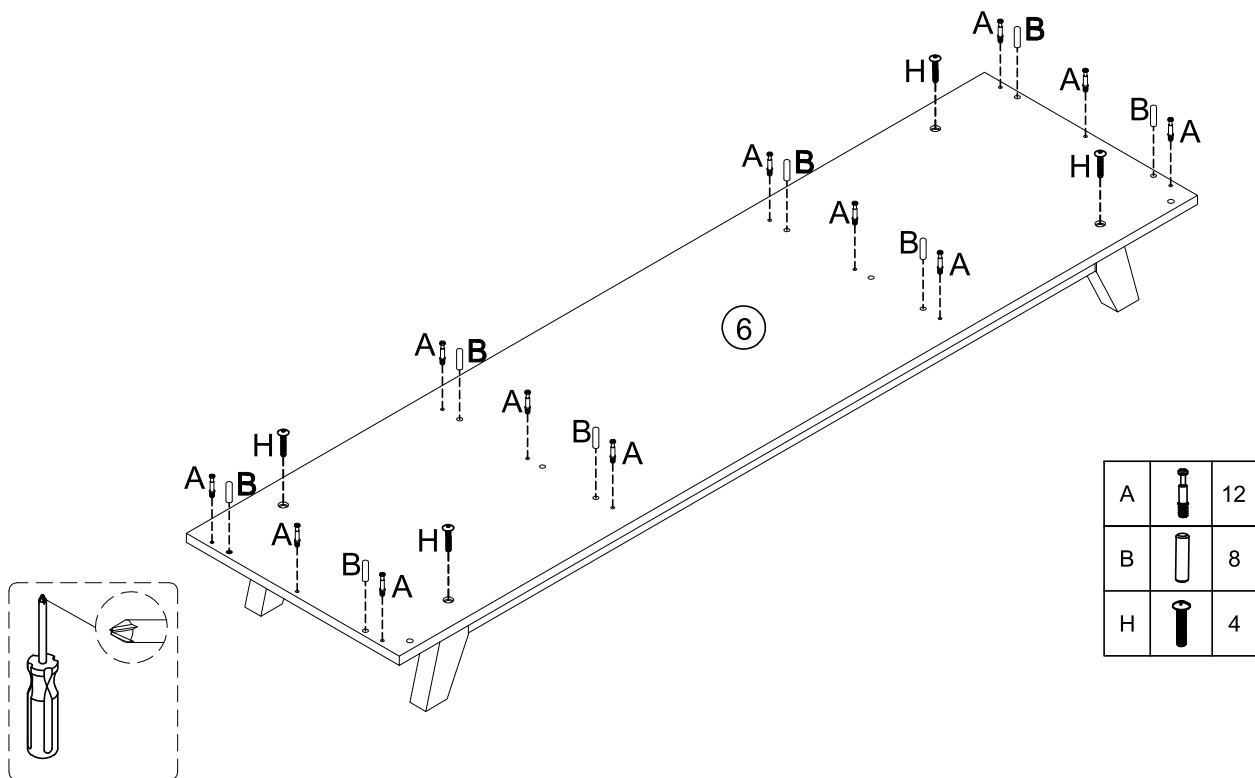


## Step 8

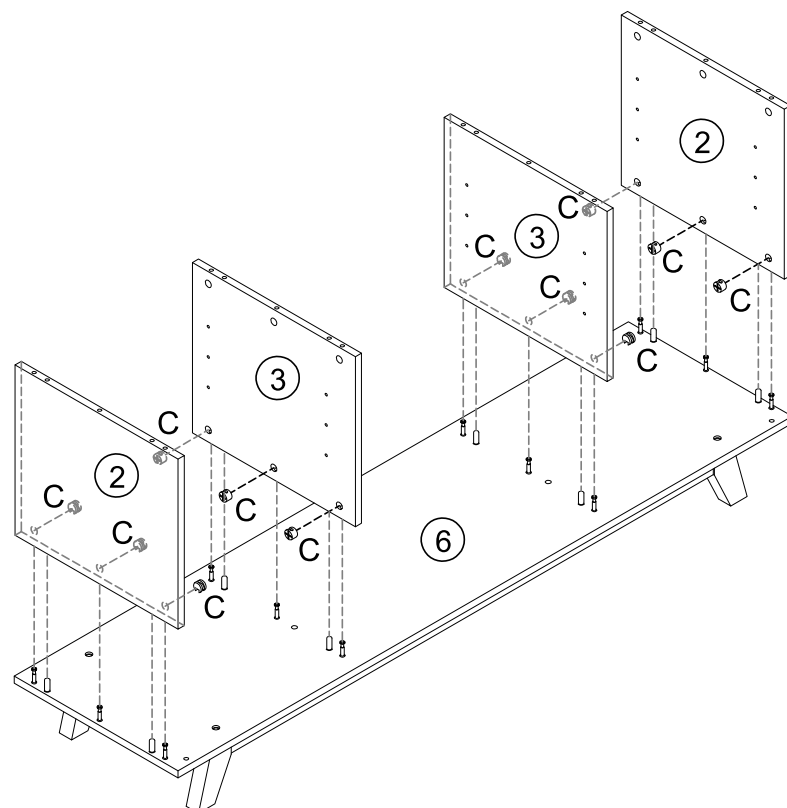





## Step 9

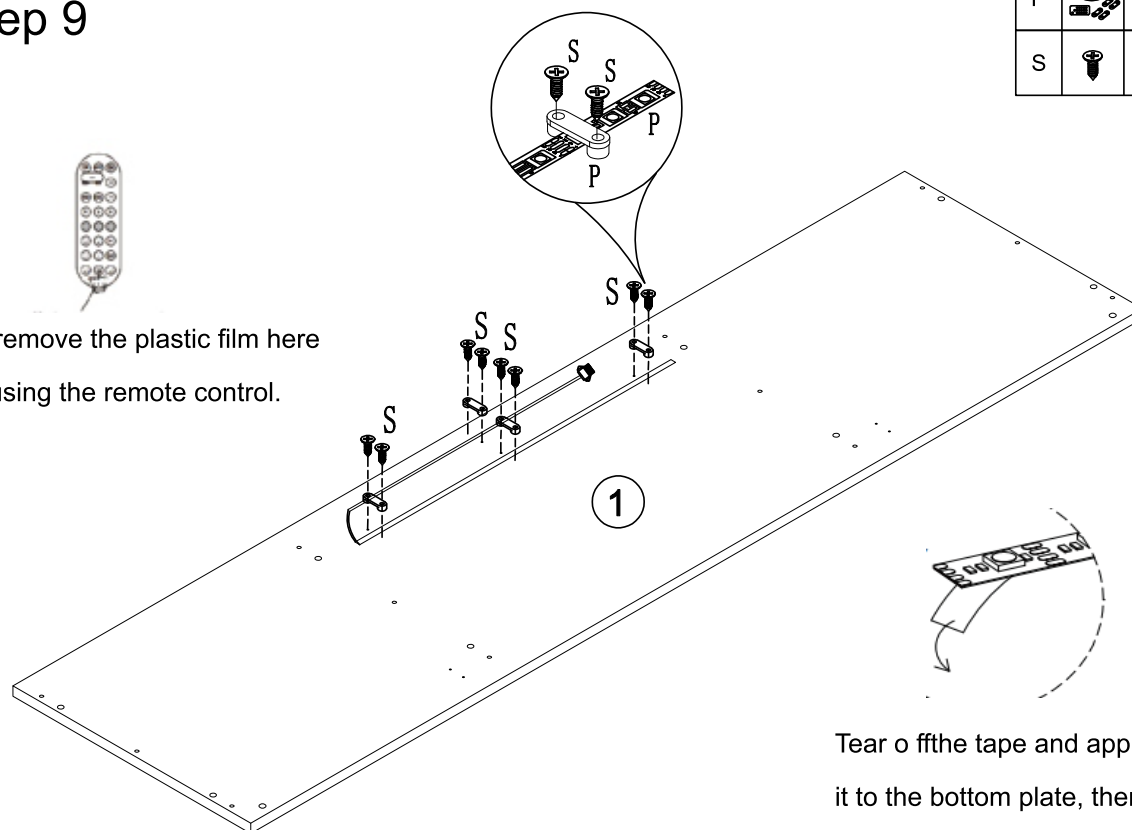
  
Please remove the plastic film here  
before using the remote control.





Tear off the tape and apply  
it to the bottom plate, then  
press it firmly with your hand.


P		1
S		8

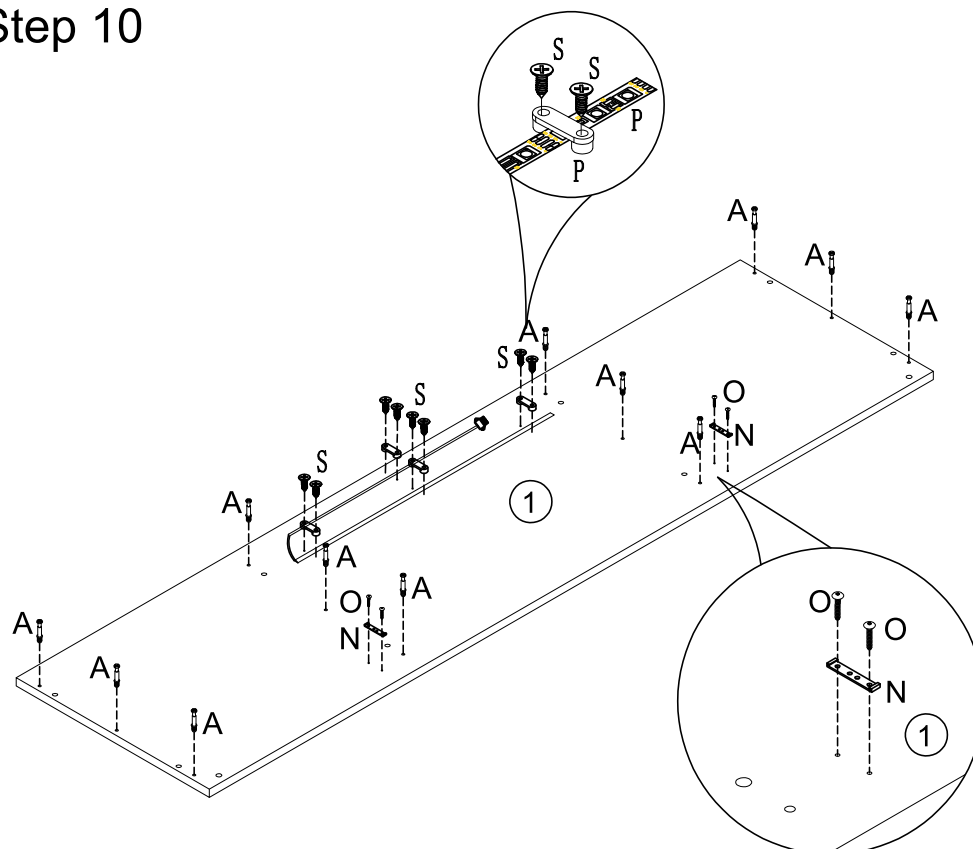
## Step 10





A		12
N		2
O		4
P		1
S		8


# Step 11

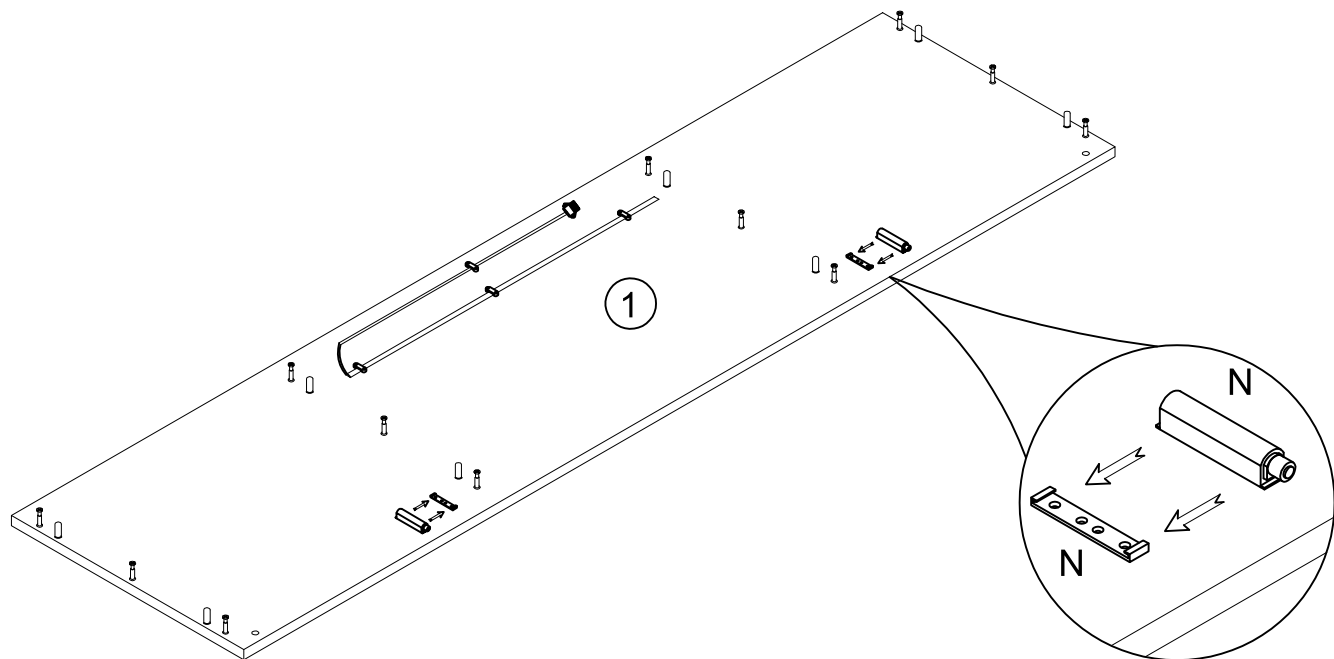N		2
---	---	---




# Step 12

B		8
C		12

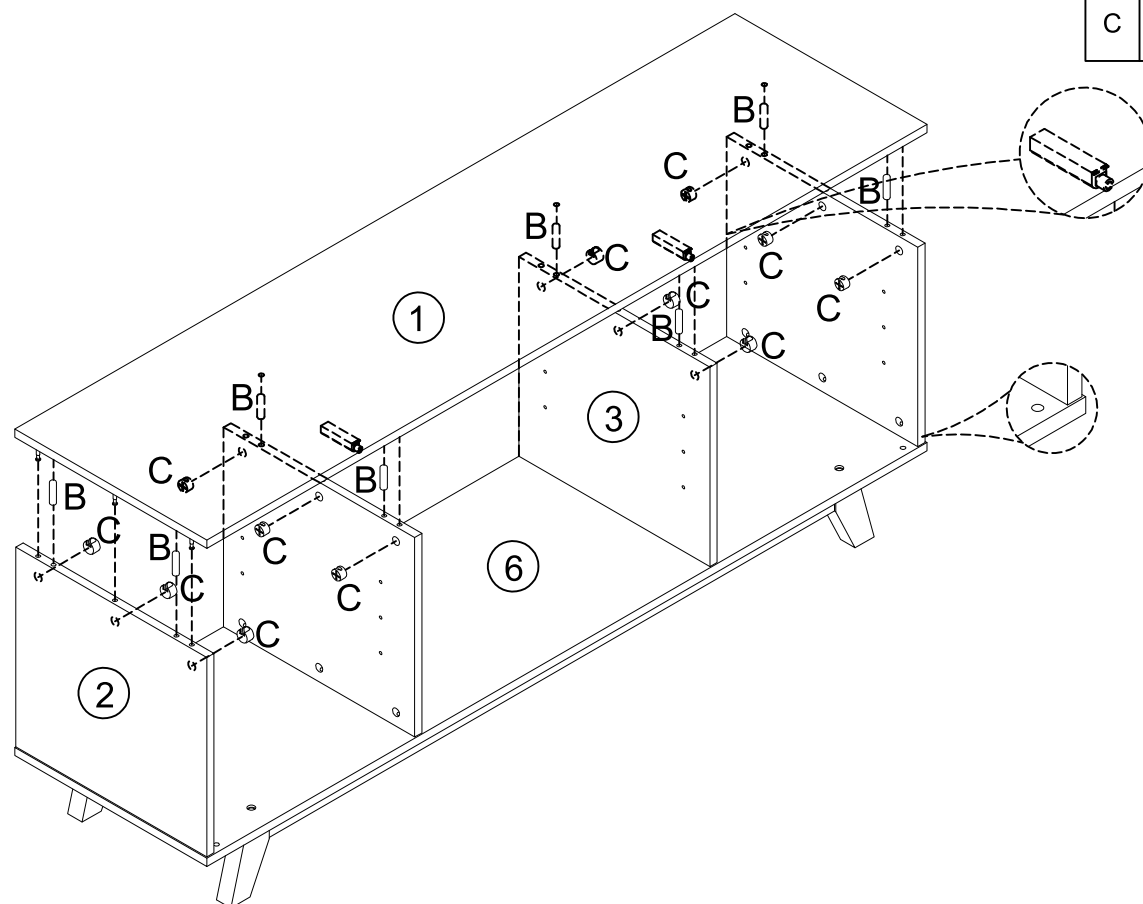


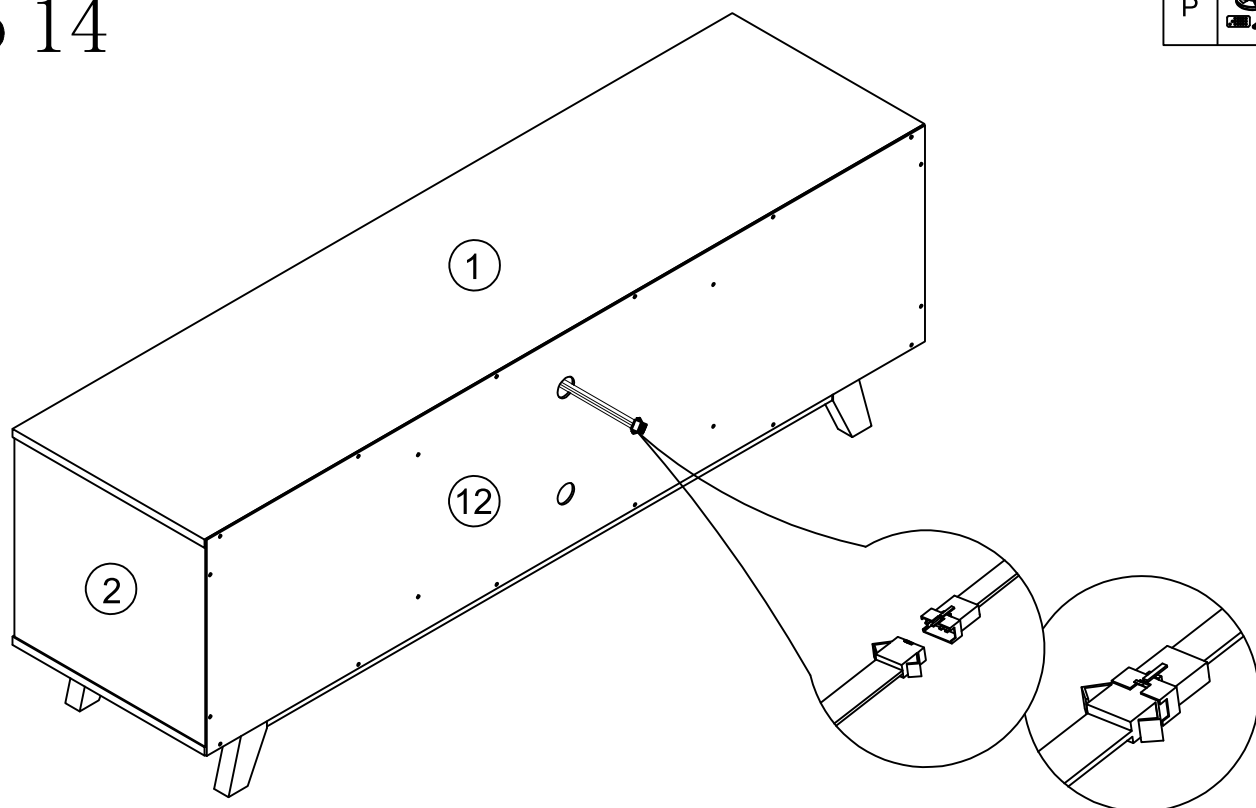
## Step 13


G		20
---	---	----

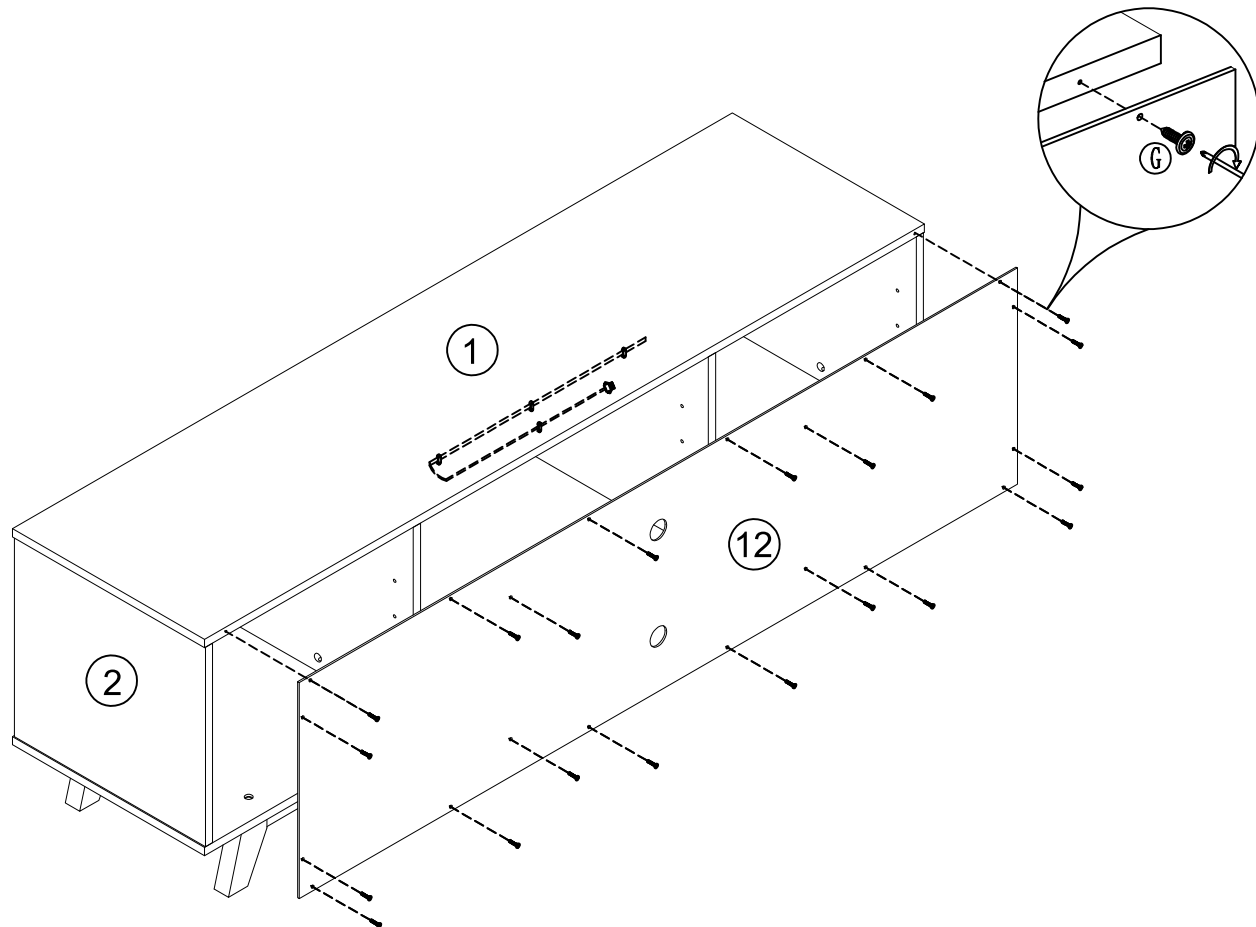


## Step 14


P		1
---	---	---








1. The light strip interface passes through the hole in the backboard and  connects to the enlarged section.
2. Insert the USB plug into the adapter.

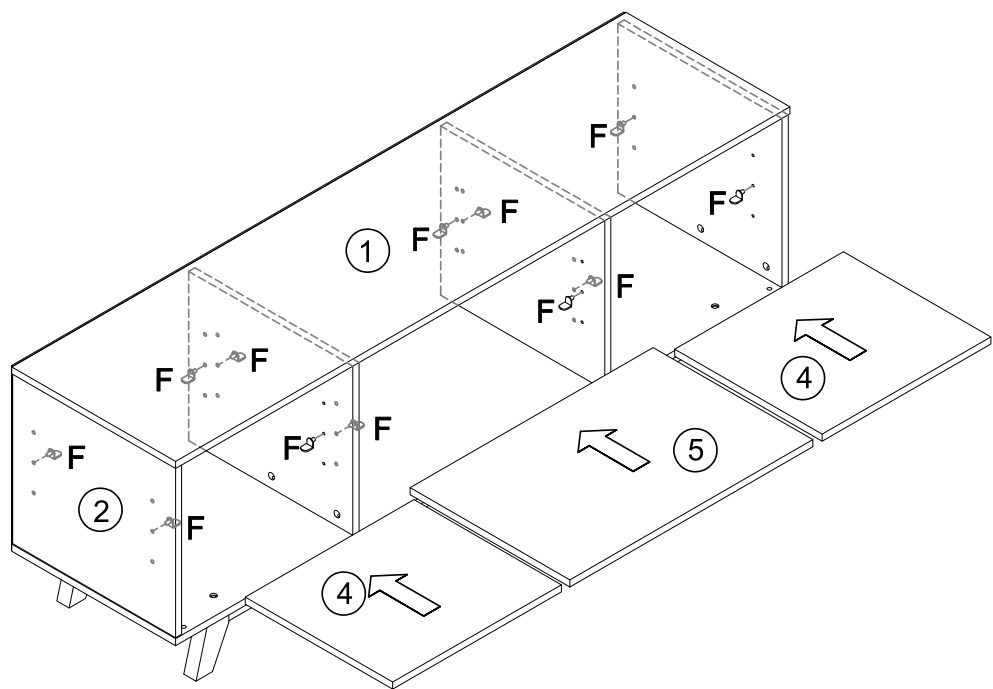
Step 15

F		12
---	---	----






Step 16

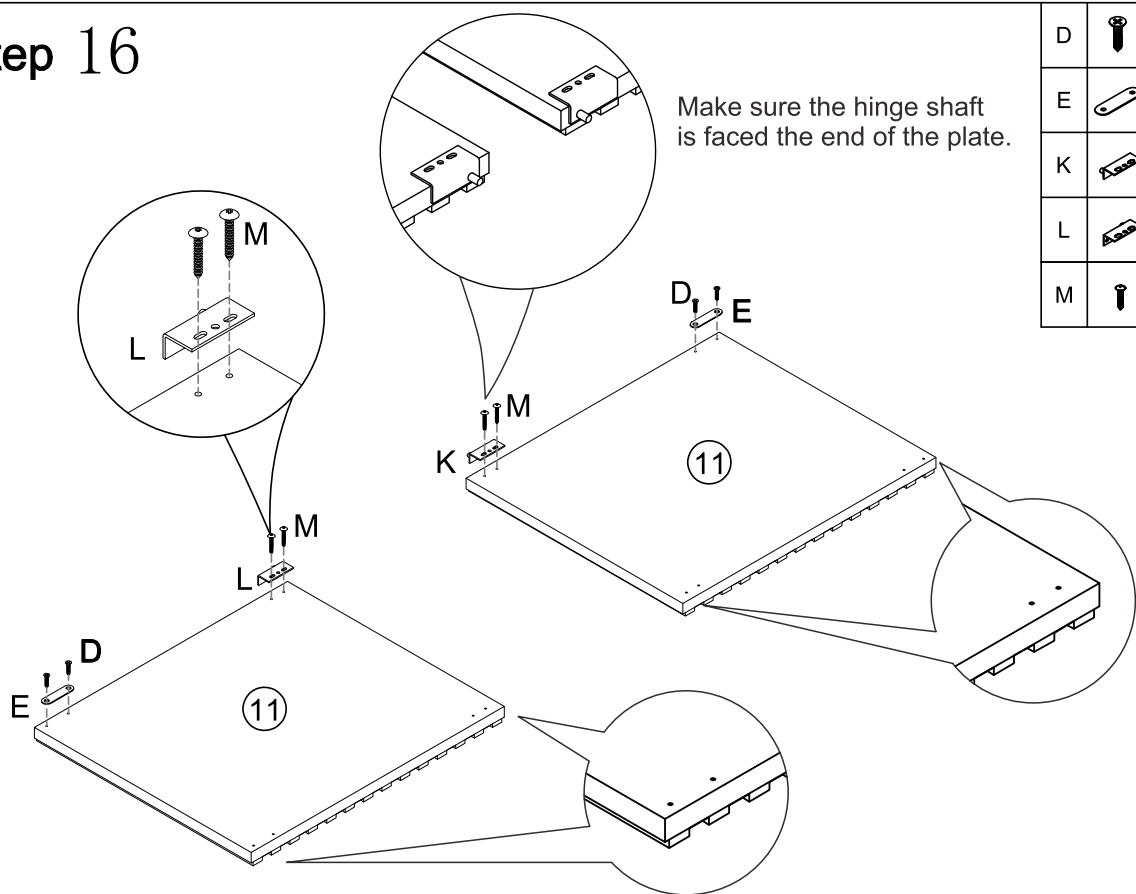D		4
E		2
K		1
L		1
M		4






## Step 17

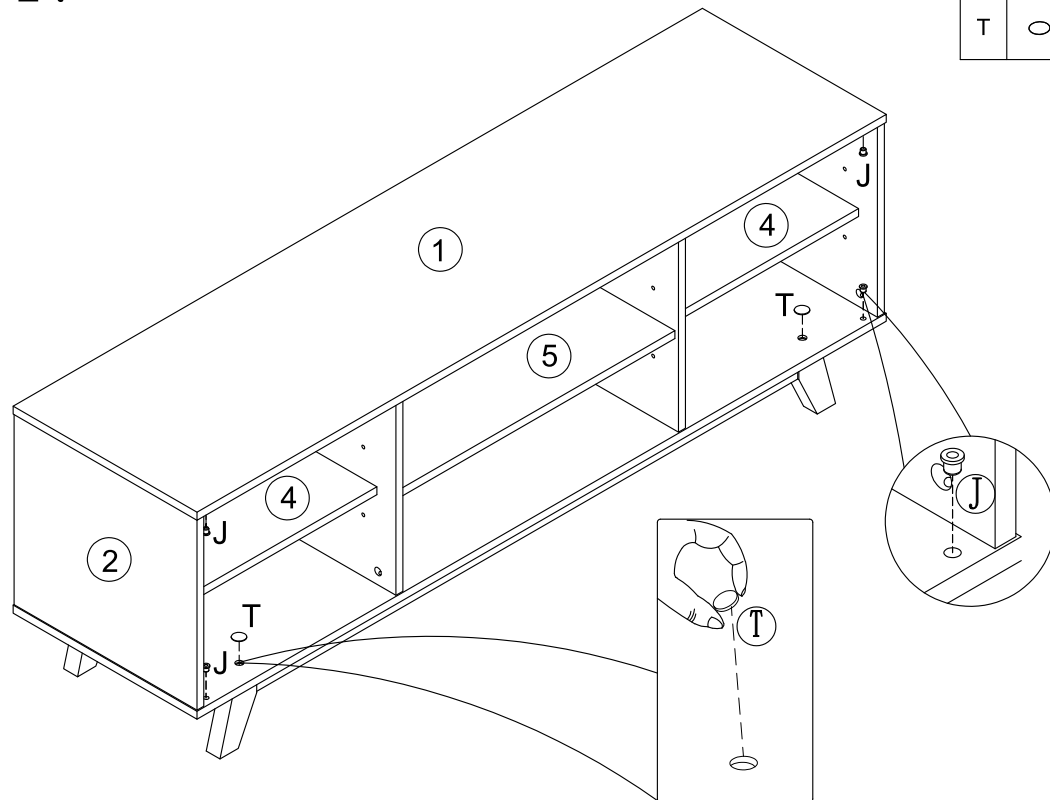J		4
T		4






## Step 18

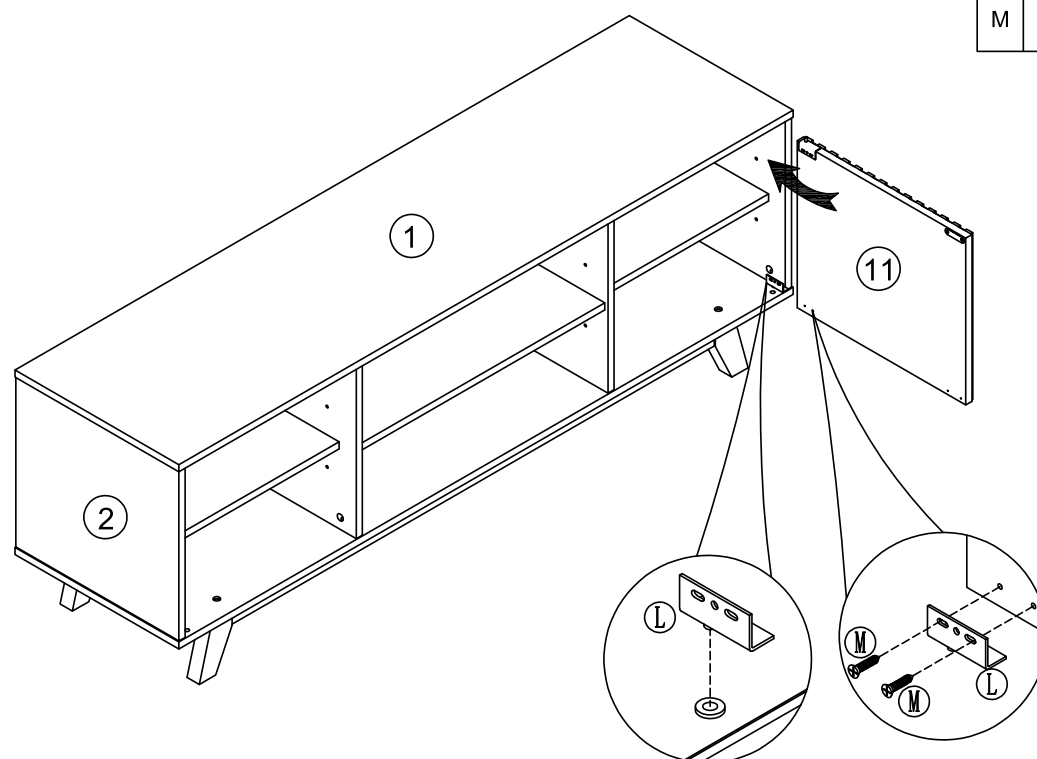L		1
M		2






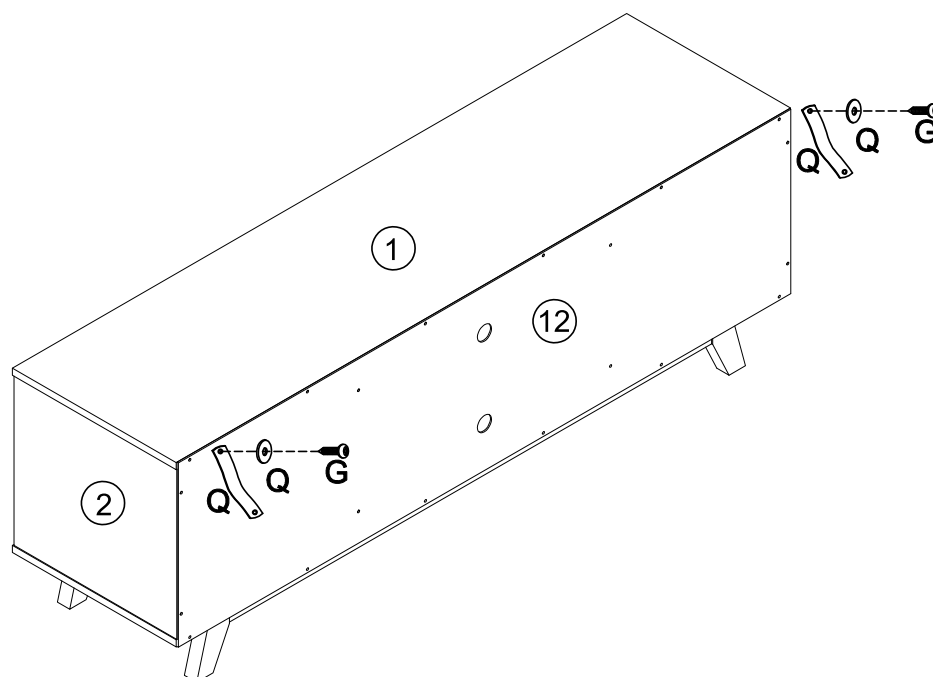
## Step 19

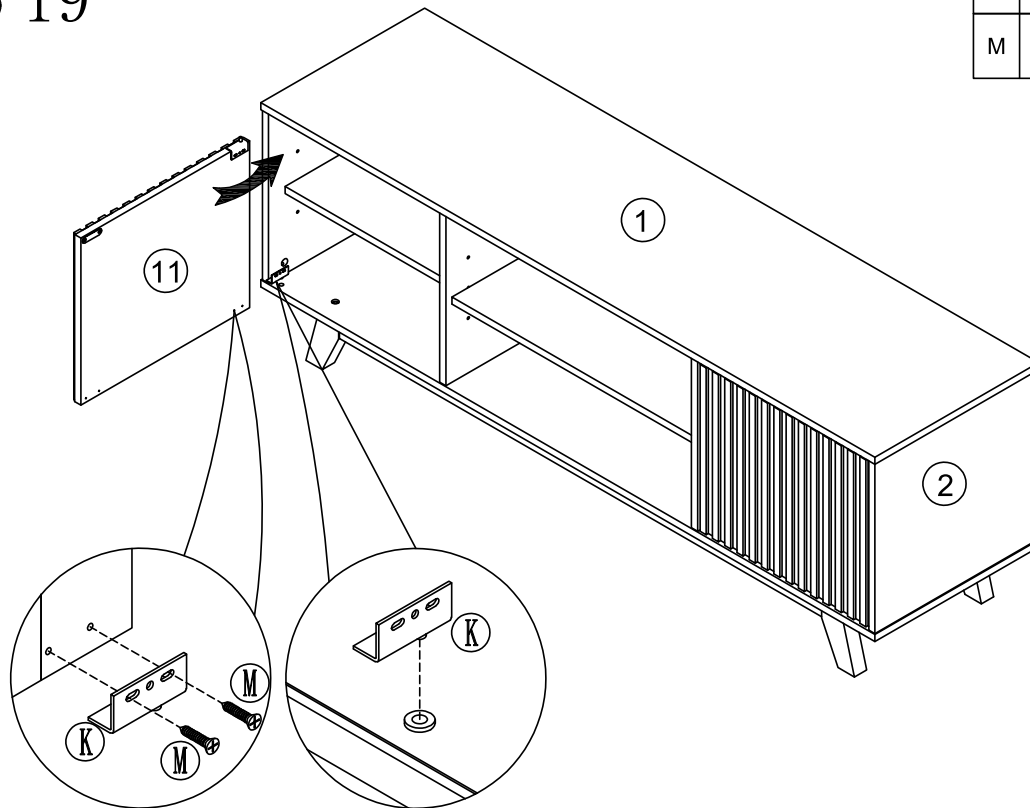K		1
M		2




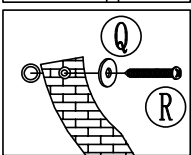
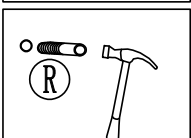
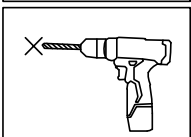
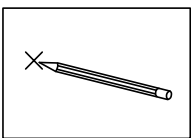
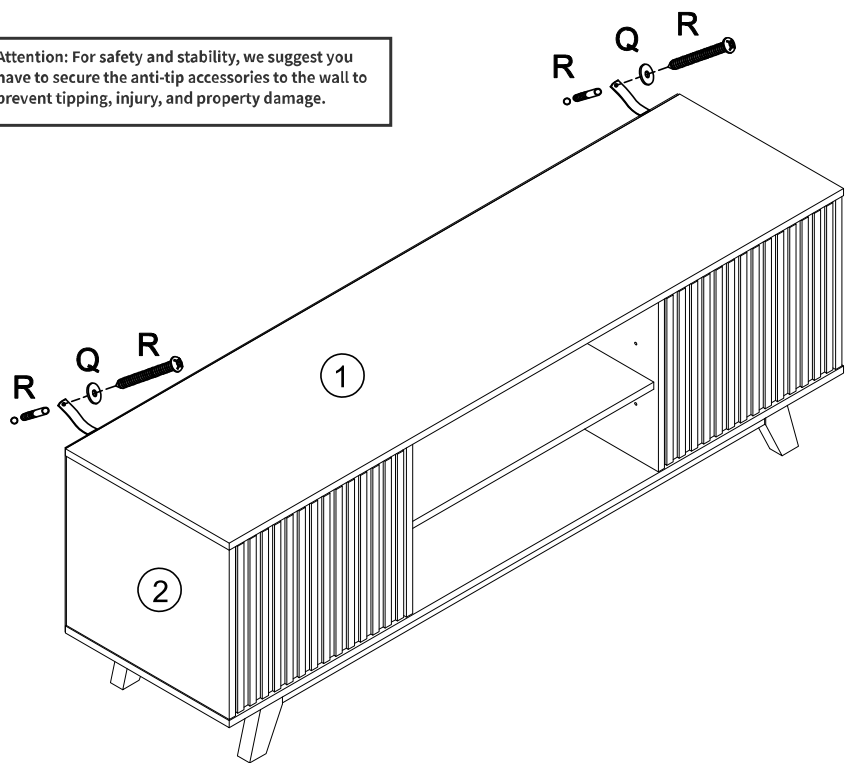
## Step 20



Q		2
G		2
Q		2



# Step 21

 Attention: For safety and stability, we suggest you have to secure the anti-tip accessories to the wall to prevent tipping, injury, and property damage.



R		2
Q		2

Installation Completed!