


SONOMA SADDLE STOOL - 2 PACK
ASSEMBLY INSTRUCTIONS

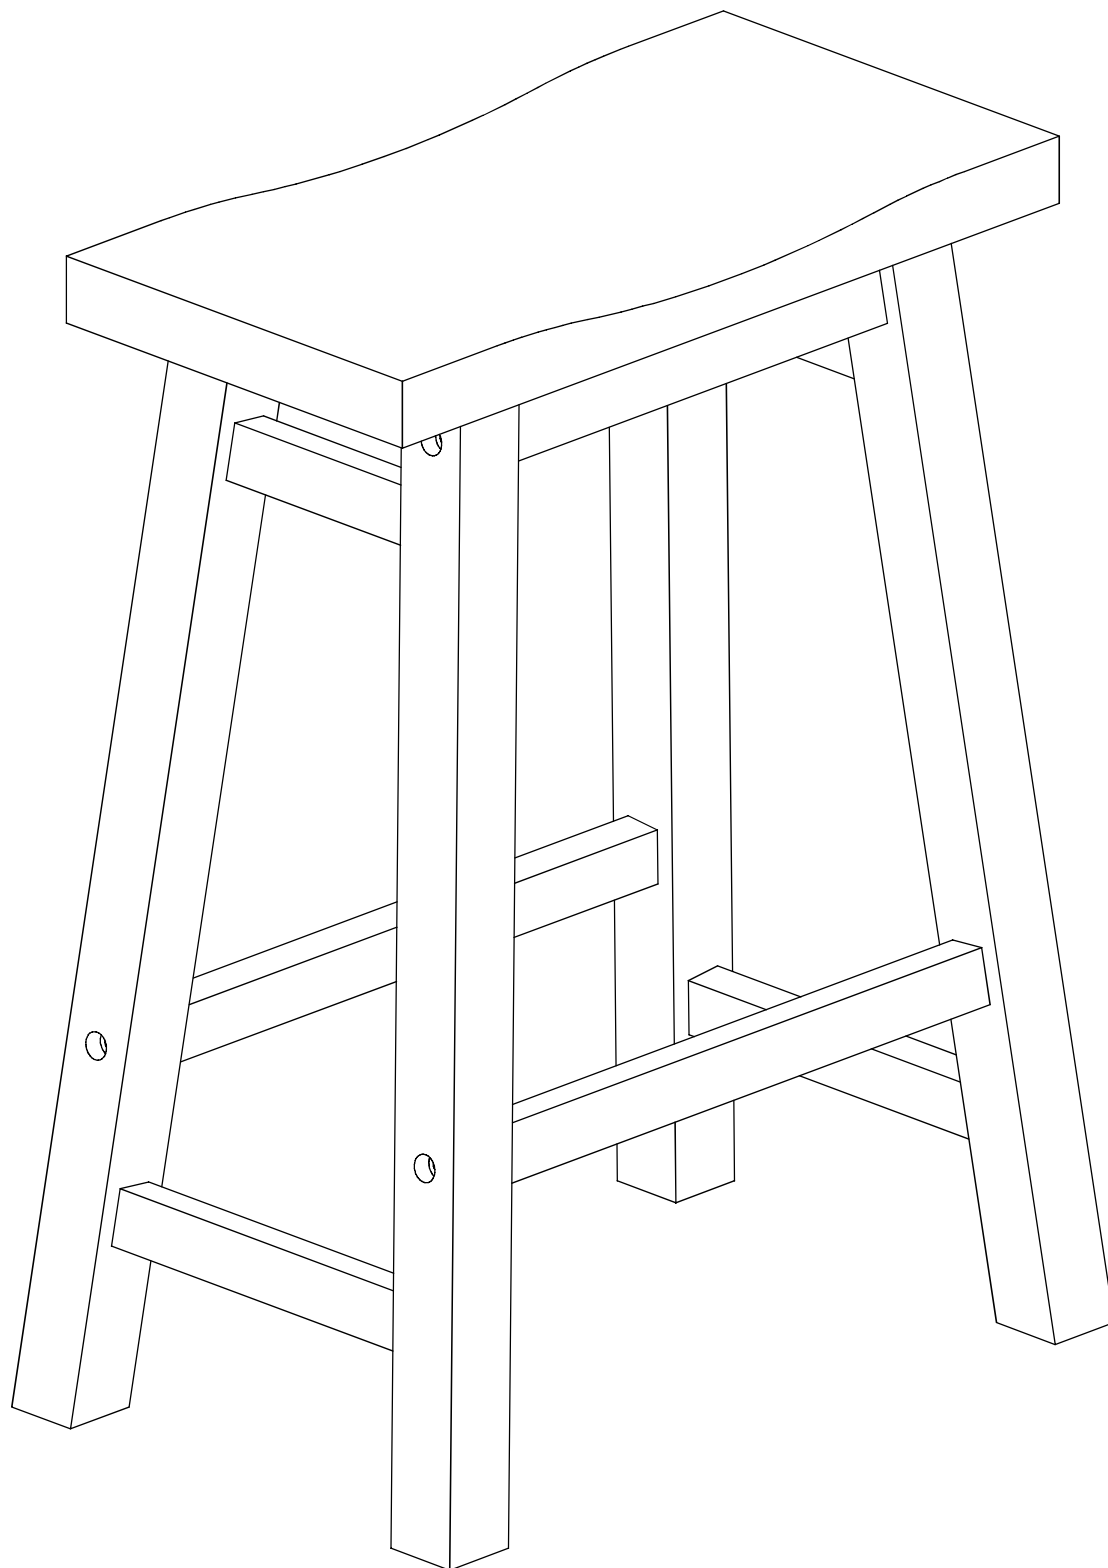





Wood Nut
8 PCS




Wood Dowel
2 PCS




M4*40
8 PCS

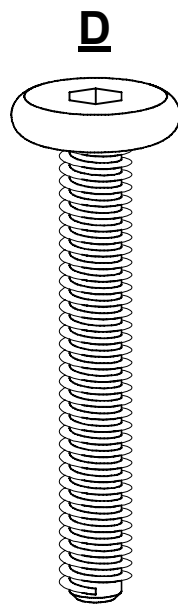

M6*40
4 PCS

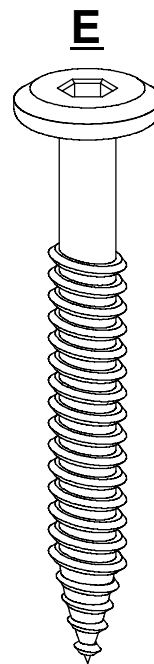


M6*50
8 PCS

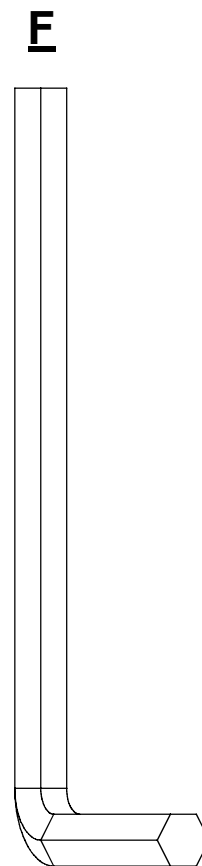


1 PC


1

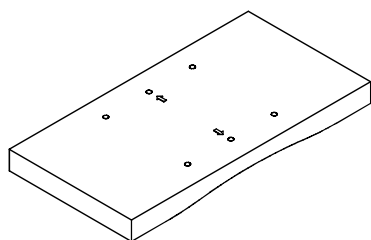


2

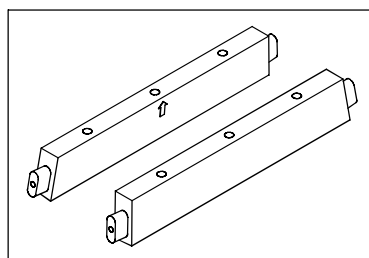


3

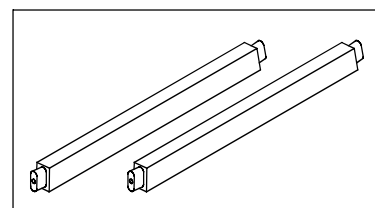


4

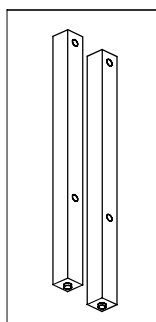


5

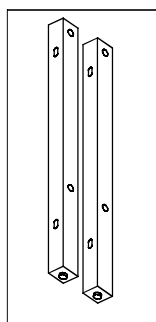



6

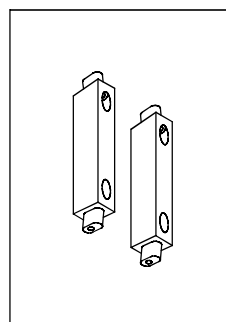

7


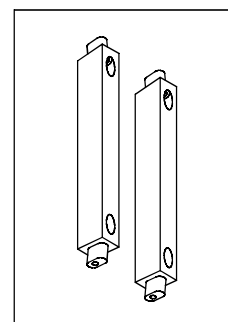


01

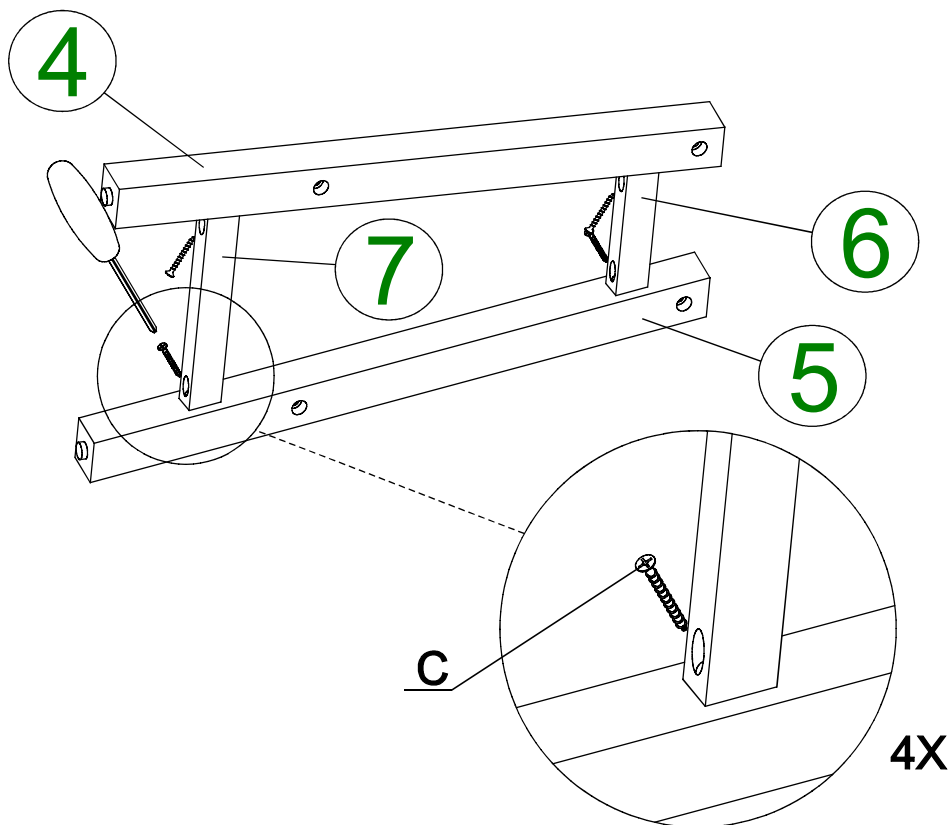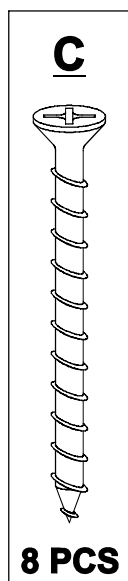




TIGHTEN BOLT COMPLETELY.

02

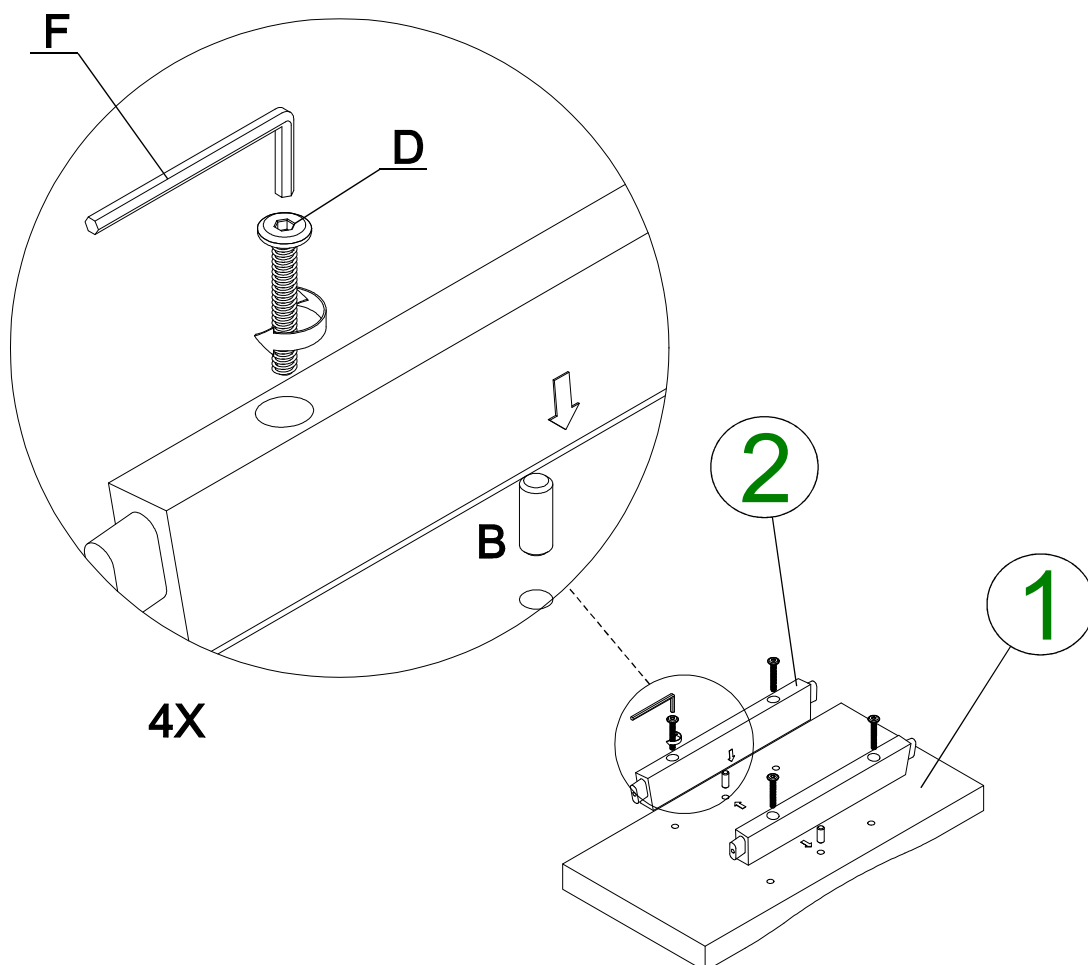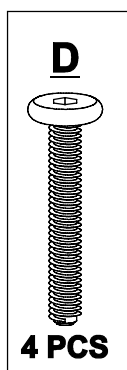




DO NOT TIGHTEN BOLT COMPLETELY.

03

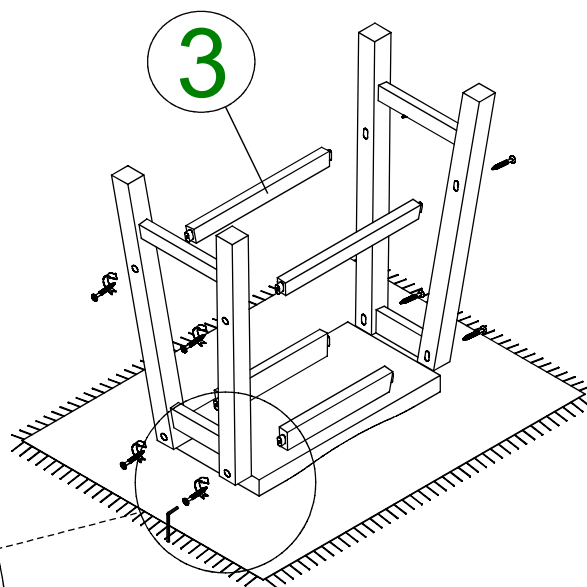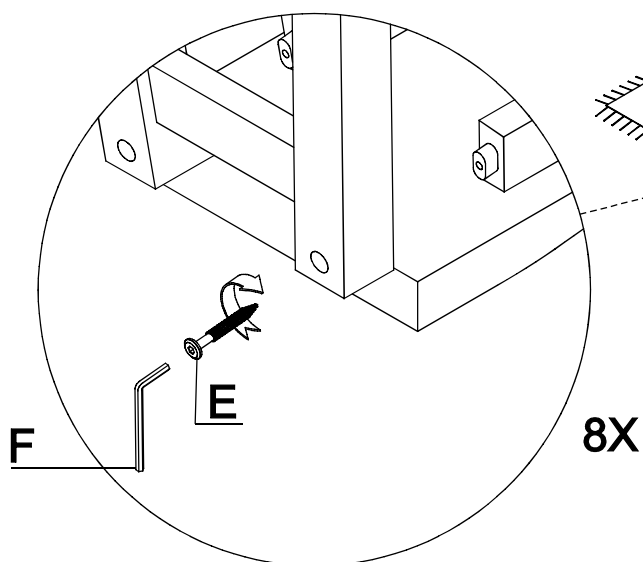


TIGHTEN BOLT COMPLETELY.

04

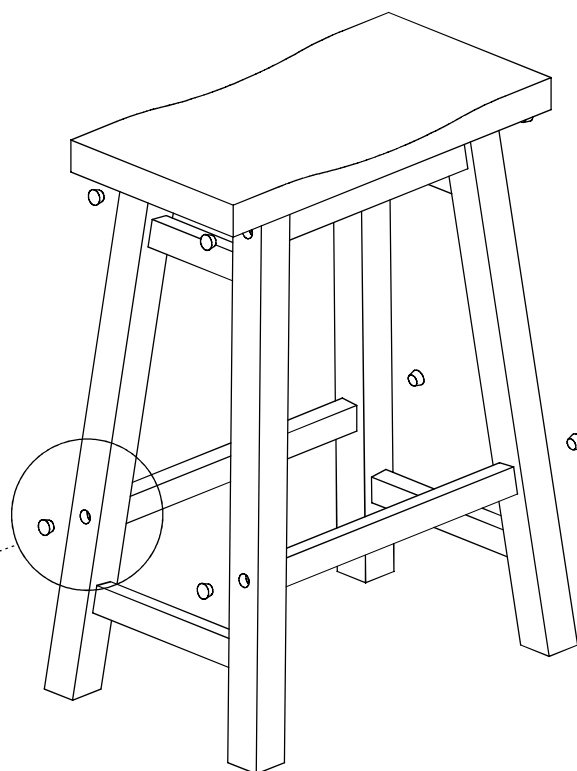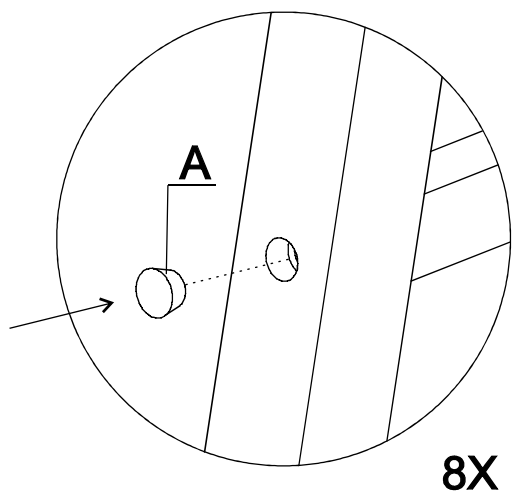

TIGHTEN BOLT COMPLETELY.

05

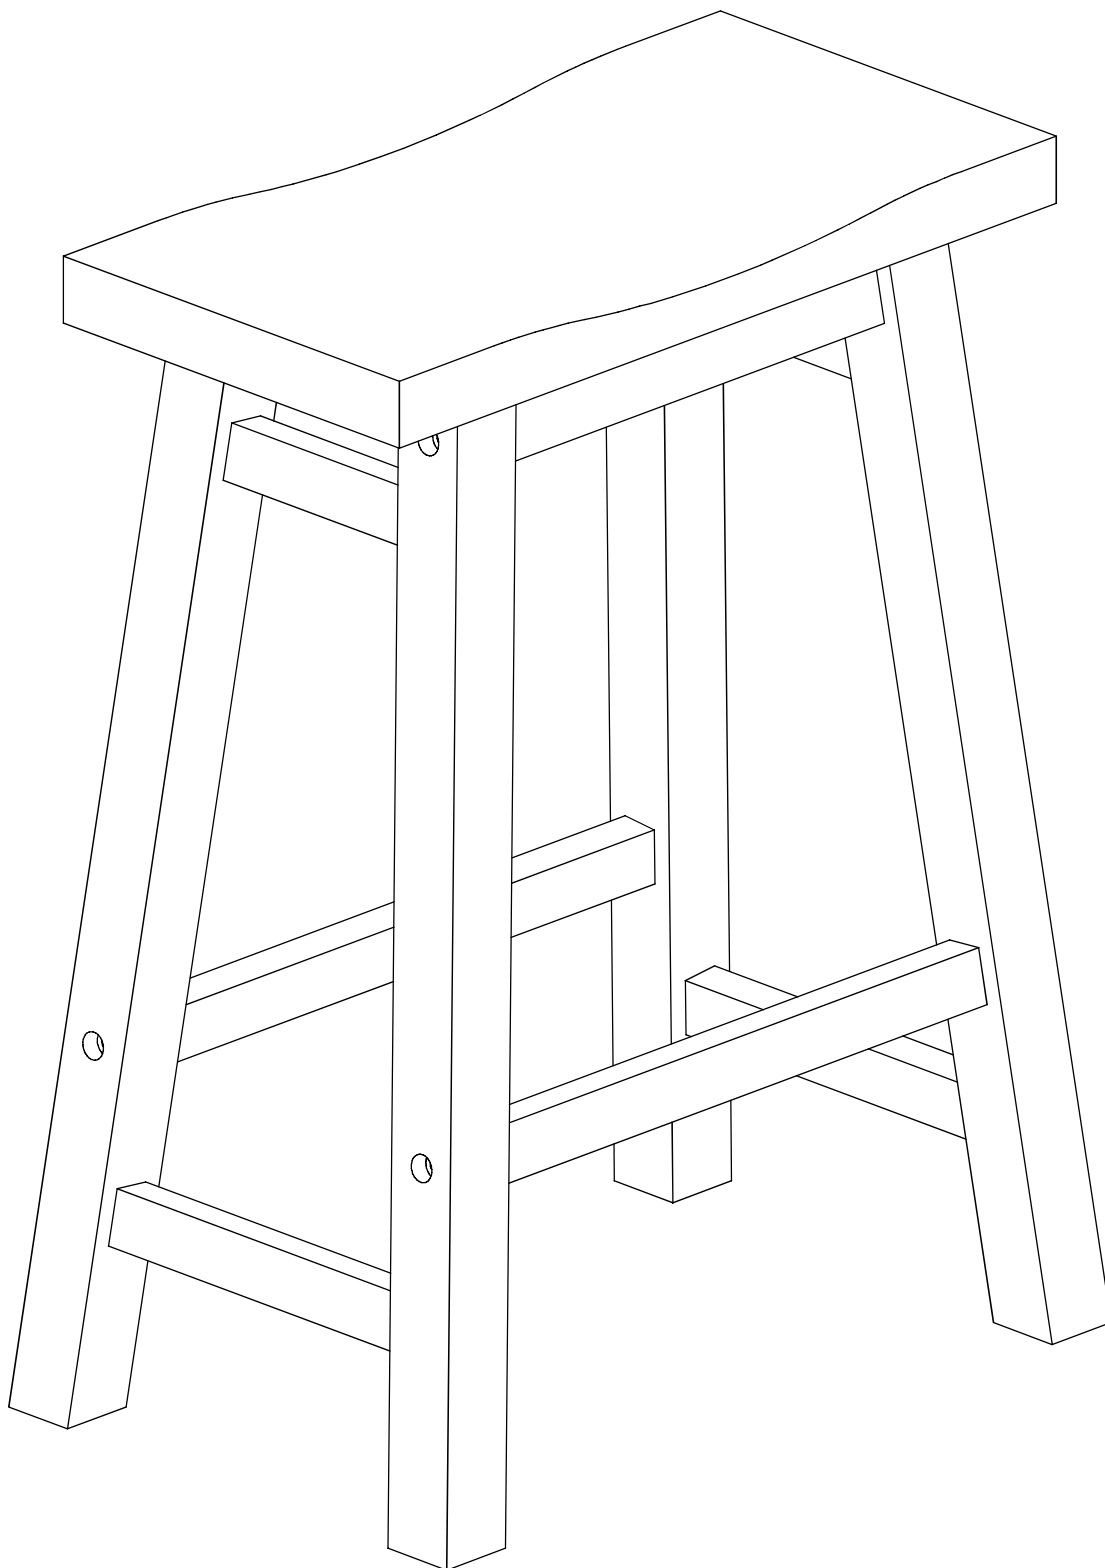

BE SURE TO CHECK ALL BOLTS ARE SECURELY
TIGHTENED PRIOR USING THIS STOOL.