



Product Installation Manual











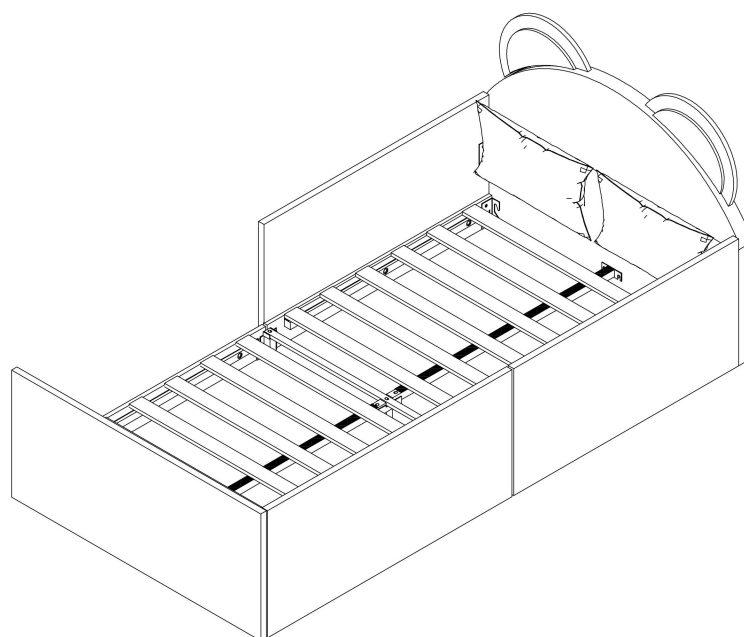


W5305P519059 / W5305P519060

W5305P519061 / W5305P519062

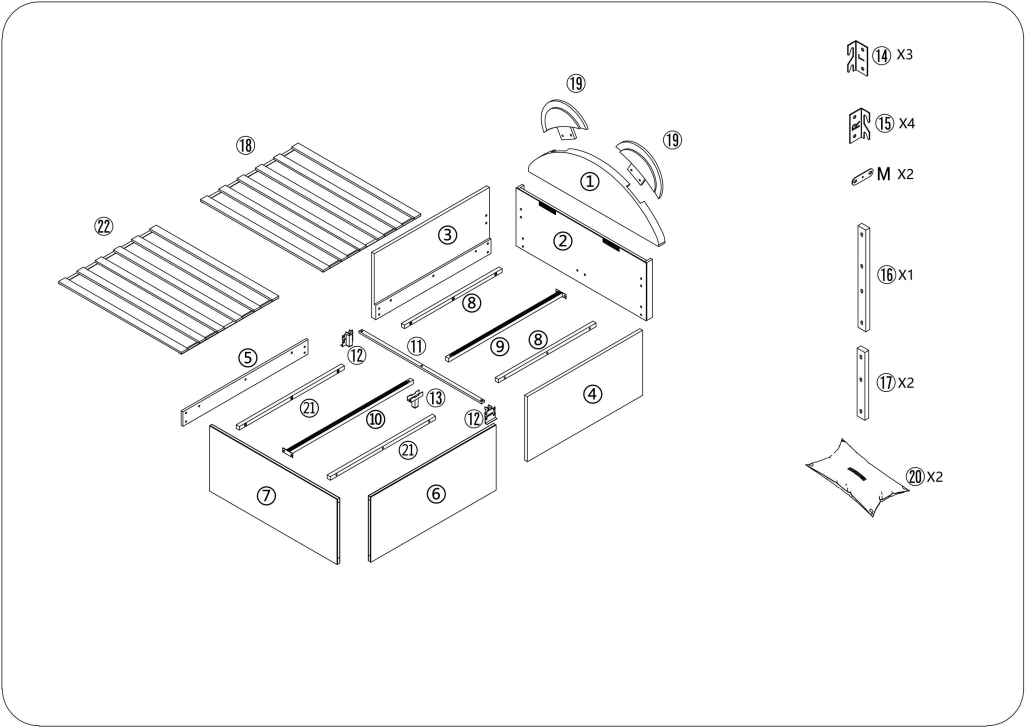


A		M8x18	X44
B		M8x35	X30
C		M8x45	X1
D		D5mm	X1

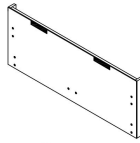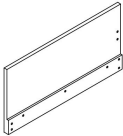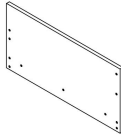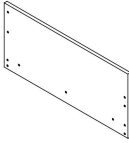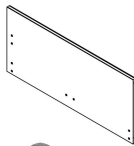 1 x1	 2 x1	 3 x1	 4 x1	 5 x1
 6 x1	 7 x1	 8 x2	 9 x1	 10 x1
 11 x1	 12 x2	 13 x1	 14 x3	 15 x4
 16 x1	 17 x2	 18 x1	 19 x2	 20 x2
 21 x2	 22 x1	 M x2		

2/11

Step 1


B		M8x35	4PCS
D		D5	1PC

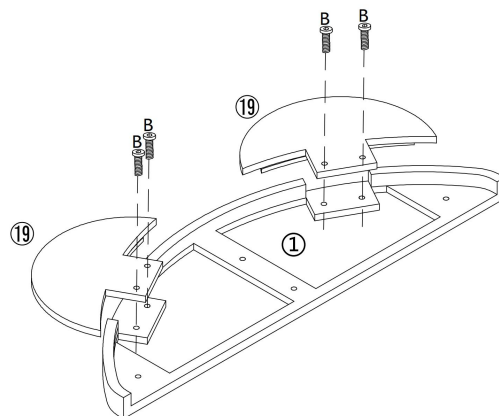

Step 2

The two adjacent holes on the 17th part should be installed facing upwards.


B		M8x35	10PCS
D		D5	1PC

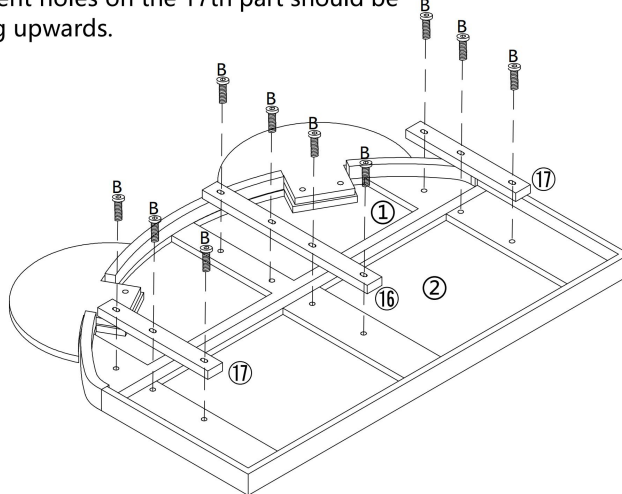

Step 3

Please pre-install the screws to 50% first.


A		M8x18	10PCS
D		D5	1PC

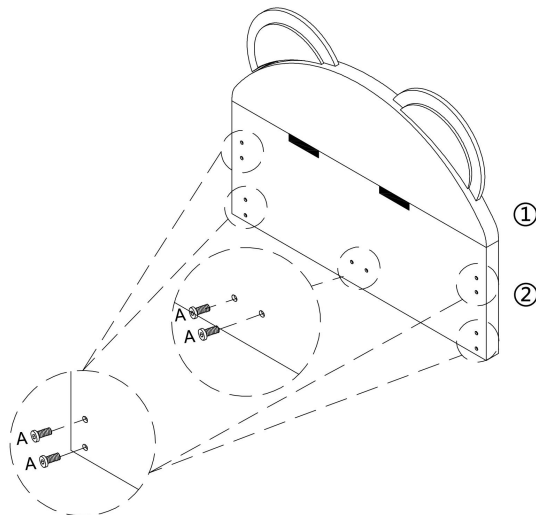

Step 4


Please pre-install the screws to 50% first.

A		M8x18	8PCS
D		D5	1PC

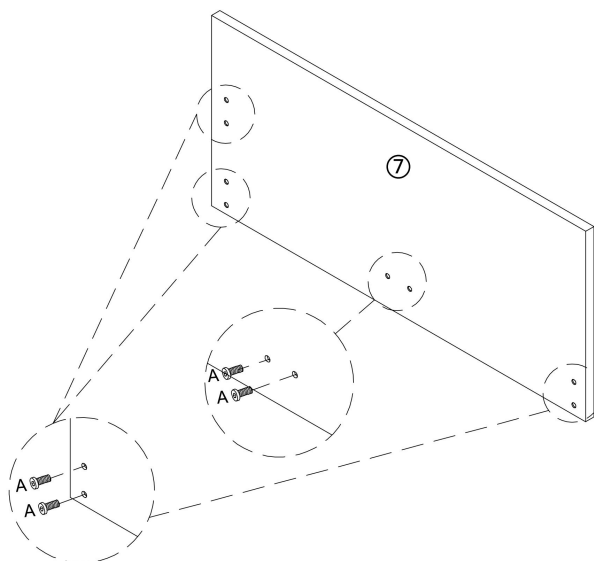


Step 5


B		M8x35	4PCS
C		M8x45	1PCS
D		D5	1PC

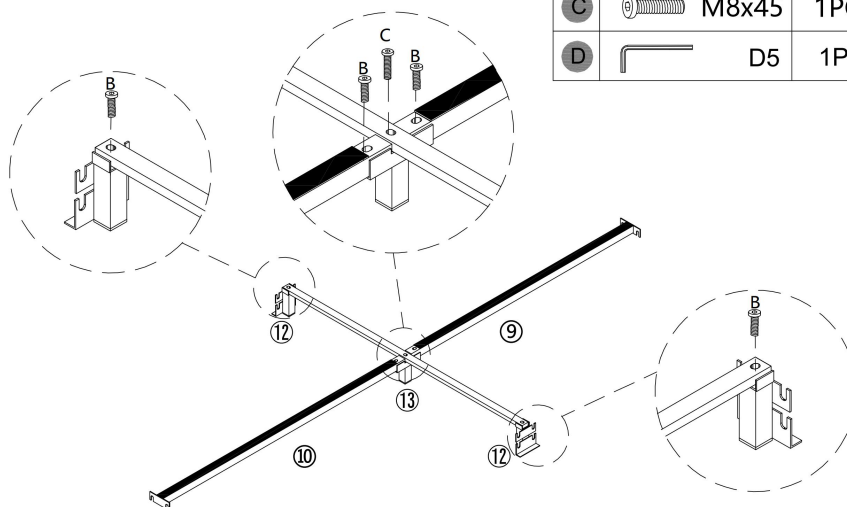

Step 6

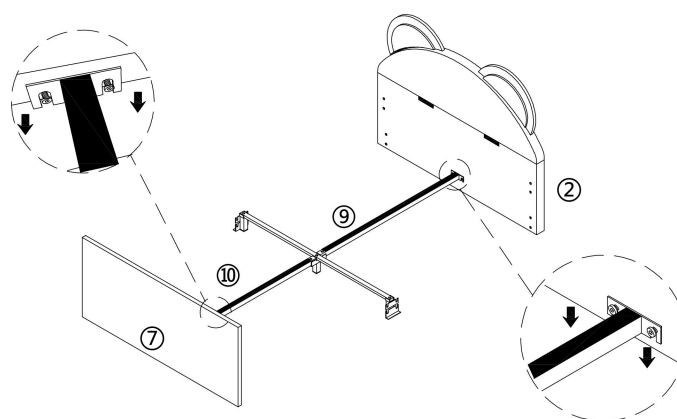


Step 7

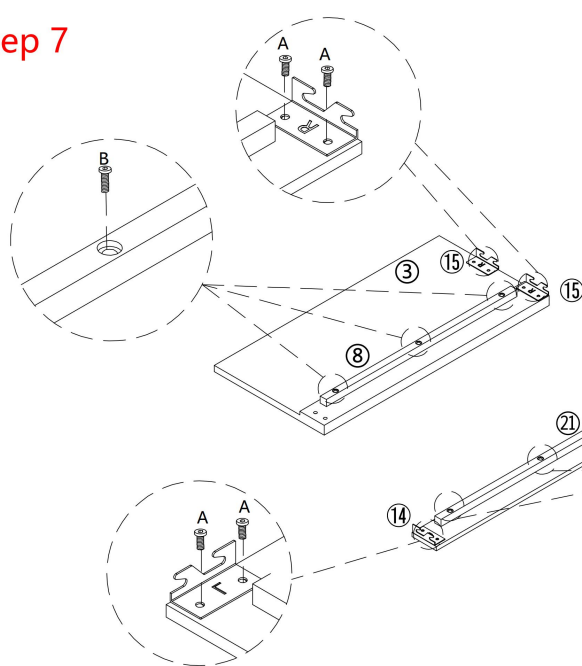

A		M8x18	6PCS
B		M8x35	6PCS
D		D5	1PC

Step 8

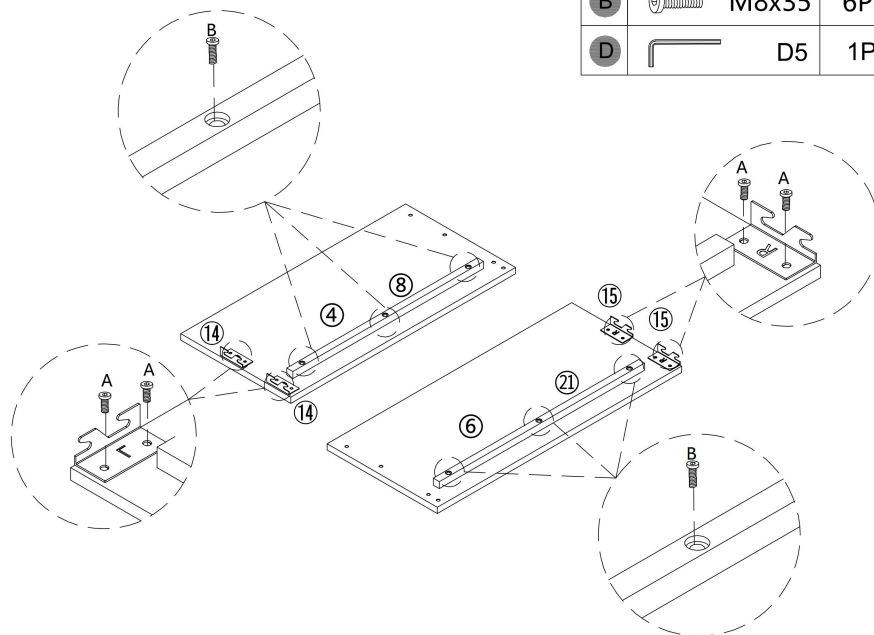


A		M8x18	8PCS
B		M8x35	6PCS
D		D5	1PC

Step 9

Please pre-install the screws to 50% first.


A		M8x18	4PCS
D		D5	1PC

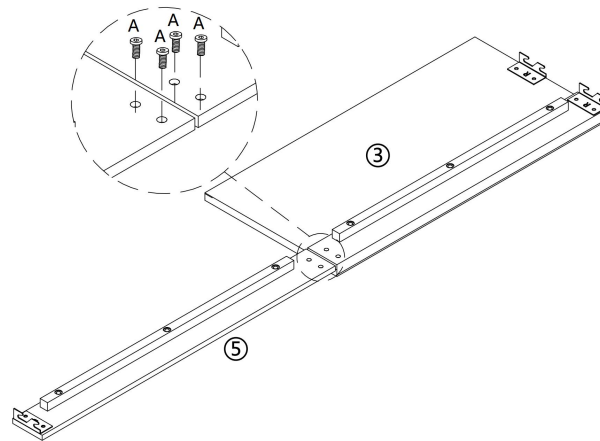

Step 10


Please pre-install the screws to 50% first.

A		M8x18	4PCS
D		D5	1PC

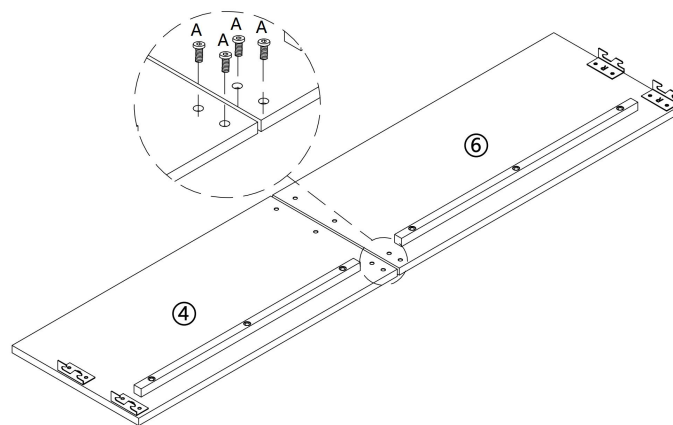

Step 11

Pass the screws of Part 5 and Part 3 through the middle of the screw mounting position on Part 12 and snap them into place, then hang Part 14 onto Part 7, and hang Part 15 onto Part 2.

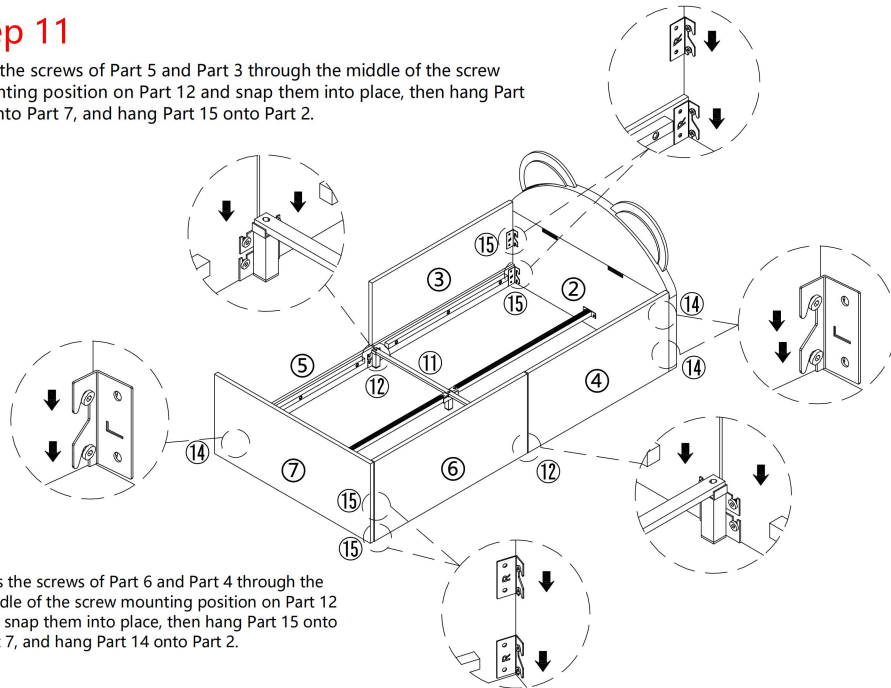


Pass the screws of Part 6 and Part 4 through the middle of the screw mounting position on Part 12 and snap them into place, then hang Part 15 onto Part 7, and hang Part 14 onto Part 2.


Step 12

Tighten all screws at this step.


A		M8x18	4PCS
D		D5	1PC

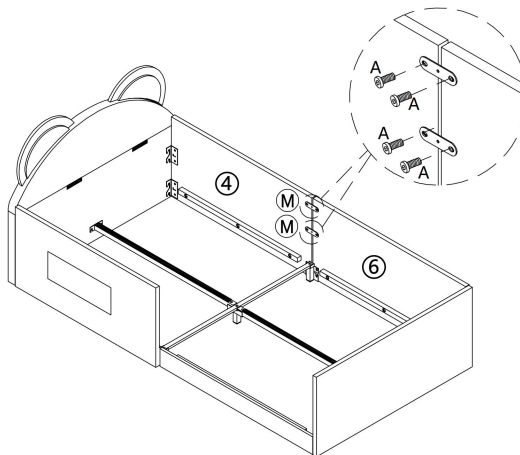

Step 13

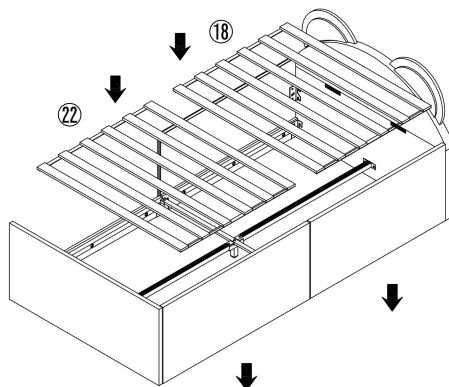


Step 14

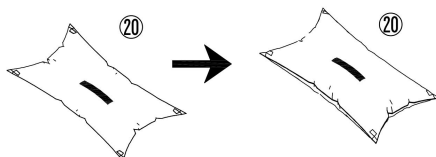


Remove the packaging of Assembly 20.

Step 15

First, peel back the fuzzy side of the Velcro on the pillow to reveal the hook side. Then stick the hook side of the pillow's Velcro onto the Velcro on Component 2.

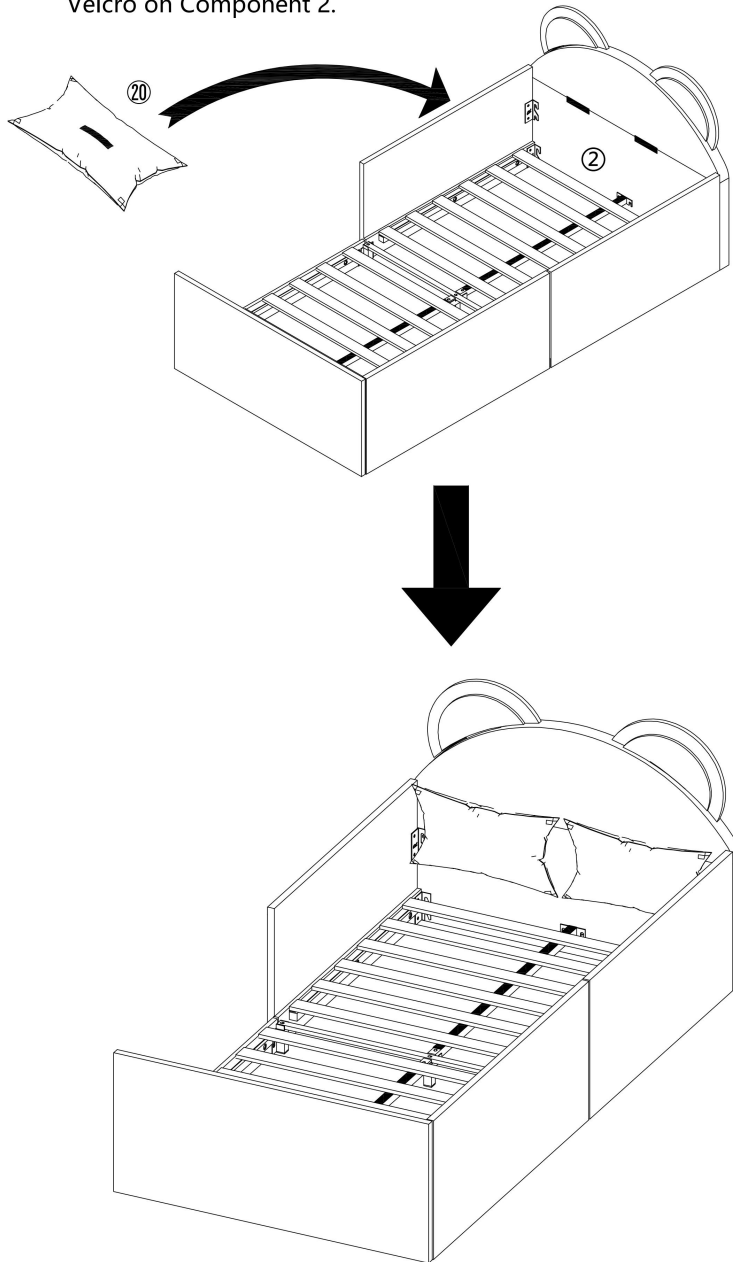

Step 16

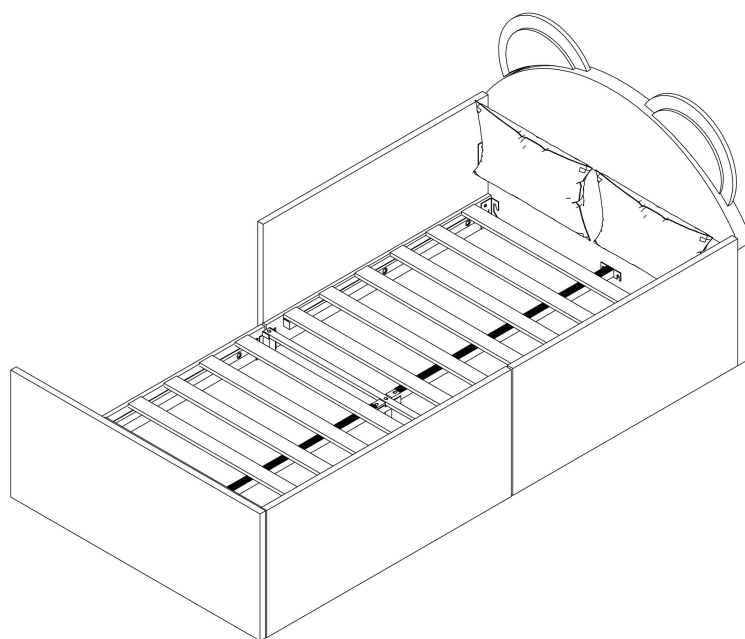

Ventilation Warning: It is recommended to ventilate for 48 hours after installation.