

DA0707

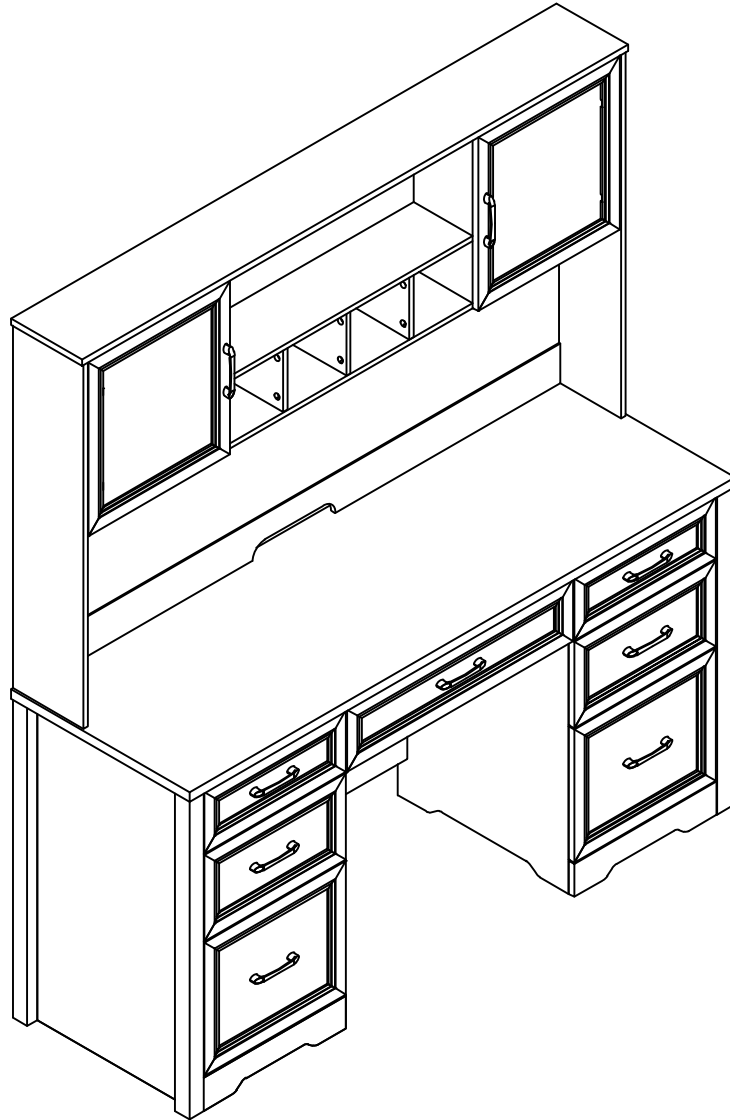


As this item contains many parts, please read the installation instruction carefully before installation . Please use tools properly and carefully. If you have any questions about the product and installation, please contact us.

hosoteservice@gmail.com

Our professional after-sales team will serve you online all day.

Before You Start

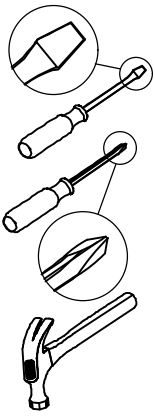


- ✓ Read through each step carefully and follow the proper order
- ✓ Separate and count all your parts and hardware
- ✓ Give yourself enough room for the assembly process
- ✓ Have the following tools: Flat Head Screwdriver, #2 Phillips Head Screwdriver and Hammer
- ✓ Caution: If using a power drill or power screwdriver for screwing, please be aware of to slow down and stop when screw is tight. (Assembly speed can be increased by using electric screwdriver)

Helpful Hints











PEOPLE NEEDED FOR ASSEMBLY: 1-2

- Open your item in the area you plan to keep it to avoid excessive heavy lifting.
- Identify, sort and count the parts before attempting assembly.
- Compression dowels are lightly tapped in with a hammer.
- Slides are labeled with an **R** (right) and **L** (left) for proper placement.
- Make sure to always face the point on the top of the Cam Lock towards the outer edge.
- If there is a back panel in the package, please install it to make sure your unit is complete and sturdy.
- Please fix all the screws provided for the back panel which can enhance product stability. If it is difficult to fix it when tightening, it can be fixed with the help of a hammer and then tightened.
- Do NOT use harsh chemicals or abrasive cleaners on this item.
- Never push, pull, or drag your furniture.

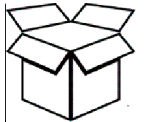
















Board Identification

Not actual size

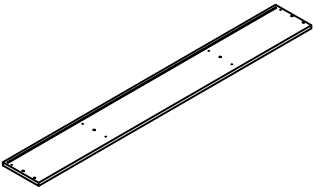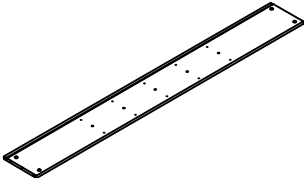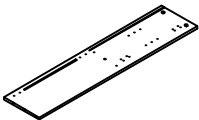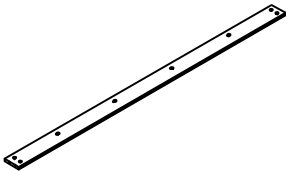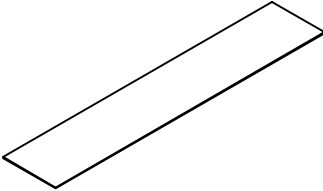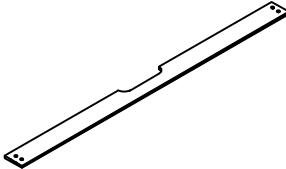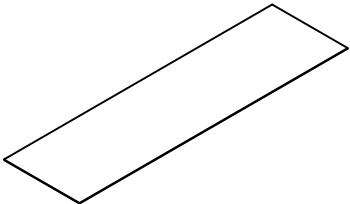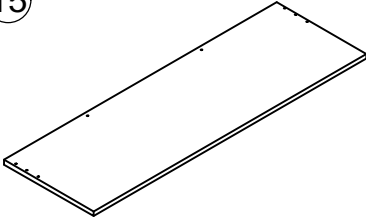①  Qty:1	②  Qty:1	③  Qty:1
④  Qty:1	⑤  Qty:1	⑥  Qty:1
⑦  Qty:1	⑧  Qty:1	⑨  Qty:3
⑩  Qty:1	⑪  Qty:1	⑫  Qty:1
⑬  Qty:3	⑭  Qty:2	⑮  Qty:3
















Board Identification

Not actual size

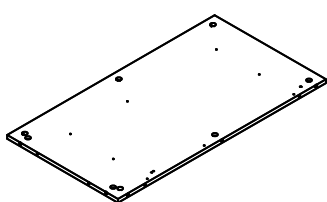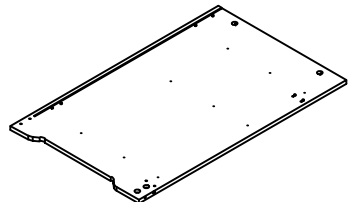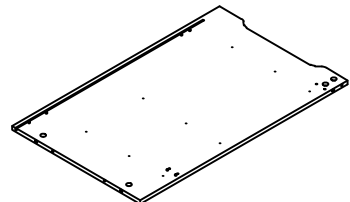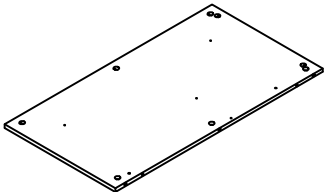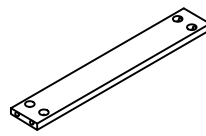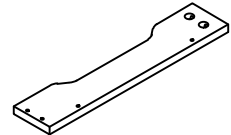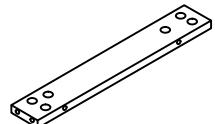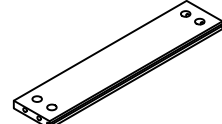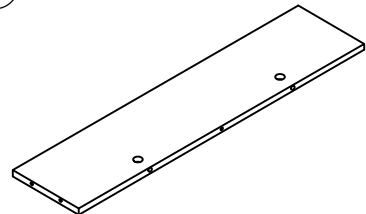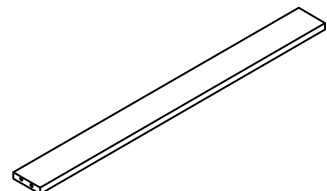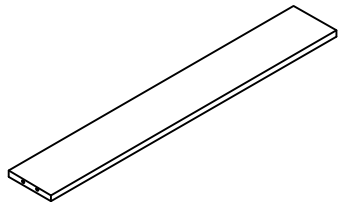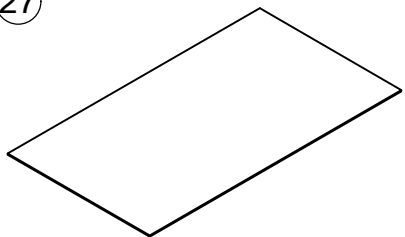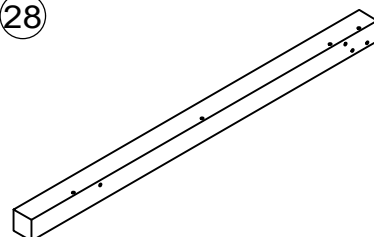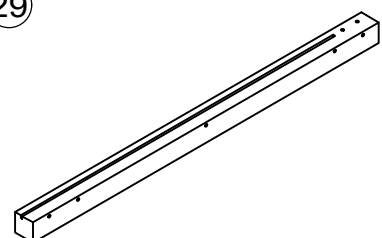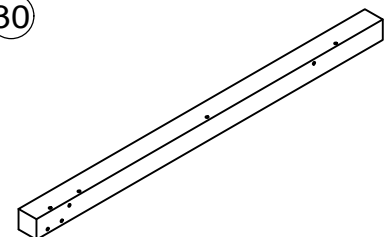①⑥  Qty:1	①⑦  Qty:1	①⑧  Qty:1
①⑨  Qty:1	②⑦  Qty:2	②⑧  Qty:1
②②  Qty:2	②③  Qty:2	②④  Qty:1
②⑤  Qty:1	②⑥  Qty:1	②⑦  Qty:2
②⑧  Qty:1	②⑨  Qty:1	③⑦  Qty:1







Board Identification

Not actual size

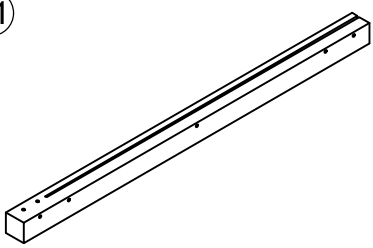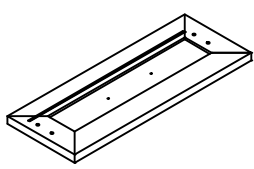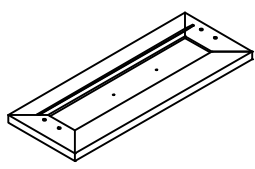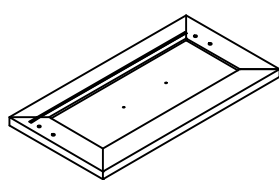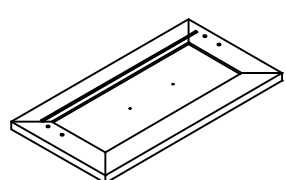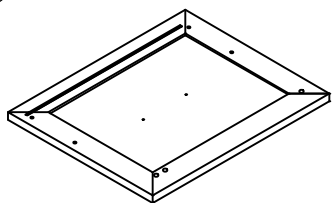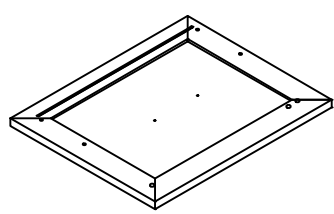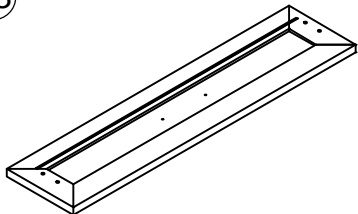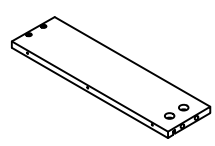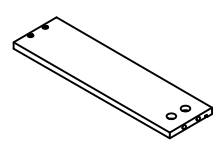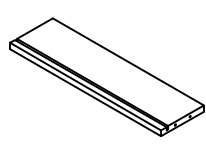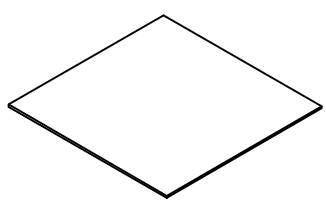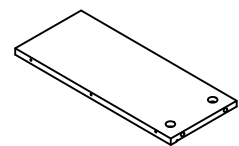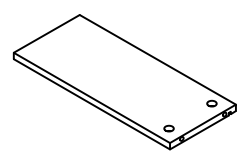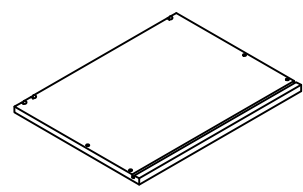
31  Qty:1	32  Qty:1	33  Qty:1
34  Qty:1	35  Qty:1	36  Qty:1
37  Qty:1	38  Qty:1	39  Qty:5
40  Qty:5	41  Qty:4	42  Qty:4
43  Qty:2	44  Qty:2	45  Qty:1

Board Identification


Not actual size

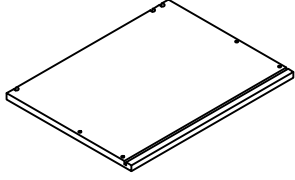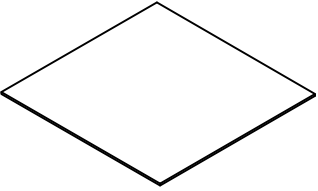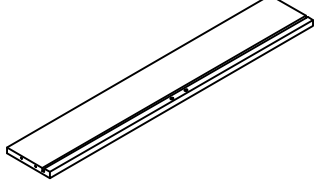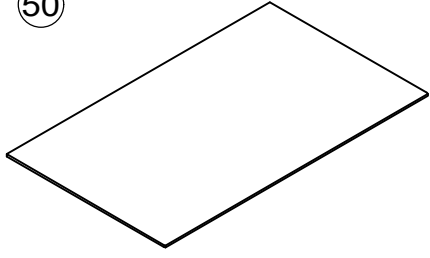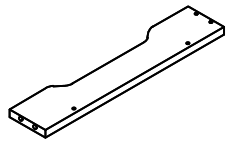46  Qty:1	47  Qty:2	48  Qty:1
49  Qty:1	50  Qty:1	51  Qty:1


Part List

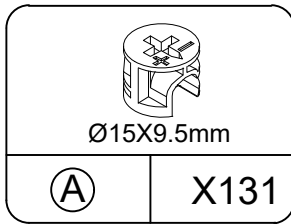


CAM LOCK
spare:3

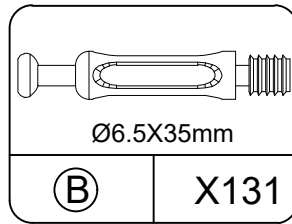


CAM BOLT
spare:3

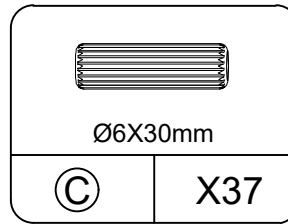


WOOD DOWEL
spare:3

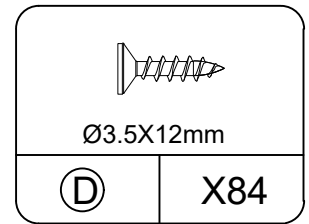


SCREW
spare:3

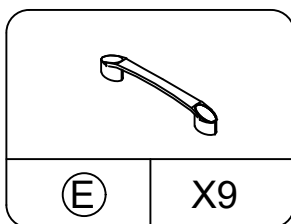


HANDLE

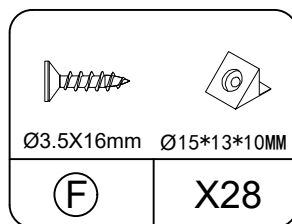


BACK PANEL BUCKLE
spare:3

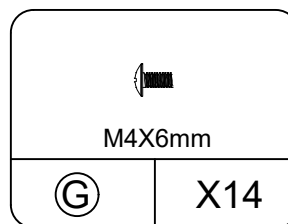


SCREW
spare:1

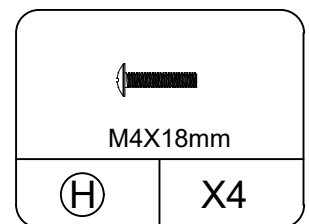


SCREW
spare:1

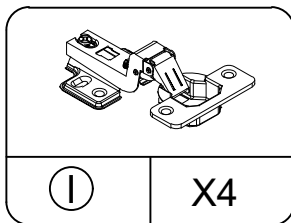


HINGE

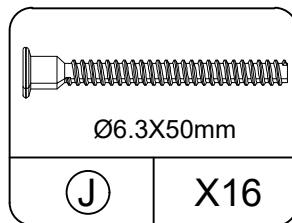


SCREW
spare:1

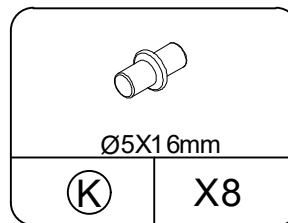


SHELF SUPPORT
spare:1

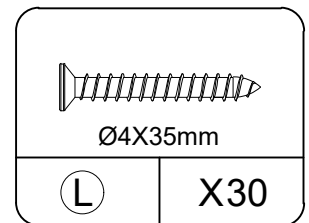


SCREW
spare:3

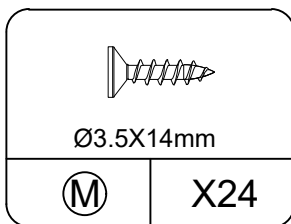


SCREW
spare:2

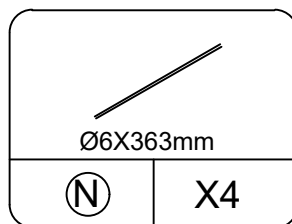


SOLID STEEL BARS

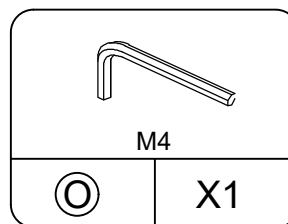


HEX KEY

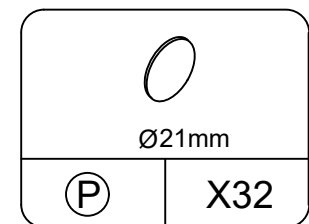


SCAM LOCK COVER
spare:1

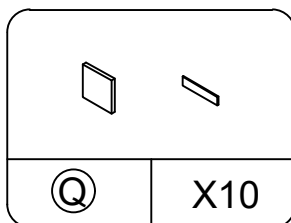


EVA
spare:1

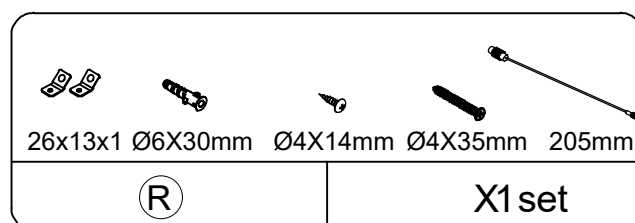


HIPPING RESTRAINT
HARDWARE KIT

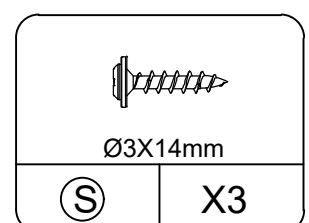


Part List

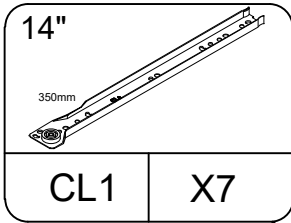


DRAWER SLIDE

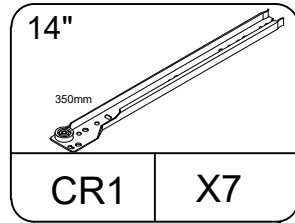

DRAWER SLIDE

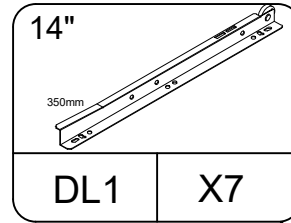


DRAWER SLIDE

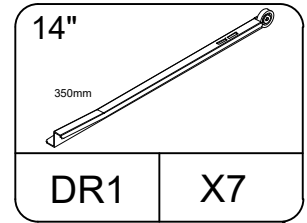

DRAWER SLIDE


Cam Lock Fastening System

Insert the cam bolt into the hole first, then insert the cam lock and lock it.





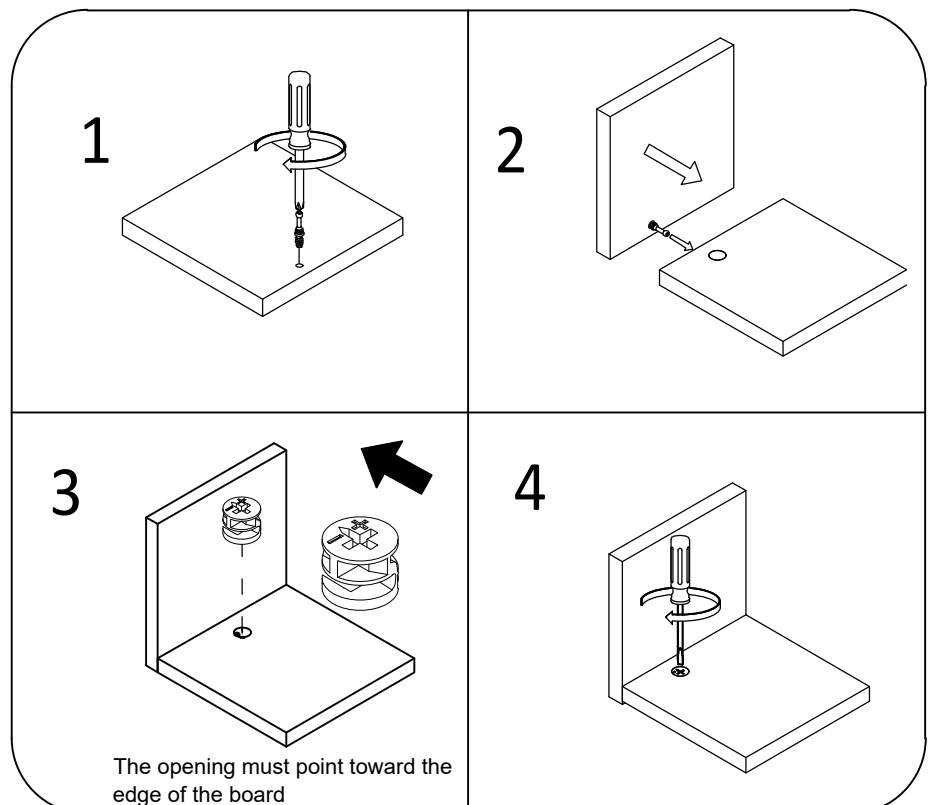


Board Identification






Not actual size

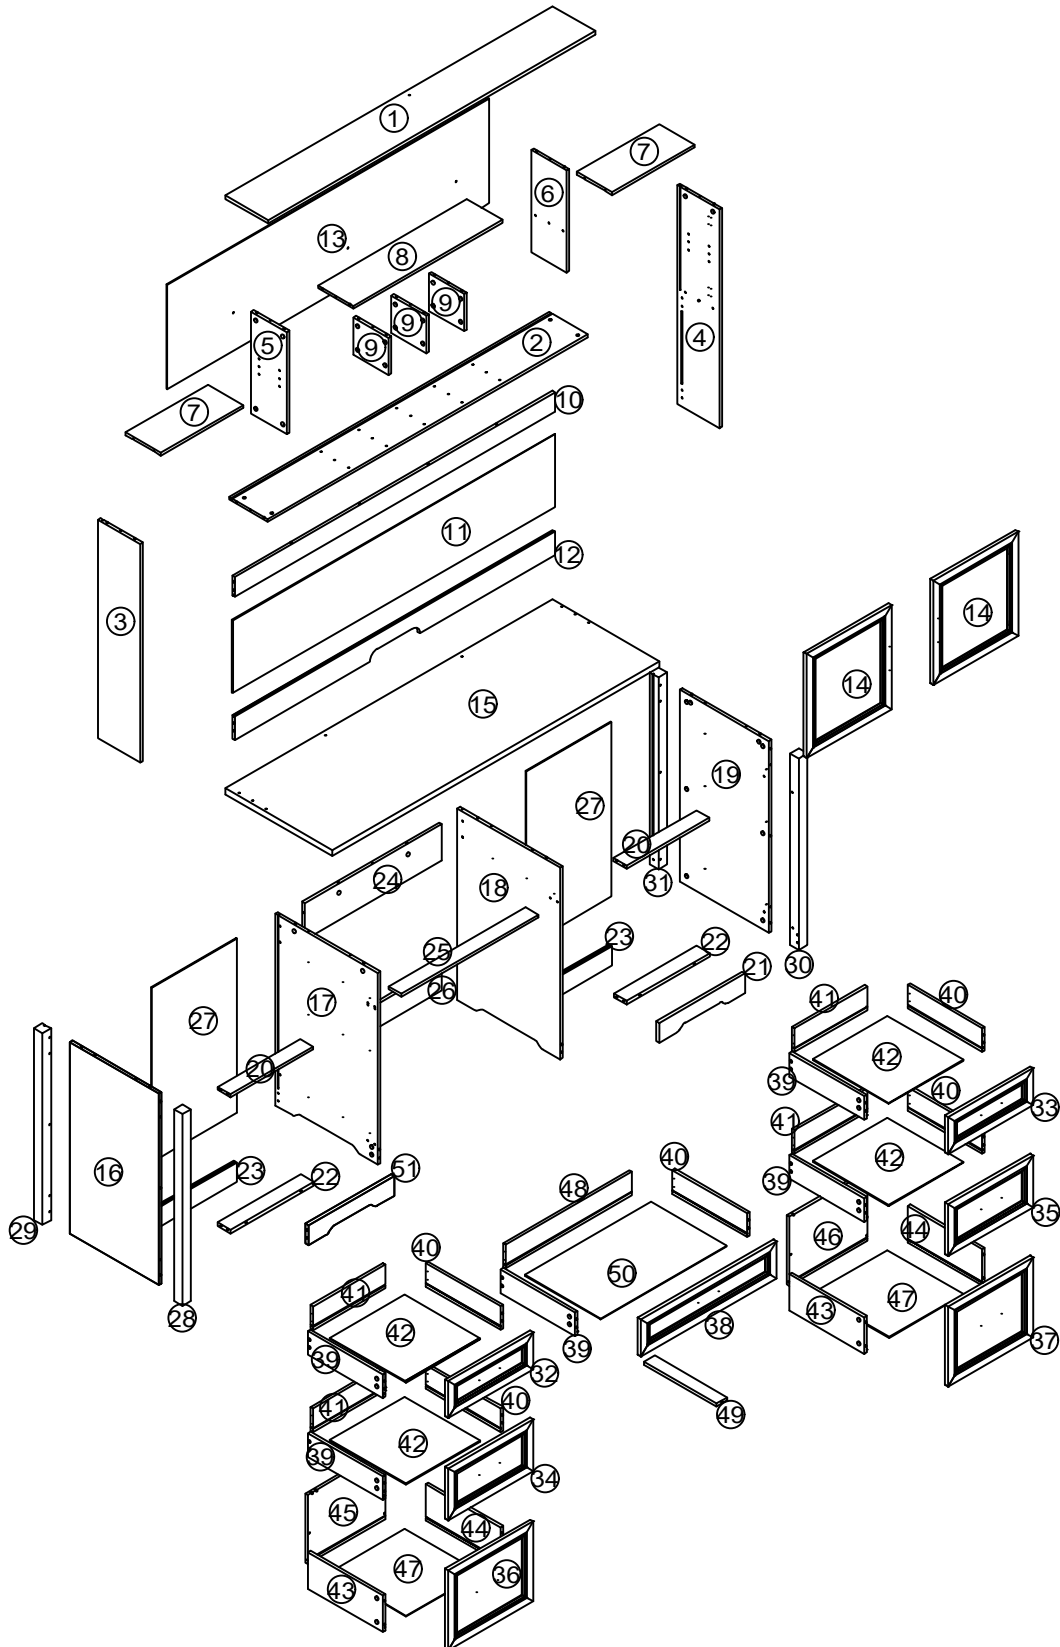







STEP1

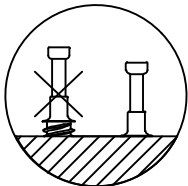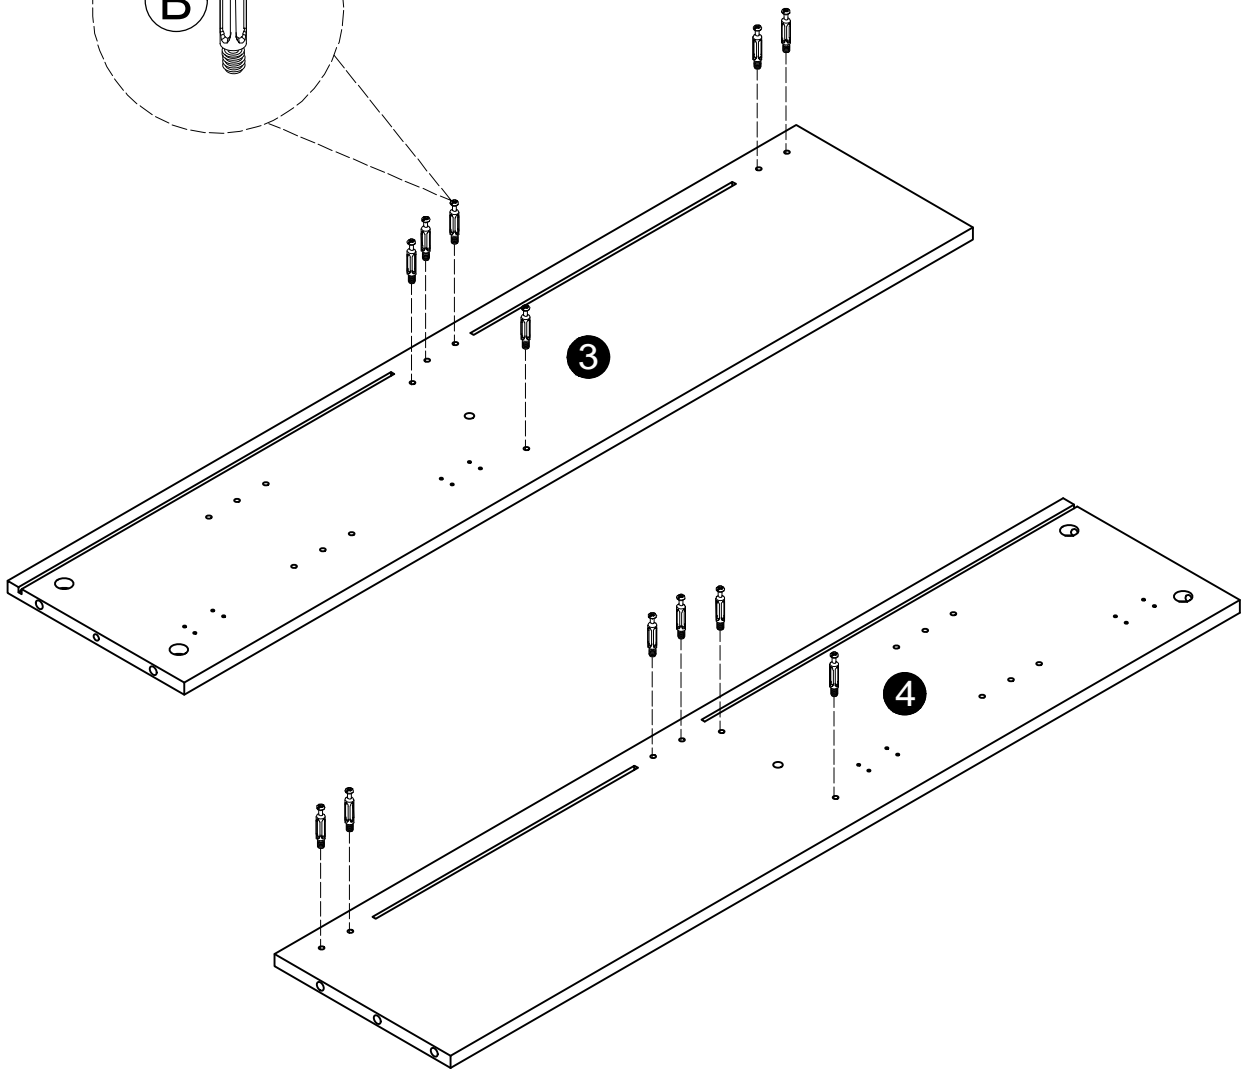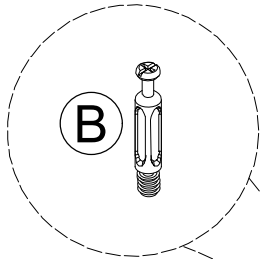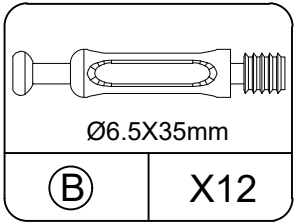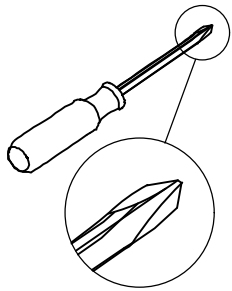

STEP2

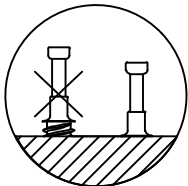
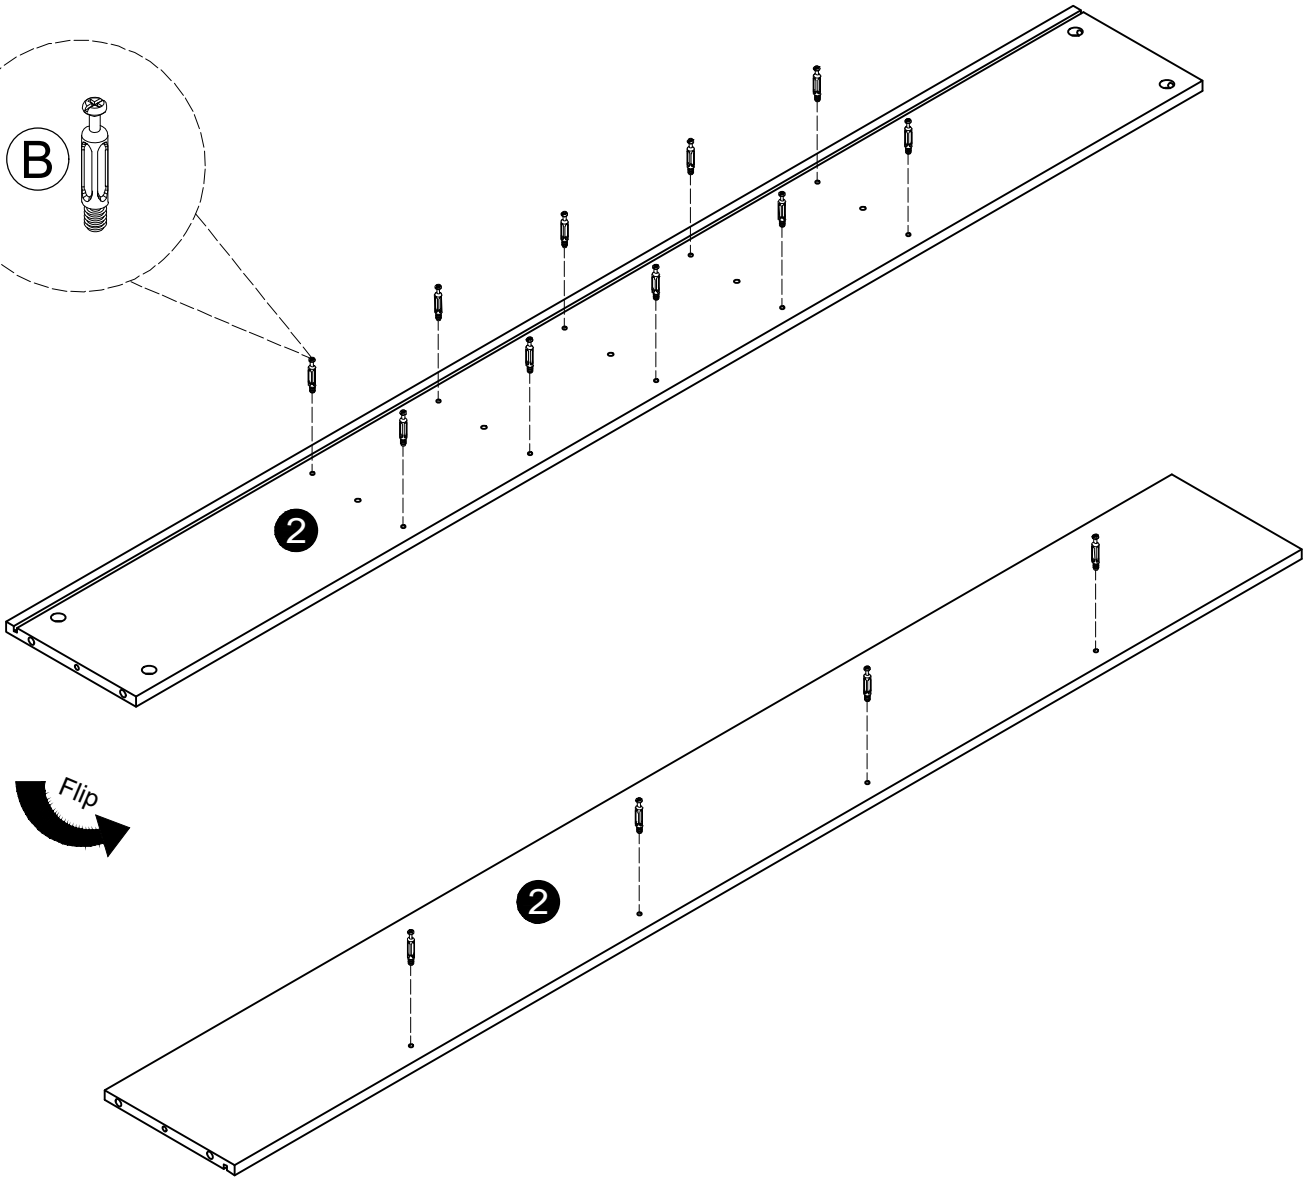
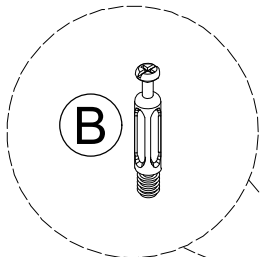
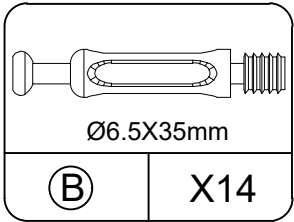
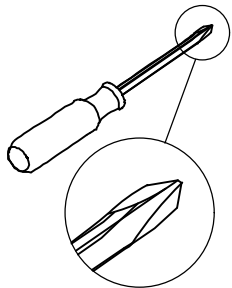


STEP3

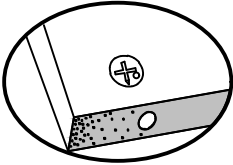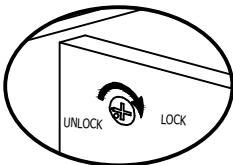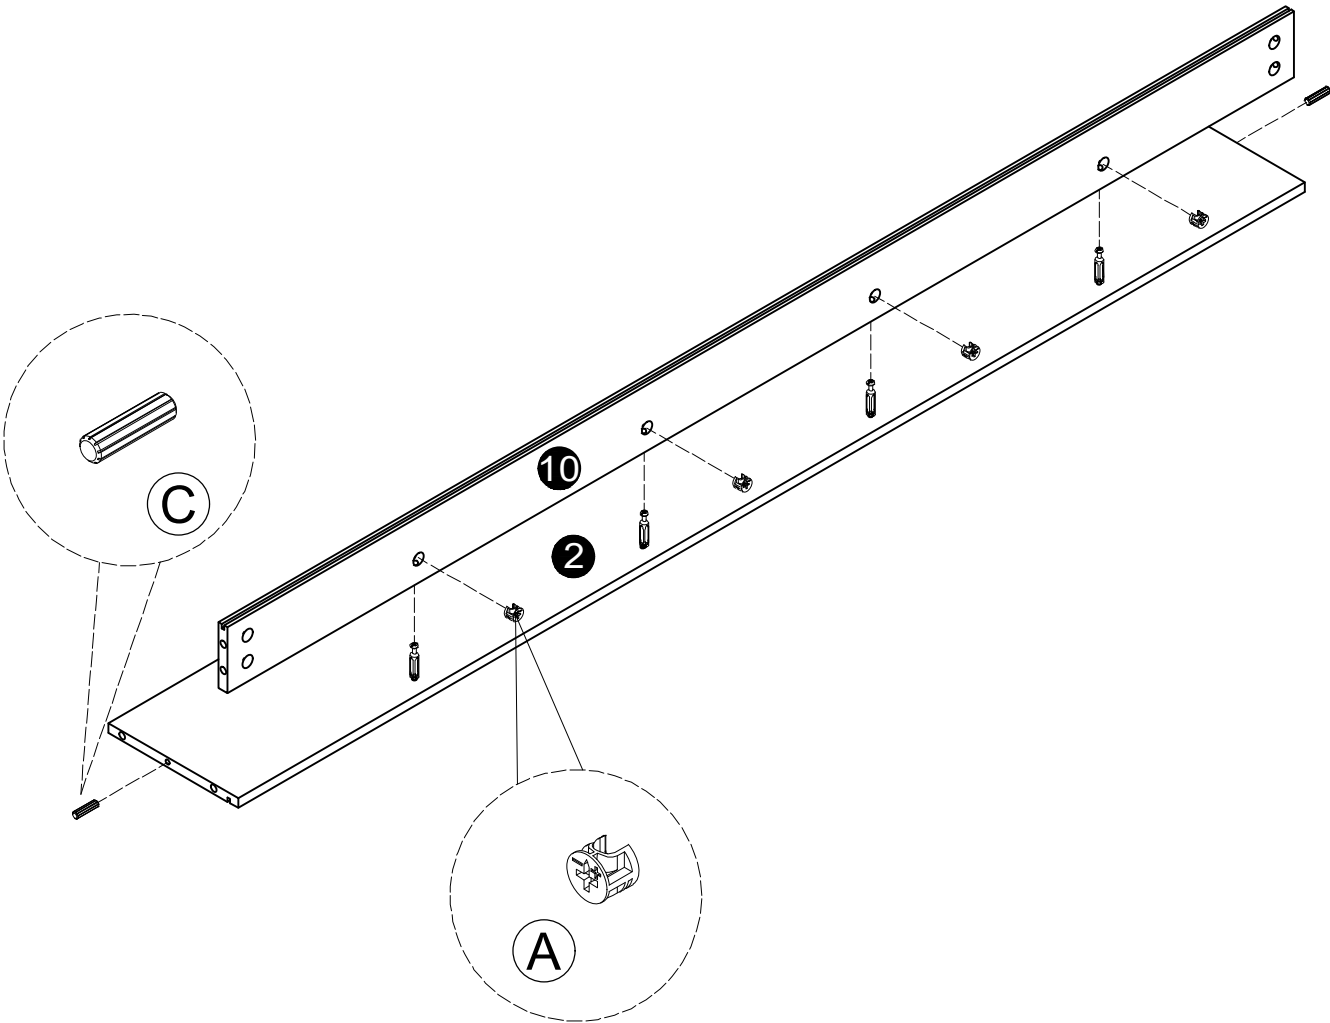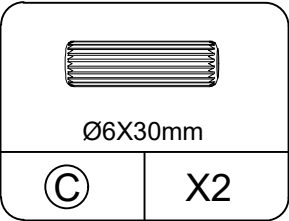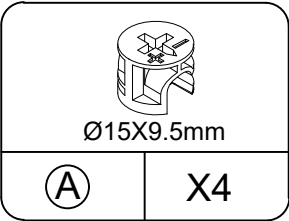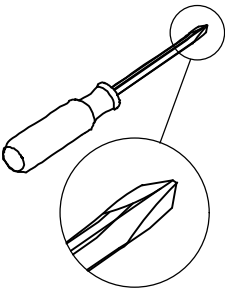







Proper orientation of CAM LOCK

STEP4

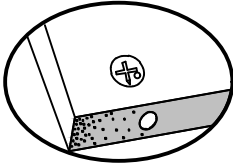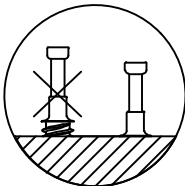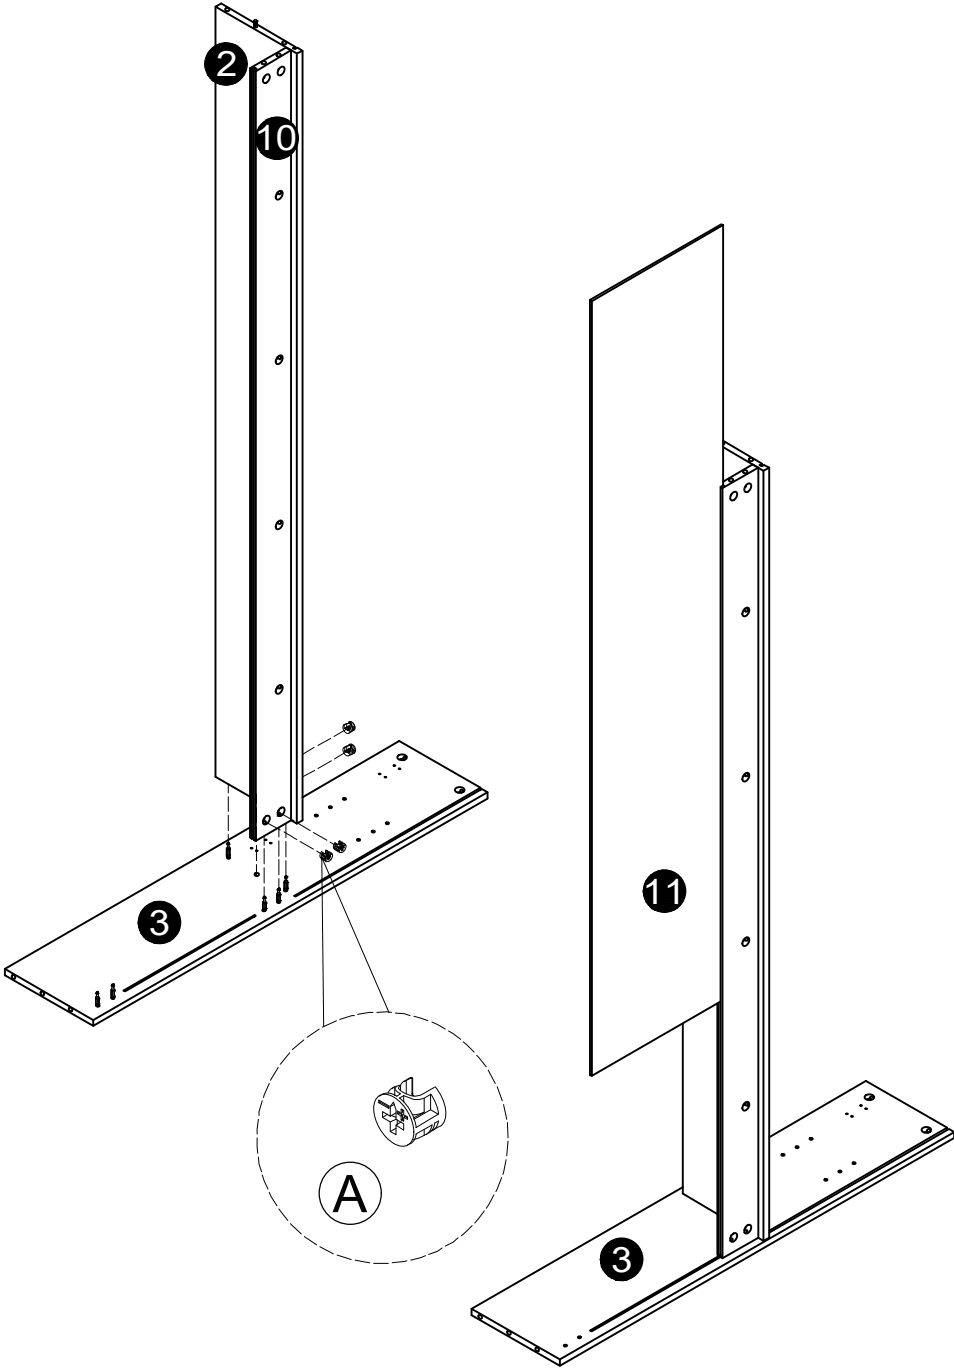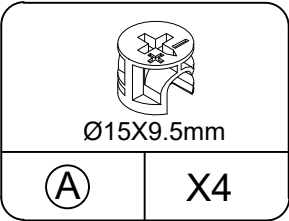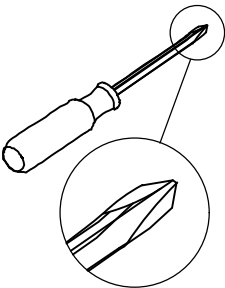


Proper orientation of CAM LOCK

STEP5

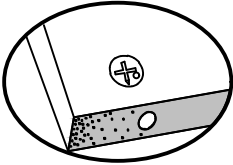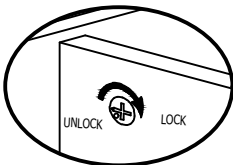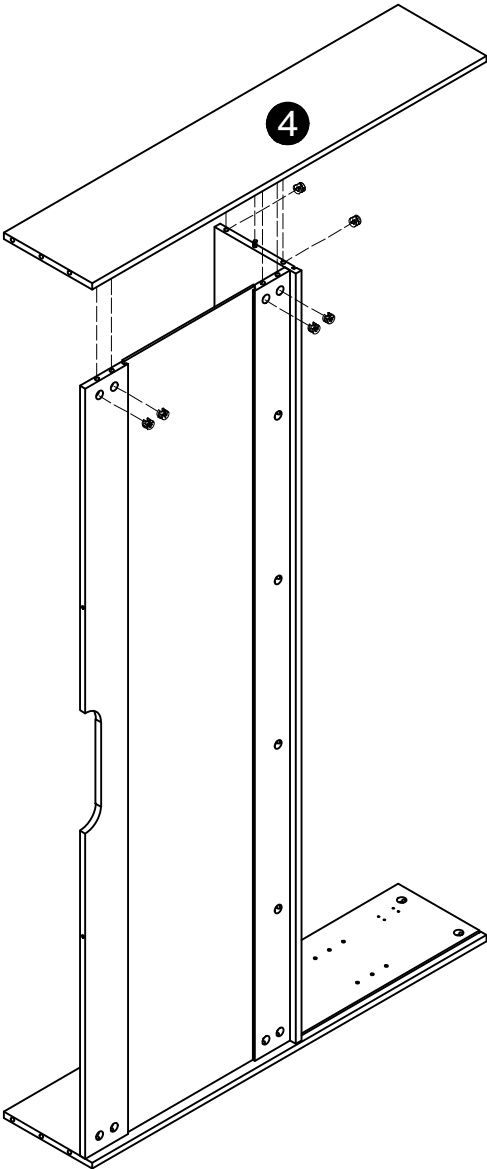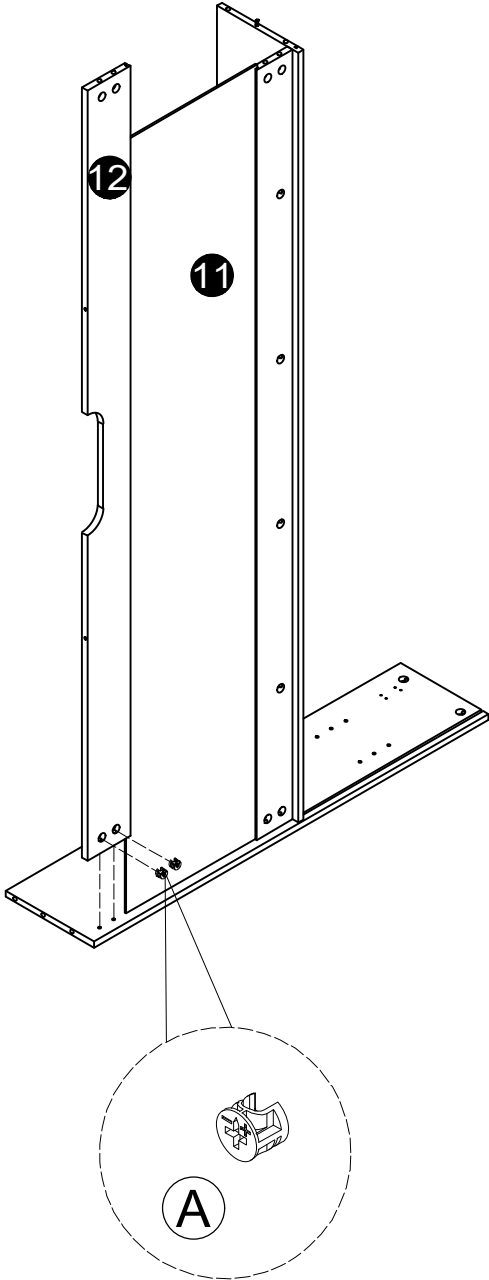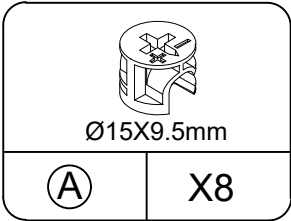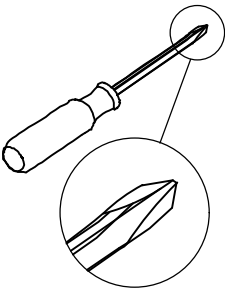


Proper orientation of CAM LOCK








STEP6

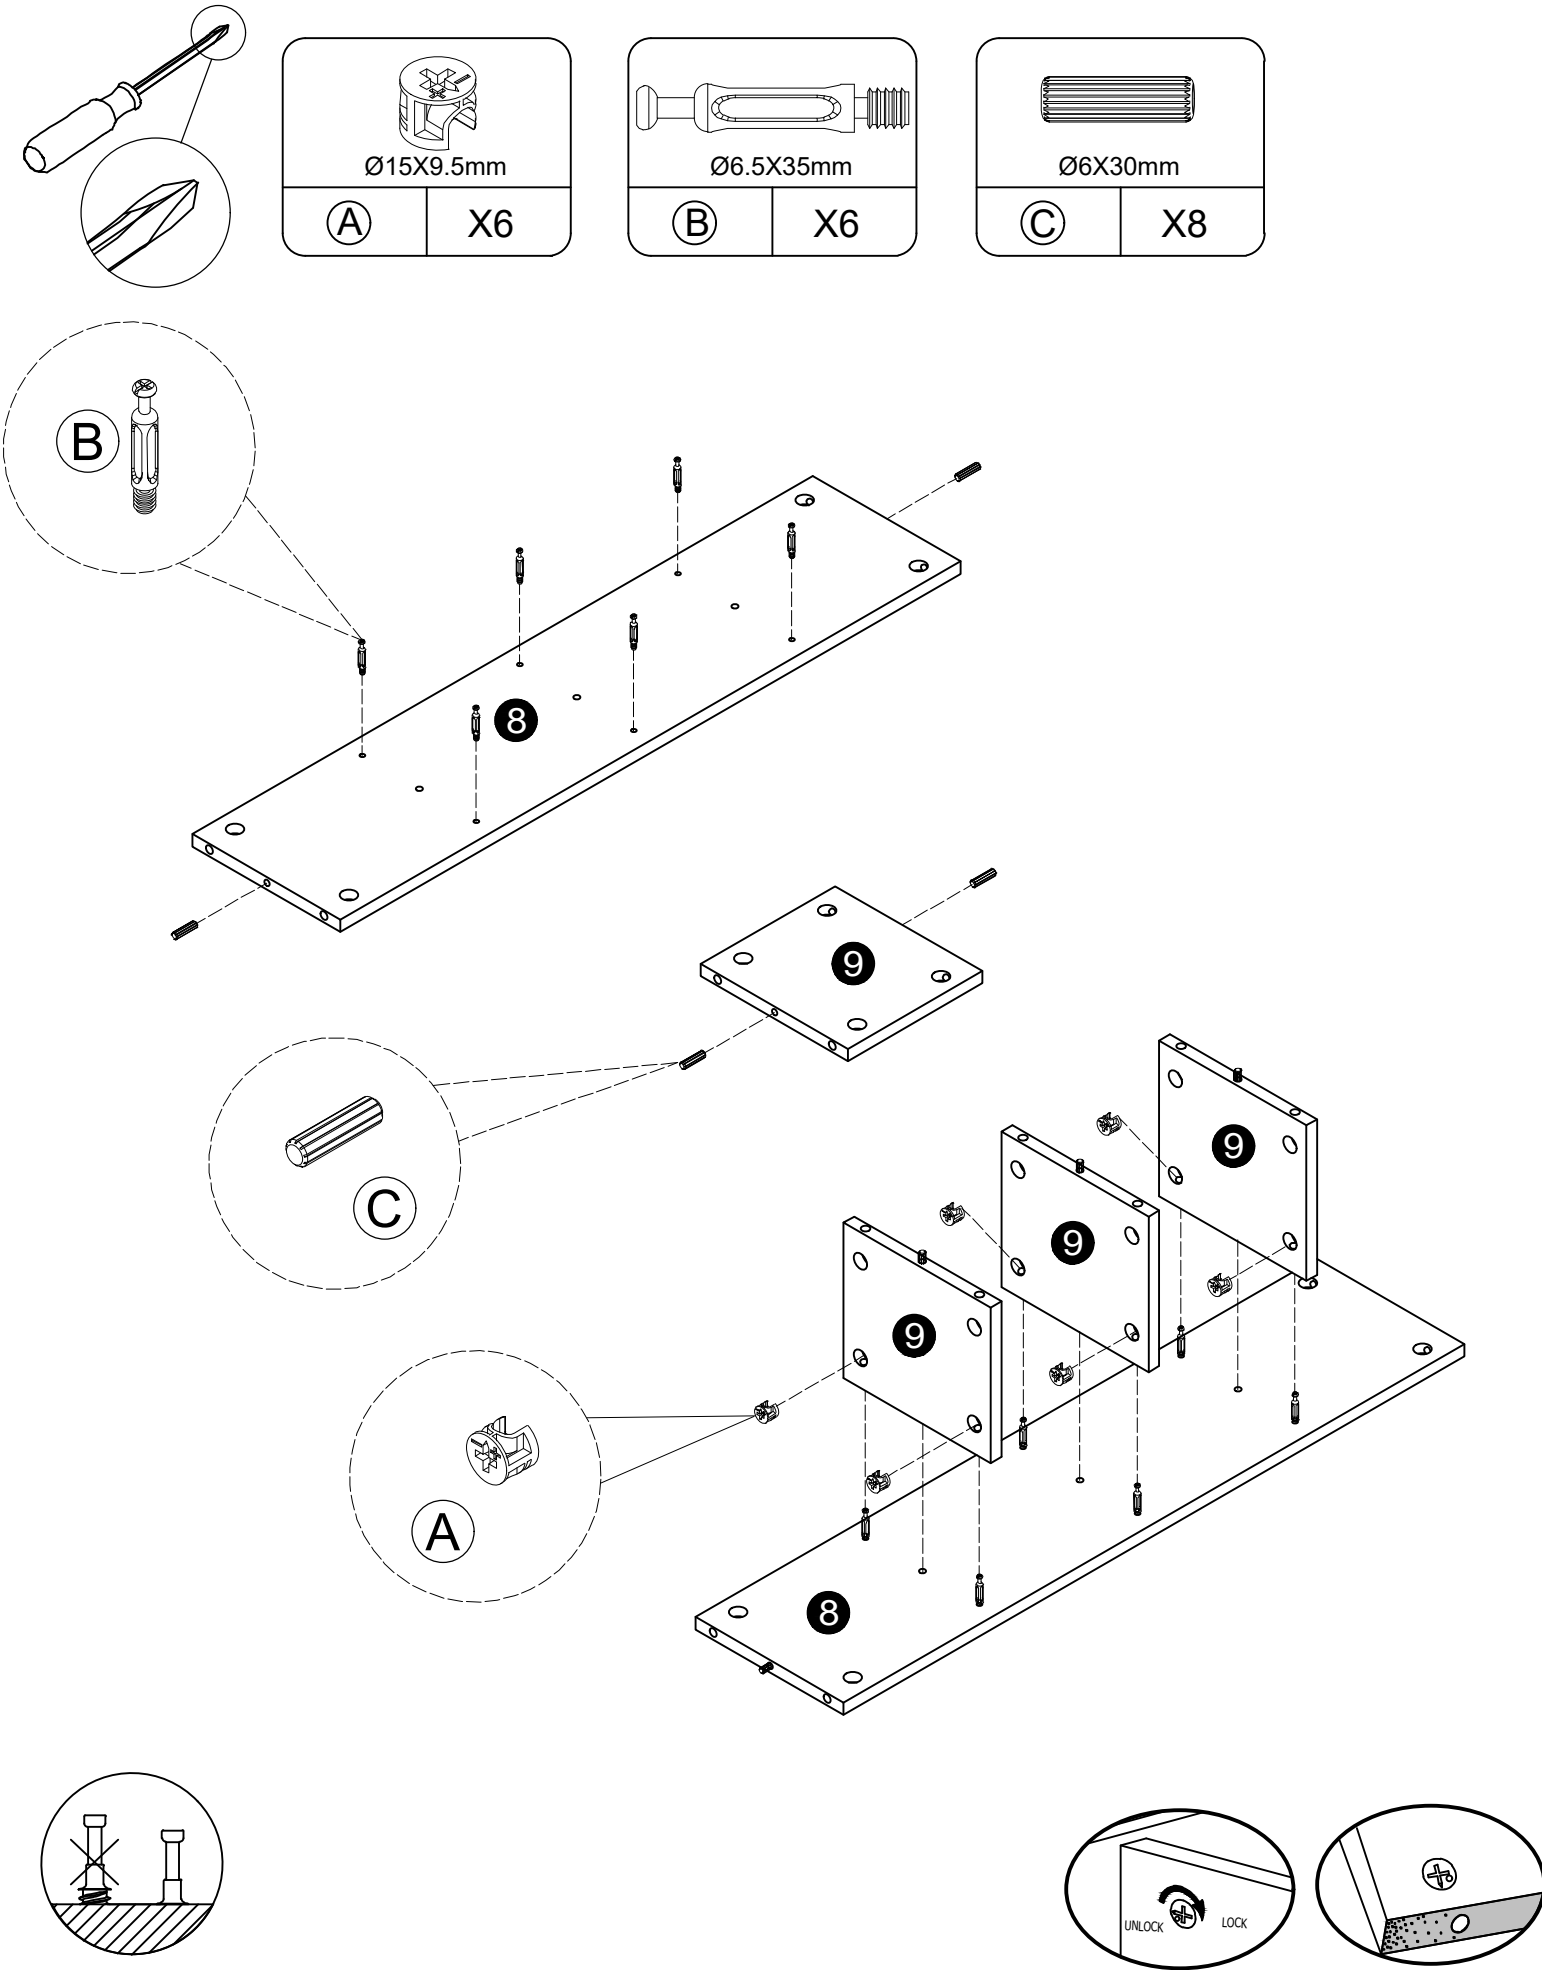








STEP7

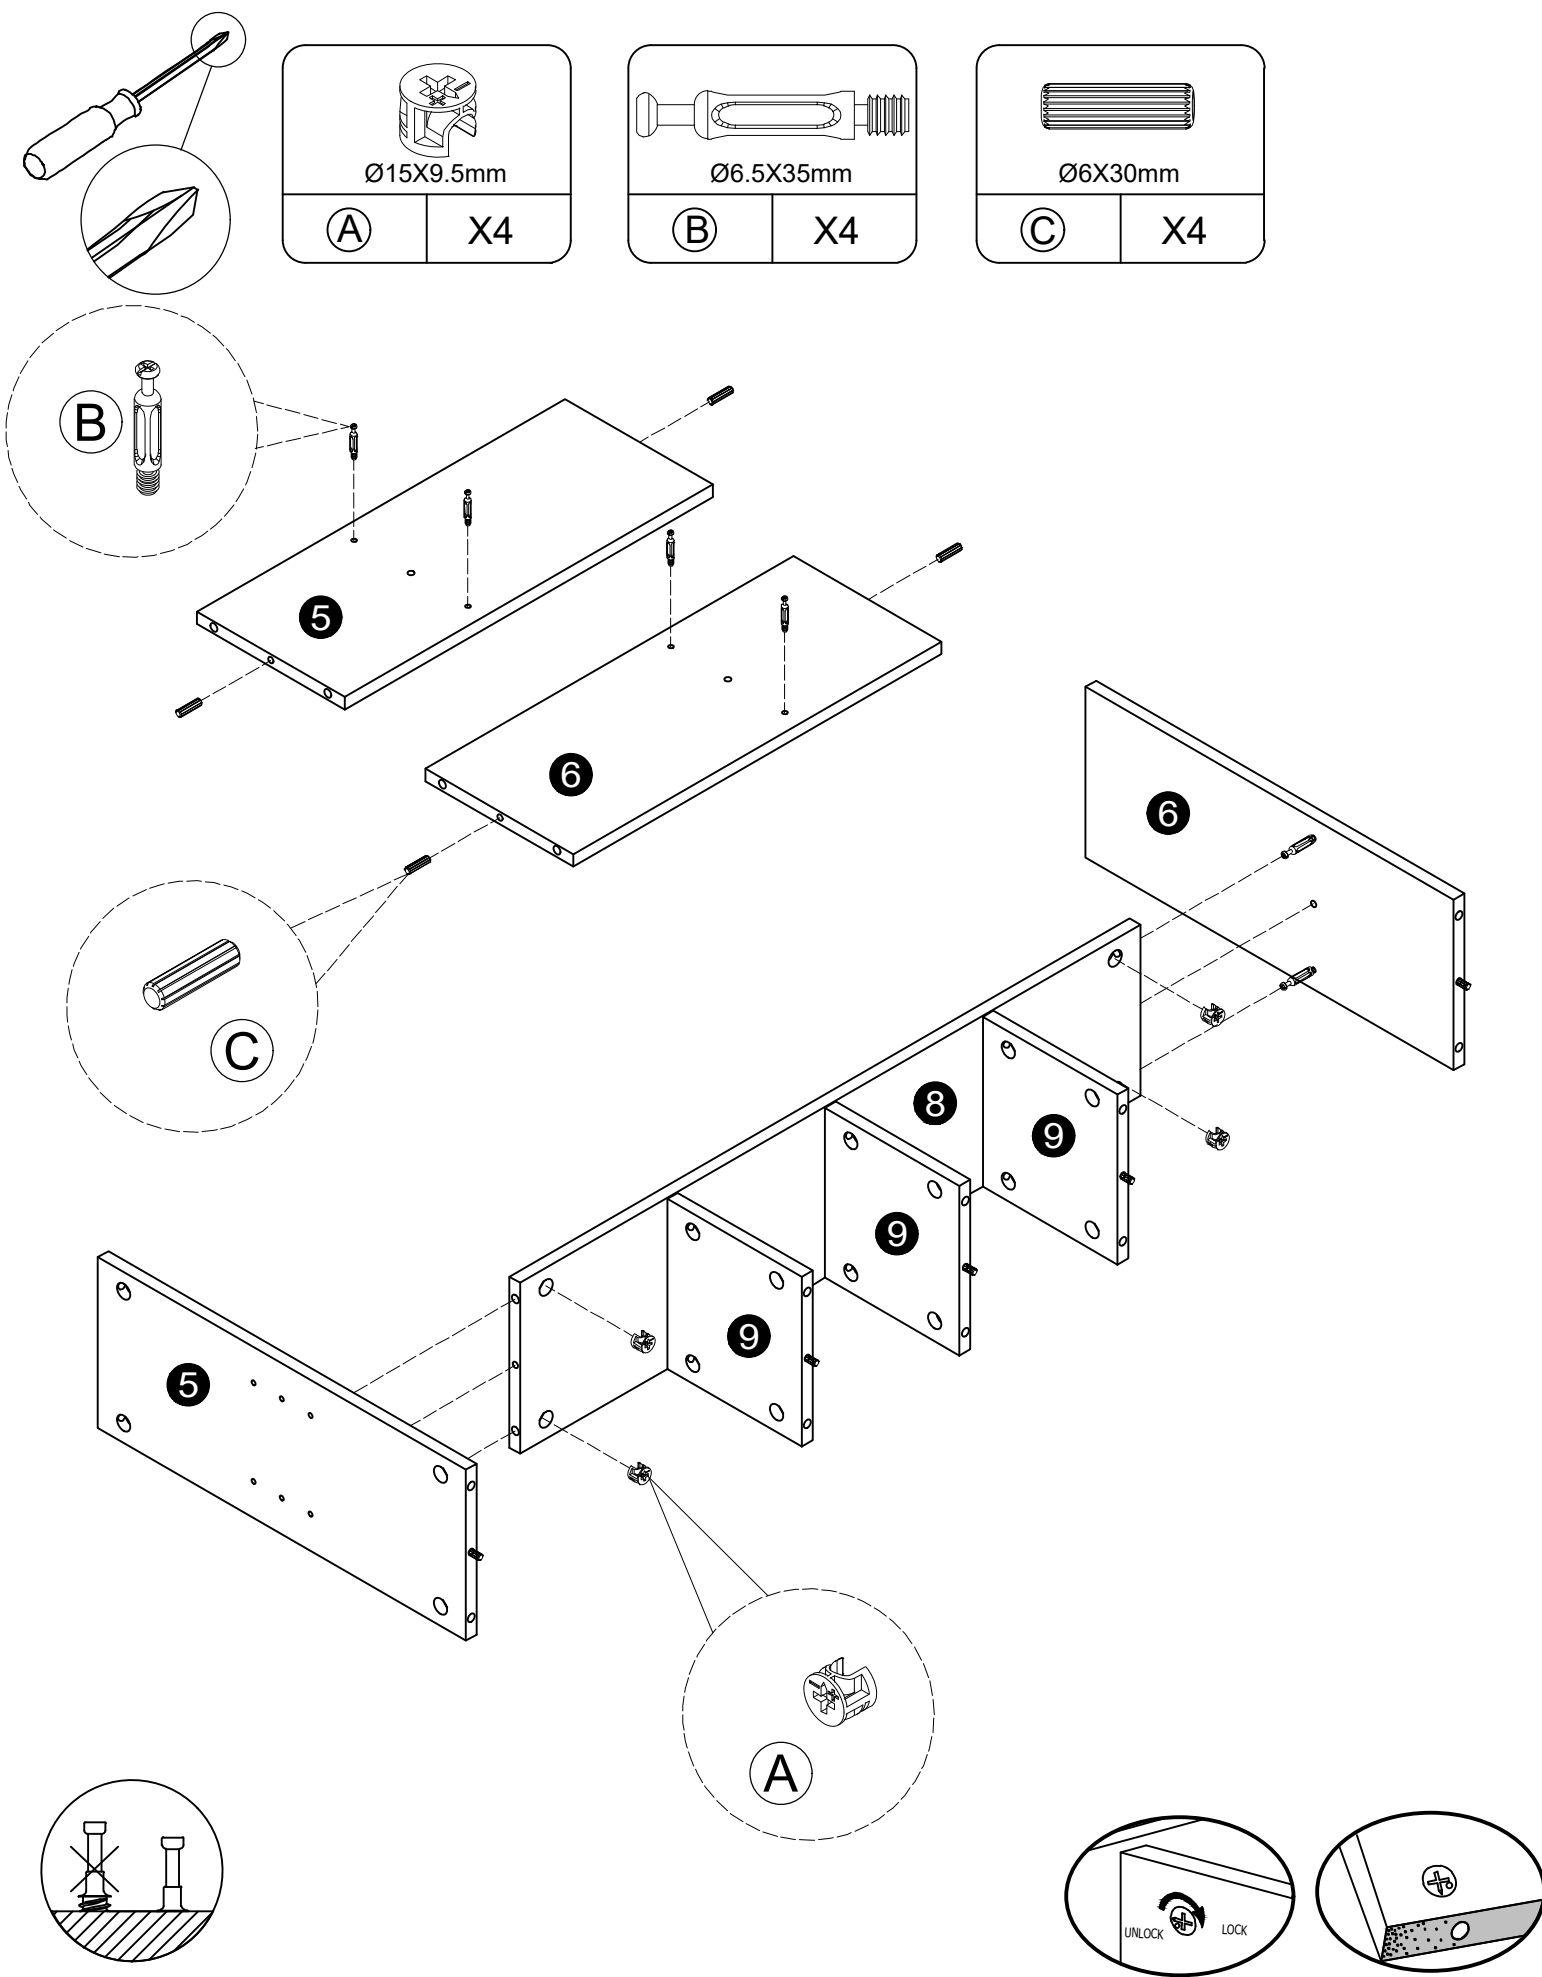




STEP8

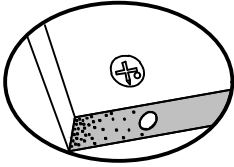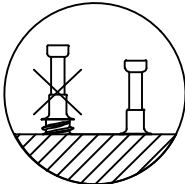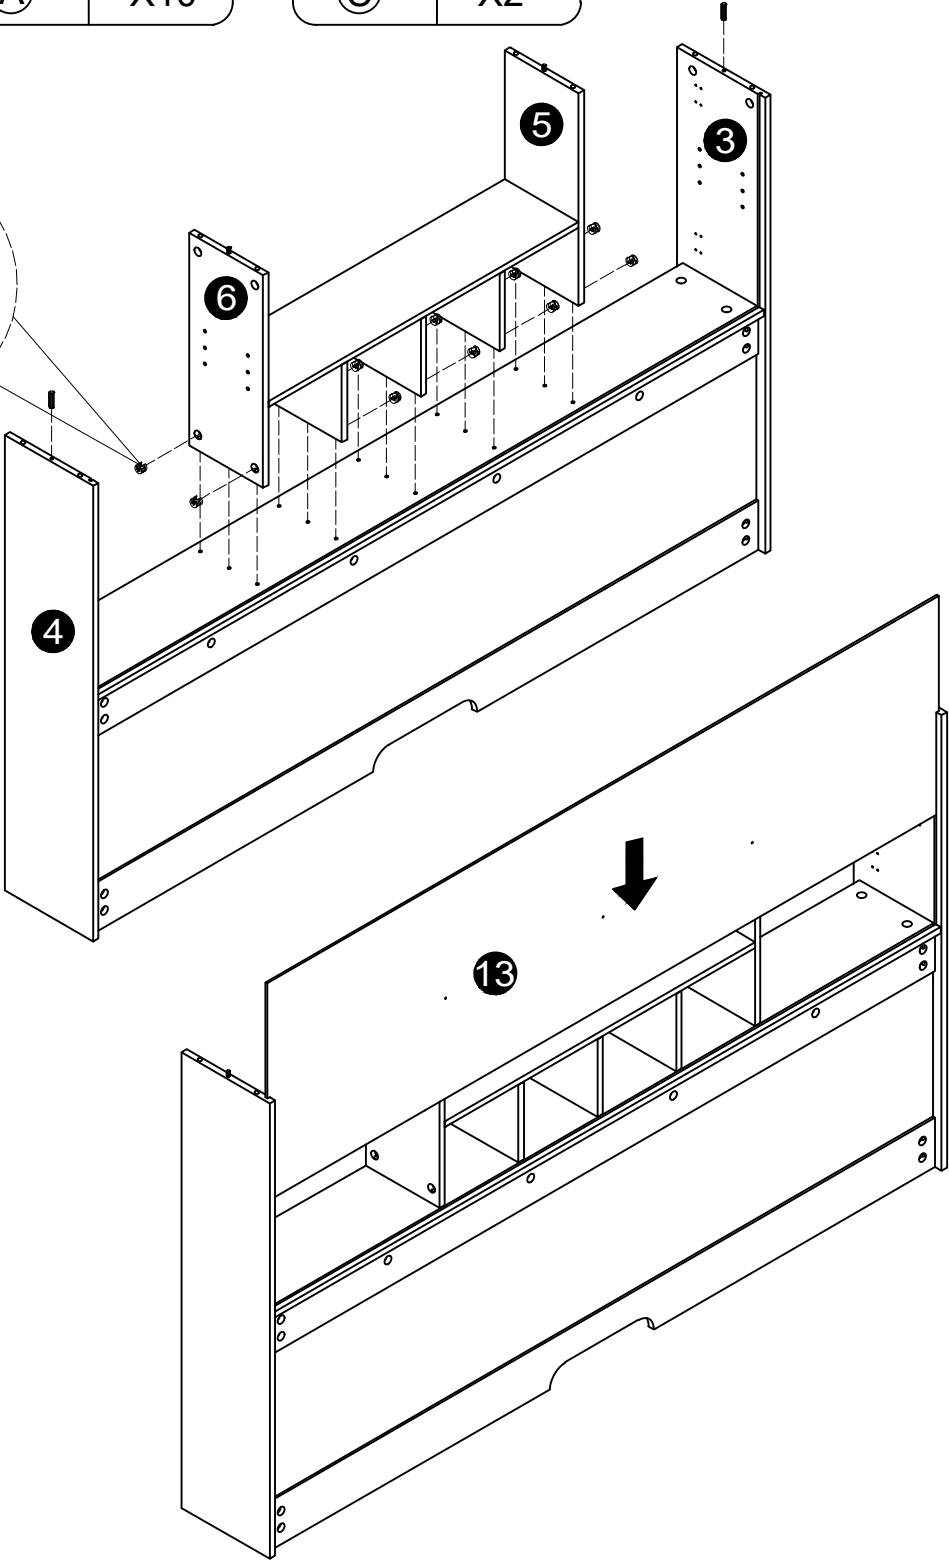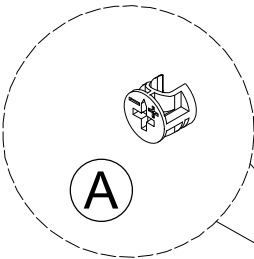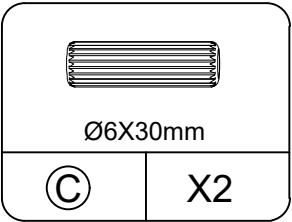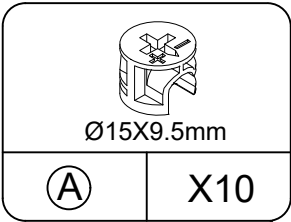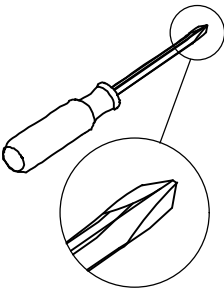

STEP9

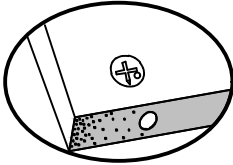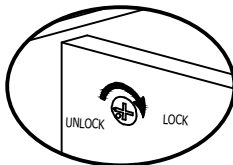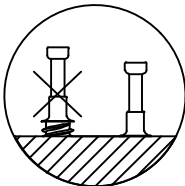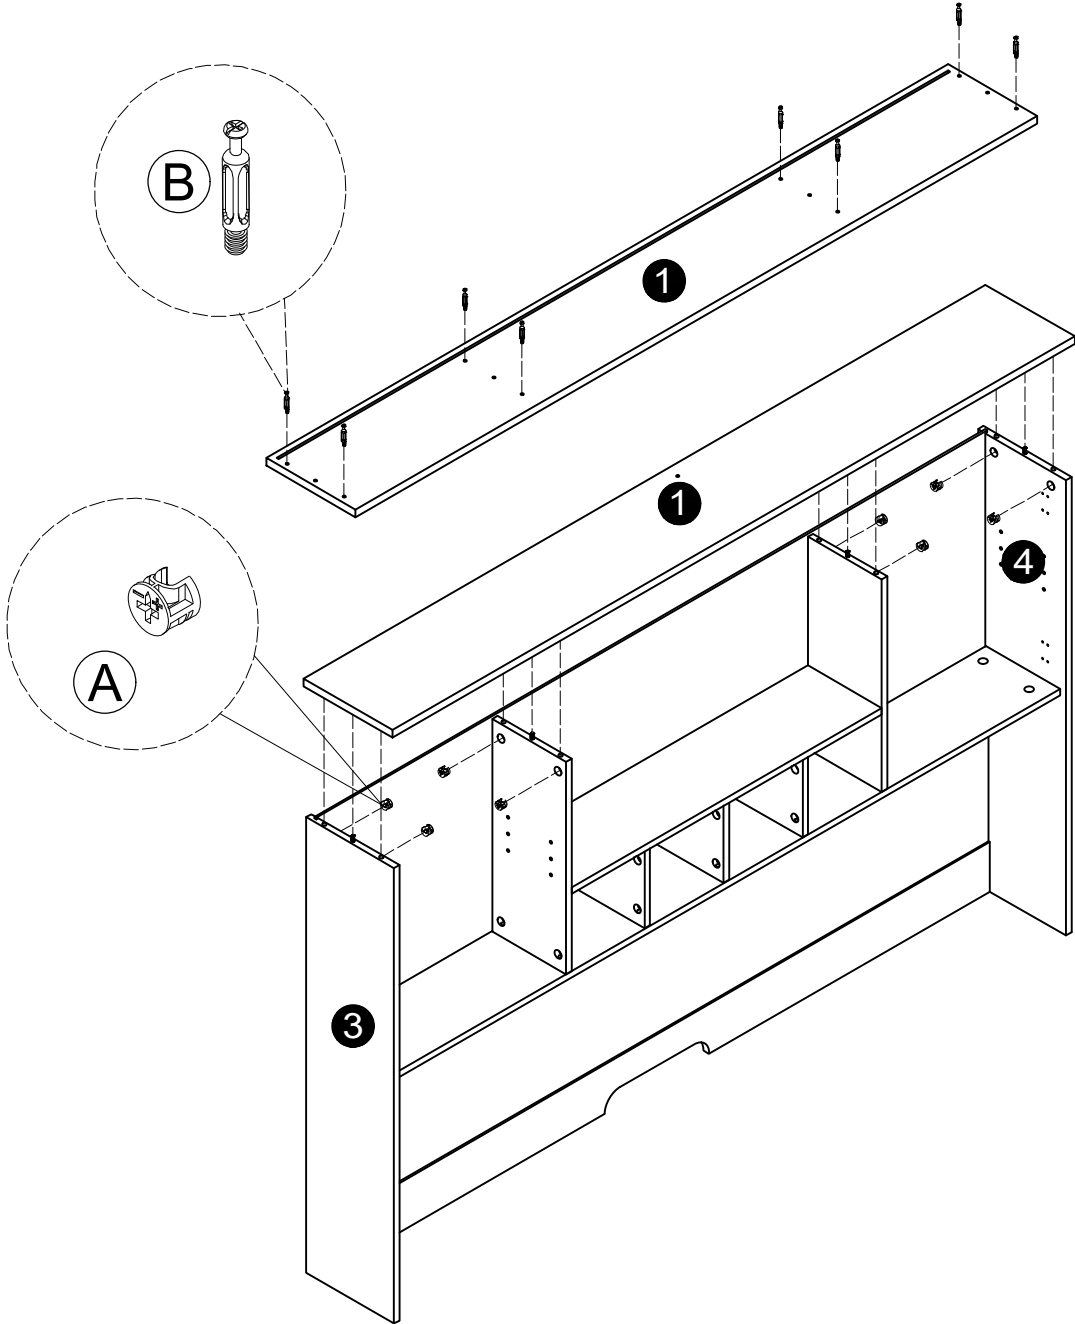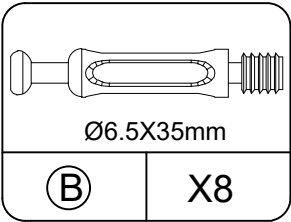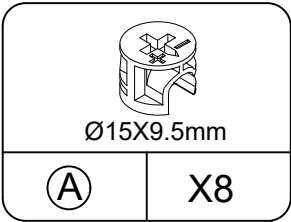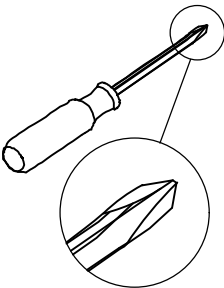


STEP10

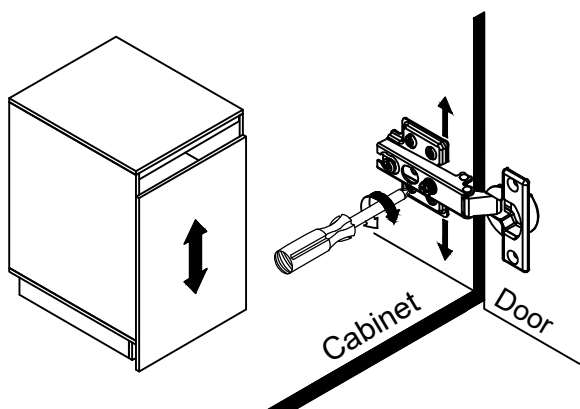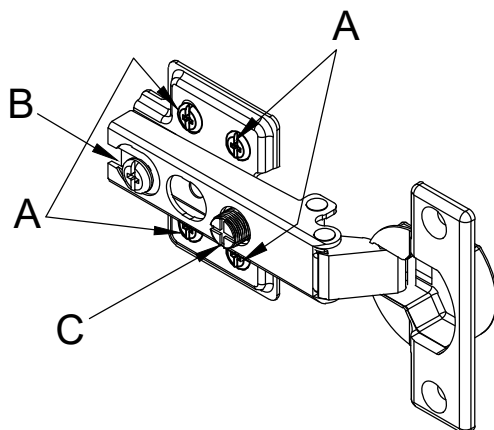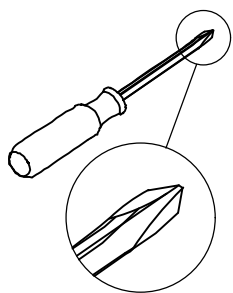


To adjust the vertical height.

Loosen the four screws "A" on both hinges. Two of them are usually in slotted holes which allows you to adjust up or down by a few mm. Then tighten back up.

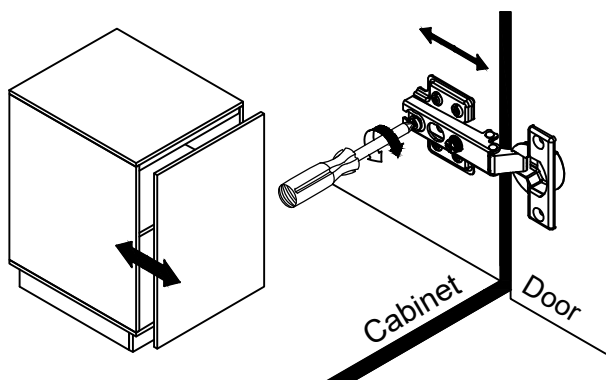

To adjust depth.







Loosen screw "B" and adjust door, if the door can not be adjusted, please loosen screw "C", then try again. Tighten screw "B" and "C".

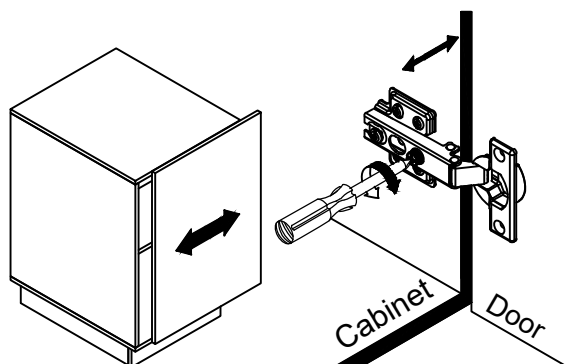







To adjust side ways.

Turning the screw "C" on BOTH hinges on each door.


STEP11

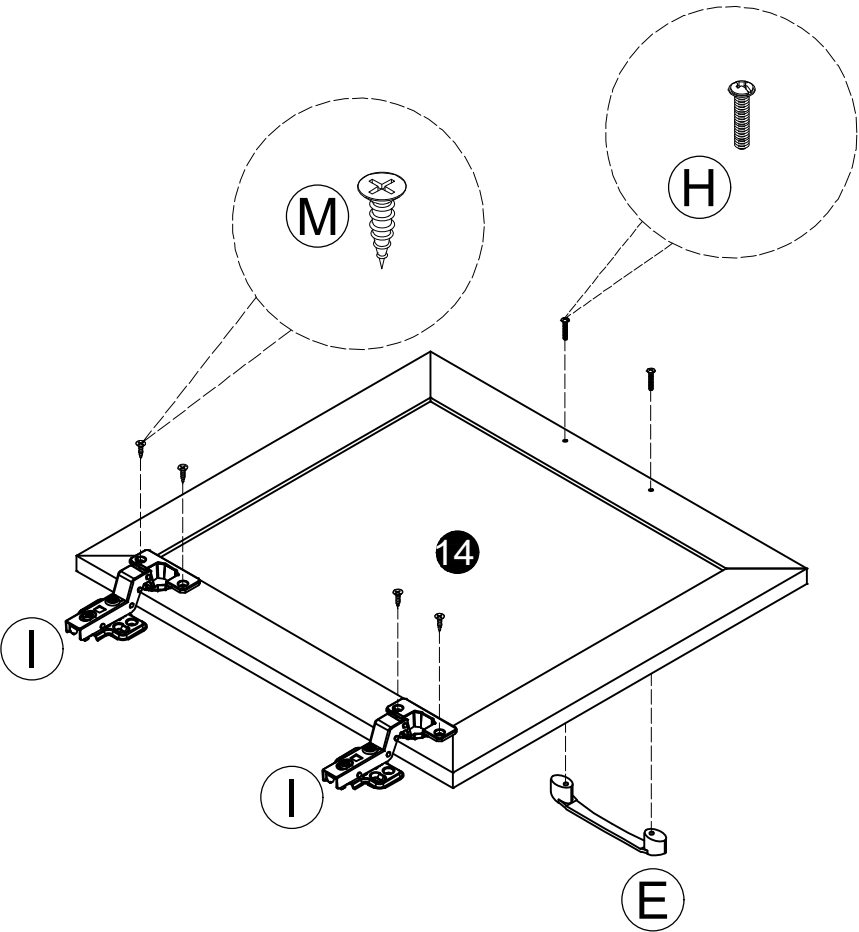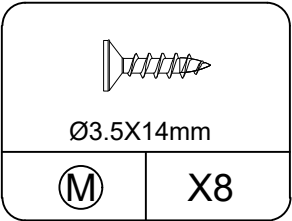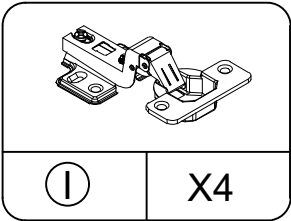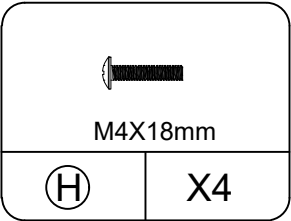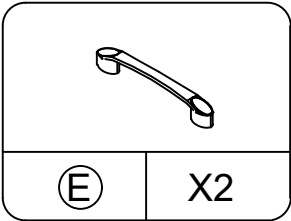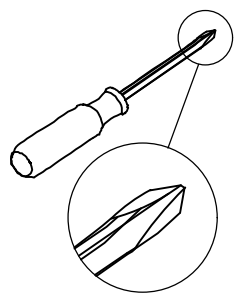

STEP12

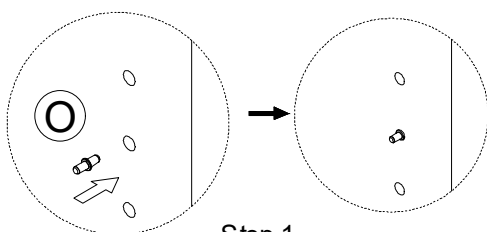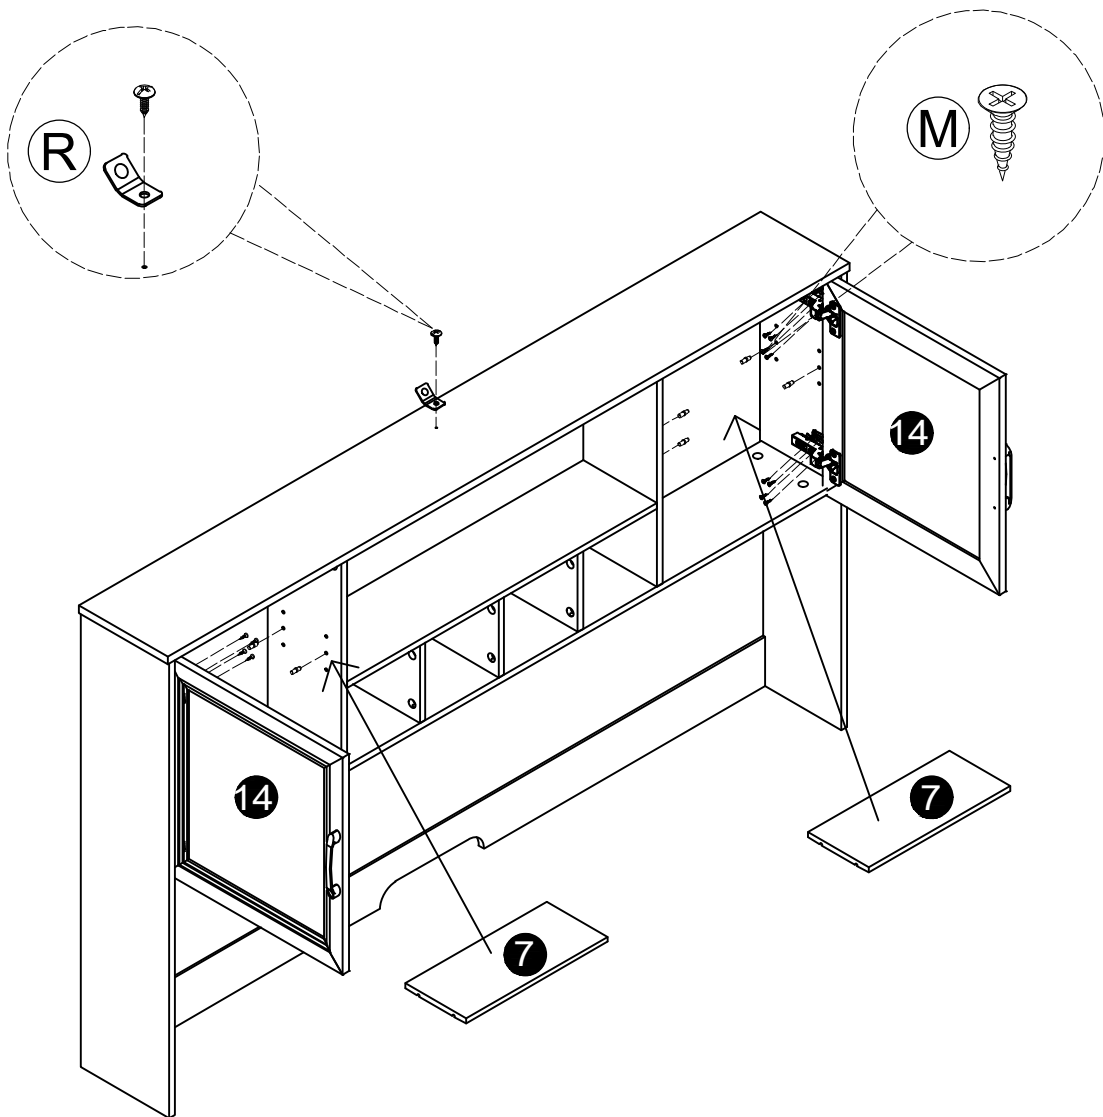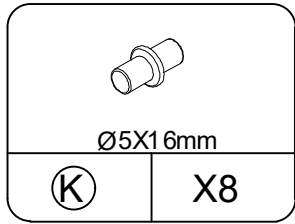
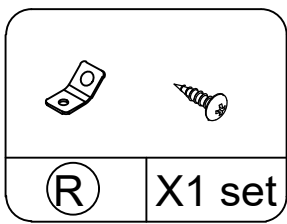
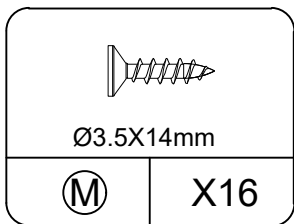
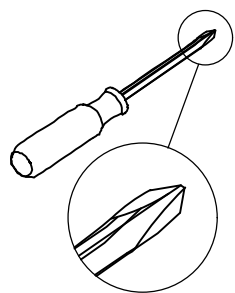


Step 1
Select the desired height
and put it in







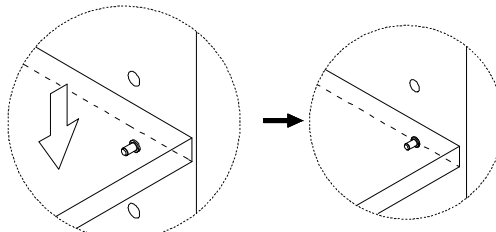


Step 2
Aim the board gaps down

STEP13




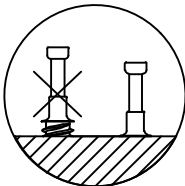
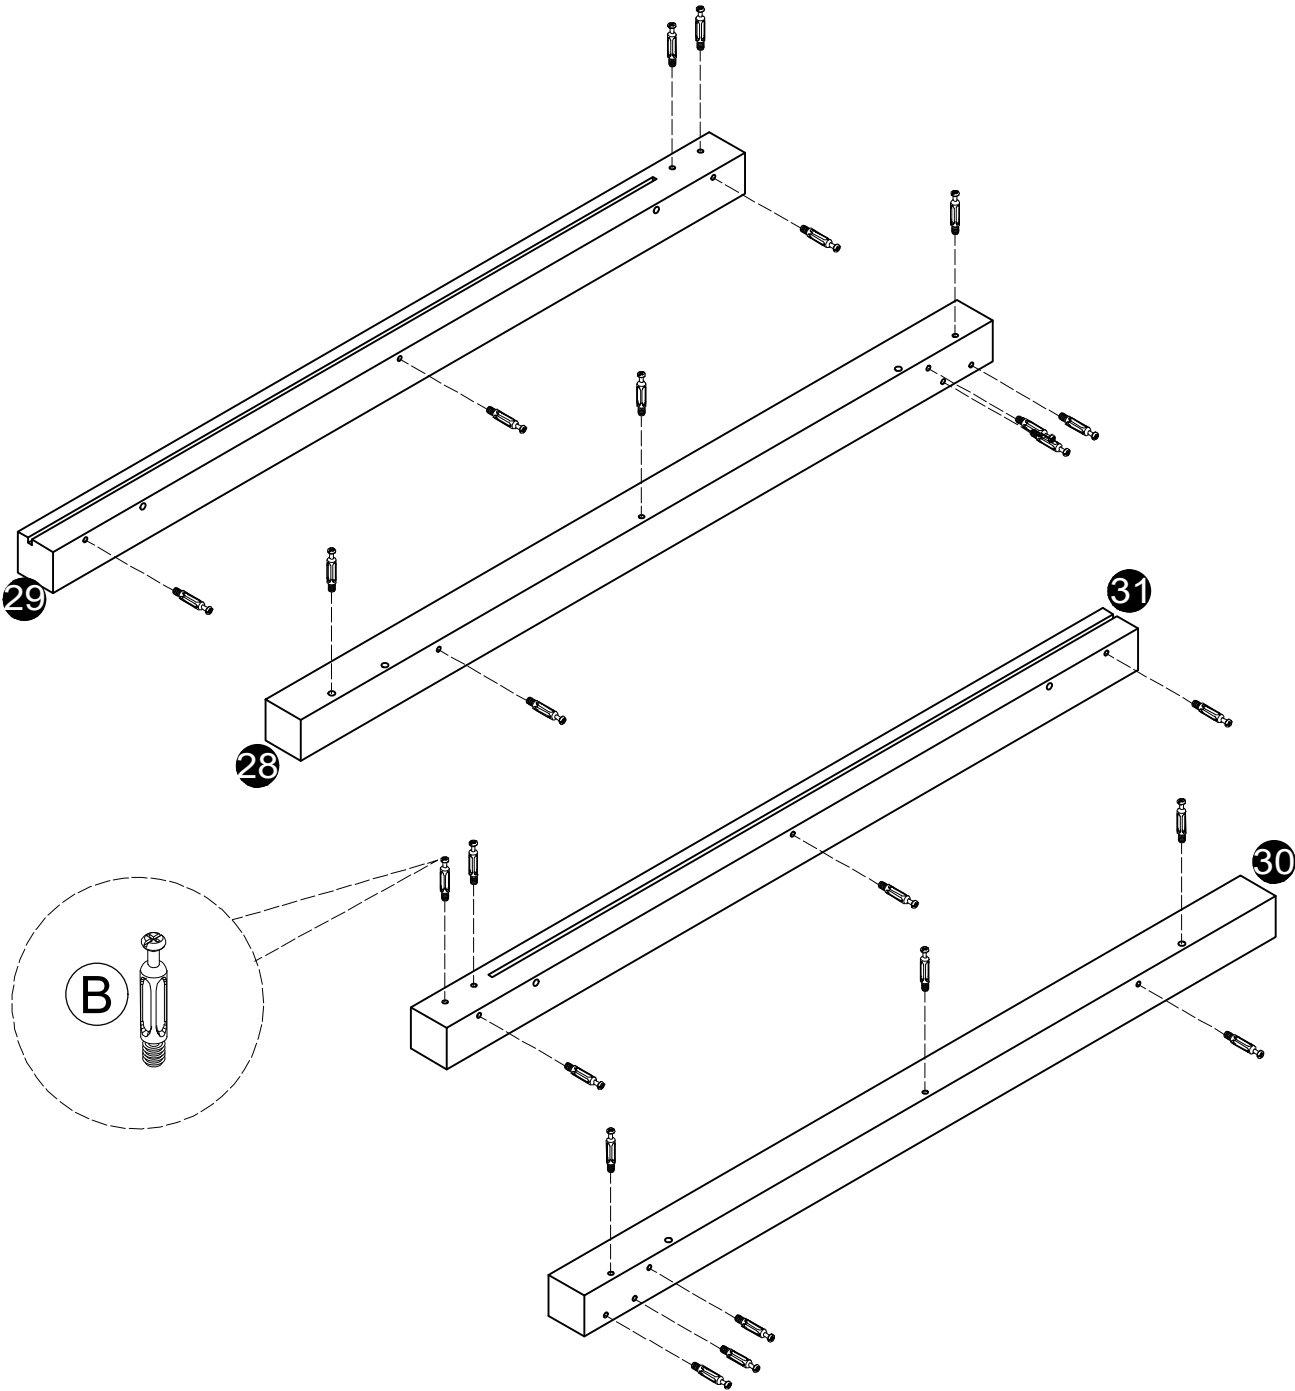
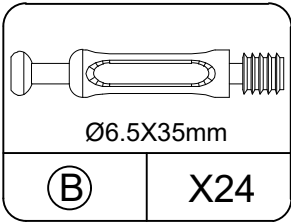
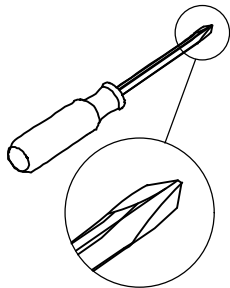


STEP14


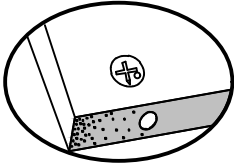
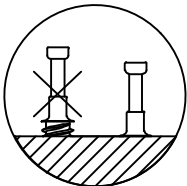
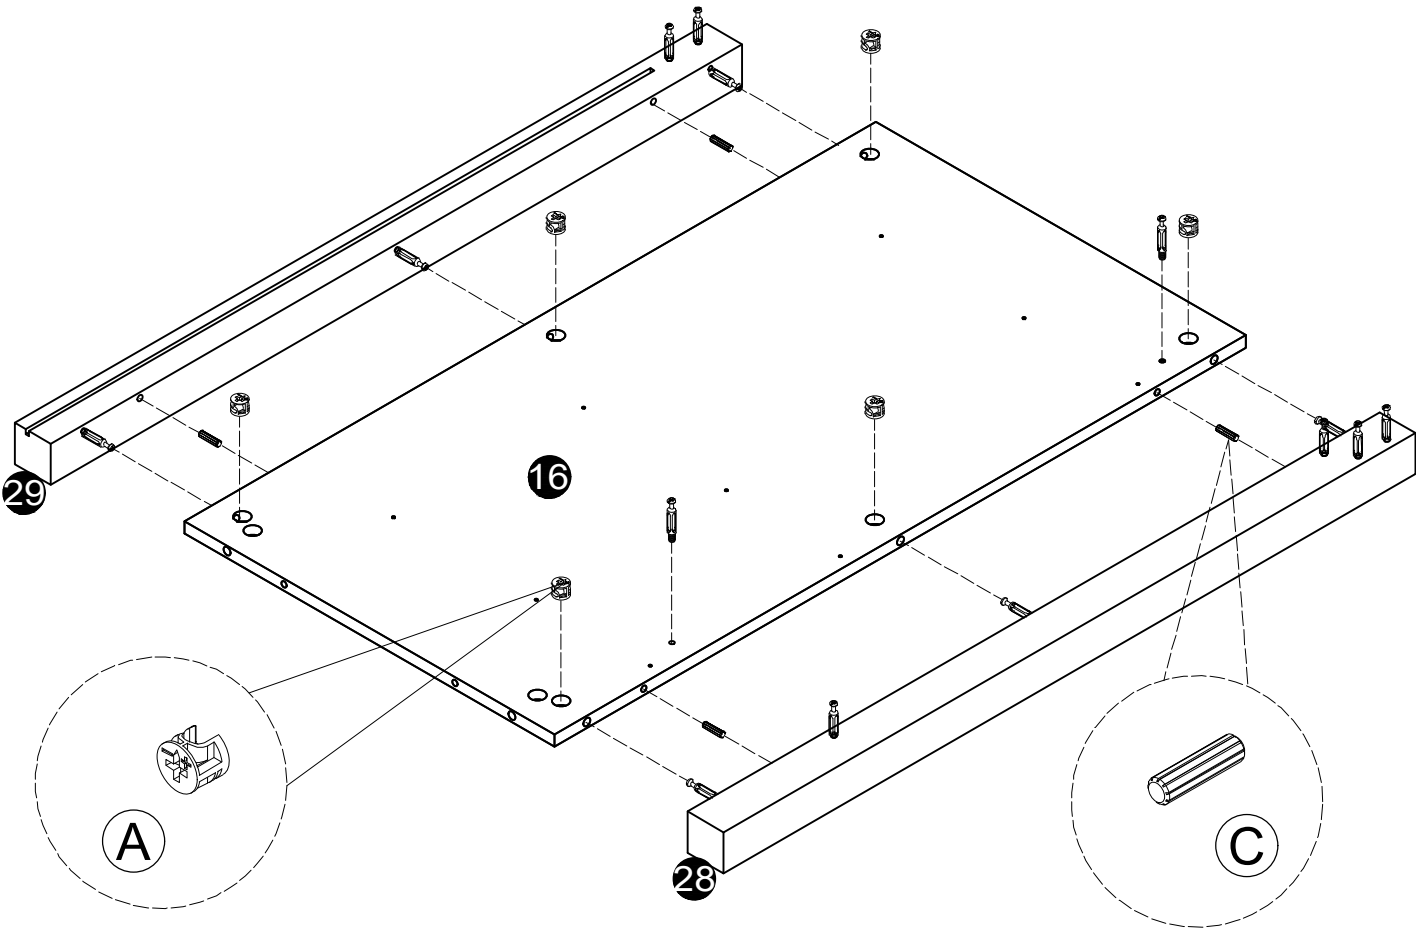
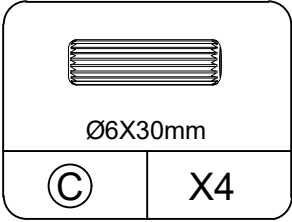
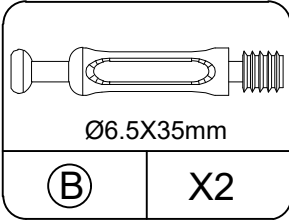
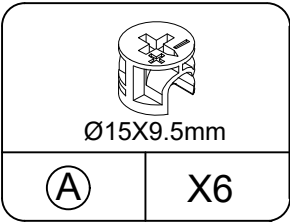
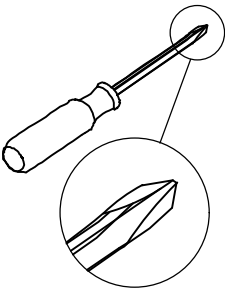


Proper orientation of CAM LOCK


STEP15

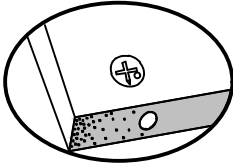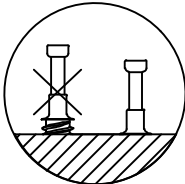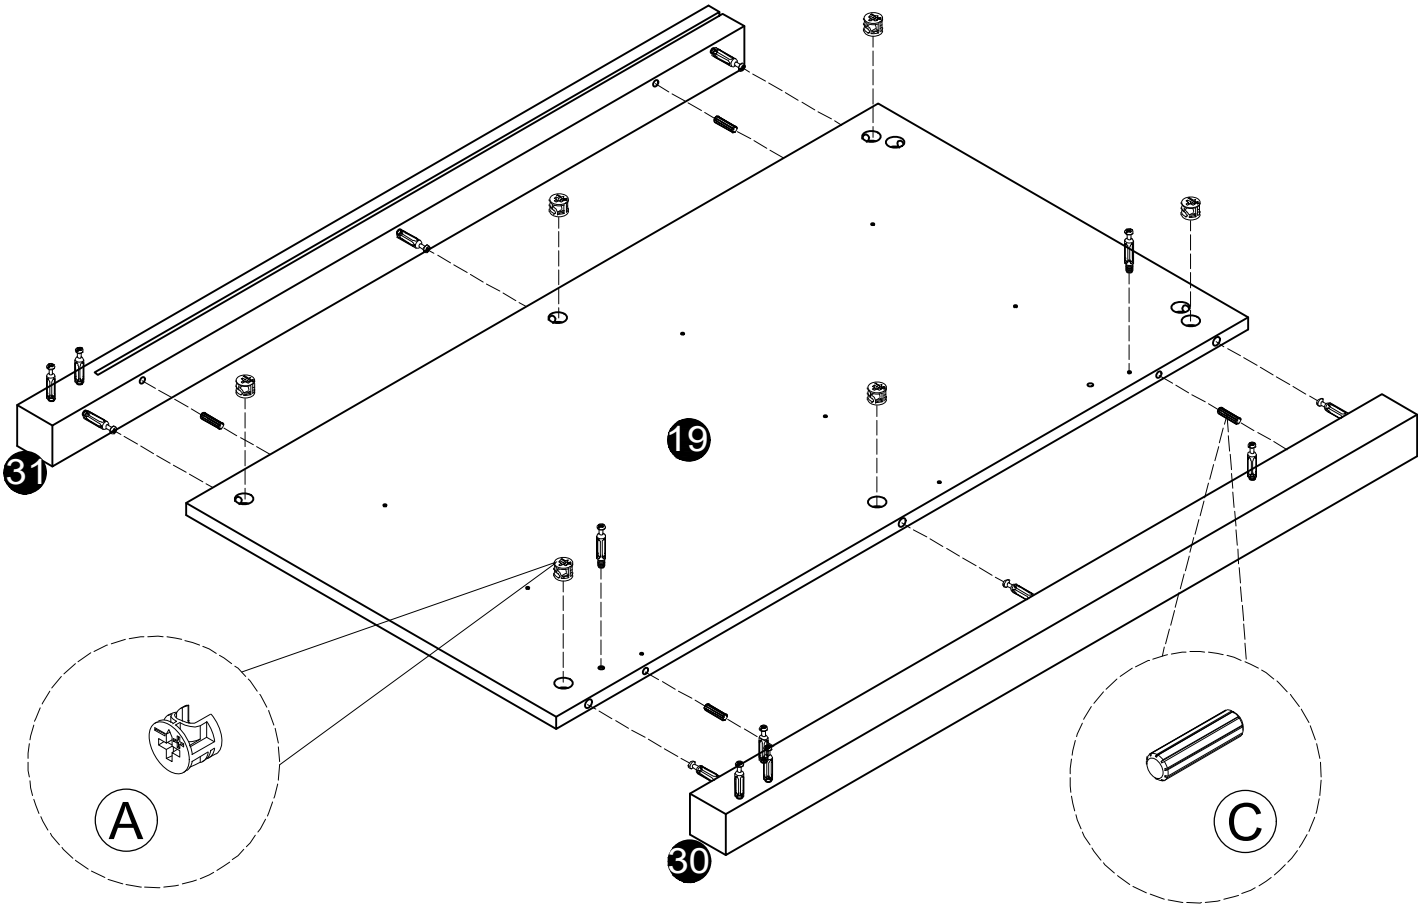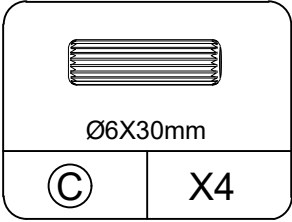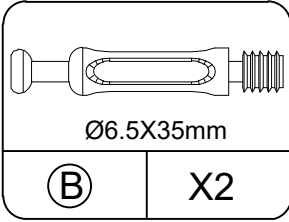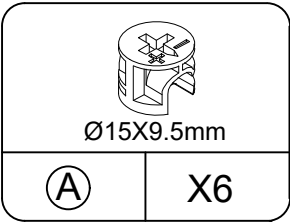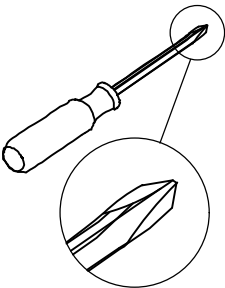


STEP16

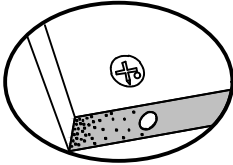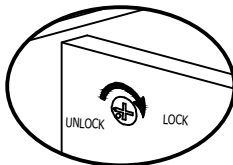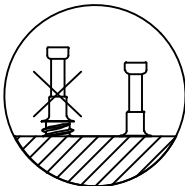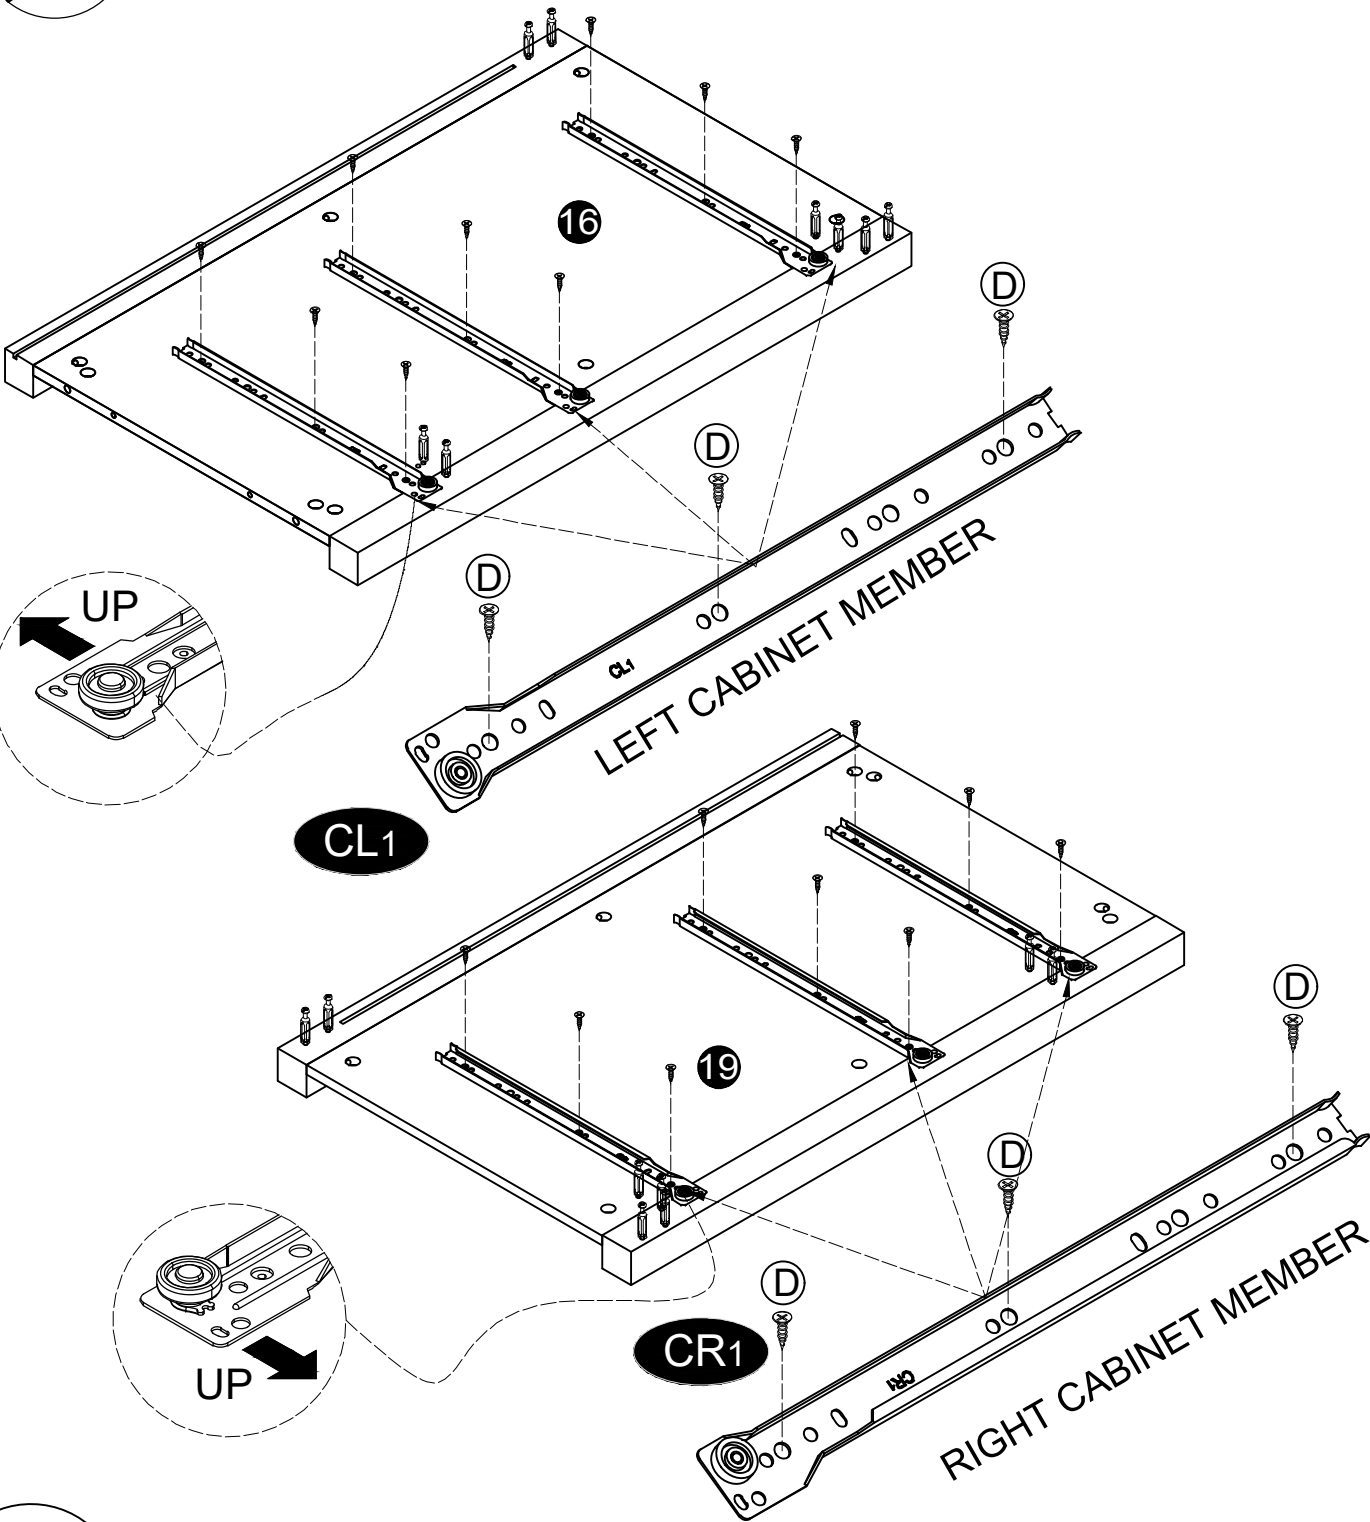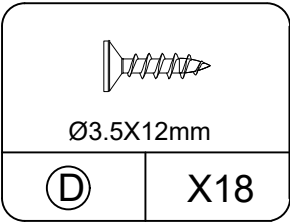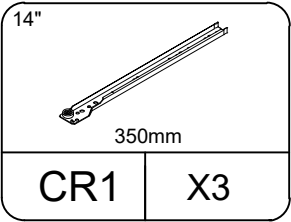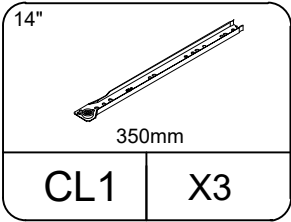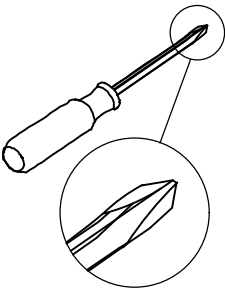



STEP17

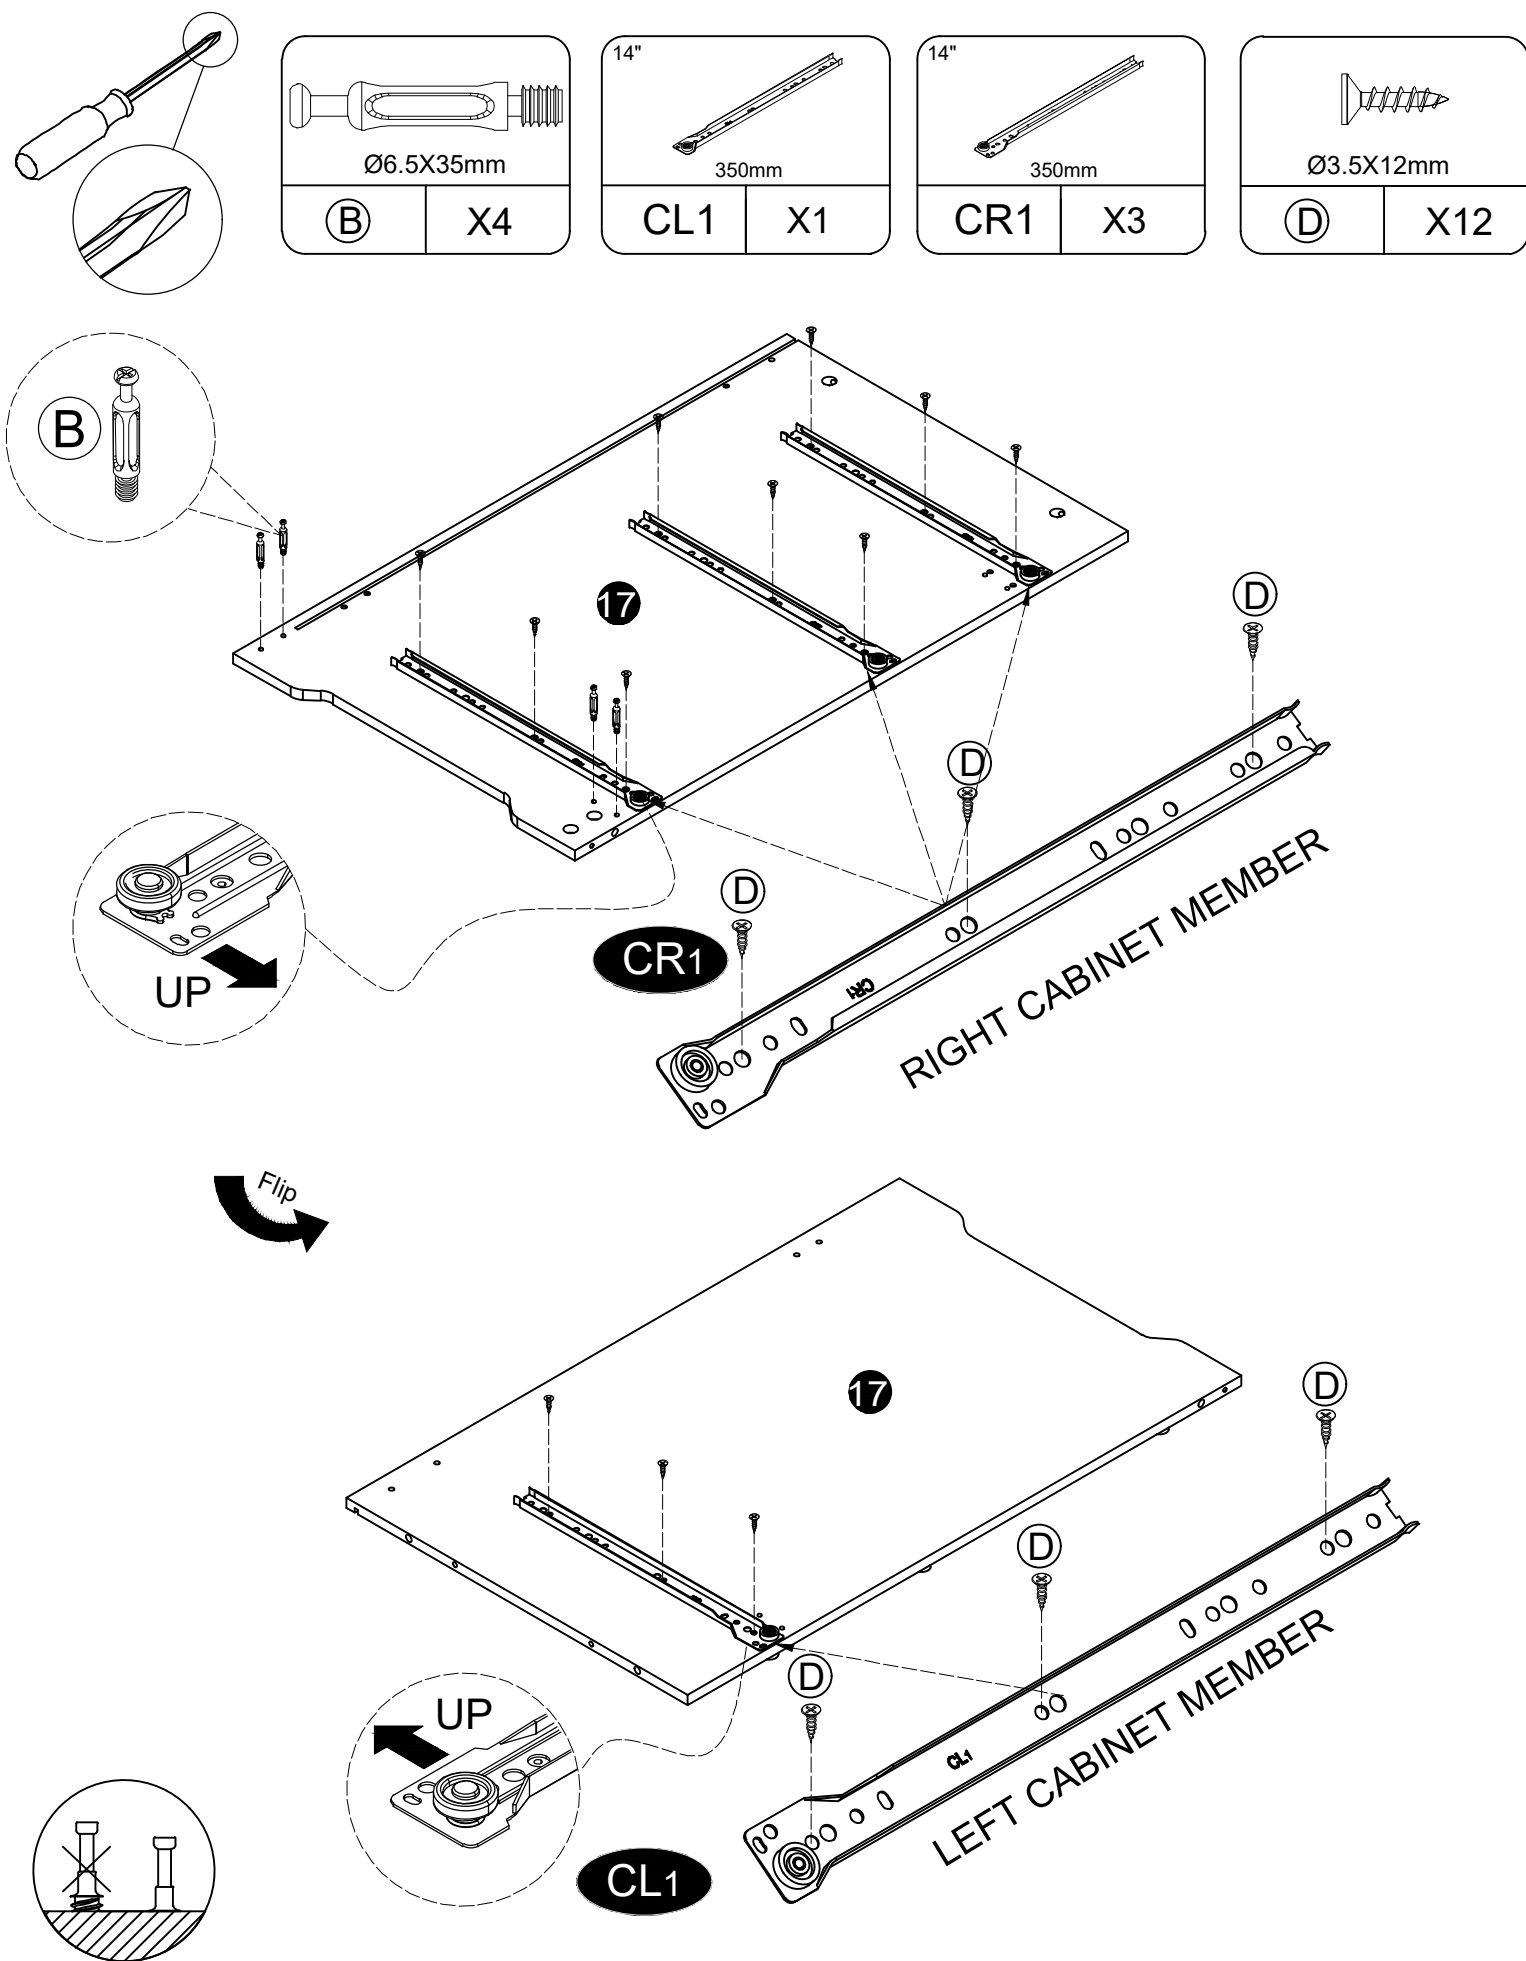



STEP18

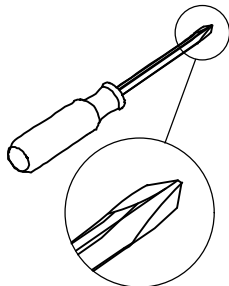


 Ø6.5X35mm	
(B)	X4











14"  350mm	
CL1	X3

14"  350mm	
CR1	X1








 Ø3.5X14mm	
(D)	X12

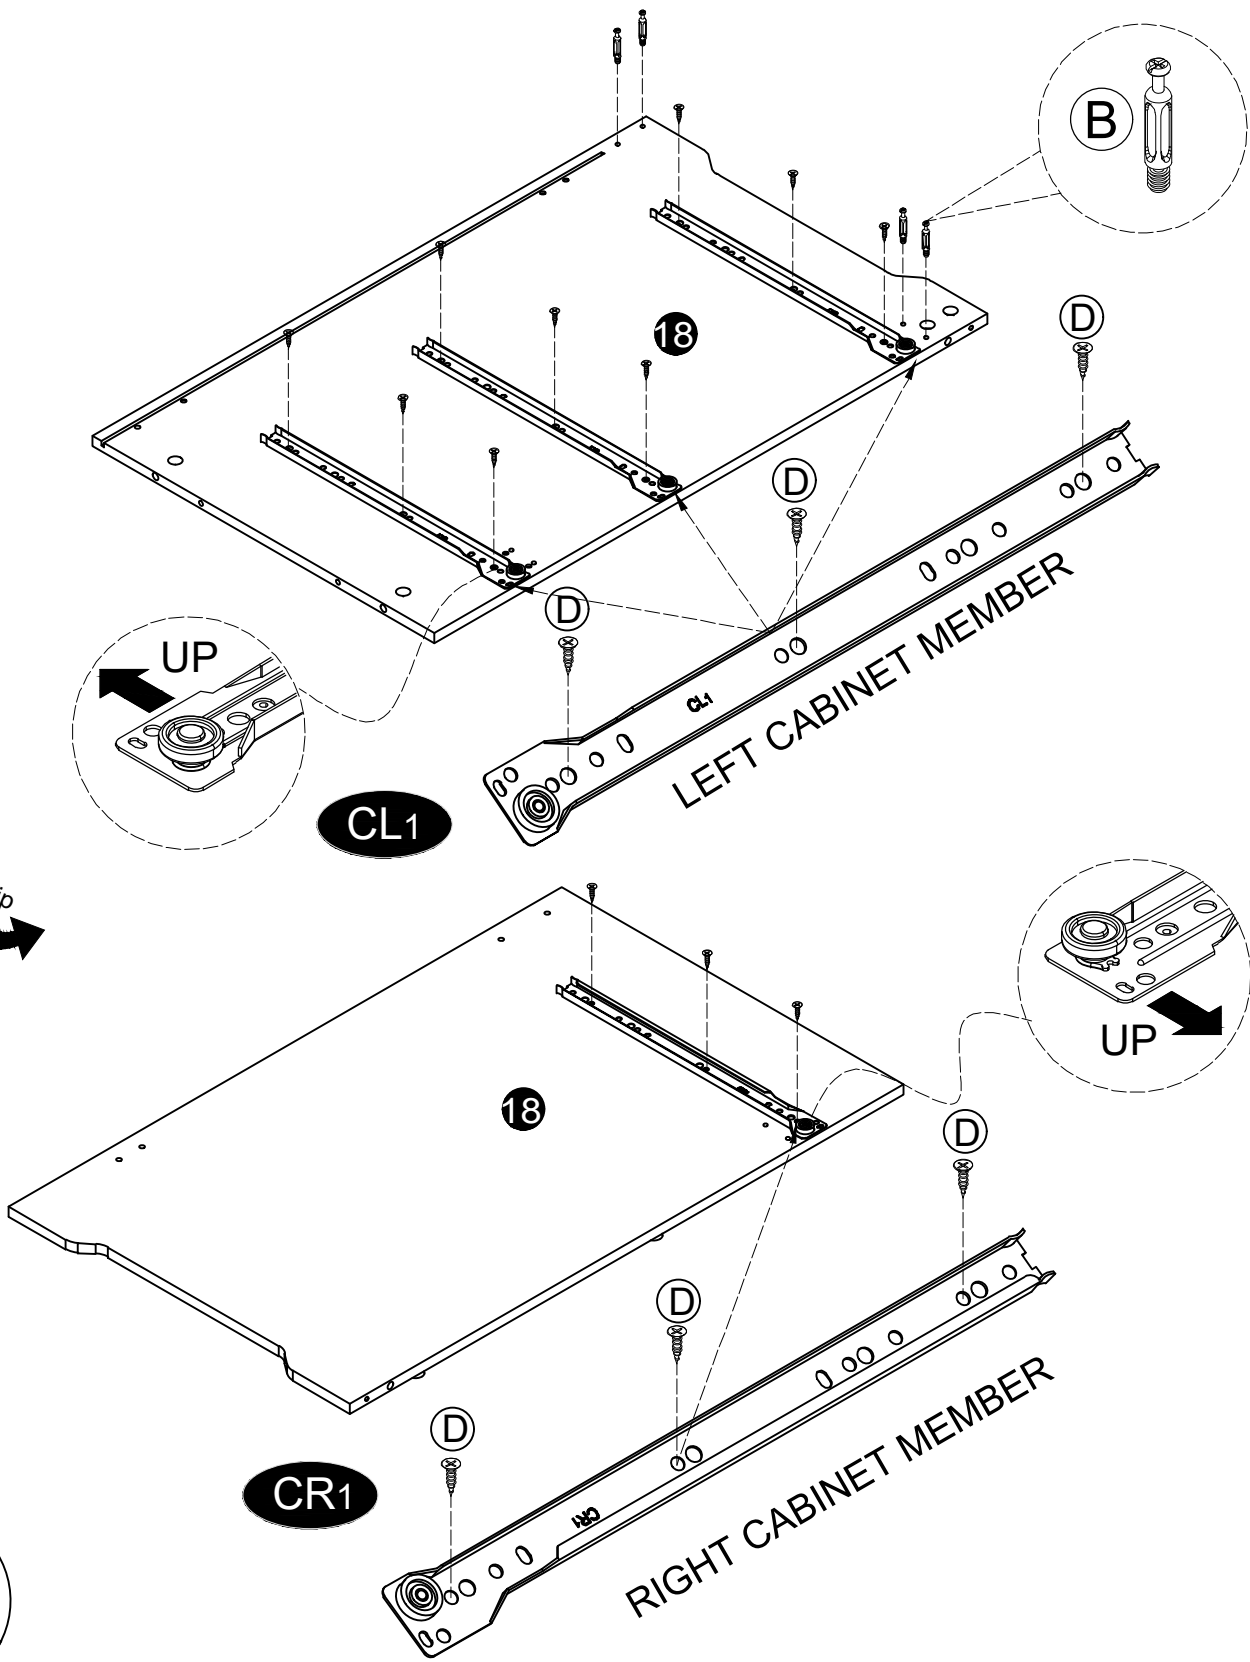



STEP19

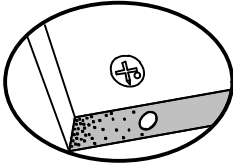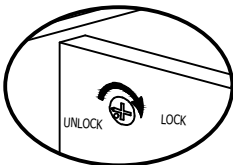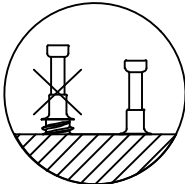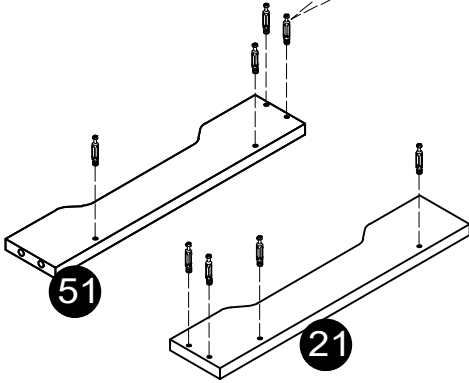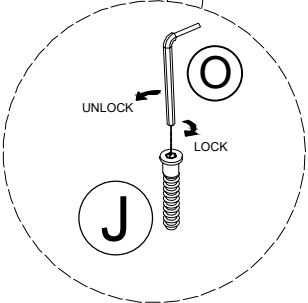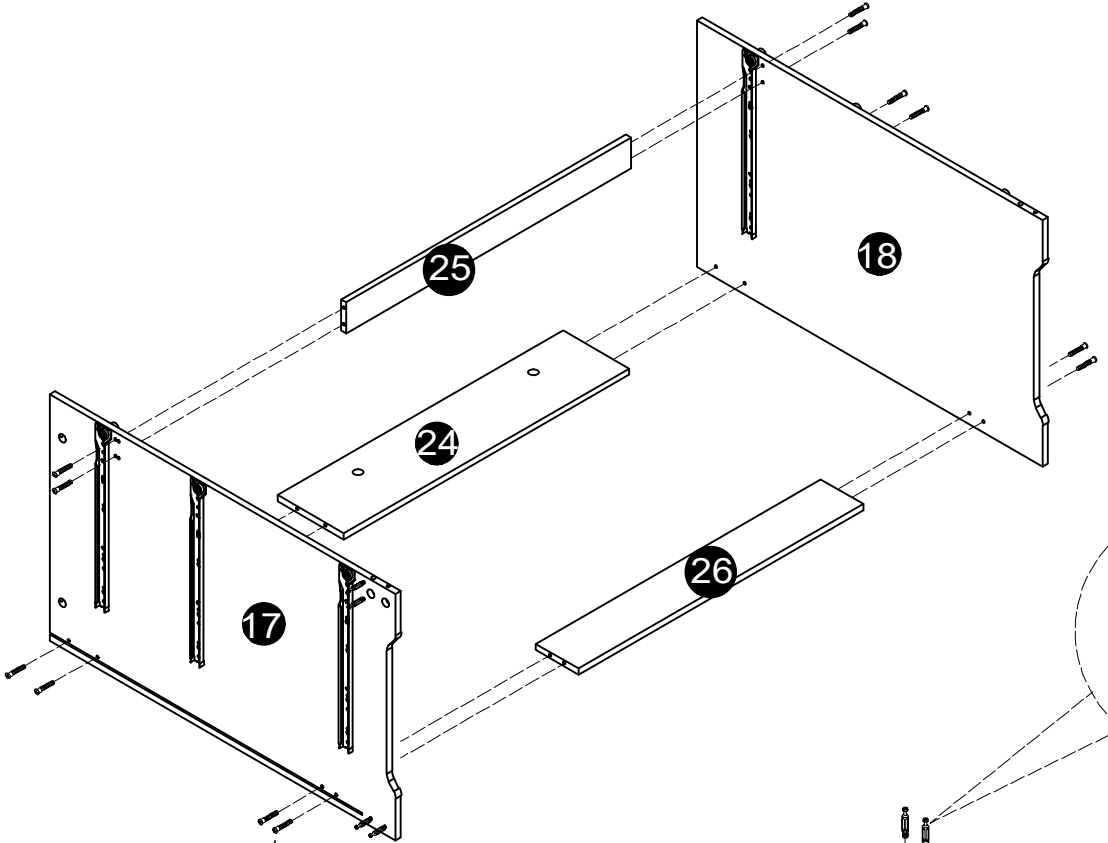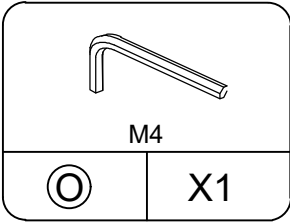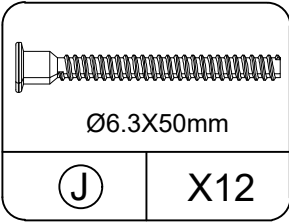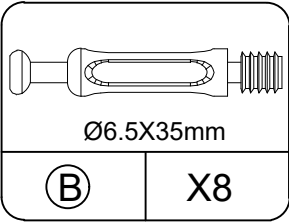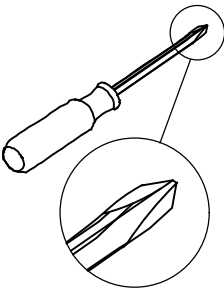

STEP20

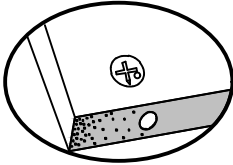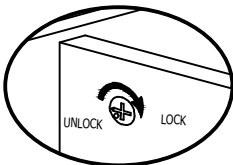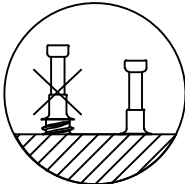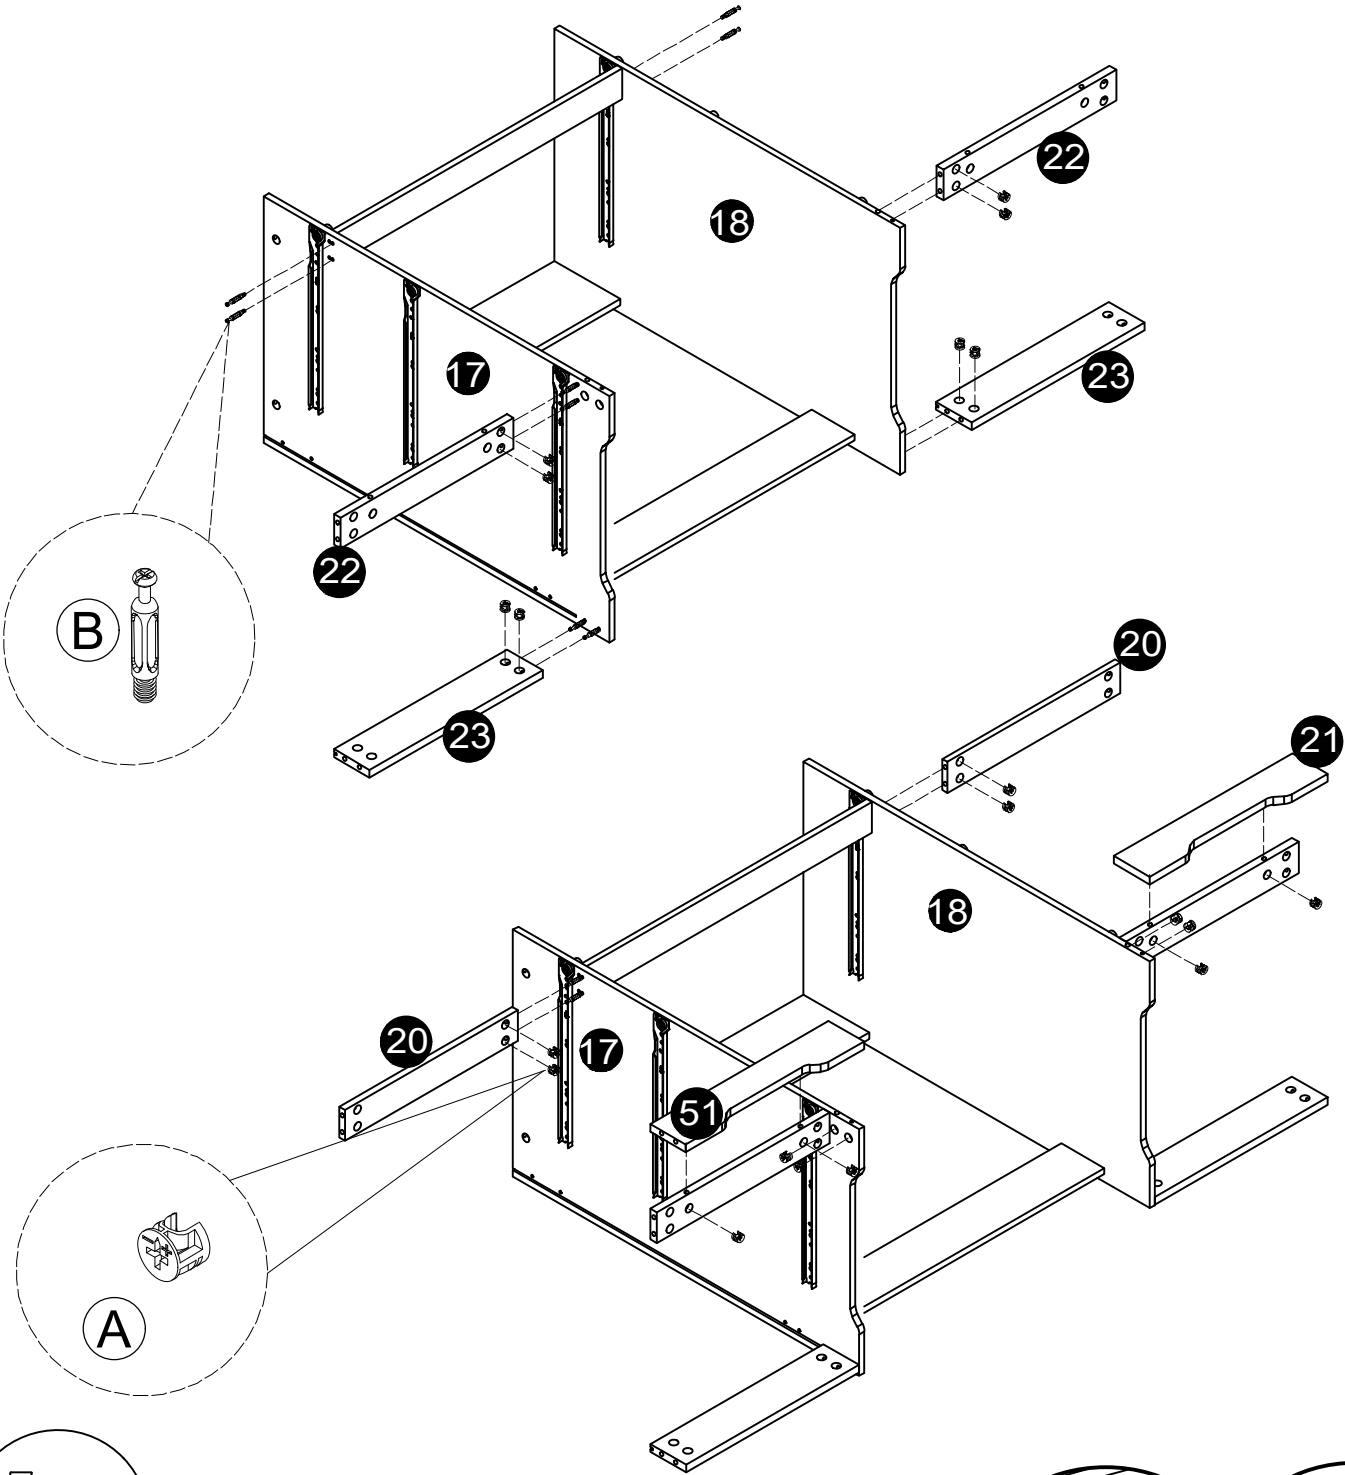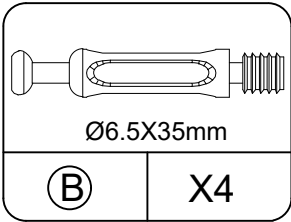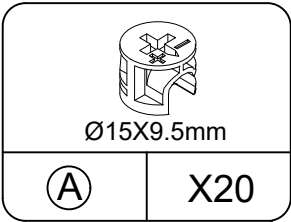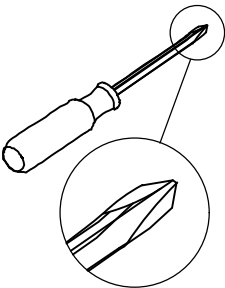


STEP21

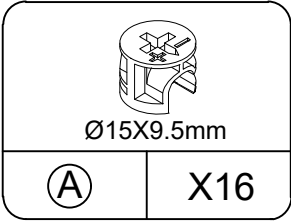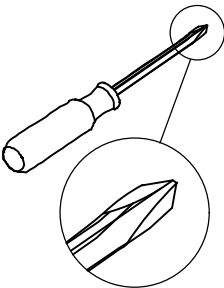

Ø15X9.5mm


A

X16

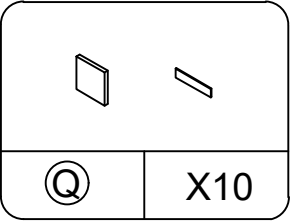


Q

X10




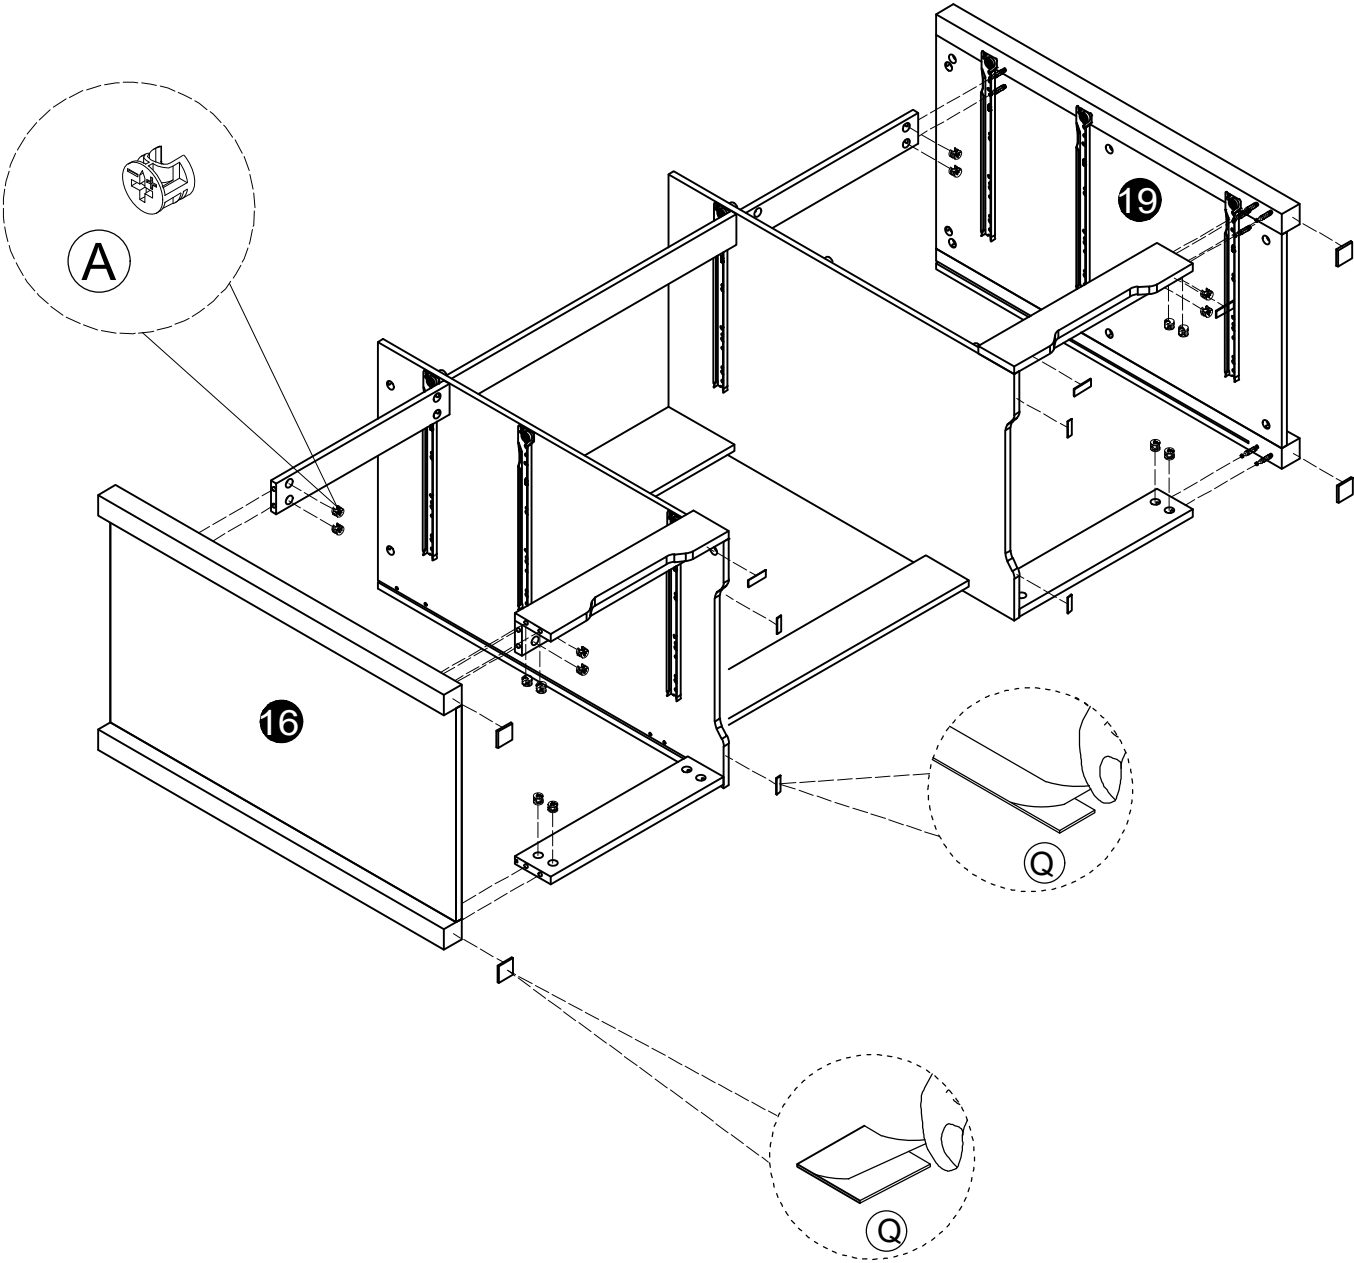


Tear off the protective film on the back of the part Q and stick it to the bottom of the plate.








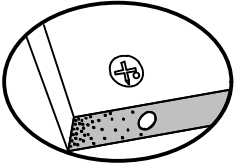


Proper orientation of CAM LOCK






STEP22

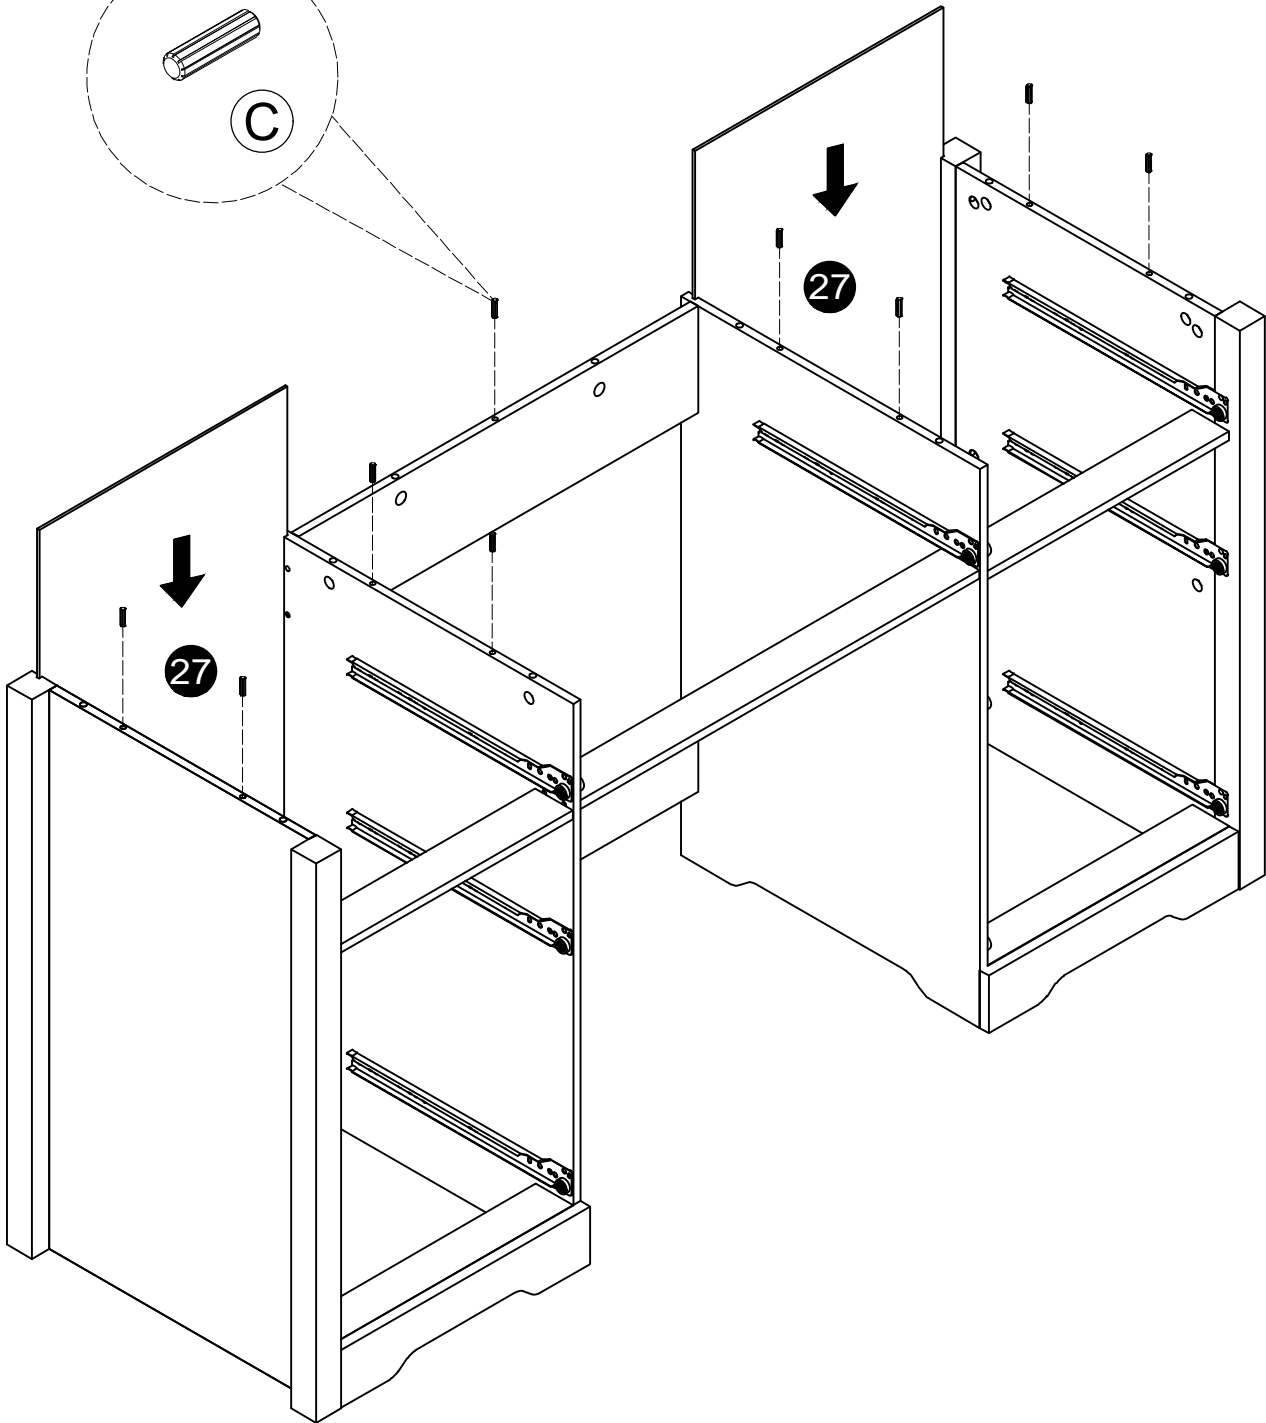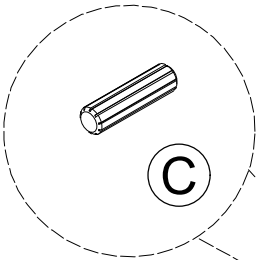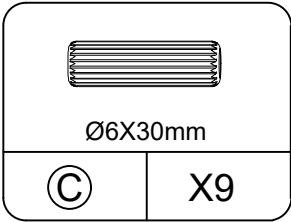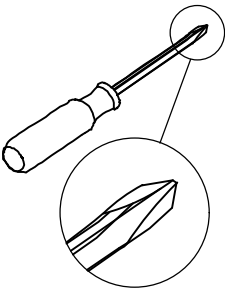







STEP23

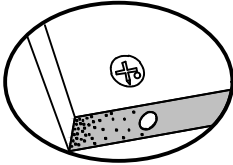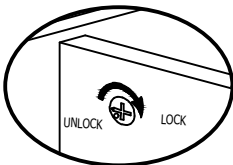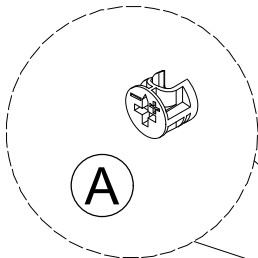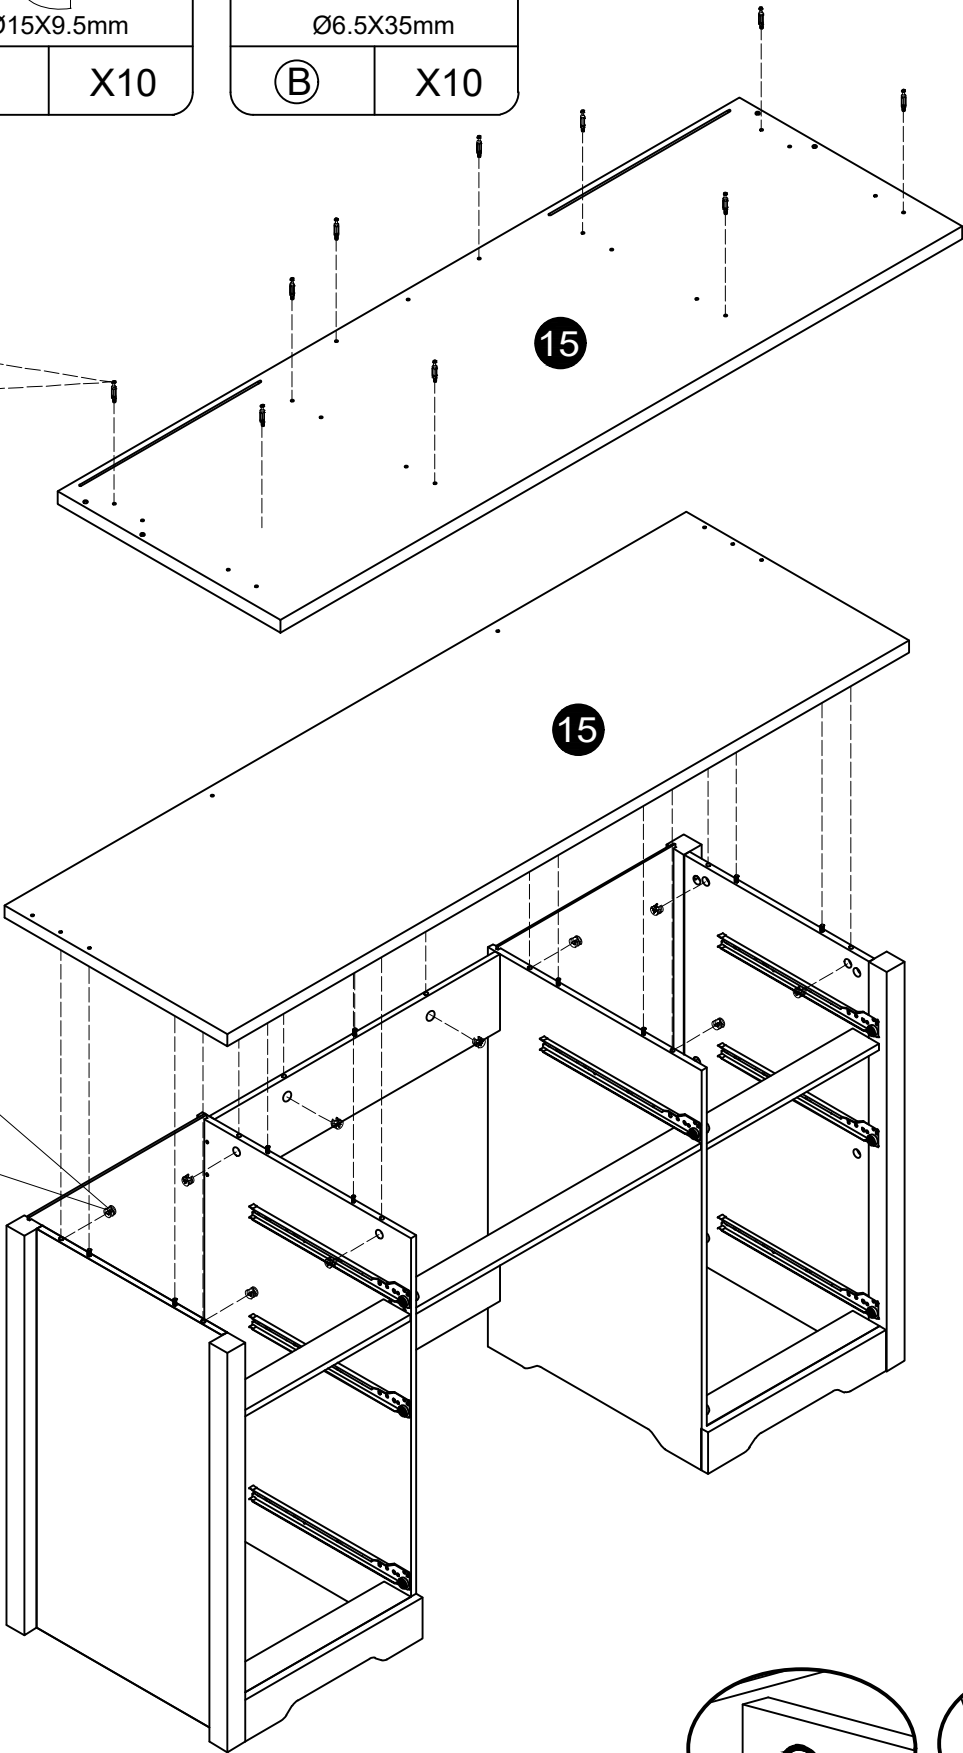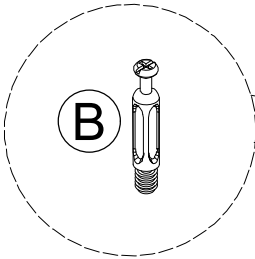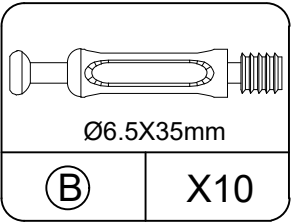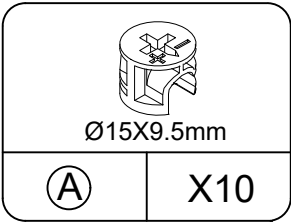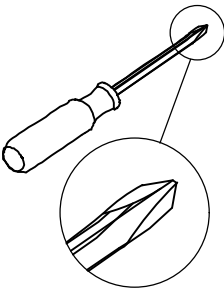










STEP24

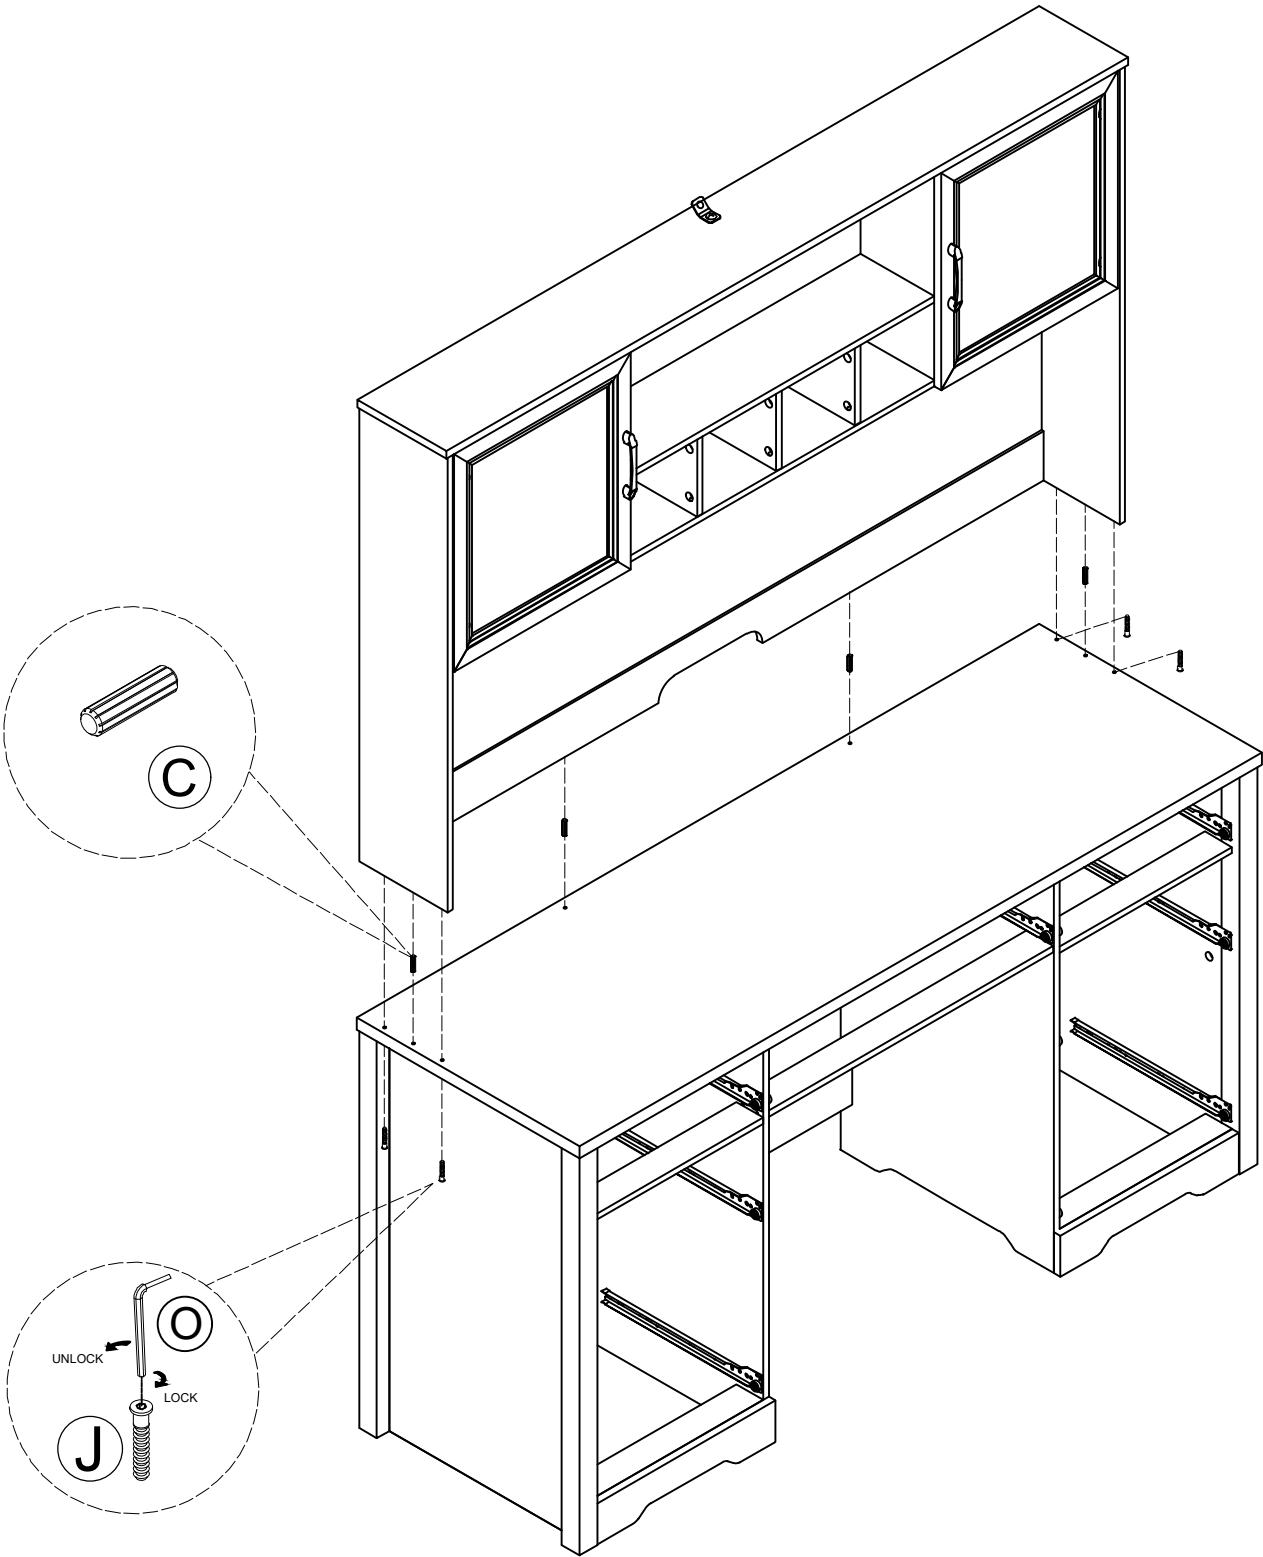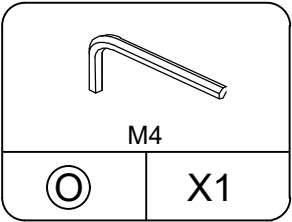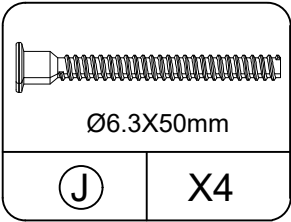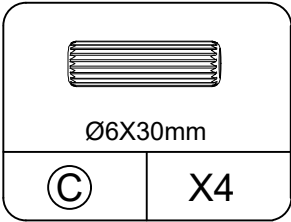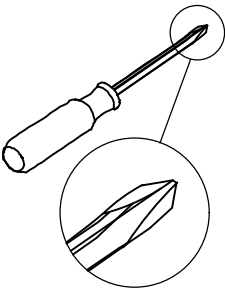










STEP25

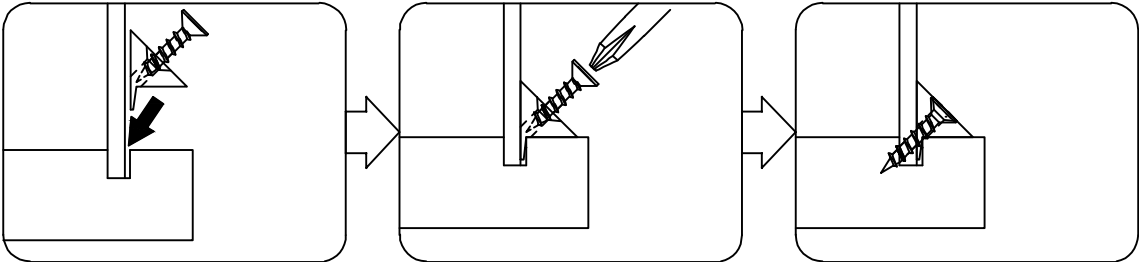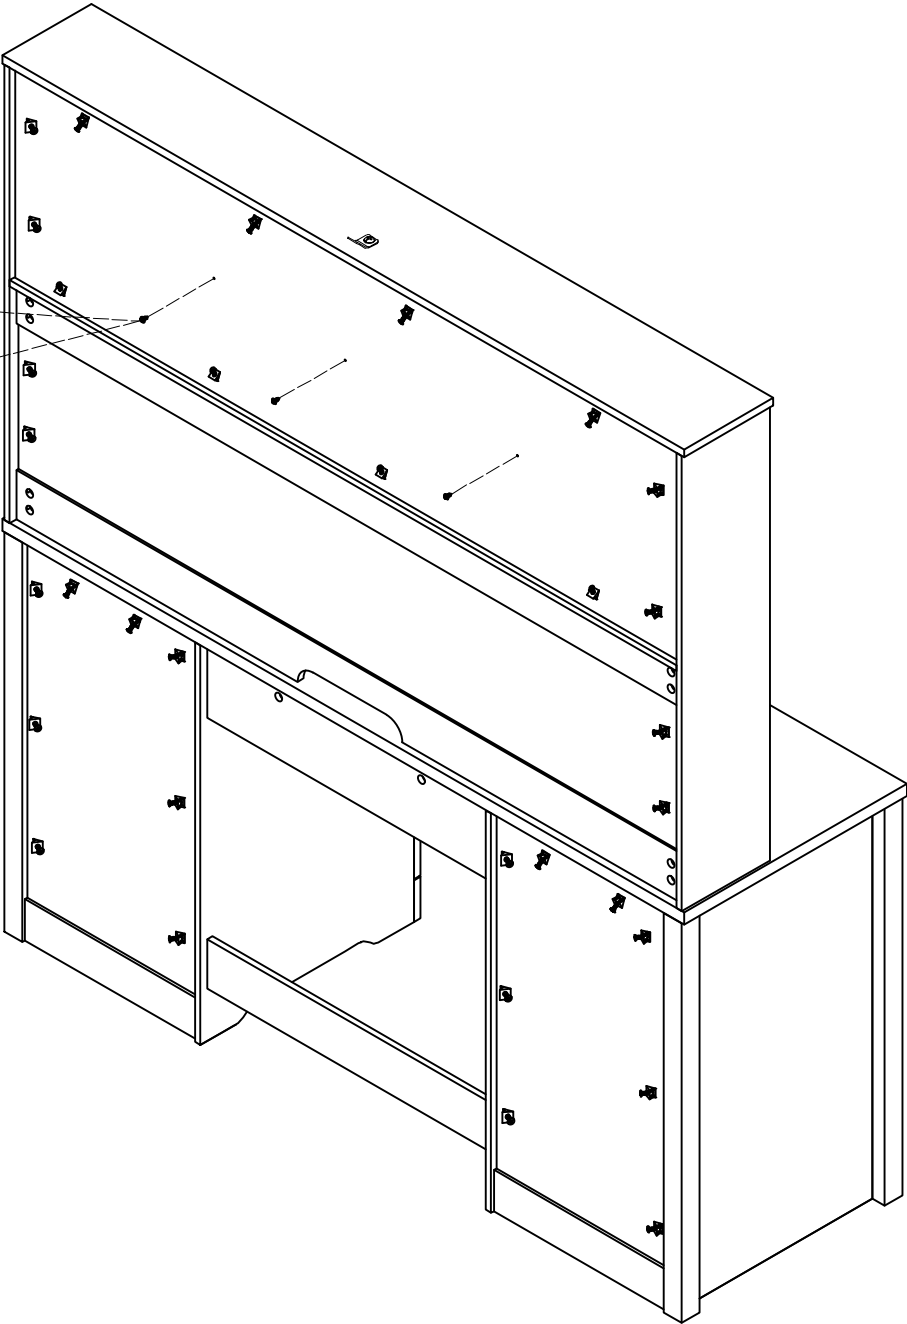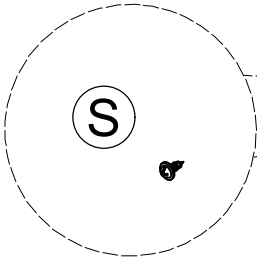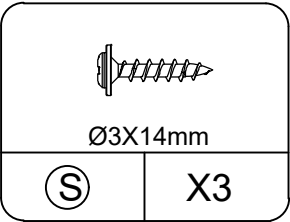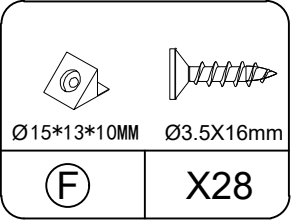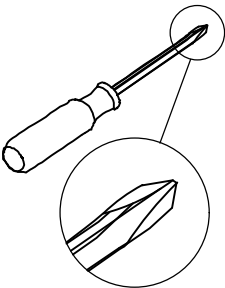












STEP26

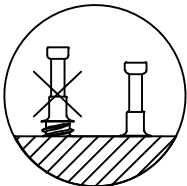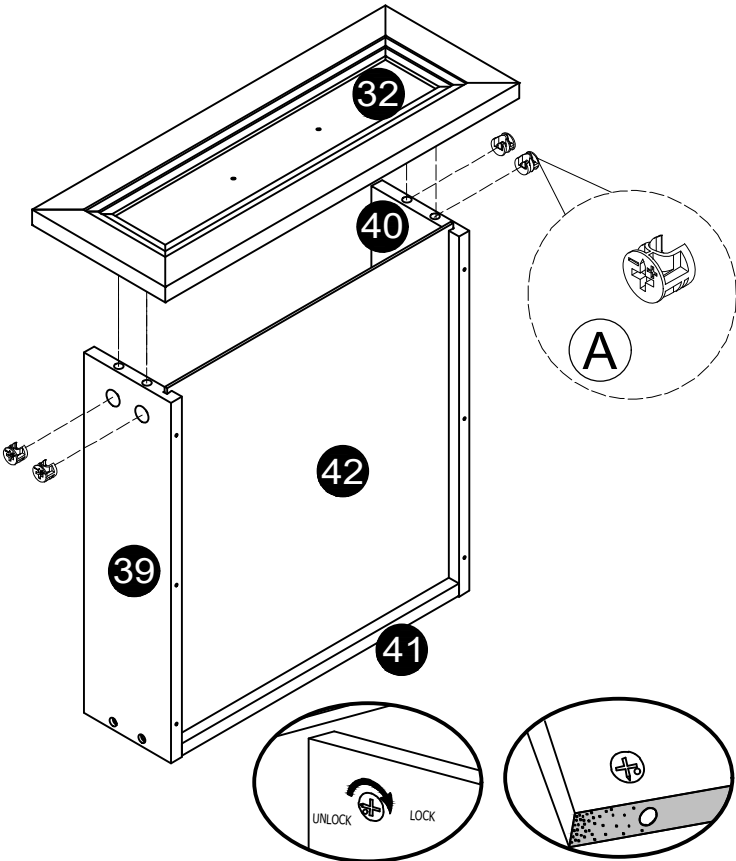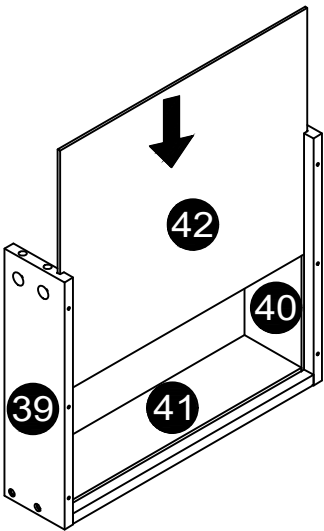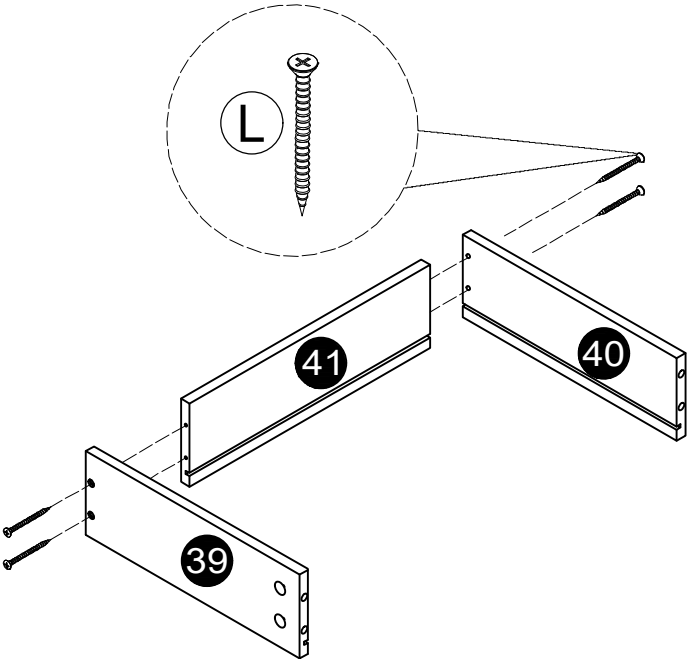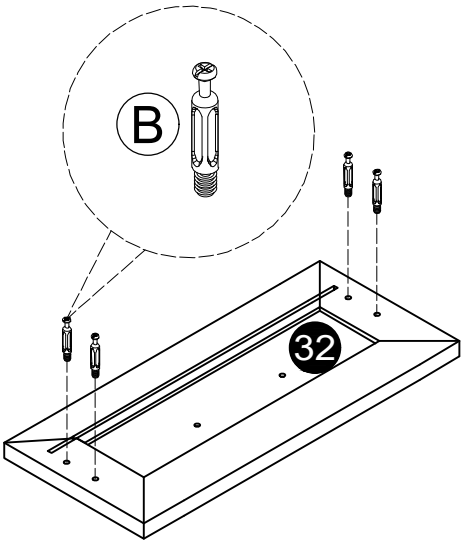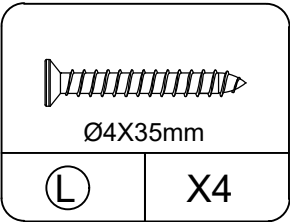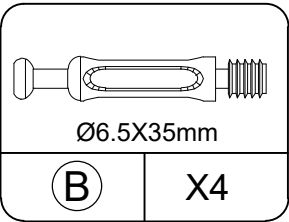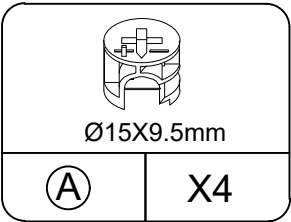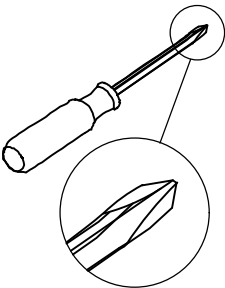










STEP27

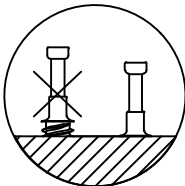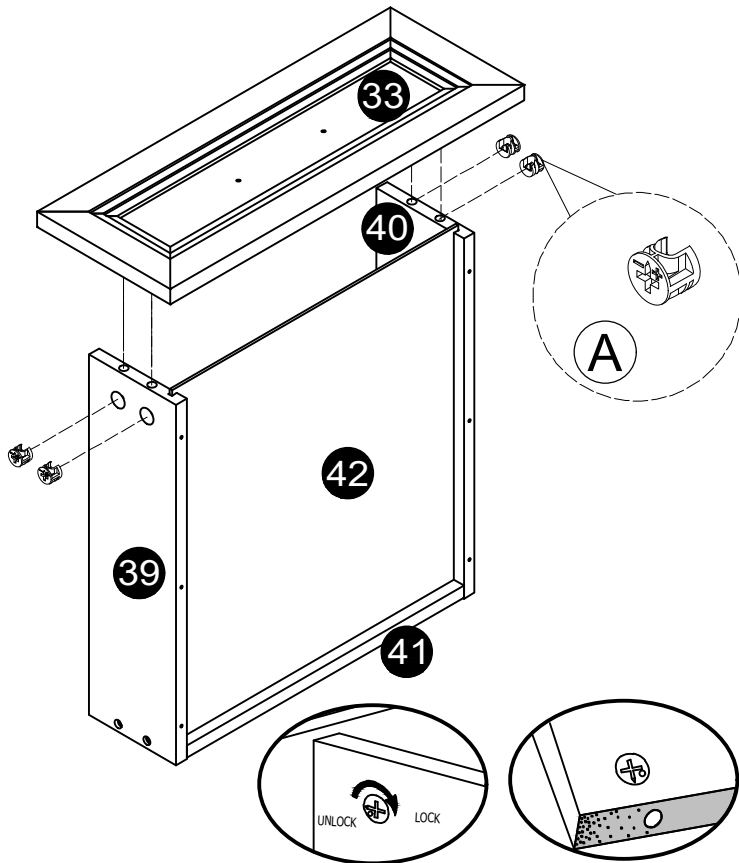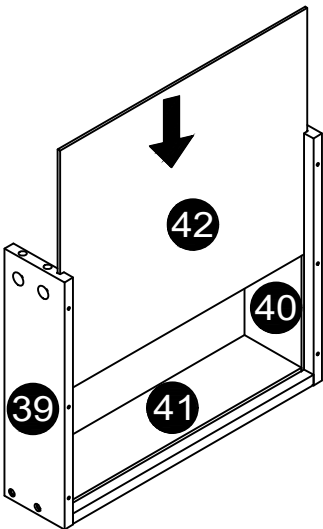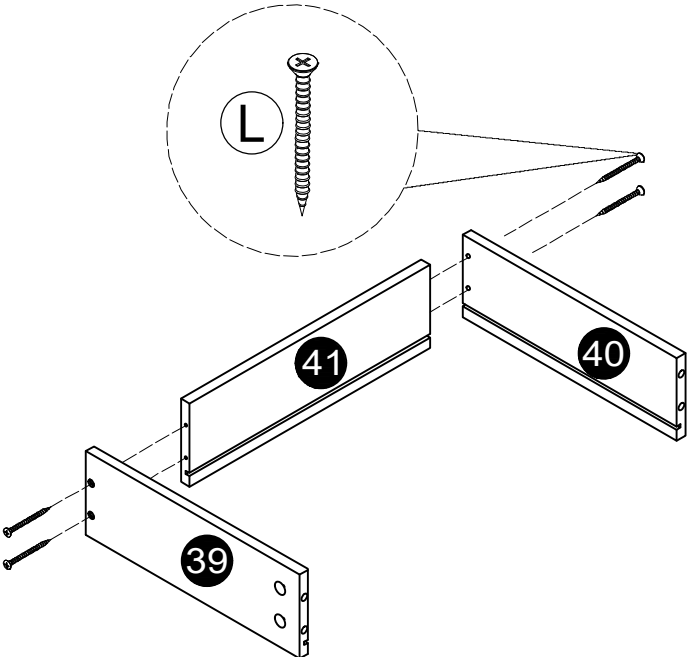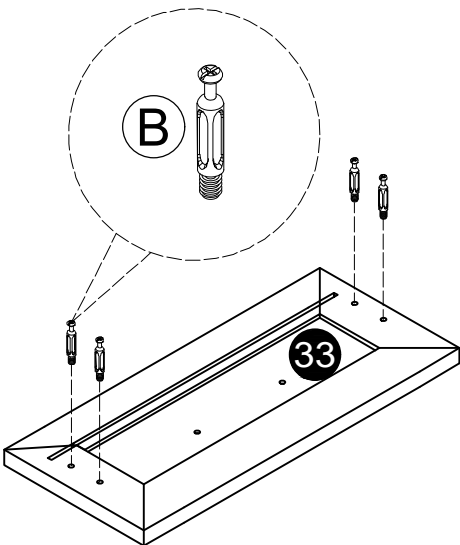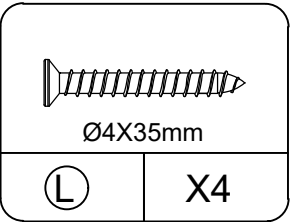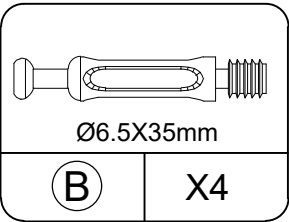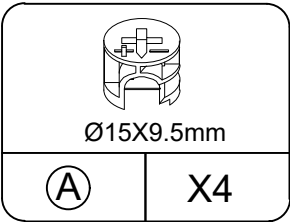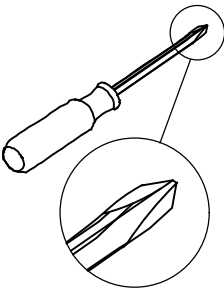












STEP28

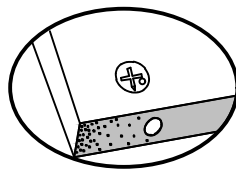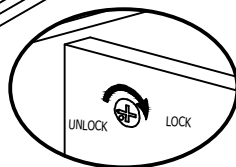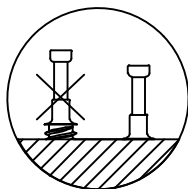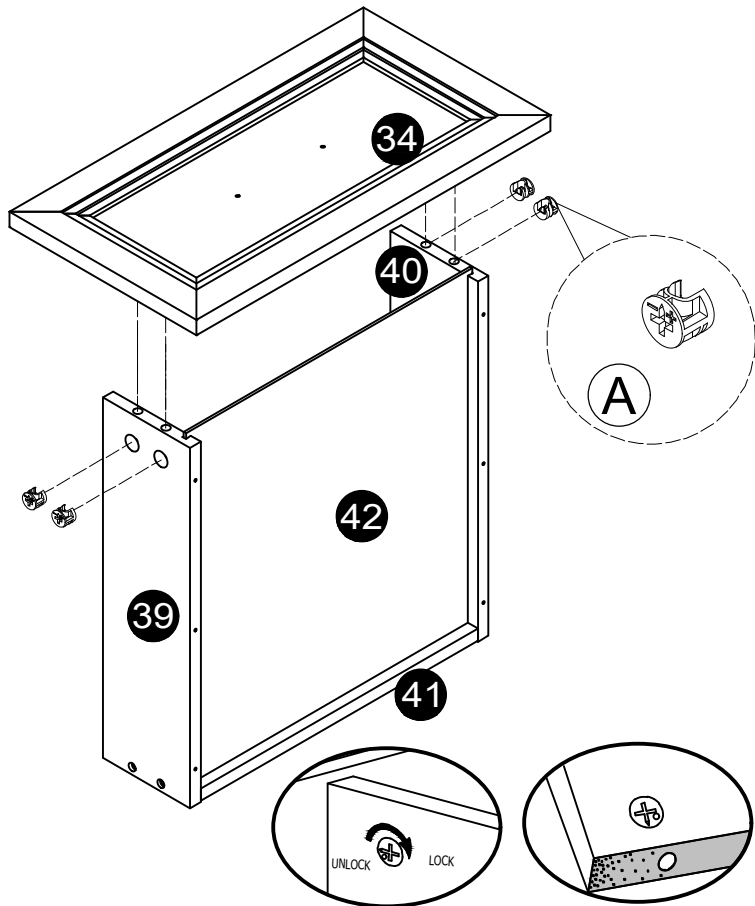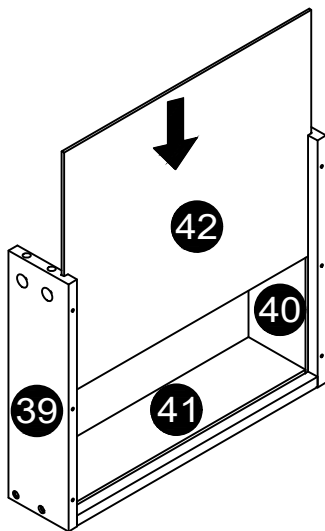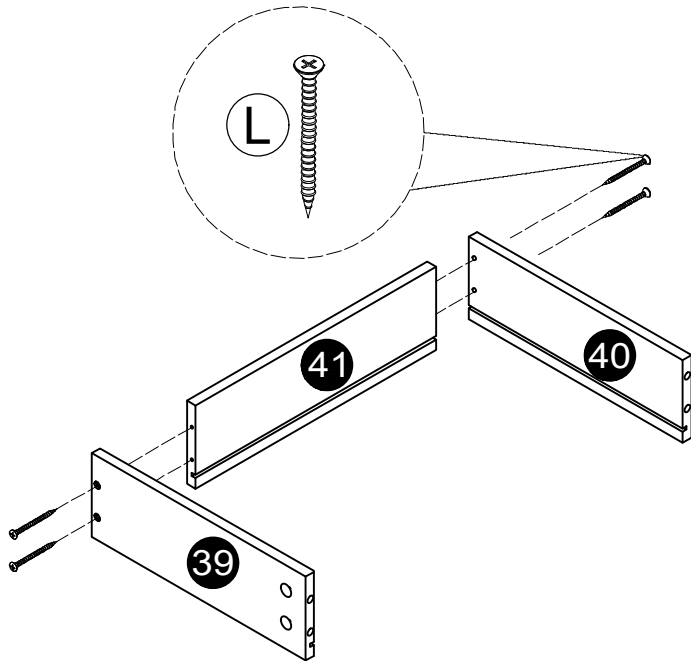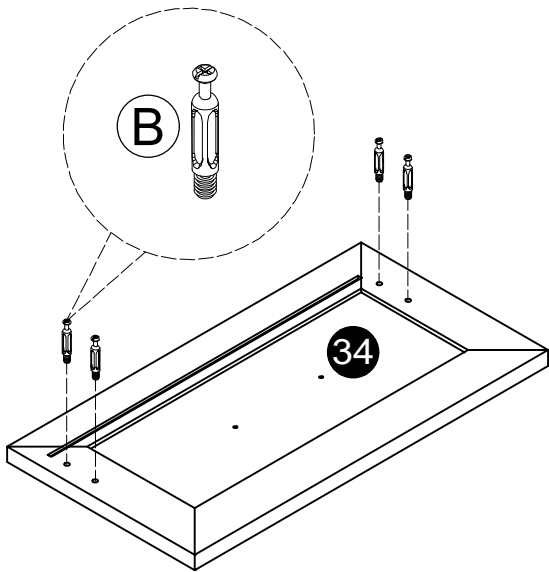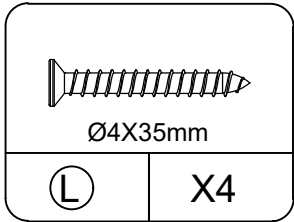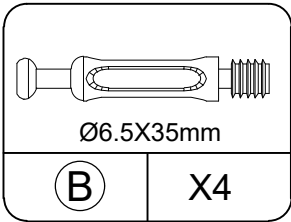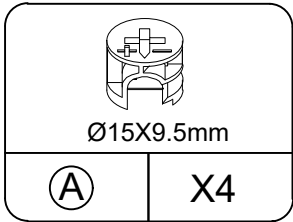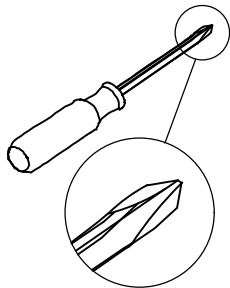













STEP 29

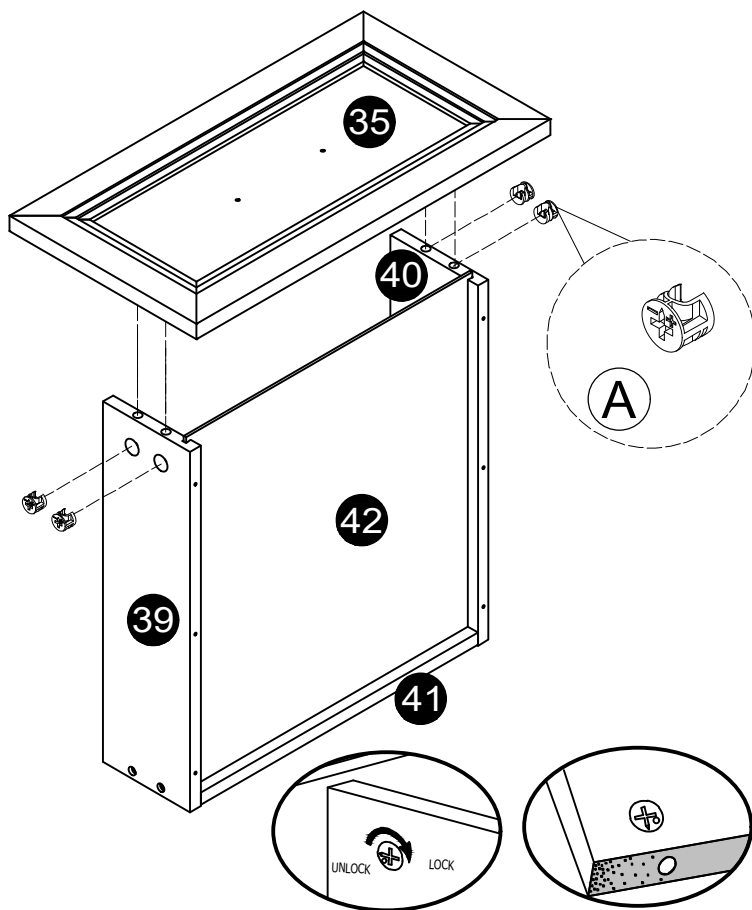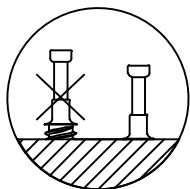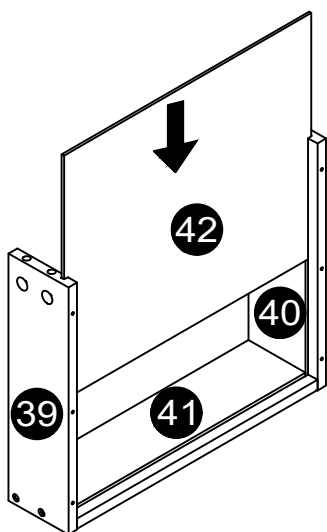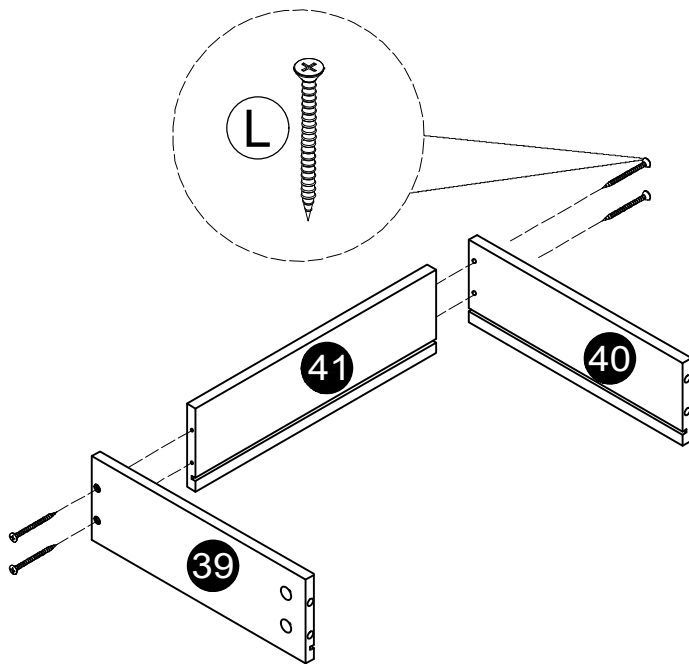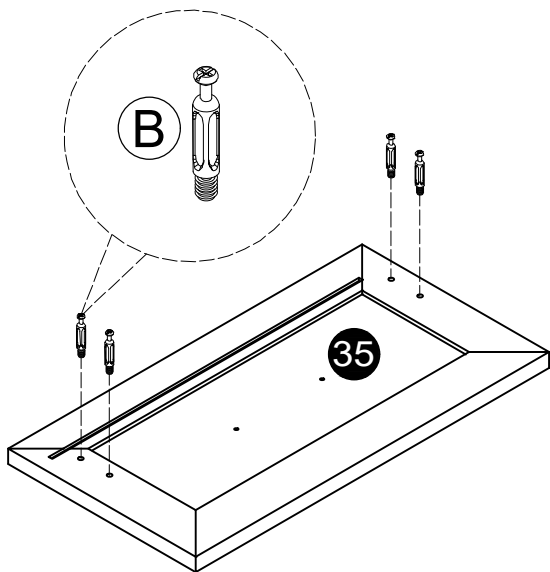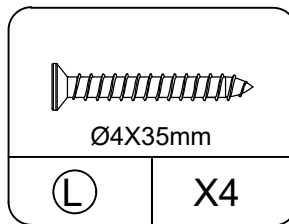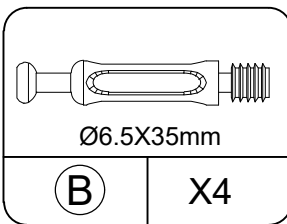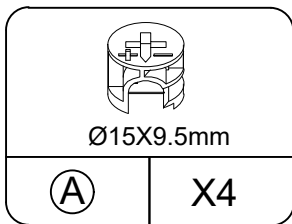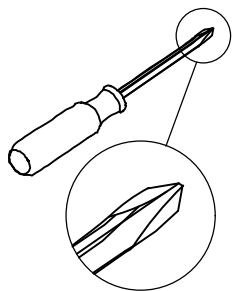














STEP30

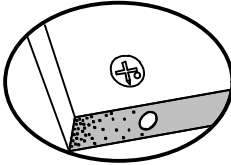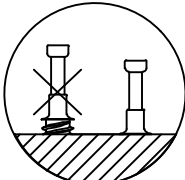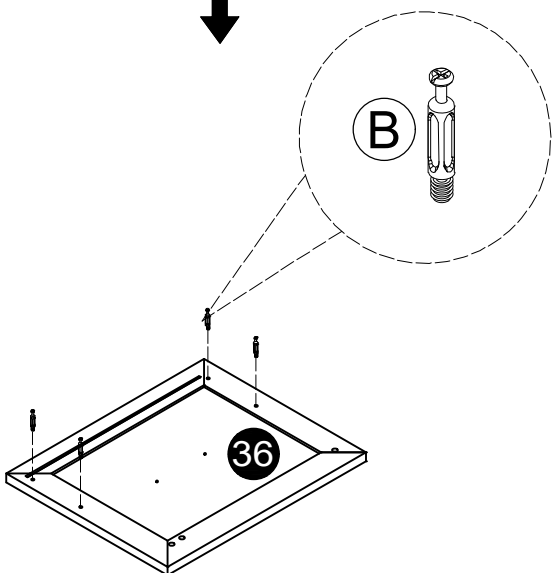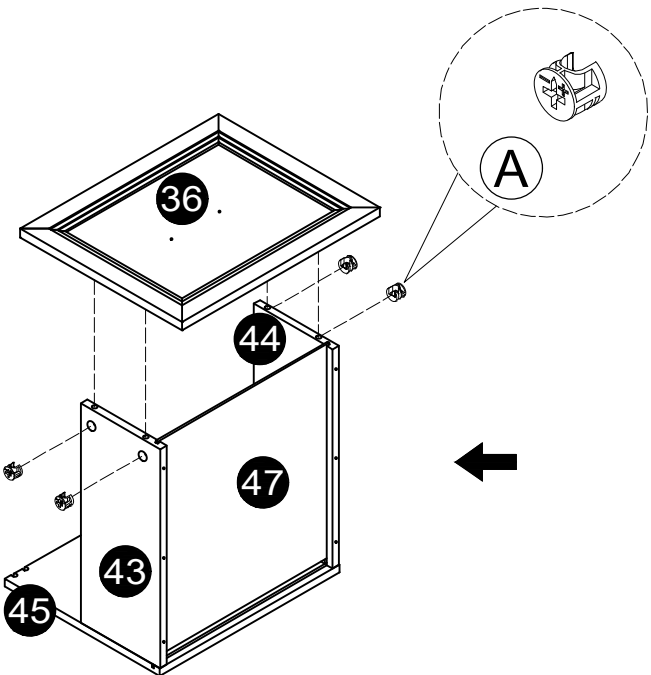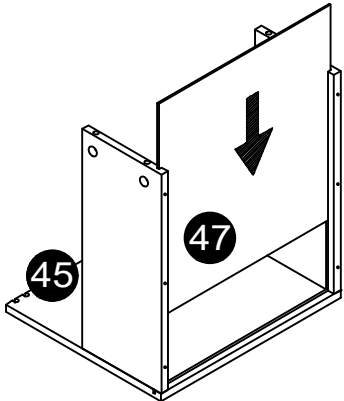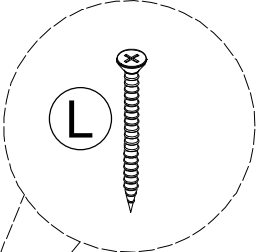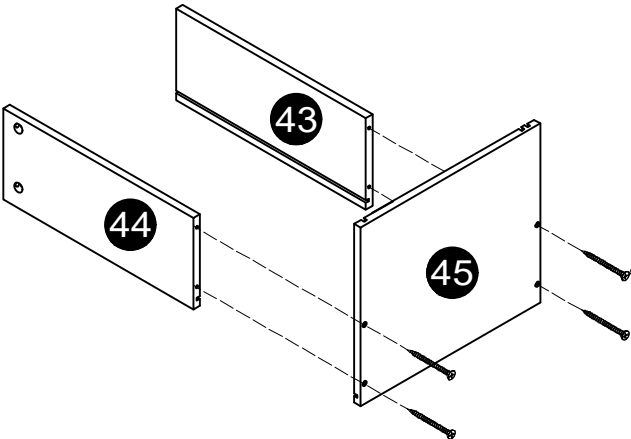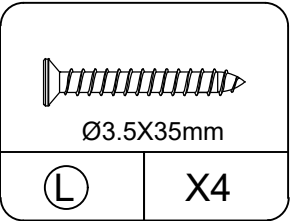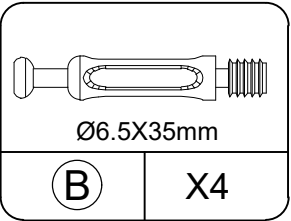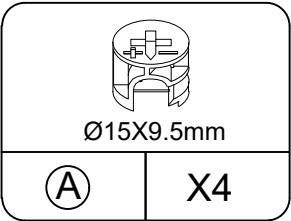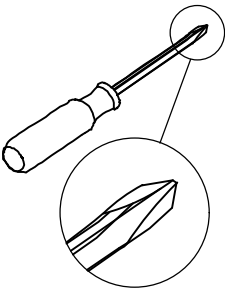






STEP31

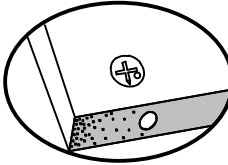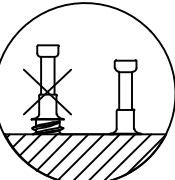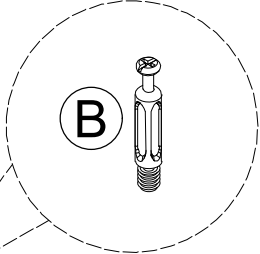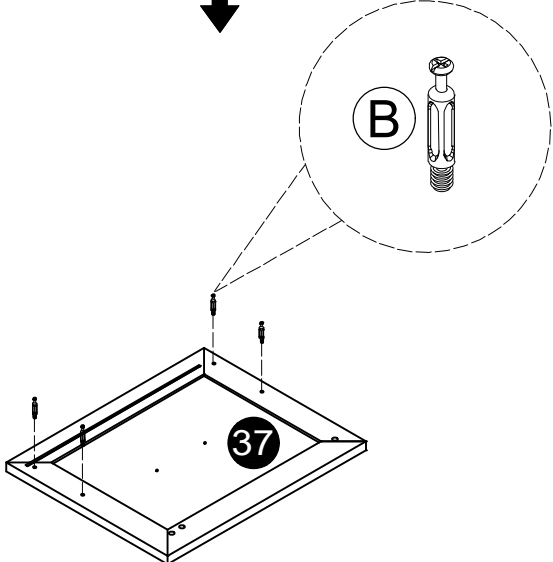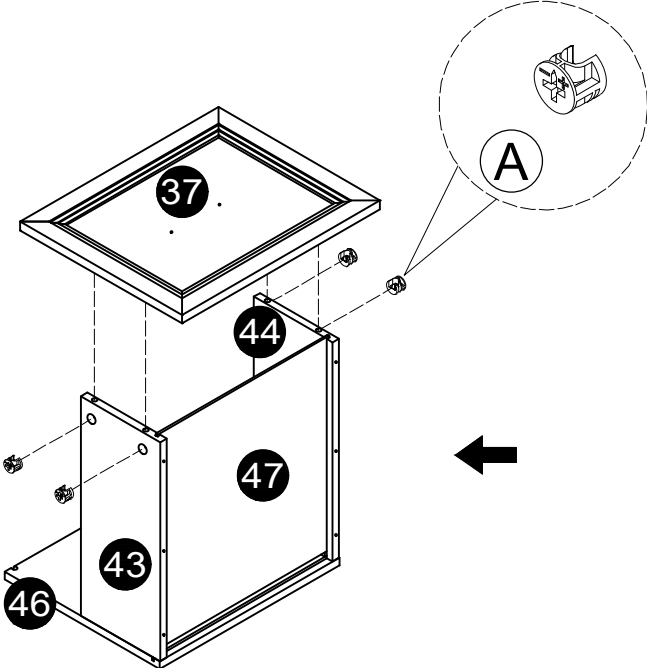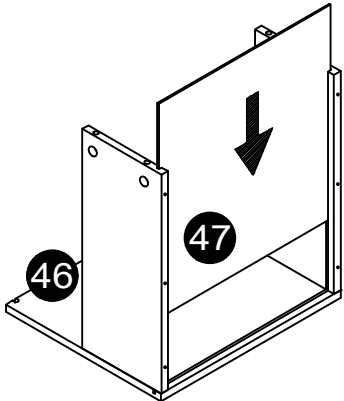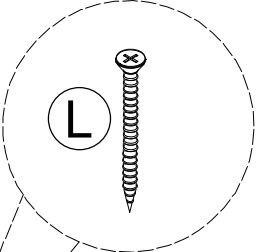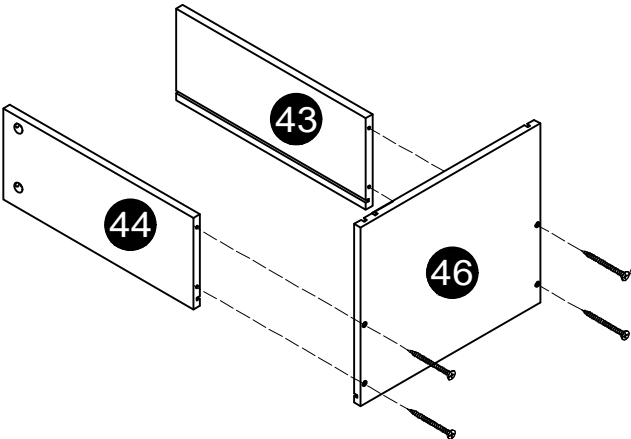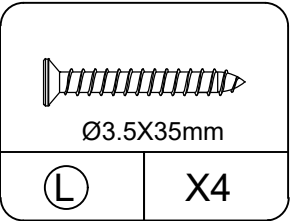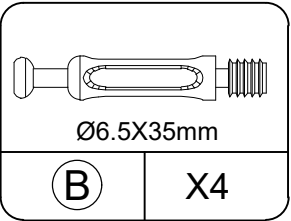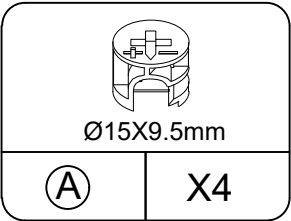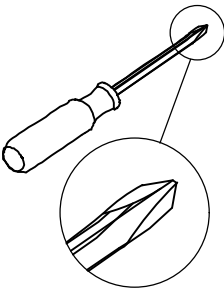



STEP32

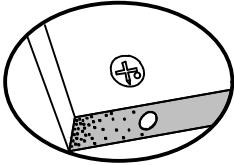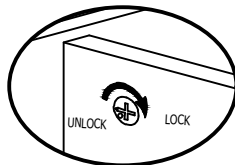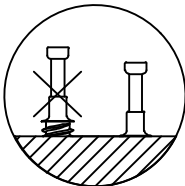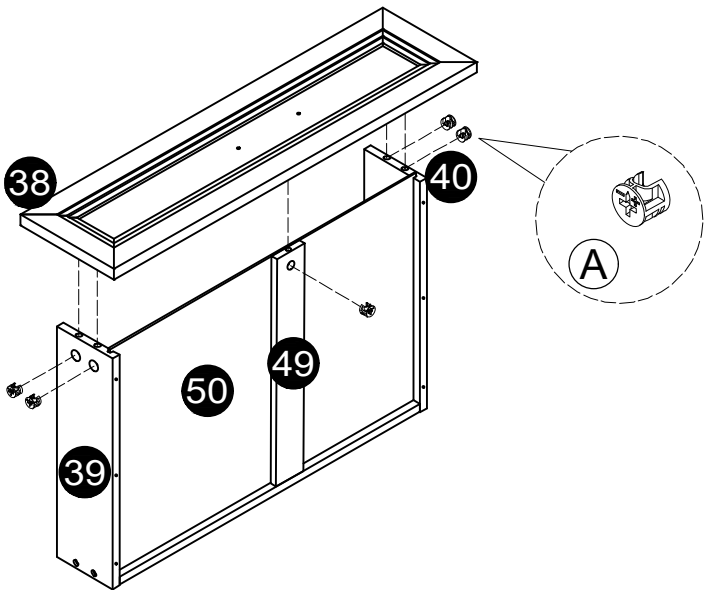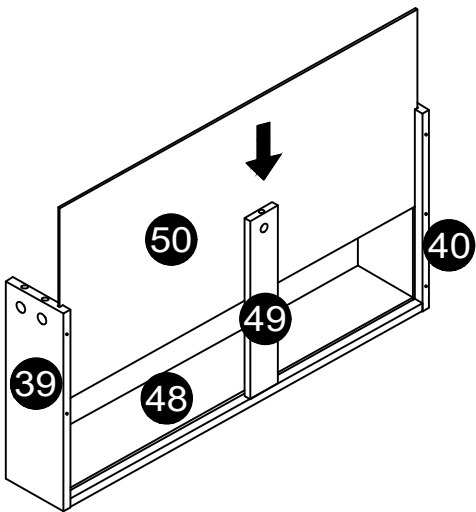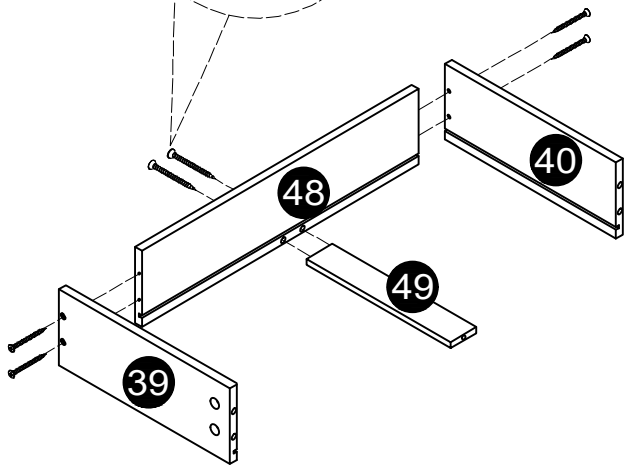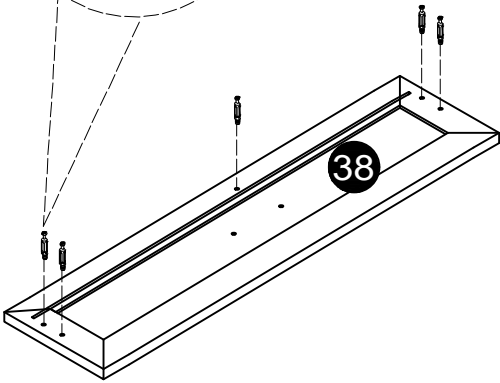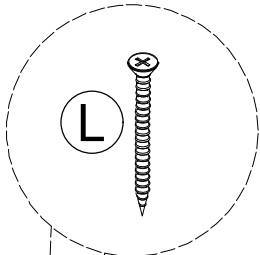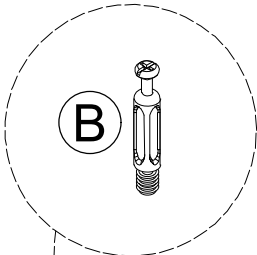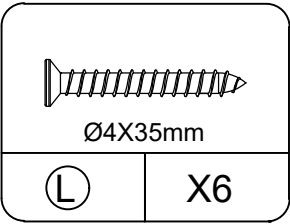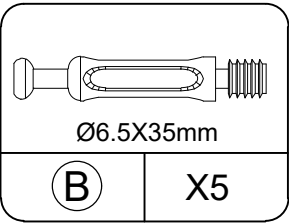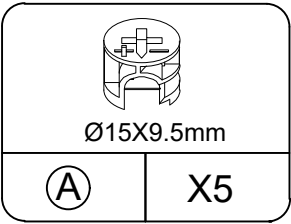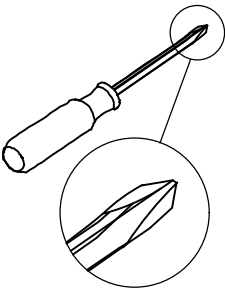






STEP33

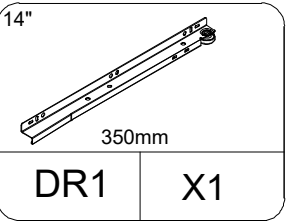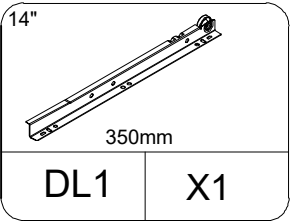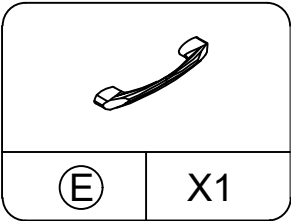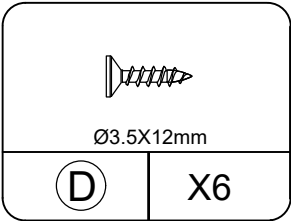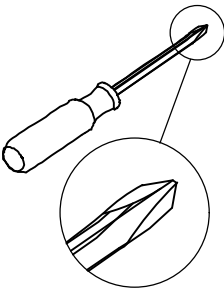






Note the DL or DR stamped label on the track !

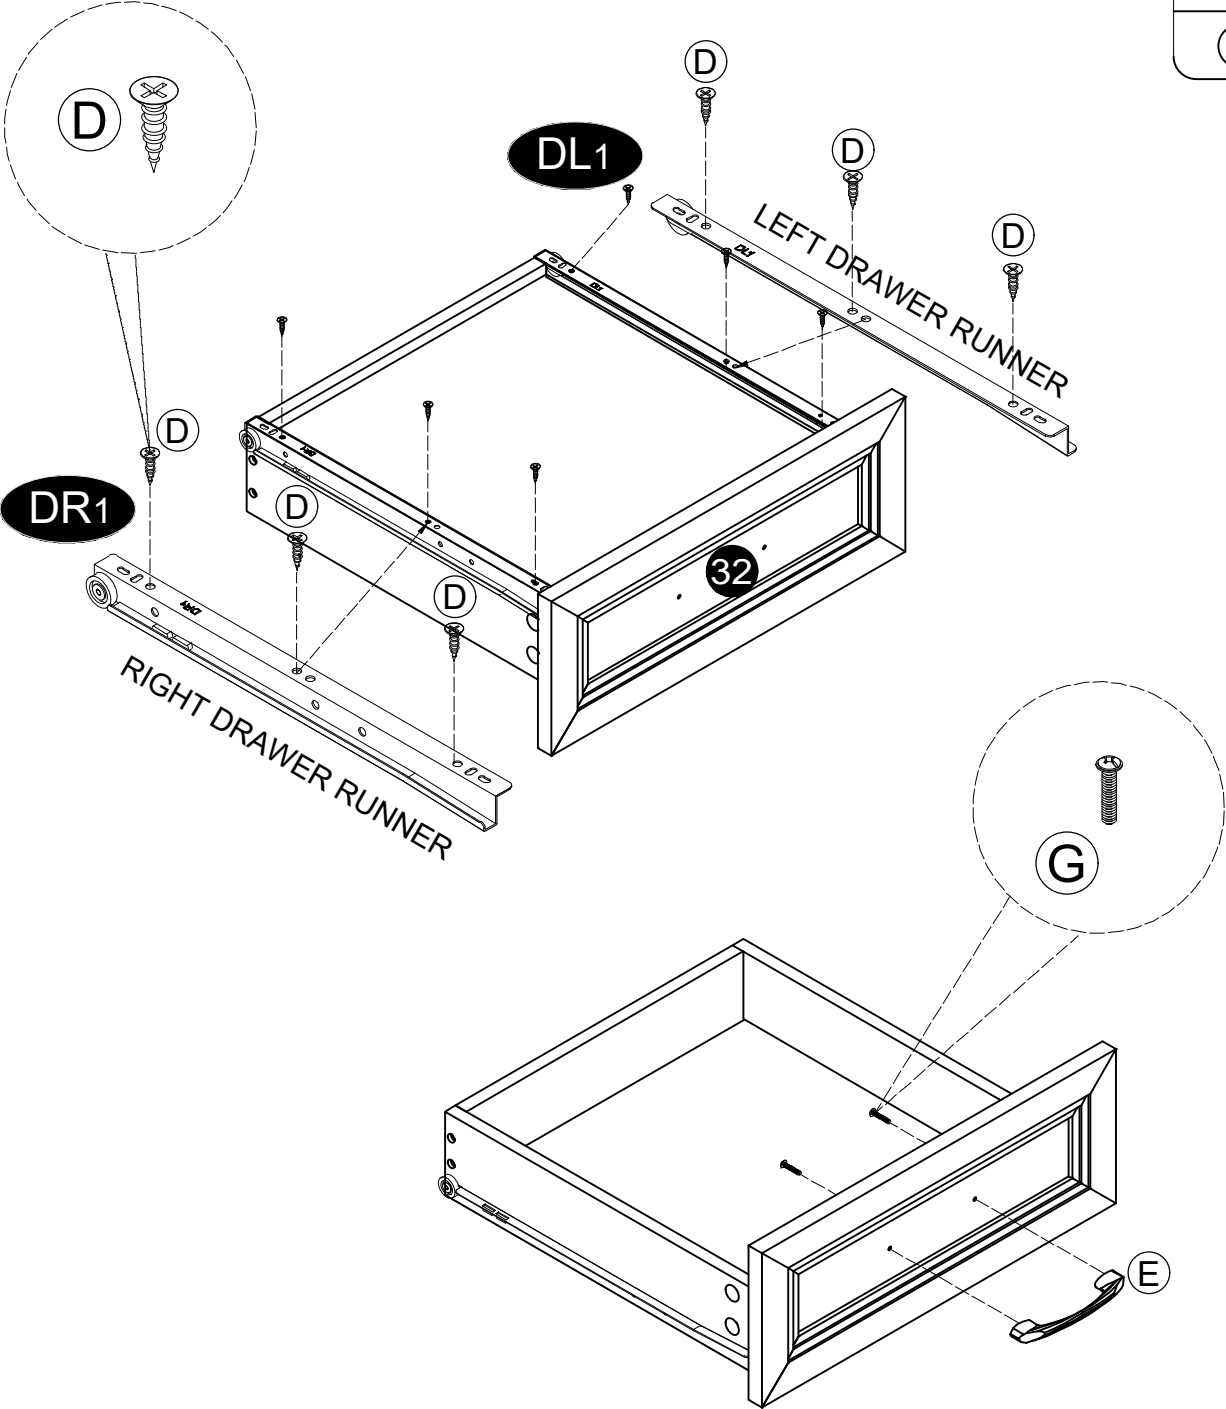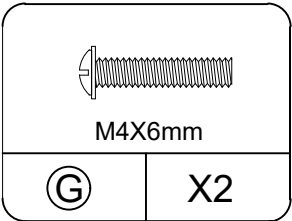


STEP34

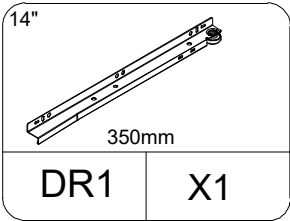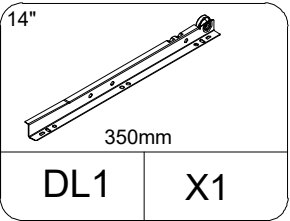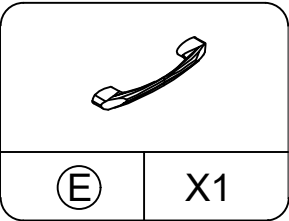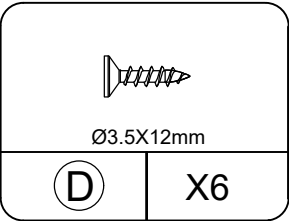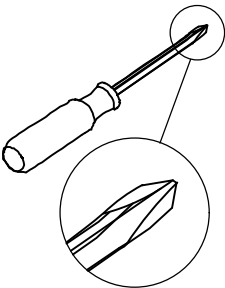

Note the DL or DR stamped label on the track !

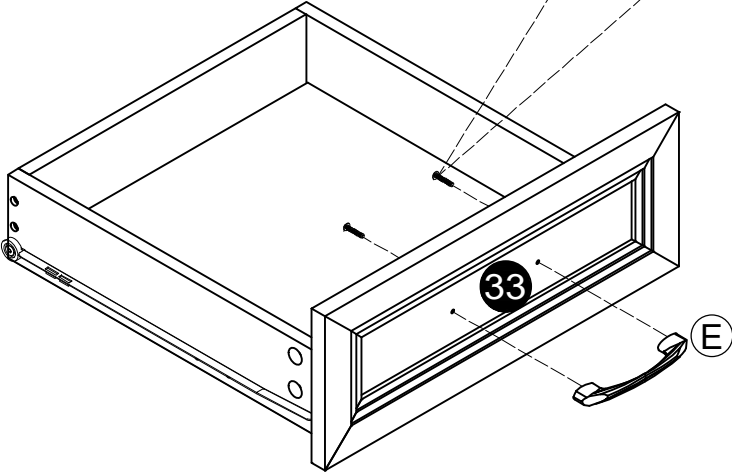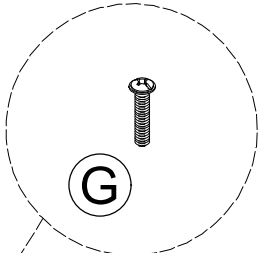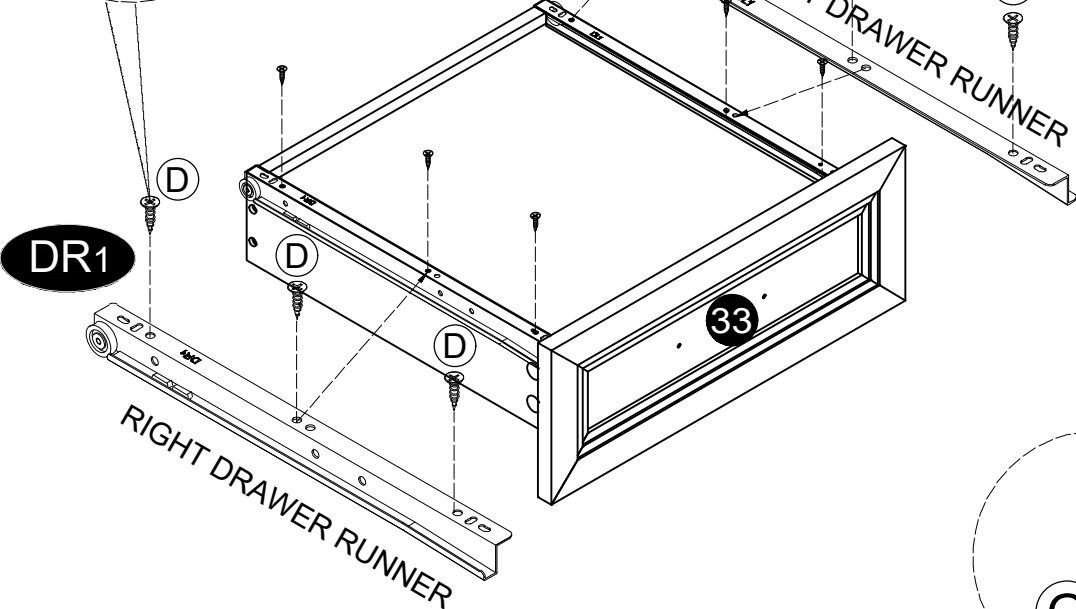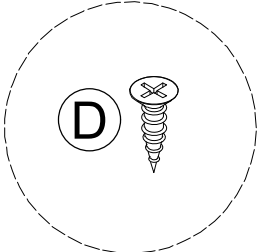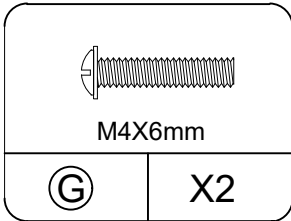



STEP35

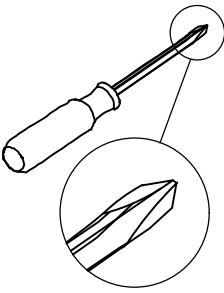


 Ø3.5X12mm	
D	X6


	
E	X1

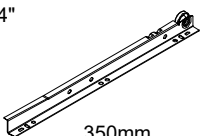14"  350mm	
DL1	X1





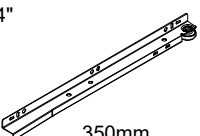
14"  350mm	
DR1	X1

Note the DL or DR stamped label on the track !






 M4X6mm	
G	X2

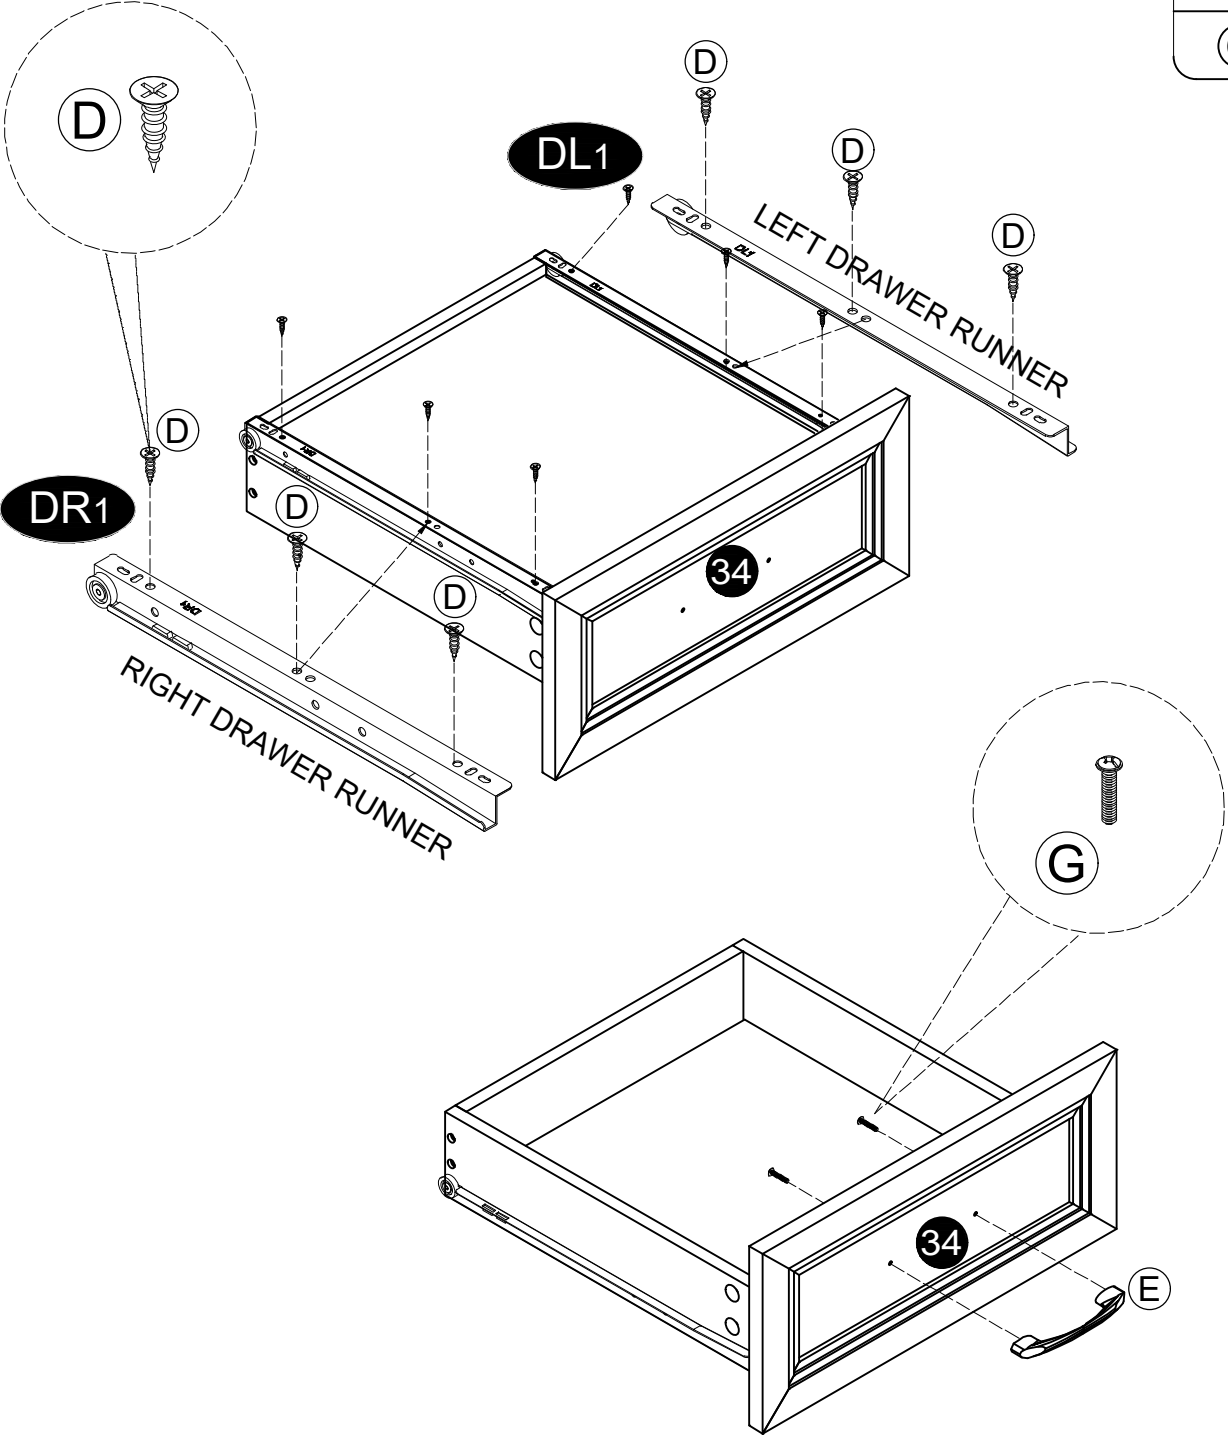






STEP36

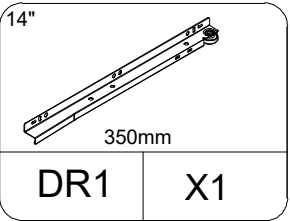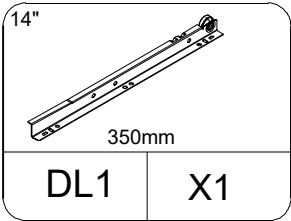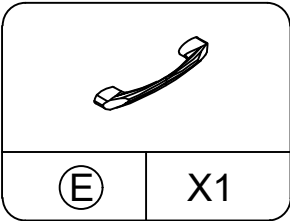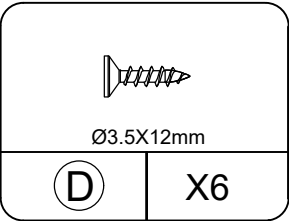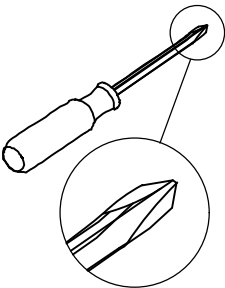






Note the DL or DR stamped label on the track !

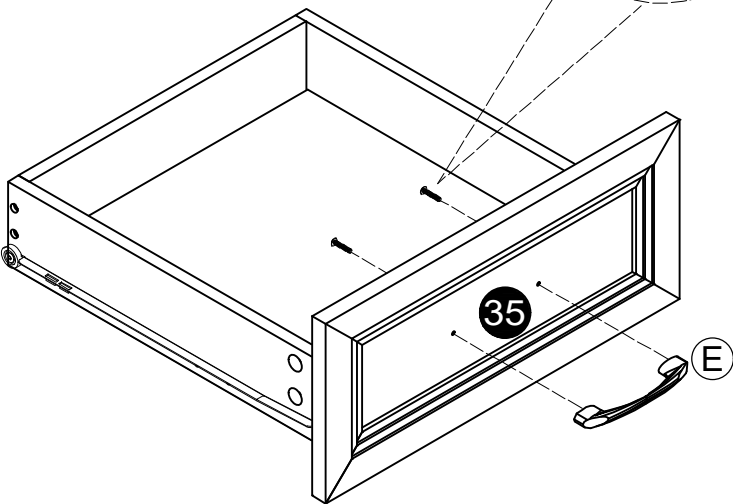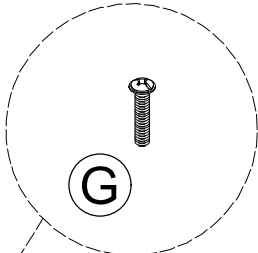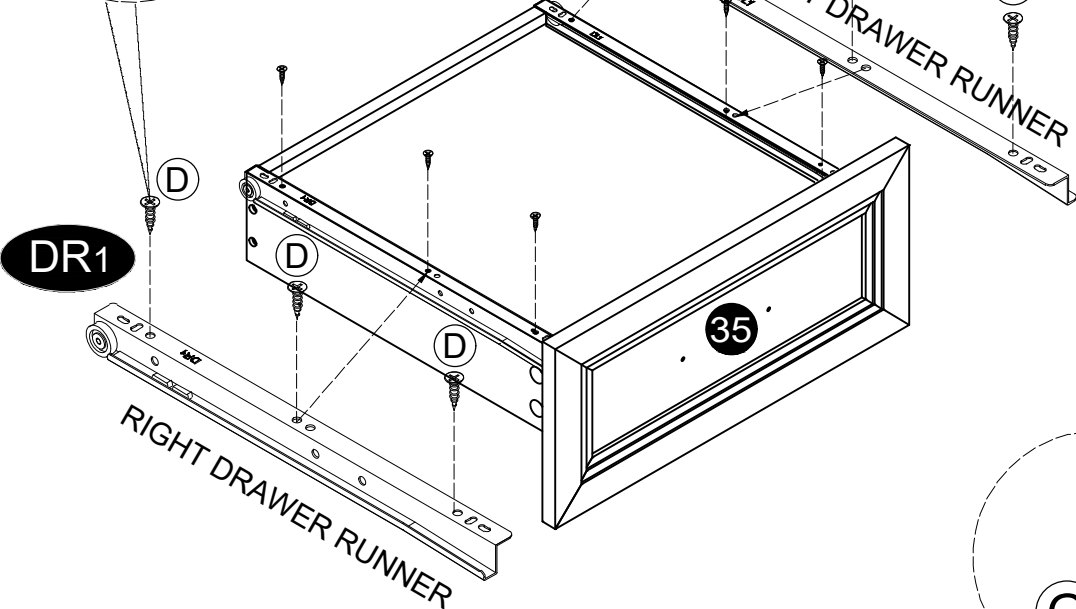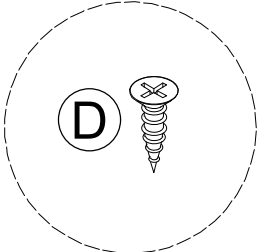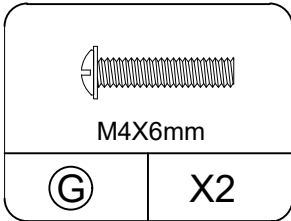

STEP37

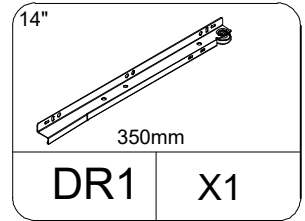
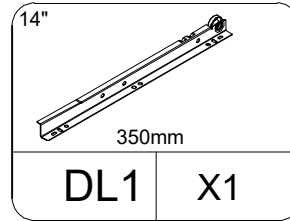
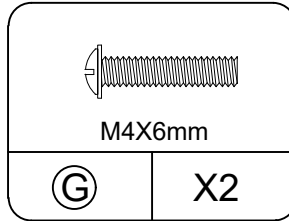
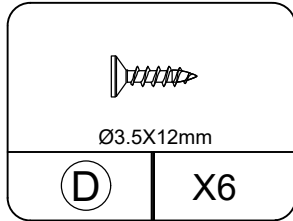
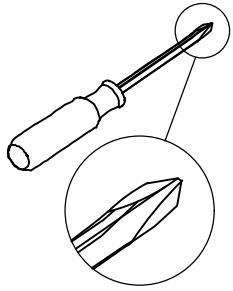


Note the DL or DR stamped label on the track !

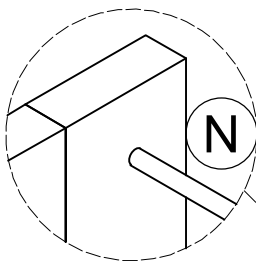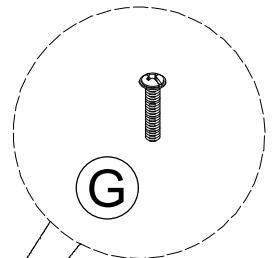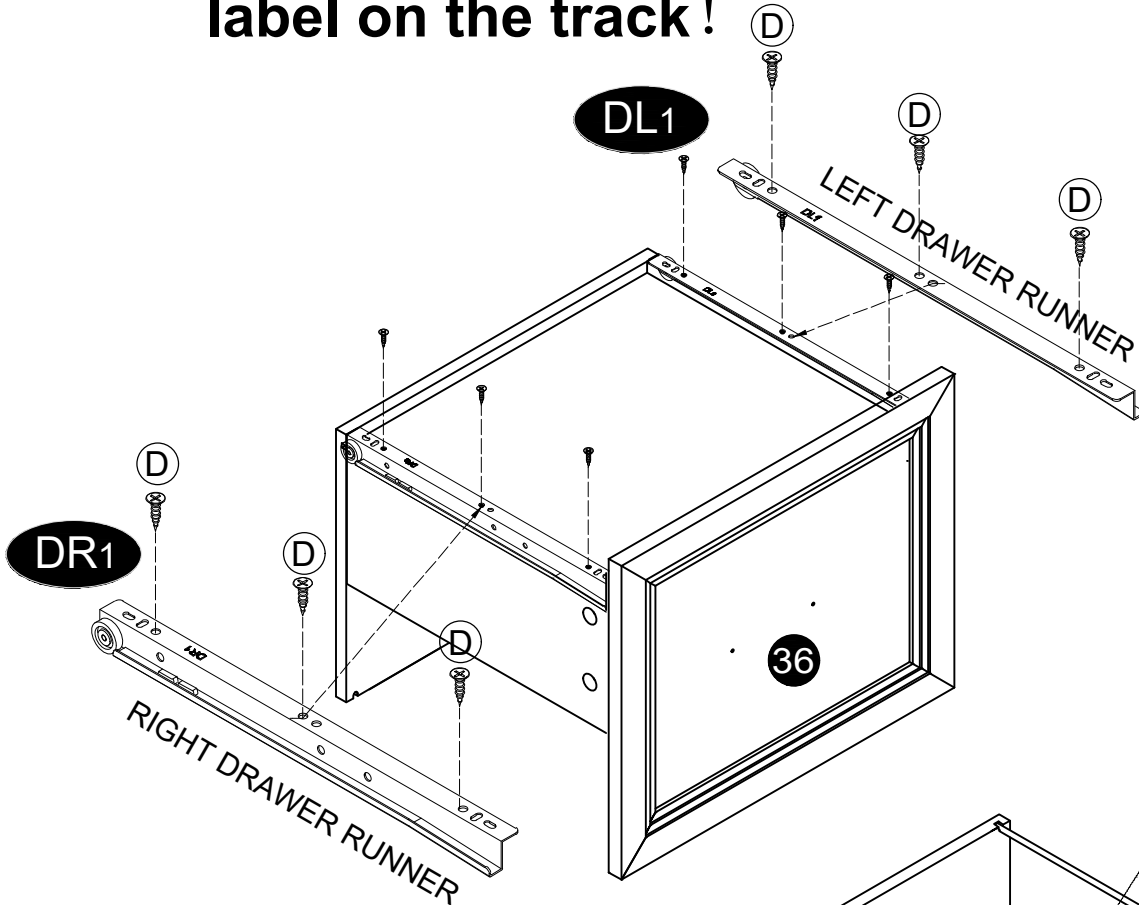
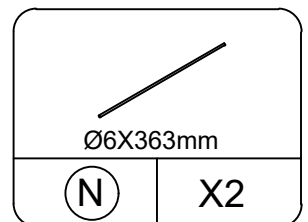
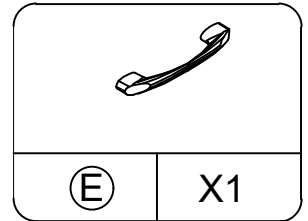


Insert the stainless steel tube into the hole at an angle

STEP38

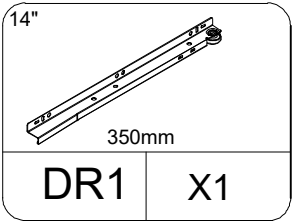
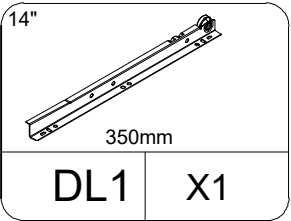
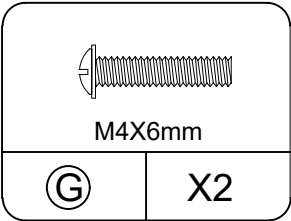
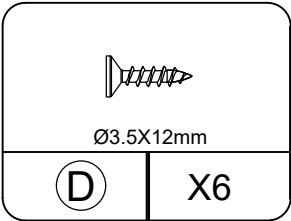
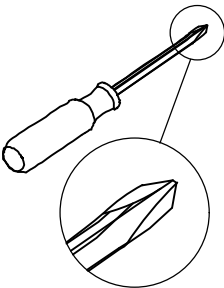


Note the DL or DR stamped label on the track !

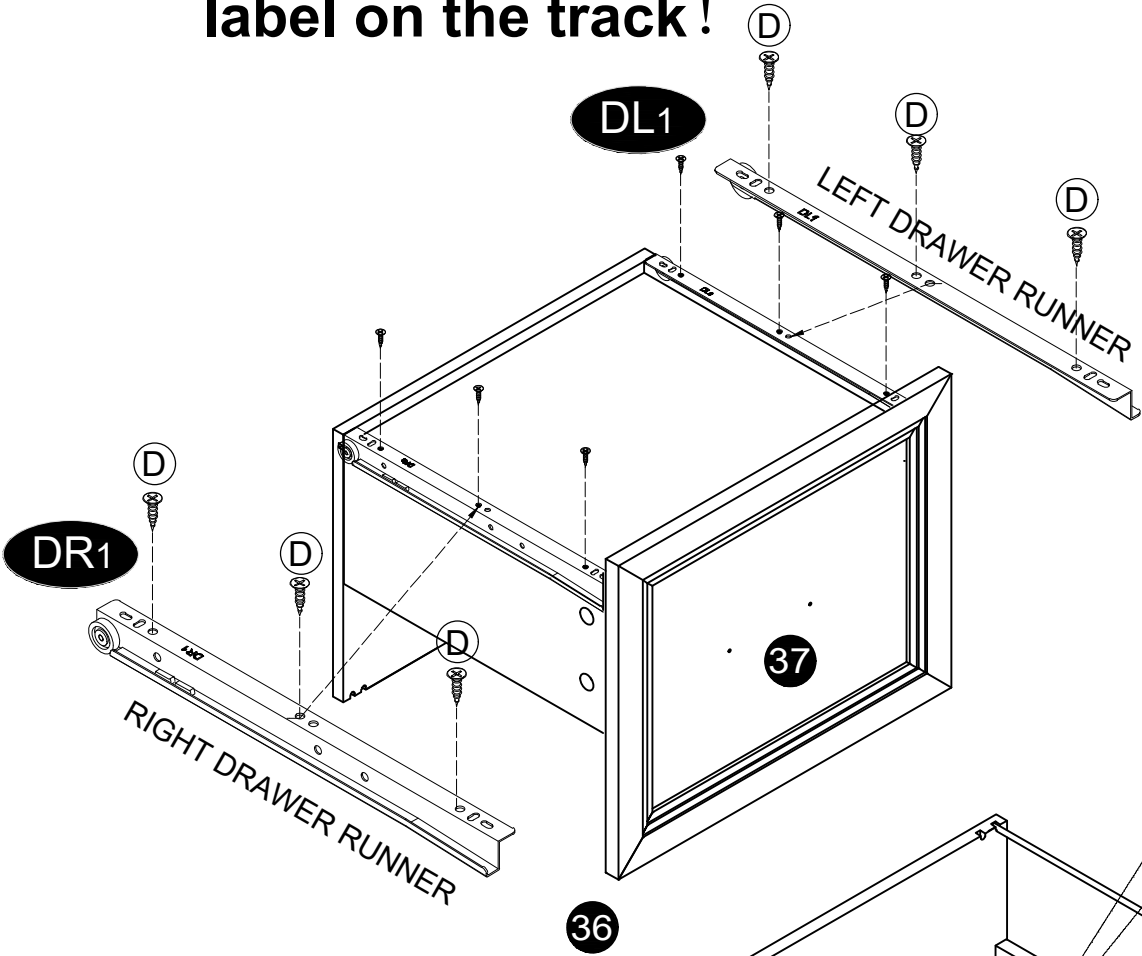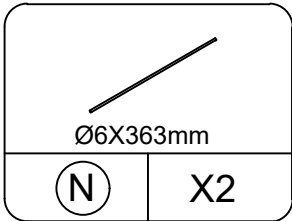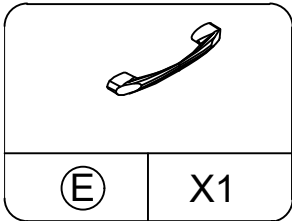



Insert the stainless steel tube into the hole at an angle

STEP39

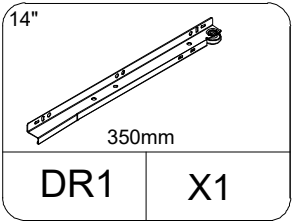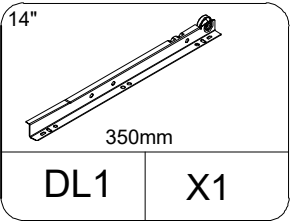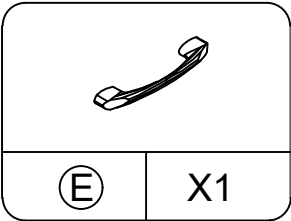
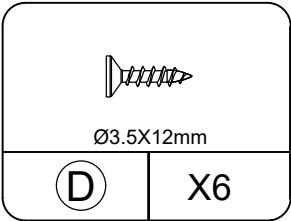
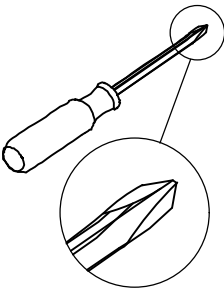


Note the DL or DR stamped label on the track !


DL1

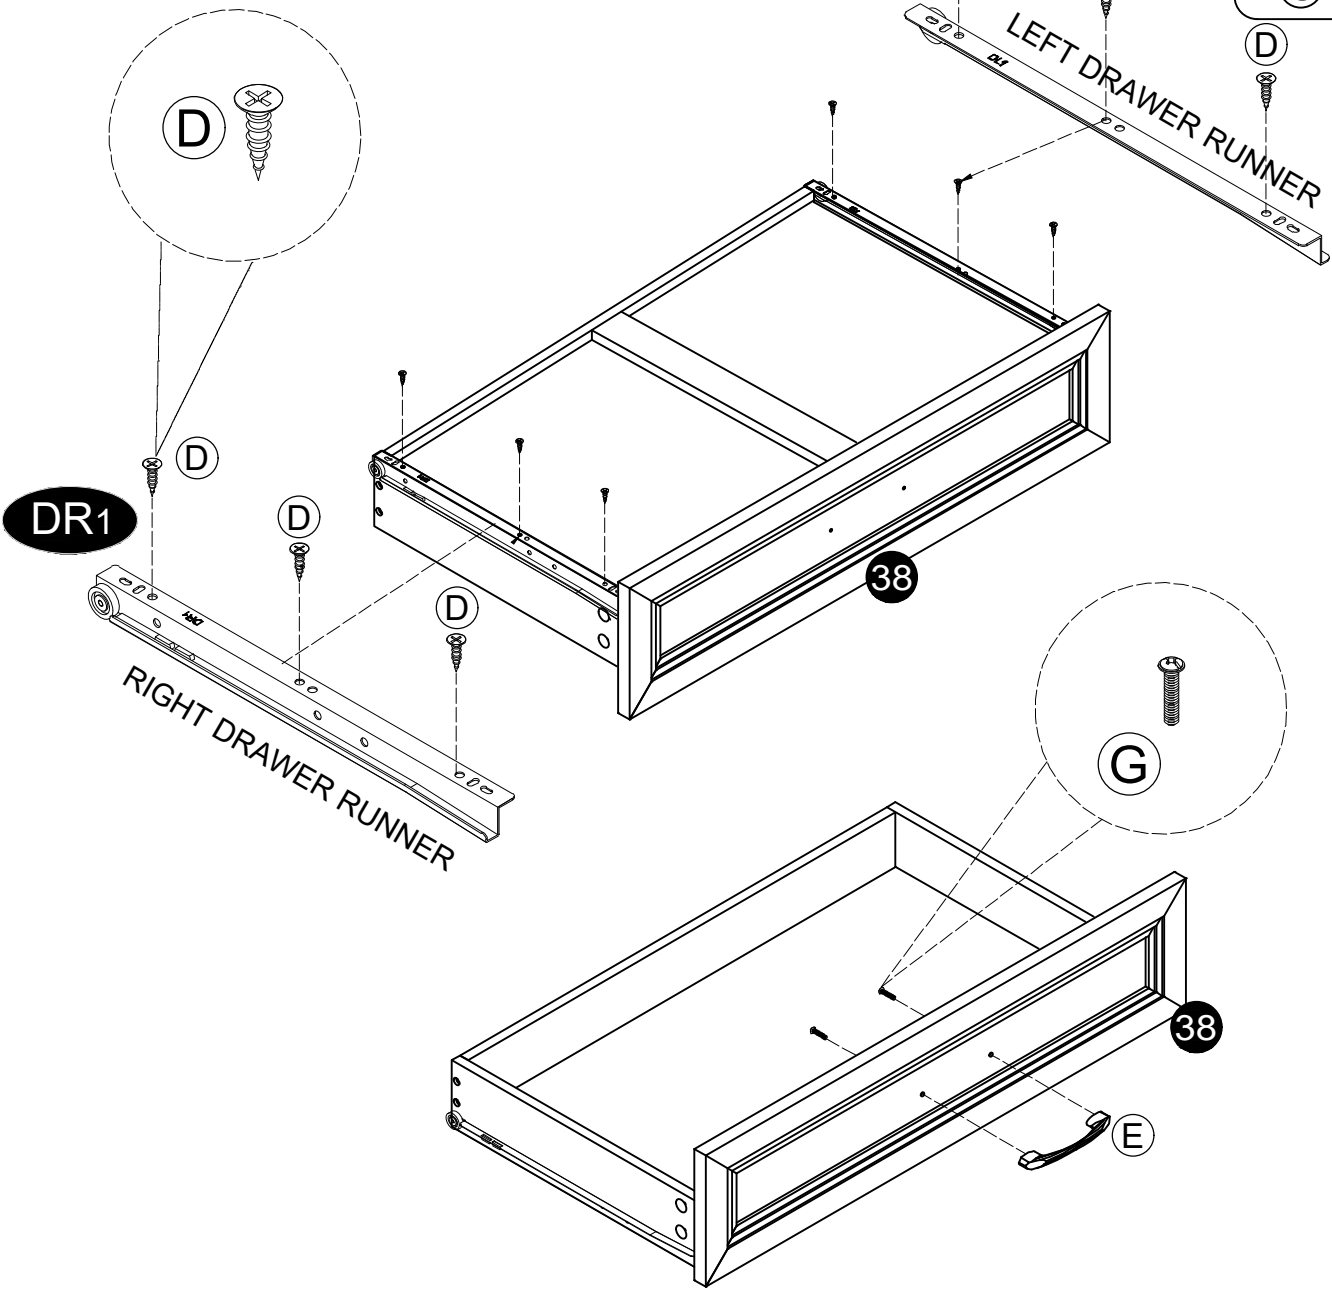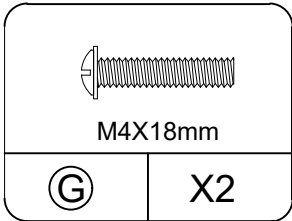

STEP40

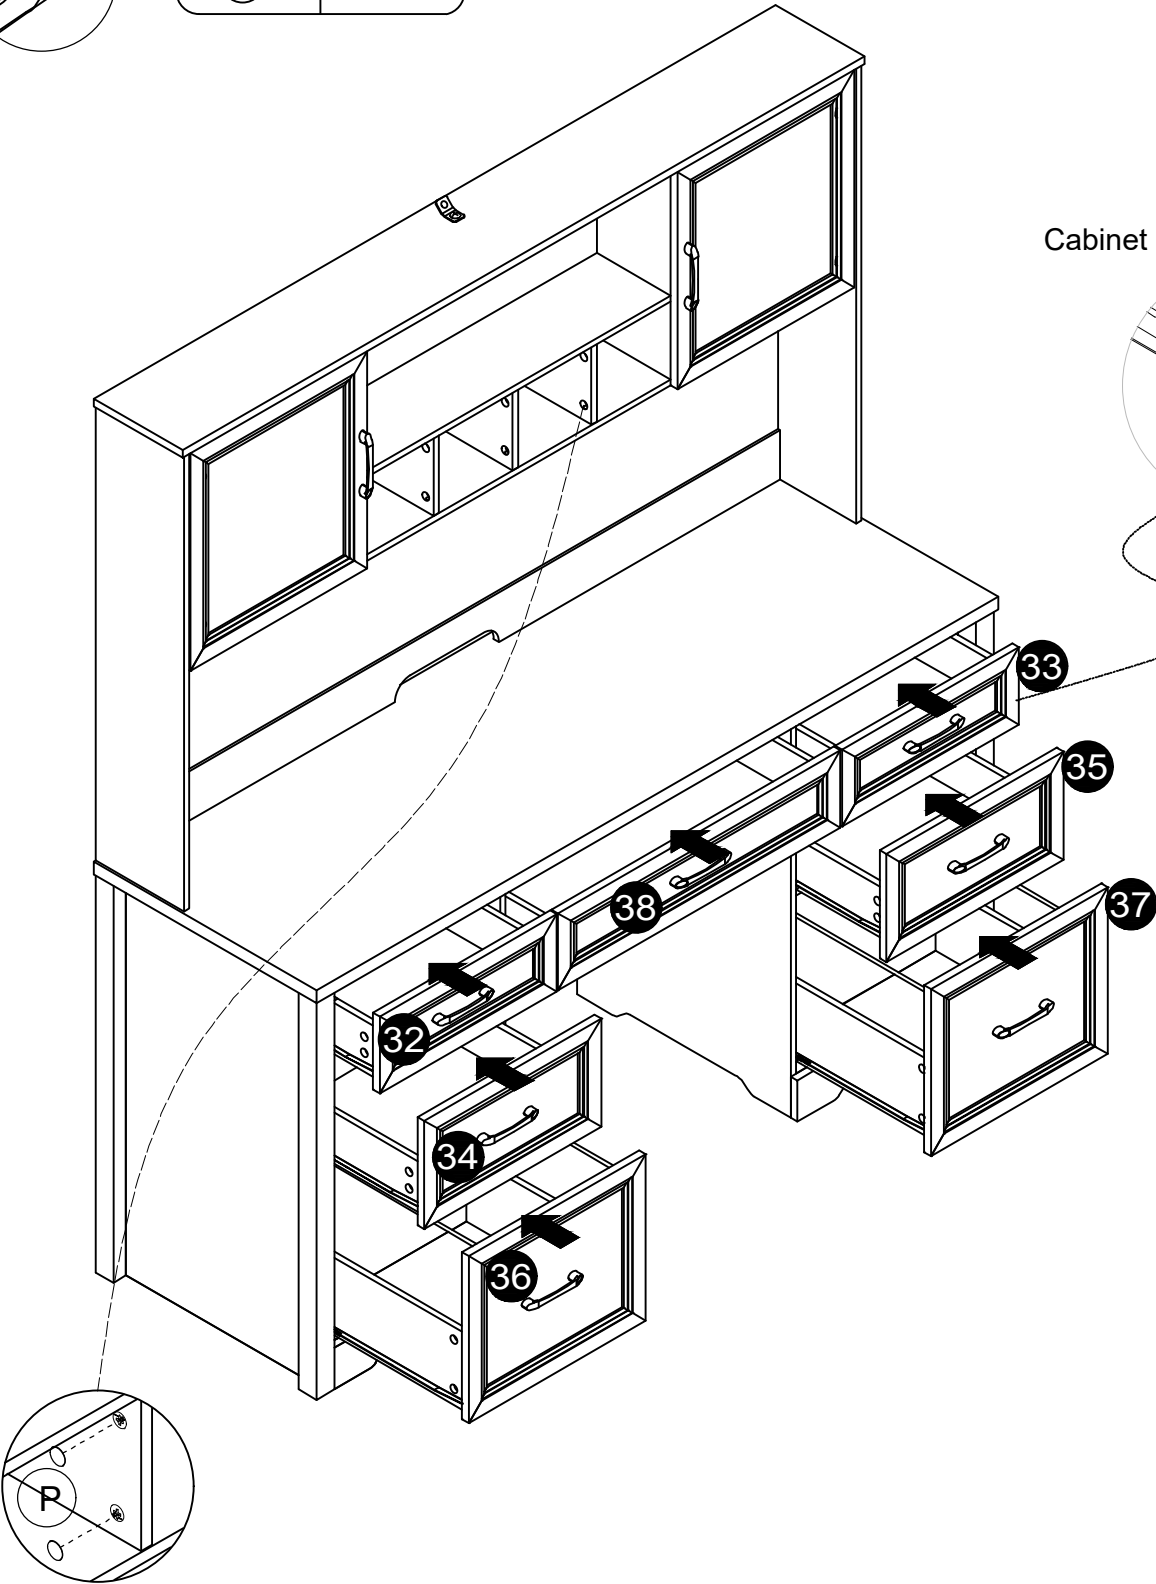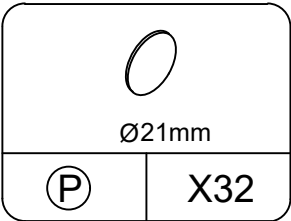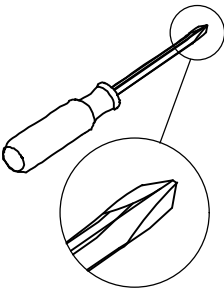


Cabinet Slide

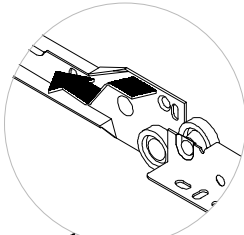

Drawer Slide

Stick the exposed holes of the cabinet body with hole stickers (P)

STEP41

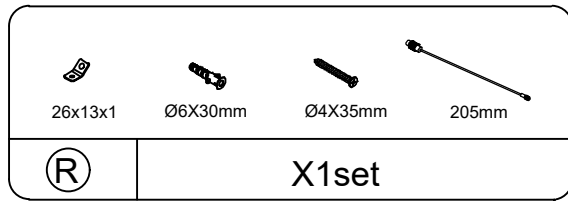


We have included a set of tipping restraint hardware for this unit. You must install this hardware to prevent accidents or injuries that can result from the unit falling. When properly installed, this restraint can provide protection against the unexpected tipping of the unit due to small tremors, bumps or climbing. We strongly recommend mounting this hardware to a wall stud and your unit.

NOTE: The tipping restraint hardware included is for wooden stud wall construction. It must be attached to a wall stud. Depending upon your wall construction different anchor hardware may be required. Please contact your local hardware store for assistance. Young children can be seriously injured by tipping furniture. You must install the tipping restraint hardware with the unit to prevent the unit from tipping, causing any accidents or damage. The tipping restraints are intended only as a deterrent and are not a substitute for proper adult supervision. The tipping restraints are not earthquake restraints. If you wish to add the extra security of earthquake restraints, they must be purchased and installed separately.




Install the tipping restraint hardware

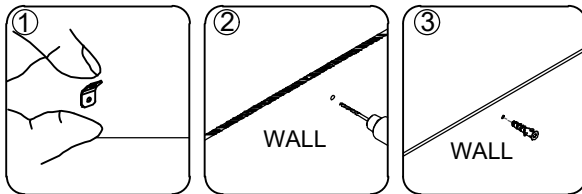


1. make mark on the wall

2. drill one Ø6 holes on the wall

3. put one anchors in the holes

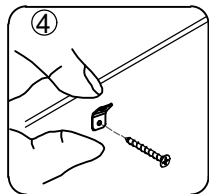

4. fix the device on the wall by the long screws

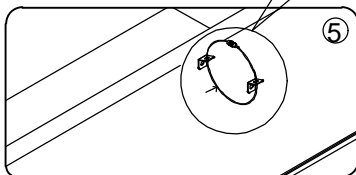

5. Push the cabinet close to the wall so that the two bases are close to each other, and then put on steel cable to tighten it.

