







# Assembly Instruction

## WARNING:

- Read all instructions carefully and completely before assembly and use.
- Retain for future reference.
- **DO NOT use power tools.**
- **DO NOT over-tighten hardware.**
- Periodically check all hardware and re-tighten as necessary.
- DO NOT use product if any component becomes damaged.
- For residential (non-commercial) use only.
- DO NOT sit or stand on product. Use only for intended purpose.
- DO NOT exceed 80lbs for the tabletop & 10lbs for the drawer, evenly distributed.


## Parts List

Check all parts before assembly


|                                                                                                                                  |                                                                                                                                    |                                                                                                                            |                                                                                                                                 |
|----------------------------------------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------|
| <b>A. Table top</b><br><br>*1                    | <b>B. Front panel</b><br><br>*1                   | <b>C. Back Panel</b><br><br>*1           | <b>D. Side Panel</b><br><br>*1               |
| <b>E. Side Panel</b><br><br>*1                  | <b>F. Bottom Panel</b><br><br>*1                  | <b>G. Metal Leg</b><br><br>*4            | <b>H. Drawer front</b><br><br>*3            |
| <b>I. Drawer left panel</b><br><br>*3          | <b>J. Drawer right panel</b><br><br>*3          | <b>K. Drawer bottom panel</b><br><br>*3 | <b>L. Drawer back panel</b><br><br>*3      |
| <b>H1. Hex bolt (Long)</b><br><br>*8(+1 extra) | <b>H2. Hex bolt (Short)</b><br><br>*8(+1 extra) | <b>H3. Washer</b><br><br>*8(+1 extra)   | <b>H4. Foot Pad</b><br><br>*4              |
| <b>H5. Allen Key</b><br><br>*1                 | <b>H6. Screw</b><br><br>*12(+1 extra)           | <b>H7. Bolt</b><br><br>*12(+1 extra)    | <b>H8. Long Screw</b><br><br>*12(+1 extra) |
| <b>H9. Drawer stop</b><br><br>*6              | <b>H10. Short Screw</b><br><br>*6(+1 extra)     | <b>H11. Spanner</b><br><br>*1           | <b>H12. Bolt</b><br><br>*3                 |
| <b>H13. Knob</b><br><br>*3                     | <b>H14. Protect Washer</b><br><br>*3            |                                                                                                                            |                                                                                                                                 |

Step 1: Put the Tabletop (A) on a soft surface to protect the finish.

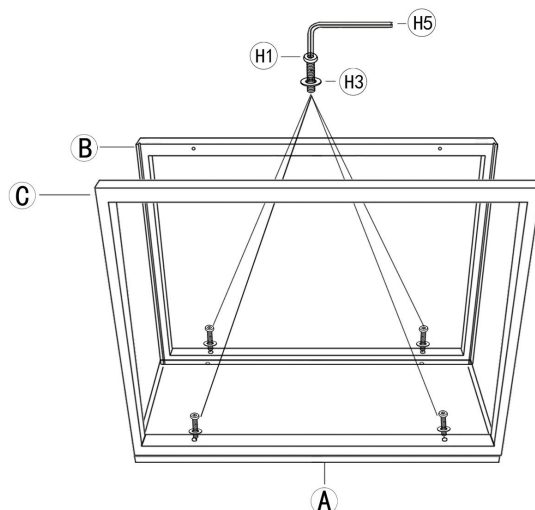
Attach Back panel (B&C) to the Top (A) with Hex bolts (H1) and Washers (H3) using Allen key (H5). Ensure the Back panel (B&C) aligned with the groove on Top (A). **Leave hardware loose in this step.**



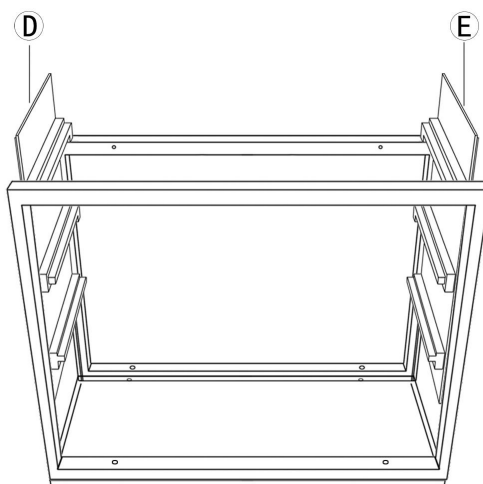
Step 2: Insert the Side panels (D&E) as shown below. Ensure the side panel (D&E) aligned with Groove on the Back panel (B&C).



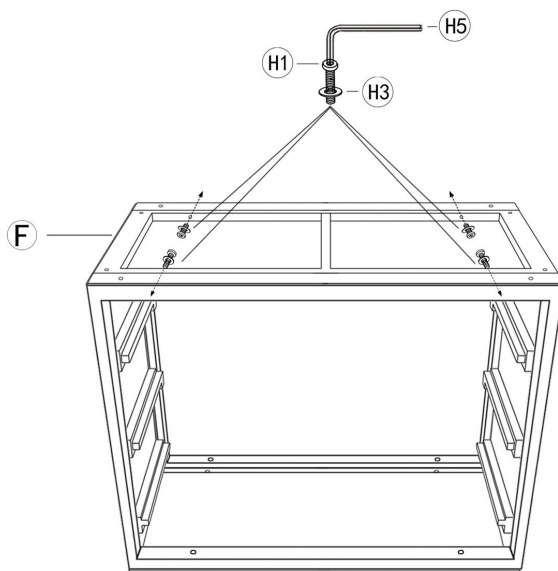Step 3: Attach the Bottom panel (F) with Hex bolts (H1) and Washers (H3) by Allen key (H5). **Leave hardware loose in this step.**




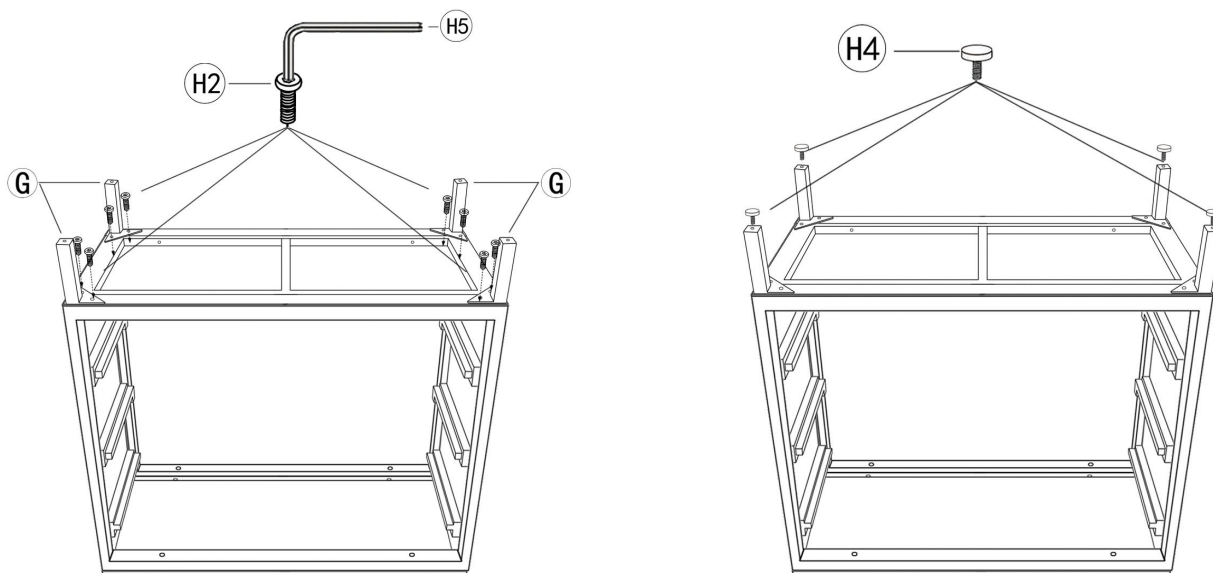Step 4: Attach the Metal Leg (G) to the Bottom panel (F) with Hex bolts (H2) by Allen key (H5), Attach the Foot Pad (H4) to the bottom of the Leg (G) as below shown. **Fully Tighten all Bolts from Step 1-4.**



Step 5: Place All the Drawer Panels on soft surface to protect the finish.

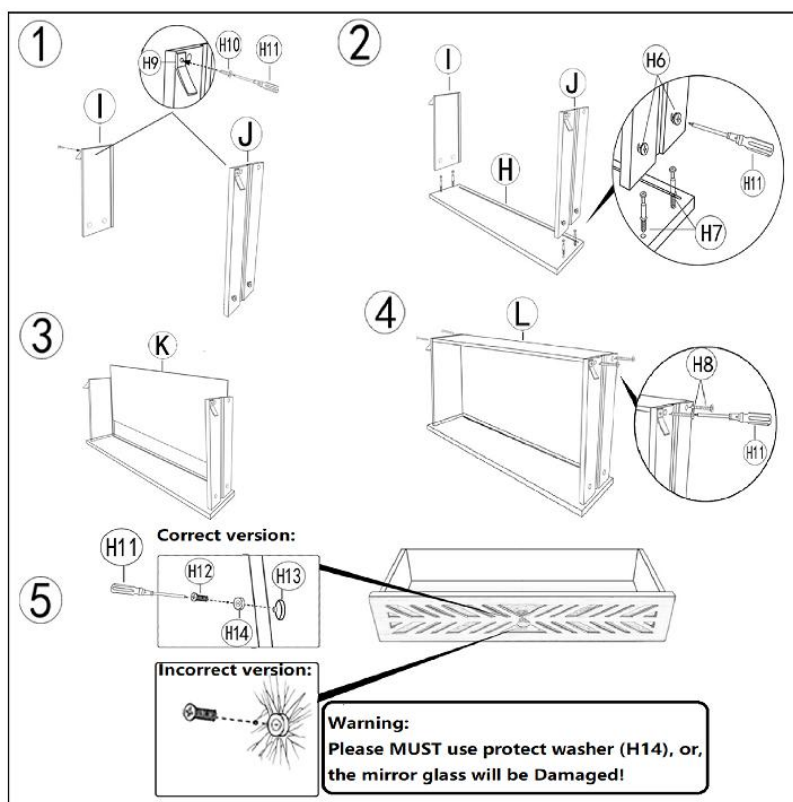1. Attach the Drawer stop (H9) on the Drawer Side panel (J&I) with Screw(H10) by Spanner (H11) .
  2. Attach the Drawer left& right panel (J&I) on the Drawer front (H) with Bolt (H6)&Screw(H7) by Spanner (H11).
  3. Insert the Drawer bottom panel (K) to the left&right panel (J&I) as shown.
  4. Attach the Drawer Back Panel (L) with Screw (H8) by Spanner (H11) as below.
  5. Attach the Knob (H13) to the Drawer front (H) with bolt (H12) and Protect Washer (H14) by Spanner (H11).
- Place the Drawers into the Body.



Assembly finished.

#### Notice:

Please contact after sales e-mail with your order id if you need any assistance.  
We will provide prompt help during working hours.