


INSTRUCTION MANUAL

AIR37-M

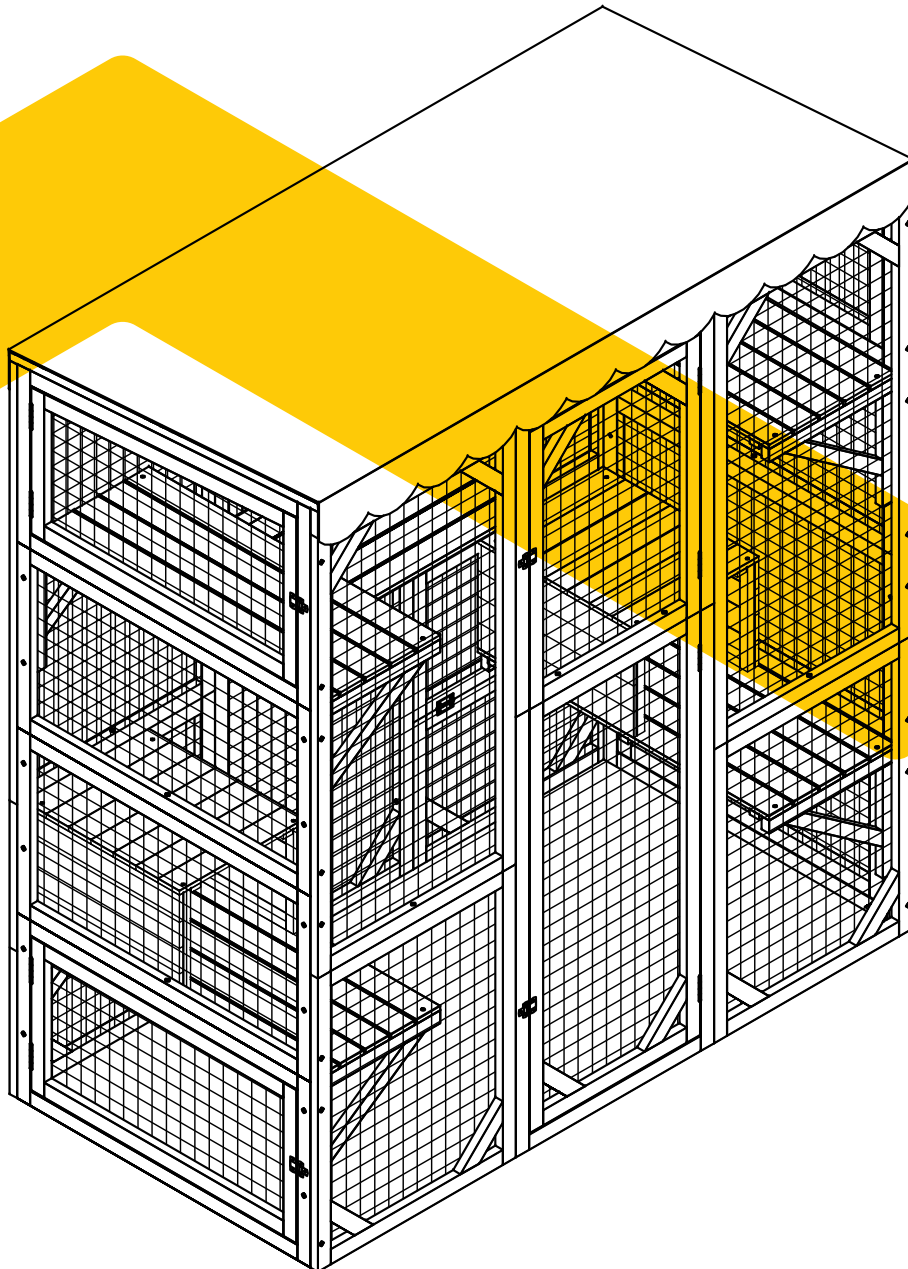



NOTICE


Please retain these instructions for future

- Firmly secure all bolts,screws and knobs before use.
- Reconfirm that all bolts,screws,and knobs are secure every 90 days.
- Fasten screws loosely during initial assembly. Do not fully tighten screws until the item is completely assembled.
- Do not use or store this item in the proximity of open flame or flammable/combustible chemicals.
- Be aware that some parts are heavy and have sharp edges.
- Be aware that moving parts can injure,crush and cut.
- If any parts are missing,broken,damaged,or worn,stop using this product until repairs are made and/or factory replacement parts are installed.
- Do not use this item in a way inconsistent with the manufacturer's instructions as this could void the product warranty.

TOOLS REQUIRED



PHILLIPS
SCREWDRIVER



DRILL
(RECOMMENDED)



2PERSON
ASSEMBLY



APPROXIMATELY
60MIN. ASSEMBLY

HARDWARE

M3.5x60mm SCREW
39PCS+1 spare



P1

M3.5x45mm SCREW
54PCS+1 spare



P2

M3.5x35mm SCREW
20PCS+1 spare



P3

M3.5x25mm SCREW
36PCS+1 spare




P4

PARTS


CARTON 1/2

Upper right panels for front and back side
2PCS

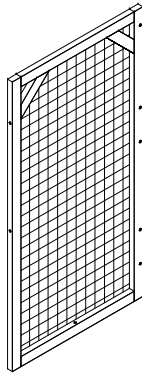


A2

Down left panels for front side
1PC

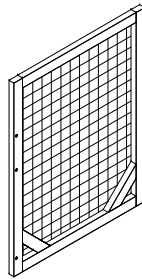


B1

Middle lower panel for front side
1PC

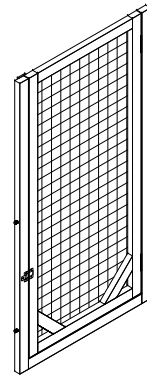


D

Bracket for layer
3PCS

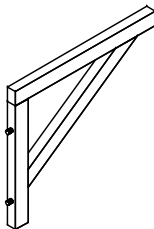


E

Middle upper panel for back side
1PC

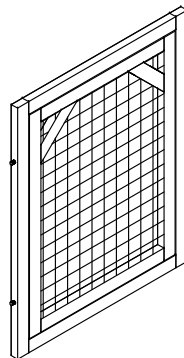


F

Down left panels for back side
1PC

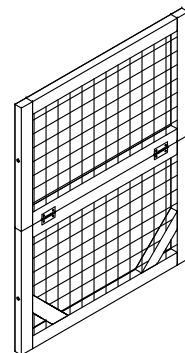


I

Middle lower panel for back side
1PC

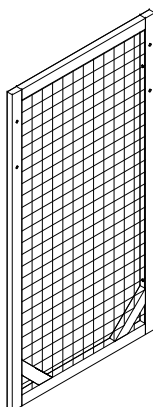


G

Middle panel for left and right side
3PCS

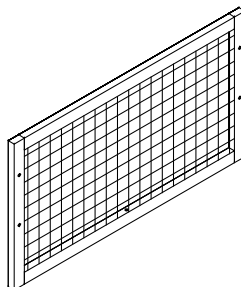

J


Layer for back side
1PC

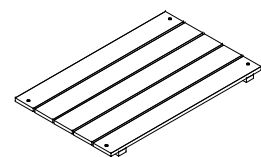

O


PARTS

Roof for small house
2PCS

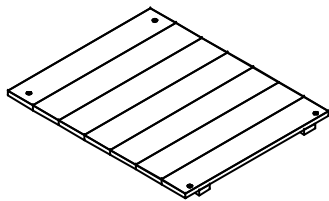


T

Top panel for left side
1PC

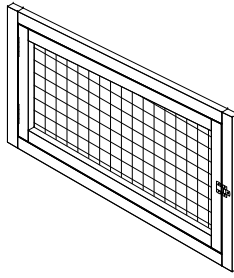


L

Top panel for right side
1PC

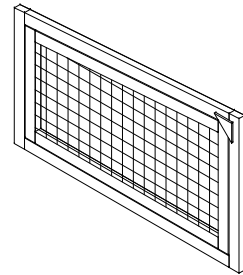


M

Right panel for small house
2PCS

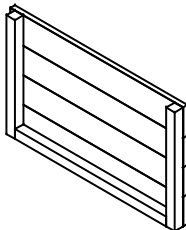

R

Back panel for small house
2PCS

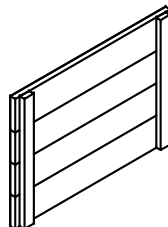


Q

Hardware bag




CARTON 2/2

Bracket for layer
7PCS

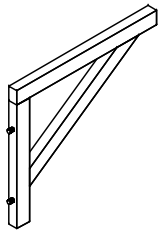


E

Left panel for small house
2PCS

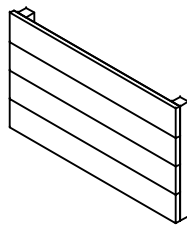


S

Upper layer for left and right side
2PCS

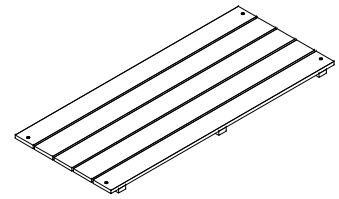


N

Bottom panel for left and right side
2PCS

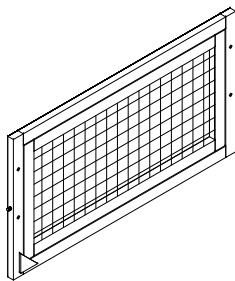


K

Left bar for slopping roof
1PC

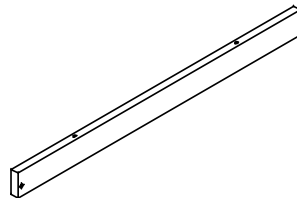


U

Right bar for slopping roof
1PC

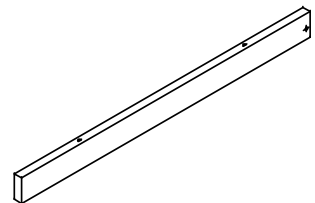


V

Side roof
2PCS

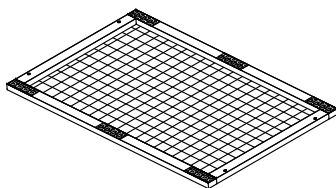


W

Middle roof
1PC

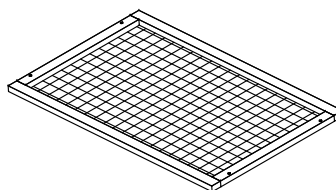

X


Waterproof roof cover
1PC

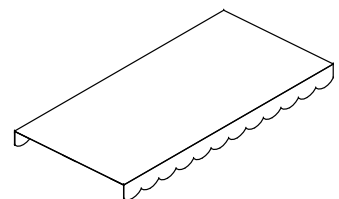

Y


PARTS

Upper left panels for front and back side
2PCS

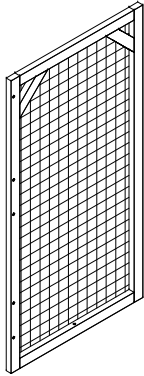


A1

Middle panel for left and right side
1PC

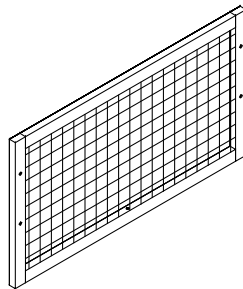


J

Bottom layer for small house
2PCS

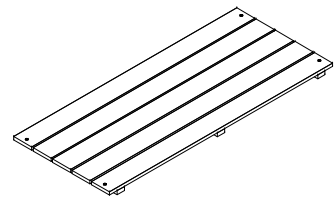


P

Down right panels for front side
1PC

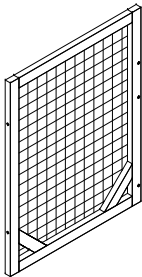


B2

Middle upper panel for front side
1PC

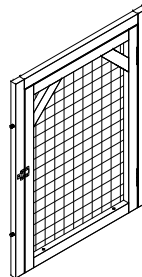

C

Down right panels for back side
1PC

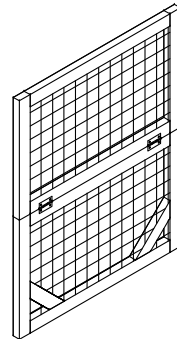


H

PRODUCT ASSEMBLY

01 Connect the front panel Part A1,C,A2,B1,D,B2 together 14xP1 screws.

Notice:

- 1.The corner with the bar of Part A1 ,C, A2 is facing up.
- 2.The corner with the bar of Part B1, D ,B2 is facing down.
- 3.The pre-drilled hole of Part A1 & B1 is on the left side.
- 4.The pre-drilled hole of Part A2 & B2 is on the right side.

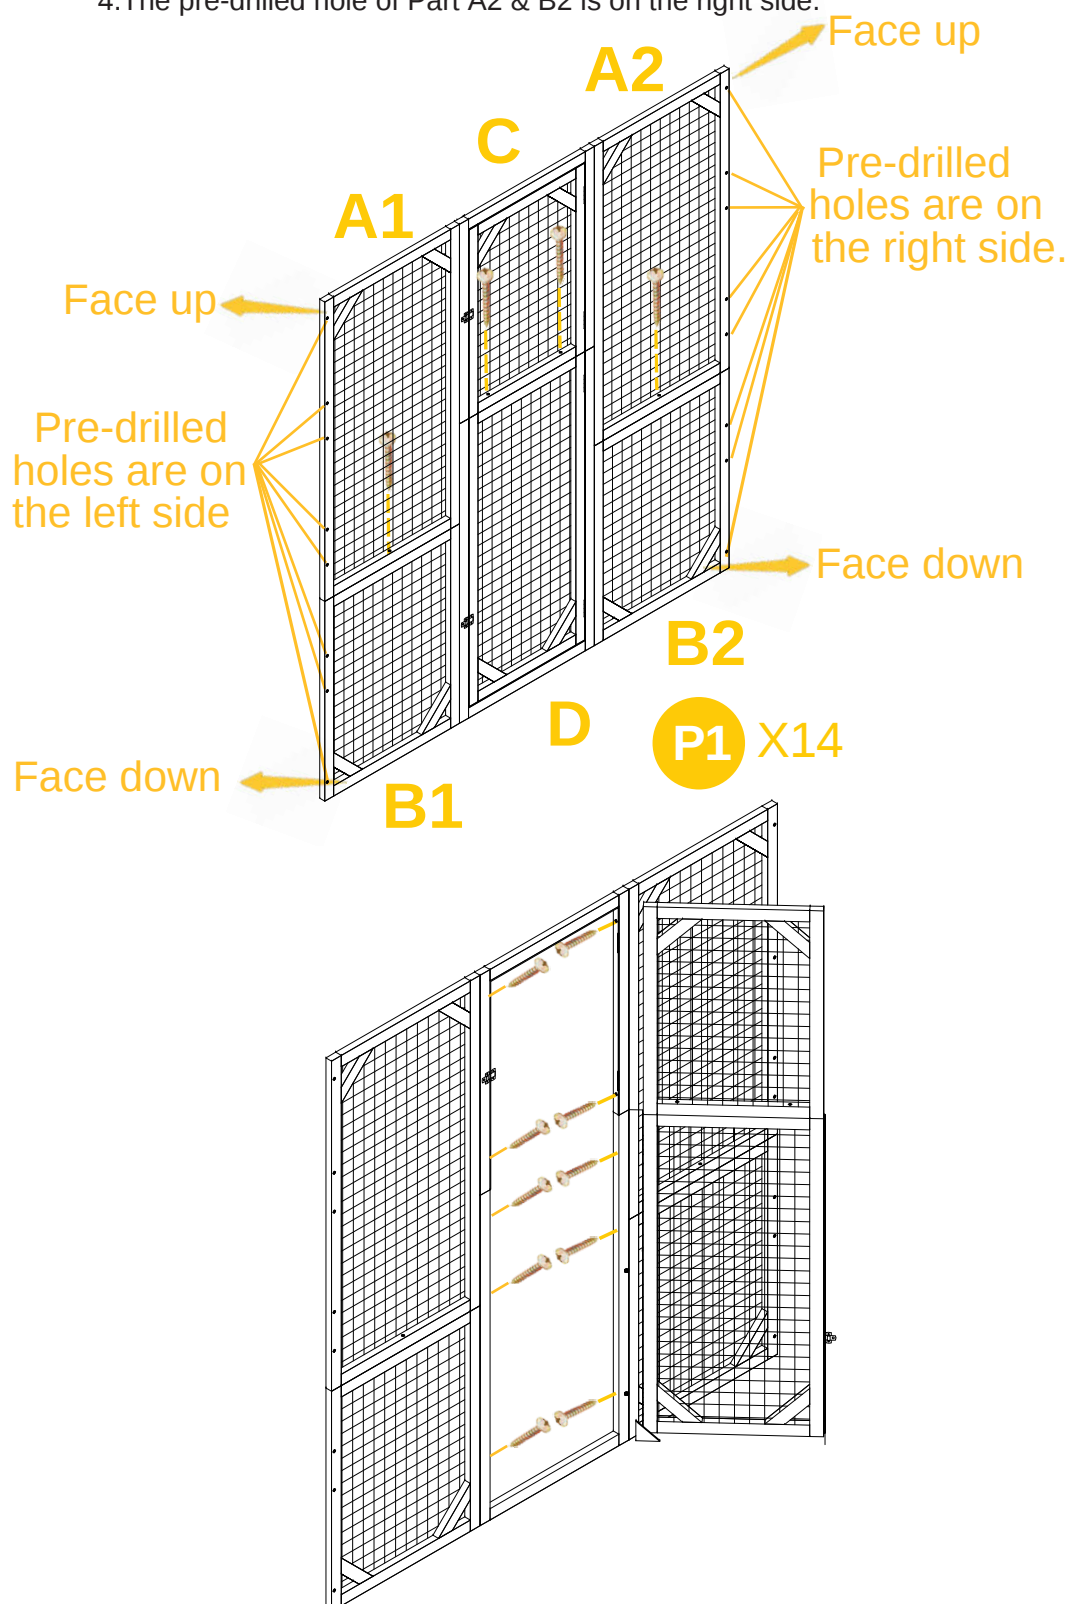

PRODUCT ASSEMBLY


02

Attach the bracket Part E to Part G by 4XP2 screws.

Connect the back panel Part A1,F,A2,I,G,H together 13xP1 screws.

Notice:





- 1.The corner with the bar of Part A1 ,F, A2 is facing up.
- 2.The corner with the bar of Part I, G ,H is facing down.
- 3.The pre-drilled hole of part A1 & I is on the left side.
- 4.The pre-drilled hole of part A2 & H is on the right side.

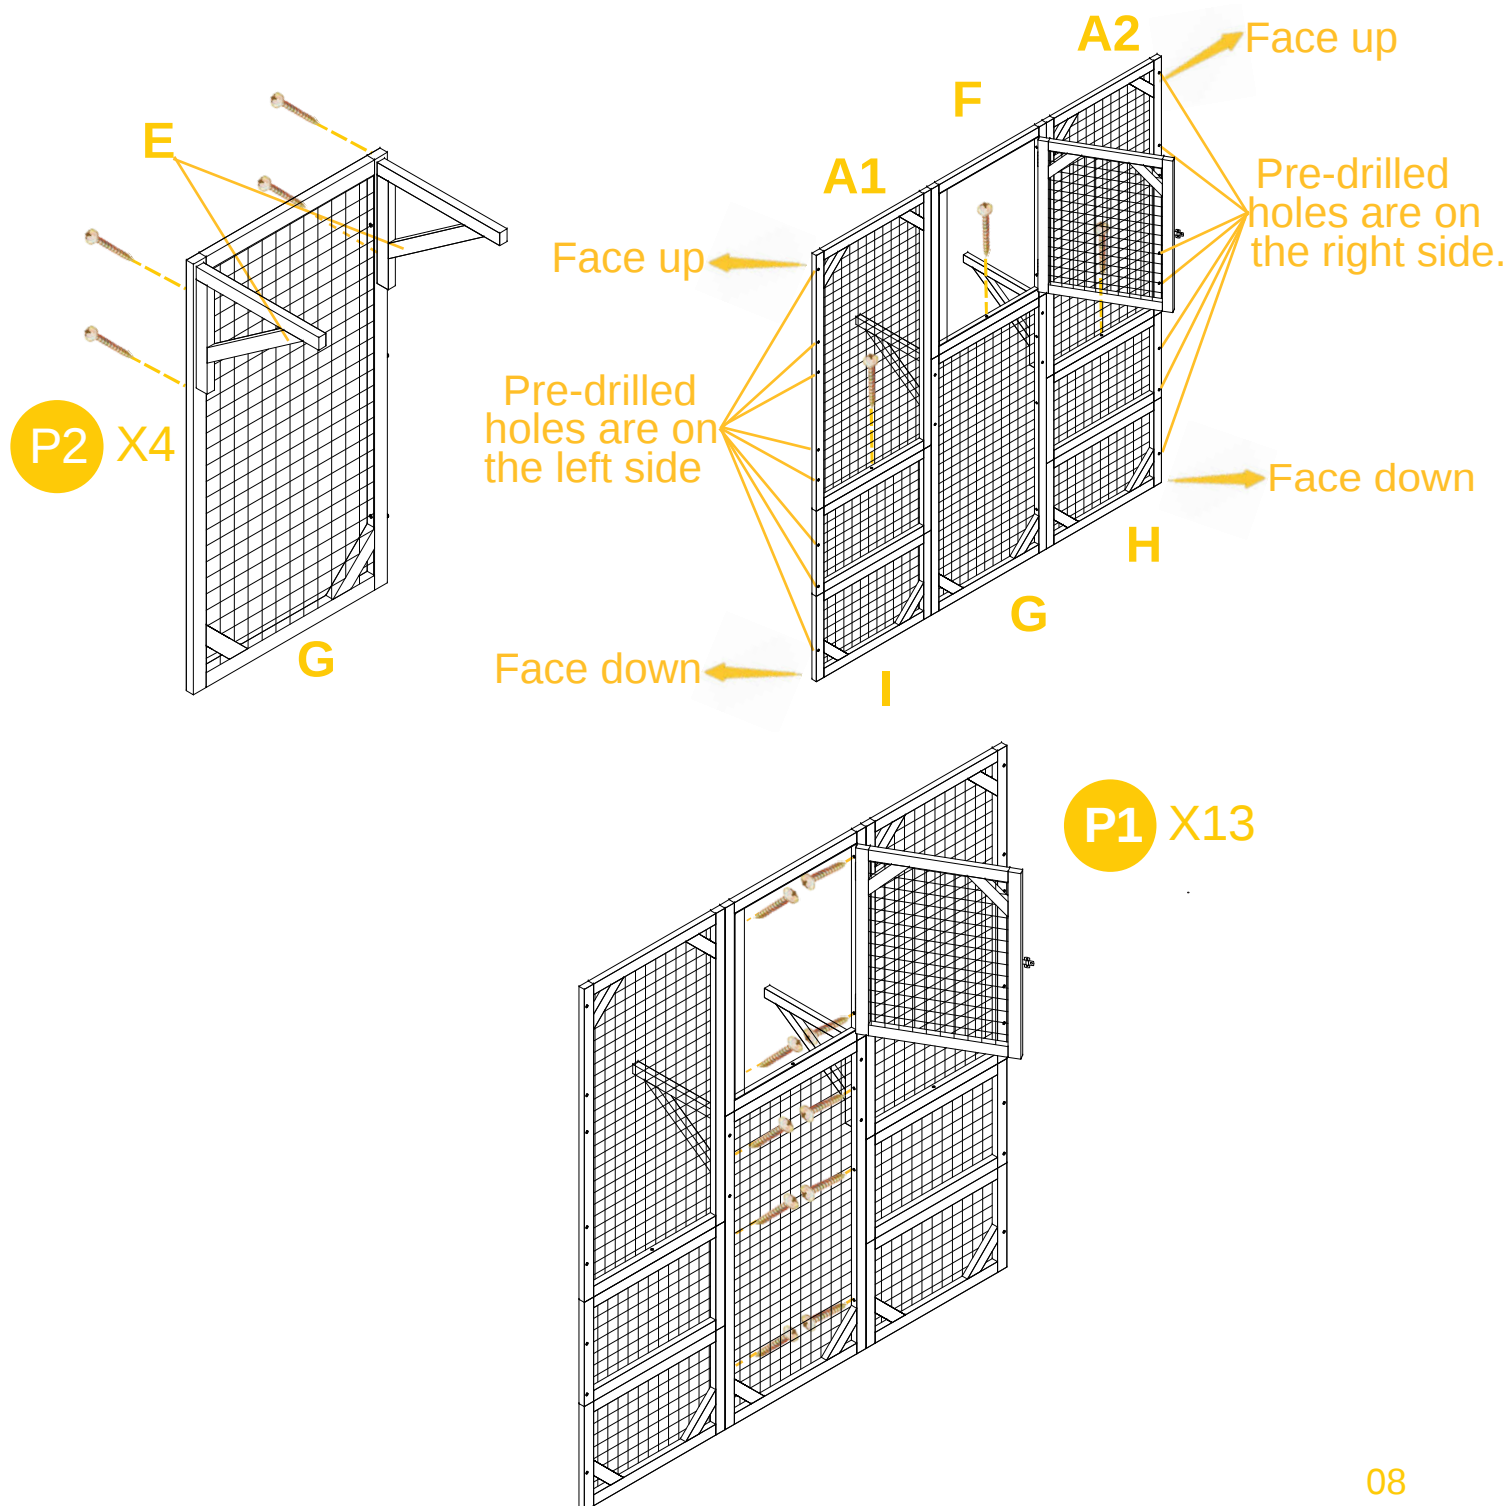

PRODUCT ASSEMBLY


03

- ① Attach the layer bracket Part E to Part J & K. (Notice : there are 2xPart J on each side, only each upper Part J need to attach with the bracket.)
- ② Connect the left panel Part L, 2 x Part J, K together by 3xP1 screws. Connect the right panel Part M, 2 x Part J, K together by 3xP1 screws.

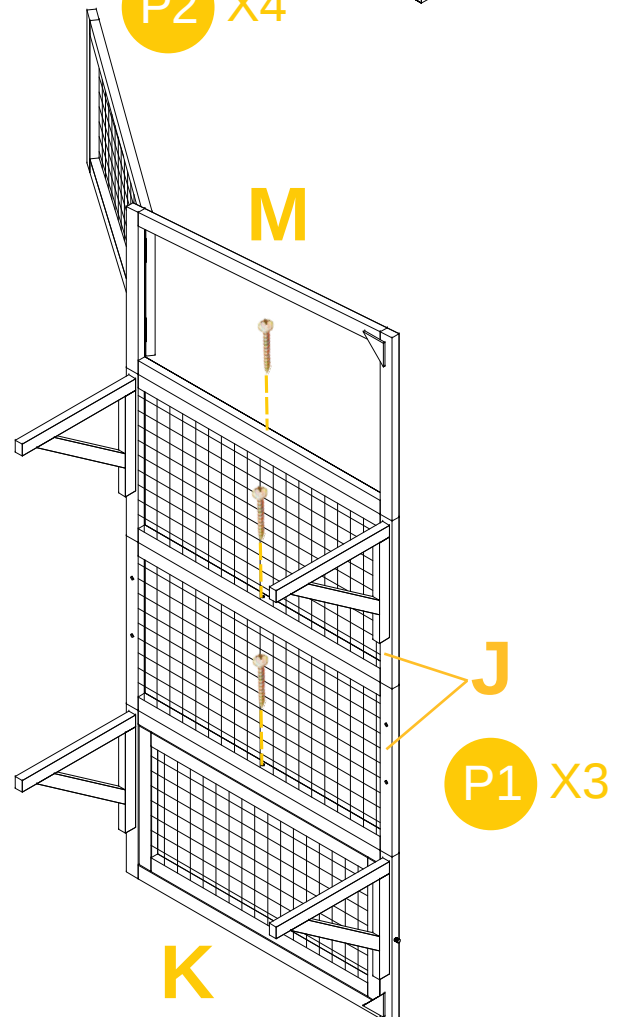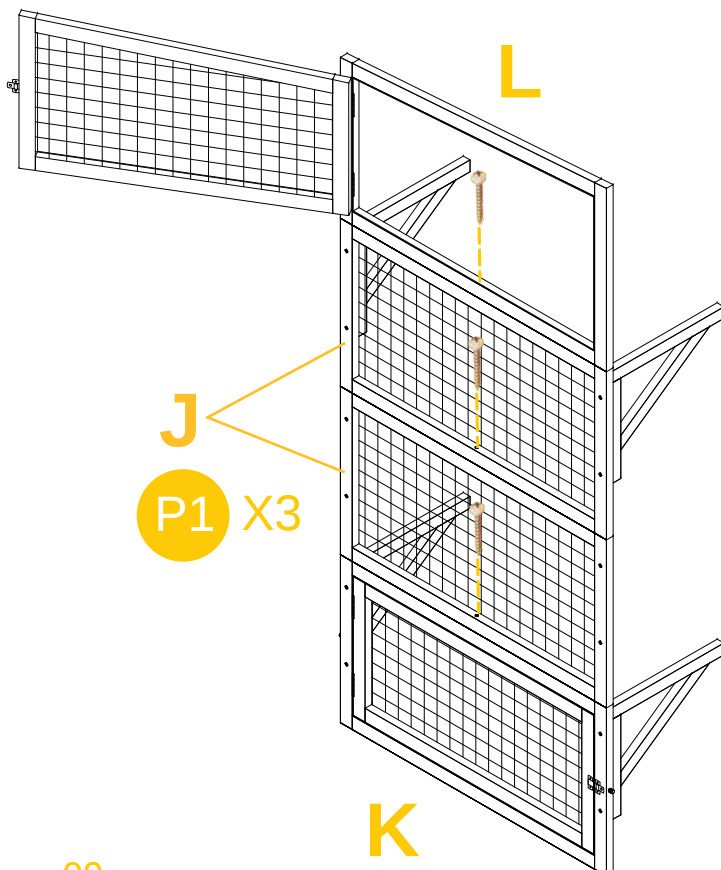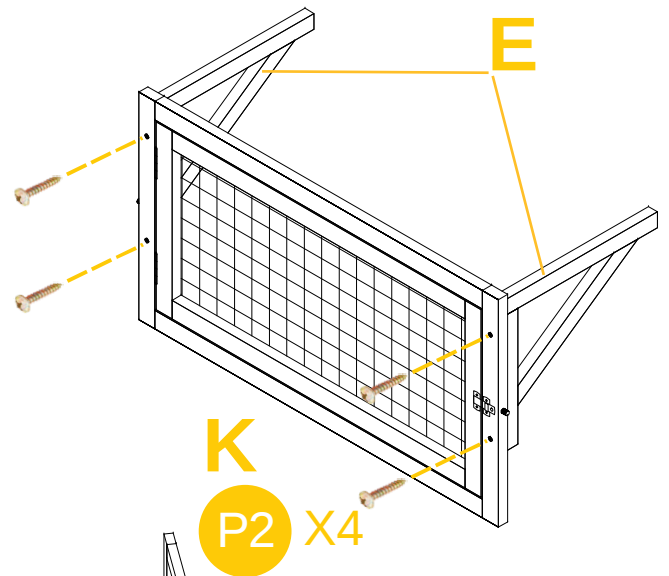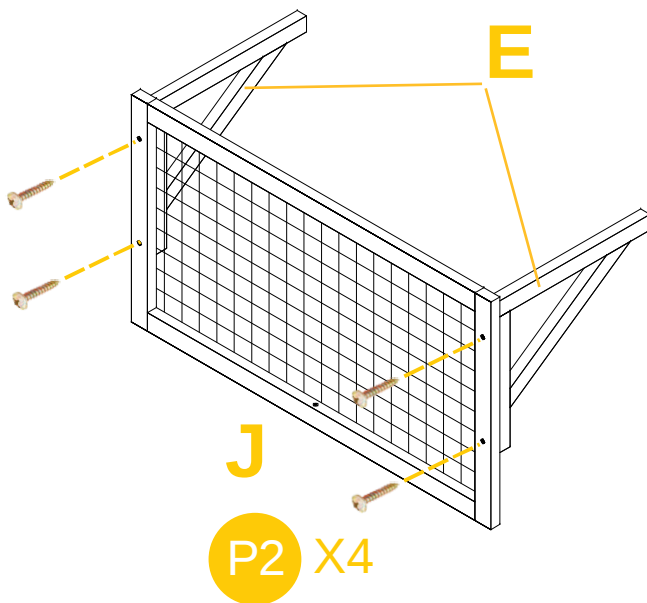


PRODUCT ASSEMBLY

04 Attach the back panel to side panels by 16xP2 screws.

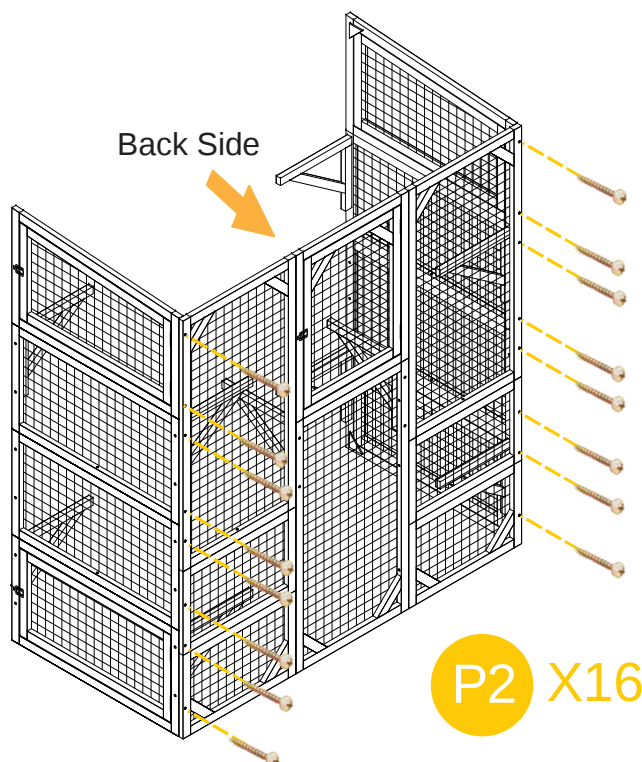


05 Attach the layer Part N & P to the bracket by 4xP4 screws each.

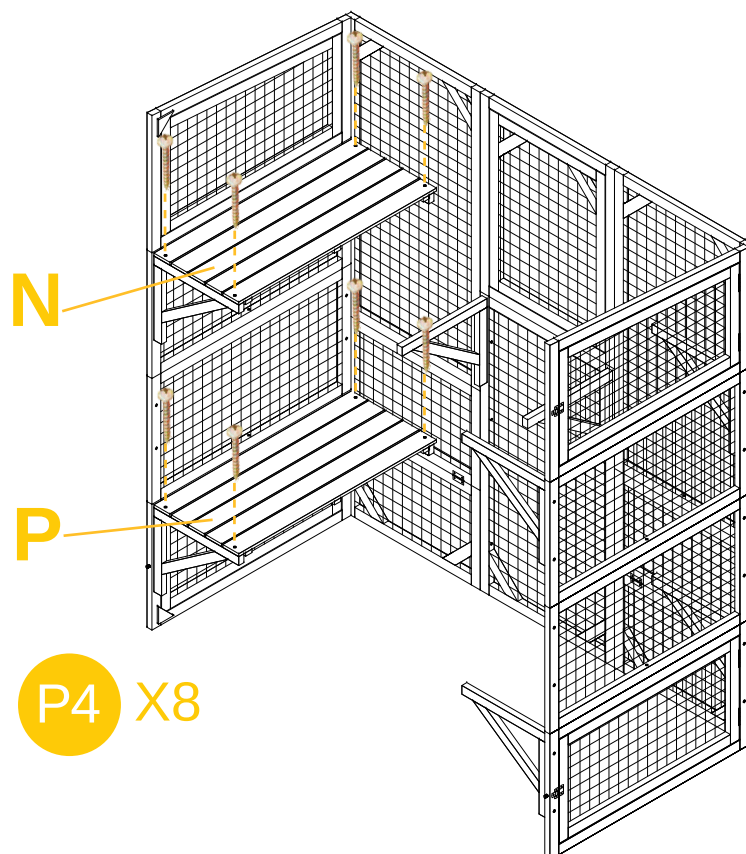

PRODUCT ASSEMBLY


06

Attach the back panel Part Q to the side panel Part S & R by 4xP3 screws.
Attach the roof Part T by 4xP4 screws.
Repeat the same way for second house.

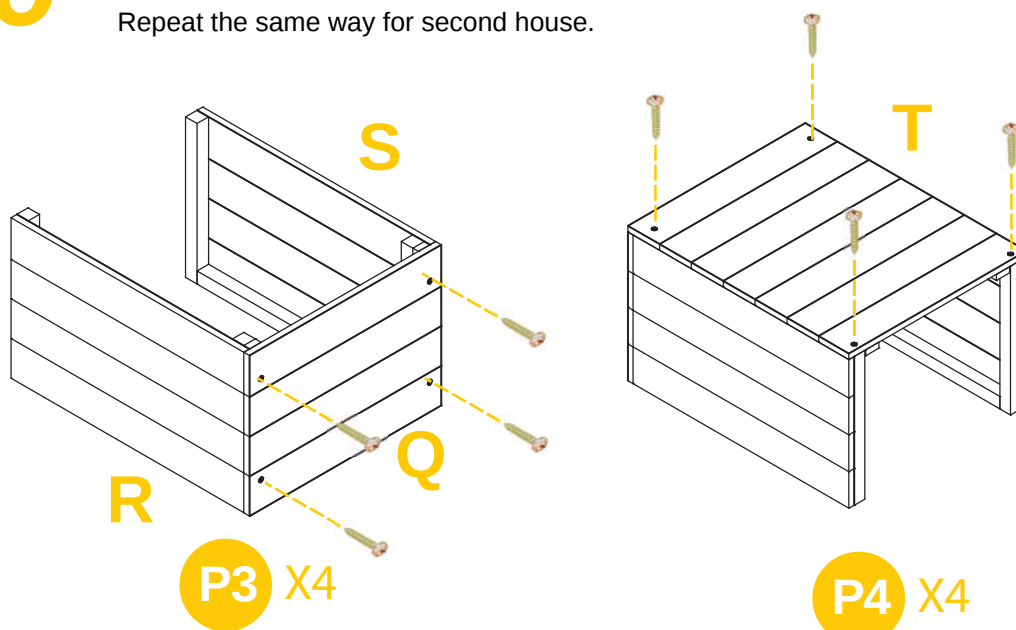

07


Screw the small house to bottom layer by 4xP4 screws.

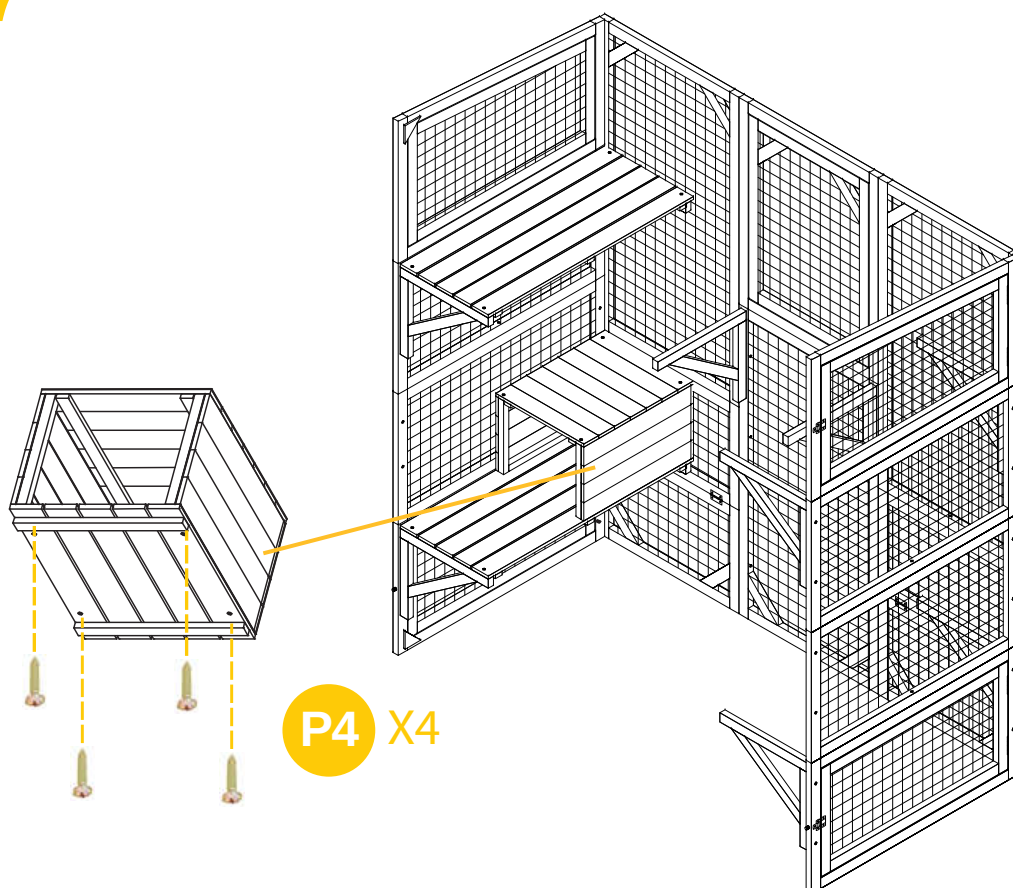

PRODUCT ASSEMBLY


08

Attach the layer Part O to the bracket by 4xP4 screws.

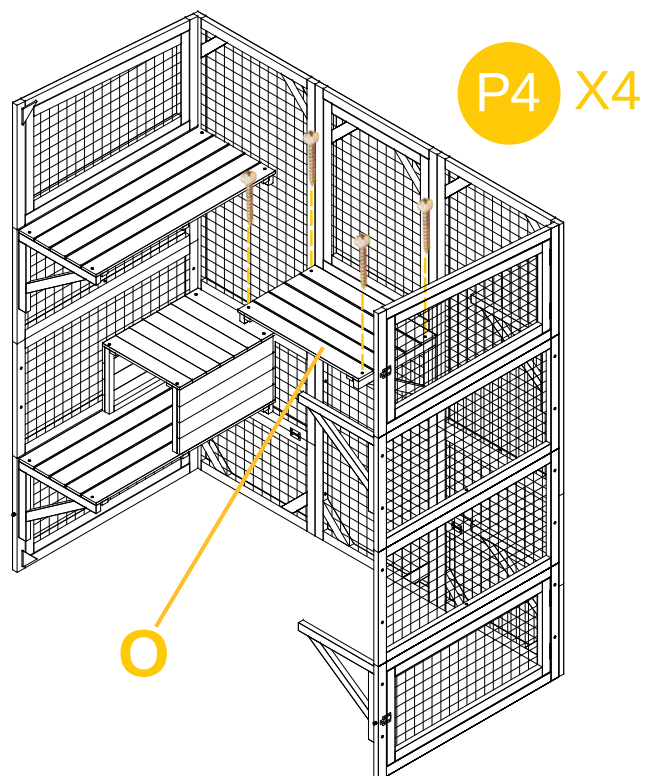


09

Attach the layer Part N & P to the bracket by 4xP4 screws each.

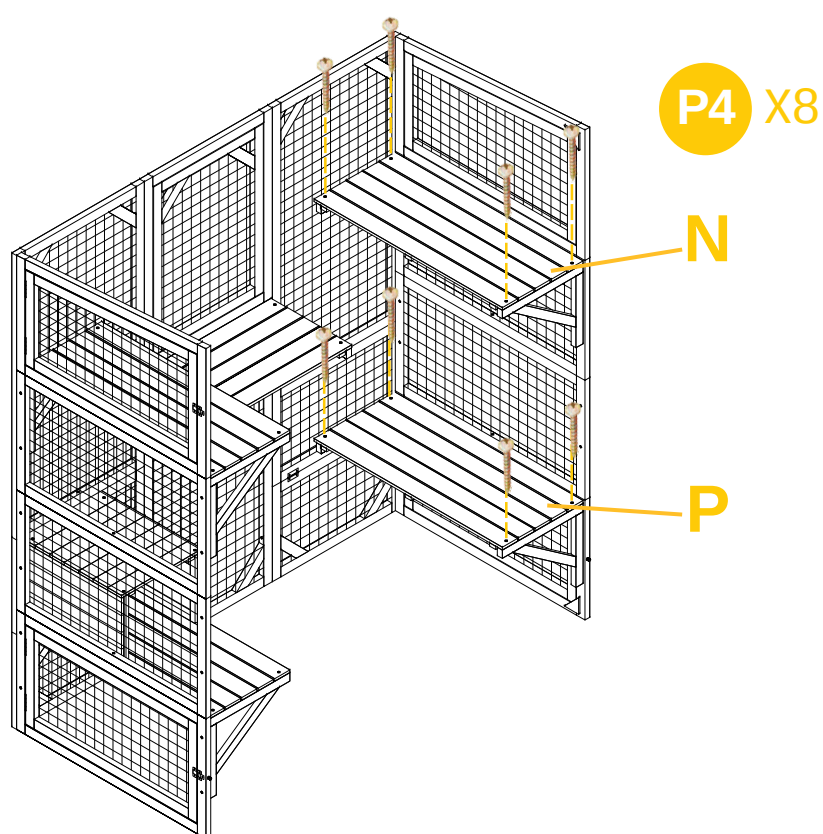


PRODUCT ASSEMBLY

10 Screw the small house to bottom layer by 4xP4 screws.

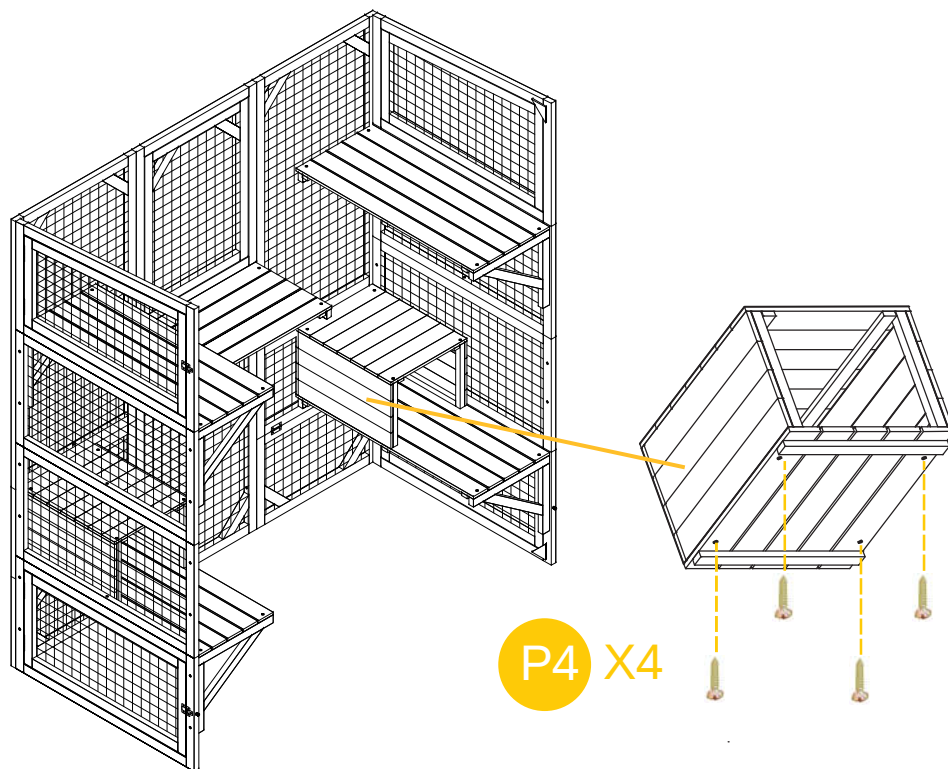


11 Attach the front panel by 16xP2 screws..

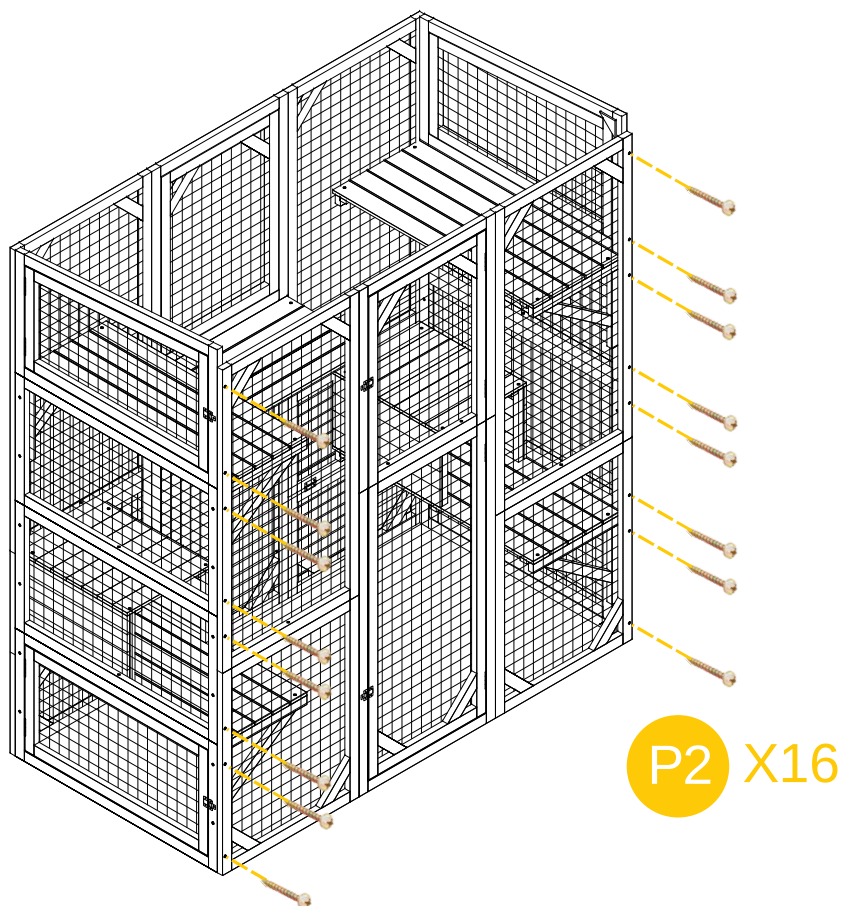

PRODUCT ASSEMBLY


12

Attach the Part U & V to side panels by 2xP2 screws.
Fix the the Part U & V to front panels by 4xP1 screws.

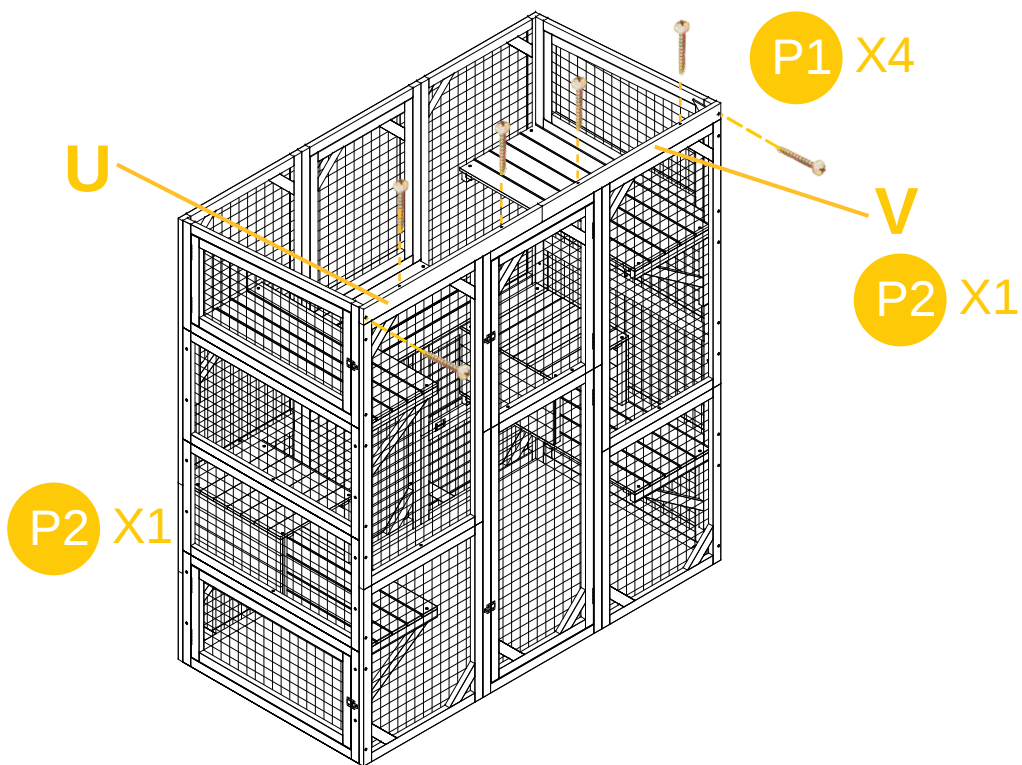

13


Attach the roof Part W&X by 12xP3 screws.

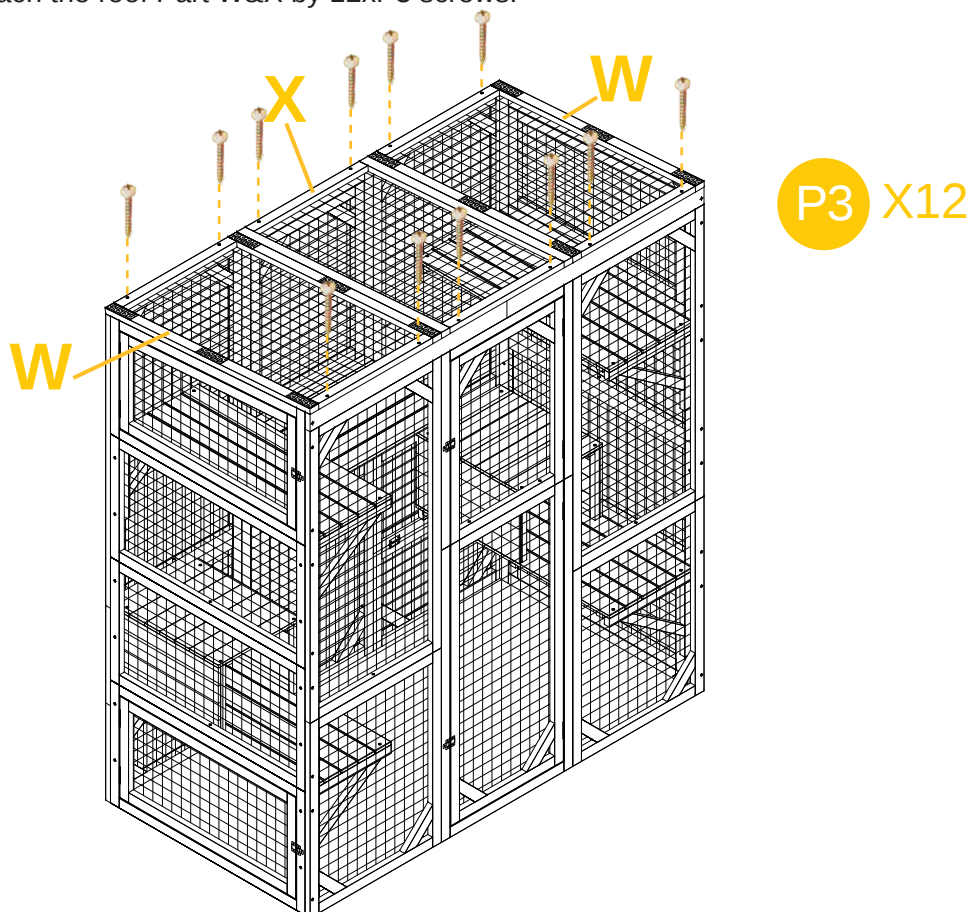

PRODUCT ASSEMBLY

14

Stick cover Part Y with velcro.

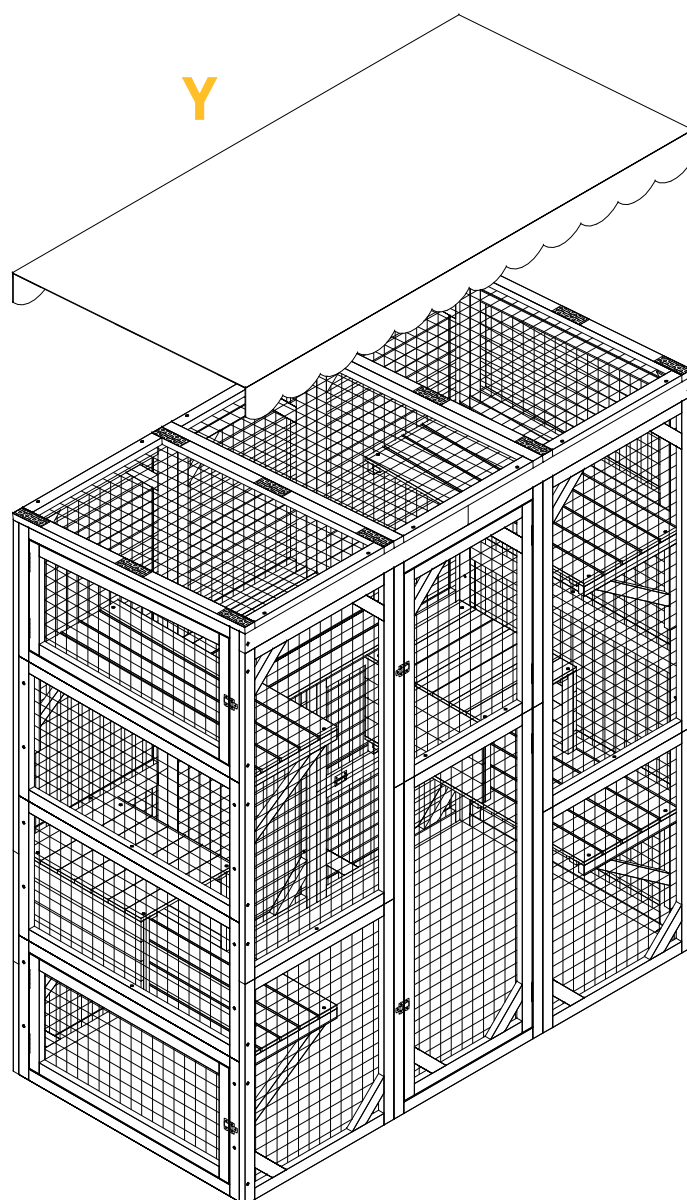



WARNING

Manufacturer and seller expressly disclaim any and all liability for personal injury, property damage or loss, whether direct, indirect, or incidental, resulting from the incorrect attachment, improper use, inadequate maintenance, or neglect of this