

## TOOLS NEEDED:




PHILLIPS  
SCREWDRIVER

## WHAT IS INCLUDED:



DARTBOARD CABINET (A)  
(Position of finger groove and cushion pad  
should be on the bottom of the cabinet)

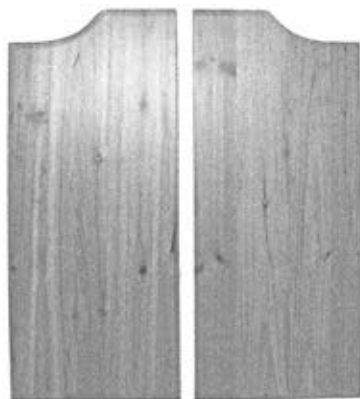

CABINET DOORS (B)




4 HINGES (C)



16 SCREWS (D)

1

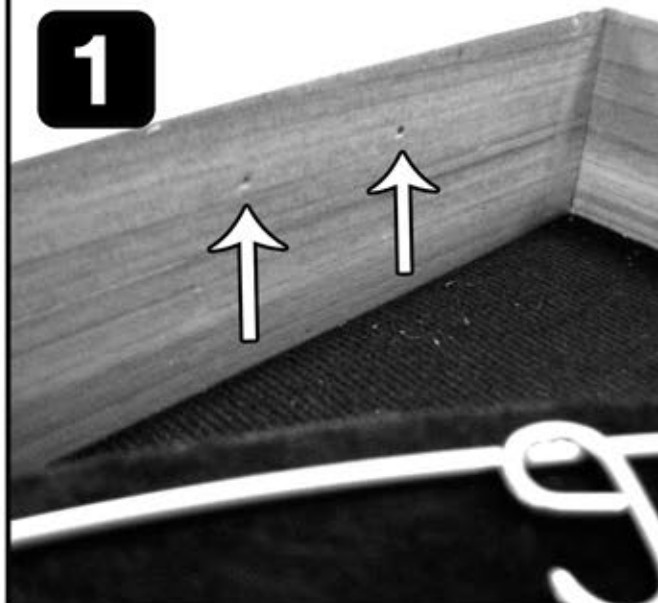


Locate pilot holes roughly 3 inches from the top and bottom on both sides of the cabinet (A).

2




Align hinge (C) with pilot holes and fasten with screws provided (D). Repeat for remaining 3 hinges.

3

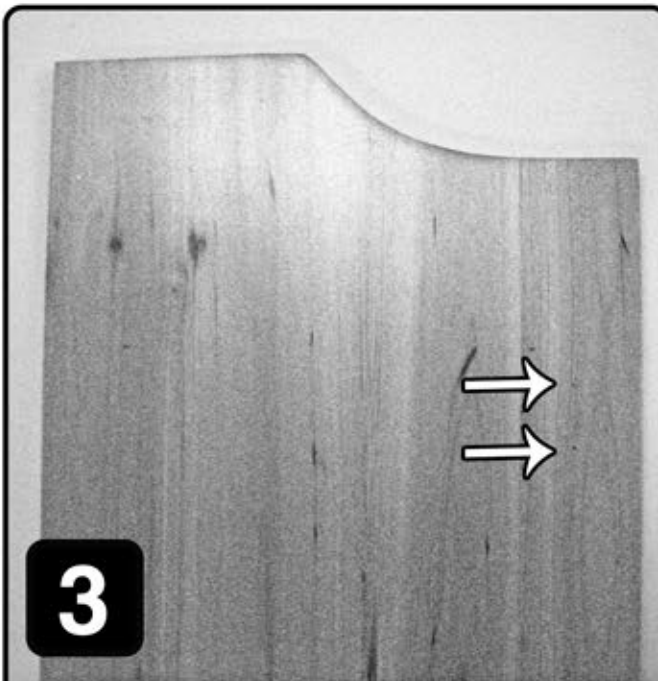

Locate pilot holes on cabinet door (B).

4

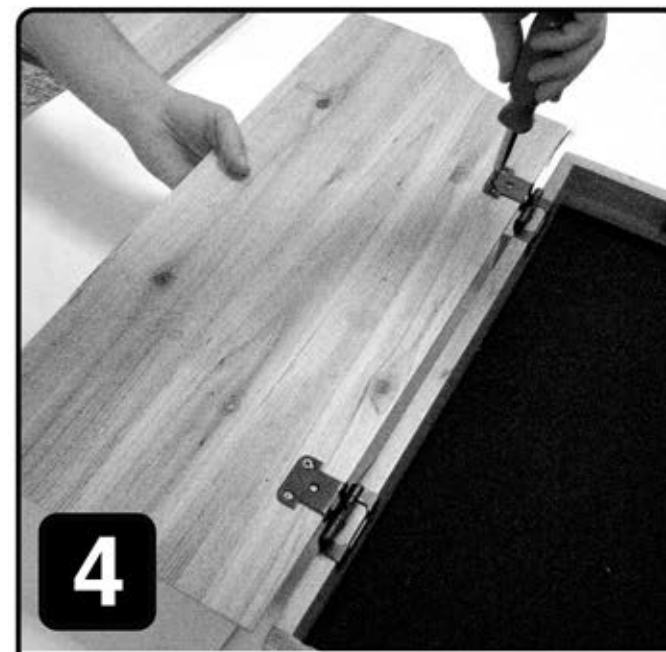

Align hinges (C) with pilot holes and fasten with screws provided (D). Repeat for opposite door.