
ASSEMBLY INSTRUCTION


PLEASE READ BEFORE ASSEMBLING!

Tip #1: Make sure you've taken all the pieces and hardware out of its packaging before discarding the box. Assembly on top of flattened box/ blanket is recommended.

Tip #2: Using page 2 and/or page 3 of instruction manual make sure all pieces and hardware are accounted for.





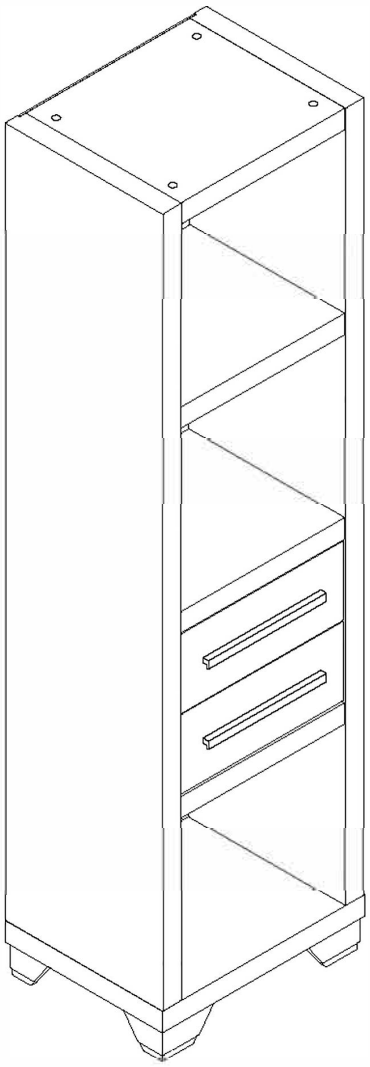


PARTS IDENTIFICATION





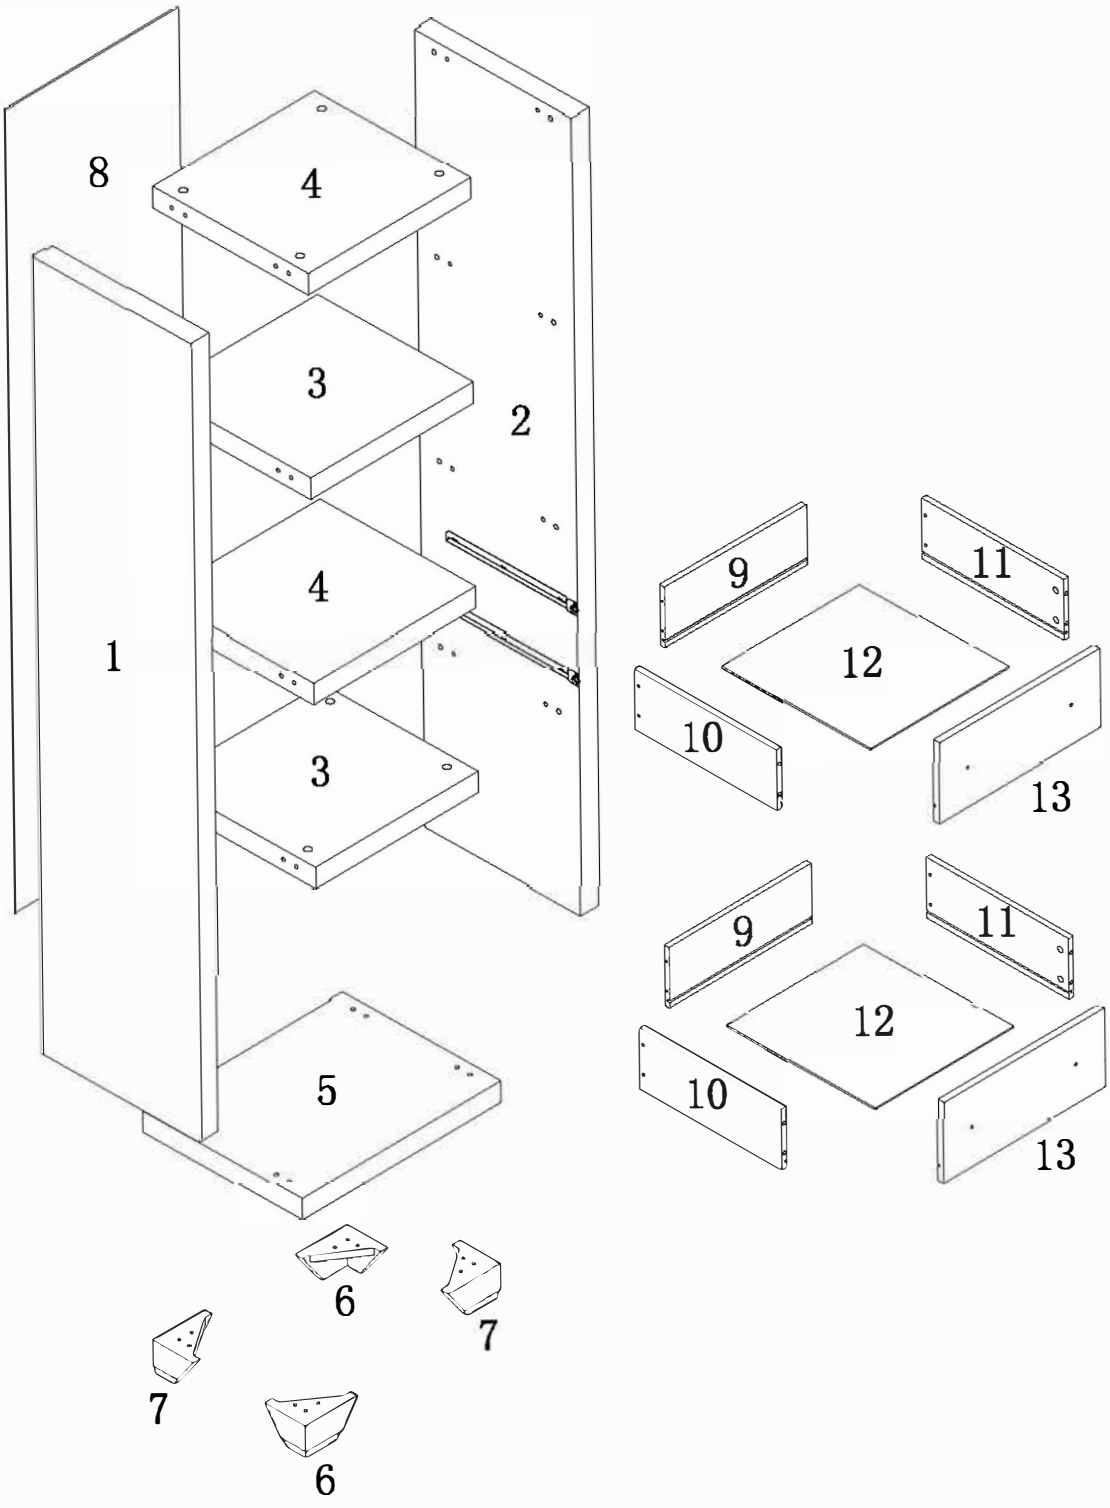


(1)	1pc
(2)	1pc
(3)	2pcs
(4)	2pcs
(5)	1pc
(6)	2pcs
(7)	2pcs
(8)	1pc
(9)	2pcs
(10)	2pcs
(11)	2pcs
(12)	2pcs
(13)	2pcs


HARDWARE IDENTIFICATION

A		L29mm	16pcs
B		□15mm	16pcs
C		□7 x 58mm	4pcs
D		□4 x 35mm	12pcs
E		Z1016	45pcs
F		□4 x 30mm	8pcs
G		L20mm	8pcs
H		□12mm	8pcs
I		256mm	2pcs
J		□4 x 20mm	4pcs
K		□18mm	8pcs
L		□8×25mm	20pcs
M		197×5×1mm	1pc
N		12×12×1mm	2pcs
O		ϕ4X25	1pc
P		ϕ5X40	1pc
Q		ϕ8X40	1pc
R		□16mm	4pcs
S		Glue: For securing please apply to wood dowel first before inserting into panel	1pc


ASSEMBLY INSTRUCTION

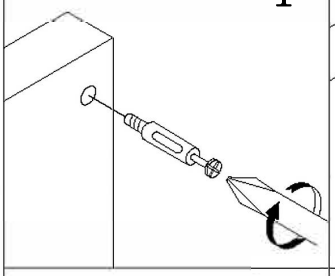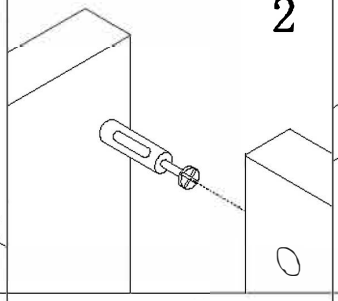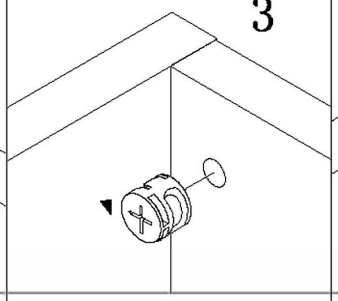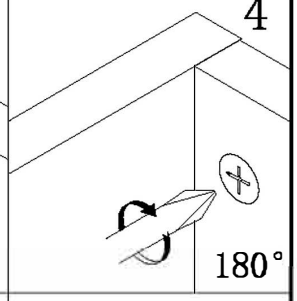HOW TO  Cam Bolt  Cam Lock	1 	2 	3 	4 
	1. Screw Cam Bolt into panel.	2. Insert Cam Bolt into bolt hole of joining panel.	3. Insert Cam Lock. arrow facing bolt.	4. Gently turn Cam Lock clockwise to lock position.

STEP1

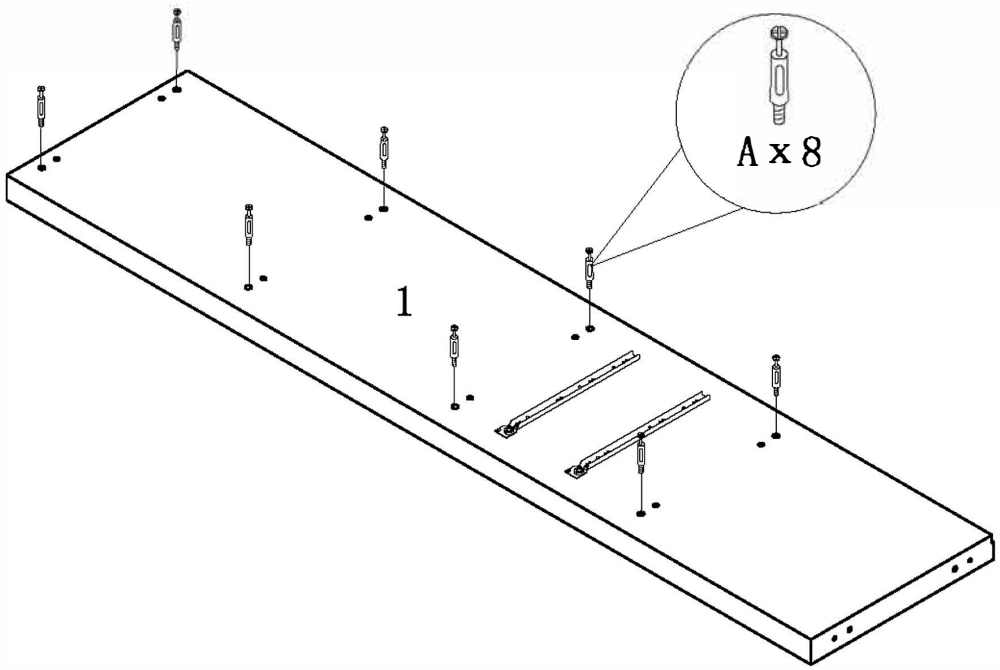


ASSEMBLY INSTRUCTION

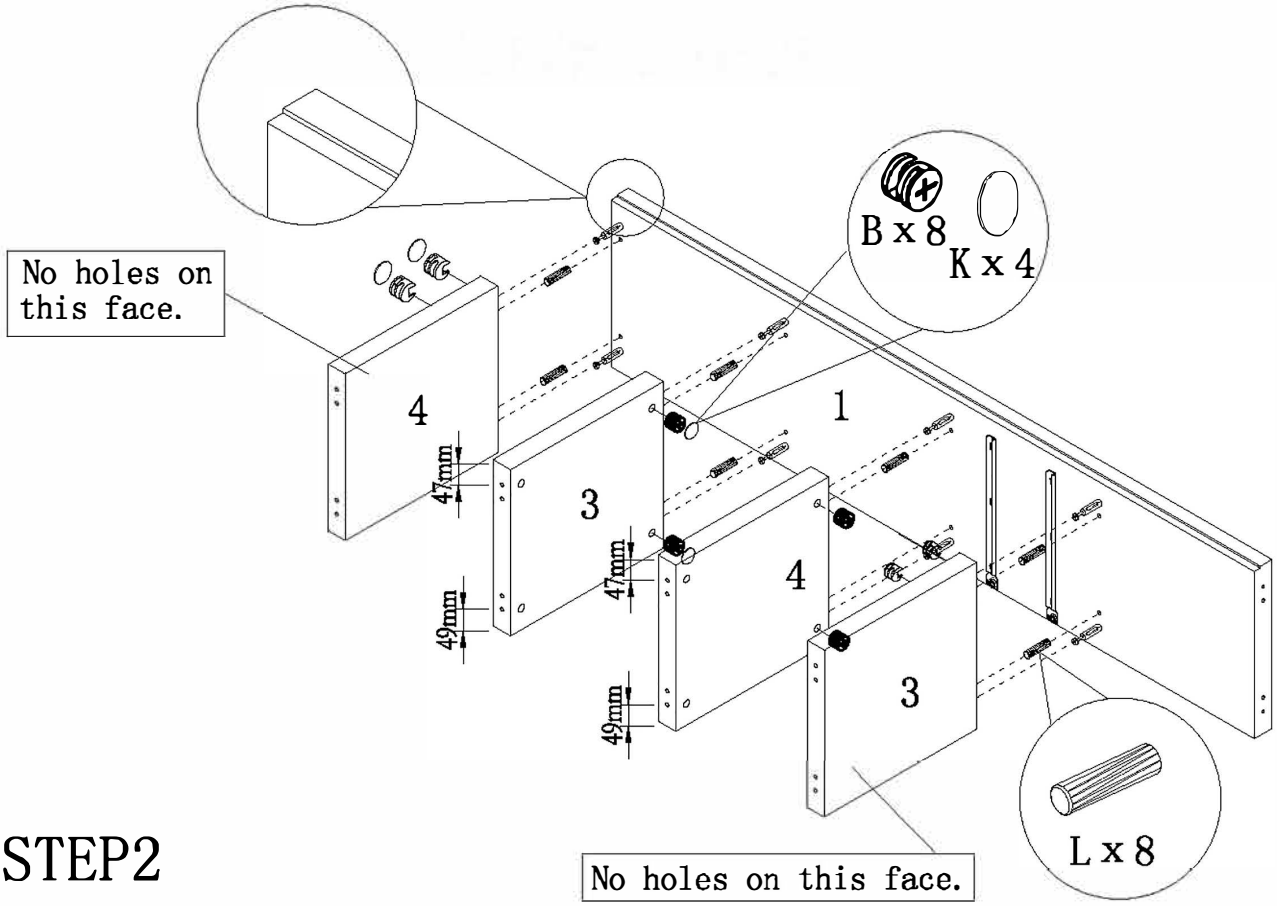


STEP2

STEP3

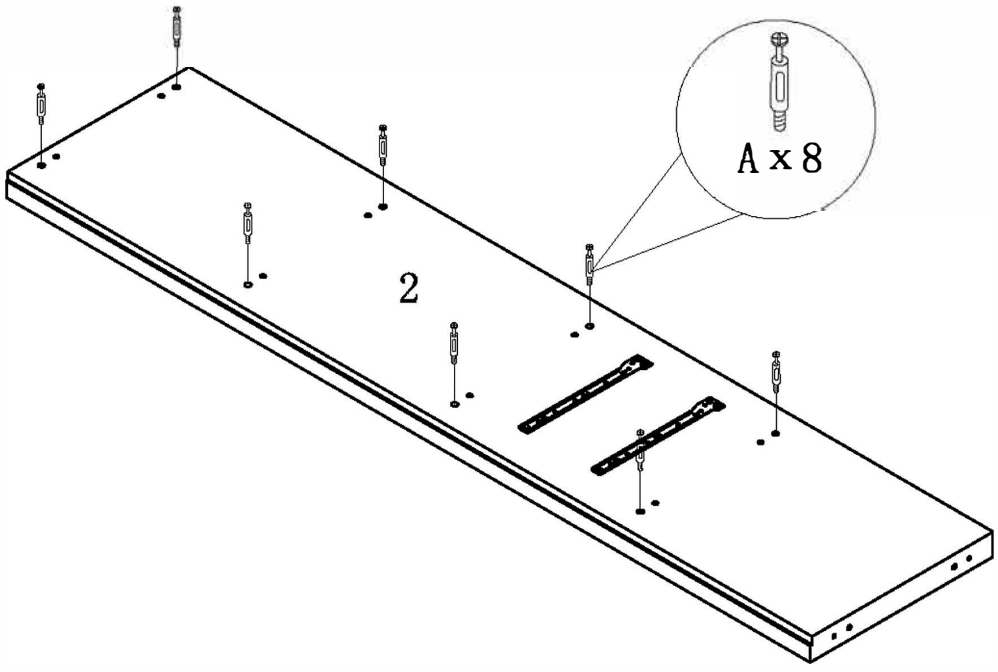


ASSEMBLY INSTRUCTION

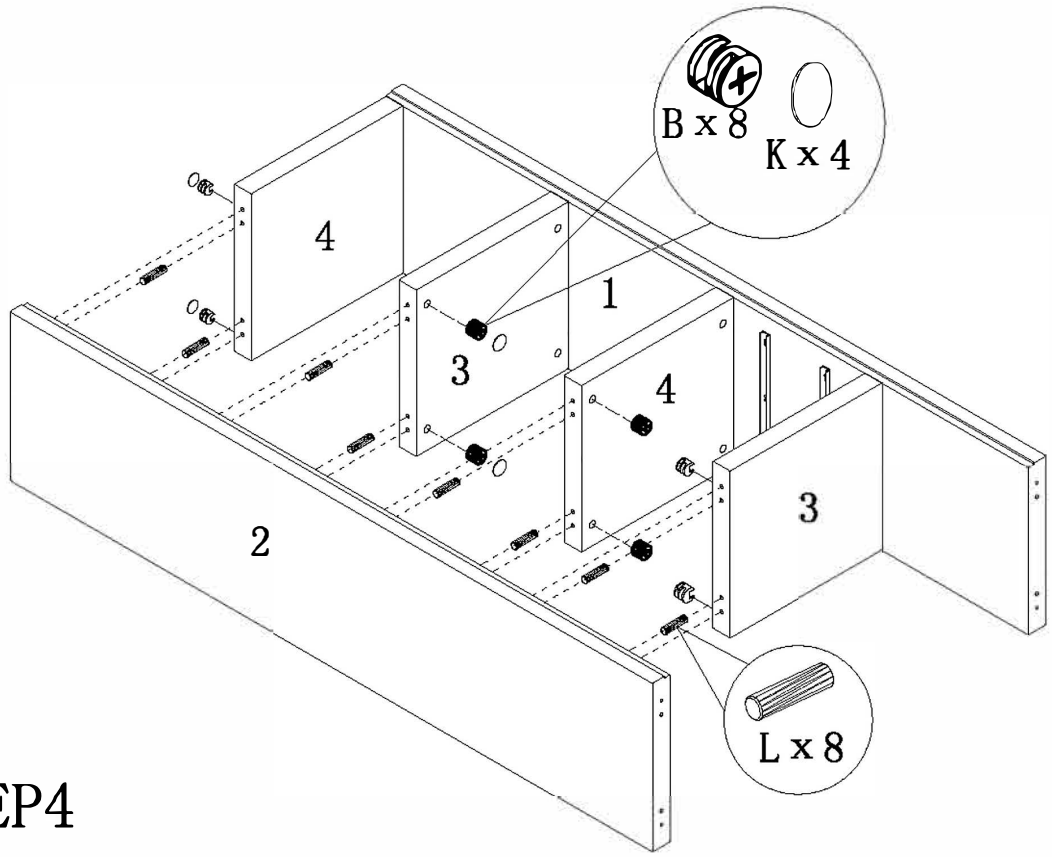



STEP4

STEP5

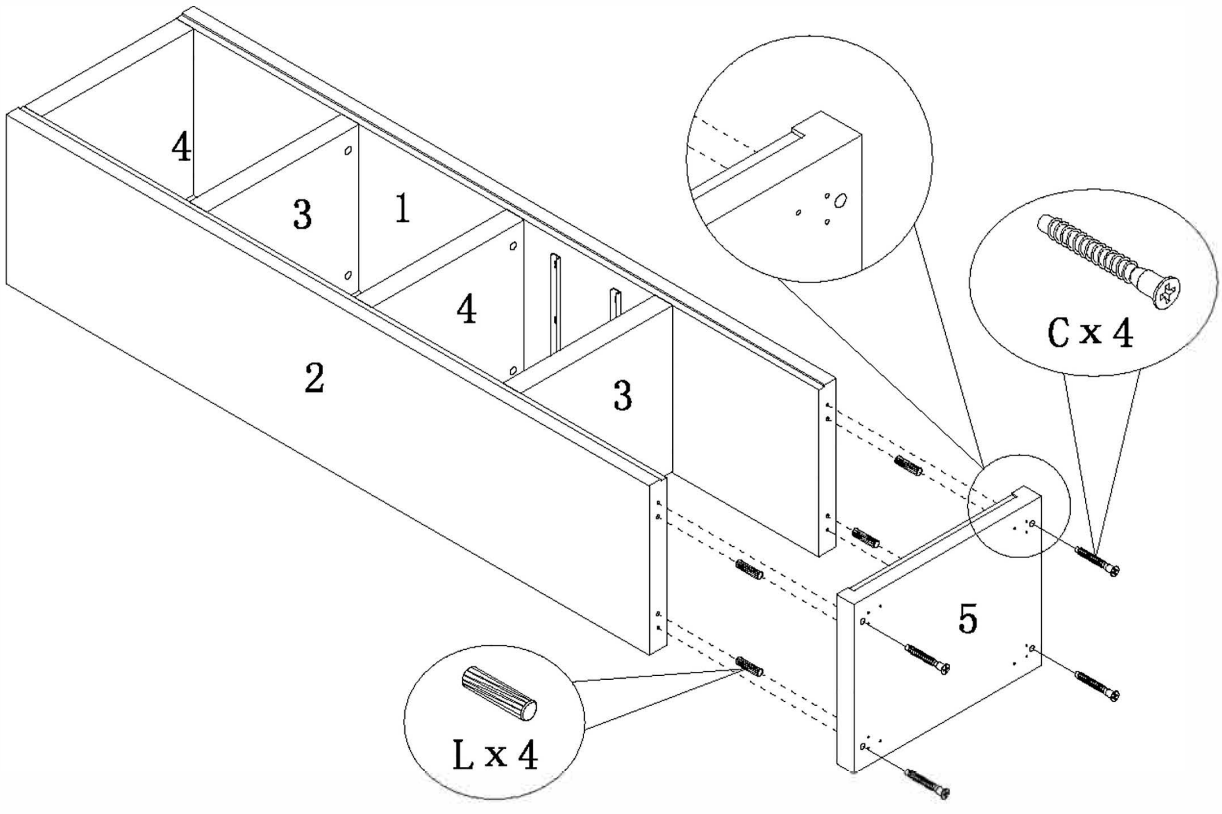


ASSEMBLY INSTRUCTION

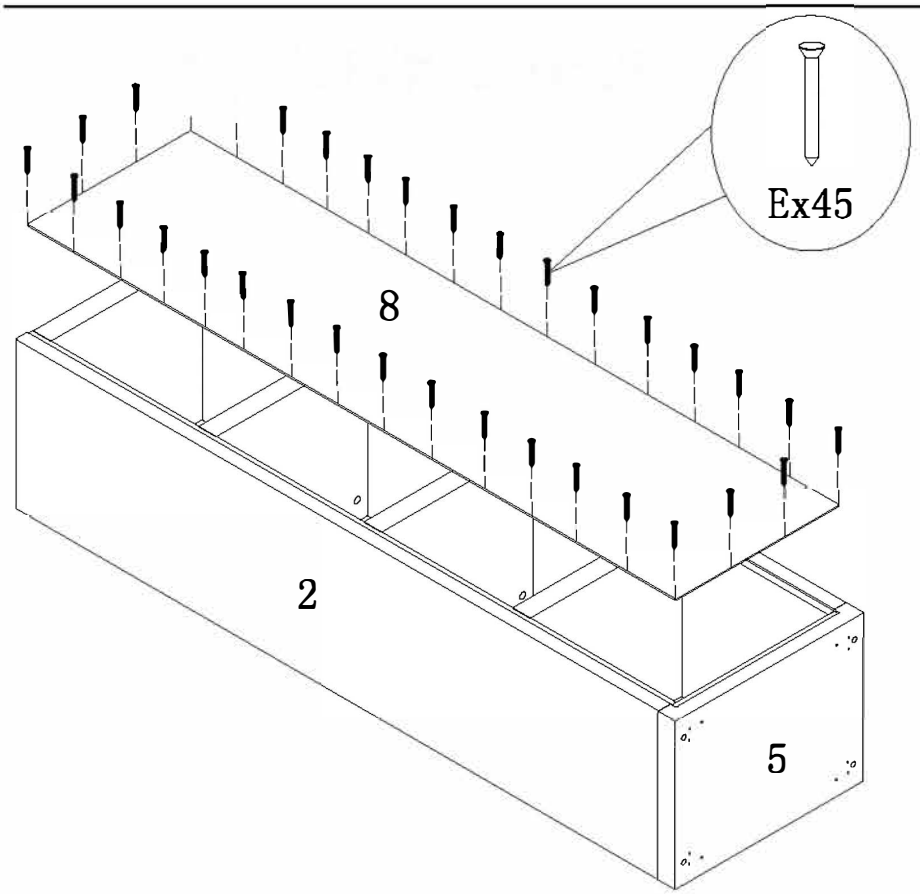

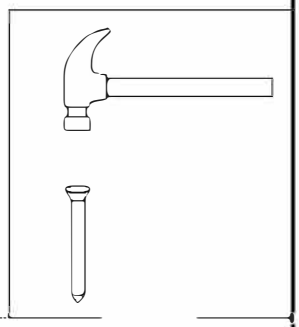


STEP6

STEP7

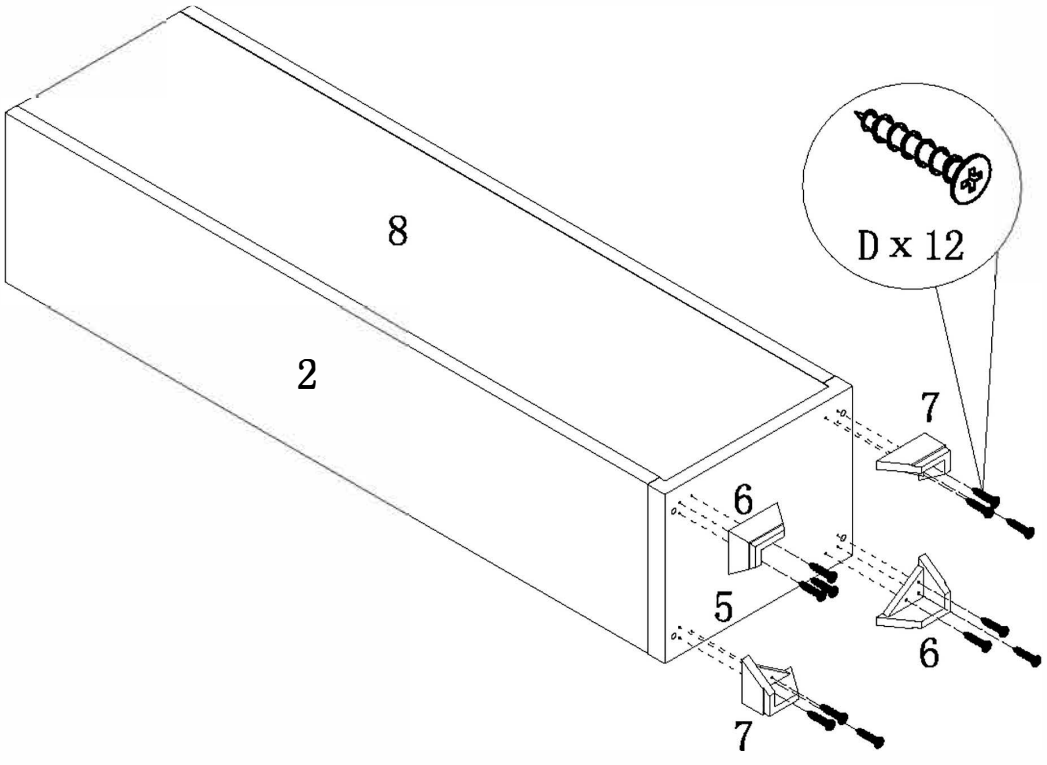


ASSEMBLY INSTRUCTION

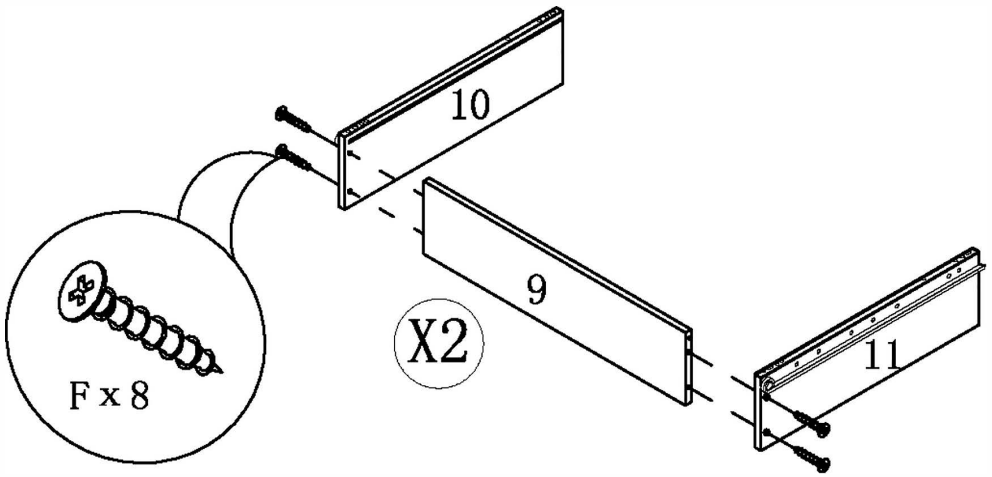


STEP8


STEP9

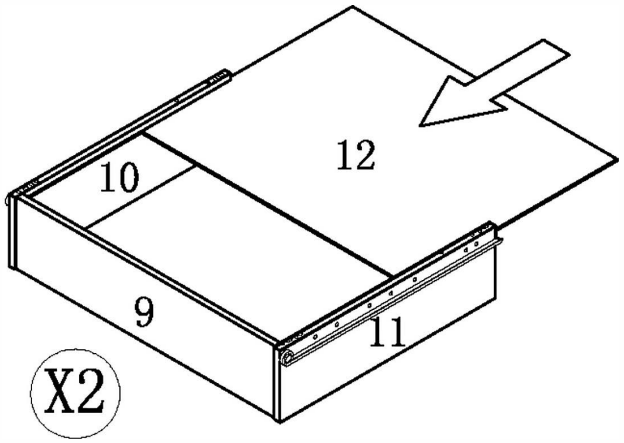


STEP10

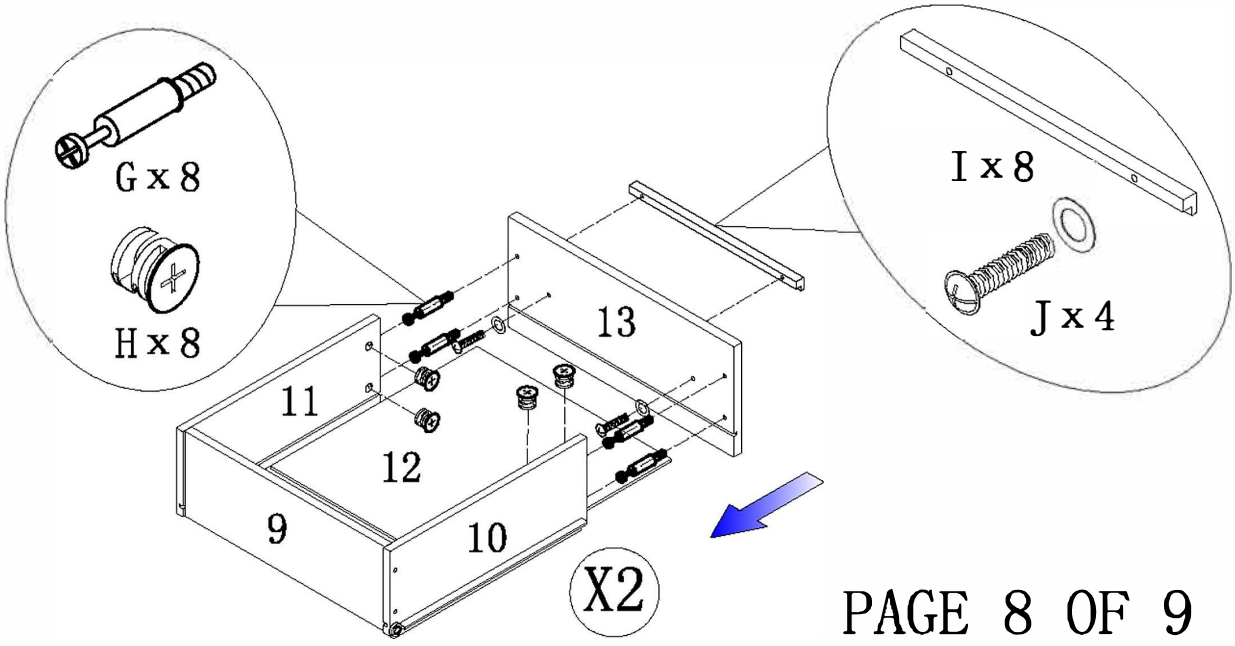


ASSEMBLY INSTRUCTION

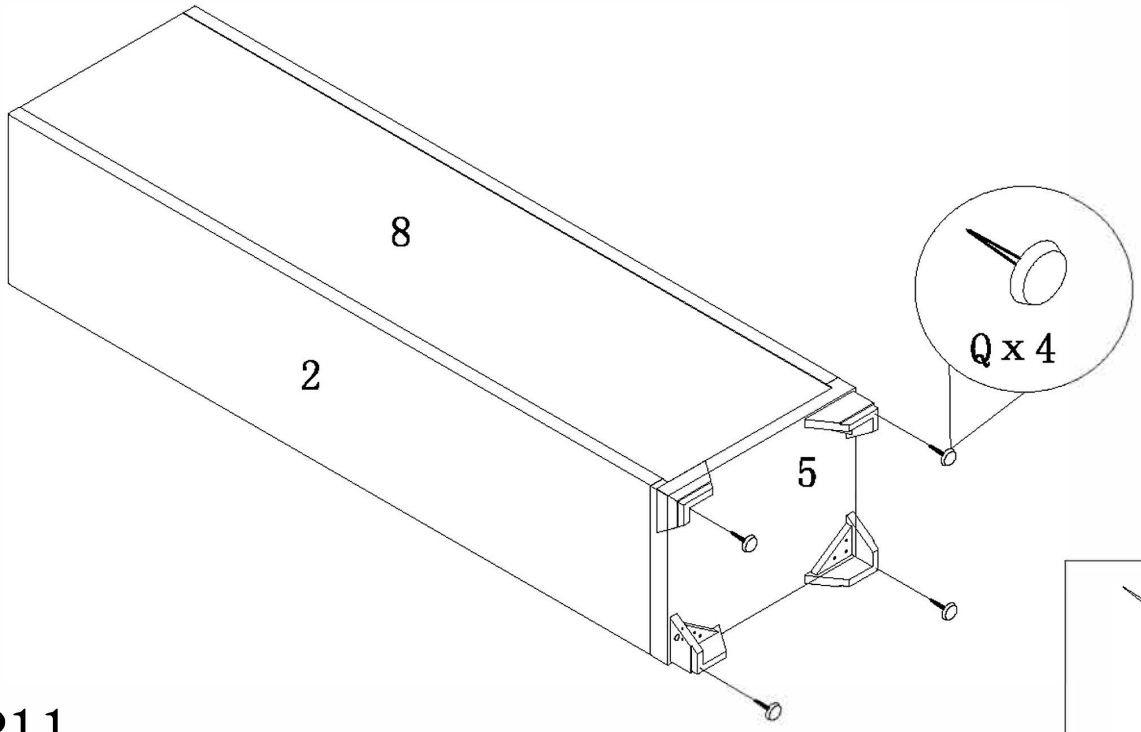


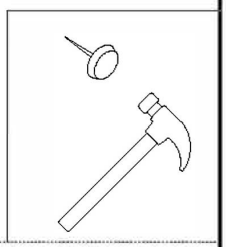

STEP11


STEP12

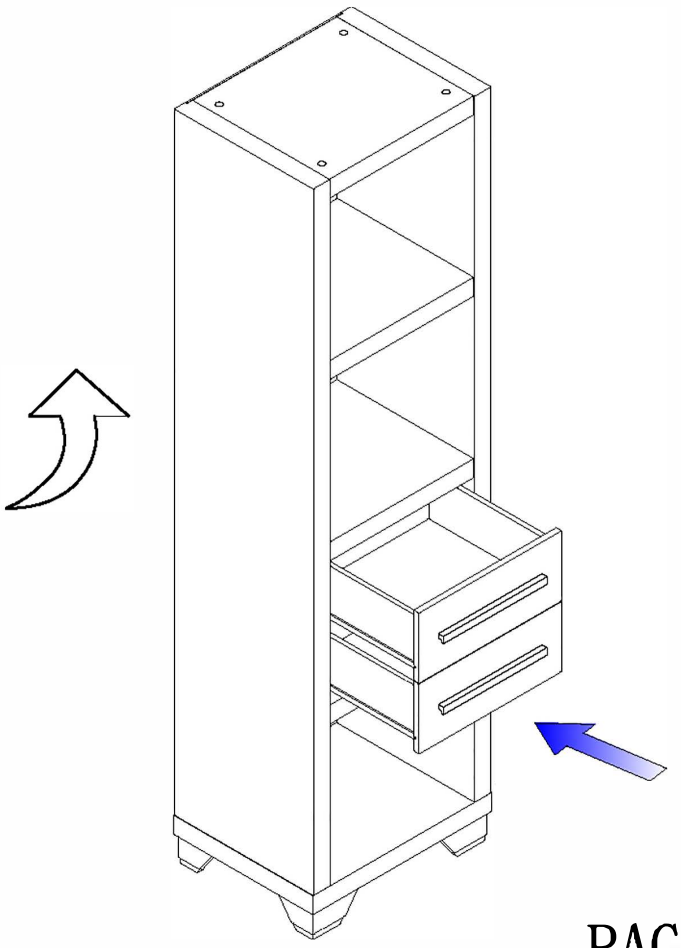


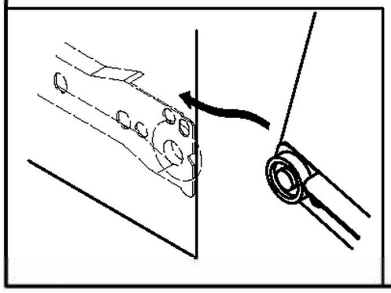

ANTI-TIPPING STRAP INSTRUCTION

HARDWARE(INCLUDED):


DRYWALL ANCHOR ϕ8X40 X 1PC



METAL BRACKETS 12×12×1 X 2PCS


DRYWALL SCREW ϕ5X40 X 1PC


STRAP 197×5×1 X 1PC


FLATHEAD SCREW ϕ4X25 X 1PC


TOOLS NEEDED (NOT INCLUDED):

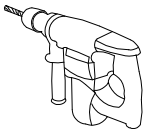
DRILL & DRILL BIT


LIGHT HAMMER


Note: Hardware included only compatible with standard drywalls.

STEP 1

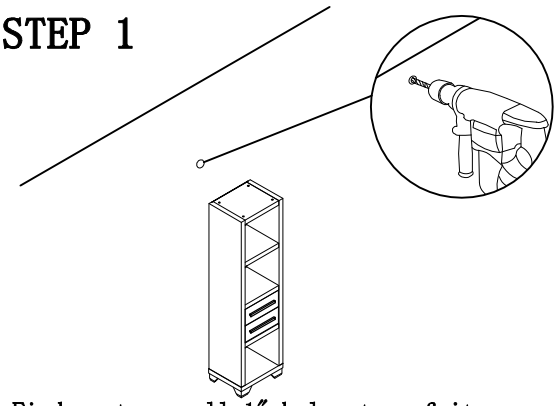


1.Find spot on wall 1″ below top of item.
2.Using a drill bit slightly thinner than anchor ,drill hole into drywall.

STEP 2

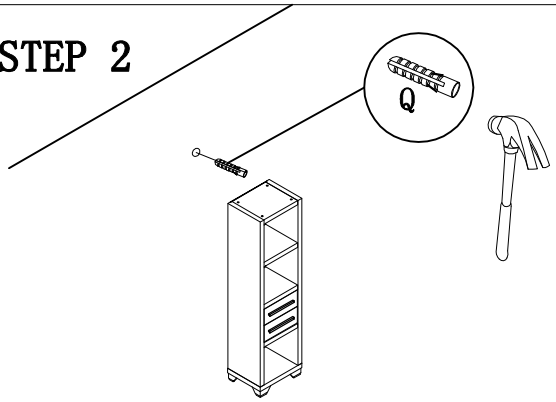


1.Use a light hammer to tap anchor into hole.
2.Anchor should fit snugly.lf hole is too small, drill again to increase hole size .Do not force anchor into wall.

STEP 3

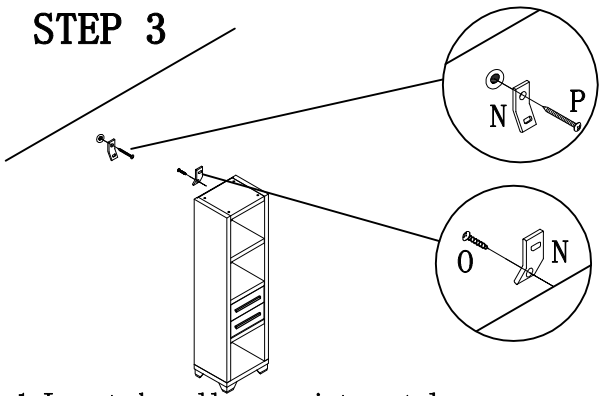

1.Insert drywall screw into metal bracket and into drywall anchor.
2.Insert flathead screw into second metal bracket and into back of item.along top edge.

STEP 4

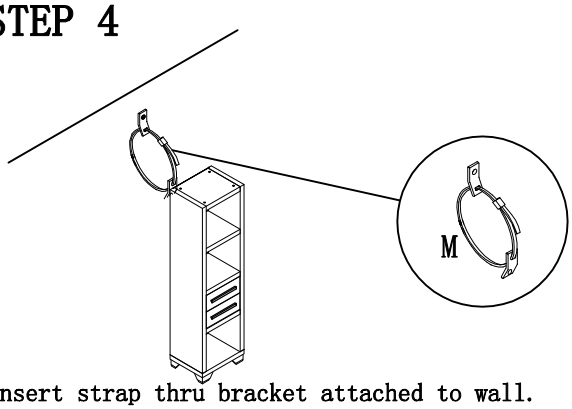

1.Insert strap thru bracket attached to wall. then thru bracket on item , and into head of strap.
2.pull lightly til strap stops.
Assembly is complete.