



Installation instruction

HOU877

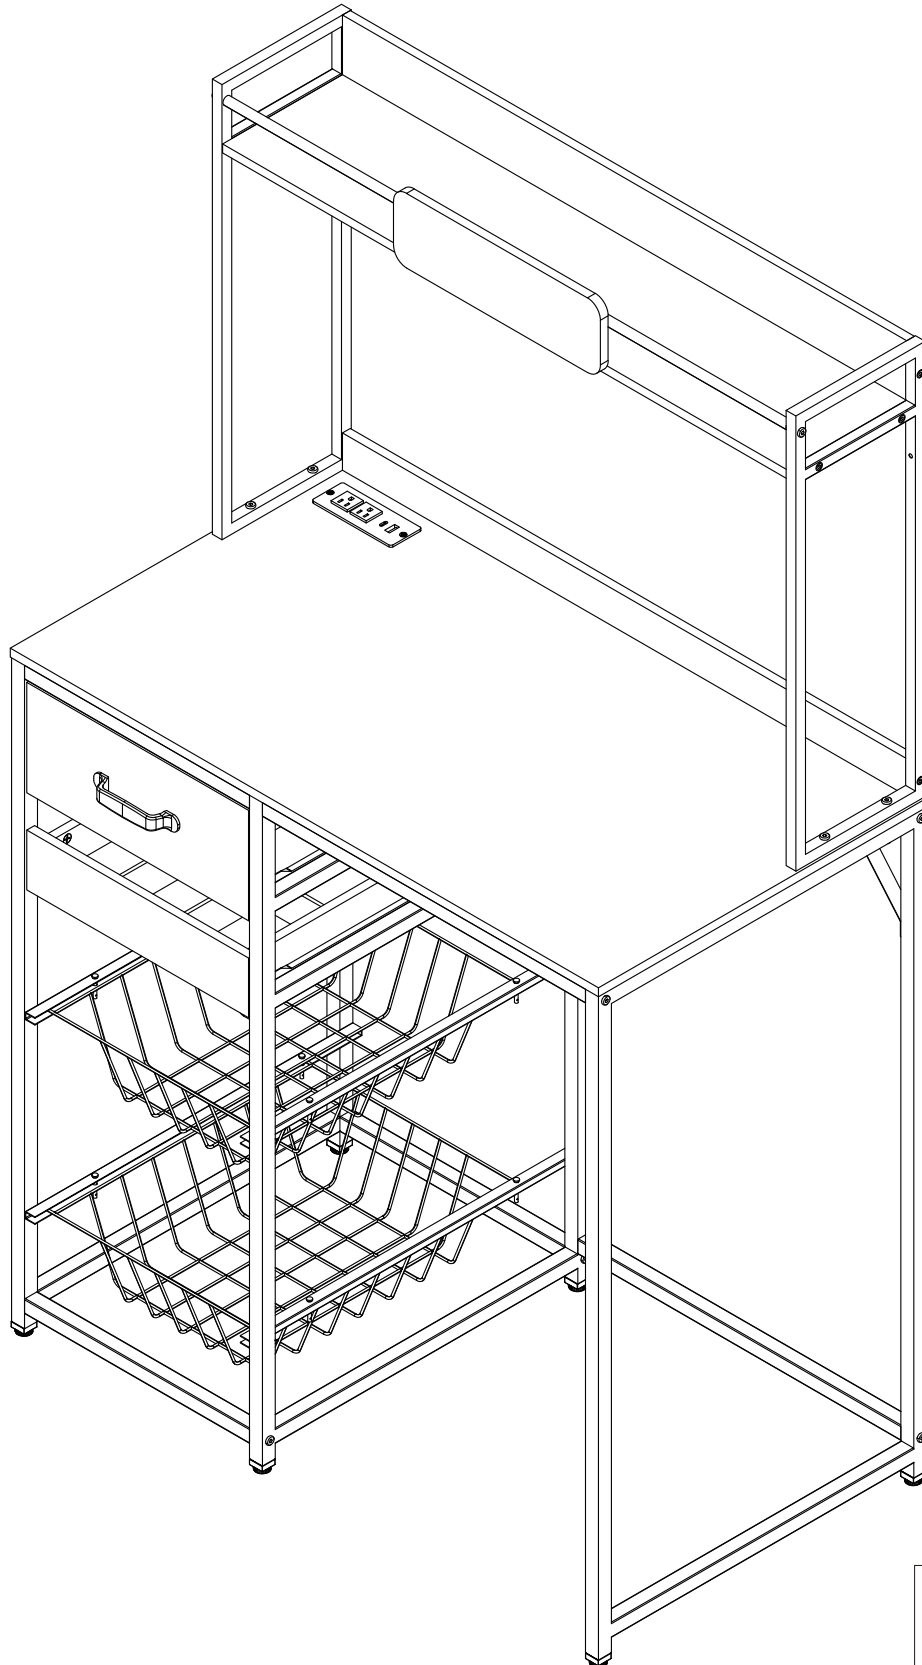


We come with the necessary tools for assembly
but for faster assembly, a power drill is recommended.








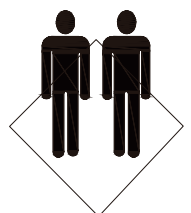


ASSEMBLED BY 2ADULTS

EXPLODED DRAWING:



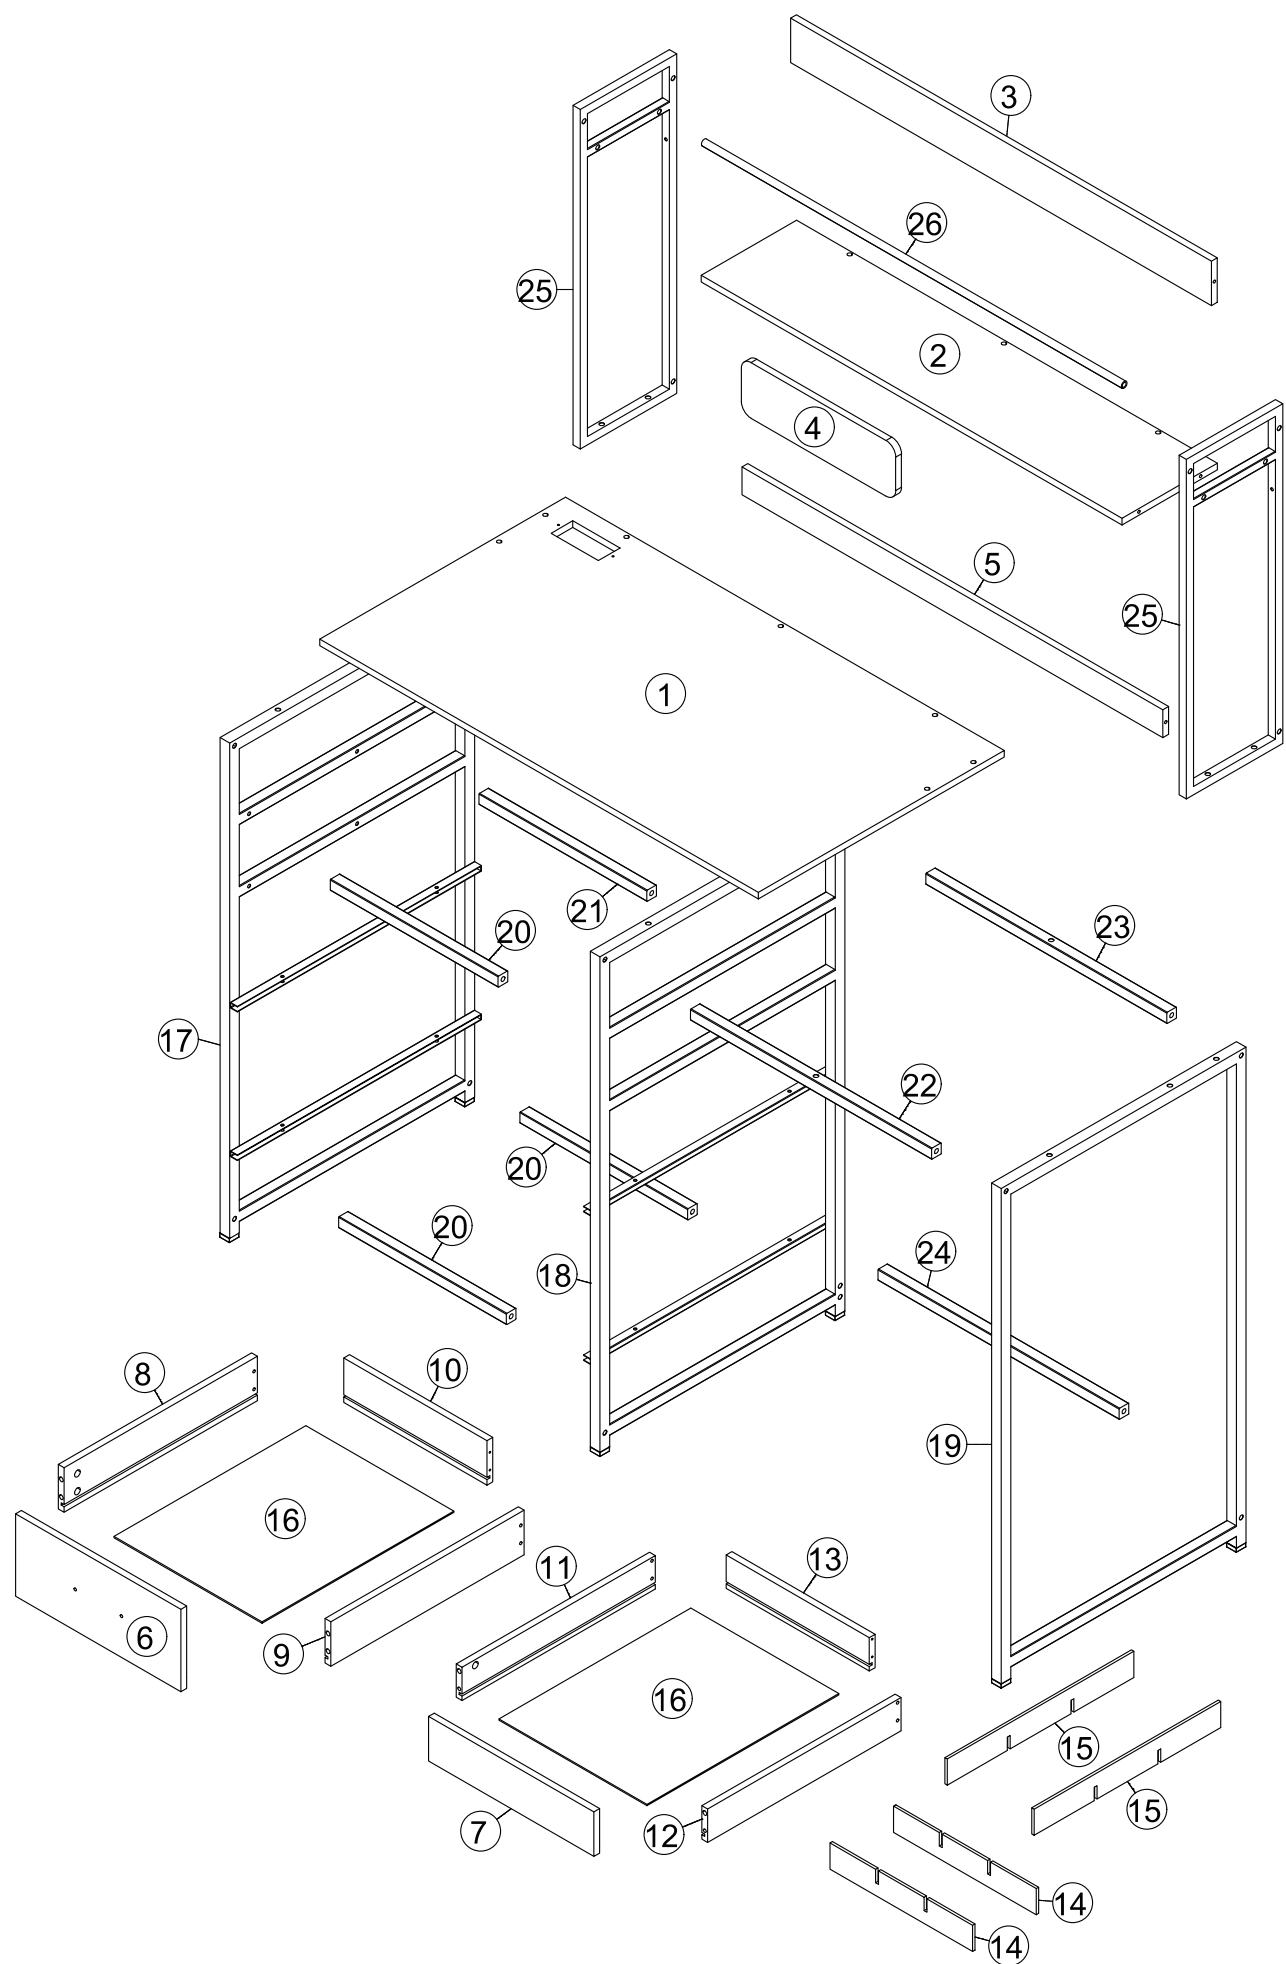



PARTS:

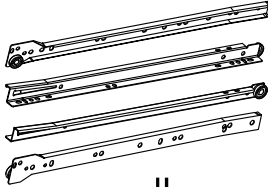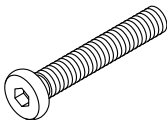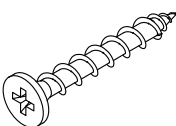 A X6+1 Ø6x35	 B X2+1 M6x30	 C X6+1 Ø12
 D X2	 E X10+1 M4x11	 F X14+1 M6.3x40
 G X4+1 M6x12	 H X6+1 M6x28	 I X12+1 M6x35
 J X8+1 M4x30	 K X4+1 M6x55	 L X8+1 M4x30
 M X1 M4x16	 N X8+1 M4x8	 O X4+1
 P X2	 Q X2	 R X1
 S X6+1	 T X1	 U X6
 V X2 M6x50	 W X2	 X X8
 Y X2	 Z X4 M4x11	

REMARK:


MINIFIX POSITION

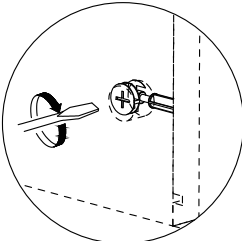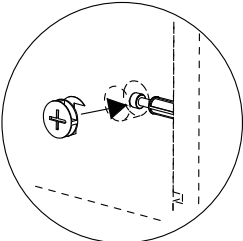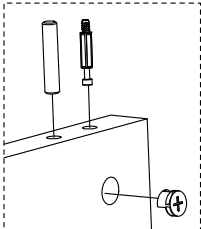

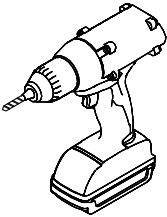

1.

S X6

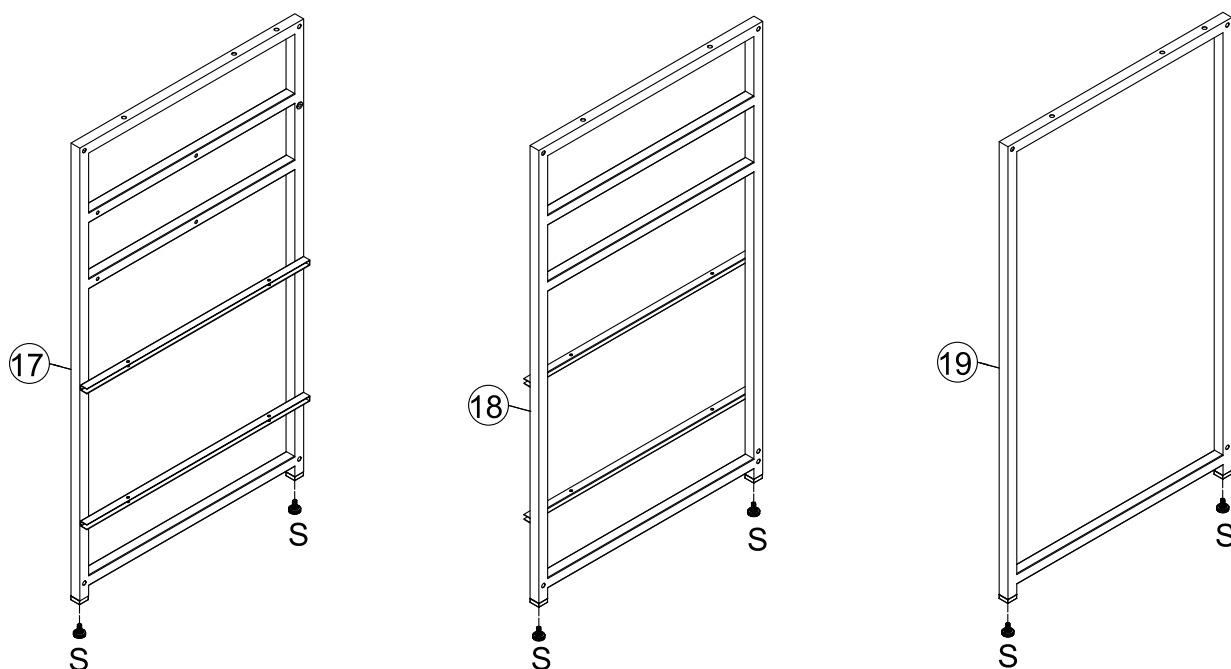

Install support foot S x6 on Part #17, Part #18, and Part #19 as shown.

2.



N X8



CL X2




CR X2

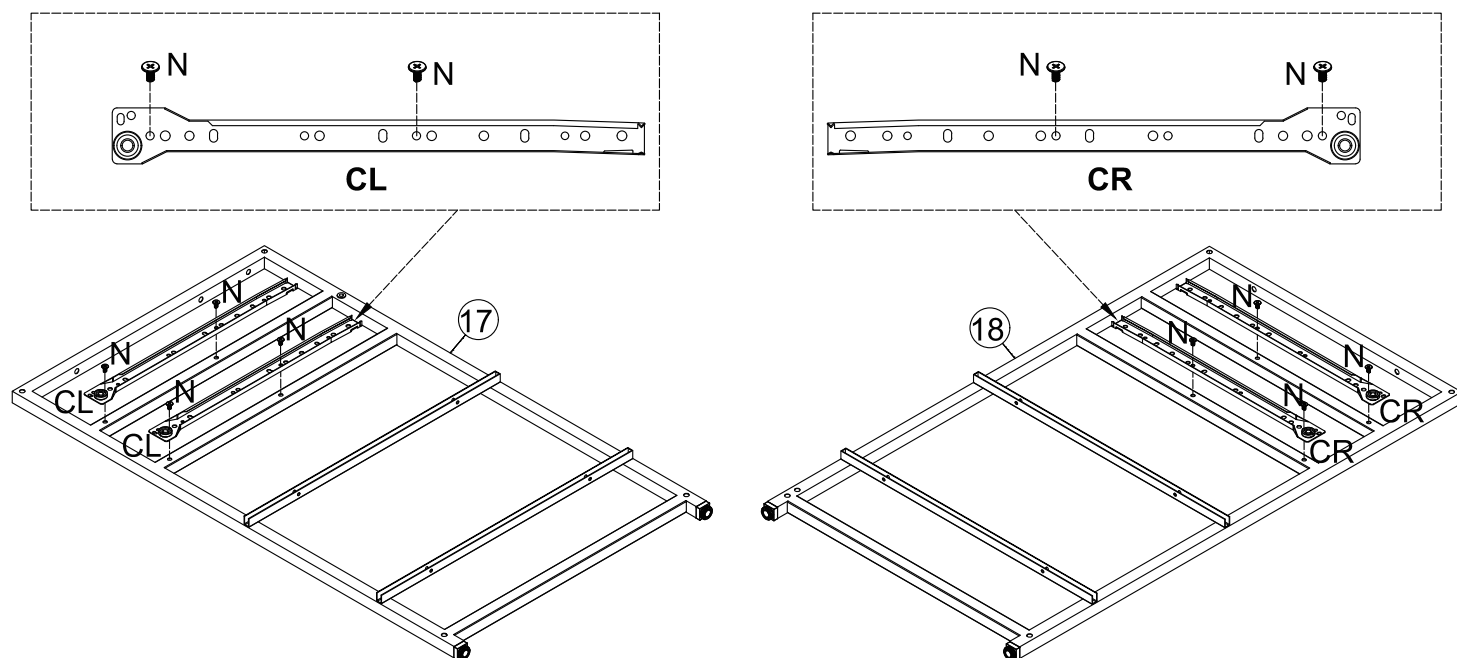


Install Rail CL x2 on Part #17 and Rail CR x2 on Part #18 with Screws N x8 as shown.

3.

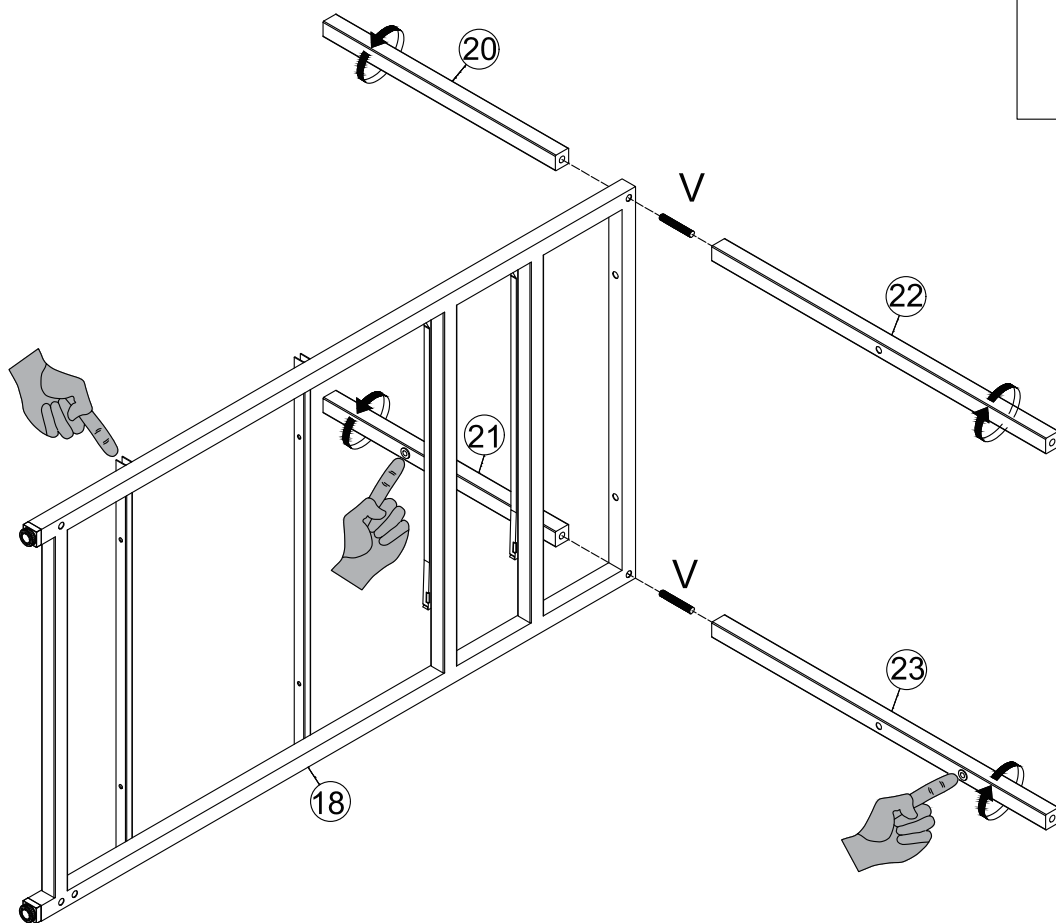

Attach Part #20 and Part #22 to Part #18 with Screw V as shown.
 Same way to attach Part #21 and Part #23 to Part #18 with Screw V as shown.
 Pay attention to the direction of Part #21, #23 and #18.



4.

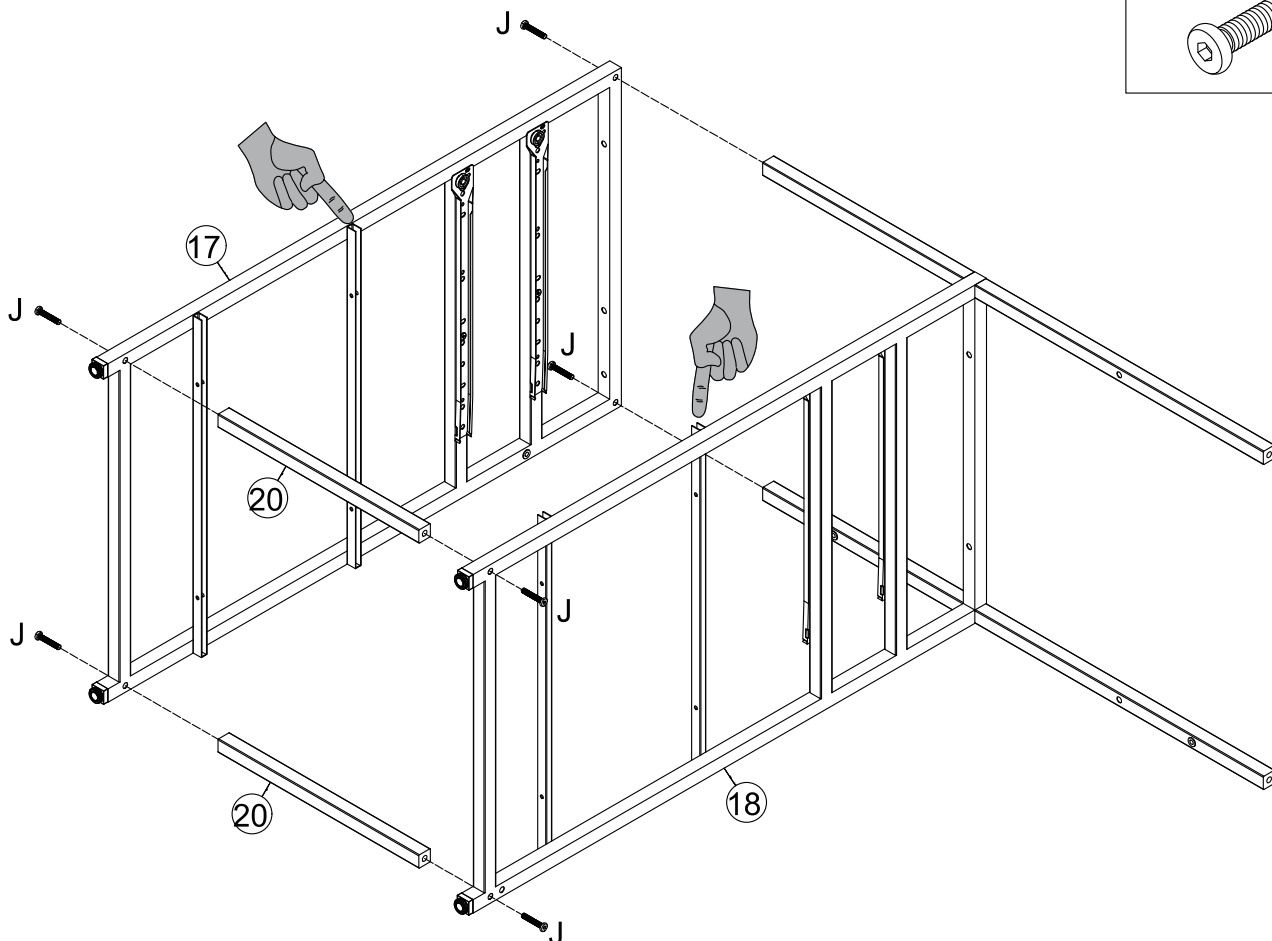

Attach Part #18 to Part #17 with Screws J x2 as shown.
 Attach Part #17 and Part #18 to Part #20 x2 with Screws J x4 as shown.


5.

J X4

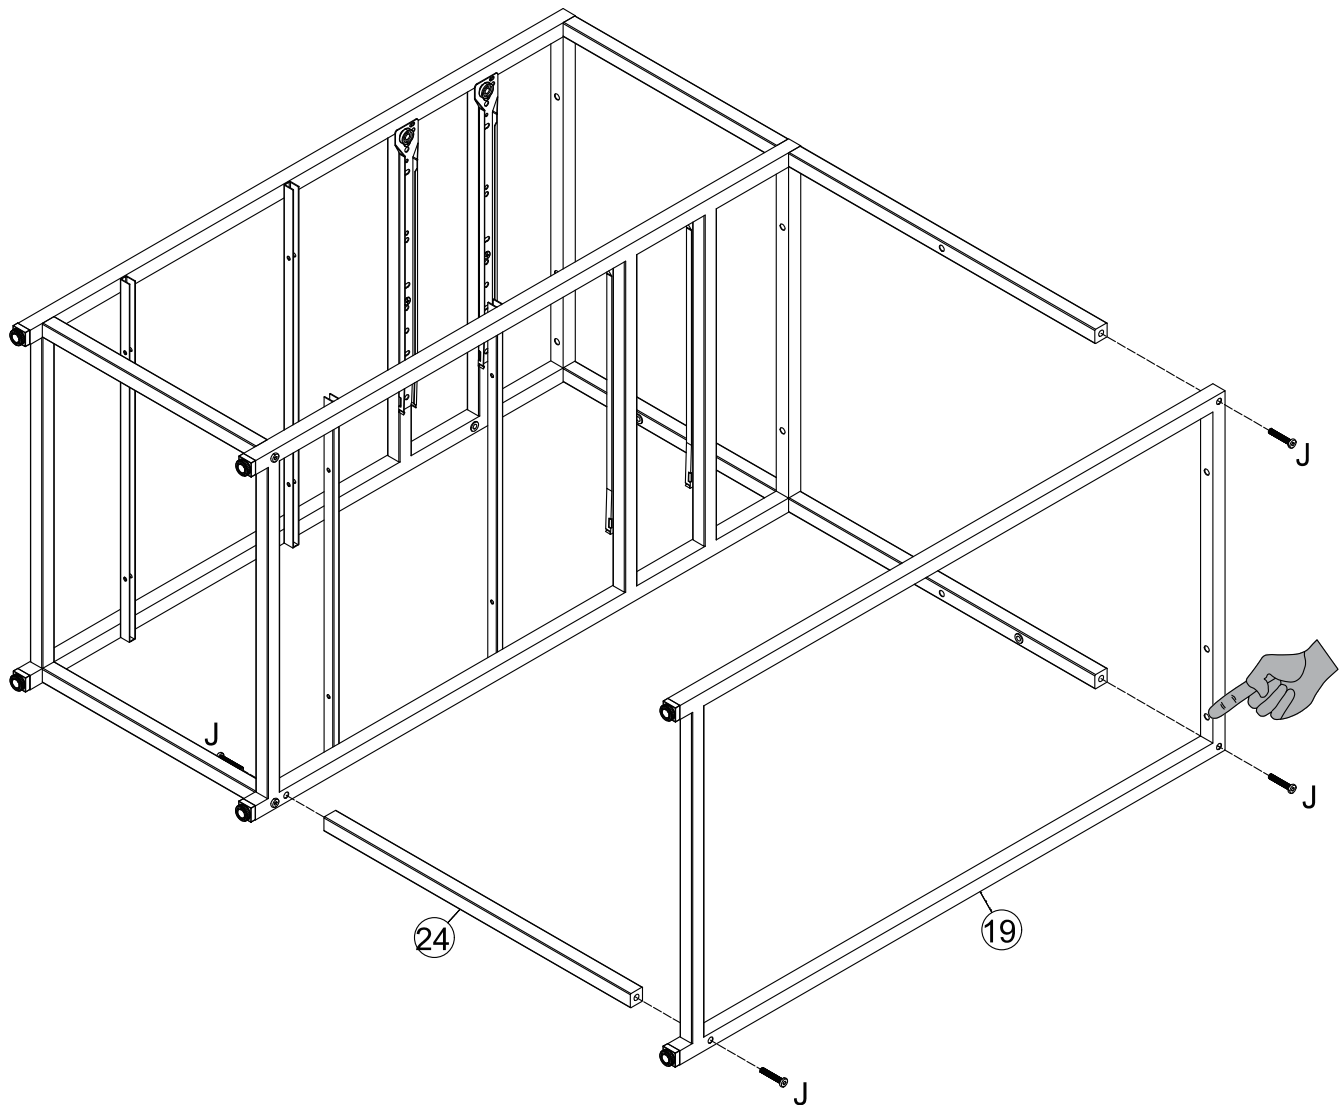

Attach Part #18 to Part #19 with Screws J x2 as shown.
Attach Part #18 and Part #19 to Part #24 with Screws J x2 as shown.


6.

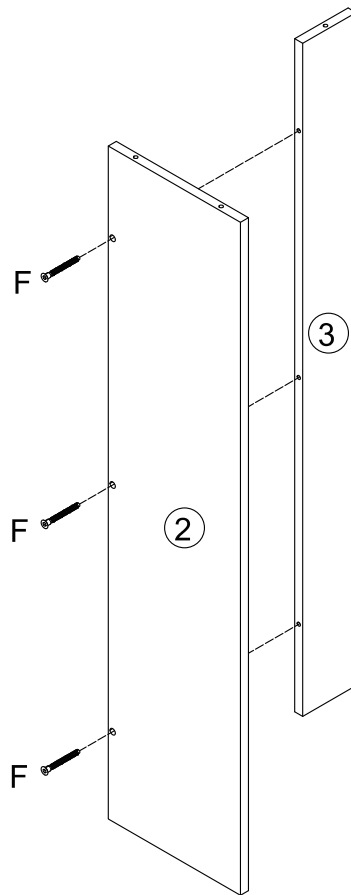


F X3

Attach Part #2 to Part #3 with Screws F x3 as shown.

7.

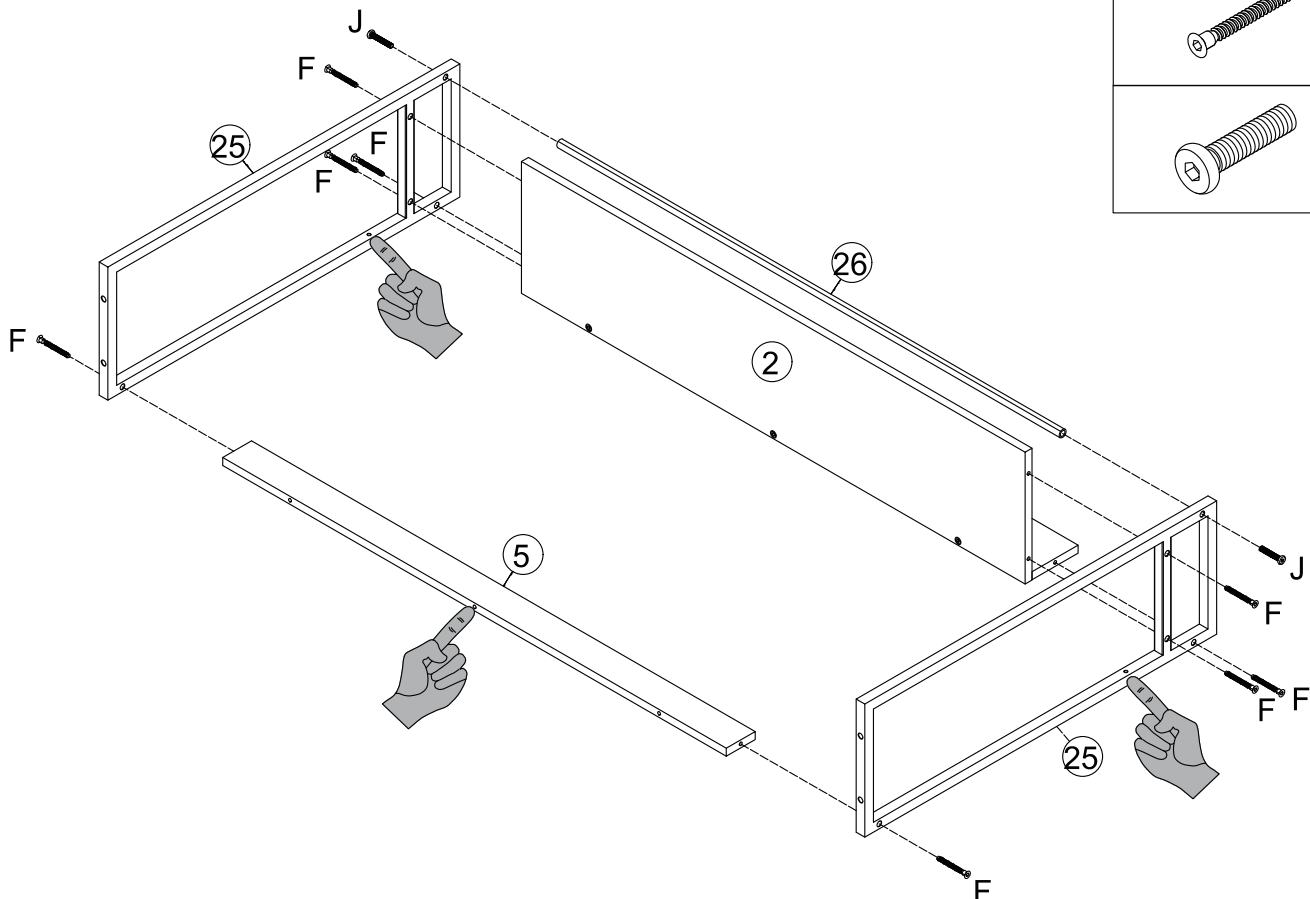


F X8



J X2

Attach Part #25 x2 to Part #26 with Screws J x2 as shown.
 Attach Part #25 x2 to Part #2 with Screws F x6 as shown.
 Attach Part #25 x2 to Part #5 with Screws F x2 as shown.


8.

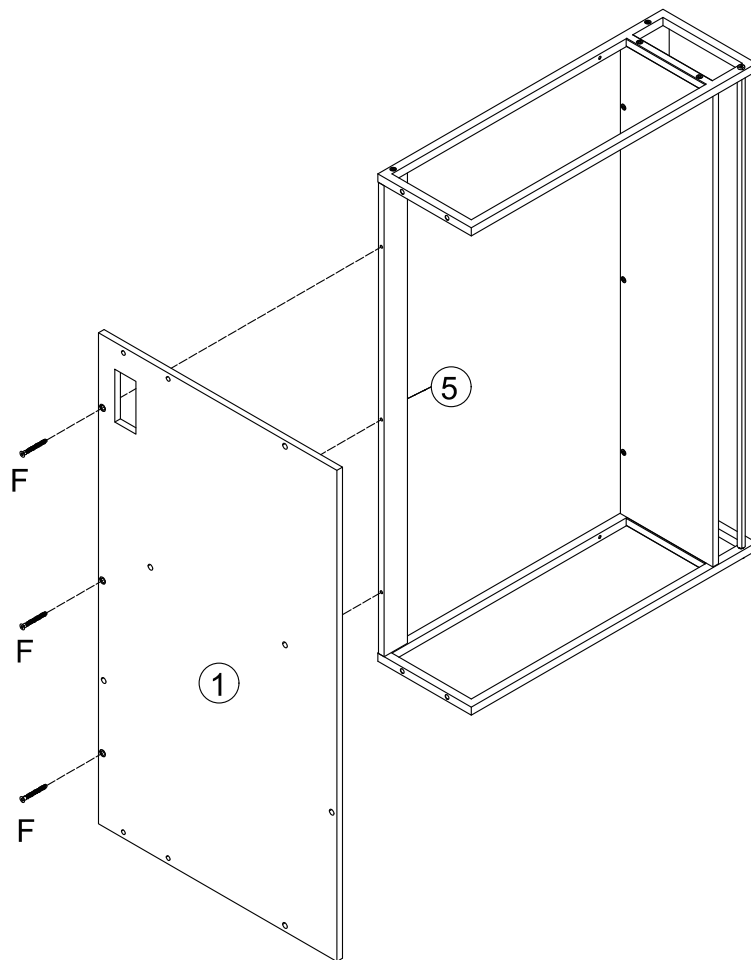

F X3

Attach Part #1 to Part #5 with Screws F x3 as shown.

9.

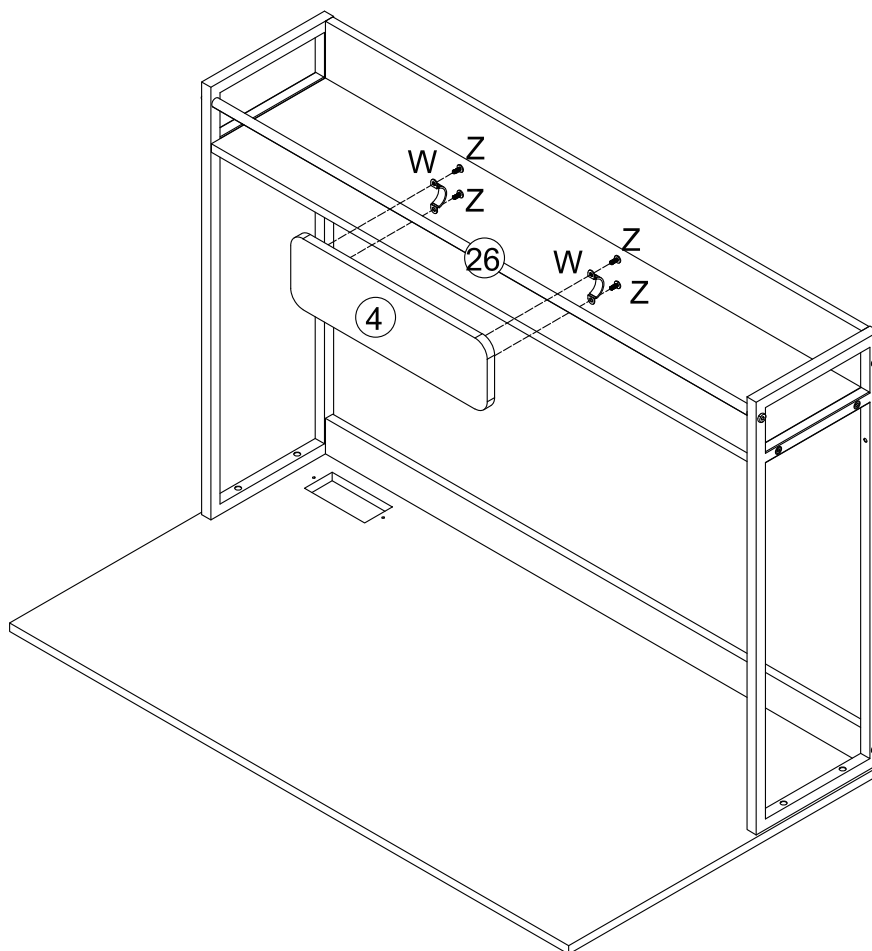


W X2






Z X4

Attach Part #4 to Part #26 with W x2 and Screws Z x4 as shown.


10.

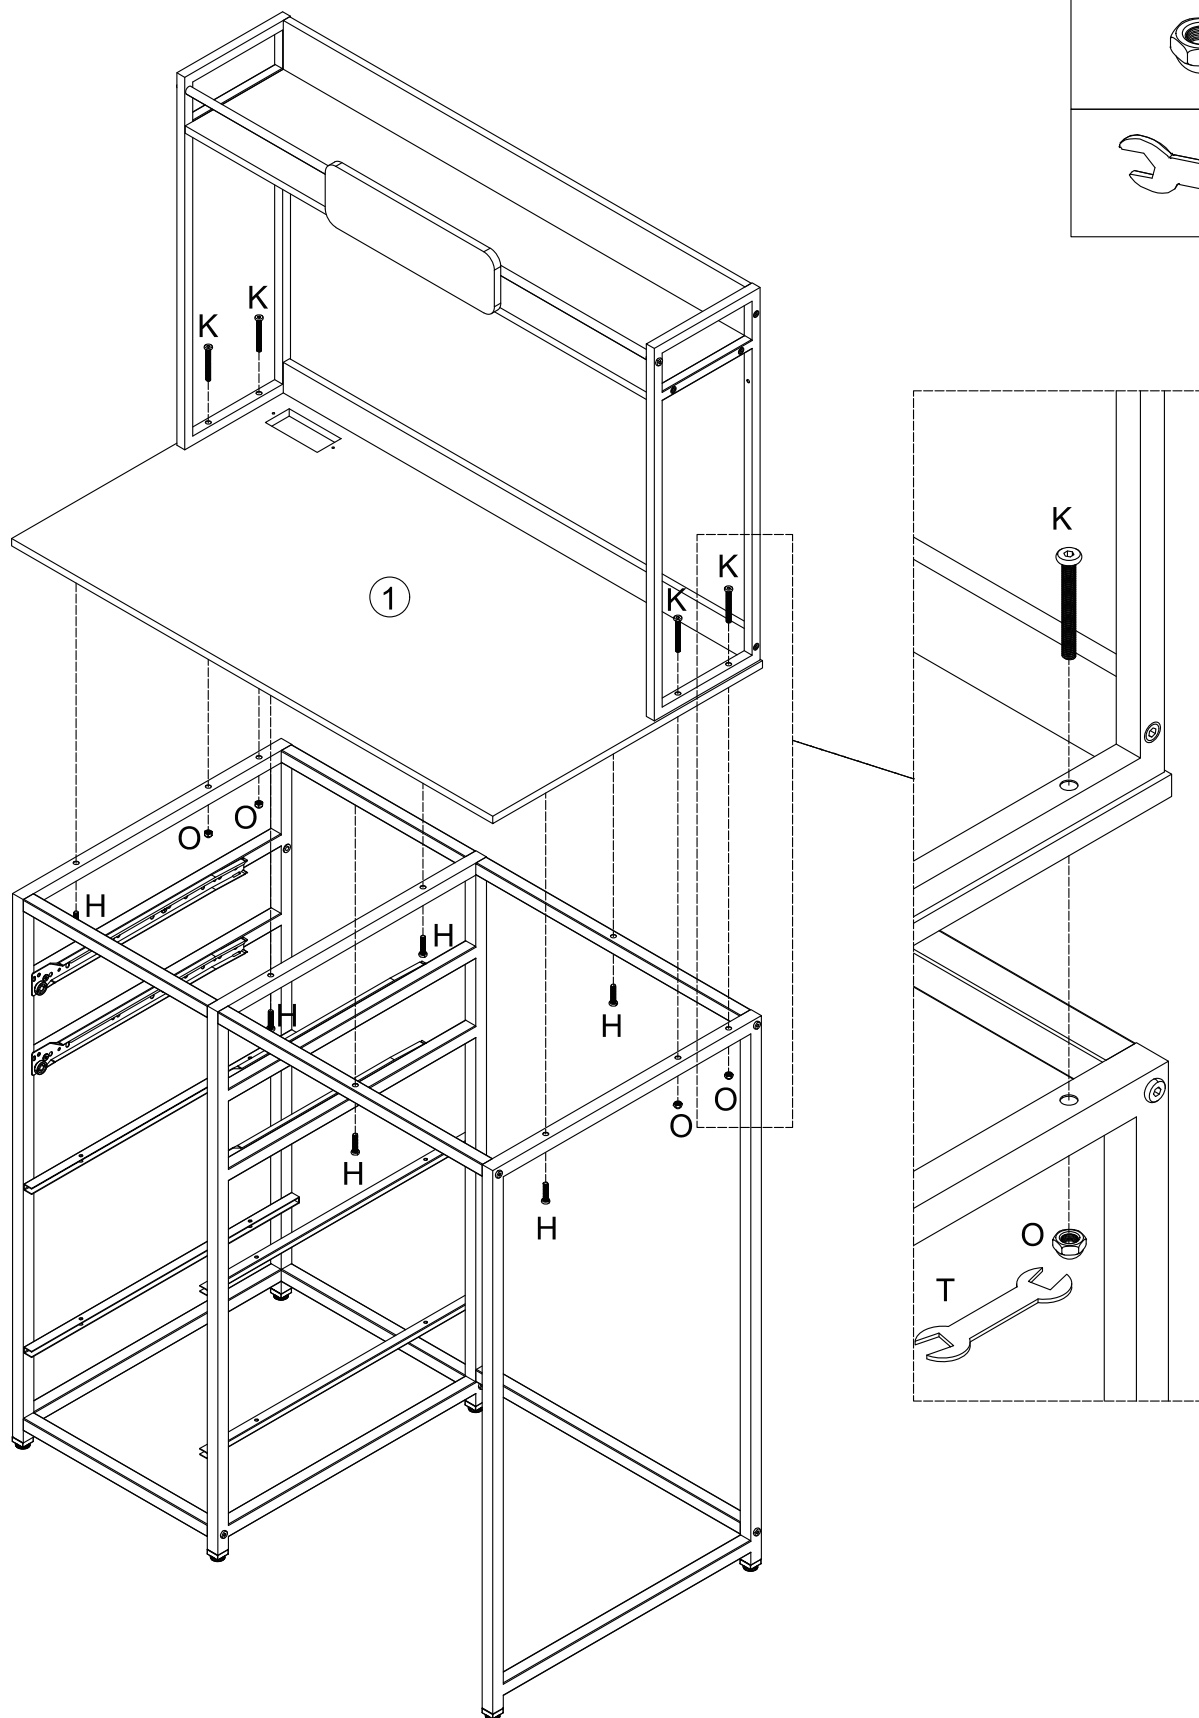

	H	X6
	K	X4
	O	X4
	T	X1

Attach Part #1 to the assembled unit from Step 5 with Screws H x6, Screws K x4, and Nuts O x4 as shown. Then tighten Nuts O x4 by tool T.


11.

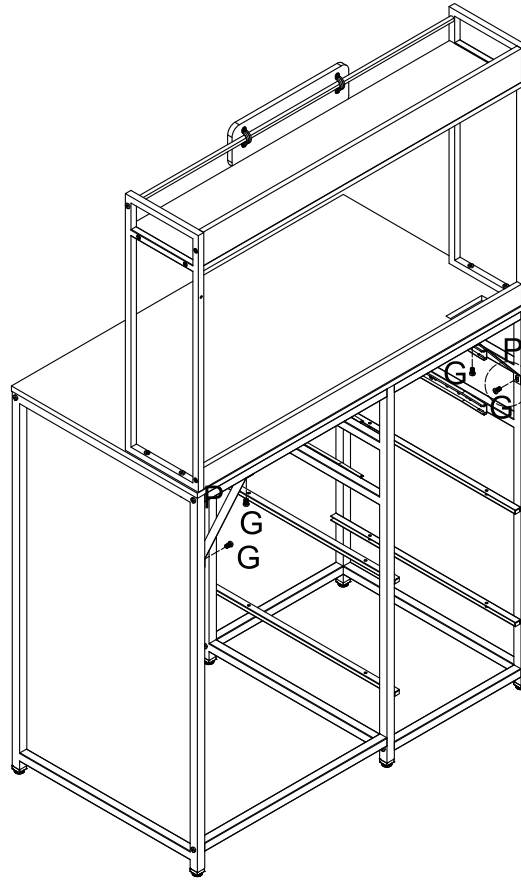

G X4





P X2

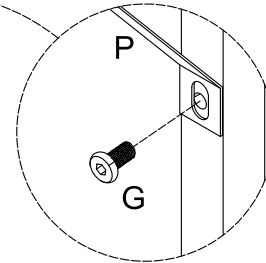

Install P x2 on the assembled unit with Screws G x4 as shown.

12.


Step1

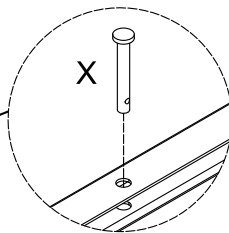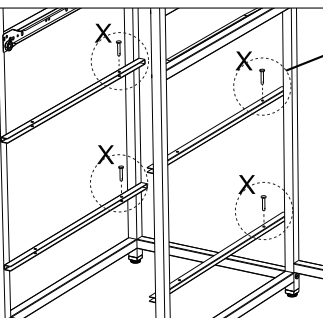


Step2

Q

Q

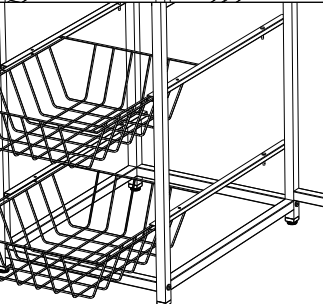


Step3

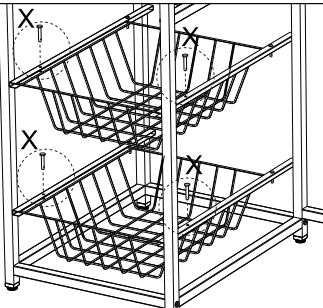

Q X2



X X8

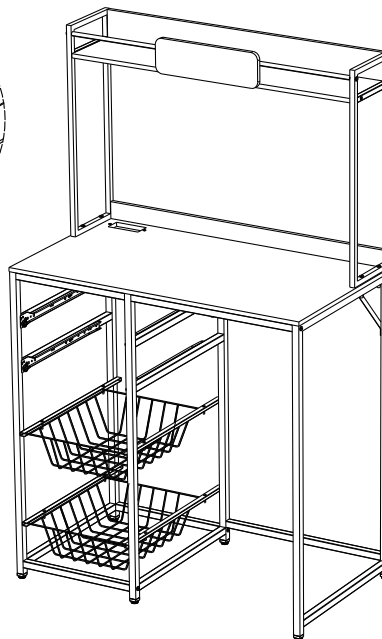

Assemble the baskets in the order shown on the left.

Install X x4 as shown in Step 1.

Slide basket Q x2 fully into the frame as shown in Step 2 until the baskets reach the installed X pins.

Secure each basket with the remaining X x4 as shown in Step 3.

Important:

The X x4 installed in Step 1 act as positioning pins only and do NOT pass through the baskets.

The X x4 installed in Step 3 pass through the basket holes to lock the baskets securely in place.


13.

A X6





REMARK:

Please do not screw **A** too deep or too shallow.

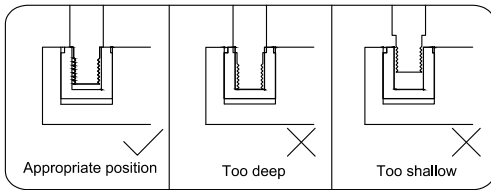

REMARK :



Put a blanket under the board to avoid scratch or damage.

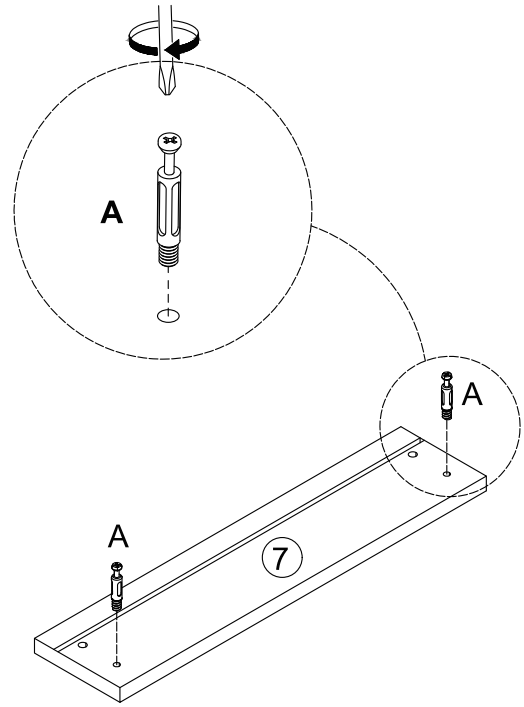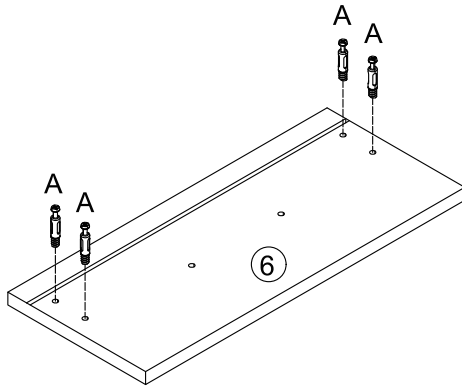

Install Cam Bolt A x4 on Part #6 as shown.
Install Cam Bolt A x2 on Part #7 as shown.






14.

B X2

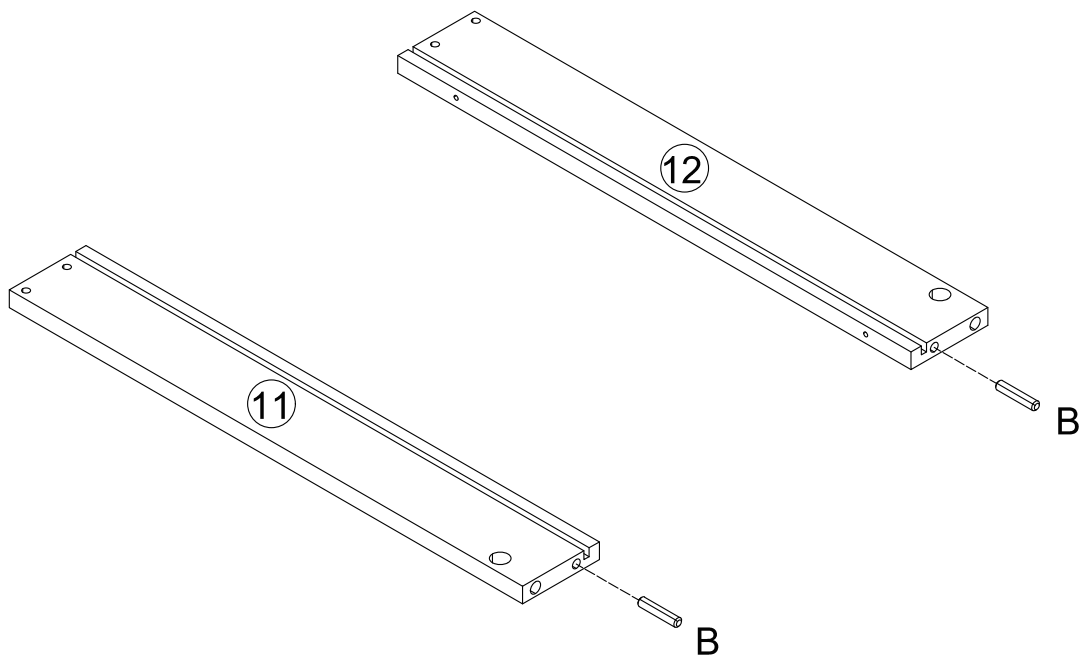


Install Dowel B x2 on Part #11 and Part #12 as shown.

15.

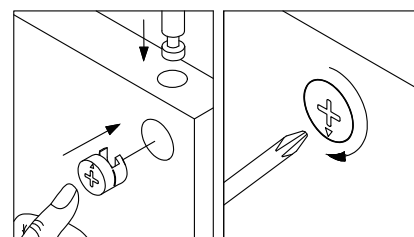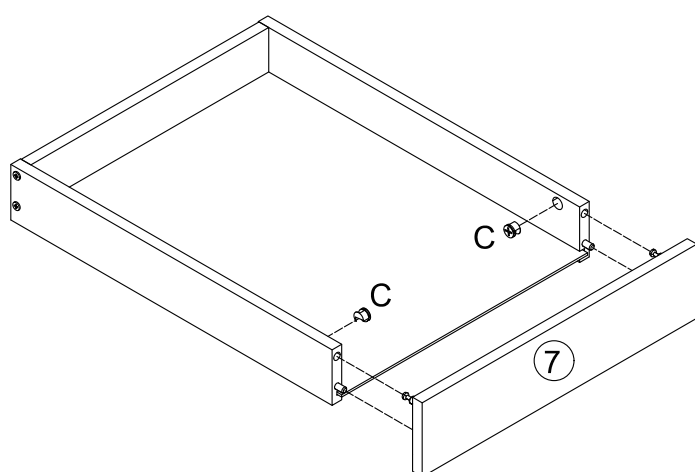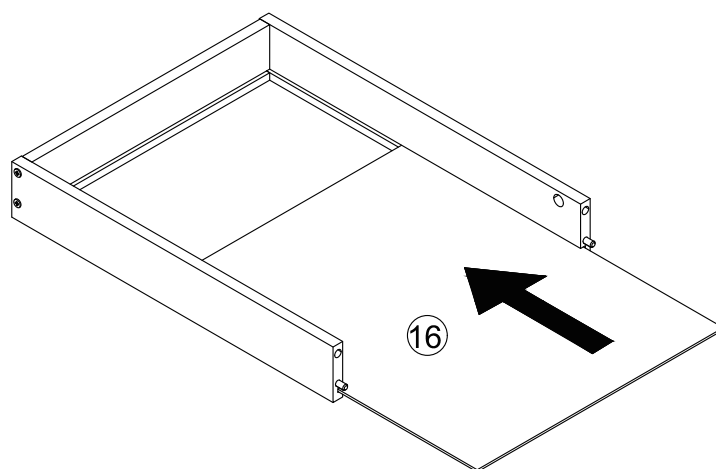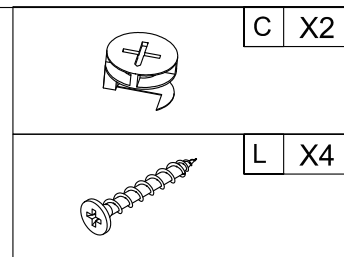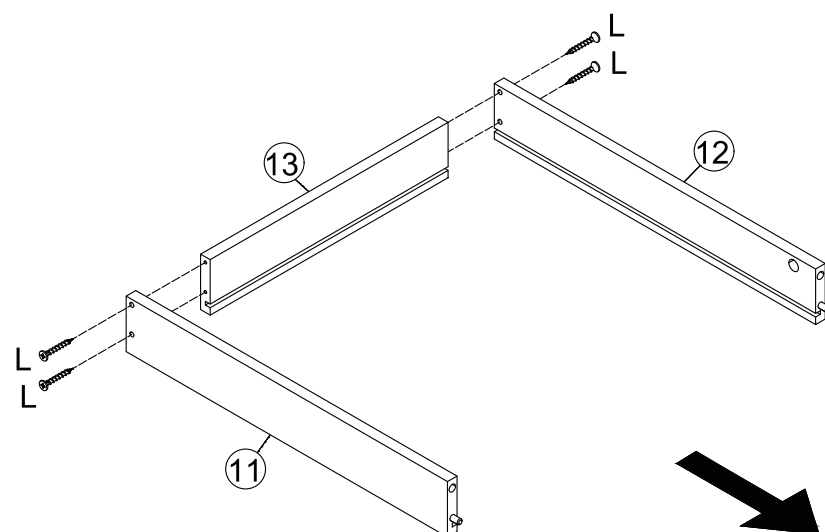


Attach Part #11 and Part #12 to Part #13 with Screws L x4 as shown.
 Then insert Part #16 into the assembled unit.
 Attach Part #7 to Part #11 and Part #12 with Nuts C x2 as shown.
 Then turn Nuts C x2 to secure position.

16.

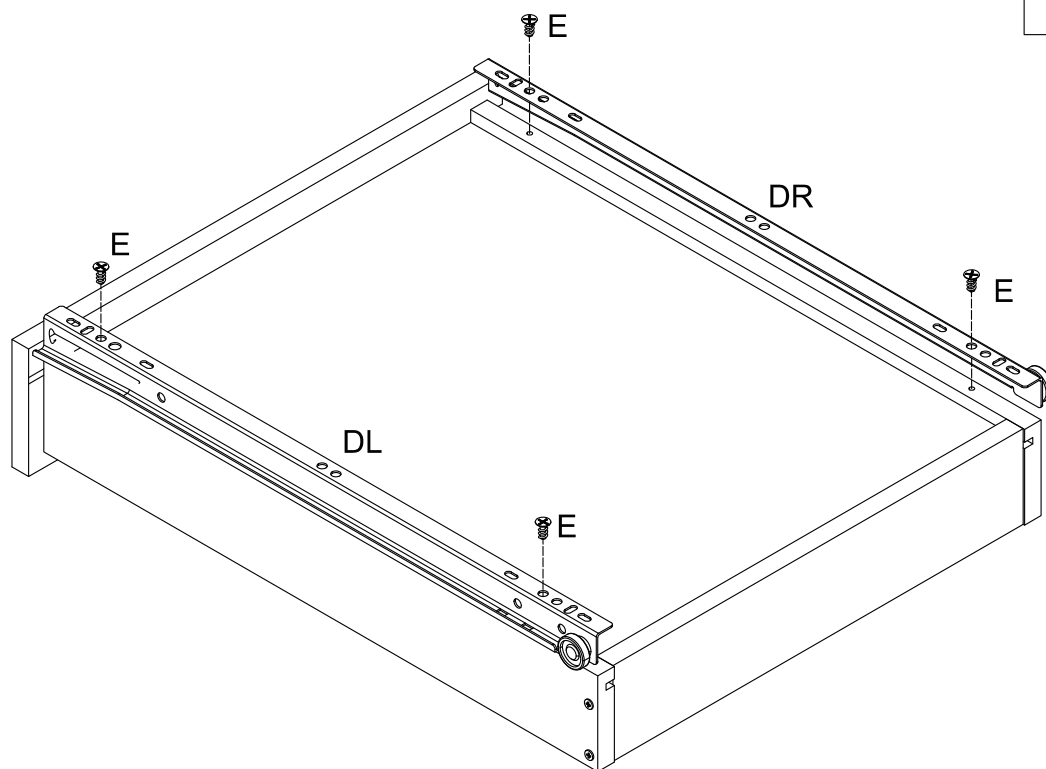







Install Rail DL and DR on Part #11 and Part #12 with Screws E x4 as shown.

17.

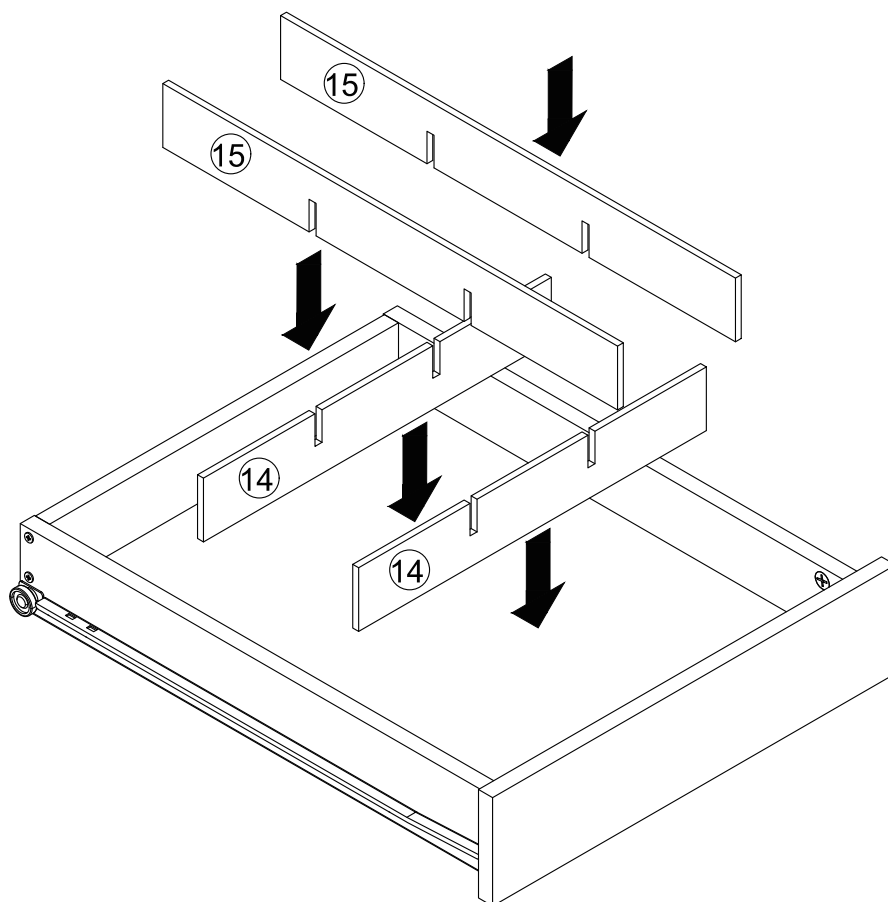

Insert Part #15 x2 into Part #14 x2, then put the assembled unit into the Drawer as shown.

18.

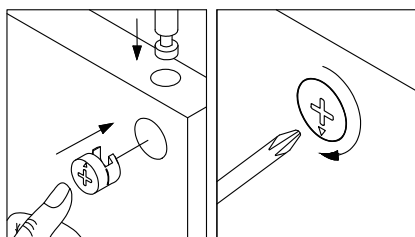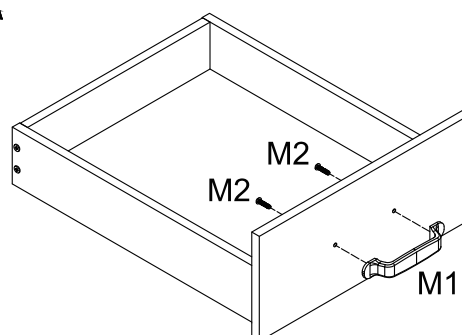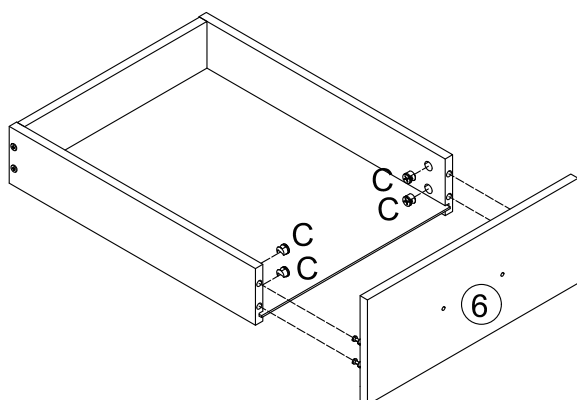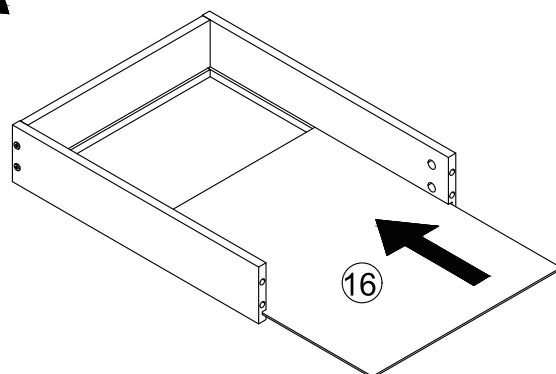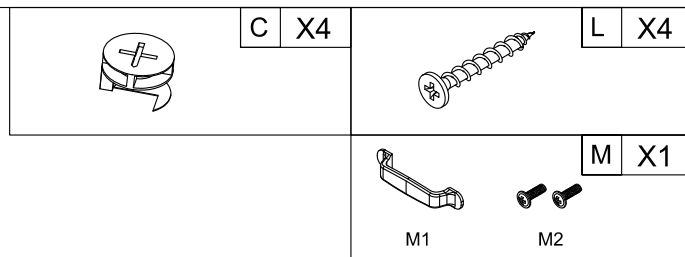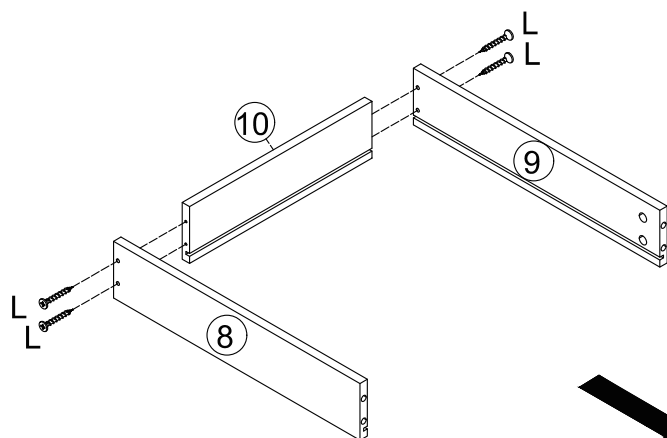


Attach Part #8 and Part #9 to Part #10 with Screws L x4 as shown.
 Then insert Part #16 into the assembled unit.
 Attach Part #6 to Part #8 and Part #9 with Nuts C x4 as shown.
 Then turn Nuts C x4 to secure position.
 Install handle M1 on the drawer with Screws M2 x2 as shown.

19.

E X4

DL X1


DR X1

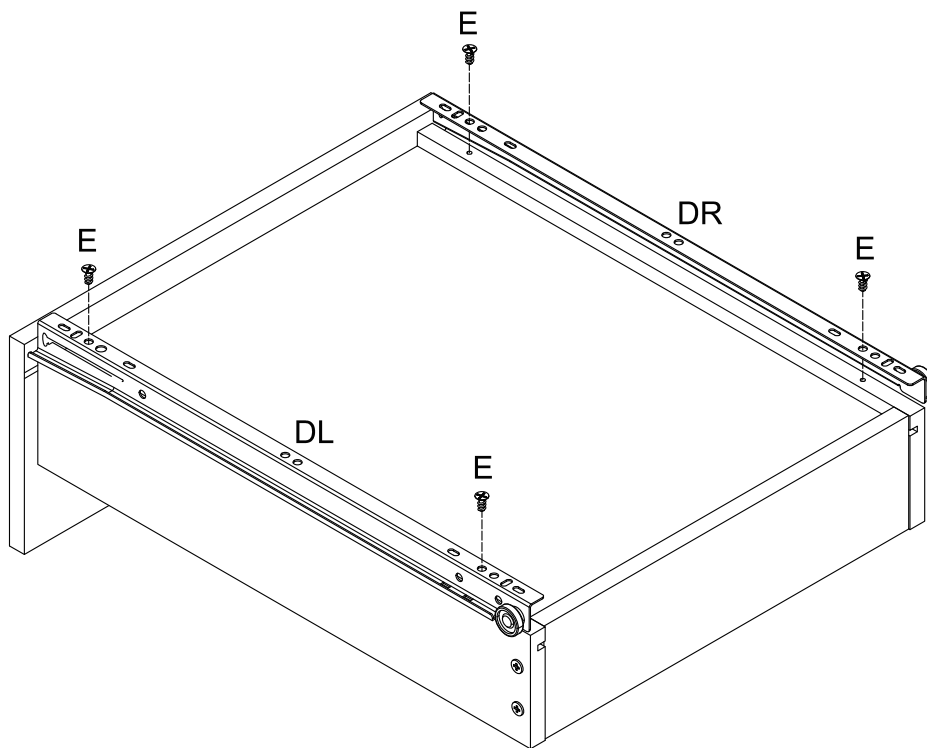

Install Rail DL and DR on Part #8 and Part #9 with Screws E x4 as shown.


20.

U X6

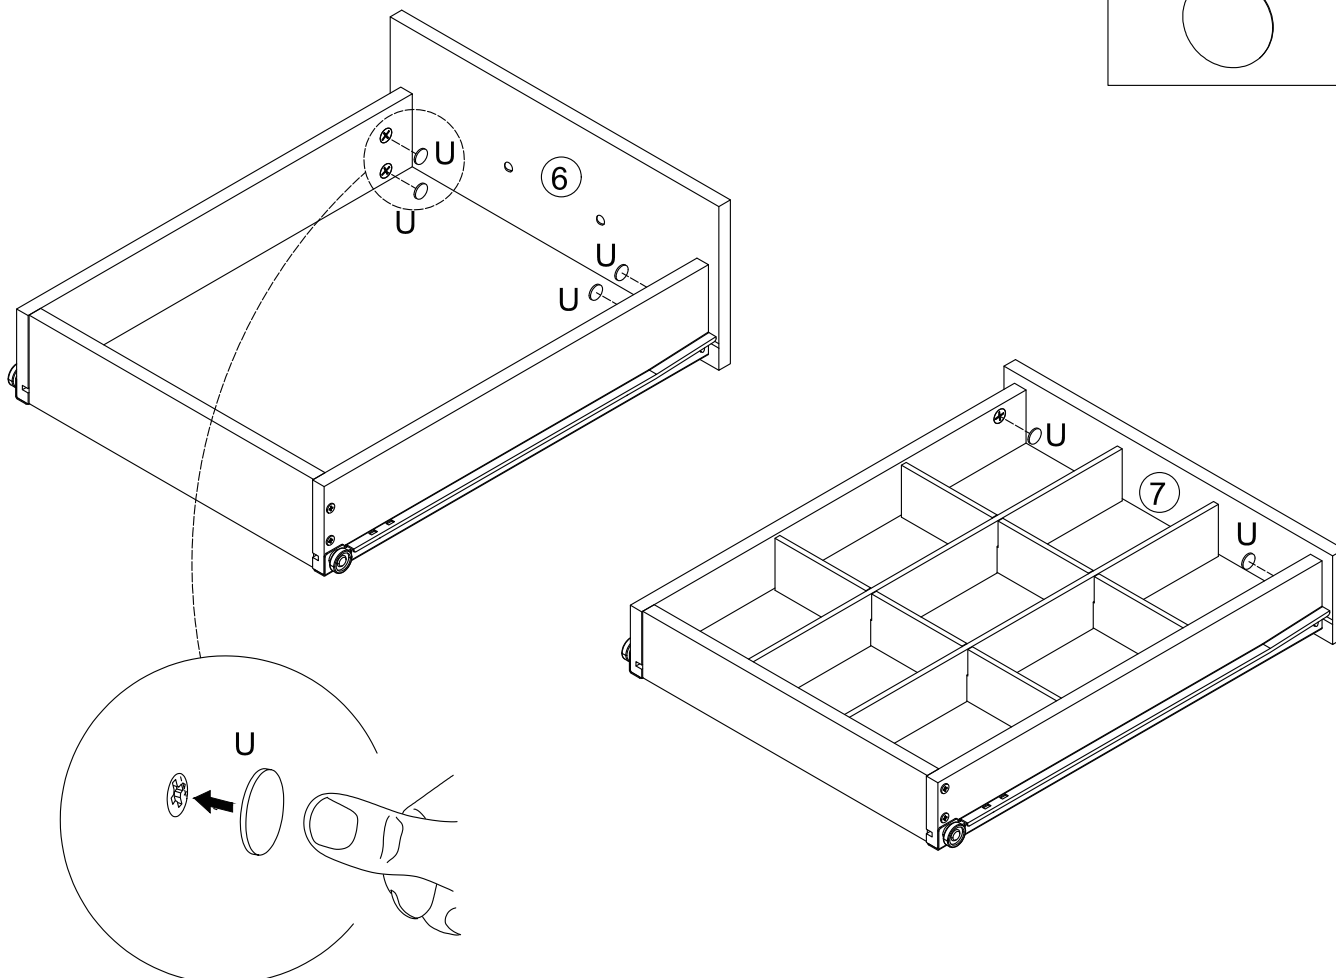


Stick round Stickers U x6 to the exposed nuts as shown.


21.

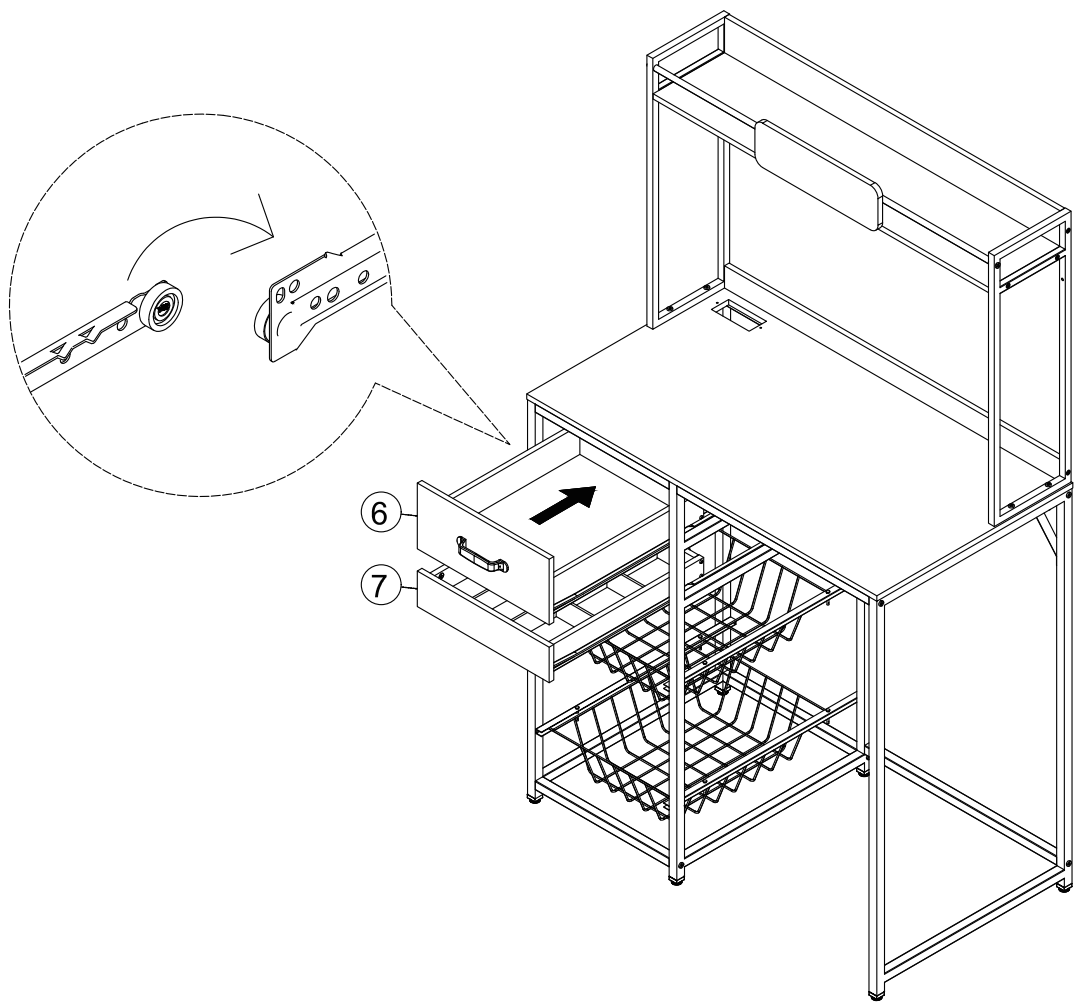







Insert the drawer rails x2 into the rails of the assembled unit as shown.

22.

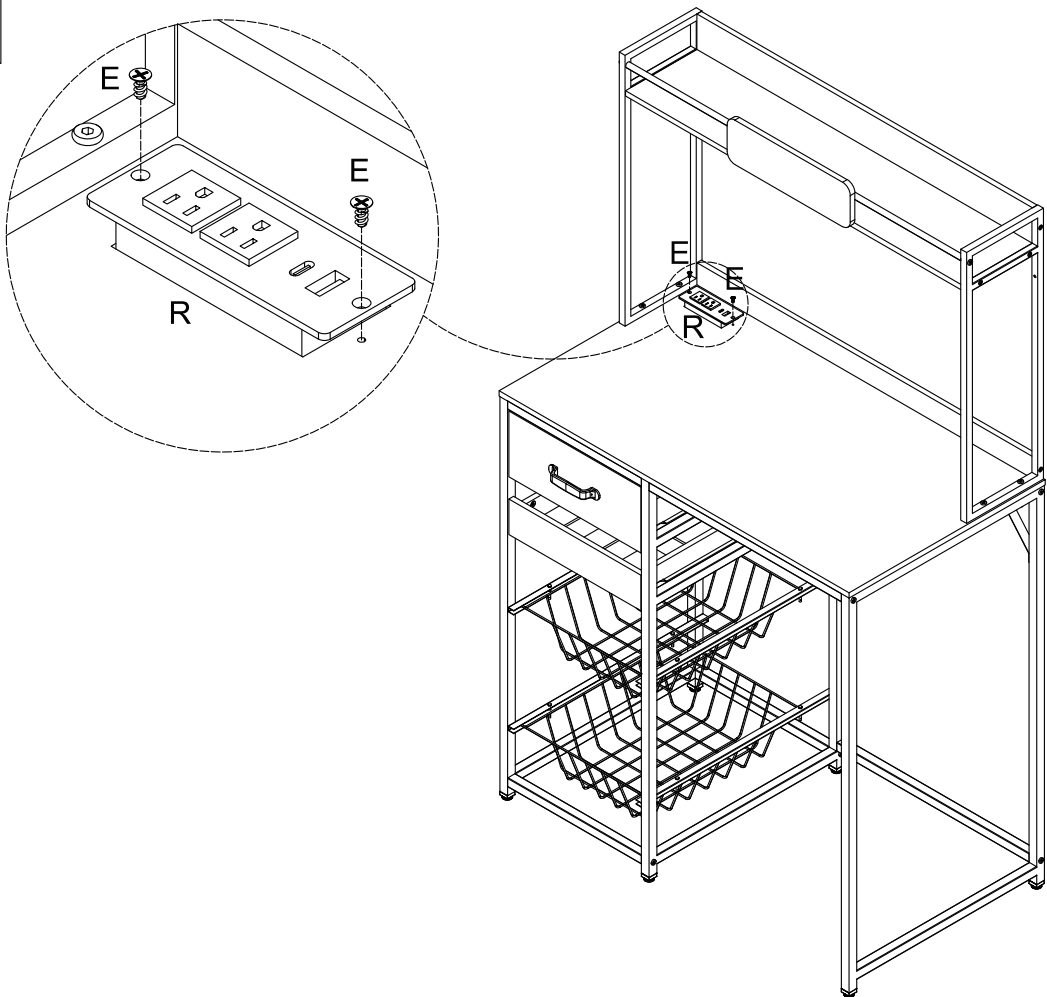

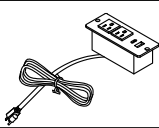	E	X2
	R	X1

Install power outlet R on Part #1 with Screws E x2 as shown.

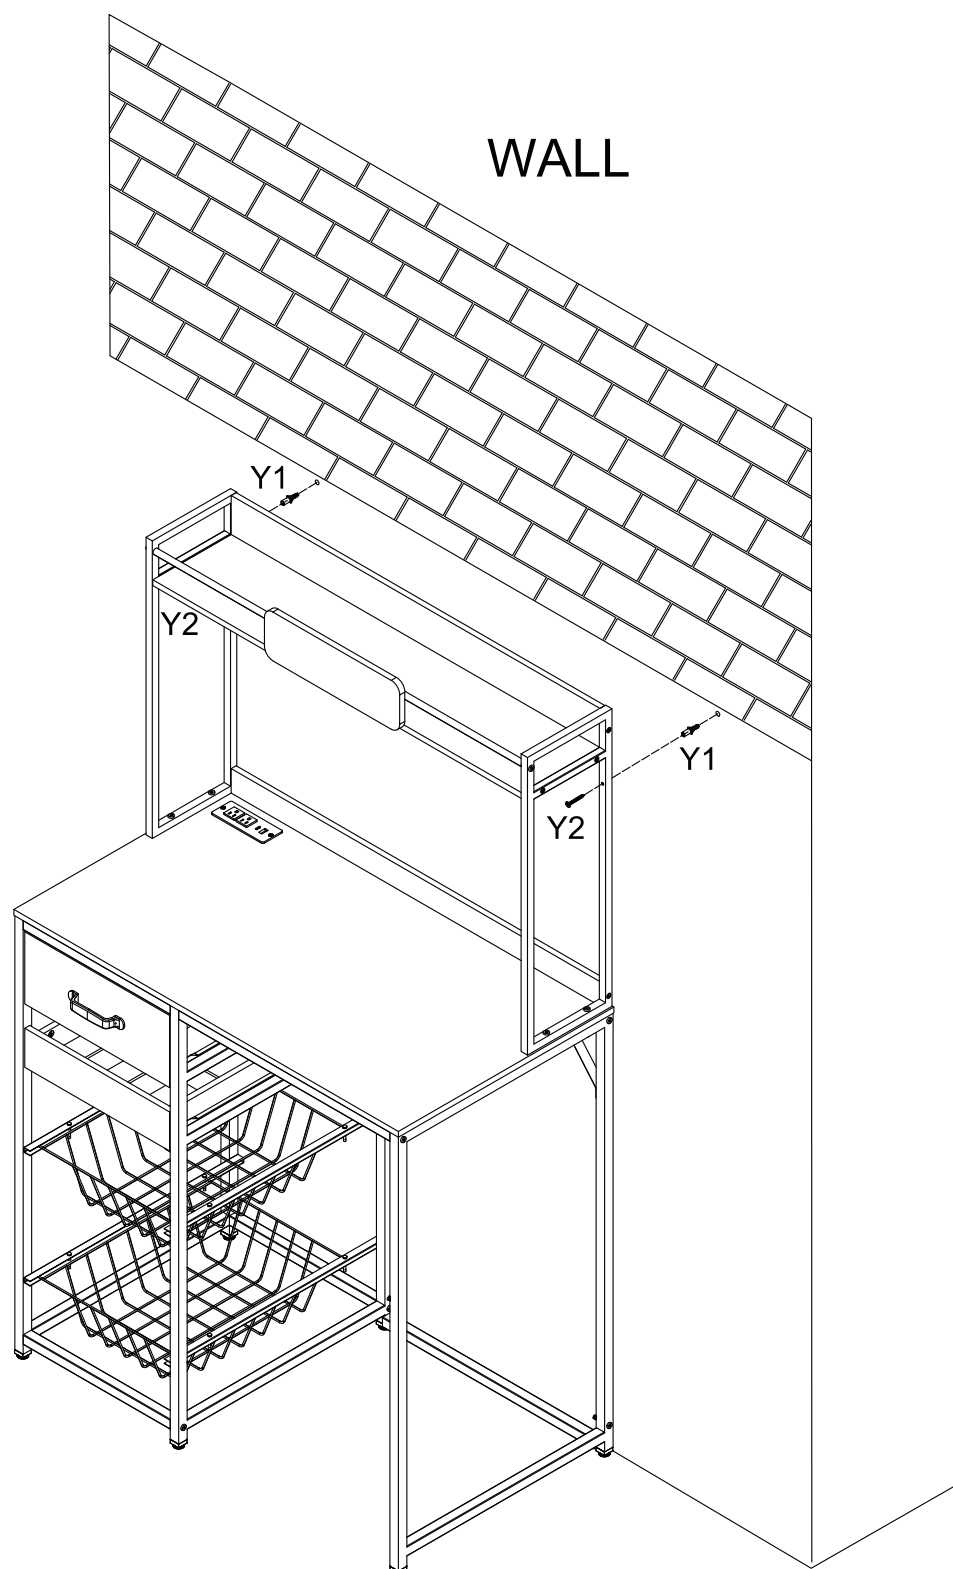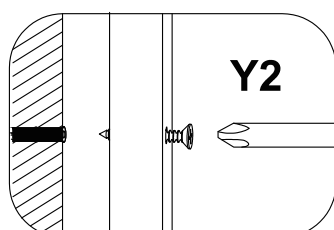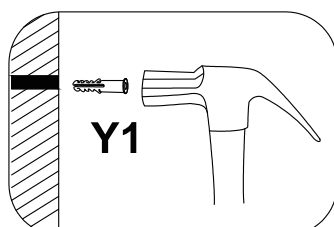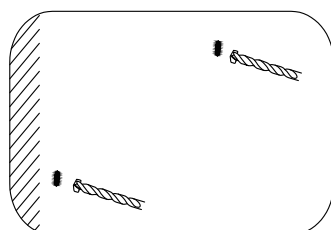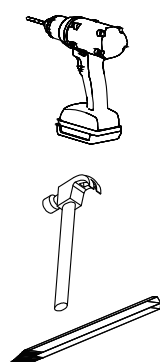

Drill the holes in the wall, then knock in Screws Y1 x2 as shown.
Attach the assembled unit to the wall with Screws Y2 x2 as shown