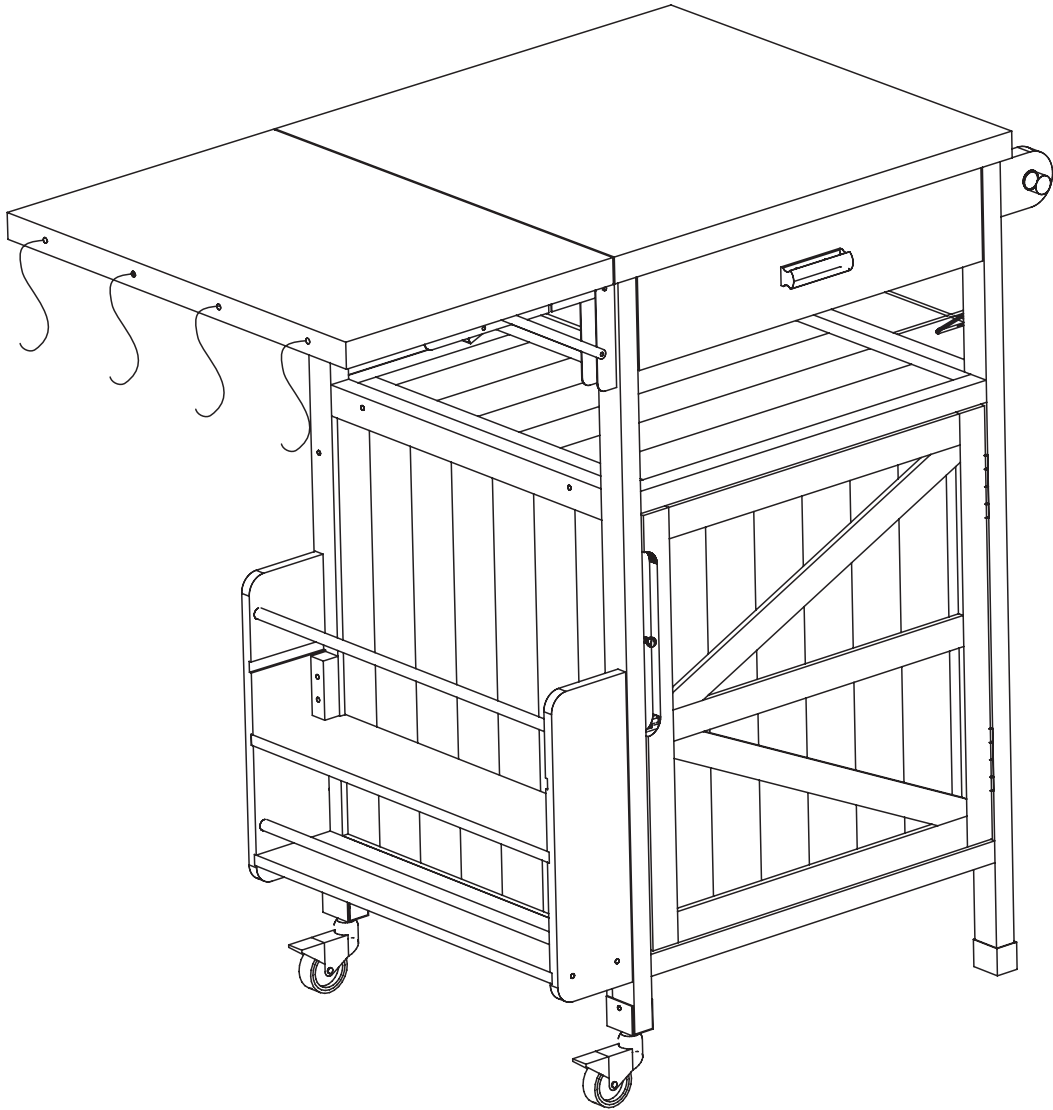



ASSEMBLY INSTRUCTION















IMPORTANT NOTE:

- ① PLACE ALL PARTS ON A CLEAN AND SMOOTH SURFACE SUCH AS A RUG OR CARPET TO AVOID THE PARTS FROM BEING SCRATCHED.
- ② BEFORE YOU BEGIN,KINDLY FOLLOW THE ASSEMBLY INSTRUCTIONS STEP BY STEP.
- ③ DO NOT TIGHTEN ALL SCREWS AND BOLTS UNTIL THIS ITEM IS FULLY SET-UP.

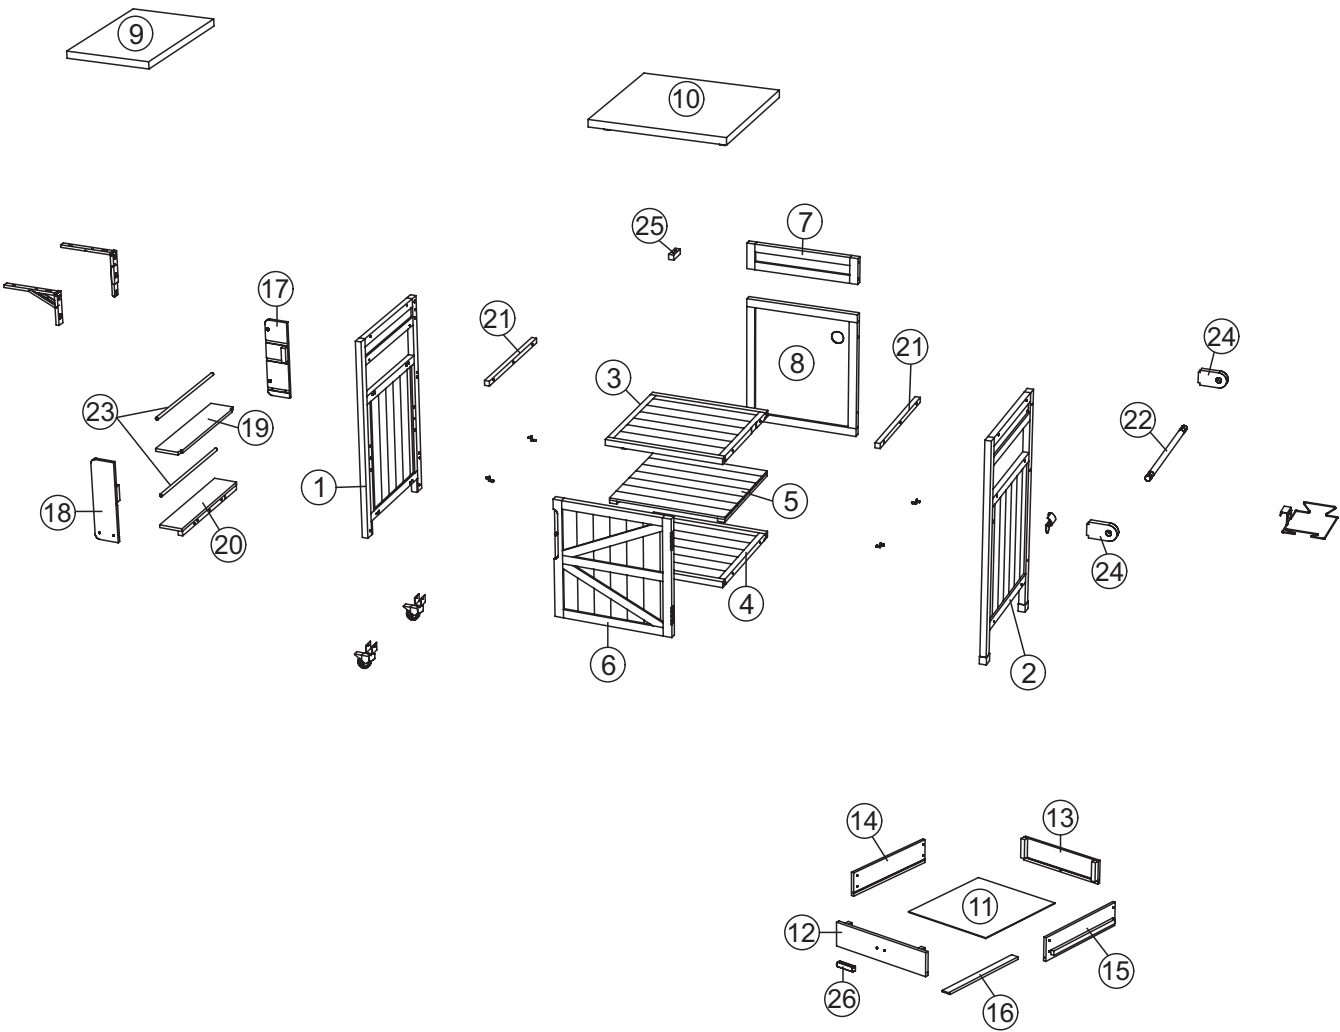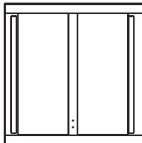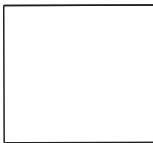Detail View




1		2		3		4	
1pc		1pc		1pc		1pc	
5		6		7		8	
1pc		1pc		1pc		1pc	
9		10		11		12	
1pc		1pc		1pc		1pc	
13		14		15		16	
1pc		1pc		1pc		1pc	
17		18		19		20	
1pc		1pc		1pc		1pc	
21		22		23		24	
2pcs		1pc		2pcs		2pcs	
25		26					
1pc		1pc					

A	 Ø 3.5*50 14pcs	B	 Ø 3.5*40 23pcs	C	 Ø 3.5*30 2pcs	D	 Ø 3.0*30 9pcs		
E	 Ø 3.0*28 4pcs	F	 Ø 3.0*18 6pcs	G	 Ø 3.5*16 18pcs	H	 1pc		
I	 18pcs	J	 4pcs	K	 1pc	L	 3pcs	M	 4pcs
N	 2pcs	O	 2pcs	P	 1pc				



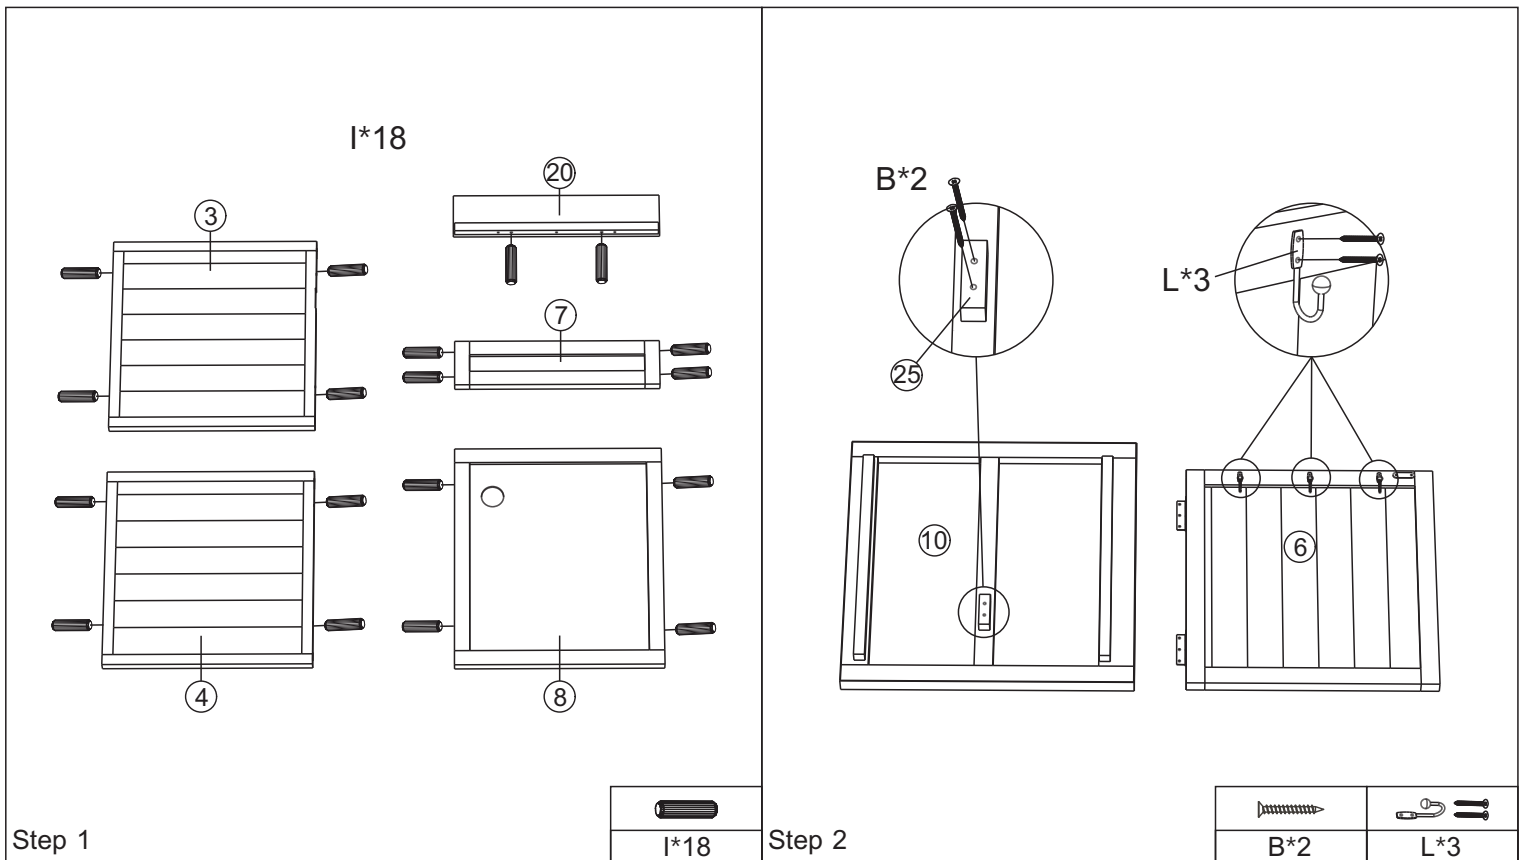PLEASE BE CAREFUL DO NOT DAMAGE THE HOLE POSITION WHEN YOU USE POWERTOOLS !



C*2

H*1

Step 3

B*6

Step 4

B*4

K*1

N*2

Step 5

Attention the direction of Part 3. There is Gap

A*7

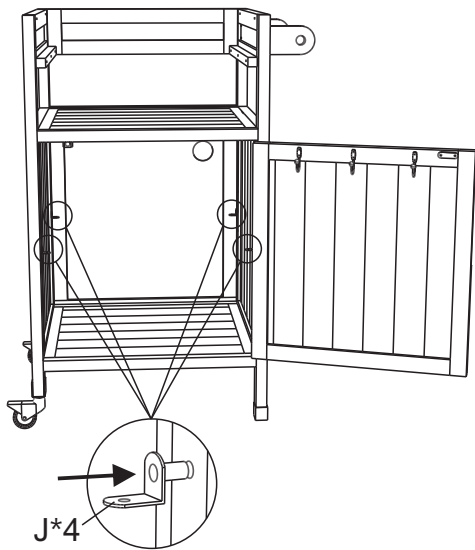
Step 6

A*7

Step 7


F*6

Step 8




Step 9

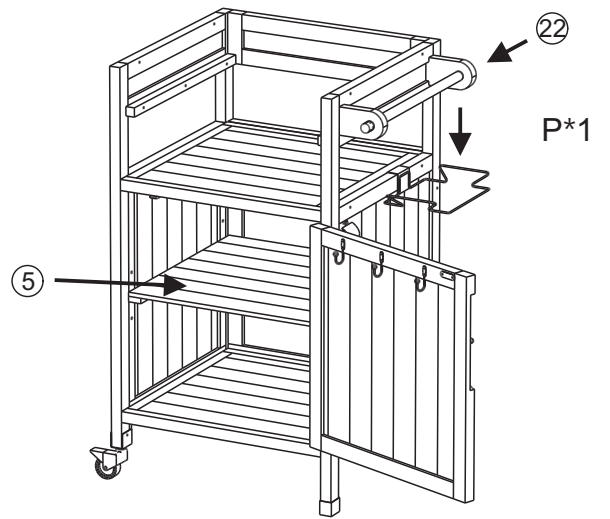J*4




Step 10

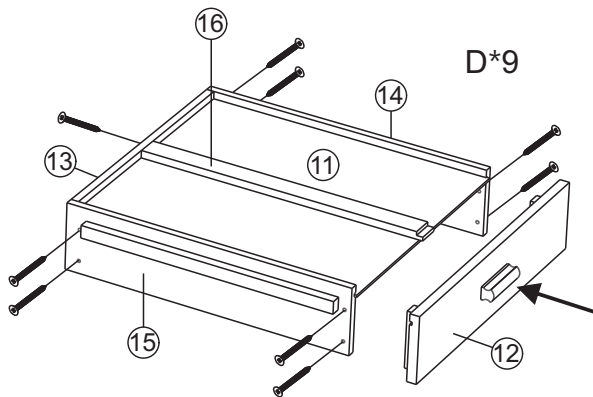P*1




Step 11

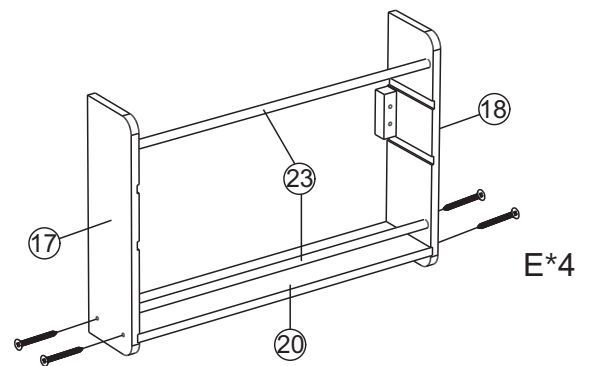D*9




Step 12

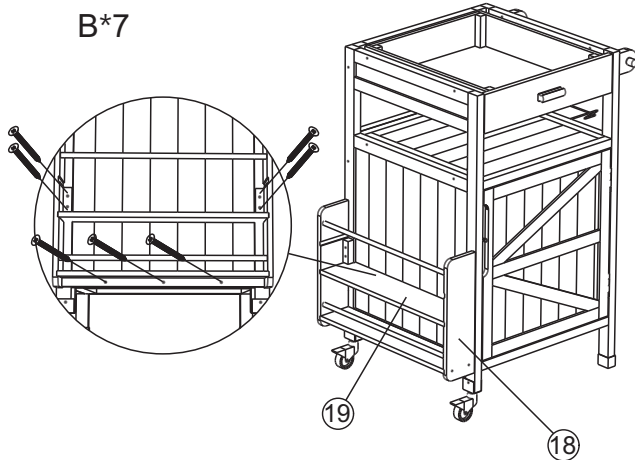E*4



Step 13

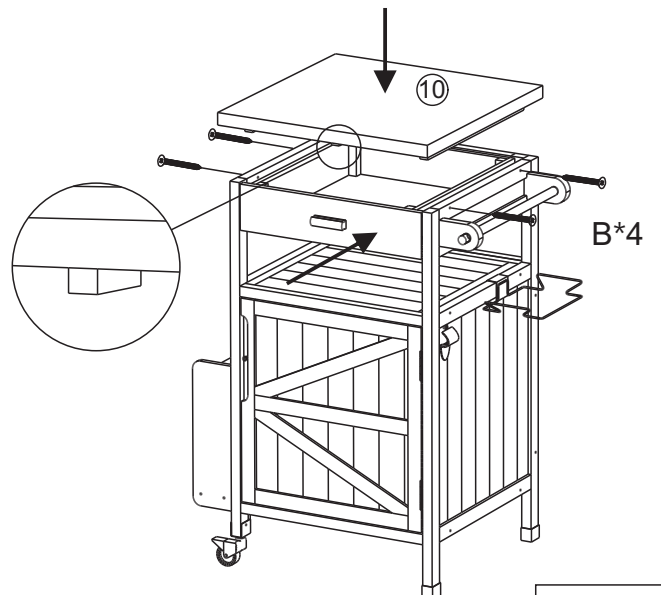B*7



Step 14

B*4

O*2

G*6

G*6

O*2

Step 15

G*6

G*6

Step 16

9

G*4

G*4

Step 17

G*2

G*2

Step 18

M*4

M*4

Step 19

M*4

M*4

Step 20