

END TABLE

ASSEMBLY INSTRUCTION



Assembly Instruction

ASSEMBLY TIPS:


- 1.Remove hardware from box and sort by size.
- 2.Please check to see that all hardware and parts are present prior to start of assembly.
- 3.please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.

⚠ Warning!

- 1.Don't attempt to repair or modify parts that are broken or defective.Please contact the store immediately.
- 2.This product is for home use only and not intended for commercial establishment.

PARTS IDENTIFICATION:

(A) TOP

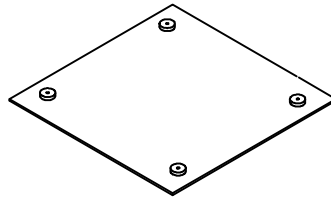


1PC

(B) PILLAR




8PCS

(C) LEG

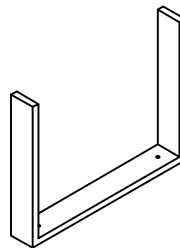







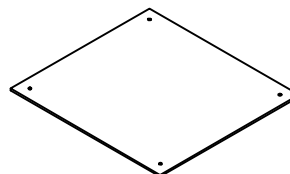

2PCS


(D) SHELF







1PC

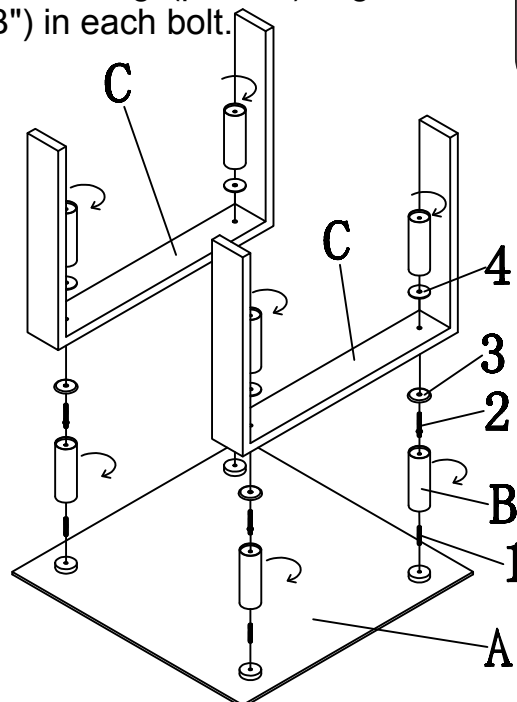




Z	HARDWARE PACKAGE:		
NO	DESCRIPTION	FIGURE	QTY
1	SCREW $\Phi 5/16 \times 35\text{mm}$		4pcs
2	STUD BOLT $\Phi 5/16 \times (10+65)\text{mm}$		4pcs
3	CHROMED WASHER $\Phi 5/16 \times 55\text{mm}$		8pcs
4	BIG WASHER $\Phi 5/16 \times 50\text{mm}$		4pcs
5	FLAT WASHER $\Phi 5/16 \times 20\text{mm}$		4pcs
6	ALLEN BOLT $\Phi 5/16 \times 35\text{mm}$		4pcs
7	SMALL WASHER $\Phi 5/16 \times 25\text{mm}$		4pcs
8	ALLEN WRENCH $\Phi 5/16 \times 66\text{mm}$		1pc


STEP 1 :Place top upside down on a soft and scratch resistant surface, then spin screws(part "1") into four holes on the top. Align and spin pillars (part"B") in the screws. Then screw stud bolts (part"2") into the other side of the pillars. Put chromed washers (part"3") through the bolts with grooved sides towards bolts. Then insert two legs(part"C"), big washers (part"4") and last pillars(part"B") in each bolt. Finally revolve pillars till steady.



1		4PCS
2		4PCS
3		4PCS
4		4PCS

STEP 2: Put chromed washers on pillars(part"B")with grooved side down, and then align the holes of shelf (part"D") to that of chromed washers(part"3").Then put small washers (part"7")first, flat washer(part"5"),and screw Allen bolts (part"6")into the holes tightly with Allen wrench.

3		4PCS
5		4PCS
6		4PCS
7		4PCS
8		

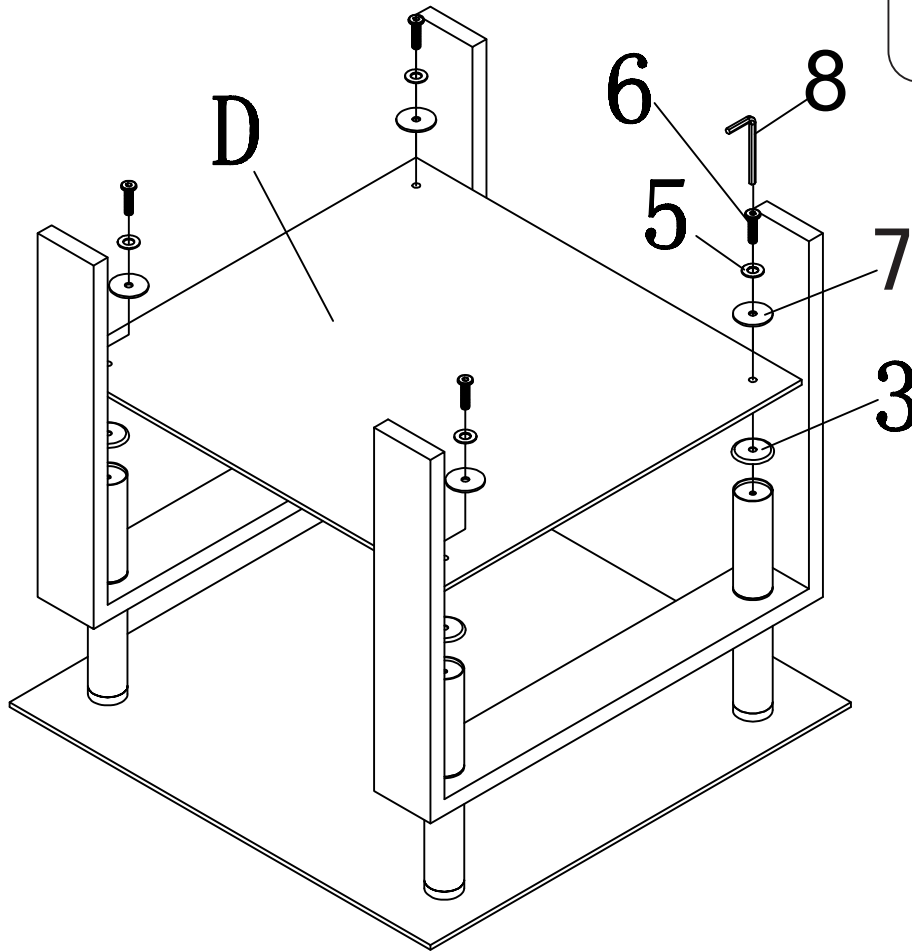

STEP 3: Complete.

