


Assembly Instructions

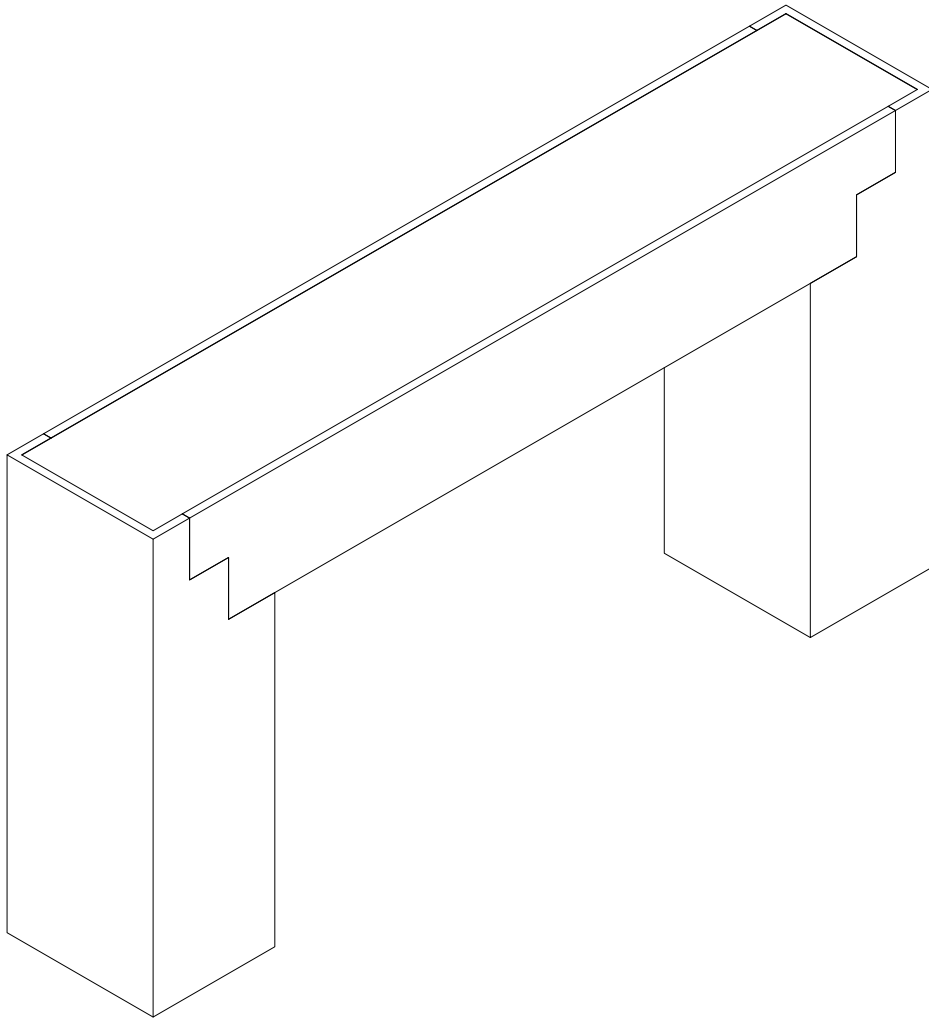

Console Table




Contact Us

We're here to help you.

Your satisfaction is our top priority. If you encounter any issues with this product, such as missing or damaged parts, we're here to help. Please retain the original packaging and take photos of the packaging and the product, then contact us as soon as possible.


Warm Tips

1. Carefully read these instructions and keep them for future reference.
2. Check the parts list and confirm everything's there before starting assembly.
3. When assembling, put all parts on a soft, smooth surface like a carpet to avoid scratches.
4. Don't fully tighten screws until all parts are confirmed in place to avoid misalignment.

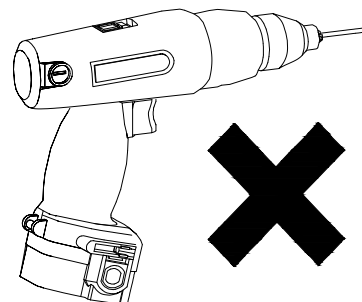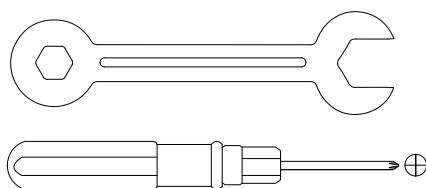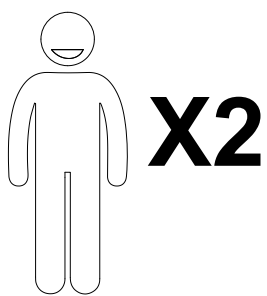


We recommend using hand tools for assembly.


If an electric screwdriver is used, reduce power and torque to avoid damage to the product.

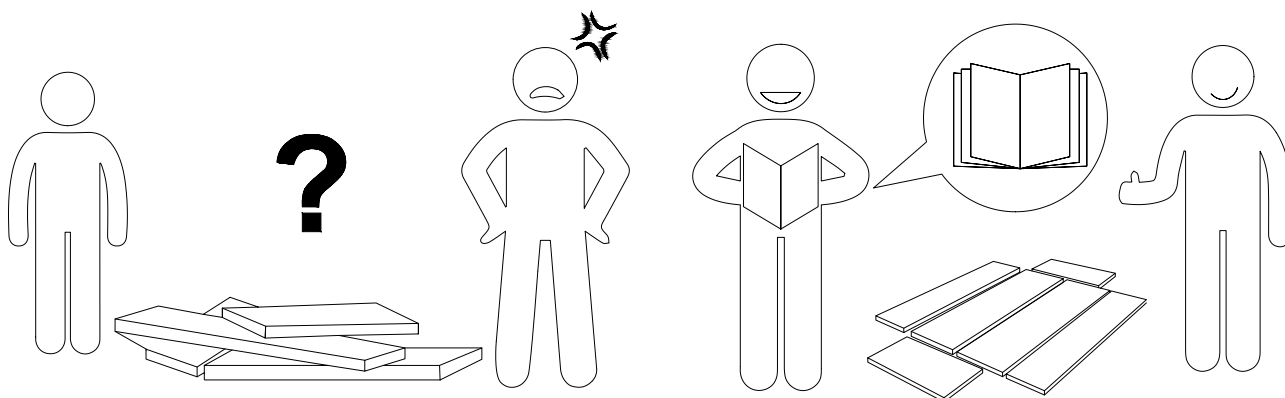

Install the Anti-Tip Straps

Using the anti-tip straps can reduce the risk of tipping over, but can not eliminate it.










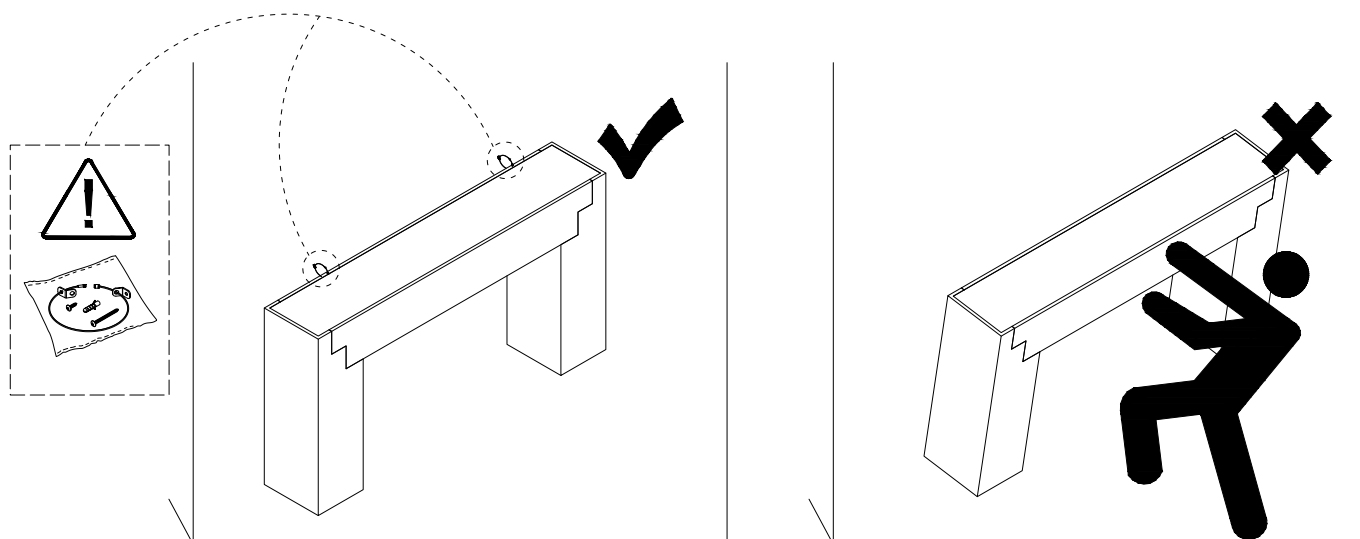


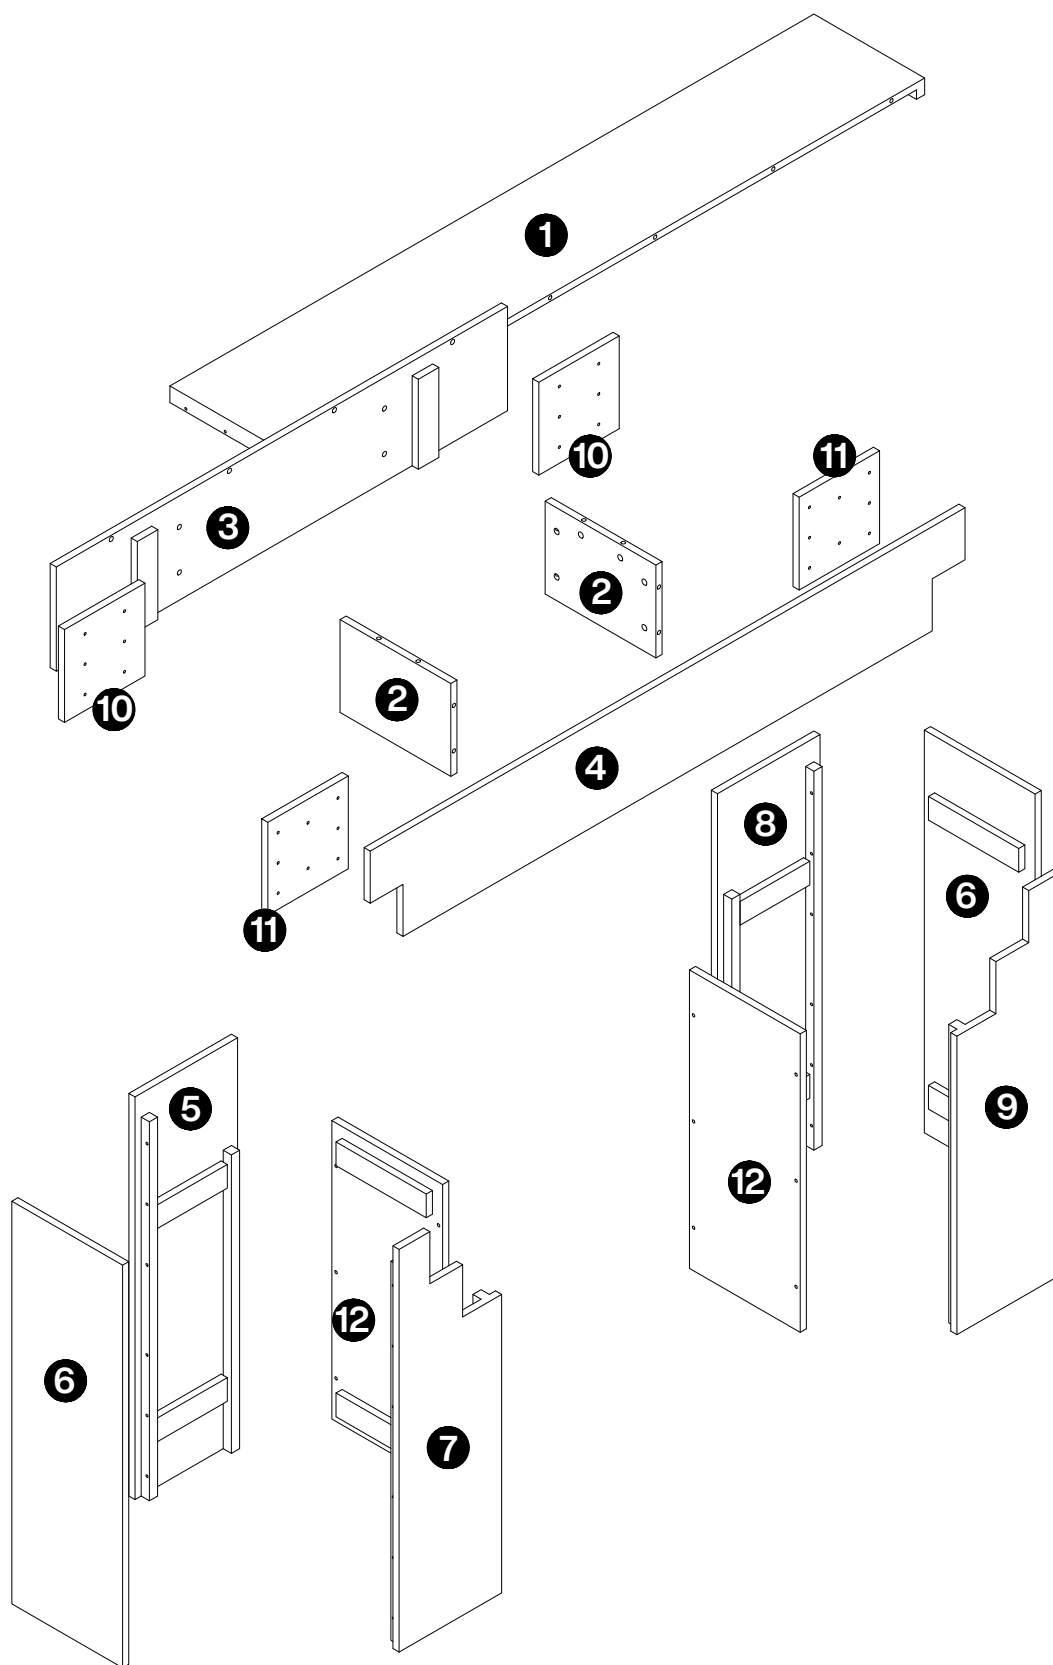



⚠ Caution

Make sure all parts are included. Most board parts are labeled or stamped on the raw edge. Contact us for a free replacement if you encounter any damaged or missing parts.

Parts List

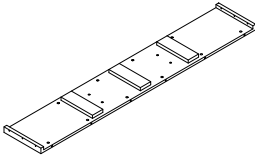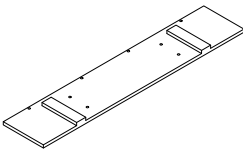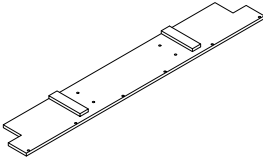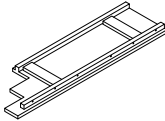1  1 pc	2  2 pcs	3  1 pc	4  1 pc	5  1 pc
6  2 pcs	7  1 pc	8  1 pc	9  1 pc	10  2 pcs
11  2 pcs	12  2 pcs			

Hardware List


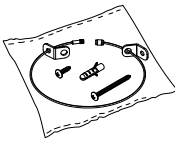
A	B	C	D	E	F	G
 M6x35mm 22+1 pcs	 Ø12x10mm 22+1 pcs	 Ø3.5x30mm 42+2 pcs	 Ø3.5x25mm 28+2 pcs	 8+1 pcs	 2 pcs	 Screwdriver 1 pc
H						
 Hole paste Ø18 12+1 pcs						

Installation of Cams and Pins


Step 1-2: Align the plastic part with the mounting hole and press it in. If you can't press it in, loosen the screw counter clockwise or completely remove the screw from the plastic part and try again.
Step 3-4: After pressing the plastic part into place, use a screwdriver to tighten the screw clockwise.




No gap

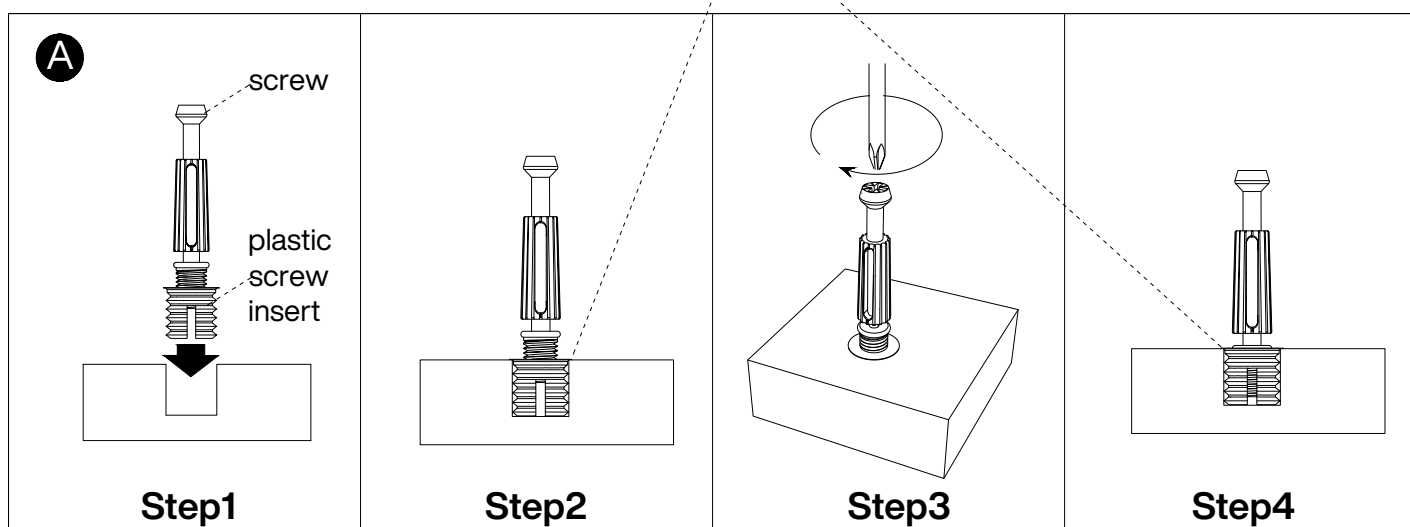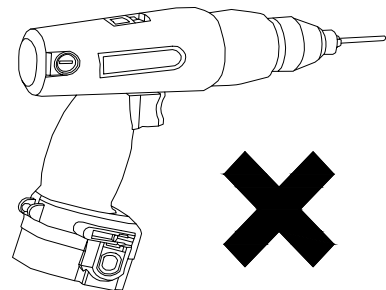

Screw the pin into the hole. Set the cams correctly by aligning the head of the cams with the lock pins. Lock the cam by turning the cam head with a screwdriver until it is tightened. Please do not use an electric screwdriver to assemble the unit.

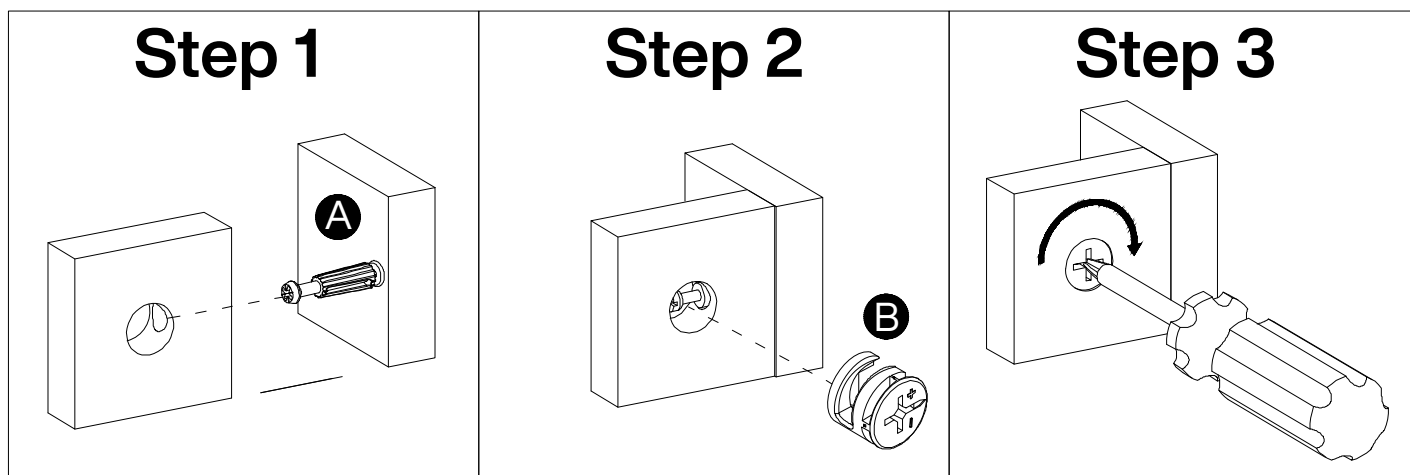


1

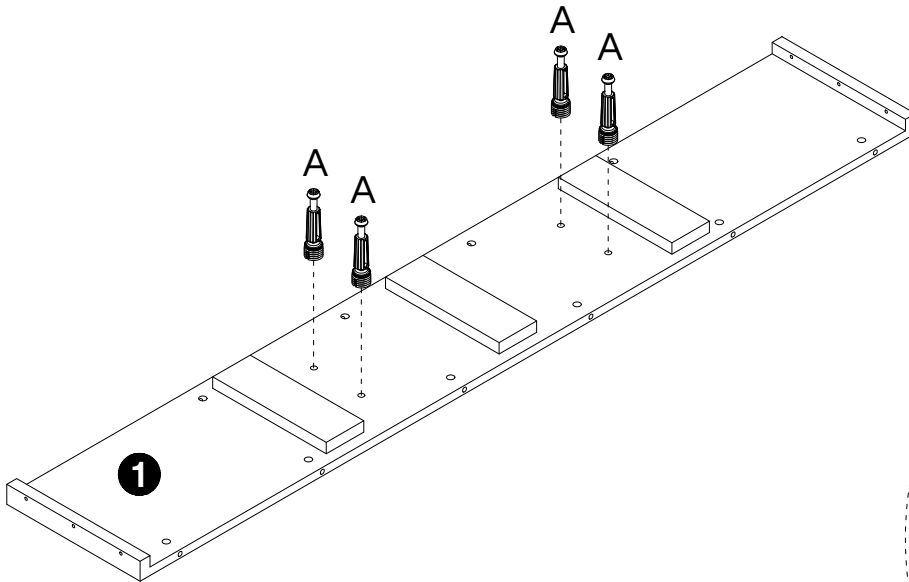


A

M6x35mm
4 pcs



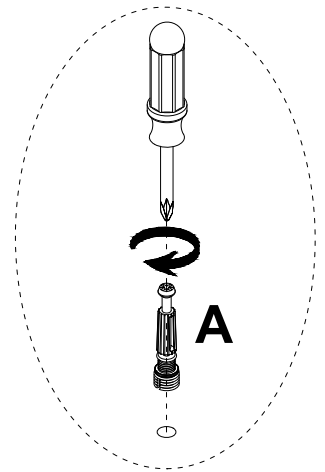


2

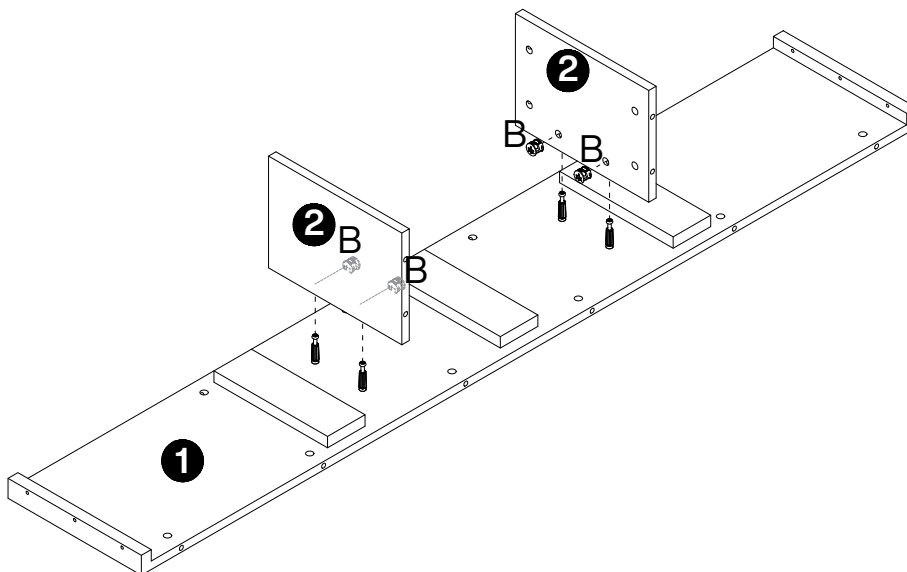


B


Ø12x10mm
4 pcs

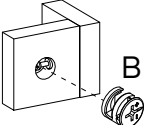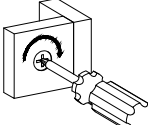Step 1 
Step 2 
Step 3 


3

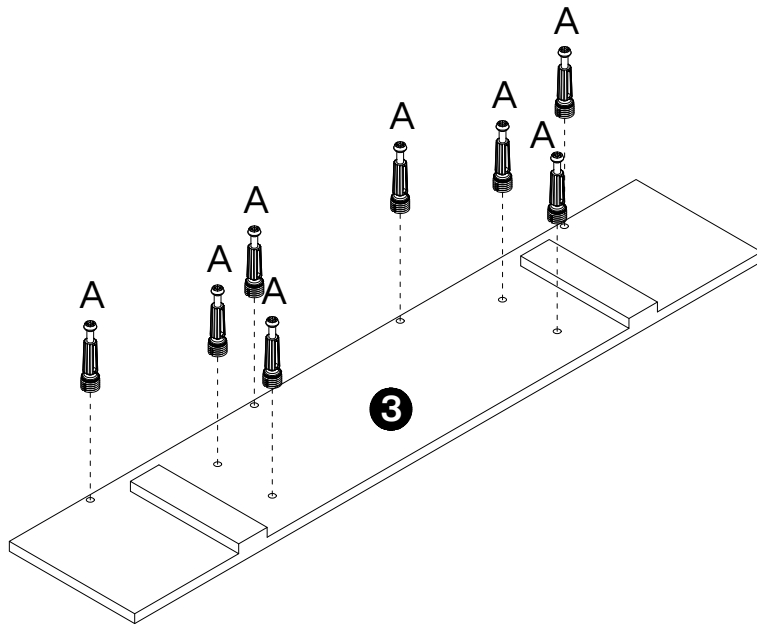


A	
	
M6x35mm	
8 pcs	

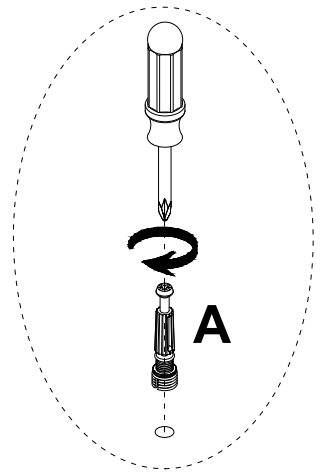


4

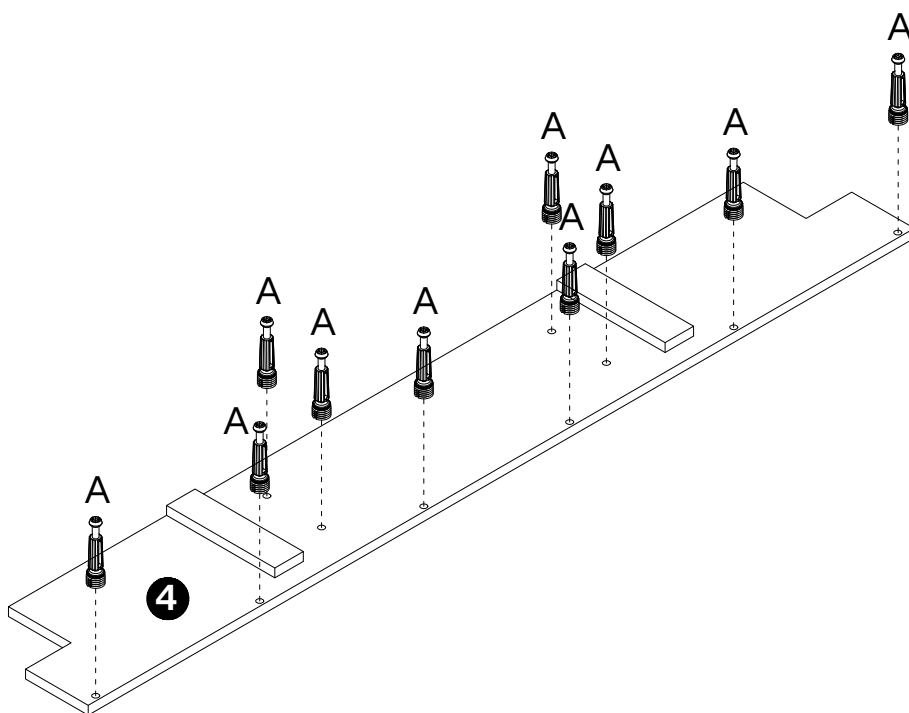

A	
	
M6x35mm	
10 pcs	

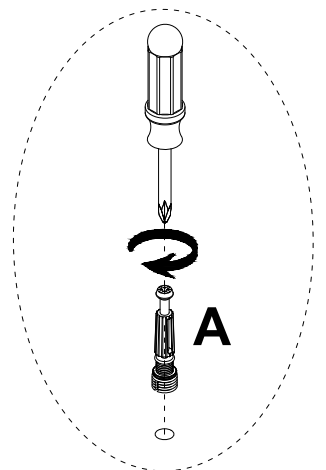


5

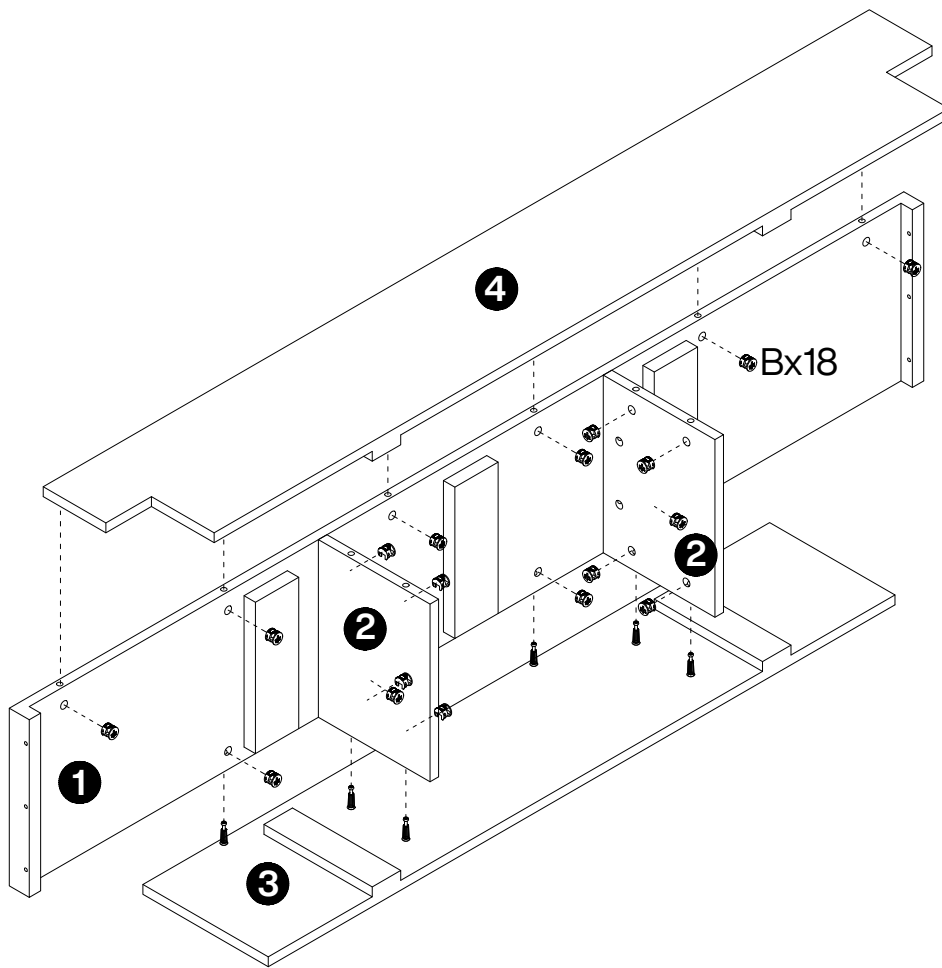


B

Ø12x10mm
18 pcs

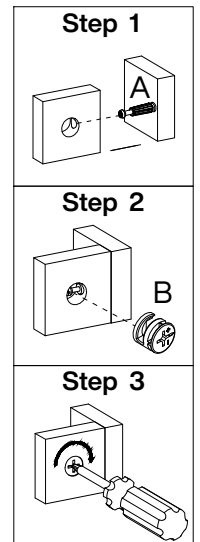


6

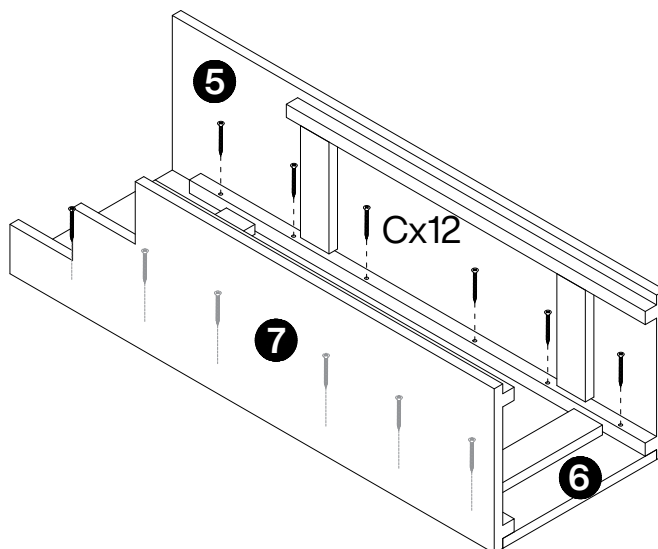

C



Ø3.5x30mm
12 pcs

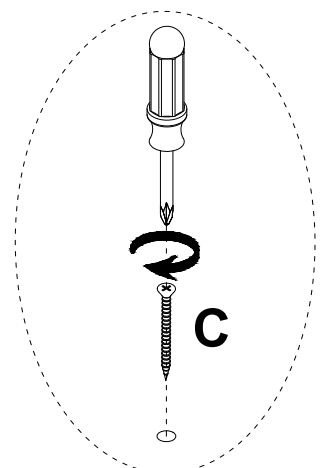

7

C



Ø3.5x30mm
12 pcs

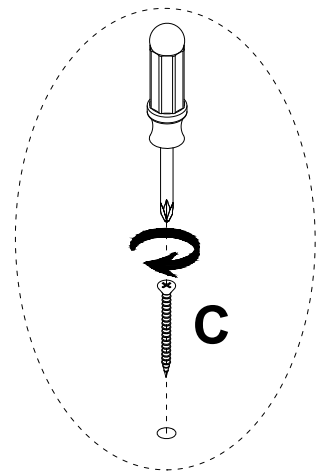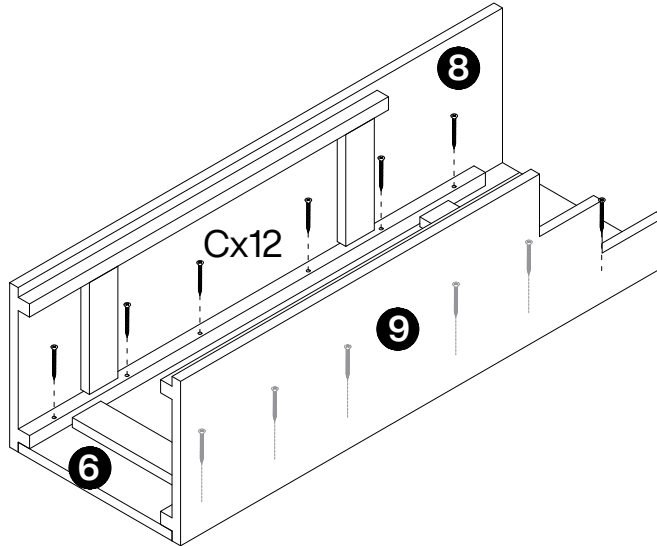


8

D

Ø3.5x25mm
12 pcs

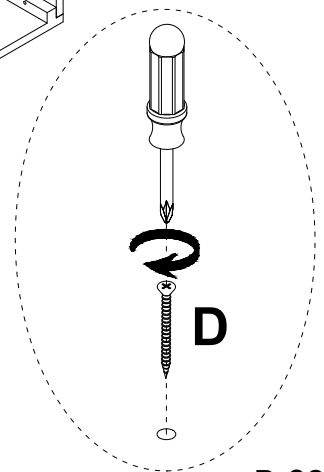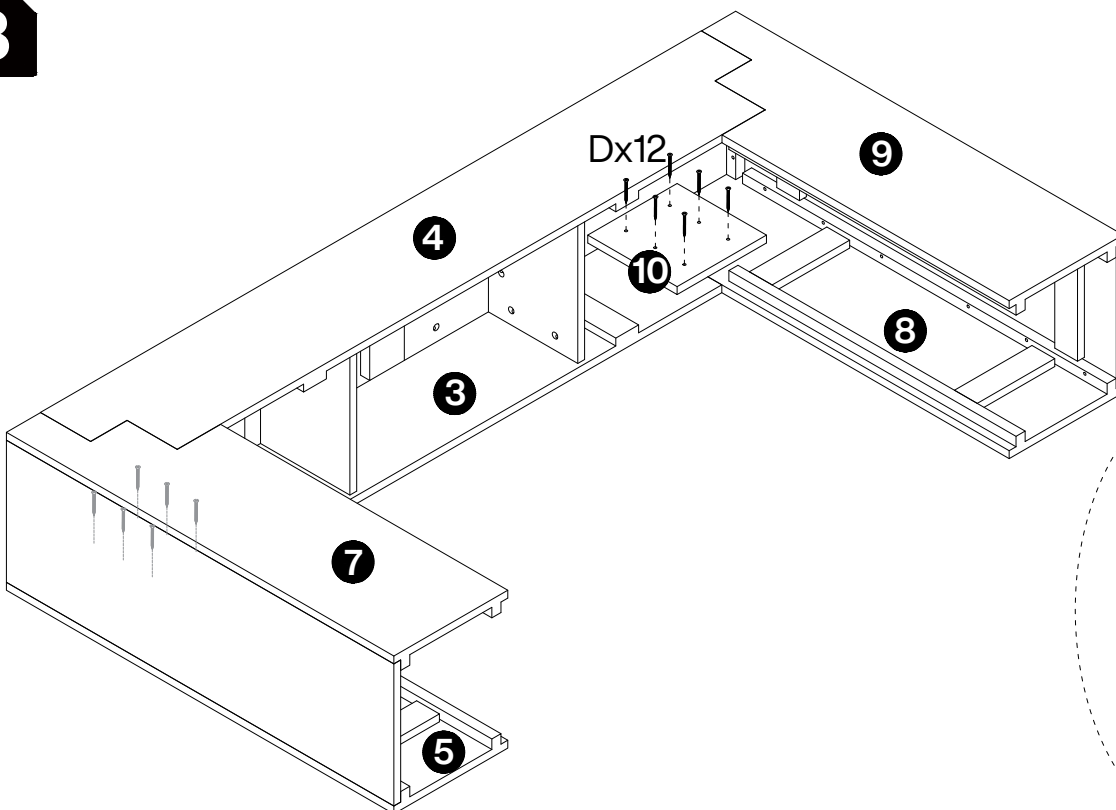


9

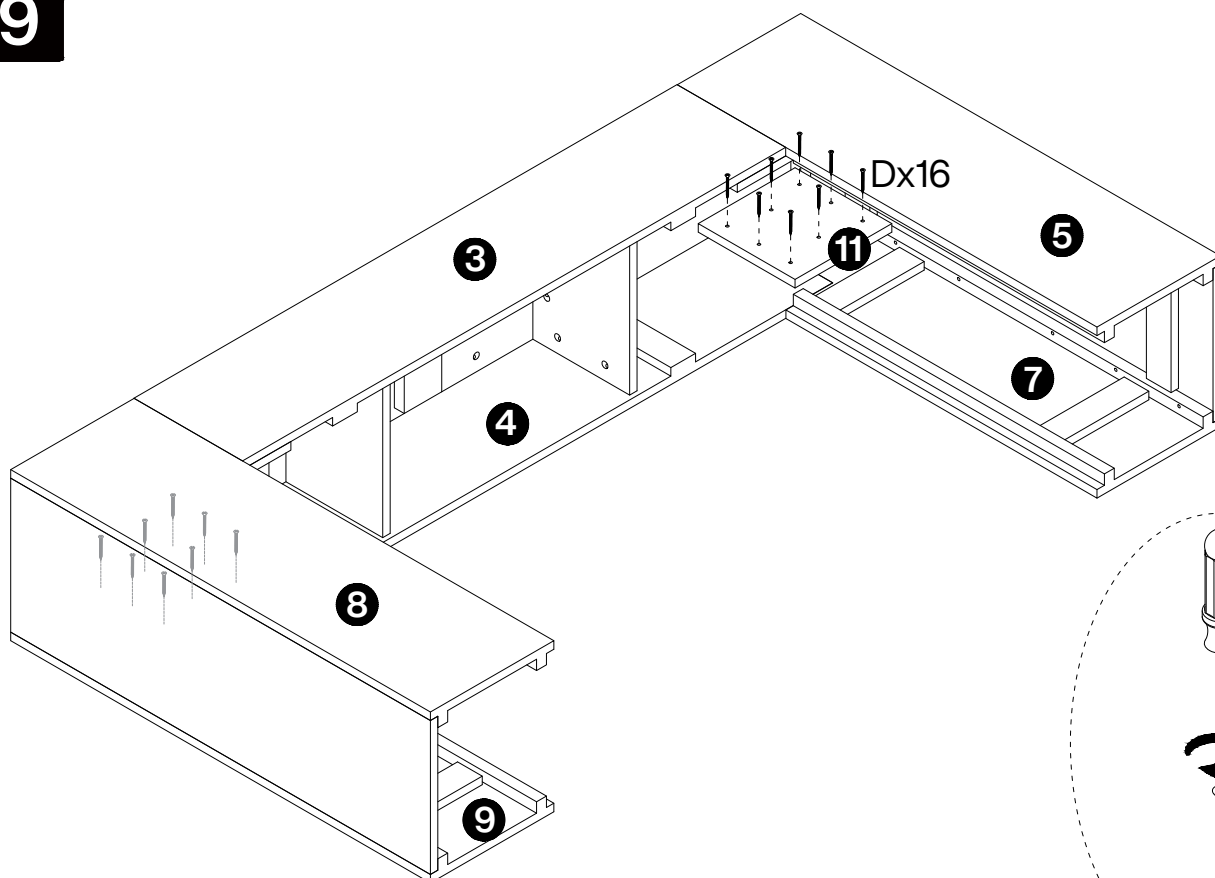


D

Ø3.5x25mm
16 pcs

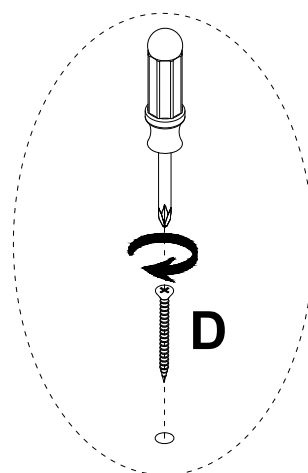


10

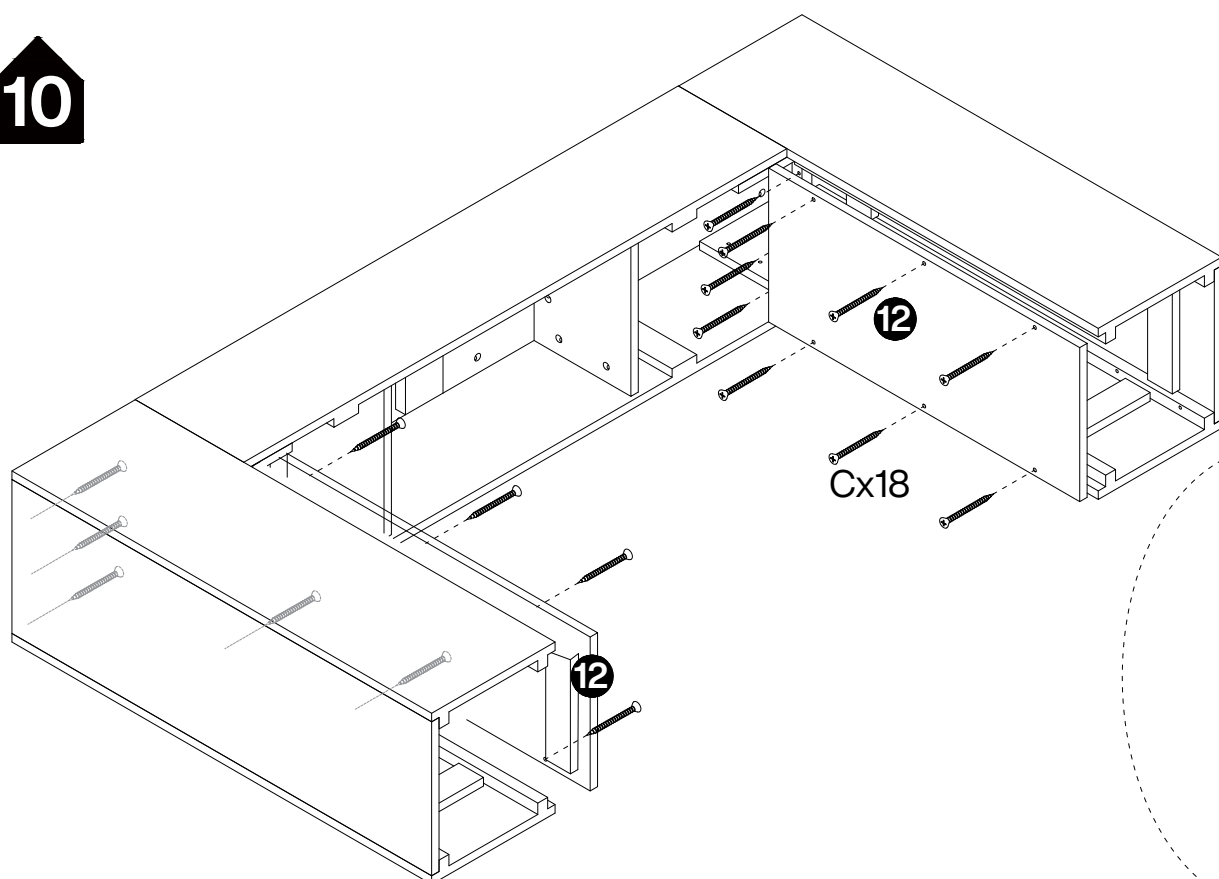



C

Ø3.5x30mm
18 pcs

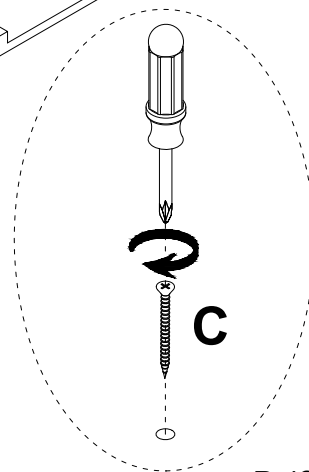

11

H	E
 Hole paste Ø18	
12 pcs	8 pcs

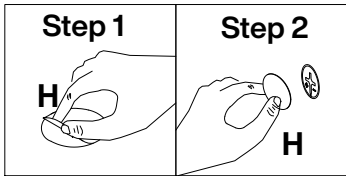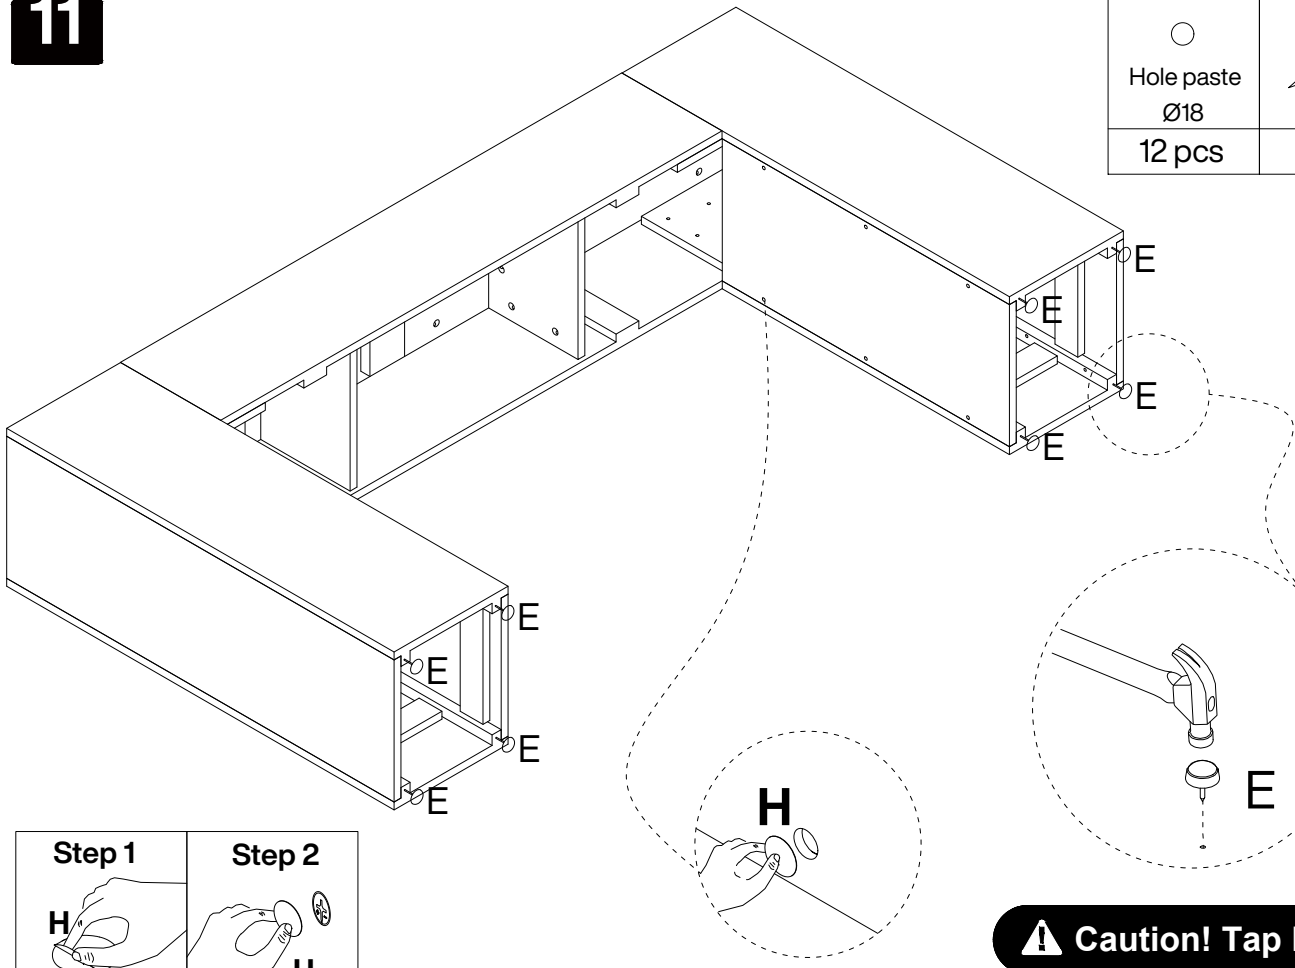


⚠ Caution! Tap lightly

12

F

2 pcs

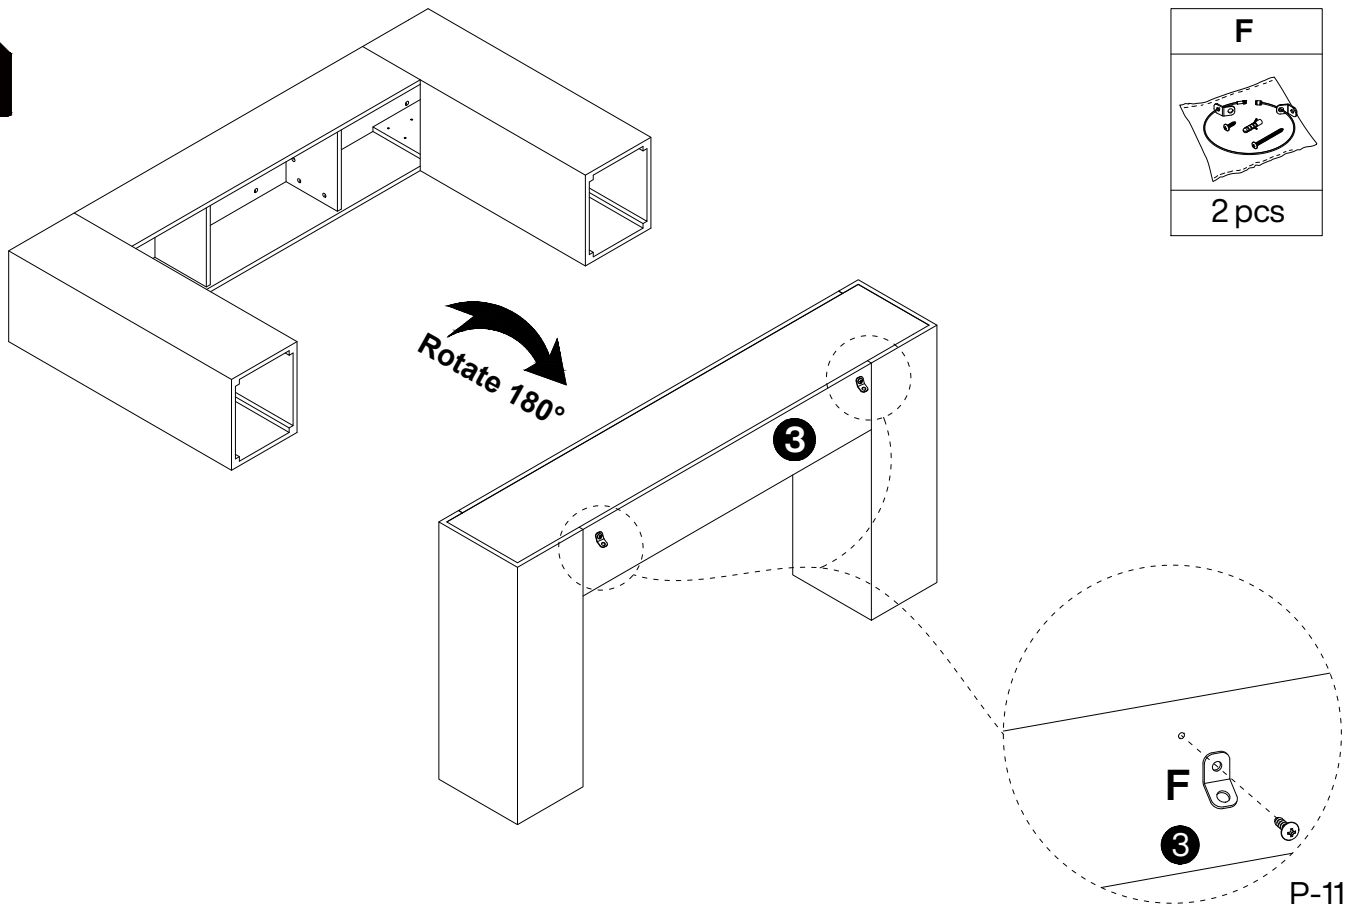


13

Wall



Step1



Step2

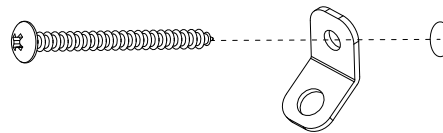

Step3

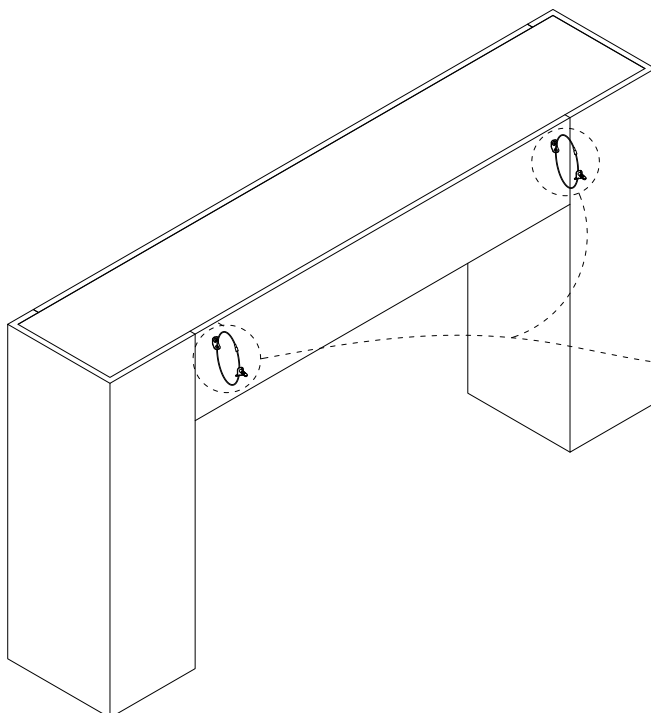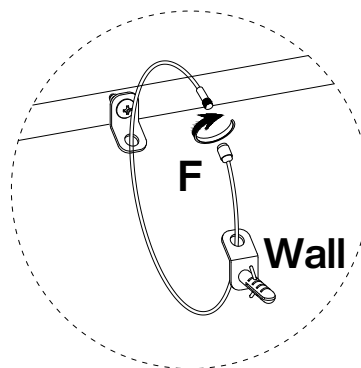

Thank you for your support!

