


Assembly Instructions

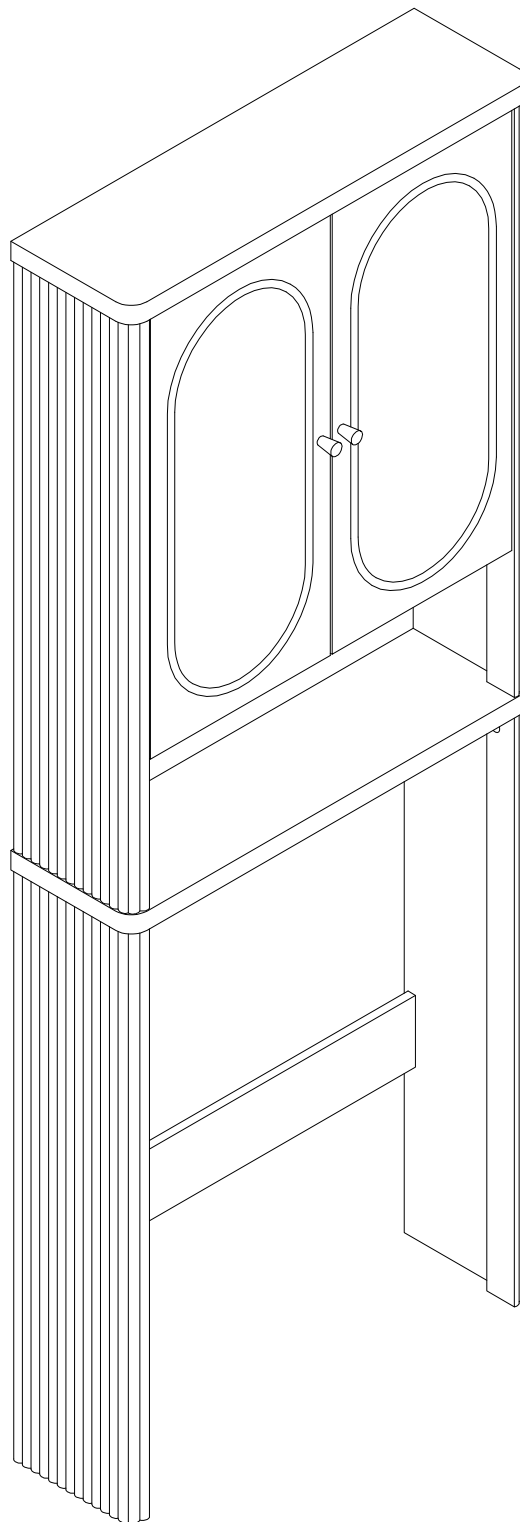


Before Assembly

Tips Before Your Start:


- Remove all wrapping material, including staples & packing straps before you start to assemble.
- DO NOT tighten all screws and bolts until the assembly is completely assembled.
- Keep all hardware parts out of reach of children.

QUICKFIT

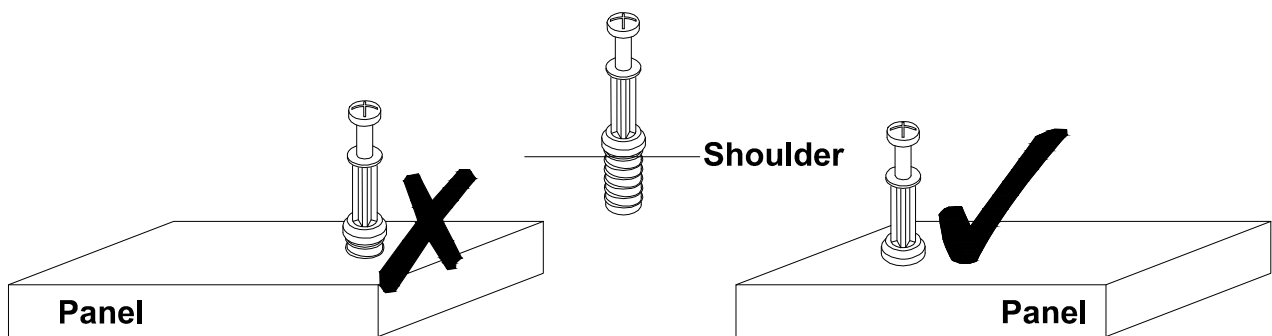

Tighten quickfit until shoulder is flush with panel. Do not overtighten or undertighten.


CAM LOCK

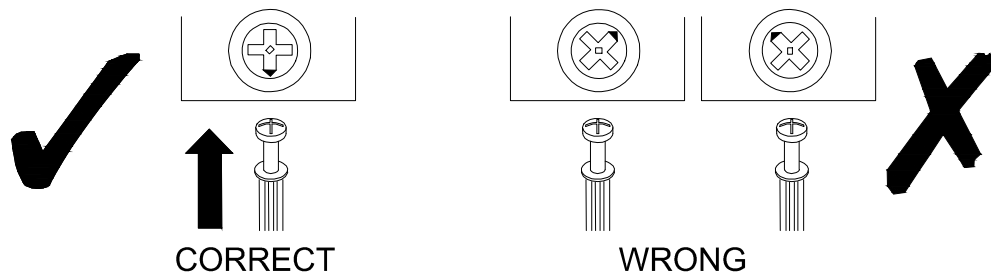

When fitting a cam lock, ensure the starting position is correct before inserting the connecting QUI CKFIT



Quickfit head should be in the centre of the cam lock when the two panels are joined.

Cam lock should be inserted before quickfit.

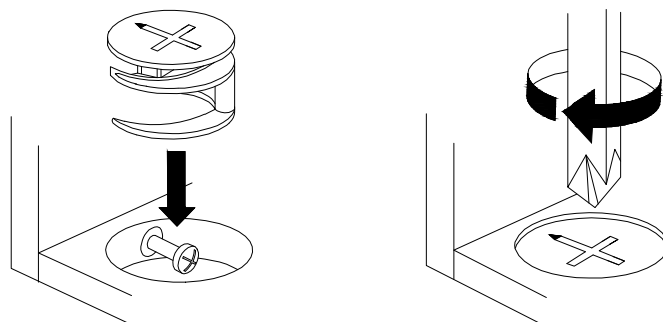


Turn cam lock clockwise to tighten.


Part List

No. A Quantity:28 Pcs Cam Lock Dowel 8*28mm 	No. B Quantity:28 Pcs Cam φ15 	No. C Quantity:28 Pcs Sticker Ø20 	No. D Quantity:12 Pcs Dowel 8*30mm 
No. E Quantity:24 Pcs Screw 3.5*14mm 	No. F Quantity:2 Pcs Screw M4*20mm 	No. G Quantity:2 Pcs Handle 	No. H Quantity:4 Pcs Hinge 
No. I Quantity:6 Pcs Foot Pad Ø15 	No. J Quantity:12 Sets Plastic Wedge 	No. K Quantity:1 Sets Anti-falling Parts 	

Product structure

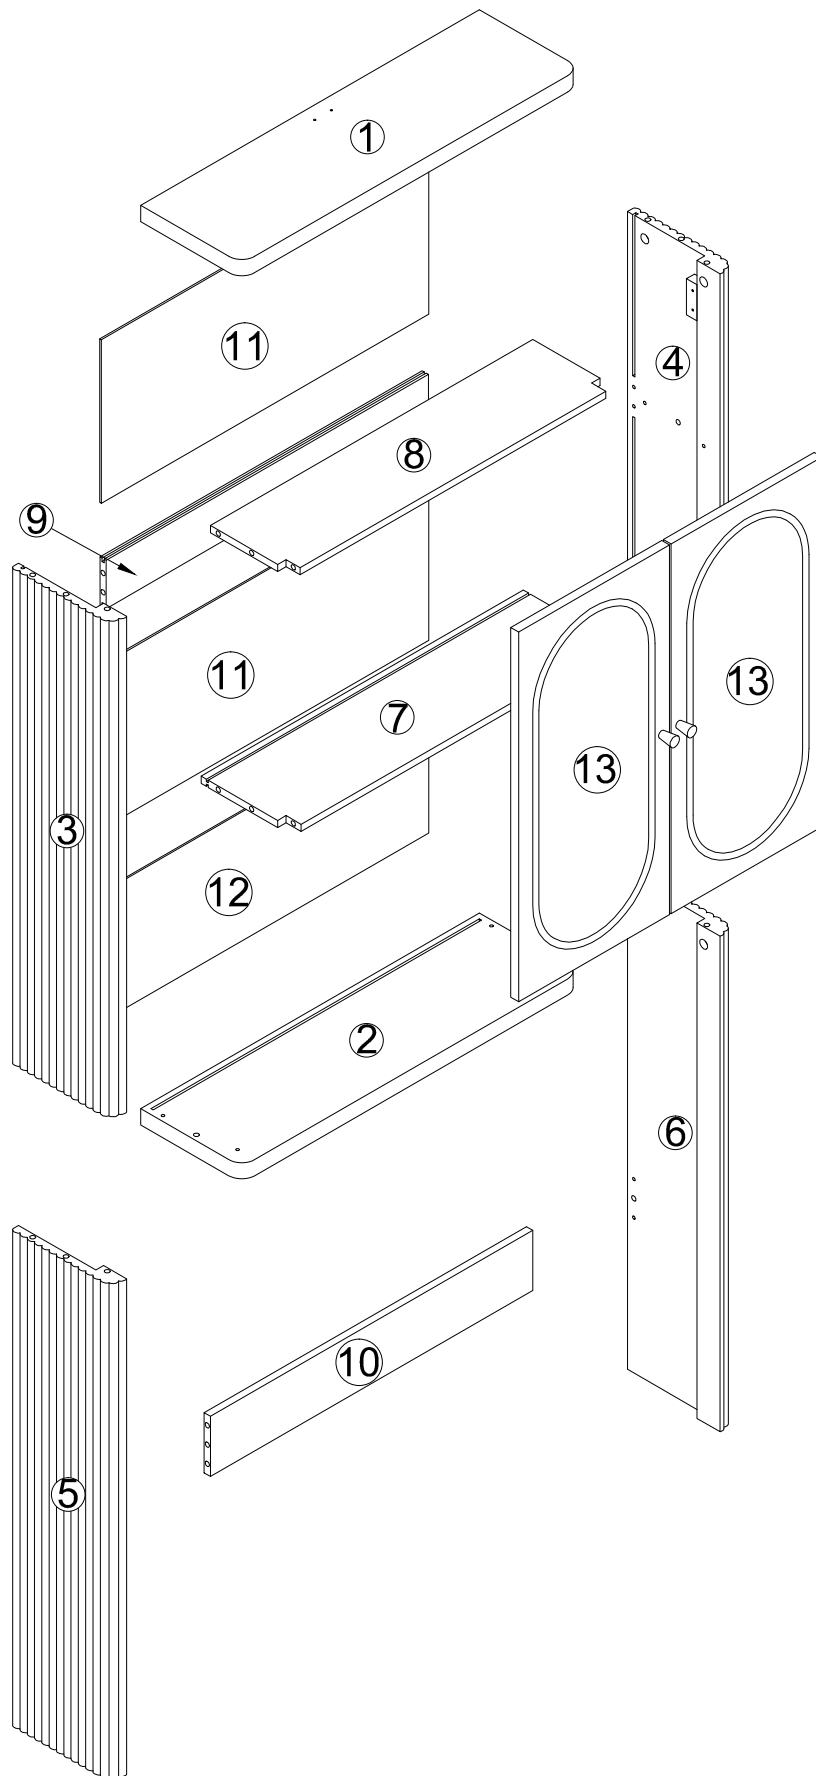


STEP 1

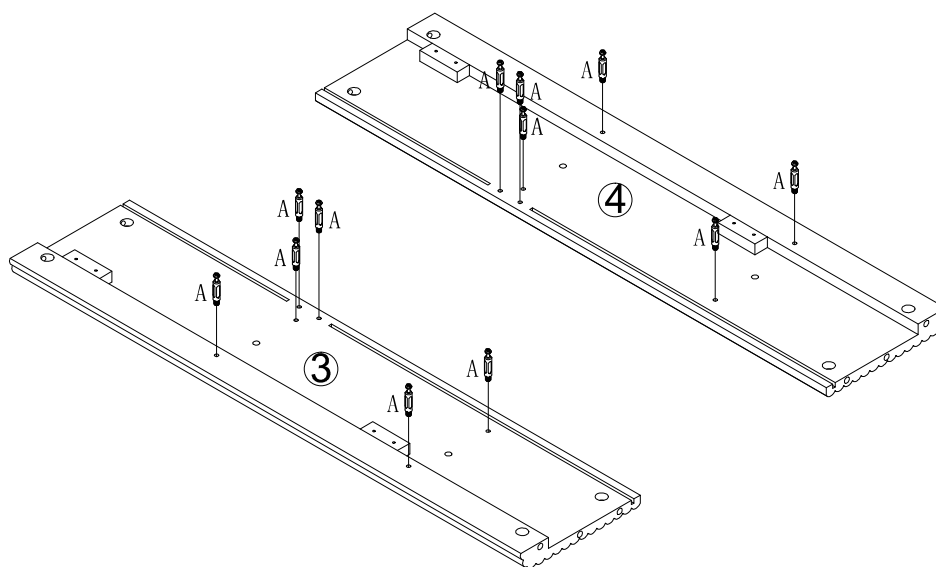

No. A
Quantity: 12 Pcs
8*28 mm




STEP 2

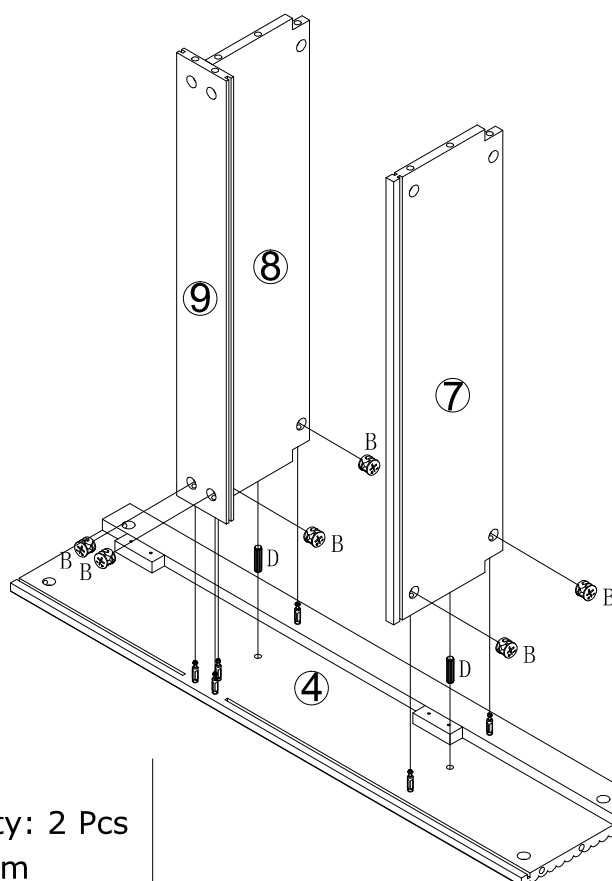


No. B
Quantity: 6 Pcs
Ø15




No. D
Quantity: 2 Pcs
8*30mm



STEP 3

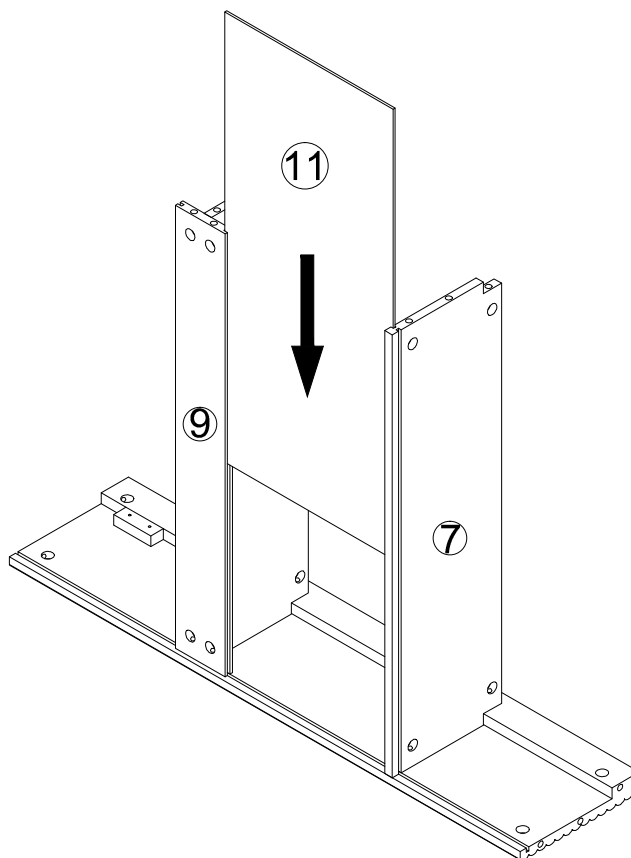


STEP 4

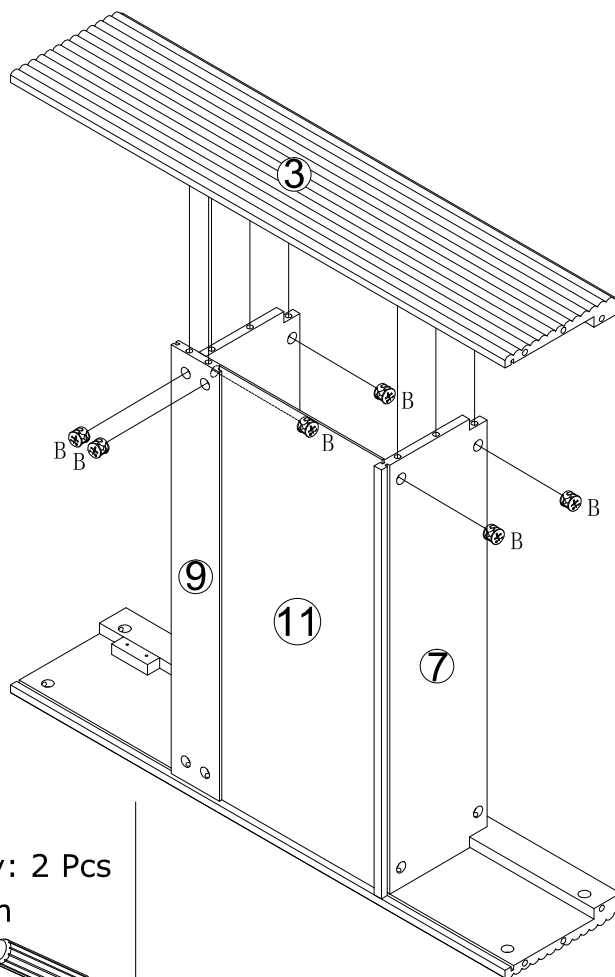


No. B
Quantity: 6 Pcs
Ø15



No. D
Quantity: 2 Pcs
8*30mm




STEP 5

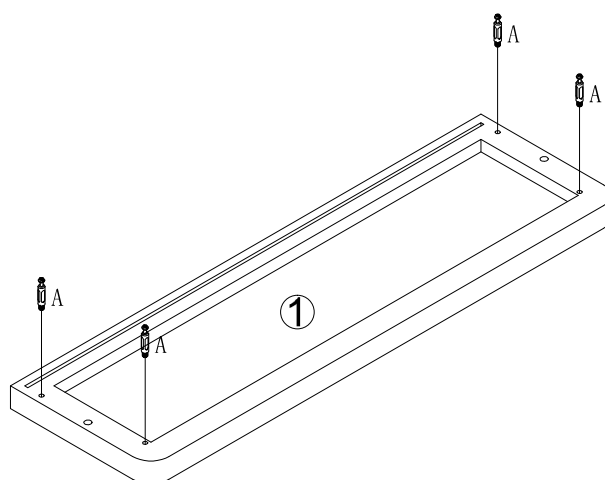


No. A
Quantity: 4 Pcs
8*28 mm



STEP 6

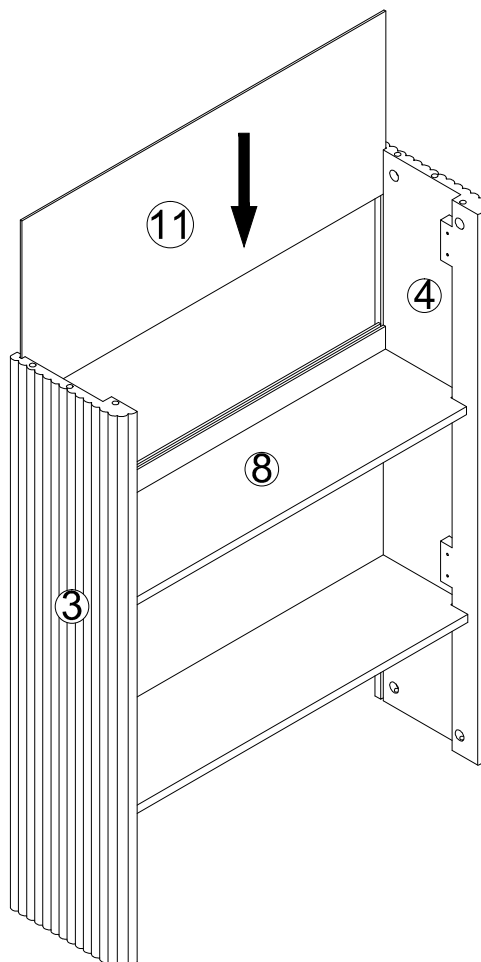


STEP 7

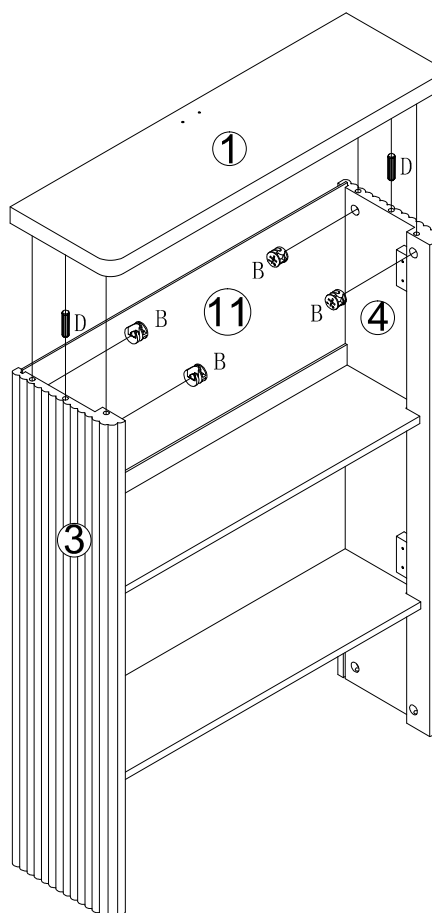


No. B
Quantity: 4 Pcs
Ø15



No. D
Quantity: 2 Pcs
8*30mm



STEP 8

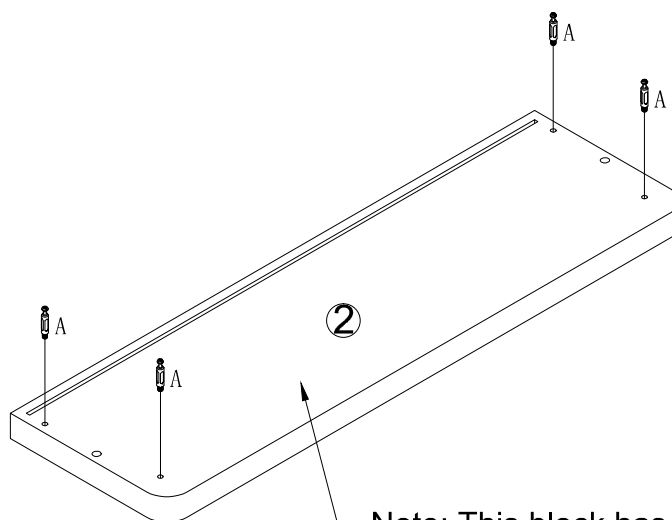


Note: This block has holes on both sides, please pay attention to the difference.


No. A
Quantity: 4 Pcs
8*28 mm



STEP 9

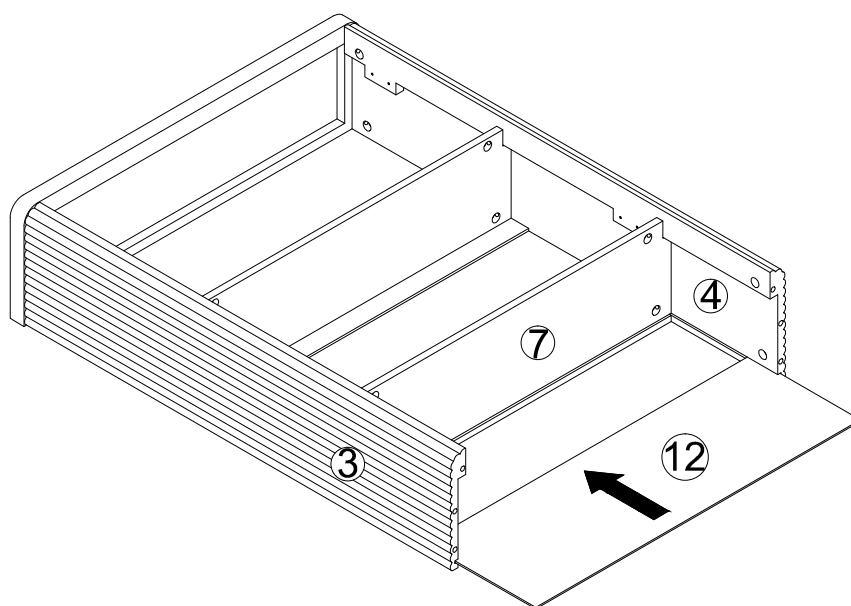


STEP 10

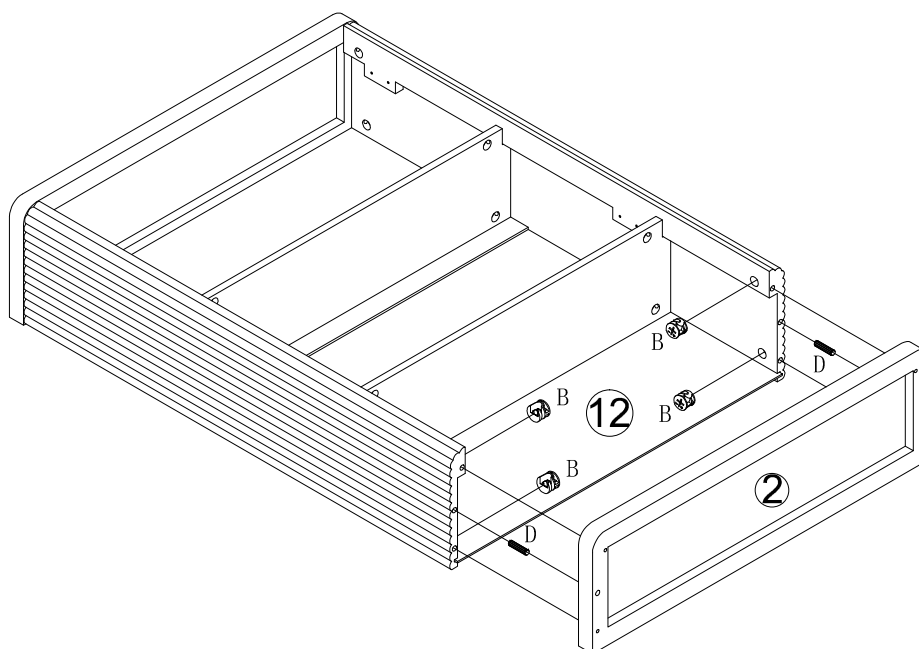


No. B
Quantity: 4 Pcs
Ø15



No. D
Quantity: 2 Pcs
8*30mm



STEP 11

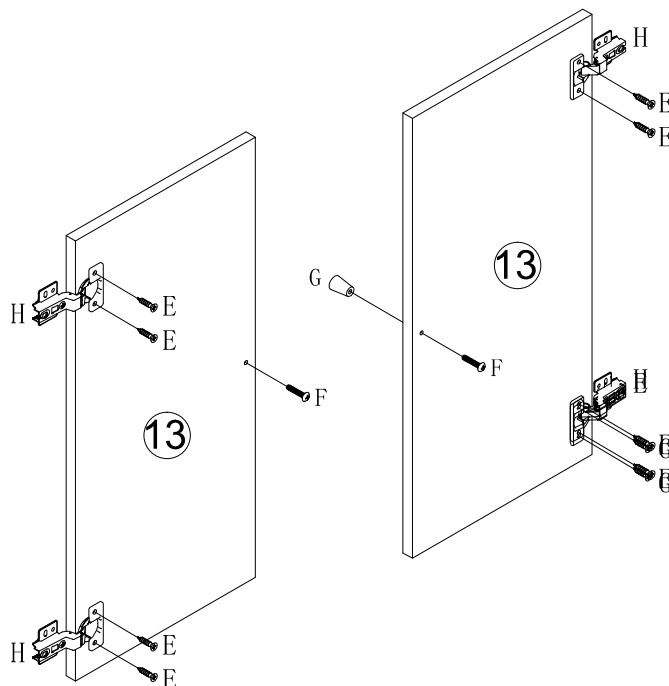

No. E
Quantity: 8 Pcs
3.5*14mm




No. F
Quantity: 2 Pcs
M4*20mm




No. G
Quantity: 2 Pcs




No. H
Quantity: 4 Pcs




STEP 12

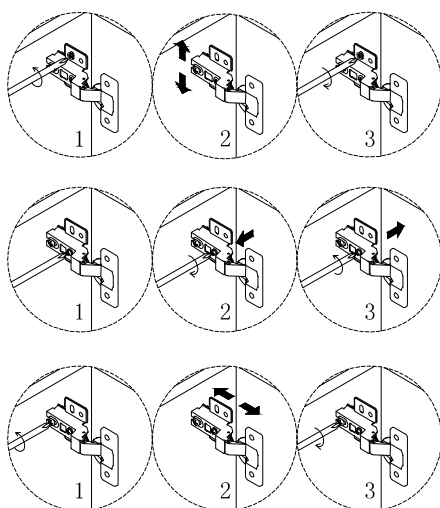

No. E
Quantity: 16 Pcs
3.5*14mm

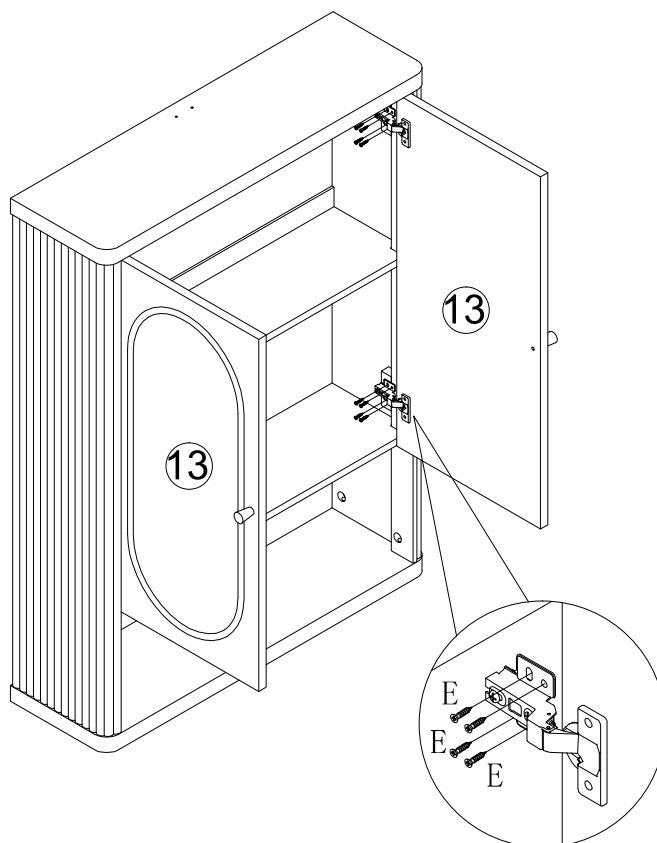


STEP 13

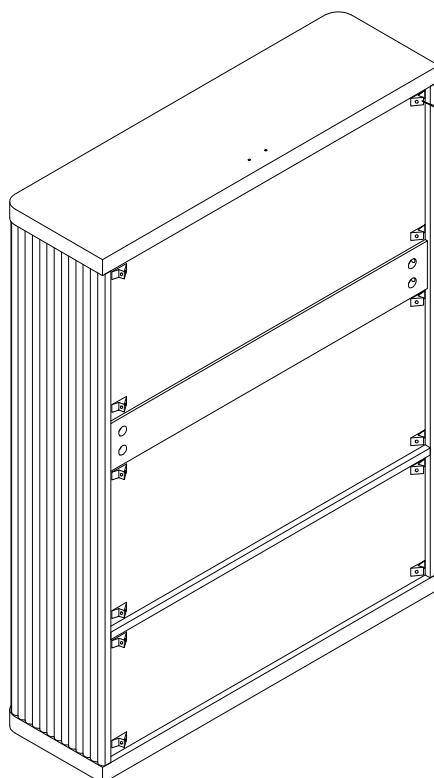


Description: Insert the thinner end of the reinforcement into the gap in this back panel, then tighten the screws. This will make the cabinet more stable.

No. J
Quantity: 12 Sets




STEP 14

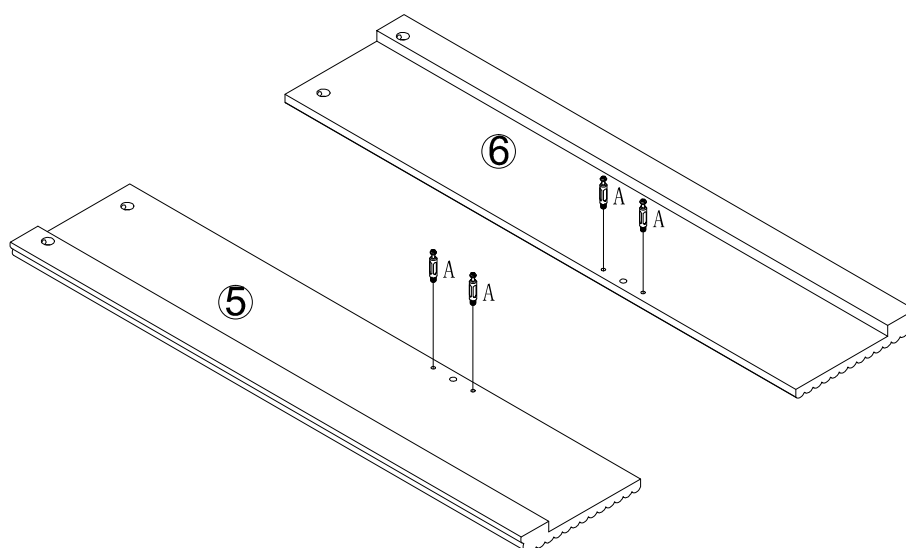

No. A
Quantity: 4 Pcs
8*28 mm




STEP 15

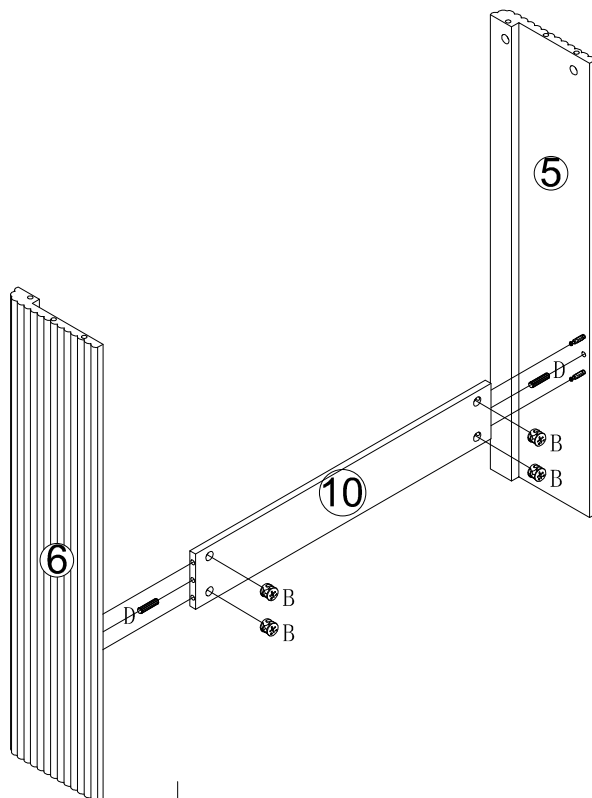


No. B
Quantity: 4 Pcs
Ø15



No. D
Quantity: 2 Pcs
8*30mm




STEP 16

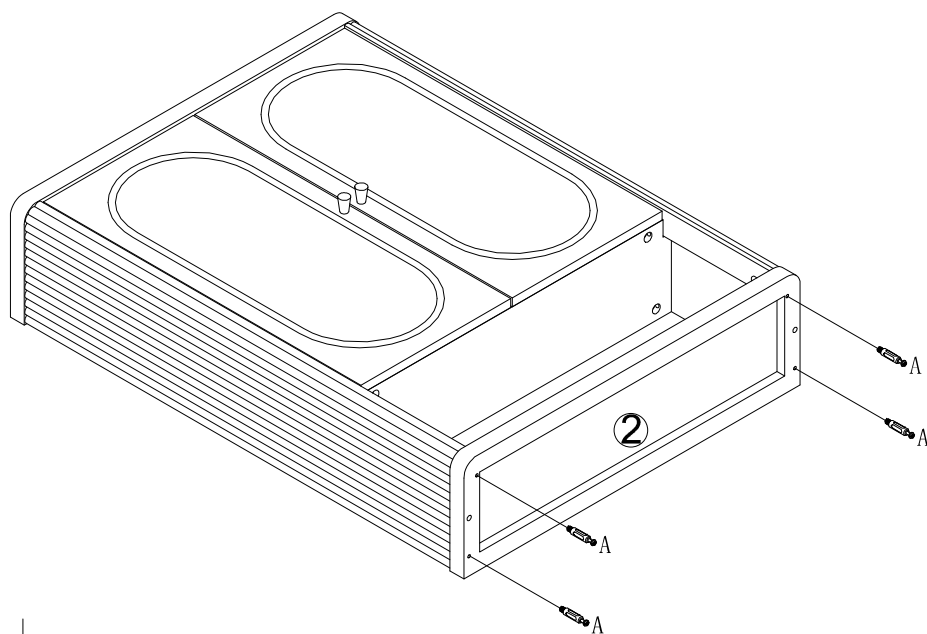

No. A
Quantity: 4 Pcs
8*28 mm




STEP 17

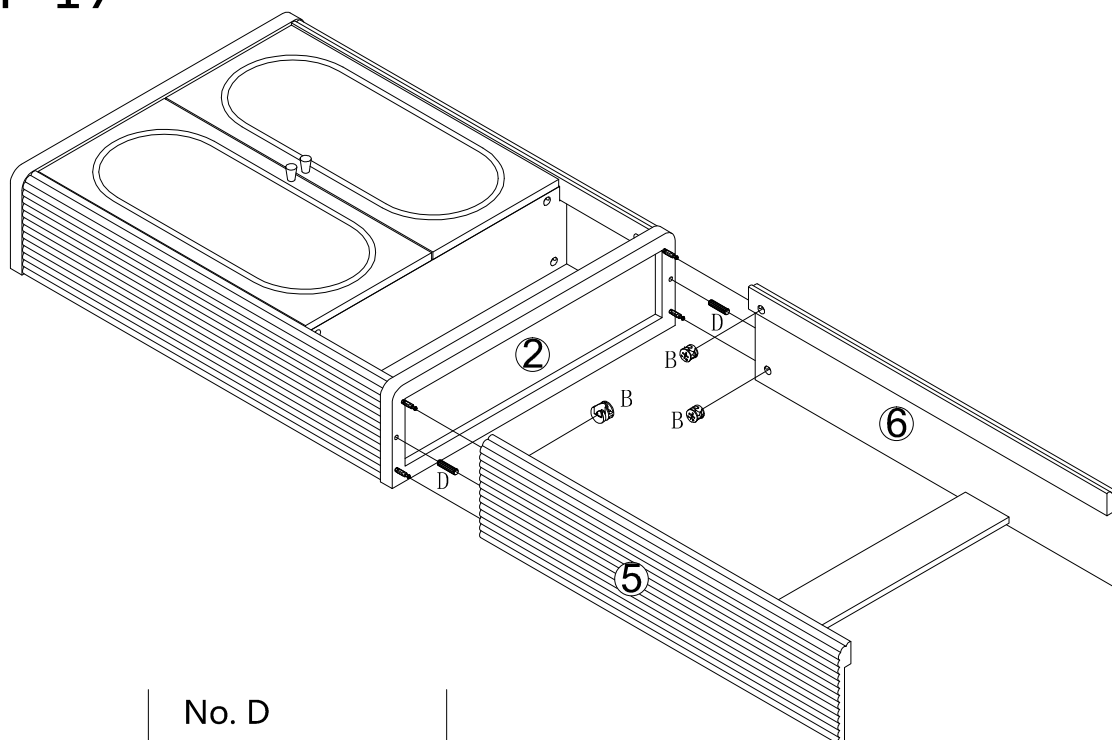


No. B
Quantity: 4 Pcs
Ø15



No. D
Quantity: 2 Pcs
8*30mm




STEP 18

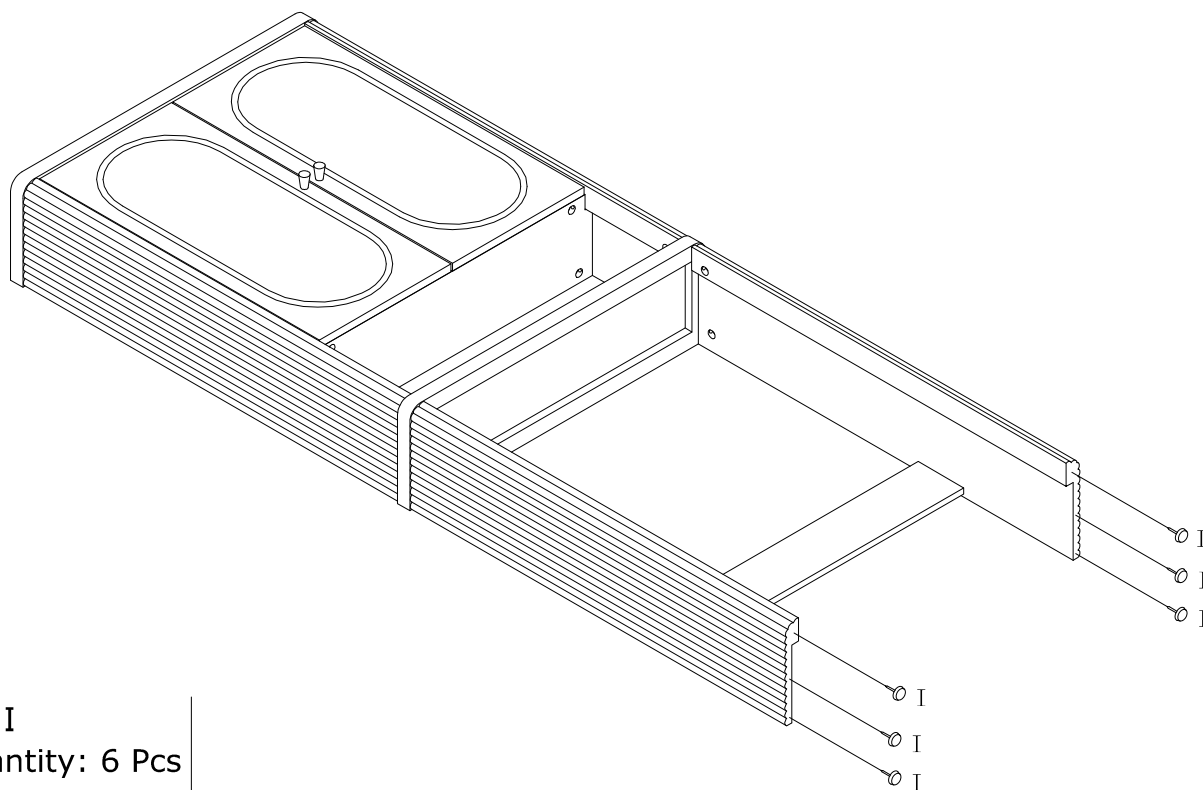


No. I
Quantity: 6 Pcs
Ø15



STEP 19

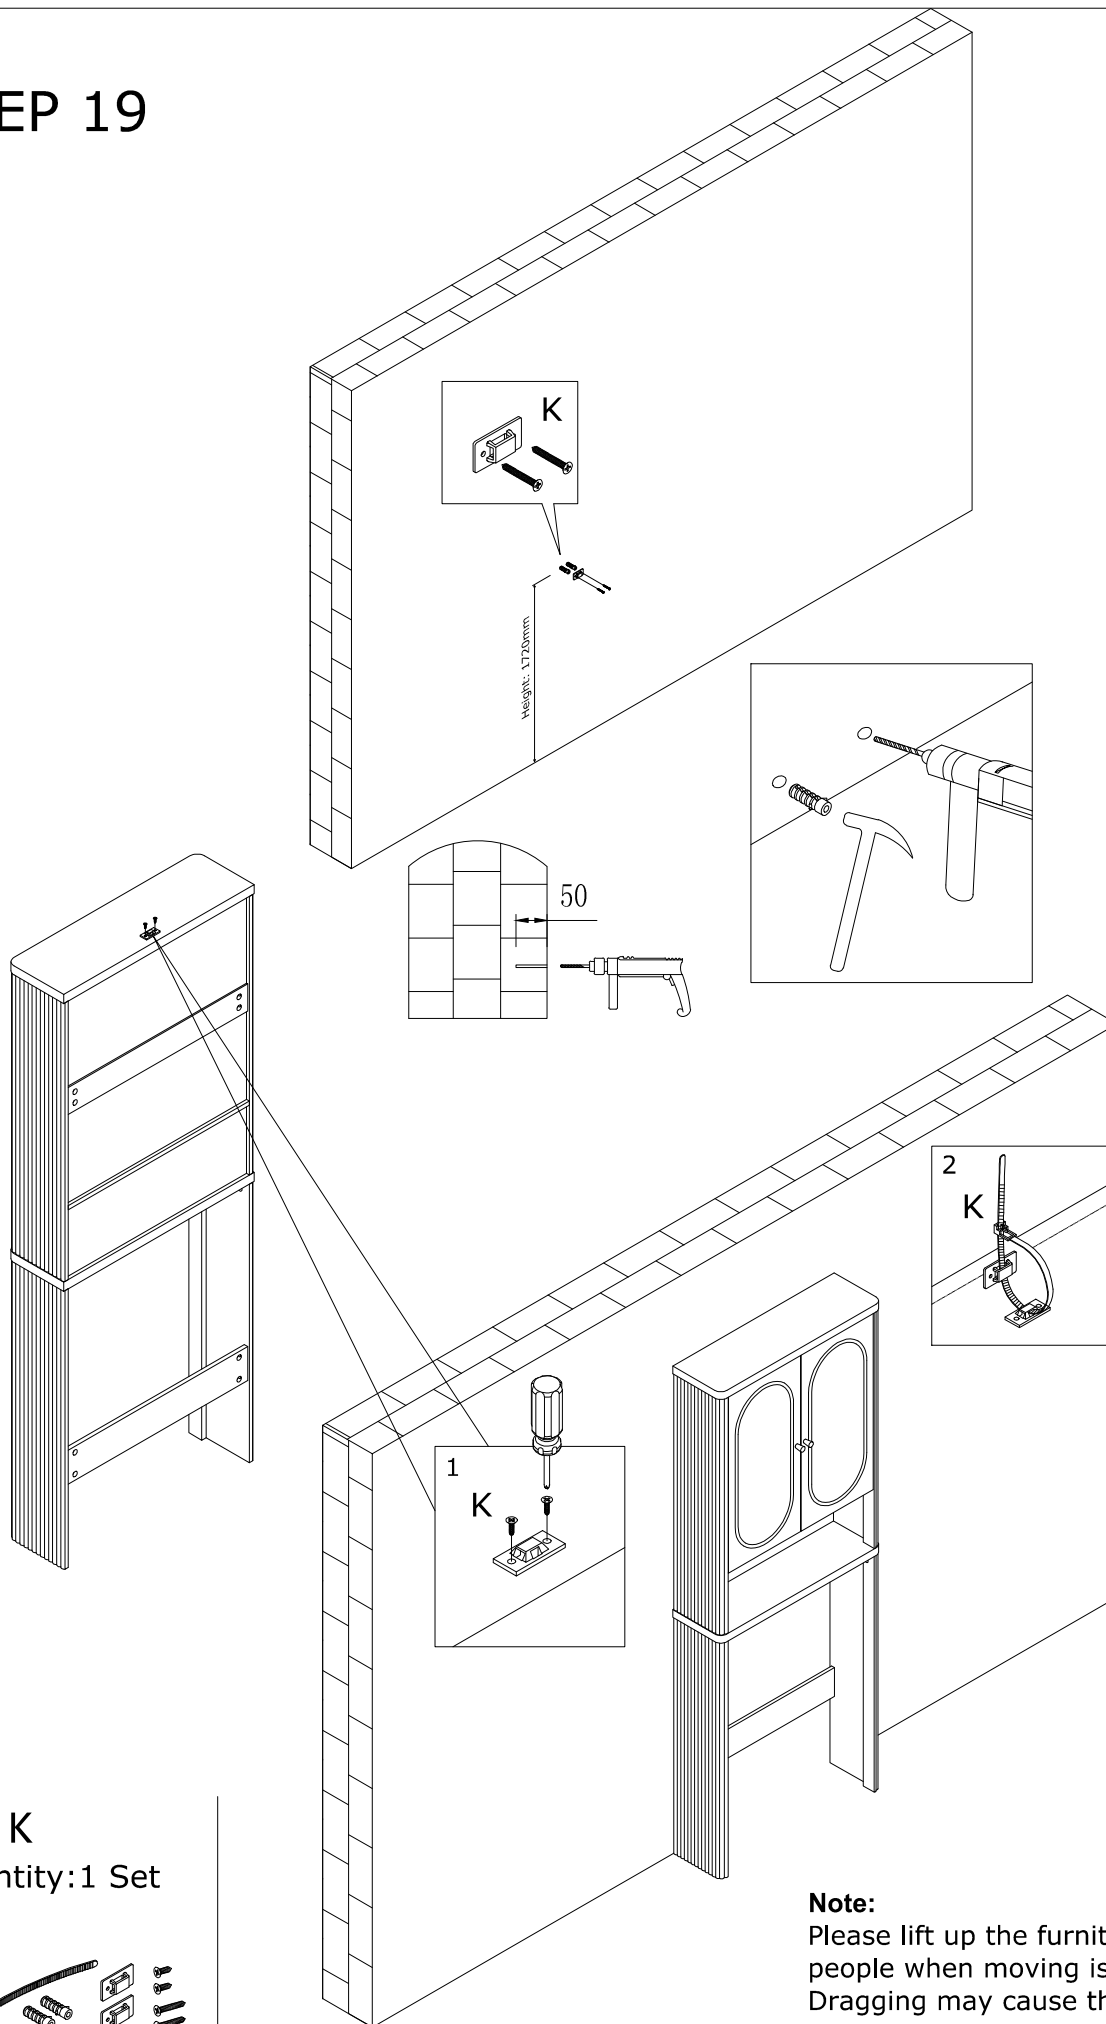

No. K
Quantity: 1 Set



Note:
Please lift up the furniture by two people when moving is needed.
Dragging may cause the legs failure.