


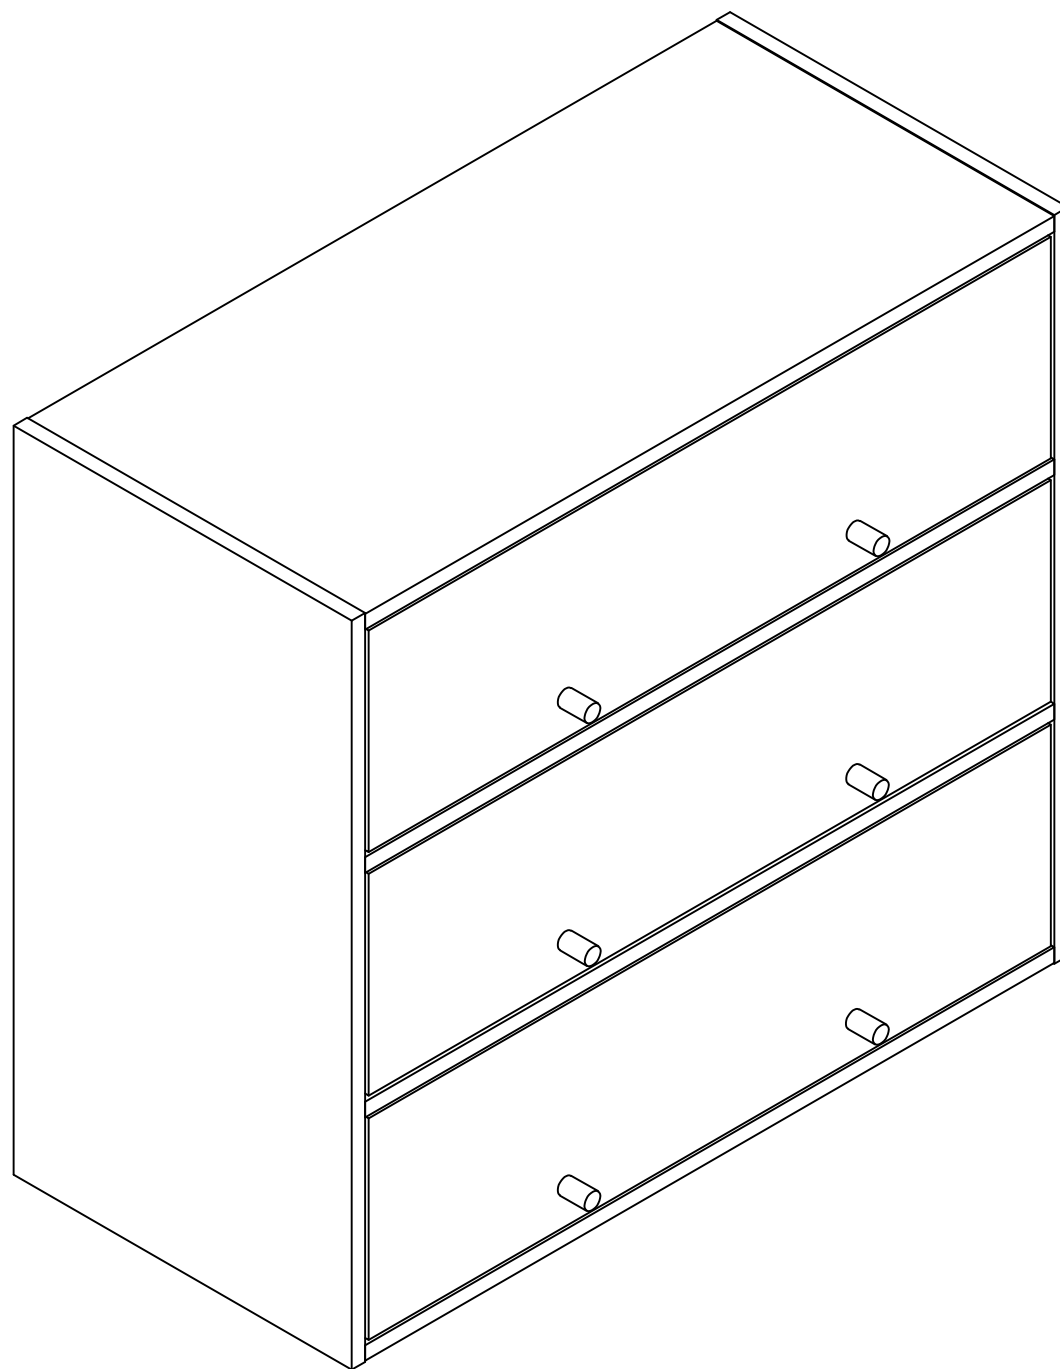
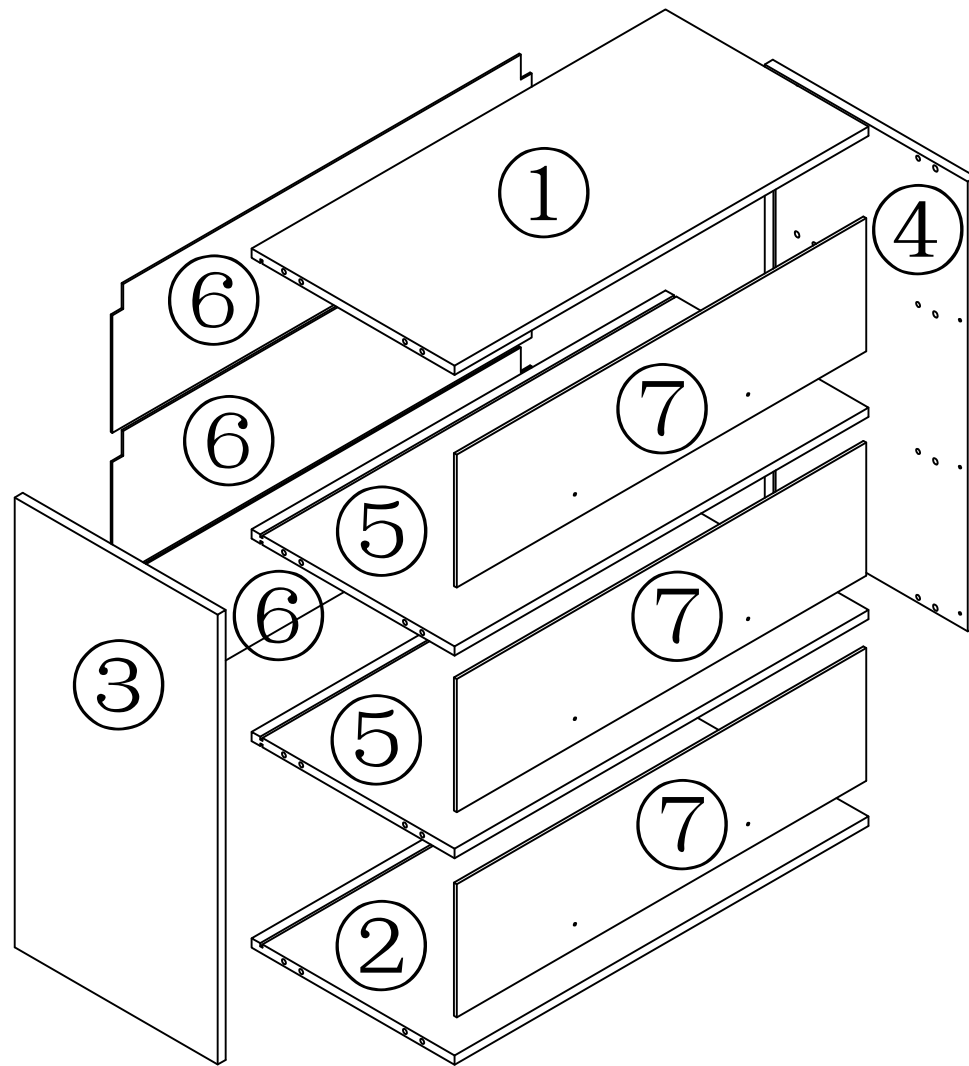


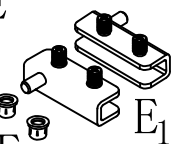




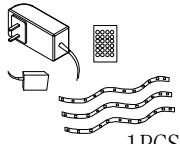


A  16PCS	B  16PCS	C 8*40  16PCS	D  6PCS	E  E₁ 3PCS E₂	F  6PCS	G 4*9  6PCS	LED  1PCS
---	---	---	--	---	--	---	--

1

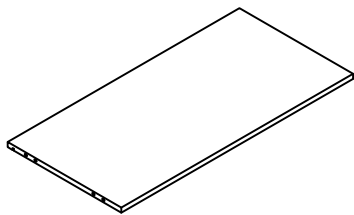

765*375 1PC

2

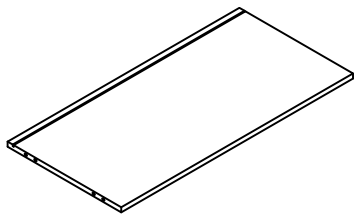

765*375 1PC

3




720*375 1PC

4




720*375 1PC

5

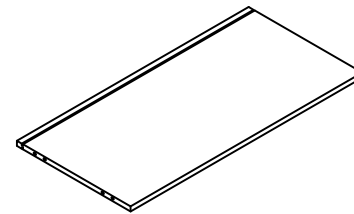


765*375 2PC

6

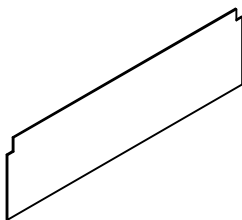

775*228 3PC

7

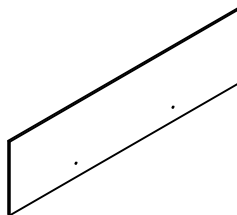


757*213 3PC




Hardware installation demonstration

NOTE: Please make sure "A" hardware tightened and can't be pulled out!


I

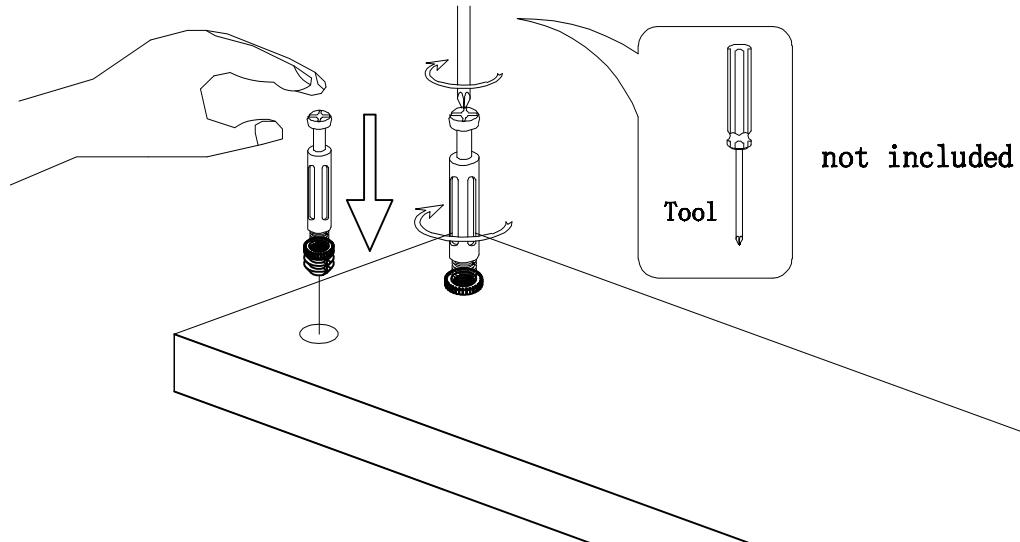

II



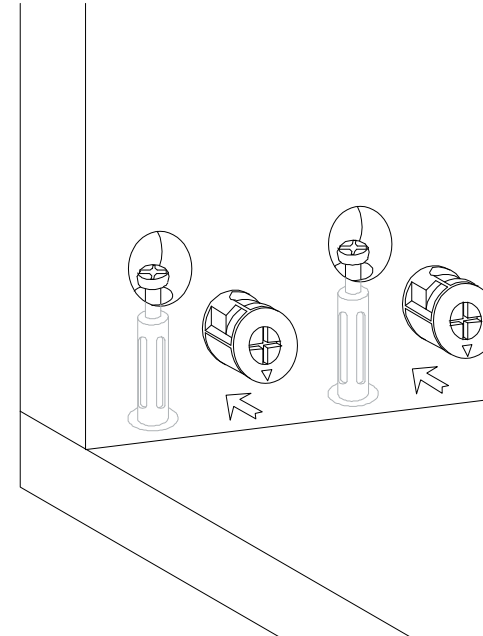


III

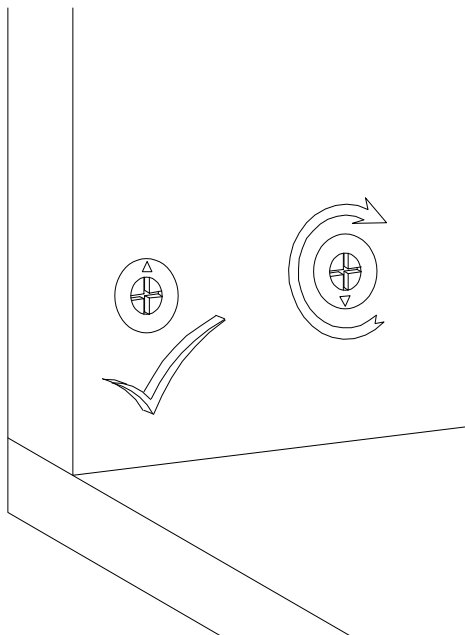


IV

①

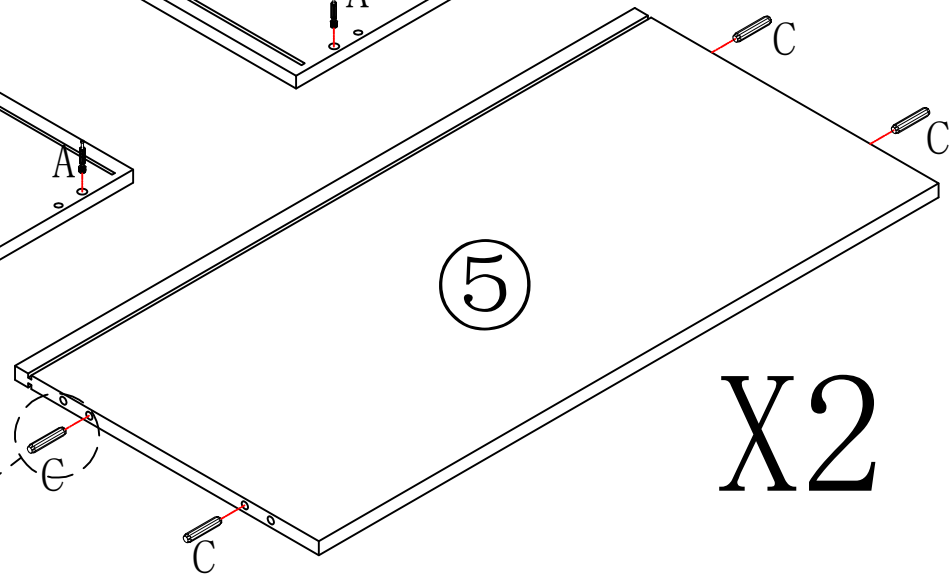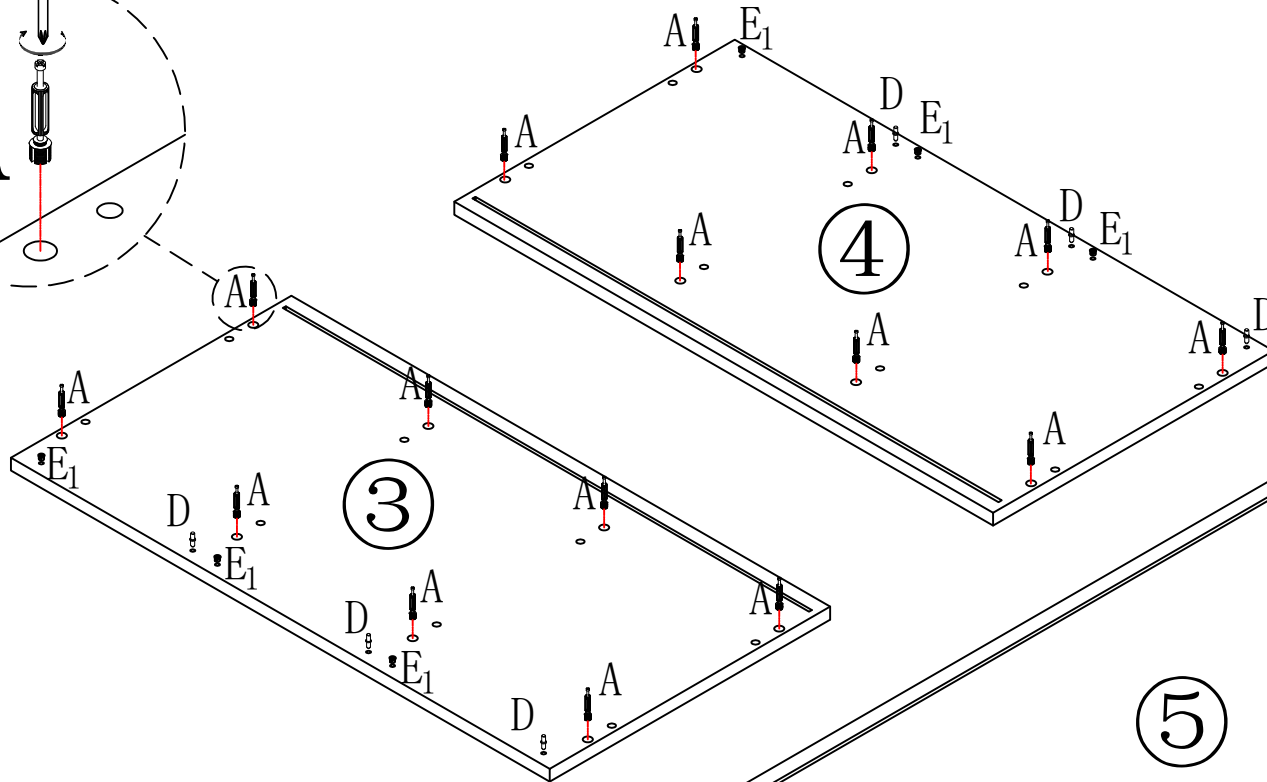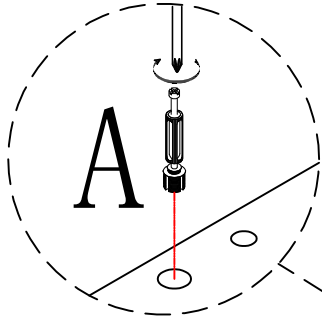


X2

	A*16
	C*8
	D*6
	E ₁ *3

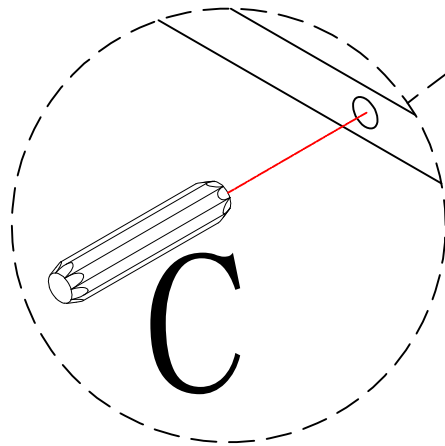

put A on board ③ ④
put C on board ⑤

②

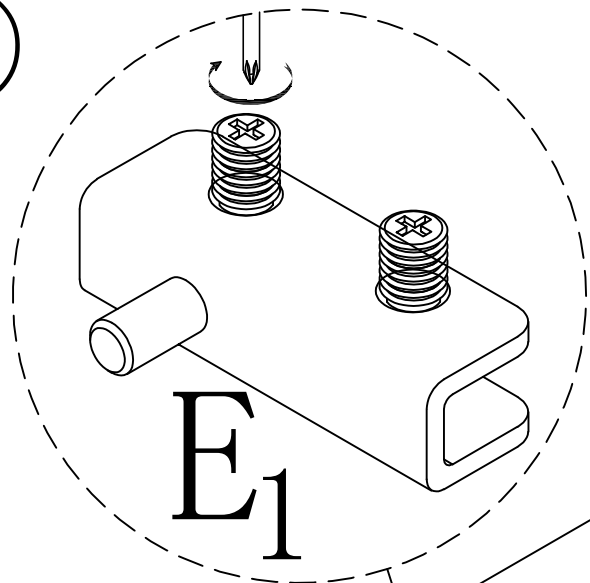

E_1

E_1

⑦

E_1

X3

G

F

G

F

①

②

C

C

C

C


C

C



C

put C on board ① ②

	C*8
	E_1 *3
	F*6
	G*6

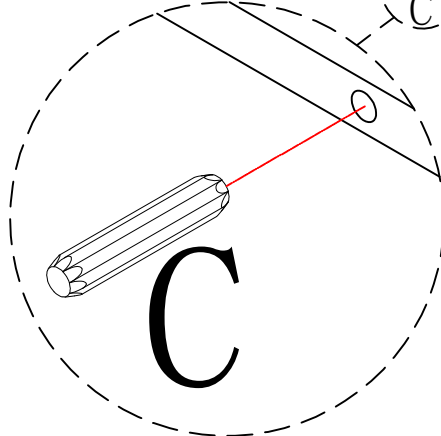

C

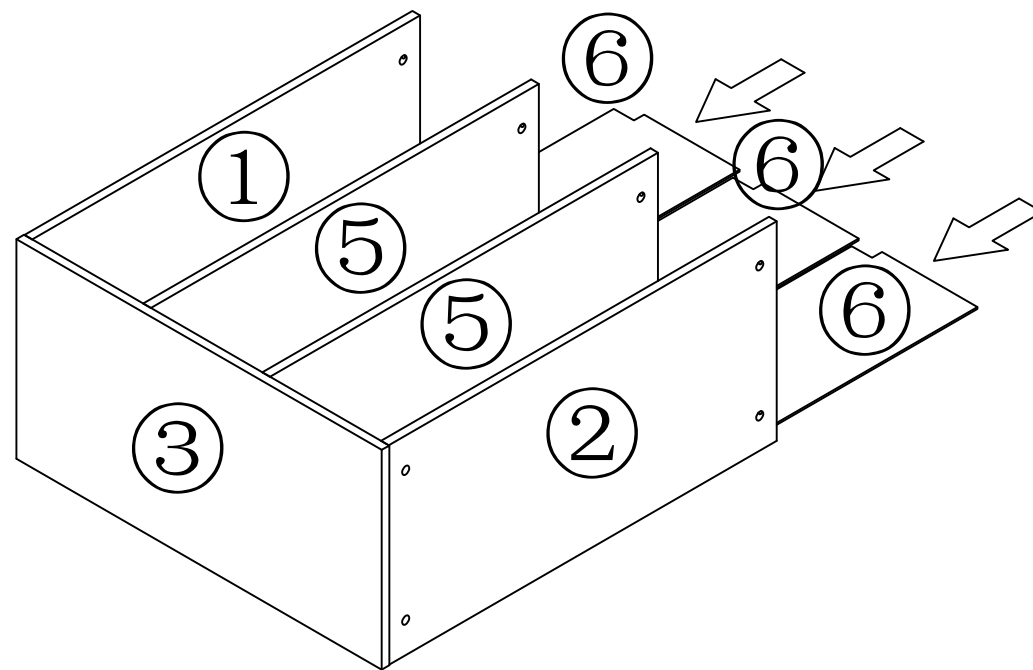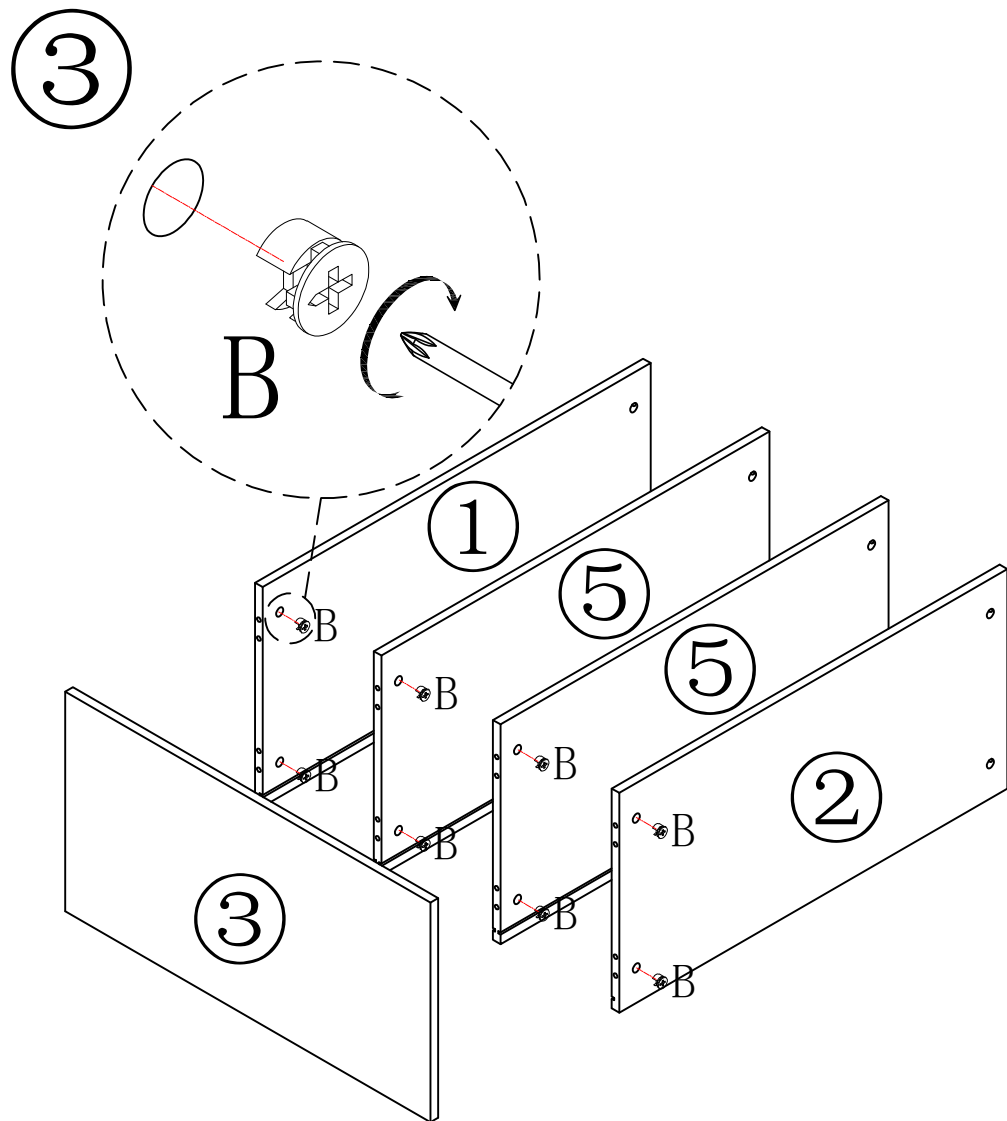




Make sure the arrow on the screw align to the hole on the side.

put B on board ① ② ⑤



B*8

4

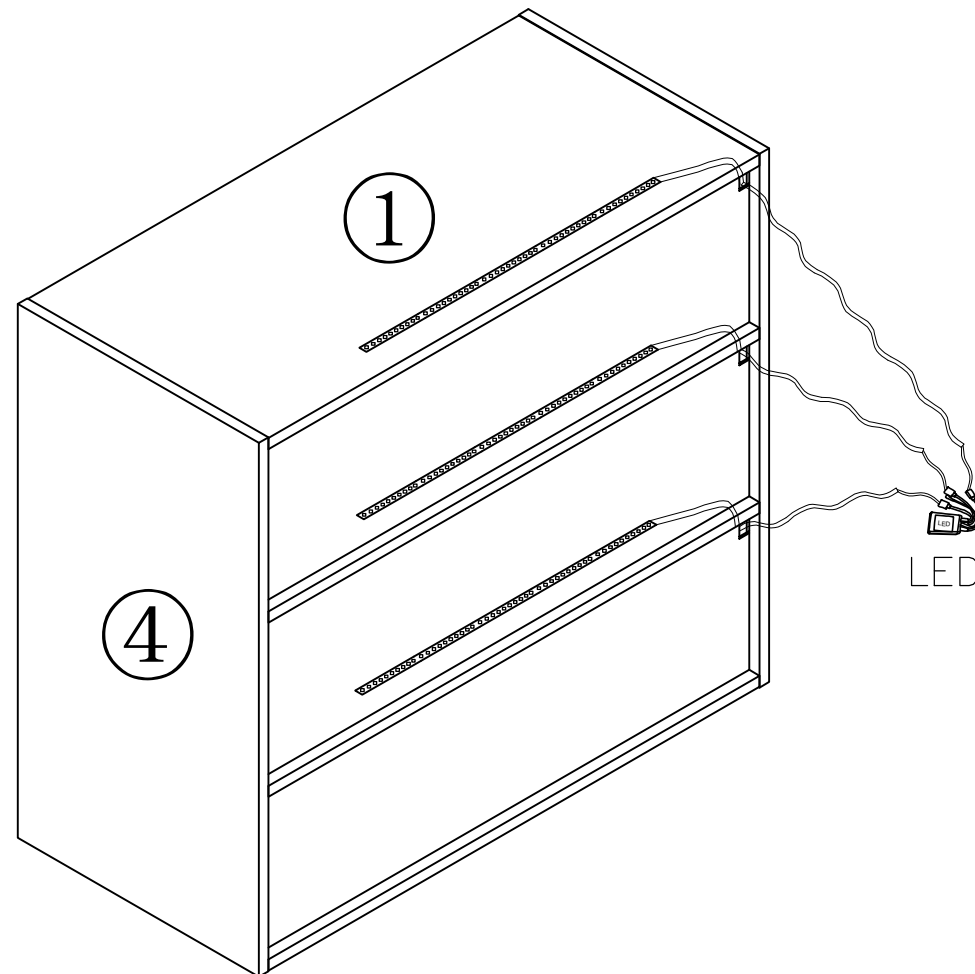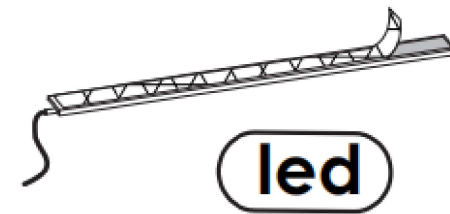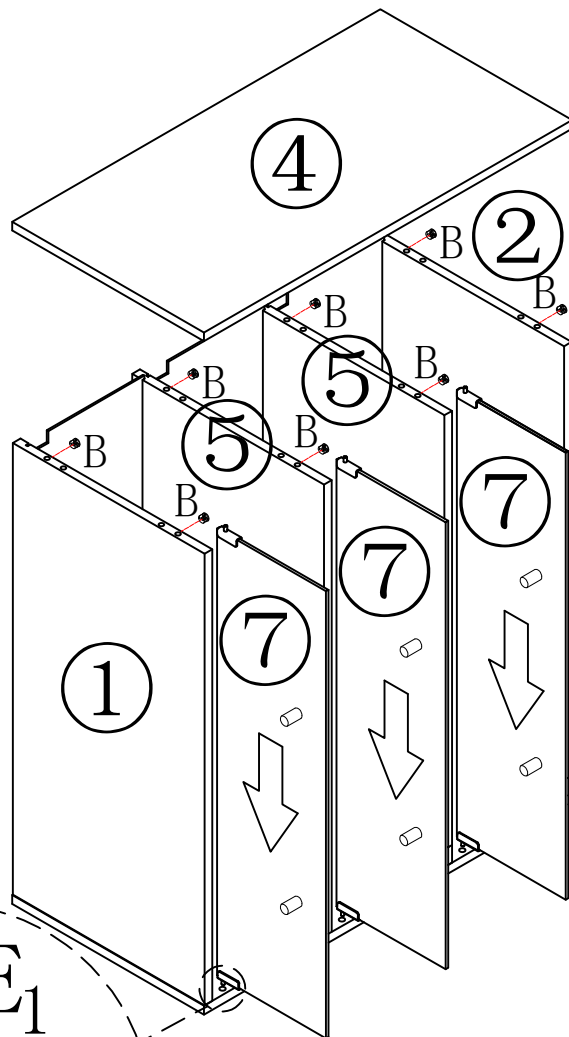


Make sure the arrow on the screw align to the hole on the side.

put B on board ① ② ⑤



B*8

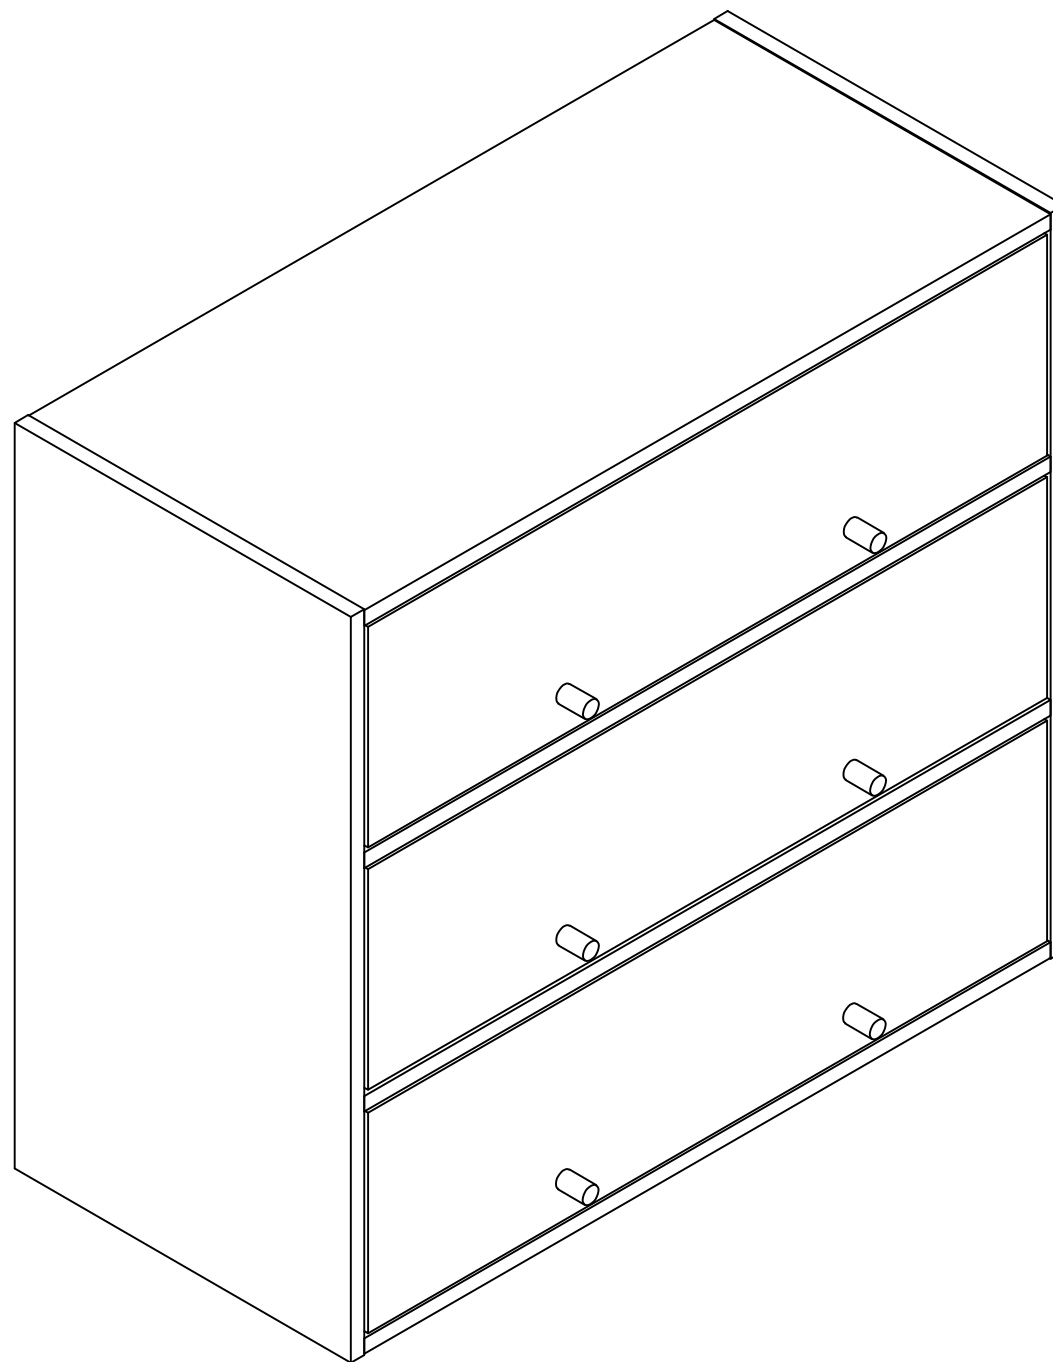

END