


Instruction Book

For specification: 55cm(L)x39cm(W)x152cm(H)

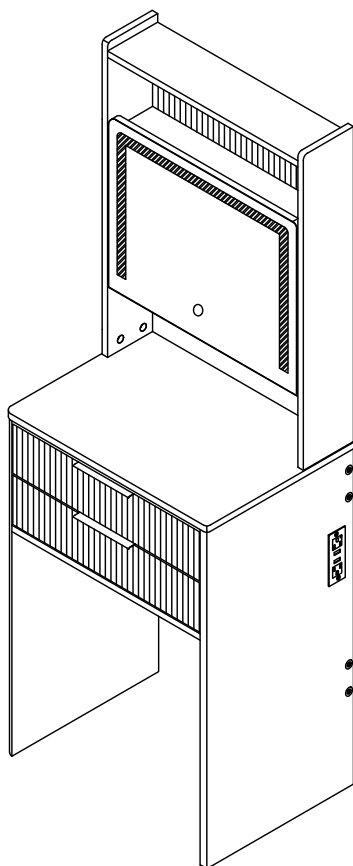

If you have any question, please feel free to contact us

Foreword:

Thank you for choosing our product! We hope you have a good shopping experience! We aim to provide a 100% satisfaction product and customer service. If the received product has missing parts or components, arrived damaged, dissatisfaction with the order, or has questions about the assemble, please do not hesitate to contact us.

Our customer service will reply within 12 hours.

Specifications:


Package Dimension: 34.3x18.3x7.7 in /
87x46.5x19.5cm

Product Size: 21.65 x15.4 x 59.8in / 55 x 39x152
cm


Weight: 48.6lb/22kg


Left cabinet

A, B, G, H, C, D installation guide

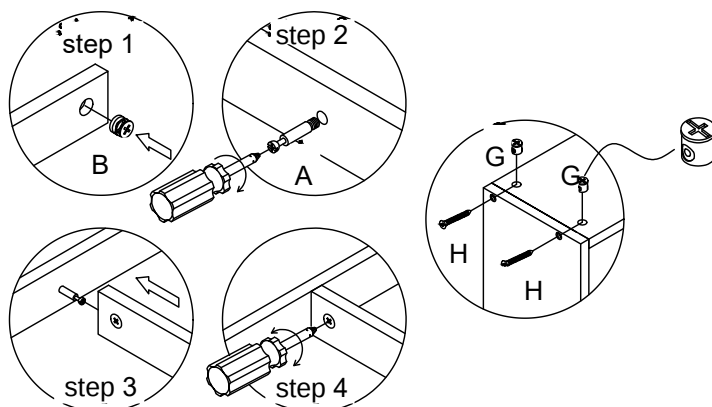

Accessories

 Three-in-one screw A* 32	 Three-in-one nut B* 32	 drawer Track CR*2	 drawer Track DR*2	 drawer Track CL*2	 drawer Track DL*2
 Small Screw D* 36	 Handle E* 2	 Two-in-one screw H* 12	 Two-in-one nut G* 12	 Small Screw X* 8	 Stool foot nail M* 4
 Laminate support Y*4	 Door hinges O*2	 usb power Q*1	 screwdriver Z*1		


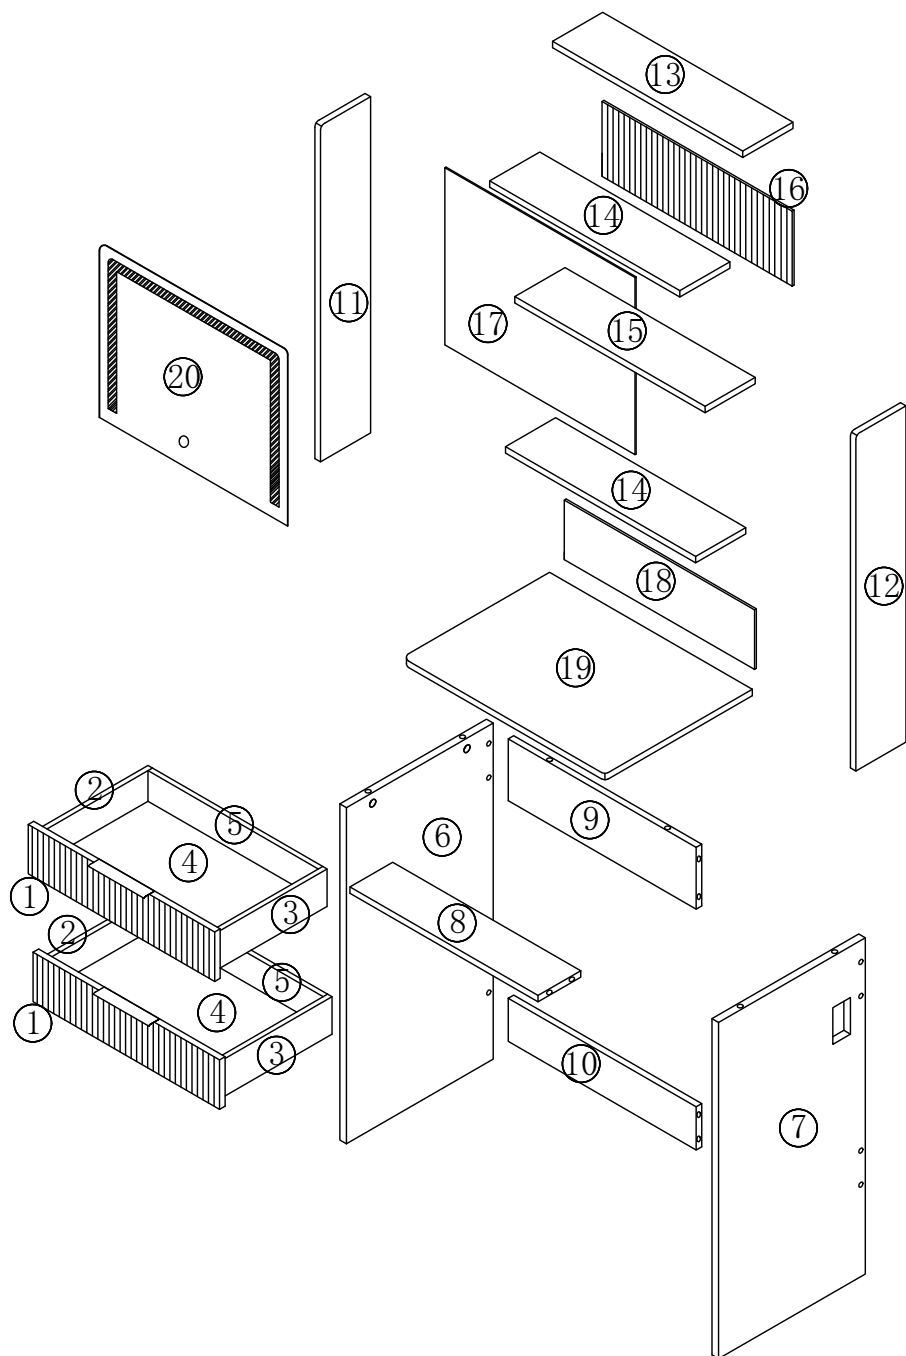


Guidelines for the use of 3-in-1 connecting rods:


The blue screw cap at the bottom of the 3-in-1 connecting rod is twist-able, and it can be twisted clockwise or counterclockwise to fit the size of the reserved holes in the wooden board.

When you use this 3-in-1 connecting rod, if you find that it can't be inserted into the reserved holes on the wooden board, just loosen the blue screw cap a bit until it fits into the holes of the board. Then use a screwdriver to tighten the screws. Note: If the bottom blue screw cap is not stretched apart by the three-in-one connecting rod in the reserved hole, the connected part will appear unstable .

STEP 1

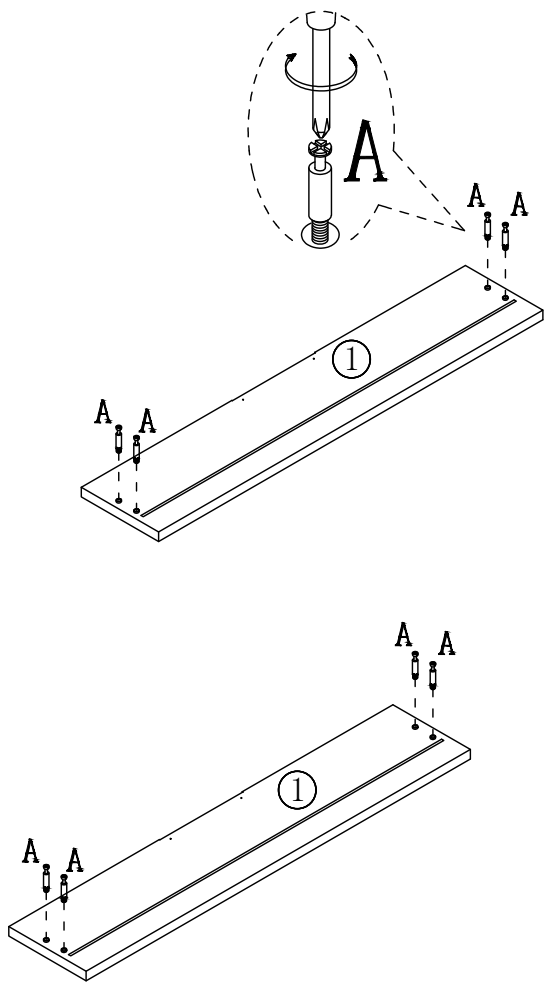


STEP 2

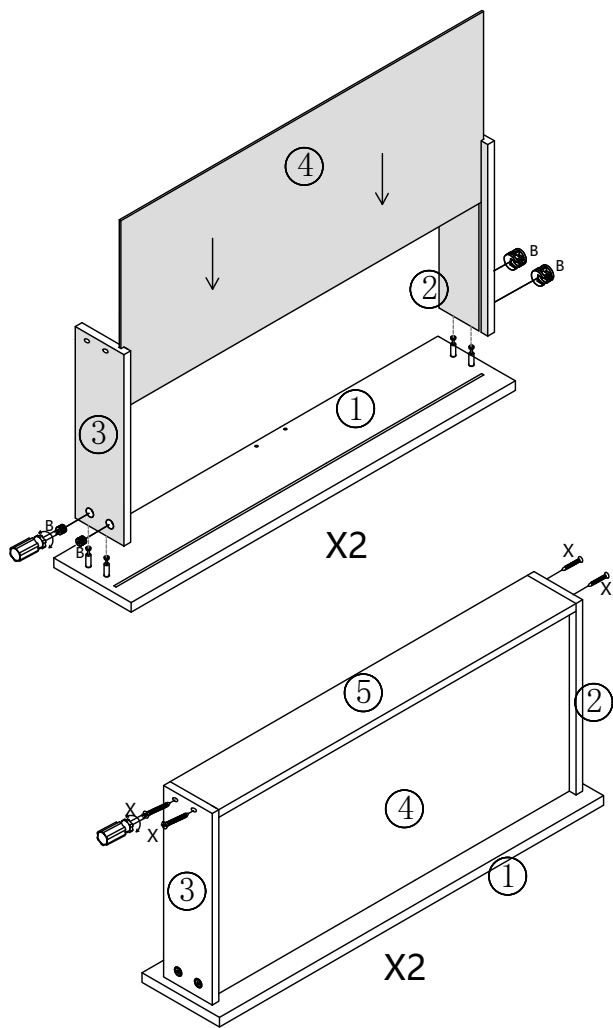


B	X
	
x8	x8

STEP 3

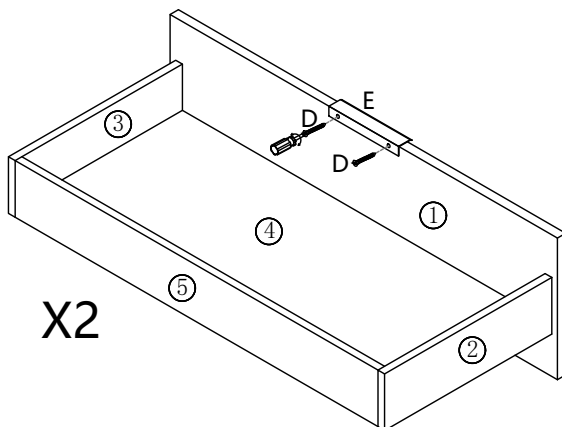



Note: All part DR and part DL should be installed at the BOTTOM of the drawers (As shown in the pic).

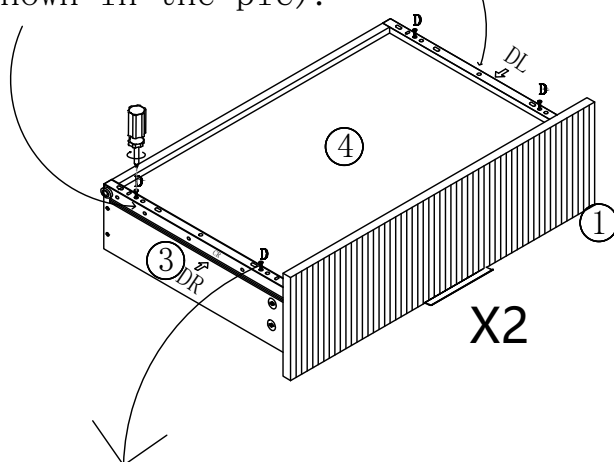

No pre-drilled holes for mounting screws; just install with self-tapping screws D

E x2	D x12
DRx2	DLx2



STEP 4

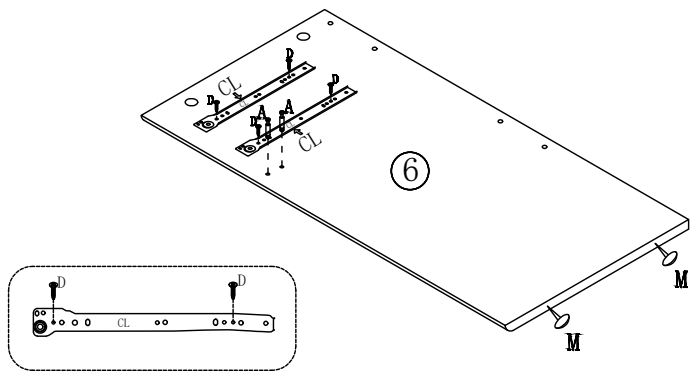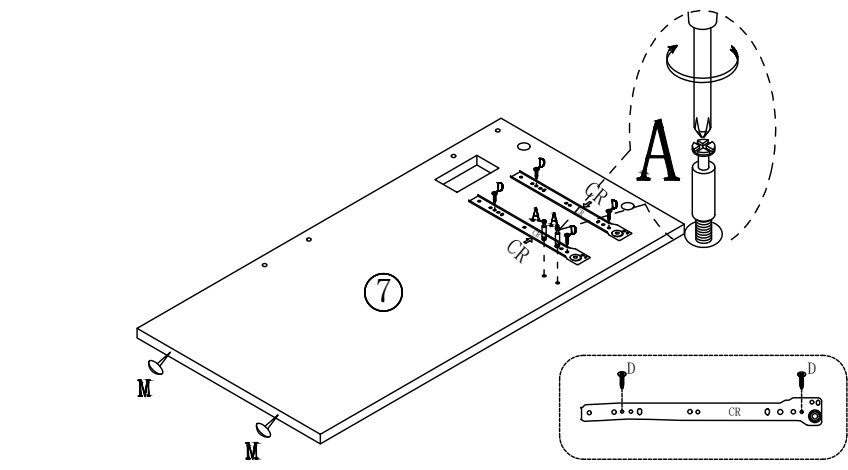





A	M	
		
x4	x4	
		D
CLx2	CRx2	
		x8

STEP 5


These pre-drilled
holes should be installed
with part H and G not part
A (check step 6 and 14)

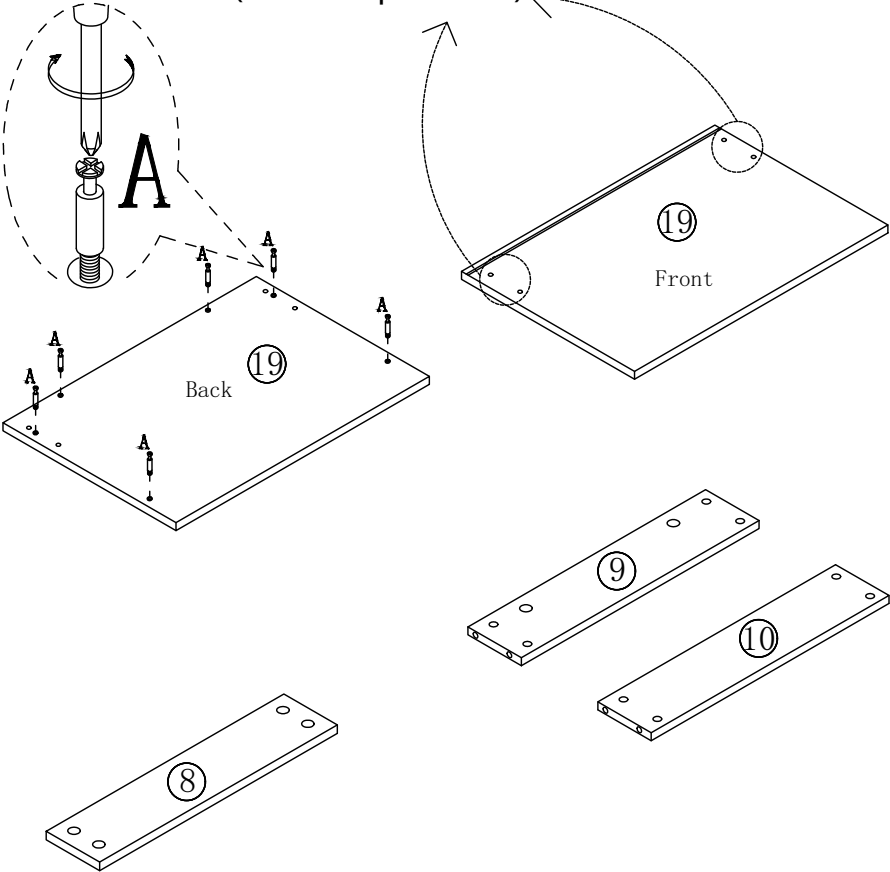



STEP 6

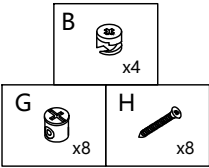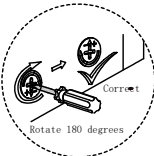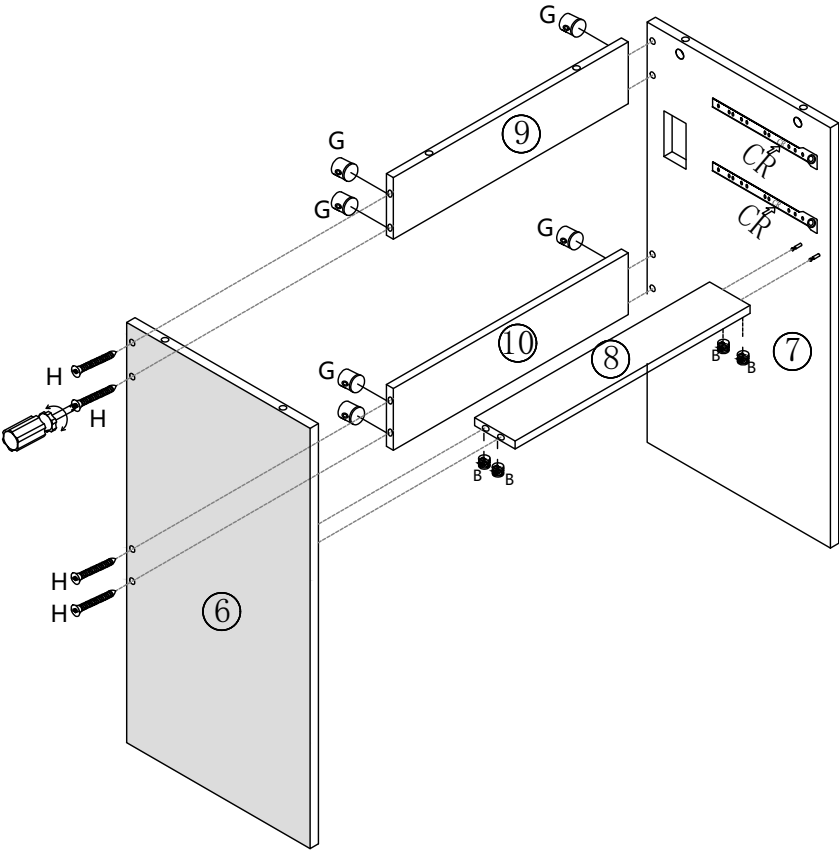




STEP 7

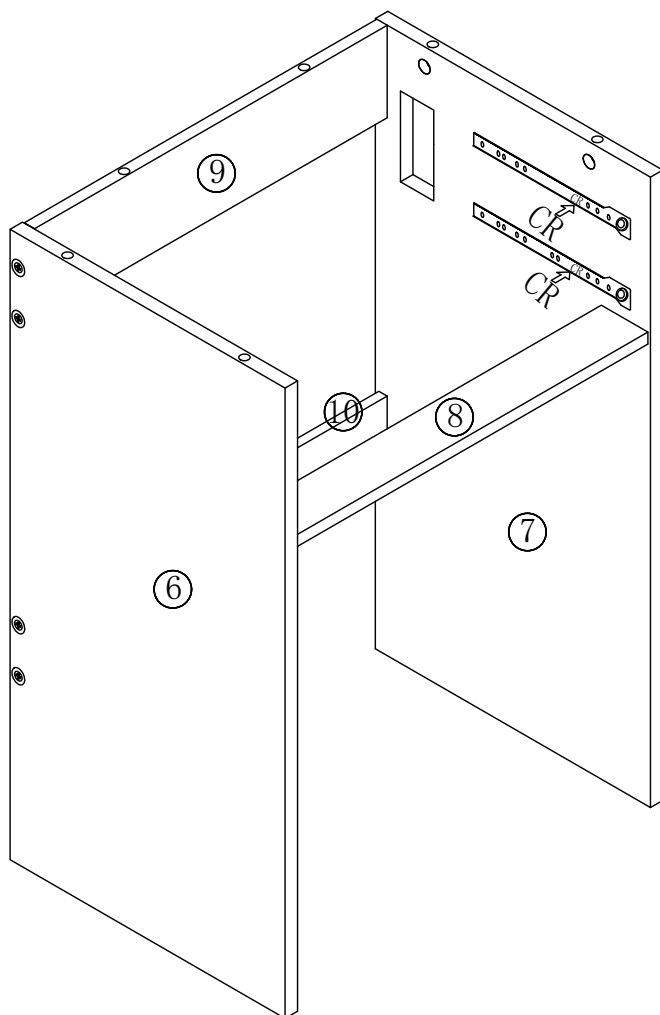







STEP 8

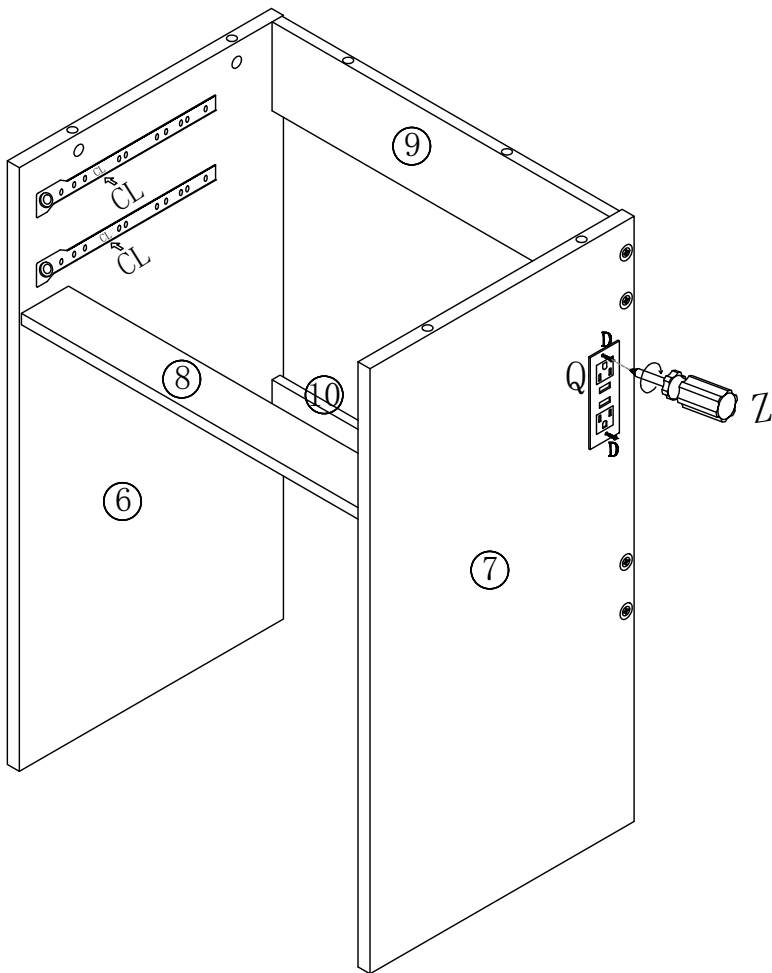





STEP 9

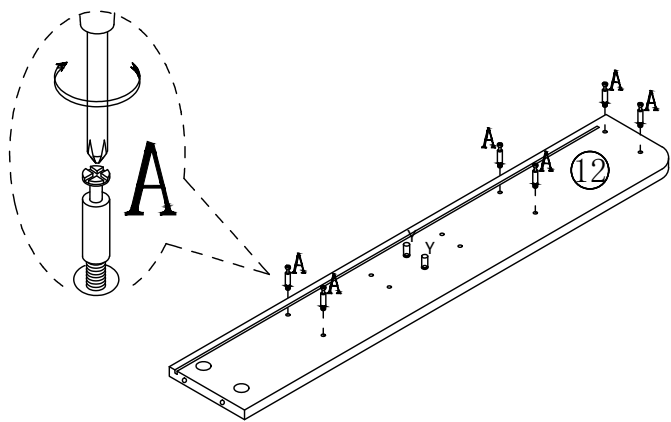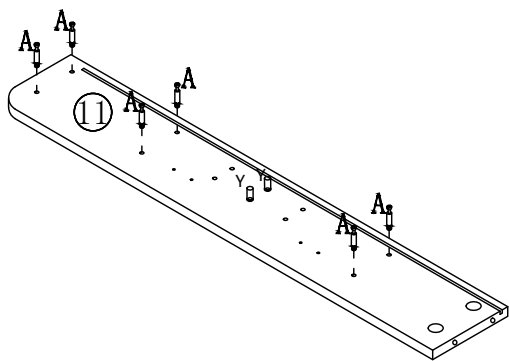


STEP 10

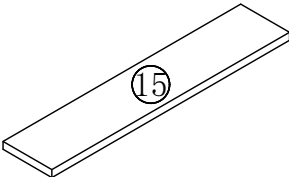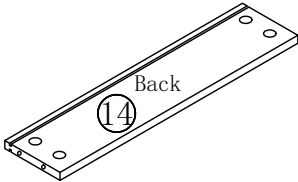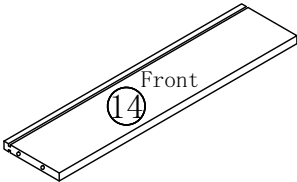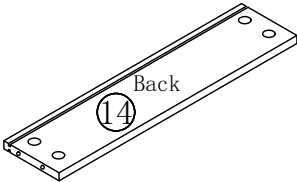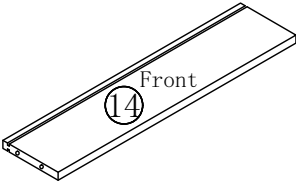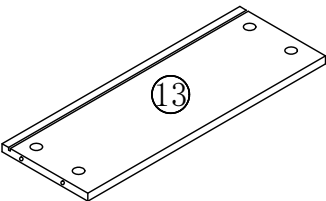





STEP 11

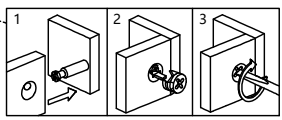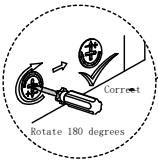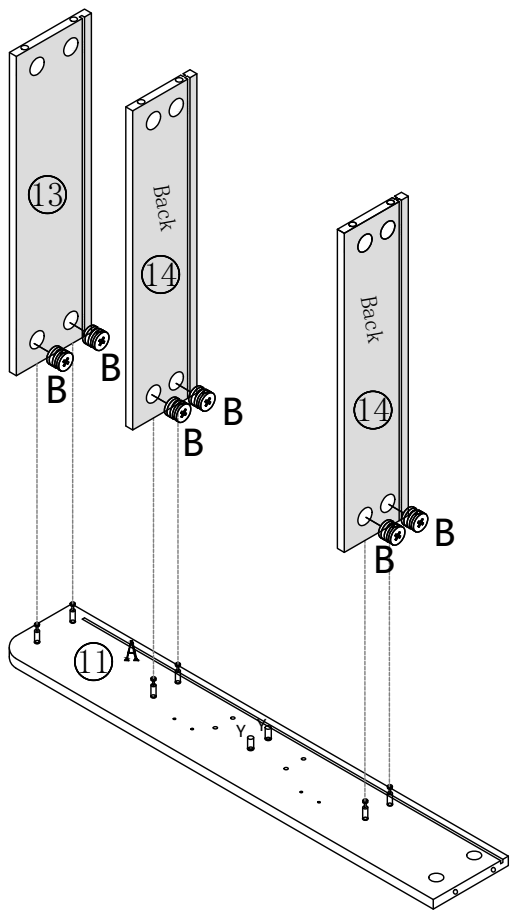


STEP 12

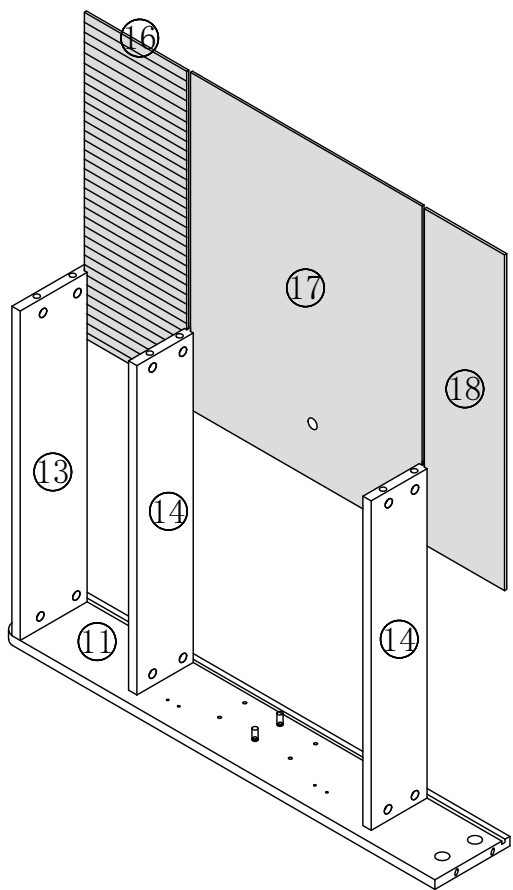

STEP 13


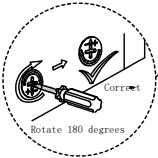
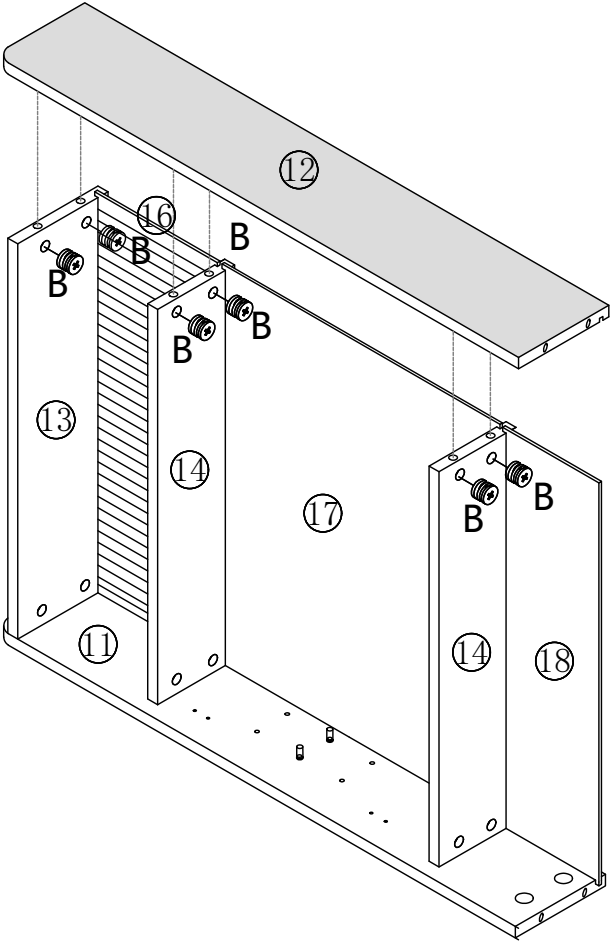


STEP 14

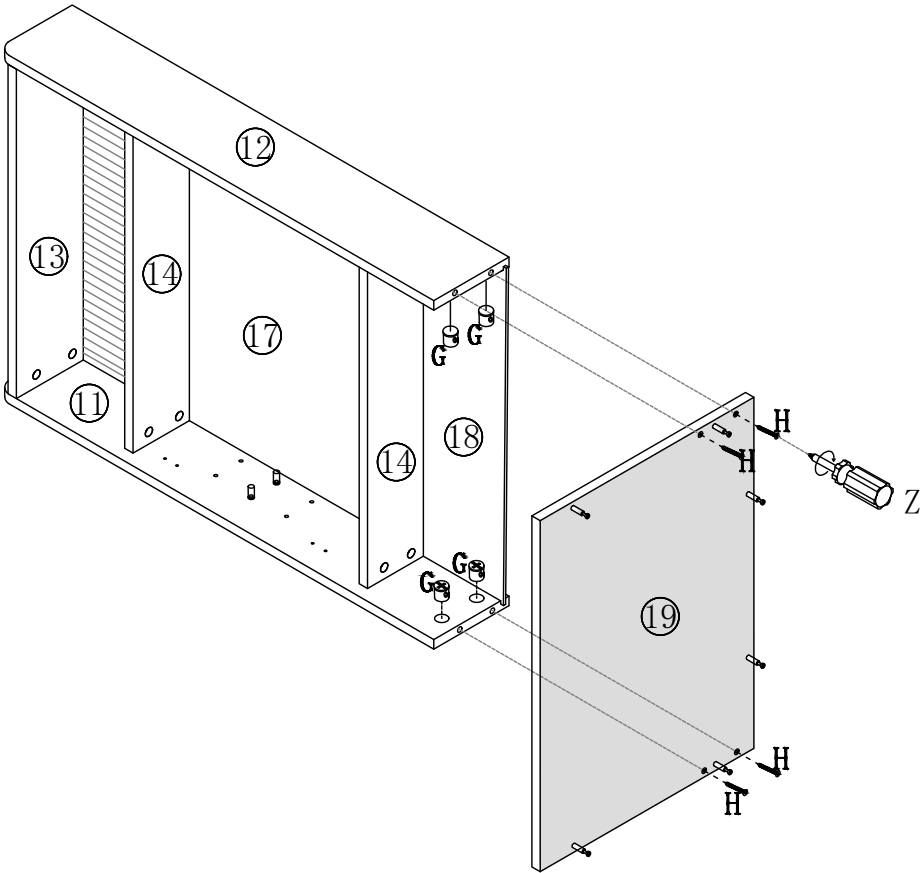


G	H
	
x4	x4



STEP 15

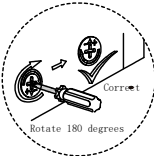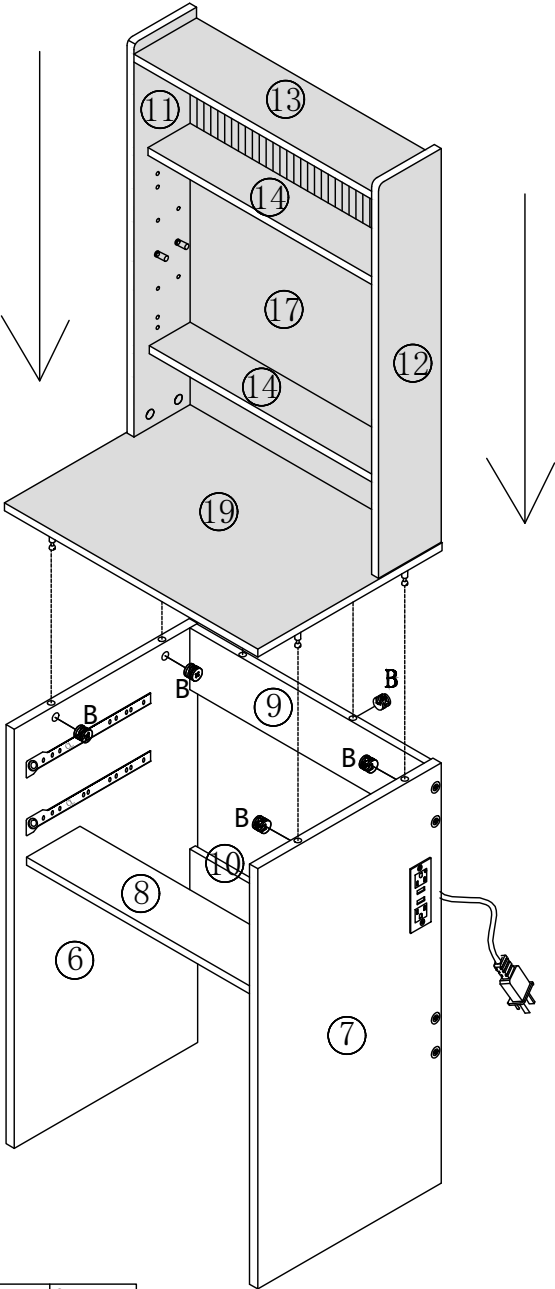

STEP 16

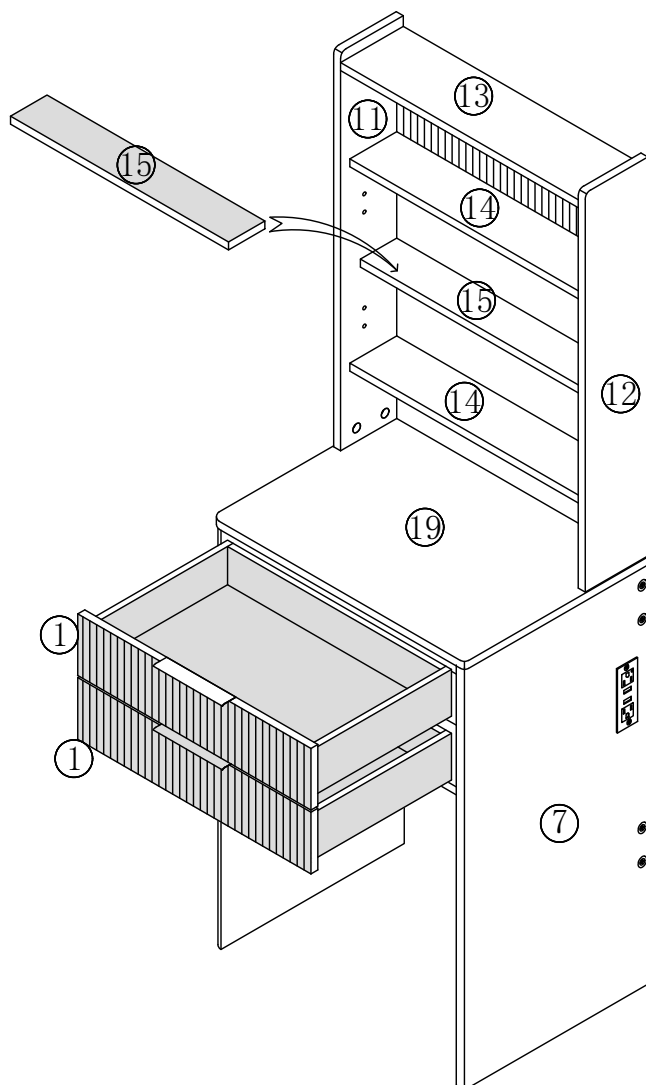

STEP 17

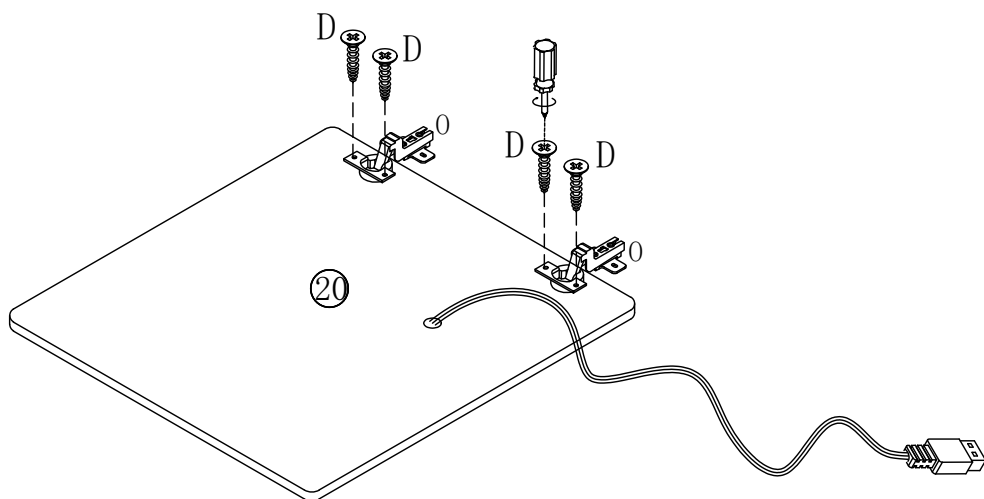

STEP 18

